 
 
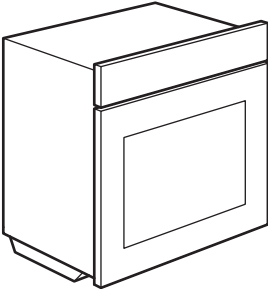 


STENABY

 
en

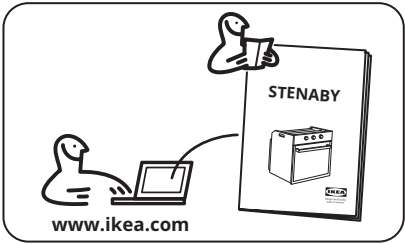

Design and Quality
IKEA of Sweden

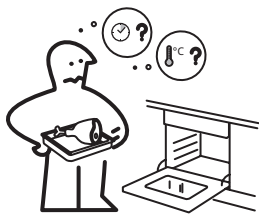


1x




1x



 1x



1x

 





1x










1x



           1x

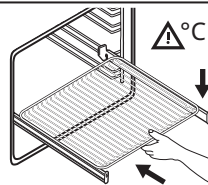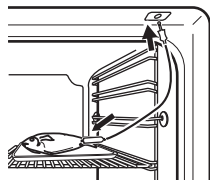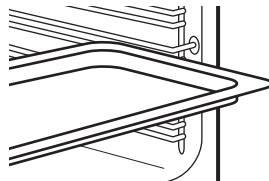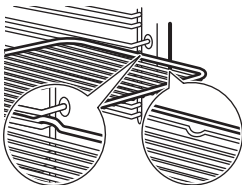


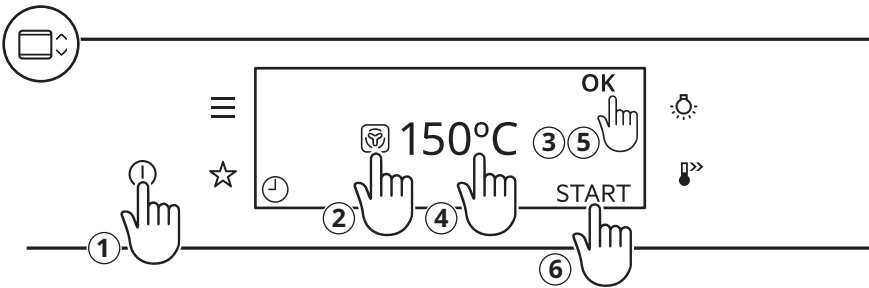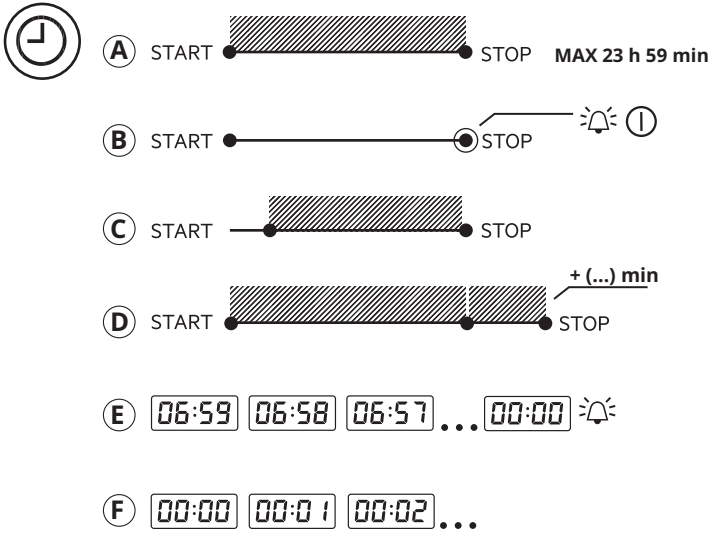

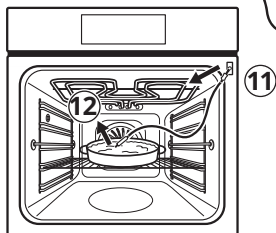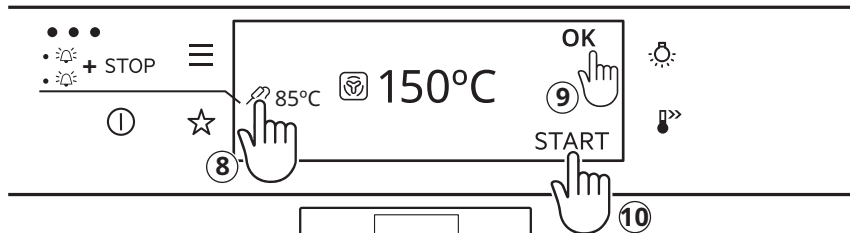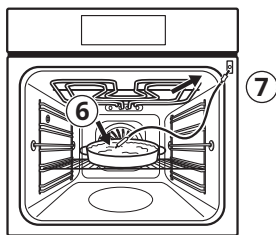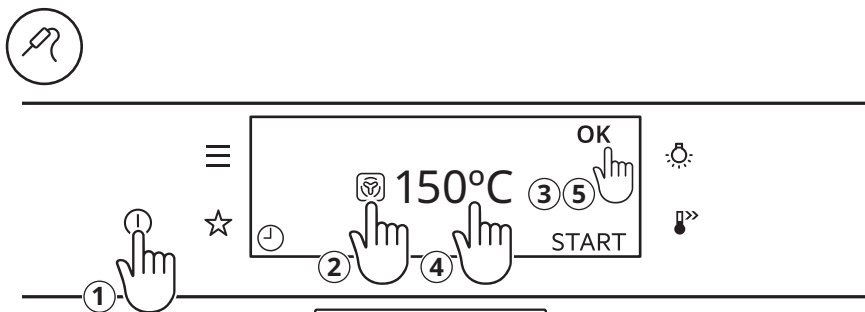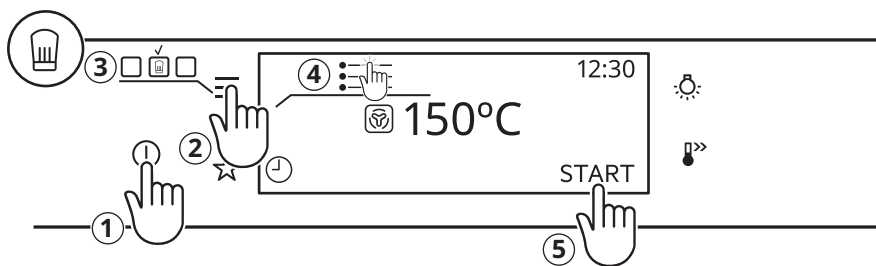

Product description

 
General overview

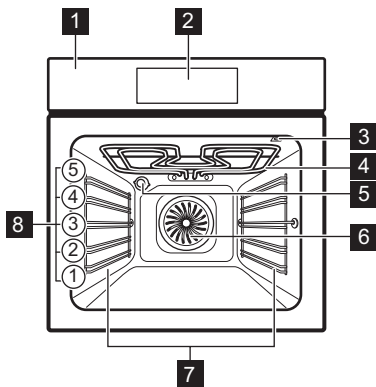

- 1 Control panel
- 2 Display
- 3 Socket for the food sensor
- 4 Heating element
- 5 Lamp
- 6 Fan
- 7 Shelf support, removable
- 8 Shelf positions

Control panel

 Control panel overview

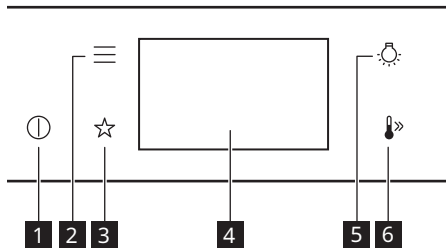


1	ON / OFF Press and hold to turn the appliance on and off.
2	Menu Lists the appliance options and setting functions.
3	Favourites Lists the favourite settings.
4	Display Shows the current settings of the appliance.
5	Lamp switch To turn the lamp on and off.

6	Fast Heat Up To turn on and off the function: Fast Heat Up.
---	-----------------------------------------------------------------------

Display

 Display with key functions set.

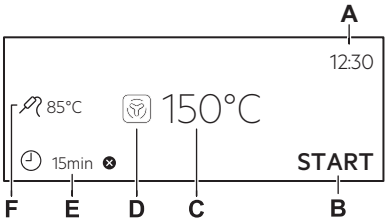

- A. Time of Day
- B. START / STOP
- C. Temperature
- D. Heating functions
- E. Timer
- F. Food Sensor (selected models only)

Display indicators	
OK	To confirm the selection / setting.

Display indicators	
	To go one level back in the menu.
	To undo the last action.
	To turn the options on and off.
	The appliance is locked.
	The sound alarm function is activated.
	The sound alarm and stop cooking function is activated.

Display indicators	
	Pop up message only is activated.
	Delayed start function is activated.
	To cancel the setting.

The display shows various messages. When a message window appears, press the display to continue.

Daily use

Heating functions

STANDARD

	Grill Toasting, grilling
	Turbo Grilling Roasting meat, browning
	True Fan Cooking Even baking, tenderness, drying
	Frozen Foods French fries, potato wedges, spring rolls
	Conventional Cooking Traditional baking
	Pizza Function Baking pizza
	AirFry Frying food with less oil and without baking paper
	Bottom Heat Baking cakes
	Bread Baking To bake bread.
	Dough Proving Proving yeast dough

The lamp may turn off automatically at a temperature below 80°C during some heating functions.

SPECIALS

	Preserving Preserving vegetables and fruits
	Dehydrating Drying sliced fruit, mushrooms

	Plate Warming Preheating plates
	Defrost Defrosting
	Au Gratin Baking gratins, browning
	Slow Cooking Preparing tender roast
	Keep Warm Keeping food warm
	Moist Fan Baking Baking

Notes on: Moist Fan Baking

This function was used to comply with the energy efficiency class and ecodesign requirements (according to EU 65/2014 and EU 66/2014). Tests according to: IEC/EN 60350-1.

The oven door should be closed during cooking so that the function is not interrupted and the oven operates with the highest energy efficiency possible.

When you use this function the lamp automatically turns off after 30 sec.

This function is designed to save energy during cooking. When you use this function, the temperature in the cavity may differ from the set temperature. The heating power may be reduced.

Menu structure

Menu

Press  to enter the menu.

Menu item		Description
Assisted Cooking		Lists automatic programmes.
Cleaning		Lists cleaning programmes.
Favourites		Lists the favourite settings.
Options		To set the appliance configuration.
Settings	Setup	To set the appliance configuration.
	Service	Shows the software version and configuration.

Submenu for: Cleaning


Submenu	Description
Pyrolytic cleaning, quick	Duration: 1 h.
Pyrolytic cleaning, normal	Duration: 1 h 30 min.
Pyrolytic cleaning, intense	Duration: 2 h 30 min.

Submenu for: Options

Submenu	Description
Light	Turns the lamp on and off.
Child Lock	Prevents accidental activation of the appliance.
Fast Heat Up	Shortens the heat up time. It is available only for some of the heating functions.
Cleaning Reminder	Turns the reminder on and off.
Digital Clock Style	Changes the format of the displayed time indication.

Submenu for: Settings

Setup

Submenu	Description
Language	Sets the appliance language.
Display Brightness	Sets the display brightness.
Key Tones	Turns the tone of the touch fields on and off. It is not possible to mute the tone for  .
Buzzer Volume	Sets the volume of key tones and signals.
Time of Day	Sets the current time and date.

Service

Submenu	Description
Software Version	Information about software version.
Reset All Settings	Restores factory settings.

Troubleshooting

If you encounter an issue with your appliance, check Troubleshooting in the full

version of the User Manual available on: www.ikea.com.

Energy efficiency

Product information sheet and product information according to EU and UK energy labelling and ecodesign regulations

Supplier's name	IKEA	
Model identification	STENABY 906.139.53 STENABY 206.139.56	
Energy efficiency index	81.2	
Energy efficiency class	A+	
Energy consumption with a standard load, conventional mode	0.93 kWh/cycle	
Energy consumption with a standard load, fan-forced mode	0.69 kWh/cycle	
Number of cavities	1	
Heat source	Electricity	
Volume	72 l	
Type of oven	Built-in oven	
Mass	STENABY 906.139.53	33.3 kg
	STENABY 206.139.56	33.3 kg
IEC/EN 60350-1 - Household electric cooking appliances - Part 1: Ranges, ovens, steam ovens and grills - Methods for measuring performance.		

Product information for power consumption and maximum time to reach applicable low power mode

Power consumption in standby	0.8 W
Maximum time needed for the equipment to automatically reach the applicable low power mode	20 min



701130898-A-302025

