 
 
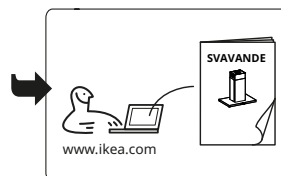 
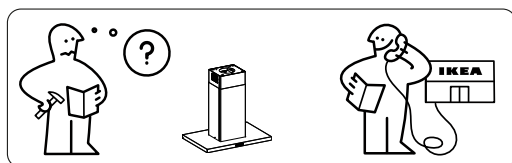 
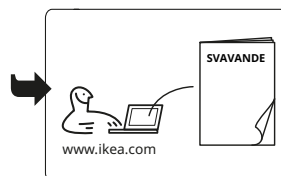 


SVÄVANDE

 
GB

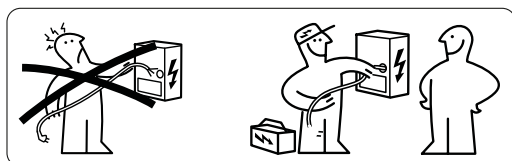

Design and Quality
IKEA of Sweden

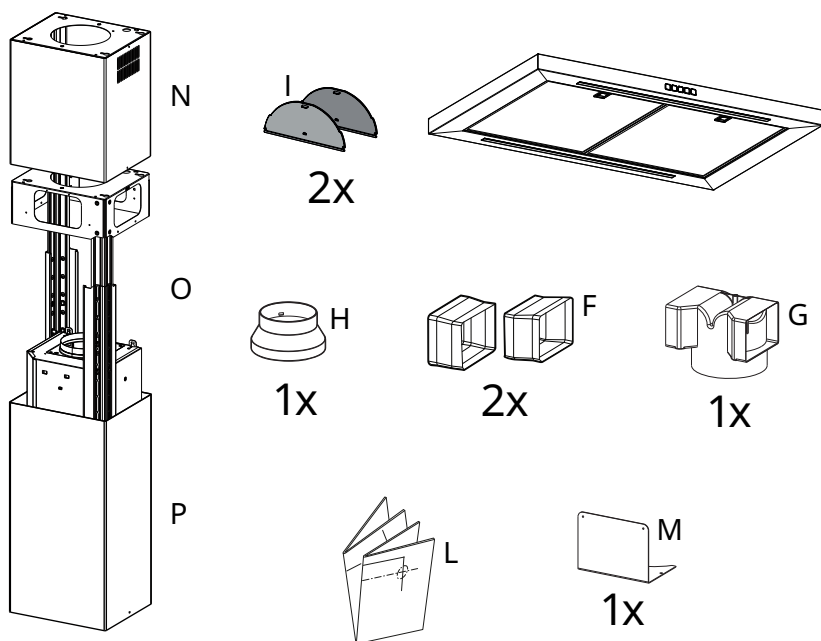

Product description

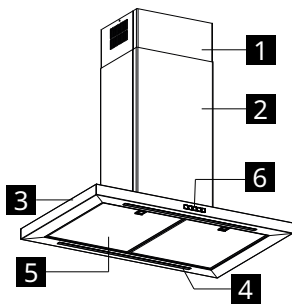

- 1 Upper chimney
- 2 Lower chimney
- 3 Hood body
- 4 Lighting
- 5 Grease filter
- 6 Control panel

Control panel

					
	A	B	C	D	E
BUTTON	FUNCTION				
A Speed	Turns the motor on/off at speed one.				
	Attention: the product is with the filter alarm disabled. Press and hold the button for approximately 2 seconds, with all the loads turned off (Motor+Lights), to turn the grease filter alarm on. LED (B) flashes twice to confirm. To turn the alarm off, press the button again and hold for at least 2 seconds. The relevant LED (B) flashes once.				
B Speed	Turns the motor on at speed two / Activate charcoal filter alarm.				
	Attention: the product is with the filter alarm disabled. Press and hold the button for approximately 2 seconds, with all the loads turned off (Motor+Lights), to turn the Activated Charcoal Filter alarm on. LED (A) flashes twice to confirm. To turn the alarm off, press the button again and hold for at least 2 seconds. The relevant LED flashes once (A). Only for recirculation mode.				
C Speed	Turns the Motor on at speed three / Reset alarm grease filter saturation.				

	Press and hold the button for approximately 2 seconds, with all the loads turned off (Motor+Lights), to reset the grease filter saturation alarm or charcoal filter alarm. LED (A) flashes three times.
D Speed	Turns the motor on at Booster speed. This speed is timed to run for 6 minutes. At the end of this time, the system returns automatically to the speed that was set before. If it is activated with the motor turned off, it will switch to OFF at the end of the time. To deactivate it, press button D or press button A.
E Light	Press briefly: Turns the lighting system on and off at maximum intensity. Press and hold to change the lighting intensity up or down.

Filters alarm

When the filter alarm is activated, the following messages appear depending on the circumstances:

Grease filter cleaning required alarm: button "A" flashes once per second.

Odour filter cleaning required alarm: button "A" flashes twice per second.

Once the filters have been regenerated reset the alarm signal.

Energy efficiency

Informazioni sulla scheda del prodotto secondo 65/2014	Unità	Valore
Nome del fornitore	IKEA	
Identificativo del modello	SVAVANDE 105.178.80	
Consumo energetico annuale	kWh/a	39
Classe di efficienza energetica		A+
Efficienza fluidodinamica		37,6
Classe di efficienza fluidodinamica	lux/Watt	A
Efficienza luminosa		33
Classe di efficienza luminosa	%	A
Efficienza di filtrazione antigrasso		95,1
Classe di efficienza di filtrazione antigrasso	m³/h	A
Flusso d'aria a velocità minima	m³/h	240
Flusso d'aria a velocità massima	m³/h	360
Flusso d'aria a velocità intensiva	dbA	710
Emissione di potenza sonora a ponderata in aria a velocità minima	dbA	54
Emissione di potenza sonora a ponderata in aria a velocità massima	dbA	60
Emissione di potenza sonora a ponderata in aria a velocità intensiva	Watt	73
Consumo di corrente in modalità off	Watt	0,49
Consumo di corrente in modalità standby	Watt	N/A
Informazioni aggiuntive secondo 66/2014		
Coefficiente di incremento del tempo		0,6
Indice di efficienza energetica		39,9
Portata d'aria misurata nel punto di efficienza migliore	m³/h	384,0
Pressione dell'aria misurata nel punto di efficienza migliore	Pa	486
Flusso d'aria massimo	m³/h	710,0
Alimentazione elettrica misurata nel punto di efficienza migliore	W	138,0
Potenza nominale del sistema di illuminazione	W	12,0
Illuminazione media del sistema di illuminazione sul piano cottura	lux	400
Livello di potenza sonora all'impostazione massima	dBA	60

Country name in local languages	Telephone number	Opening times
Australia	Victoria: (03) 8523 2154 New South Wales: (02) 5020 6641 Queensland: (07) 3380 6800 IKEA Perth: (08) 9201 4532 IKEA Adelaide: (08) 8154 4532	
Österreich	13602771461	Mo-Fr: 8 - 20
België / Belgique	26200311	Ma-Vr: 8 - 20 / Lun-Ven: 8 - 20
България	02 4003536	Пон-Пт: 8 - 20
Canarias	913754126	Lunes-Viernes: 8 - 20
Κύπρος	http://www.ikea.com	8 - 20
Hrvatska	0800 3636	Pon-Pet: 8 - 20
Česká republika	225376400	Po-Pá: 8 - 20
Danmark	70150909	Man.-Fre.: 9 - 20
Eesti	http://www.ikea.com	E-R: 8 - 20
Suomi	981710374	Lu-Ve: 8 - 20
France	170480513	Lun-Ven: 9 - 21
Deutschland	6929993602	Mo-Fr: 8 - 20
Great Britain	2076601517	Mon-Fri: 8 - 20
Ελλάδα	2109696497	Δευτ-Παρ: 8 - 20
Magyarország	(06-1)-3285308	Hétfő-Péntek: 8 - 20
Italia	+39 0732/691238	Lun-Ven: 8 - 20
Ireland	2076601517	Mon-Fri: 8 - 20
Ísland	5852409	Mánudagur-Föstudagur Kl.: 8 - 20
Latvija	http://www.ikea.com	P.- Pk.: 8 - 20
Lietuva	(0) 520 511 35	Pirm.-Penkt.: 8 - 20
Mayorca	913754126	Lunes-Viernes: 8 - 20
Malta	+356 (0)25464000	Mon-Fri: 8 - 20
Norge	23500112	Man-Fre: 8 - 20
Nederland	050-7111267 / +31 507111267	Ma-Vr: 8 - 20
Polska	225844203	Poniedziałek-Piątek: 8 - 20
Portugal	213164011	Seg.-Sex.: 9 - 21
România	021 2044888	Luni-Vineri: 8 - 20
Россия	84957059426	Пон-Пятн: 9 - 21
Србија	011 7 555 444	Пон-Пет: 8 - 20
Slovensko	(02) 50102658	Pon-Pia: 8 - 20
Slovenija	+386-1-8107781	Ponedeljek-Petek: 8 - 20
España	913754126	Lunes-Viernes: 8 - 20
Sverige	0775-700 500	Mån-Fre: 8 - 20
Schweiz / Suisse / Svizzera (Ticino)	225675345	8 bis 20 Werktage / Lun-Ven: 8 - 20
Türkiye	+90/262/644 65 95	Pzt-Cuma: 8 - 20
Україна	http://www.ikea.com	Понеділок-П'ятниця: 8 - 20
Maroc / المغرب	+212 (5) 20100900 www.IKEA.ma	10.00 - 17.00

