

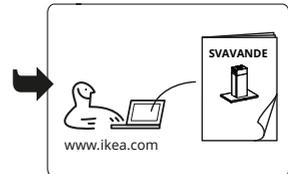
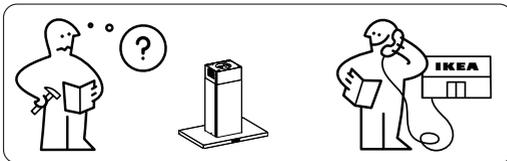
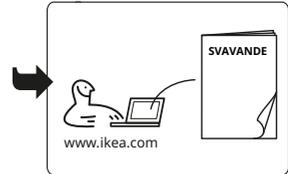


SVÄVANDE


en

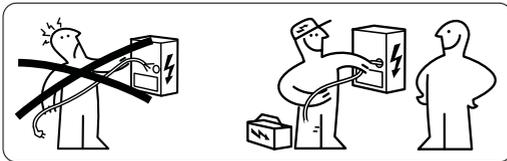

Design and Quality
IKEA of Sweden

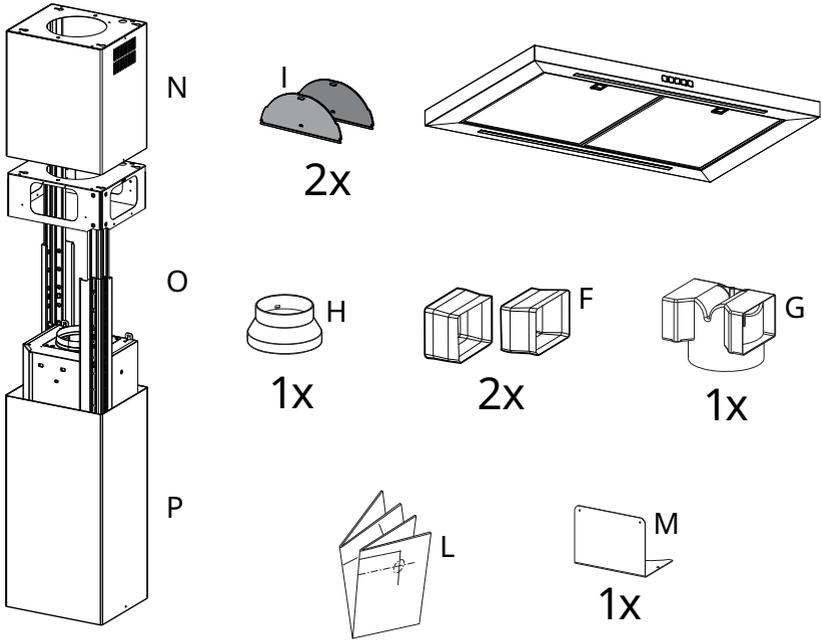

Product description

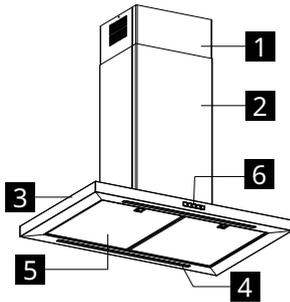

- 1 Upper chimney
- 2 Lower chimney
- 3 Hood body
- 4 Lighting
- 5 Grease filter
- 6 Control panel

Control panel

 A	 B	 C	 D	 E
BUT-TON FUNCTION				
A Speed	Turns the motor on/off at speed one. Attention: the product starts with the filter alarm disabled.			
	Press and hold the button for approximately 2 seconds, with all loads deactivated (motor+lights), to activate the grease filter alarm. LED (B) flashes twice for confirmation. To turn off the alarm, press the button again and hold it for at least 2 seconds. LED (B) flashes once.			
B Speed	Turns the motor on at speed two / Activates the carbon filter alarm. Attention: the product starts with the filter alarm disabled.			
	Press and hold the button for approximately 2 seconds, with all the loads turned off (Motor+Lights), to turn the activated carbon filter alarm on. LED (A) flashes twice to confirm. To turn off the alarm, press the button again and hold it down for at least 2 seconds. LED (A) flashes once. Only for the recirculation mode.			
C	Starts the motor at speed three / Resets the grease filters saturation alarm.			

Speed	Press and hold the button for approximately 2 seconds, with all loads deactivated (motor+lights), to reset the filter saturation alarm. LED (A) flashes three times.
D Speed	Turns the motor on at Booster speed. This speed is timed for 6 minutes. At the end of this time, the system returns automatically to the speed that was set before. If it is activated with the motor turned off, it will switch to OFF at the end of the time. To deactivate it, press button D or press button A.
E Light	Press briefly: Turns the lighting system on and off at maximum intensity. Press and hold to change the lighting intensity up or down.

Filters alarm

When the filter alarm is activated, the following messages appear depending on the circumstances:

Grease filter cleaning required alarm: button "A" flashes once per second.

Odour filter cleaning required alarm: button "A" flashes twice per second.

Once the filters have been regenerated reset the alarm signal.

Energy efficiency

Informazioni sulla scheda del prodotto secondo 65/2014	Unità	Valore
Nome del fornitore	IKEA	
Identificativo del modello	SVAVANDE 105.178.80	
Consumo energetico annuale	kWh/a	39
Classe di efficienza energetica		A+
Efficienza fluidodinamica		37,6
Classe di efficienza fluidodinamica	lux/Watt	A
Efficienza luminosa		33
Classe di efficienza luminosa	%	A
Efficienza di filtrazione antigrasso		95,1
Classe di efficienza di filtrazione antigrasso	m ³ /h	A
Flusso d'aria a velocità minima	m ³ /h	240
Flusso d'aria a velocità massima	m ³ /h	360
Flusso d'aria a velocità intensiva	dbA	710
Emissione di potenza sonora a ponderata in aria a velocità minima	dbA	54
Emissione di potenza sonora a ponderata in aria a velocità massima	dbA	60
Emissione di potenza sonora a ponderata in aria a velocità intensiva	Watt	73
Consumo di corrente in modalità off	Watt	0,49
Consumo di corrente in modalità standby	Watt	N/A
Informazioni aggiuntive secondo 66/2014		
Coefficiente di incremento del tempo		0,6
Indice di efficienza energetica		39,9
Portata d'aria misurata nel punto di efficienza migliore	m ³ /h	384,0
Pressione dell'aria misurata nel punto di efficienza migliore	Pa	486
Flusso d'aria massimo	m ³ /h	710,0
Alimentazione elettrica misurata nel punto di efficienza migliore	W	138,0
Potenza nominale del sistema di illuminazione	W	12,0
Illuminazione media del sistema di illuminazione sul piano cottura	lux	400
Livello di potenza sonora all'impostazione massima	dBA	60

Country name in local languages	Telephone number	Opening times
Österreich	13602771461	Mo-Fr: 8 - 20
België / Belgique	26200311	Ma-Vr: 8 - 20 / Lun-Ven: 8 - 20
България	02 4003536	Пон-Пт: 8 - 20
Canarias	913754126	Lunes-Viernes: 8 - 20
Κύπρος	http://www.ikea.com	8 - 20
Hrvatska	0800 3636	Pon-Pet: 8 - 20
Česká republika	225376400	Po-Pá: 8 - 20
Danmark	70150909	Man.-Fre.: 9 - 20
Eesti	http://www.ikea.com	E-R: 8 - 20
Suomi	981710374	Lu-Ve: 8 - 20
France	170480513	Lun-Ven: 9 - 21
Deutschland	6929993602	Mo-Fr: 8 - 20
Great Britain	2076601517	Mon-Fri: 8 - 20
Ελλάδα	2109696497	Δευ-Παρ: 8 - 20
Magyarország	(06-1)-3285308	Hétfő-Péntek: 8 - 20
Italia	+39 02/38591334	Lun-Ven: 8 - 20
Ireland	2076601517	Mon-Fri: 8 - 20
Ísland	5852409	Mánudagur-Föstudagur Kl.: 8 - 20
Latvija	http://www.ikea.com	P.- Pk.: 8 - 20
Lietuva	(0) 520 511 35	Pirm.-Penkt.: 8 - 20
Mayorca	913754126	Lunes-Viernes: 8 - 20
Malta	+356 (0)25464000	Mon-Fri: 8 - 20
Norge	23500112	Man-Fre: 8 - 20
Nederland	050-7111267 / +31 507111267	Ma-Vr: 8 - 20
Polska	225844203	Poniedziałek-Piątek: 8 - 20
Portugal	213164011	Seg.-Sex.: 9 - 21
România	021 2044888	Luni-Vineri: 8 - 20
Россия	84957059426	Пон-Пятн: 9 - 21
Србија	011 7 555 444	Пон-Пет: 8 - 20
Slovensko	(02) 50102658	Pon-Pia: 8 - 20
Slovenija	+386-1-8107781	Ponedeljek-Petek: 8 - 20
España	913754126	Lunes-Viernes: 8 - 20
Sverige	0775-700 500	Mån-Fre: 8 - 20
Schweiz / Suisse / Svizzera (Ticino)	225675345	8 bis 20 Werktage / Lun-Ven: 8 - 20
Türkiye	+90/262/644 65 95	Pzt-Cuma: 8 - 20
Україна	http://www.ikea.com	Понеділок-П'ятниця: 8 - 20
Марок / المغرب	+212 (5) 20100900 www.ikea.com	

