

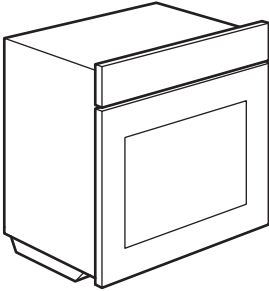


FRILLESBO

 
en

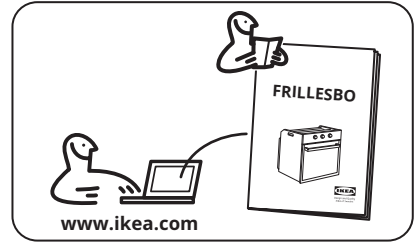


Design and Quality
IKEA of Sweden

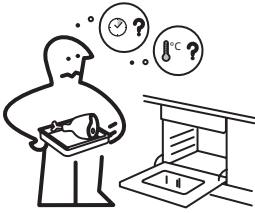

1x




1x

 


1x



 1x




1x

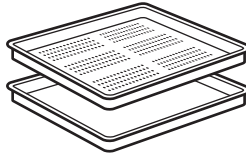





1x






 
1x







1x

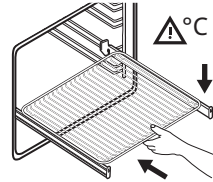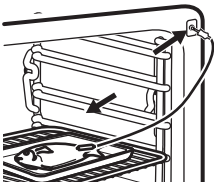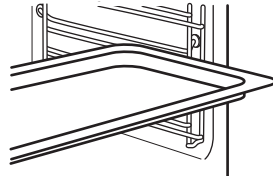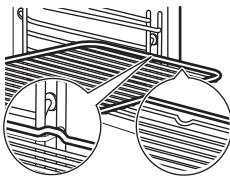

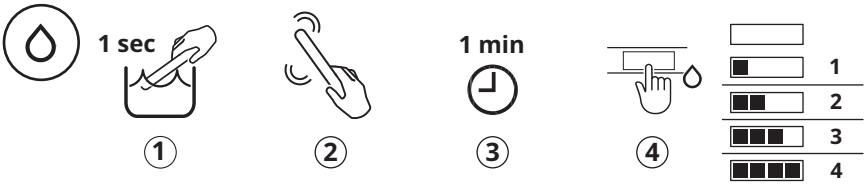


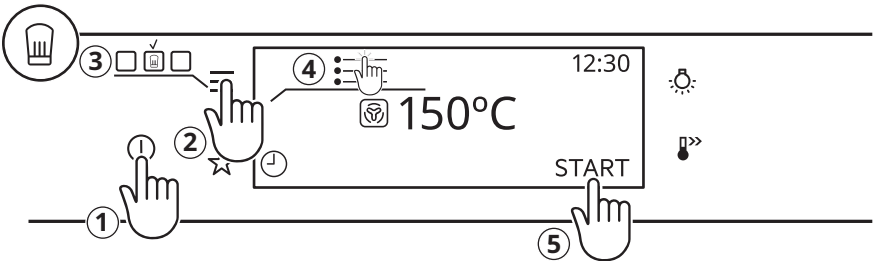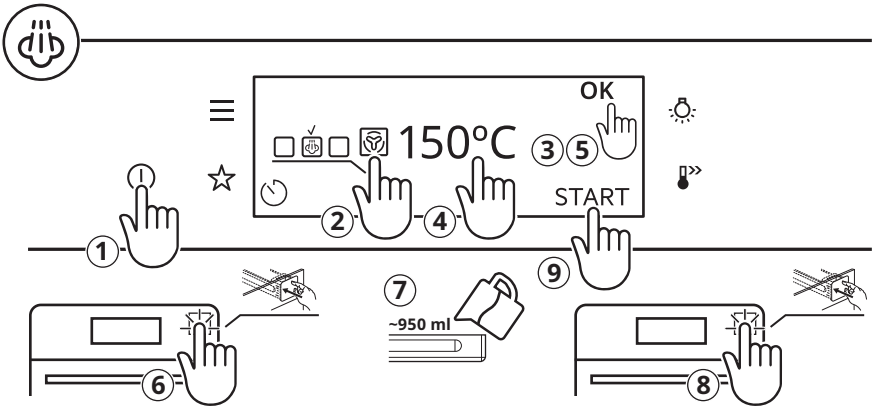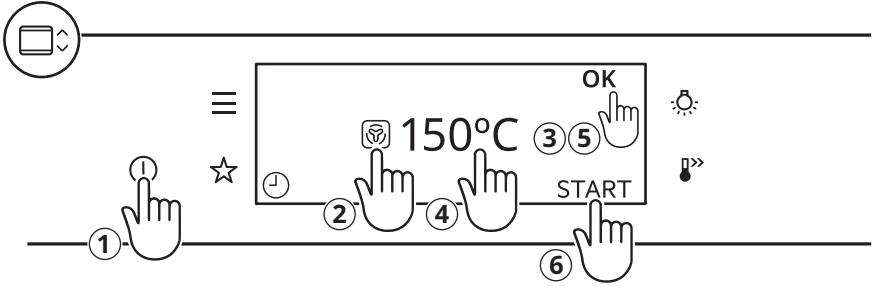

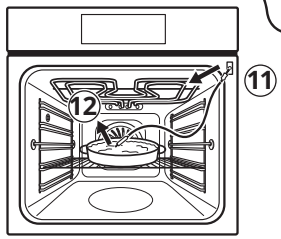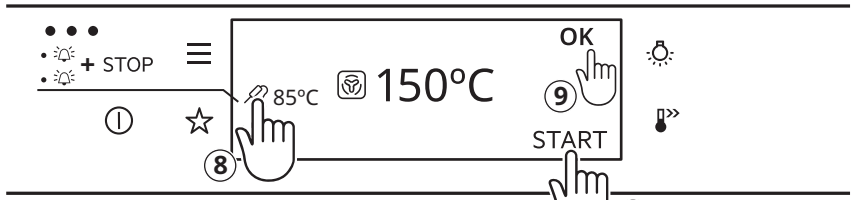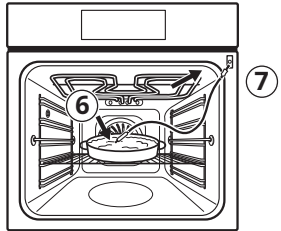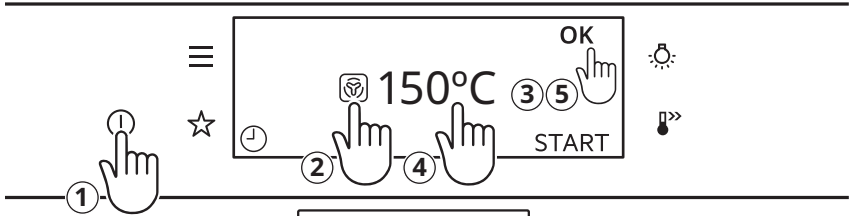

Product description


General overview

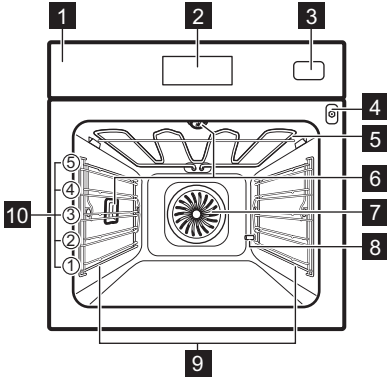

- 1 Control panel
- 2 Display
- 3 Water tank
- 4 Socket for the food sensor
- 5 Heating element
- 6 Lamp
- 7 Fan
- 8 Descaling pipe outlet
- 9 Shelf support, removable
- 10 Shelf positions

Control panel


Control panel overview

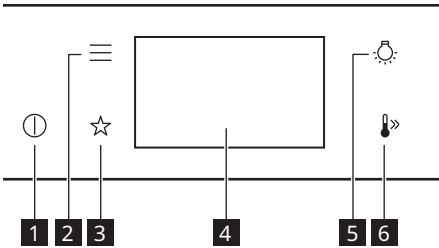

6	Fast Heat Up To turn on and off the function: Fast Heat Up.
----------	---

Display

Display with key functions set.

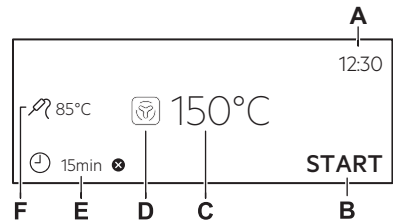

- A. Time of Day
- B. START / STOP
- C. Temperature
- D. Heating functions
- E. Timer
- F. Food Sensor (selected models only)

1	ON / OFF Press and hold to turn the appliance on and off.
2	Menu Lists the appliance options and setting functions.
3	Favourites Lists the favourite settings.
4	Display Shows the current settings of the appliance.
5	Lamp switch To turn the lamp on and off.

Display indicators	
OK	To confirm the selection / setting.

Display indicators	
	To go one level back in the menu.
	To undo the last action.
	To turn the options on and off.
	The appliance is locked.
	The sound alarm function is activated.
	The sound alarm and stop cooking function is activated.

Display indicators	
	Pop up message only is activated.
	Delayed start function is activated.
	To cancel the setting.

The display shows various messages. When a message window appears, press the display to continue.

Daily use

Heating functions

STANDARD

	Grill Toasting, grilling
	Turbo Grilling Roasting meat, browning
	True Fan Cooking Even baking, tenderness, drying
	Frozen Foods French fries, potato wedges, spring rolls
	Conventional Cooking Traditional baking
	Pizza Function Baking pizza
	AirFry Frying food with less oil and without baking paper
	Bottom Heat Baking cakes

The lamp may turn off automatically at a temperature below 80°C during some heating functions.

SPECIALS

	Preserving Preserving vegetables and fruits
	Dehydrating Drying sliced fruit, mushrooms
	Plate Warming Preheating plates
	Defrost Defrosting

	Au Gratin Baking gratins, browning
	Slow Cooking Preparing tender roast
	Keep Warm Keeping food warm
	Moist Fan Baking Baking

STEAM

	EasySteam Steaming, stewing, gentle crisping, baking, roasting
	Steam Regenerating Reheating on a plate
	Bread Baking Bread, bread rolls
	Dough Proving Proving yeast dough
	Full Steam Vegetables, side dishes, fish
	Humidity High Custards, flans, terrines, fish
	Humidity Low Meat, poultry, oven dishes, casseroles

Notes on: Moist Fan Baking

This function was used to comply with the energy efficiency class and ecodesign requirements (according to EU 65/2014 and EU 66/2014). Tests according to: IEC/EN 60350-1.

The oven door should be closed during cooking so that the function is not





interrupted and the oven operates with the highest energy efficiency possible.

When you use this function the lamp automatically turns off after 30 sec.

This function is designed to save energy during cooking. When you use this function, the temperature in the cavity may differ from the set temperature. The heating power may be reduced.

Water Hardness

You can change the water hardness level in the menu: Settings / Setup / Water Hardness.

Water hardness level	Test paper
1 - soft	
2 - moderately hard	
3 - hard	
4 - very hard ¹⁾	

1) When the tap water hardness level is 4, fill the water drawer with still bottled water.

Menu structure

Menu

Press  to enter the menu.

Menu item		Description
Assisted Cooking		Lists automatic programmes.
Cleaning		Lists cleaning programmes.
Favourites		Lists the favourite settings.
Options		To set the appliance configuration.
Settings	Setup	To set the appliance configuration.
	Service	Shows the software version and configuration.

Submenu for: Cleaning

Submenu	Description
Drying	Procedure for drying the cavity from the condensation remaining after a use of the steam functions.


Submenu	Description
Tank emptying	Procedure for removing the residual water from the water tank after use of the steam functions.
Steam Cleaning	Light cleaning.
Steam Cleaning Plus	Thorough cleaning.
Descaling	Cleaning of the steam generation circuit from residual limestone.
Rinsing	Procedure for rinsing and cleaning the steam generation circuit after frequent use of the steam functions.

Submenu for: Options

Submenu	Description
Light	Turns the lamp on and off.
Child Lock	Prevents accidental activation of the appliance.
Fast Heat Up	Shortens the heat up time. It is available only for some of the heating functions.
Cleaning Reminder	Turns the reminder on and off.
Digital Clock Style	Changes the format of the displayed time indication.

Submenu for: Settings

Setup

Submenu	Description
Language	Sets the appliance language.
Display Brightness	Sets the display brightness.
Key Tones	Turns the tone of the touch fields on and off. It is not possible to mute the tone for  .
Buzzer Volume	Sets the volume of key tones and signals.
Water Hardness	Sets the water hardness.
Time of Day	Sets the current time and date.

Service

Submenu	Description
Software Version	Information about software version.
Reset All Settings	Restores factory settings.

Troubleshooting

If you encounter an issue with your appliance, check Troubleshooting in the full

version of the User Manual available on: www.ikea.com.

Energy efficiency

Product information sheet and product information according to EU and UK energy labelling and ecodesign regulations

Supplier's name	IKEA
Model identification	FRILLESBO 006.140.75
Energy efficiency index	61.9
Energy efficiency class	A++
Energy consumption with a standard load, conventional mode	1.09 kWh/cycle
Energy consumption with a standard load, fan-forced mode	0.52 kWh/cycle
Number of cavities	1
Heat source	Electricity
Volume	70 l
Type of oven	Built-in oven
Mass	36.5 kg
IEC/EN 60350-1 - Household electric cooking appliances - Part 1: Ranges, ovens, steam ovens and grills - Methods for measuring performance.	

Product information for power consumption and maximum time to reach applicable low power mode

Power consumption in standby	0.8 W
Maximum time needed for the equipment to automatically reach the applicable low power mode	20 min



867387749-A-352025

