

# KULINARISK






en




Design and Quality  
IKEA of Sweden






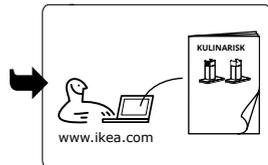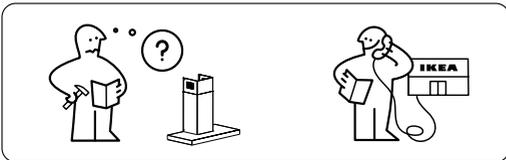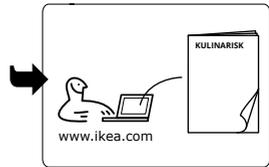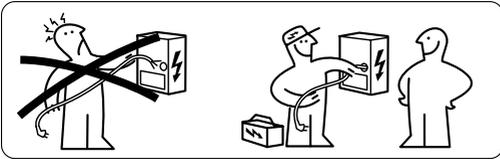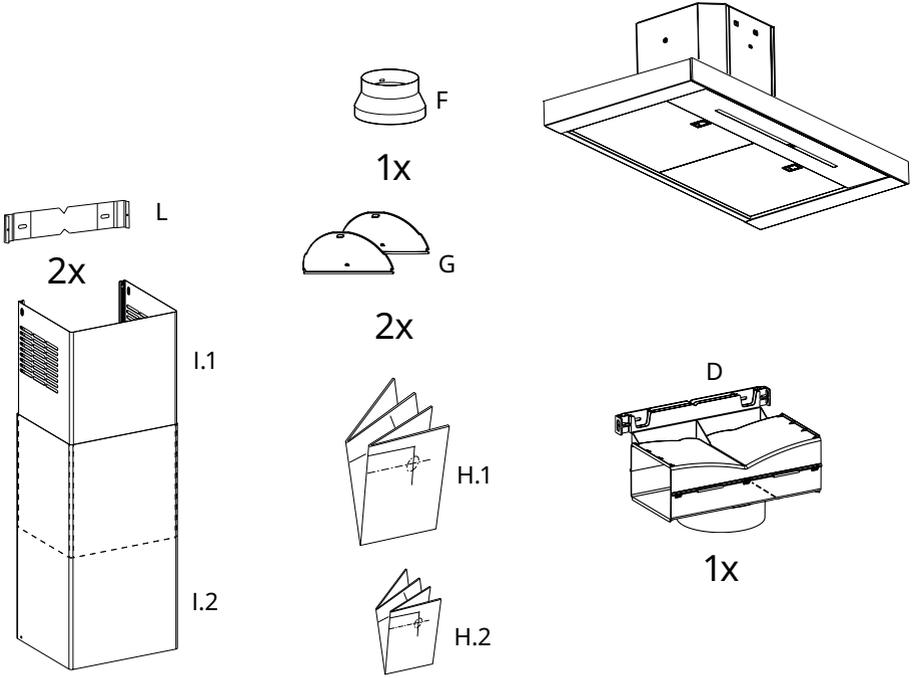

**Product description**

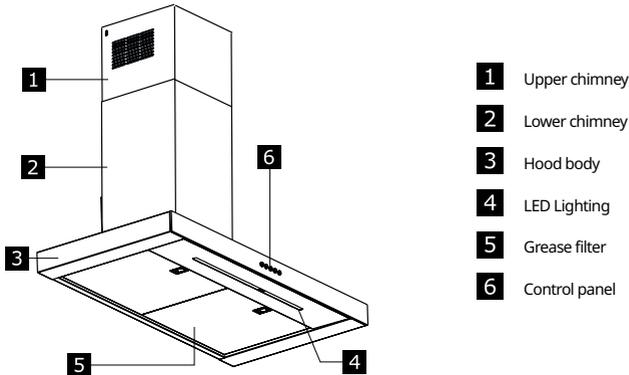

**Control panel**

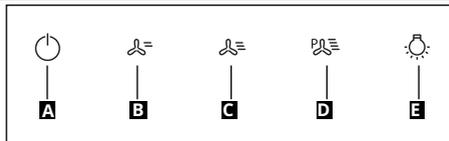

<p><b>A</b> Speed</p>	<p>Turns the motor on/off at speed one.                   Attention: the product is with the filter alarm disabled.                  Press and hold the button for approximately 2 seconds, with all the loads turned off (Motor+Lights), to turn the grease filter alarm on. LED (B) flashes twice to confirm.                  To turn the alarm off, press the button again and hold for at least 2 seconds. The relevant LED (B) flashes once.</p>
<p><b>B</b> Speed</p>	<p>Turns the motor on at speed two / Activate charcoal filter alarm.                   Attention: the product is with the filter alarm disabled.                  Press and hold the button for approximately 2 seconds, with all the loads turned off (Motor+Lights), to turn the Activated Charcoal Filter alarm on. LED (A) flashes twice to confirm.                  To turn the alarm off, press the button again and hold for at least 2 seconds. The relevant LED flashes once (A). Only for recirculation mode.</p>
<p><b>C</b> Speed</p>	<p>Turns the Motor on at speed three / Reset alarm grease filter saturation.                   Press and hold the button for approximately 2 seconds, with all the loads turned off (Motor+Lights), to reset the grease filter saturation alarm or charcoal filter alarm. LED (A) flashes three times.</p>
<p><b>D</b> Speed</p>	<p>Turns the motor on at Booster speed.                  This speed is timed to run for 6 minutes. At the end of this time, the system returns automatically to the speed that was set before. If it is activated with the motor turned off, it will switch to OFF at the end of the time. To deactivate it, press button D or press button A.</p>
<p><b>E</b> Light</p>	<p>Press briefly: Turns the lighting system on and off at maximum intensity.                  Press and hold to change the lighting intensity up or down.</p>

**Filters Alarm.**

When the filter alarm is activated, the following messages will appear over time:  
 Grease filter alarm must be cleaned: "A" key flashes once per second.  
 Anti-odour filter alarm must be cleaned: "A" key flashes twice per second.  
 Once the filters have been regenerated reset the alarm signal.

## Energy efficiency

Product fiche information, according to 65/2014	Unit	Value
Supplier's name	IKEA	
Model identifier	KULINARISK 403.831.48	
Annual Efficiency Consumption	kWh/a	34,8
Energy Efficiency Class		A++
Fluid Dynamic Efficiency		37,6
Fluid Dynamic Efficiency Class		A
Lighting Efficiency	lux/Watt	58
Lighting Efficiency Class		A
Grease Filtering Efficiency	%	85,1
Grease Filtering Efficiency Class		B
Air flow at minimum speed	m <sup>3</sup> /h	250
Air flow at maximum speed	m <sup>3</sup> /h	380
Air flow at boost speed	m <sup>3</sup> /h	700
Airborne acoustical A-weighted sound Power Emission at minimum speed	dbA	51
Airborne acoustical A-weighted sound Power Emission at maximum speed	dbA	59
Airborne acoustical A-weighted sound Power Emission at boost speed	dbA	72
Power Consumption in off mode	Watt	0,49
Power Consumption in standby mode	Watt	N/A
<b>Additional information according to 66/2014</b>		
Time increase factor		0,6
Energy Efficiency Index		36,6
Measured Air flow rate at best efficiency point	m <sup>3</sup> /h	406,0
Measured air pressure at best efficiency point	Pa	463
maximum air flow	m <sup>3</sup> /h	700,0
Measured electric power input at best efficiency point	W	139,0
Nominal power of the lighting system	W	6,0
Average illumination of the lighting system on the cooking surface	lux	350
Sound power level at the highest setting	dBA	59

Country name in local languages	Telephone number	Opening times
<b>Australia</b>	Victoria: (03) 8523 2154 New South Wales: (02) 5020 6641 Queensland: (07) 3380 6800 IKEA Perth: (08) 9201 4532 IKEA Adelaide: (08) 8154 4532	
<b>Österreich</b>	13602771461	Mo-Fr: 8 - 20
<b>België / Belgique</b>	26200311	Ma-Vr: 8 - 20 / Lun-Ven: 8 - 20
<b>България</b>	02 4003536	Пон-Пт: 8 - 20
<b>Canarias</b>	913754126	Lunes-Viernes: 8 - 20
<b>Κύπρος</b>	<a href="http://www.ikea.com">http://www.ikea.com</a>	8 - 20
<b>Hrvatska</b>	0800 3636	Pon-Pet: 8 - 20
<b>Česká republika</b>	225376400	Po-Pá: 8 - 20
<b>Danmark</b>	70150909	Man.-Fre.: 9 - 20
<b>Eesti</b>	<a href="http://www.ikea.com">http://www.ikea.com</a>	E-R: 8 - 20
<b>Suomi</b>	981710374	Lu-Ve: 8 - 20
<b>France</b>	170480513	Lun-Ven: 9 - 21
<b>Deutschland</b>	6929993602	Mo-Fr: 8 - 20
<b>Great Britain</b>	2076601517	Mon-Fri: 8 - 20
<b>Ελλάδα</b>	2109696497	Δευ-Παρ: 8 - 20
<b>Magyarország</b>	(06-1)-3285308	Hétfő-Péntek: 8 - 20
<b>Italia</b>	+39 02/38591334	Lun-Ven: 8 - 20
<b>Ireland</b>	2076601517	Mon-Fri: 8 - 20
<b>Ísland</b>	5852409	Mánudagur-Föstudagur Kl.: 8 - 20
<b>Latvija</b>	<a href="http://www.ikea.com">http://www.ikea.com</a>	P. - Pk.: 8 - 20
<b>Lietuva</b>	(0) 520 511 35	Pirm.-Penkt.: 8 - 20
<b>Mayorca</b>	913754126	Lunes-Viernes: 8 - 20
<b>Malta</b>	+356 (0)25464000	Mon-Fri: 8 - 20
<b>Norge</b>	23500112	Man-Fre: 8 - 20
<b>Nederland</b>	050-7111267 / +31 507111267	Ma-Vr: 8 - 20
<b>Polska</b>	225844203	Poniedziałek-Piątek: 8 - 20
<b>Portugal</b>	213164011	Seg.-Sex.: 9 - 21
<b>România</b>	021 2044888	Luni-Vineri: 8 - 20
<b>Россия</b>	84957059426	Пон-Пятн: 9 - 21
<b>Србија</b>	011 7 555 444	Пон-Пет: 8 - 20
<b>Slovensko</b>	(02) 50102658	Pon-Pia: 8 - 20
<b>Slovenija</b>	+386-1-8107781	Ponedeljek-Petek: 8 - 20
<b>España</b>	913754126	Lunes-Viernes: 8 - 20
<b>Sverige</b>	0775-700 500	Mån-Fre: 8 - 20
<b>Schweiz / Suisse / Svizzera (Ticino)</b>	225675345	8 bis 20 Werktag / Lun-Ven: 8 - 20
<b>Türkiye</b>	+90/262/644 65 95	Pzt-Cuma: 8 - 20
<b>Україна</b>	<a href="http://www.ikea.com">http://www.ikea.com</a>	Понеділок-П'ятниця: 8 - 20
<b>المغرب / Maroc</b>	+212 (5) 20100900 <a href="http://www.ikea.com">www.ikea.com</a>	

