 


# GURSKEN

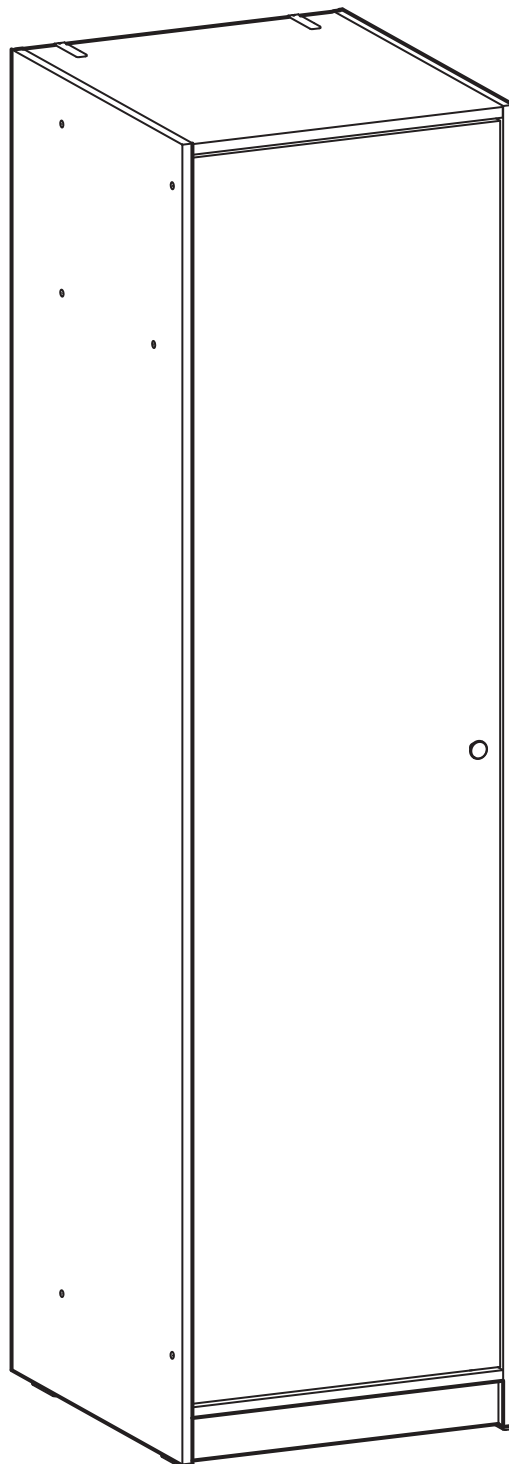

Design and Quality  
IKEA of Sweden



English

## WARNING!

Serious or fatal crushing injuries can occur from furniture tip-over. To reduce the risk of furniture tip-over:

**ALWAYS** secure this furniture to the wall using tip-over restraints.

**To further reduce the risk of serious injury and death from tip-overs:**

Place heaviest items in the lower drawer.

Do not set TVs or other heavy objects on top of this product.

Never let children climb or hang on drawers, doors, or shelves.

Read and follow each step of the instruction carefully.

עברית

## אזהרה!

נפילת הרהיט עלולה לגרום לפגיעה גופנית חמורה או קטלנית. על מנת להפחית את הסיכון של נפילת רהיטים:

יש להקפיד ולקבע את הריהוט לקיר באמצעות אביזרי קיבוע.

על-מנת למזער את סכנת הפגיעה הגופנית או המוות מנפילת רהיטים:

 
 
 
הניחו את הפריטים הכבדים ביותר במגירה התחתונה. הימנעו מלהניח טלוויזיות או פריטים כבדים אחרים על מוצר זה.

 
 
 
אין לאפשר לילדים לטפס על המגירות, הדלתות או המדפים. קראו ופעלו בהירות לפי כל שלב בהוראות.

 







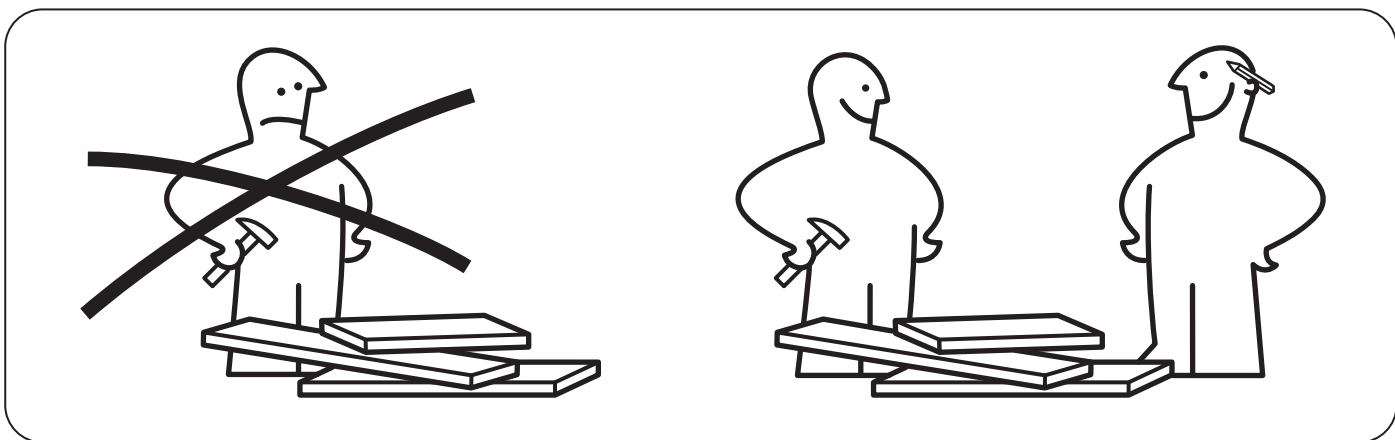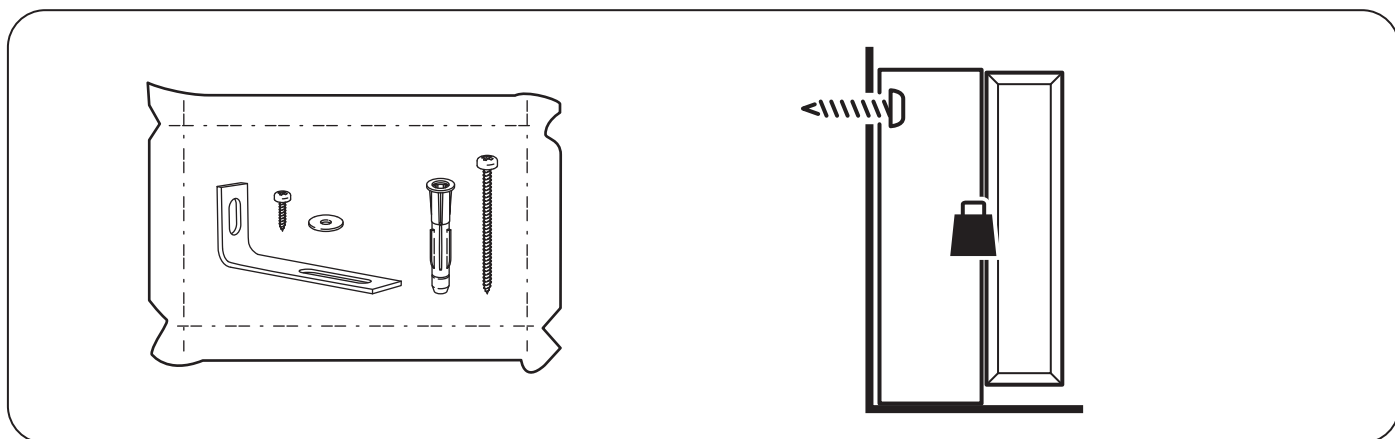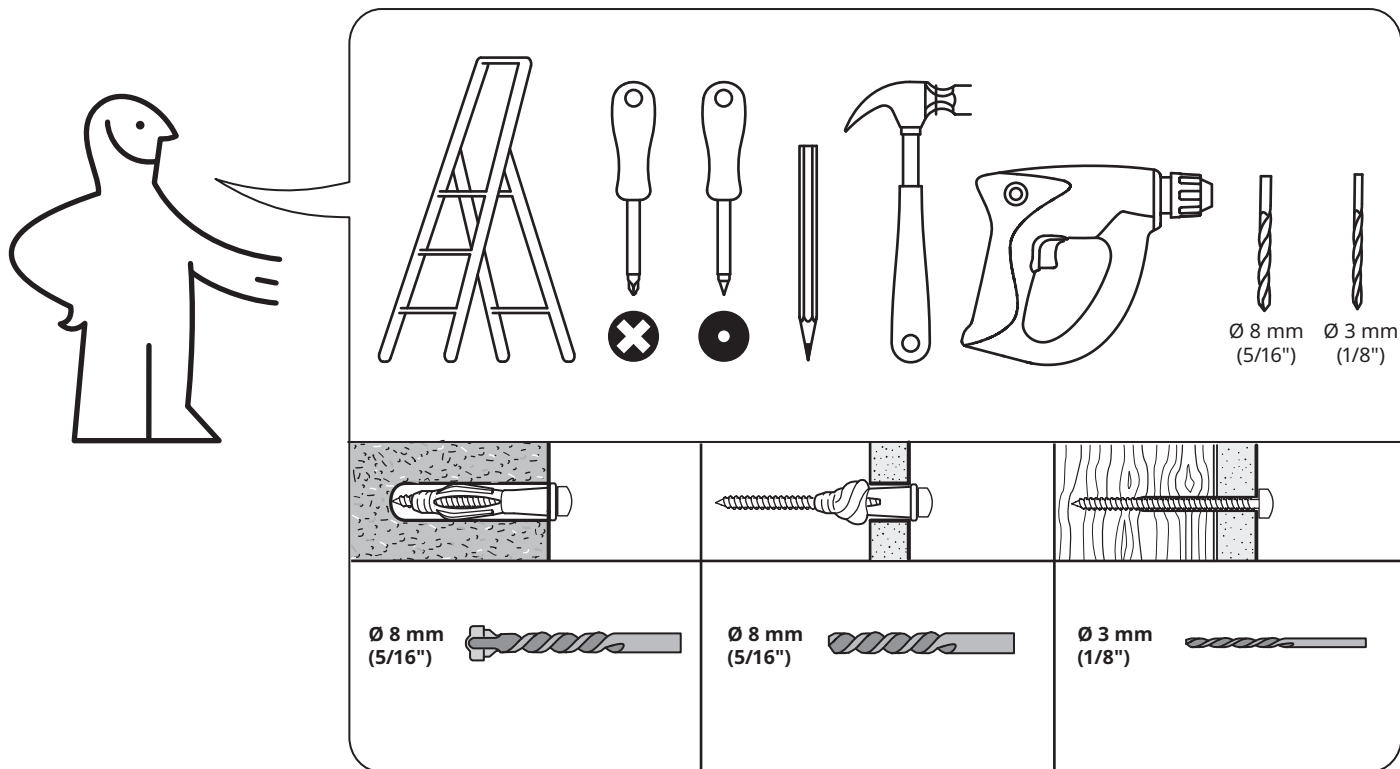

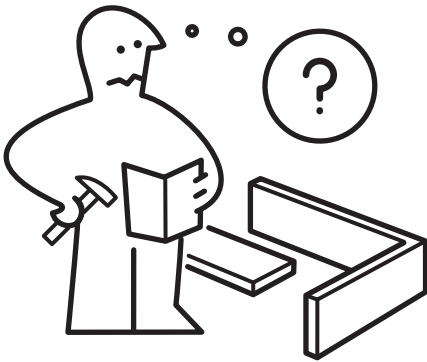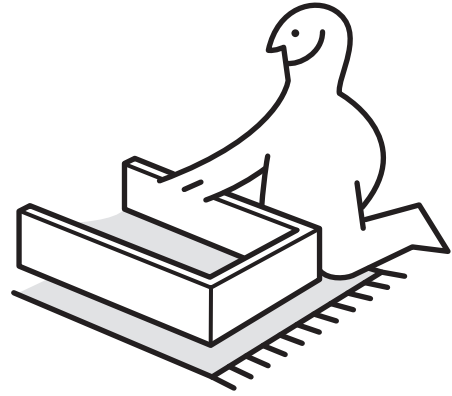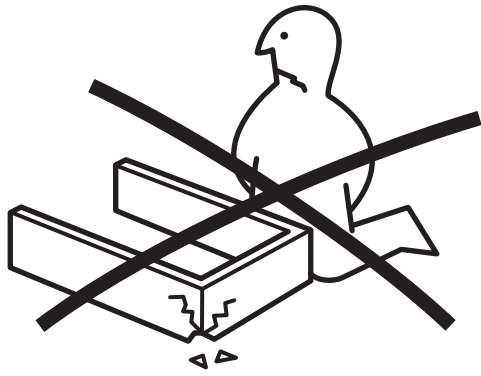

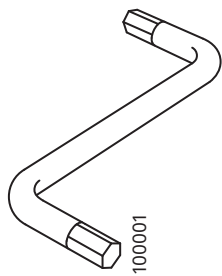

1x

 


12x




18x



 
14x

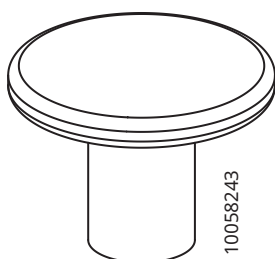


1x

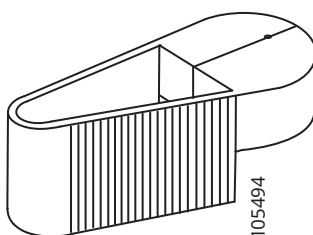 


1x

 


1x

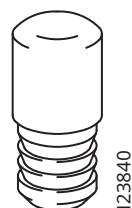 


2x

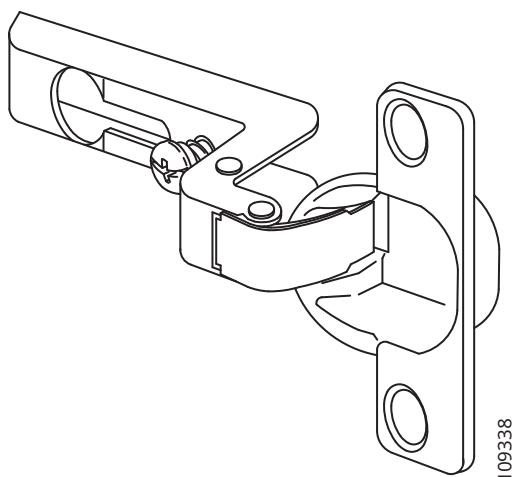 


3x

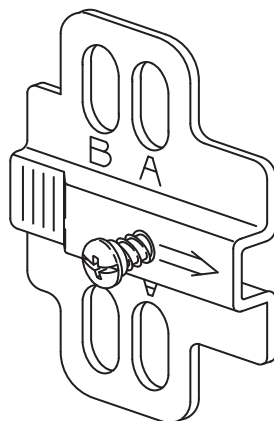 




3x

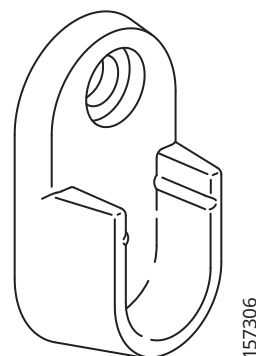 


2x






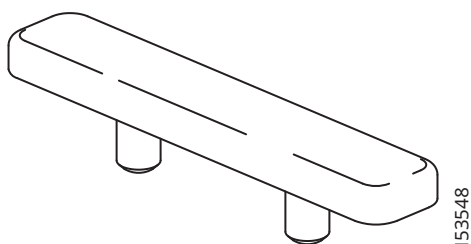 


4x

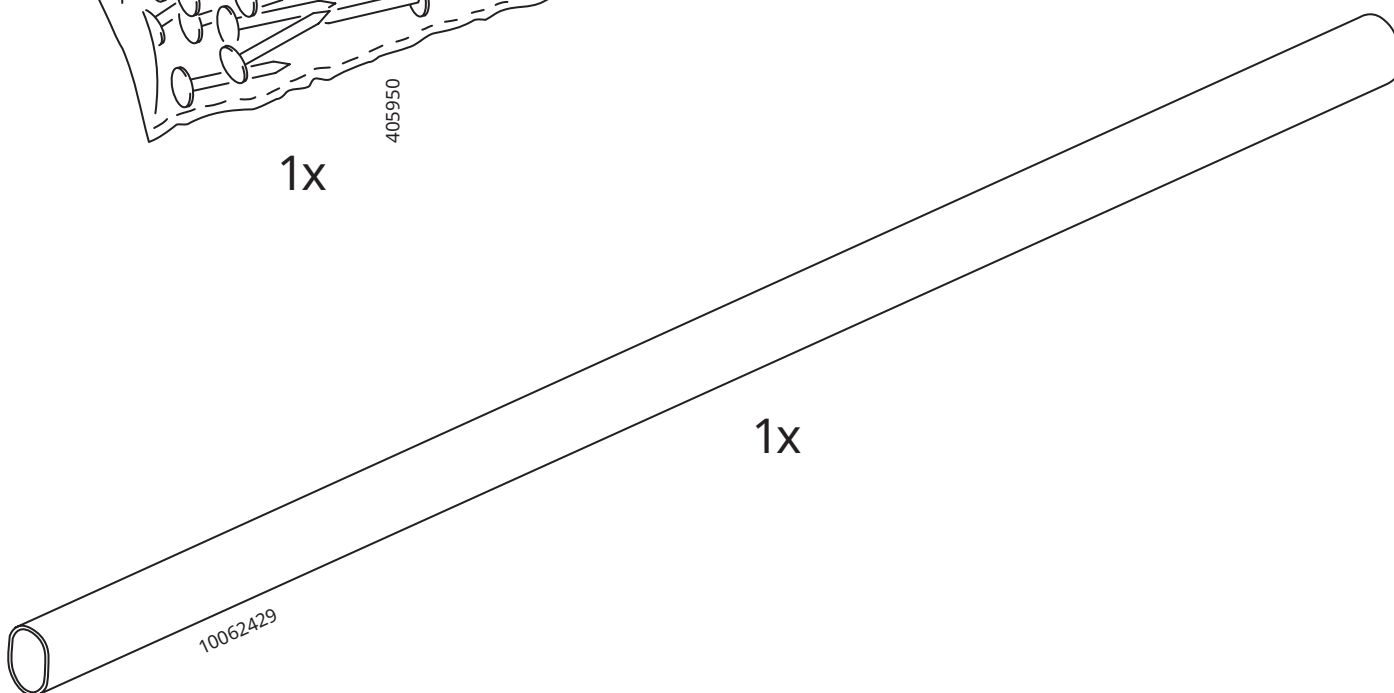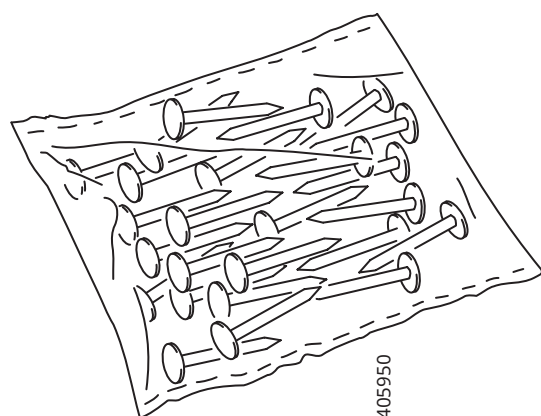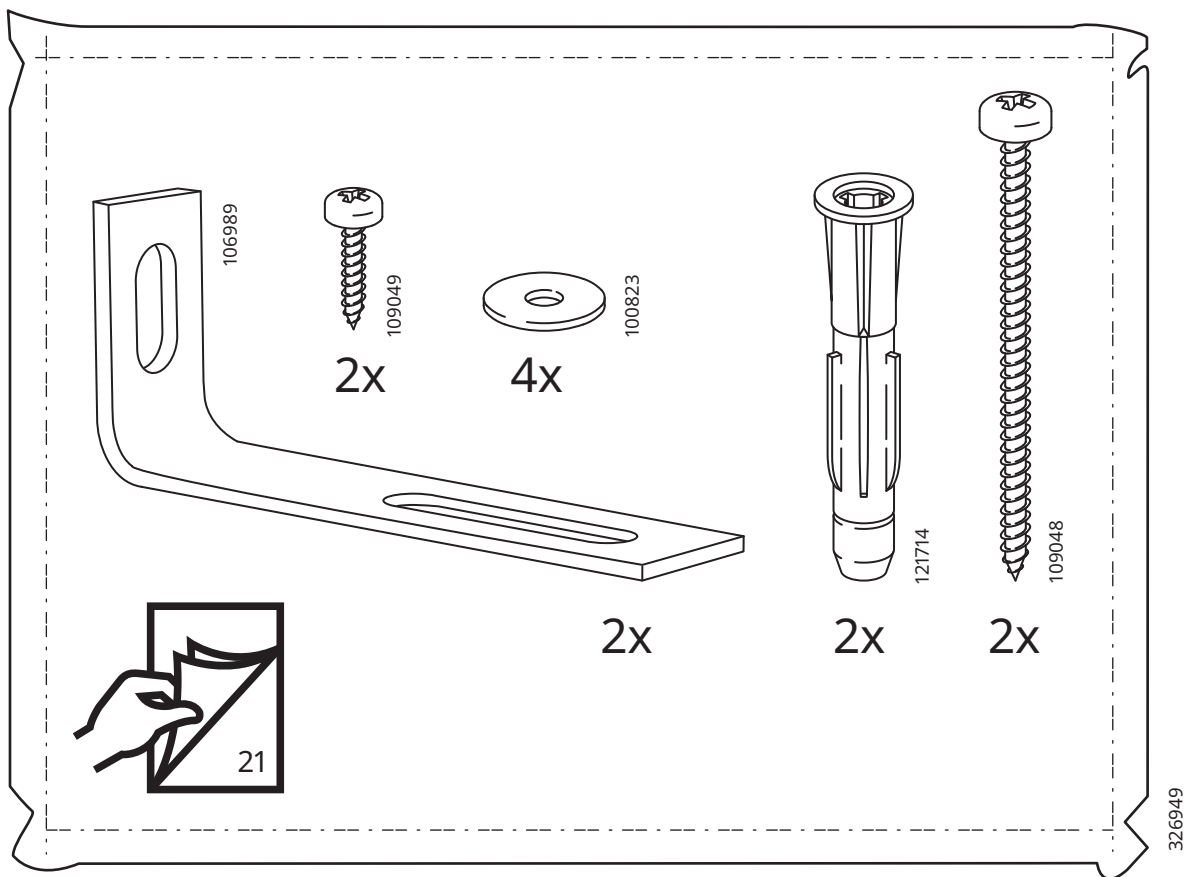   


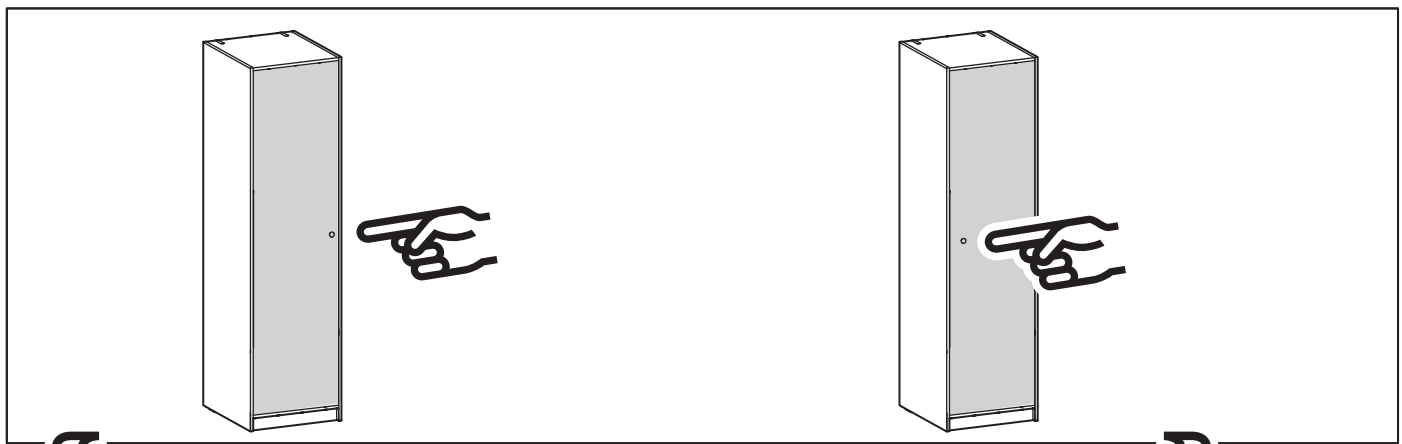 


1

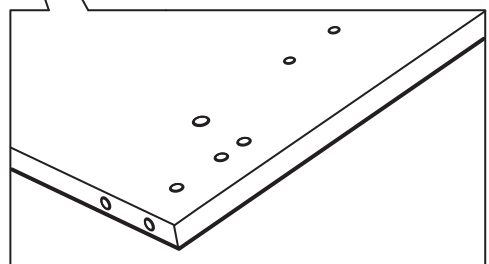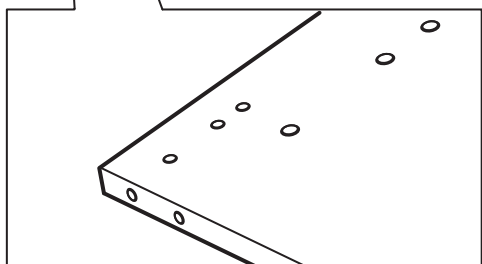  
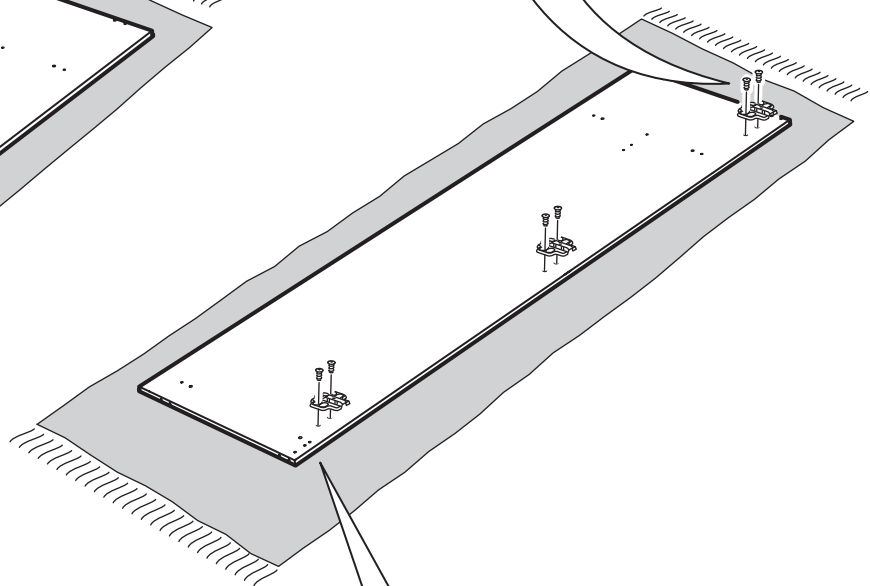 
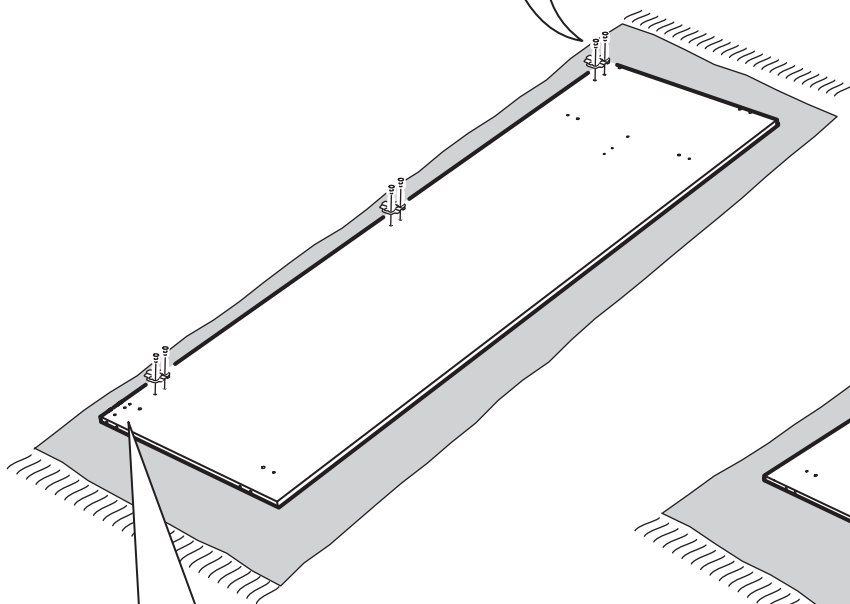 
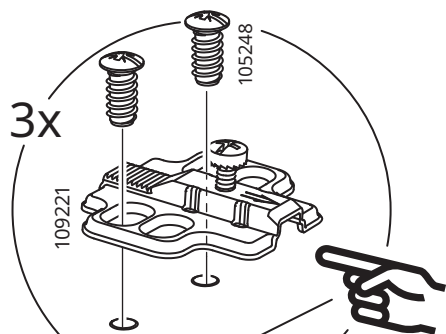 
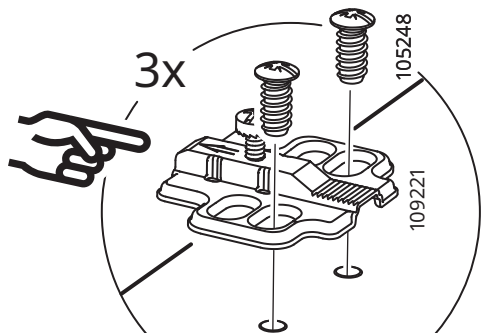 


# 2

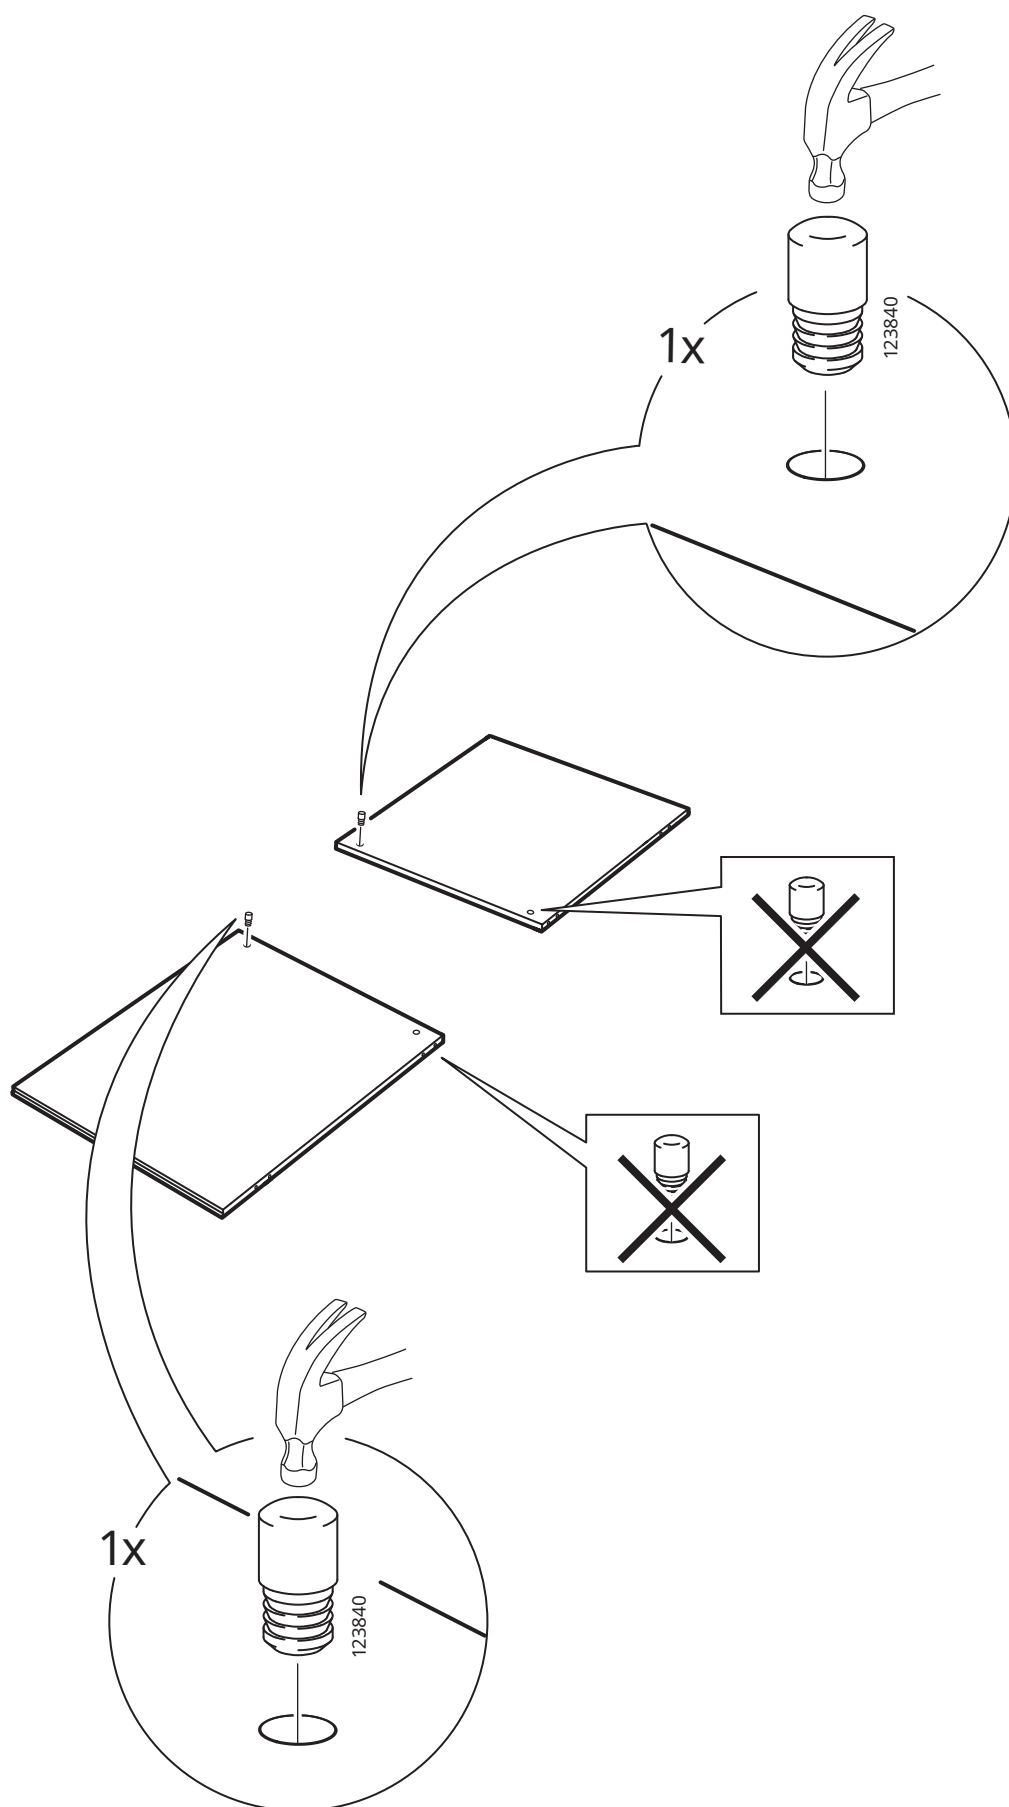 


3

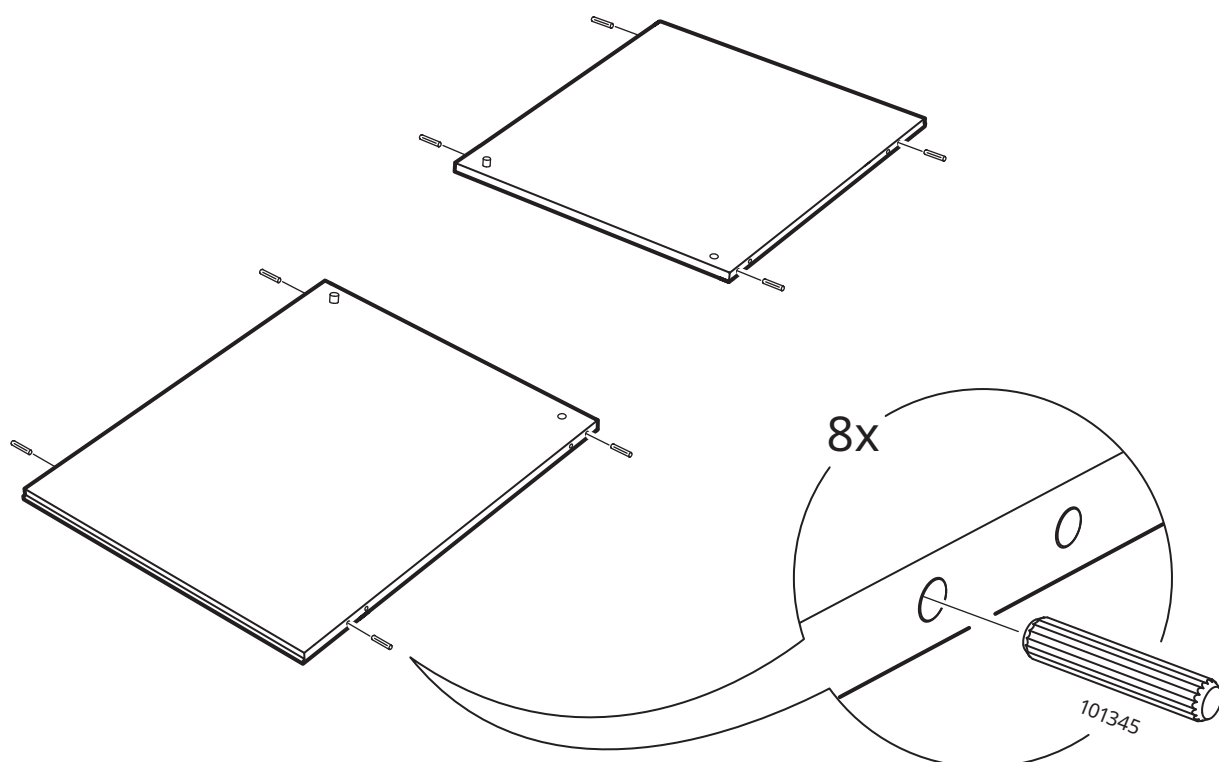 


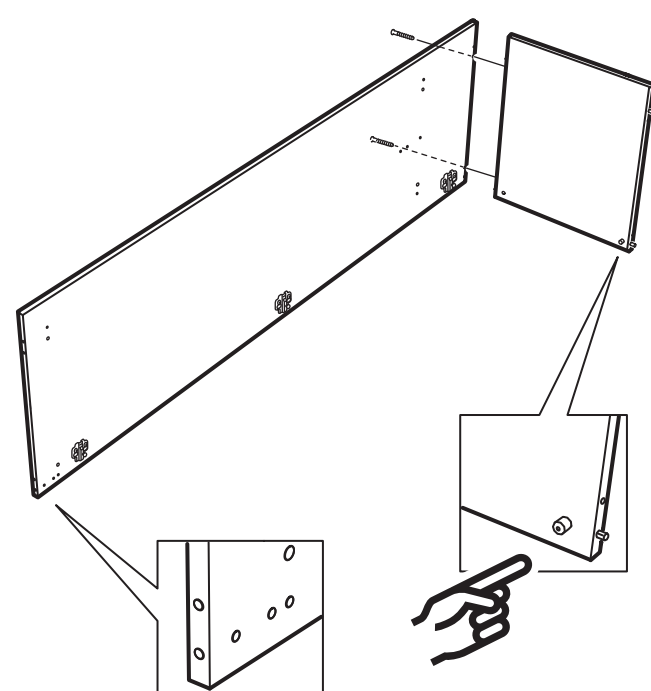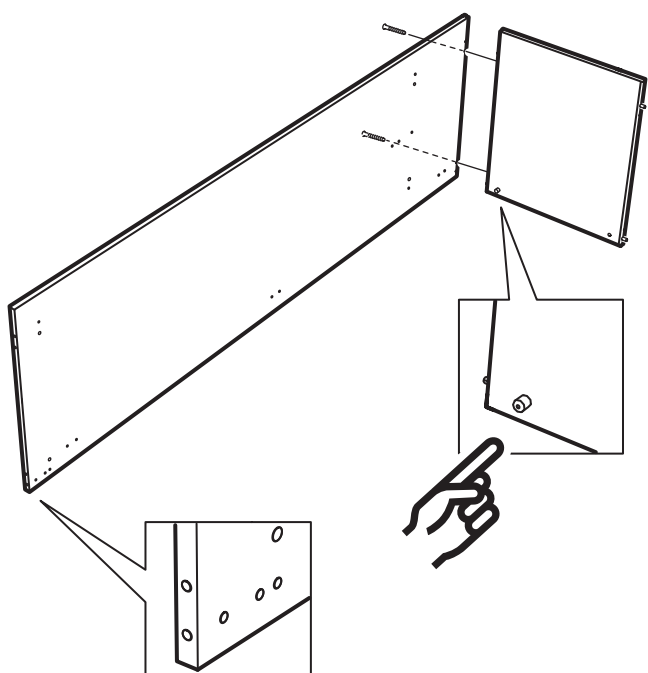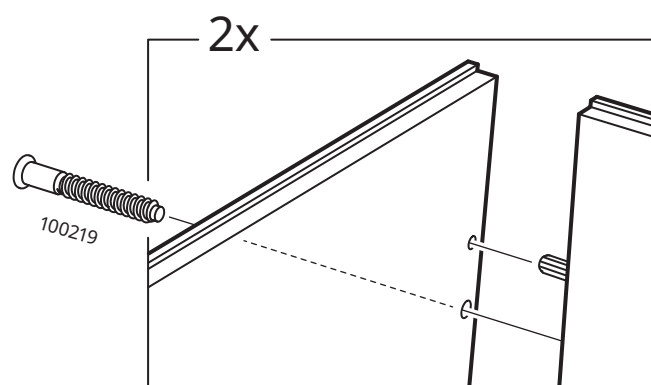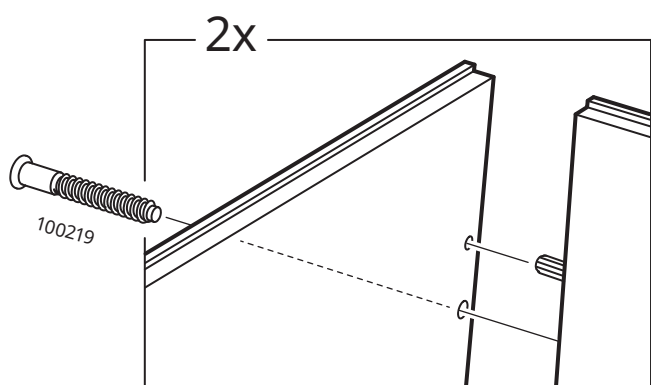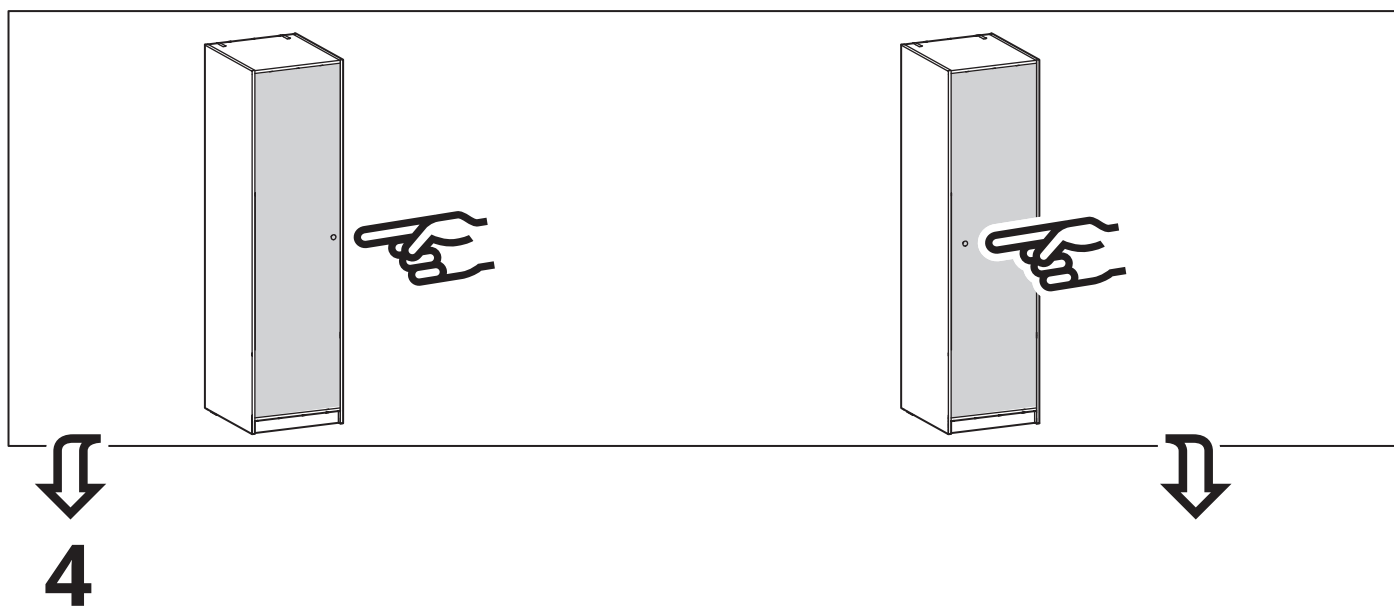     


# 5

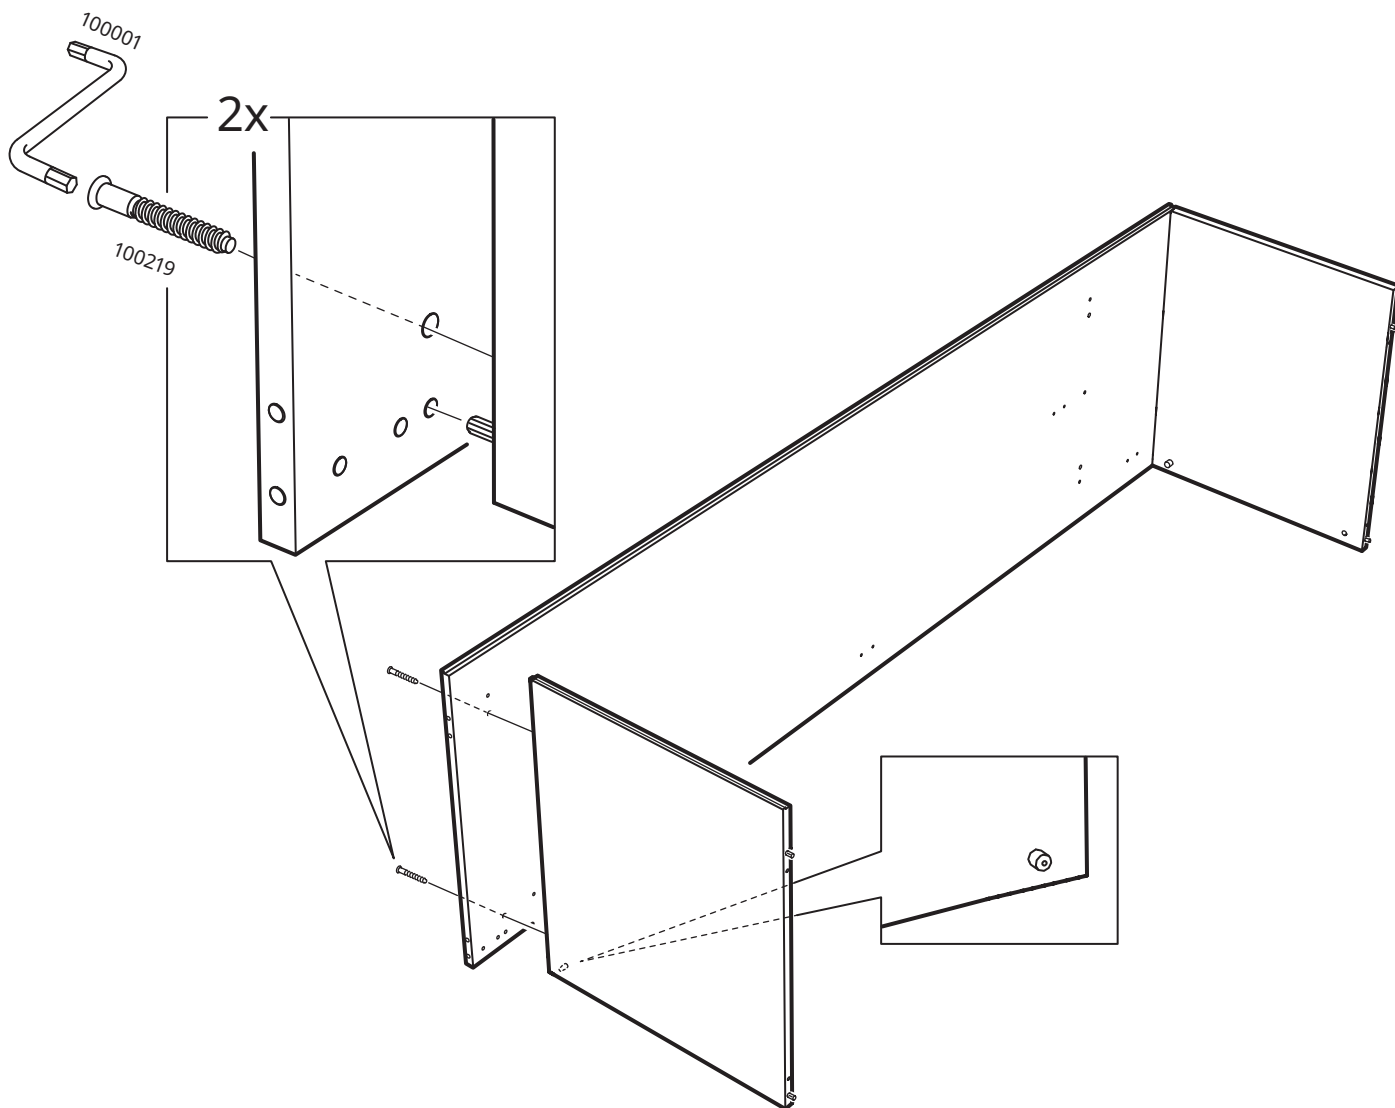 


# 6

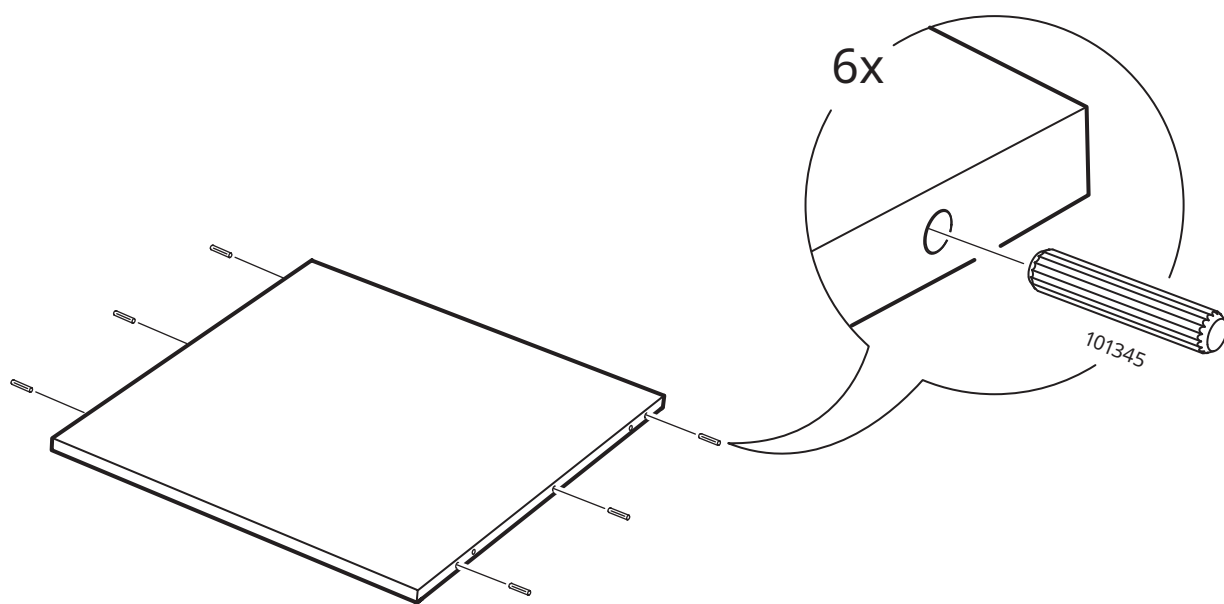 


7

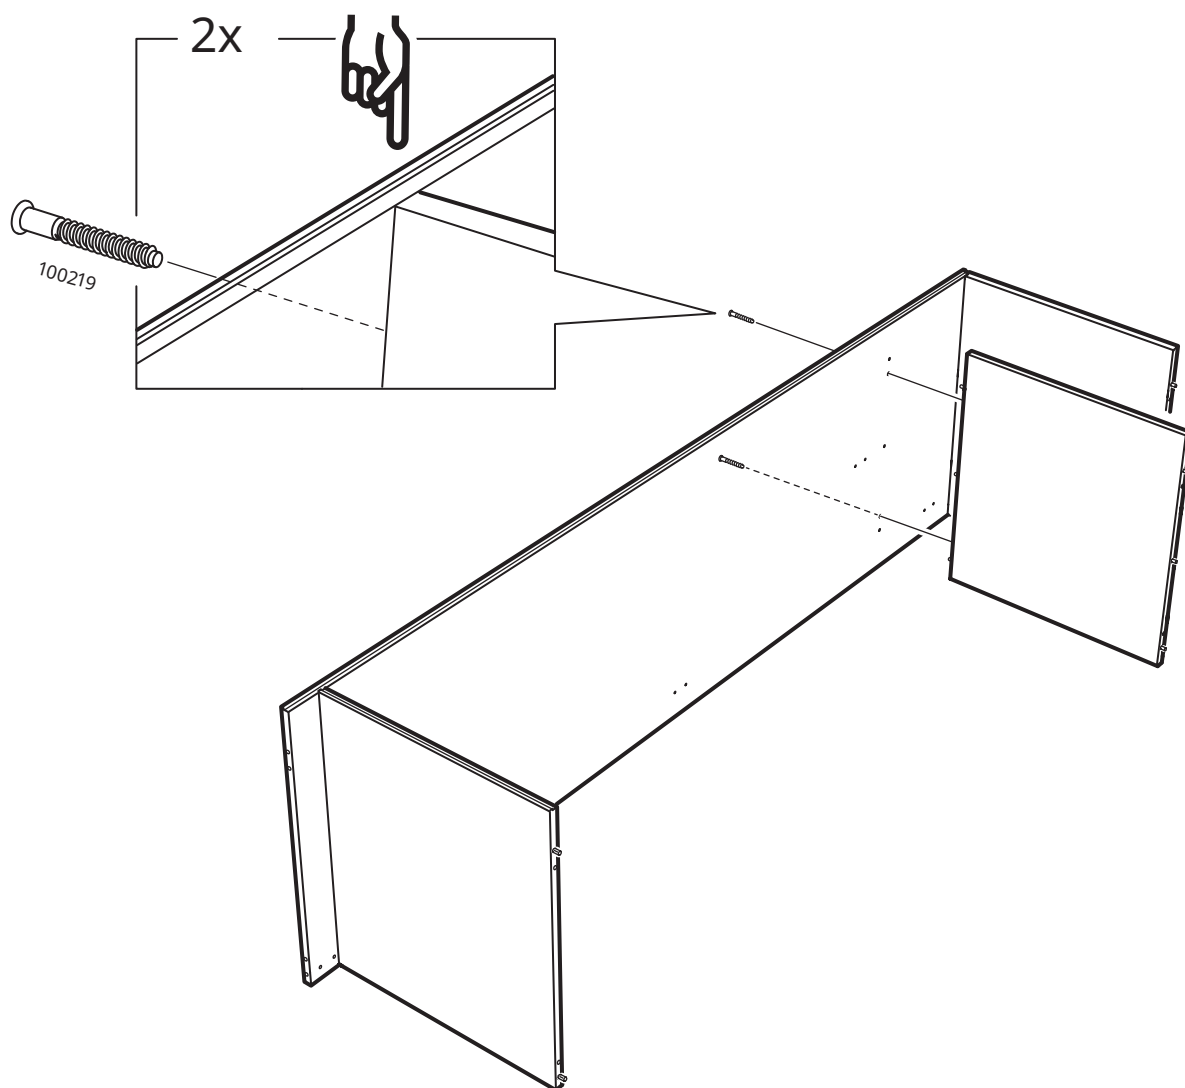 


8

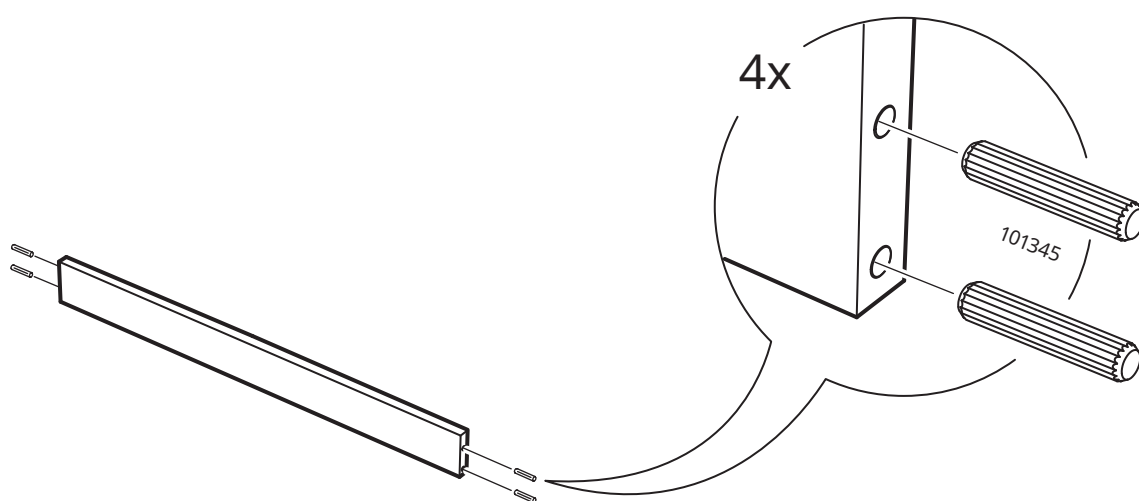 


9

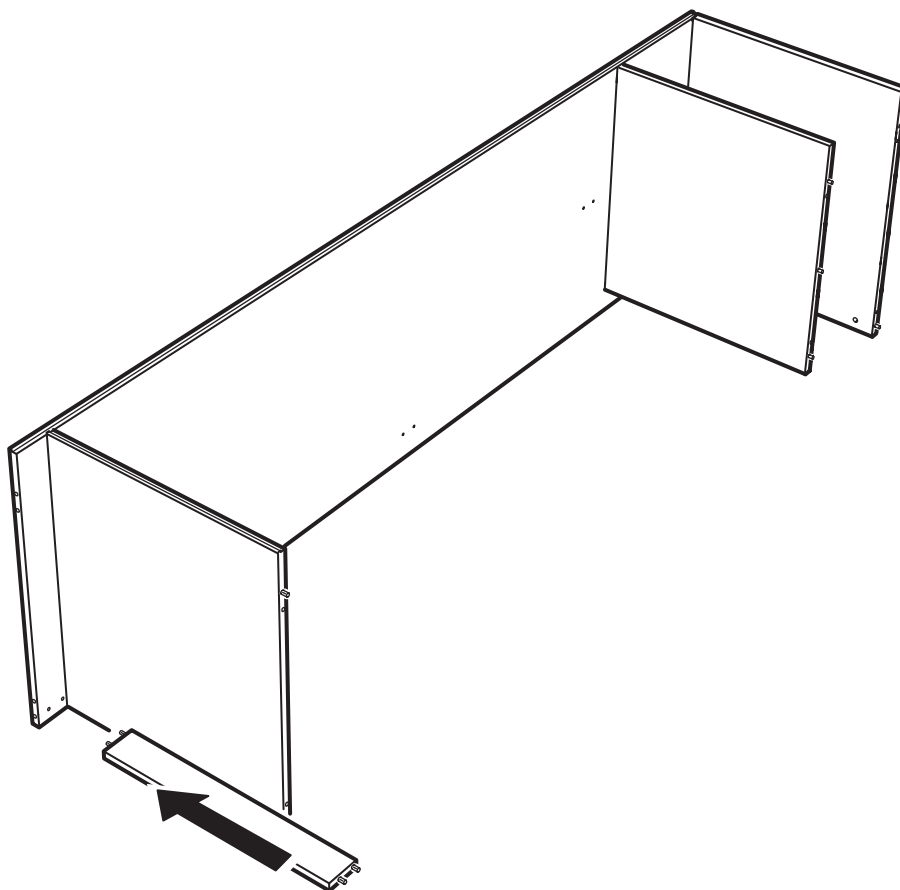 


10

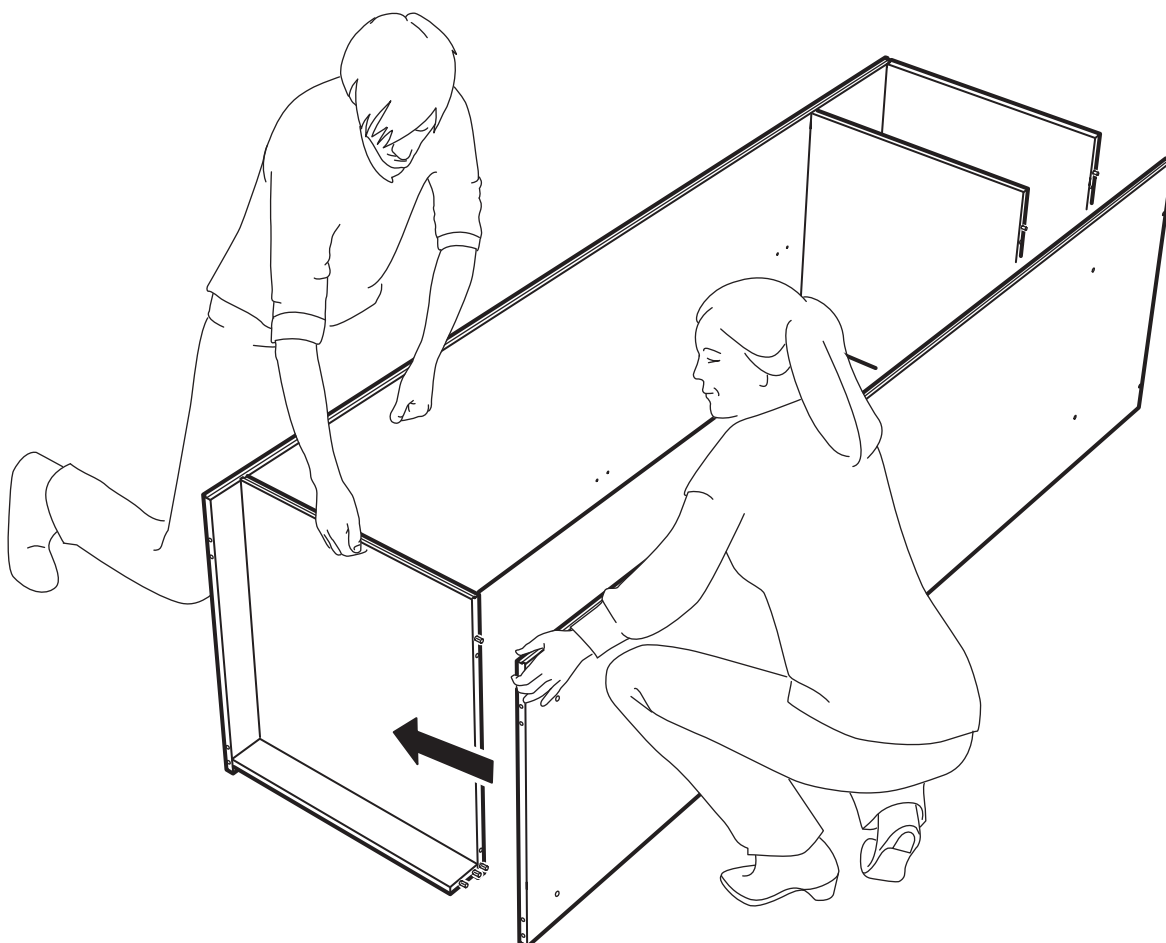 


11

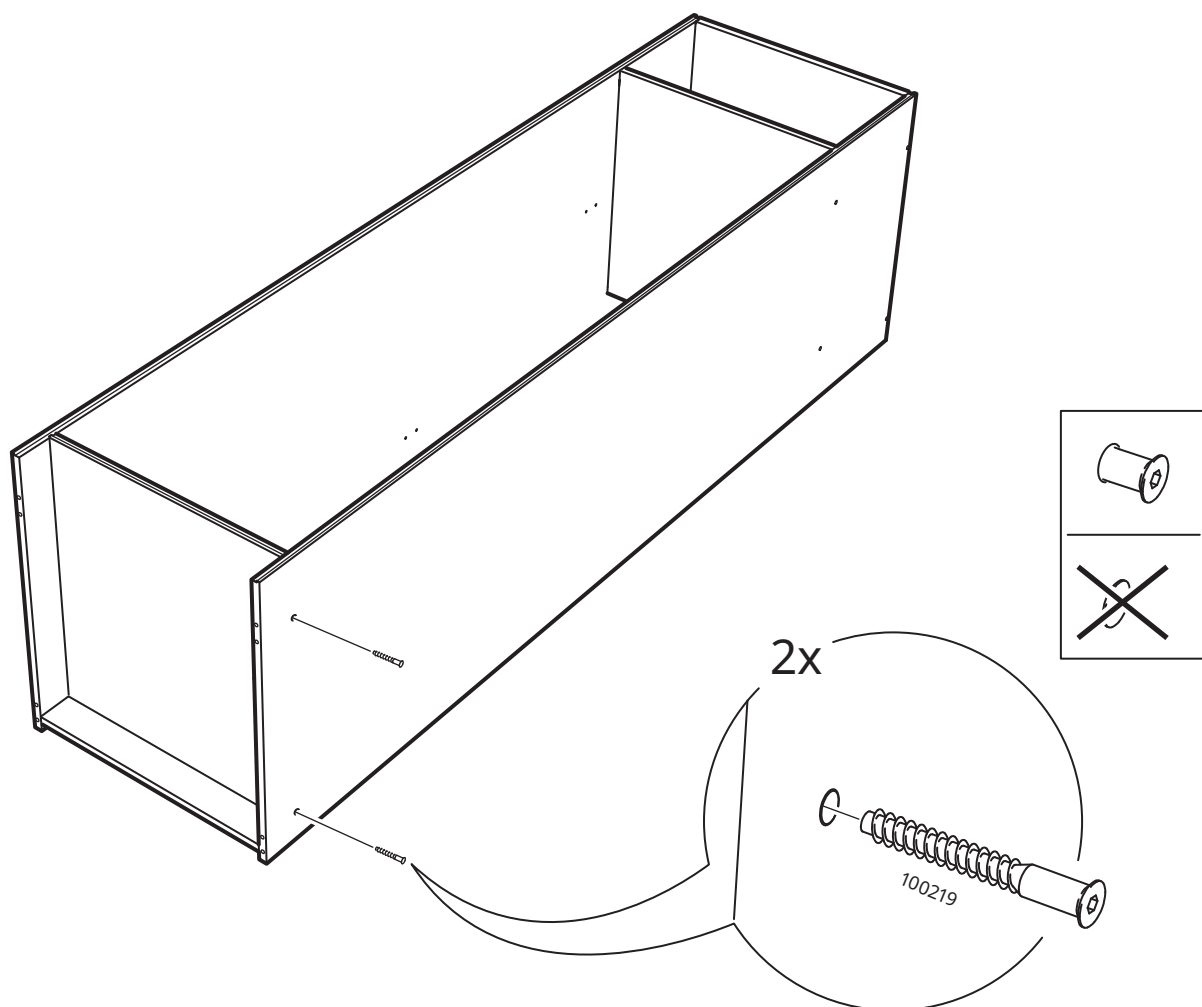 


12

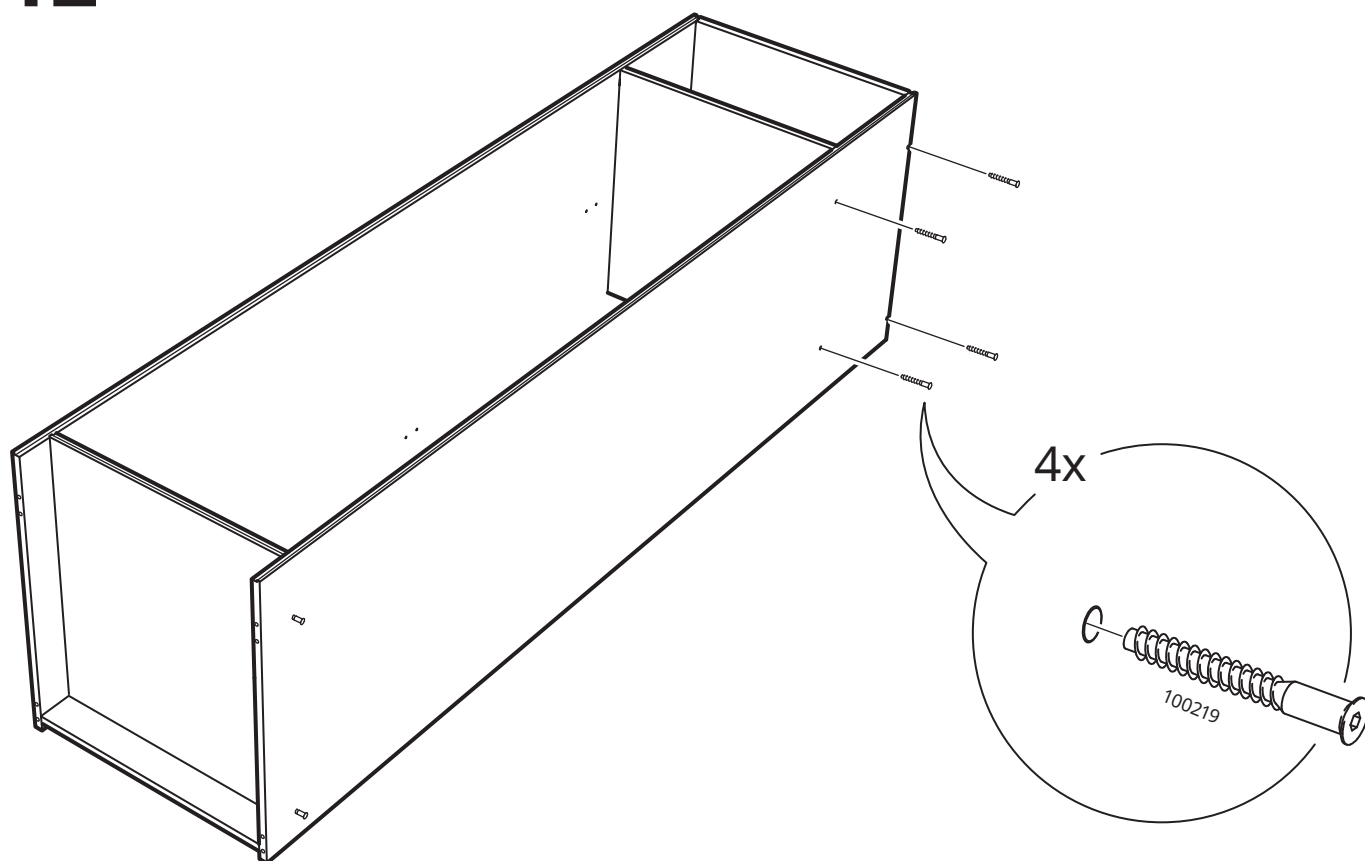 

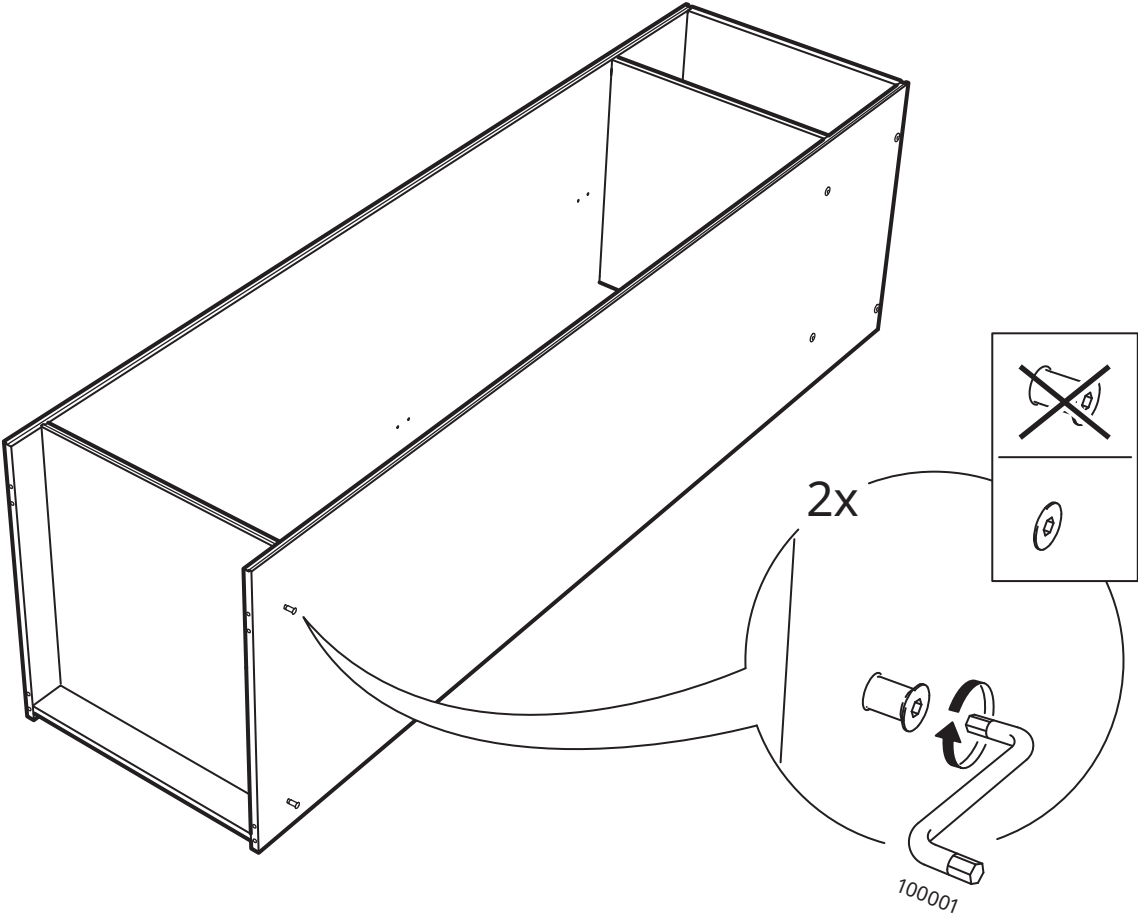 


14

This diagram shows the final assembly step. A large, light gray rectangular panel is positioned above the assembled cabinet frame. A large black arrow points downwards from the center of the panel towards the frame, indicating the direction of placement. The cabinet frame is shown in perspective, with its front and side panels already attached. A small inset in the bottom right corner shows a hand using a hammer to secure a nail into the side panel of the frame.



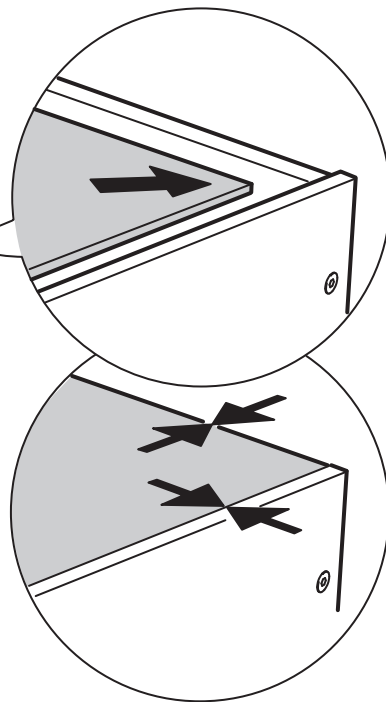 


15

This diagram illustrates the final assembly step. A long, rectangular top panel is being attached to the side panel of the unit. The top panel is shown with a series of pre-drilled holes along its edge. A screwdriver is shown driving a screw into one of these holes, securing the top panel to the side panel. An inset shows a close-up of the top panel's edge, highlighting the pre-drilled holes and the screws being used for attachment.

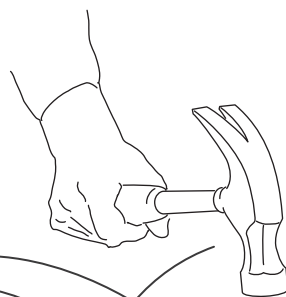 


15x

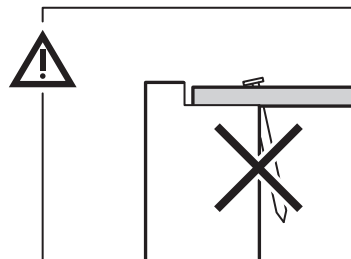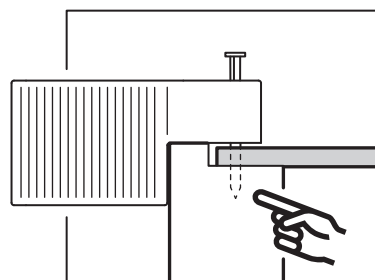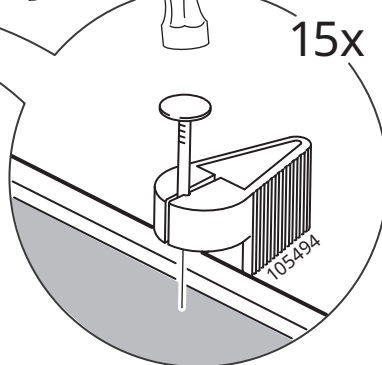   


405950


 
16


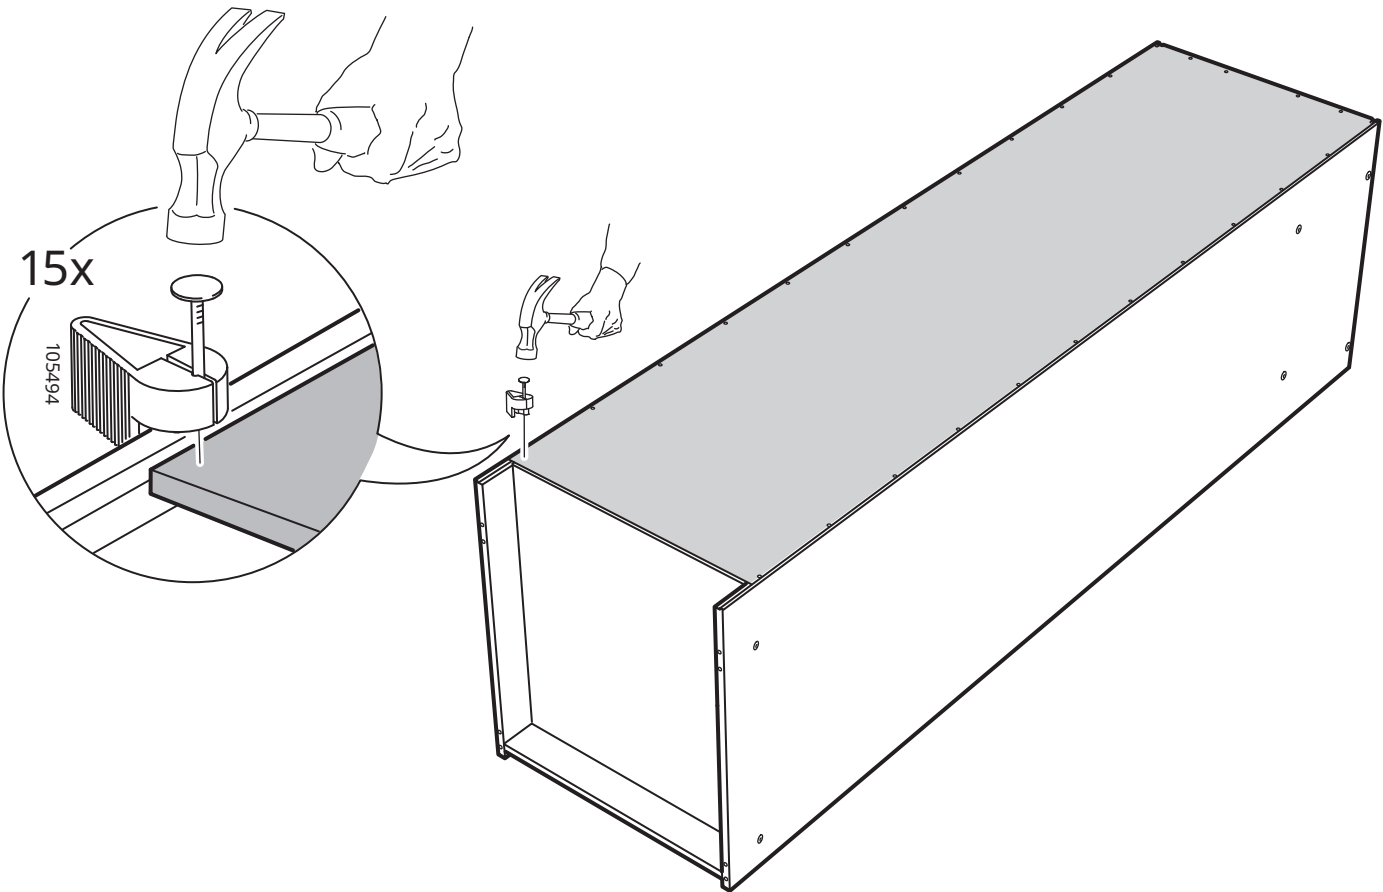


17

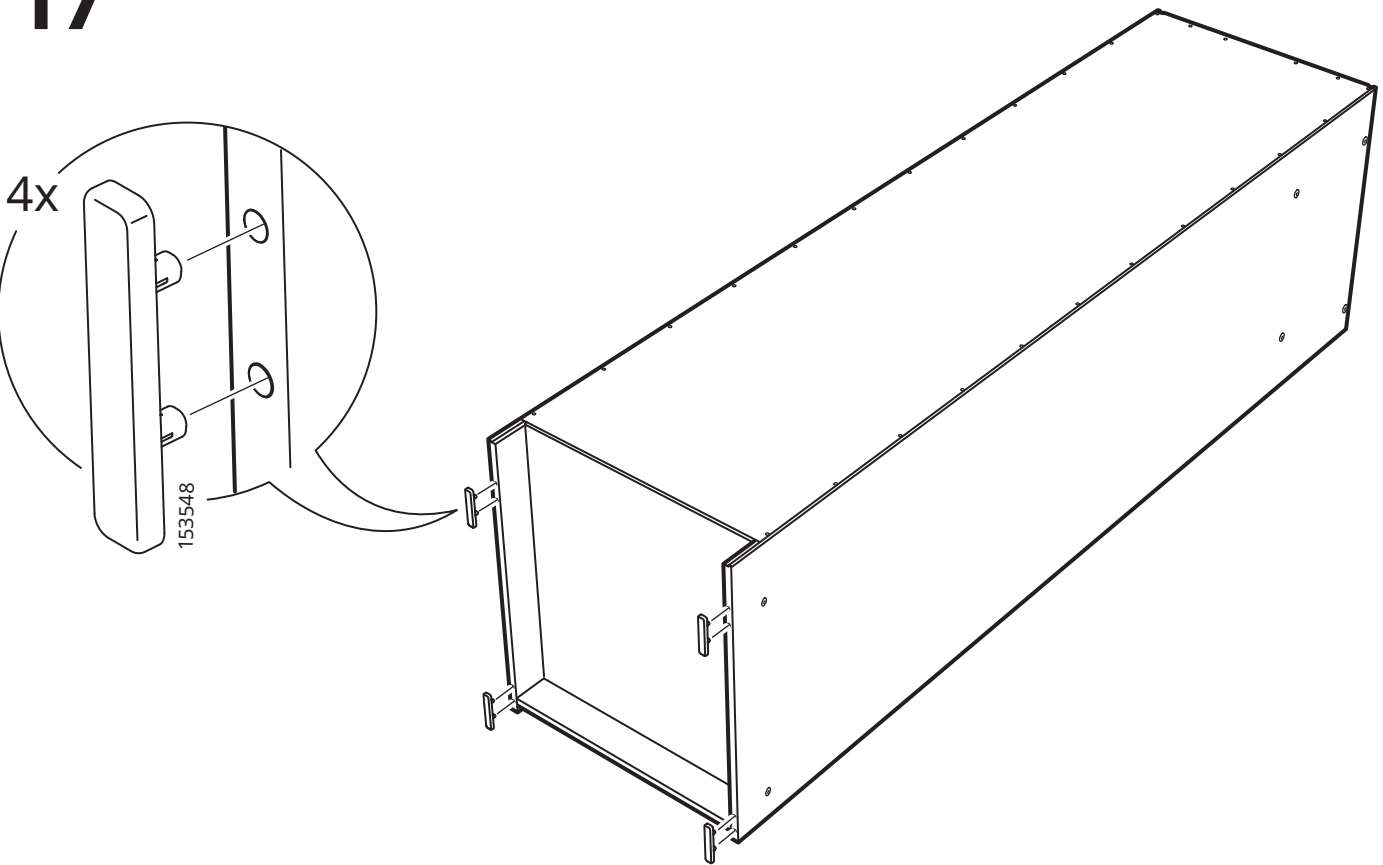 

18

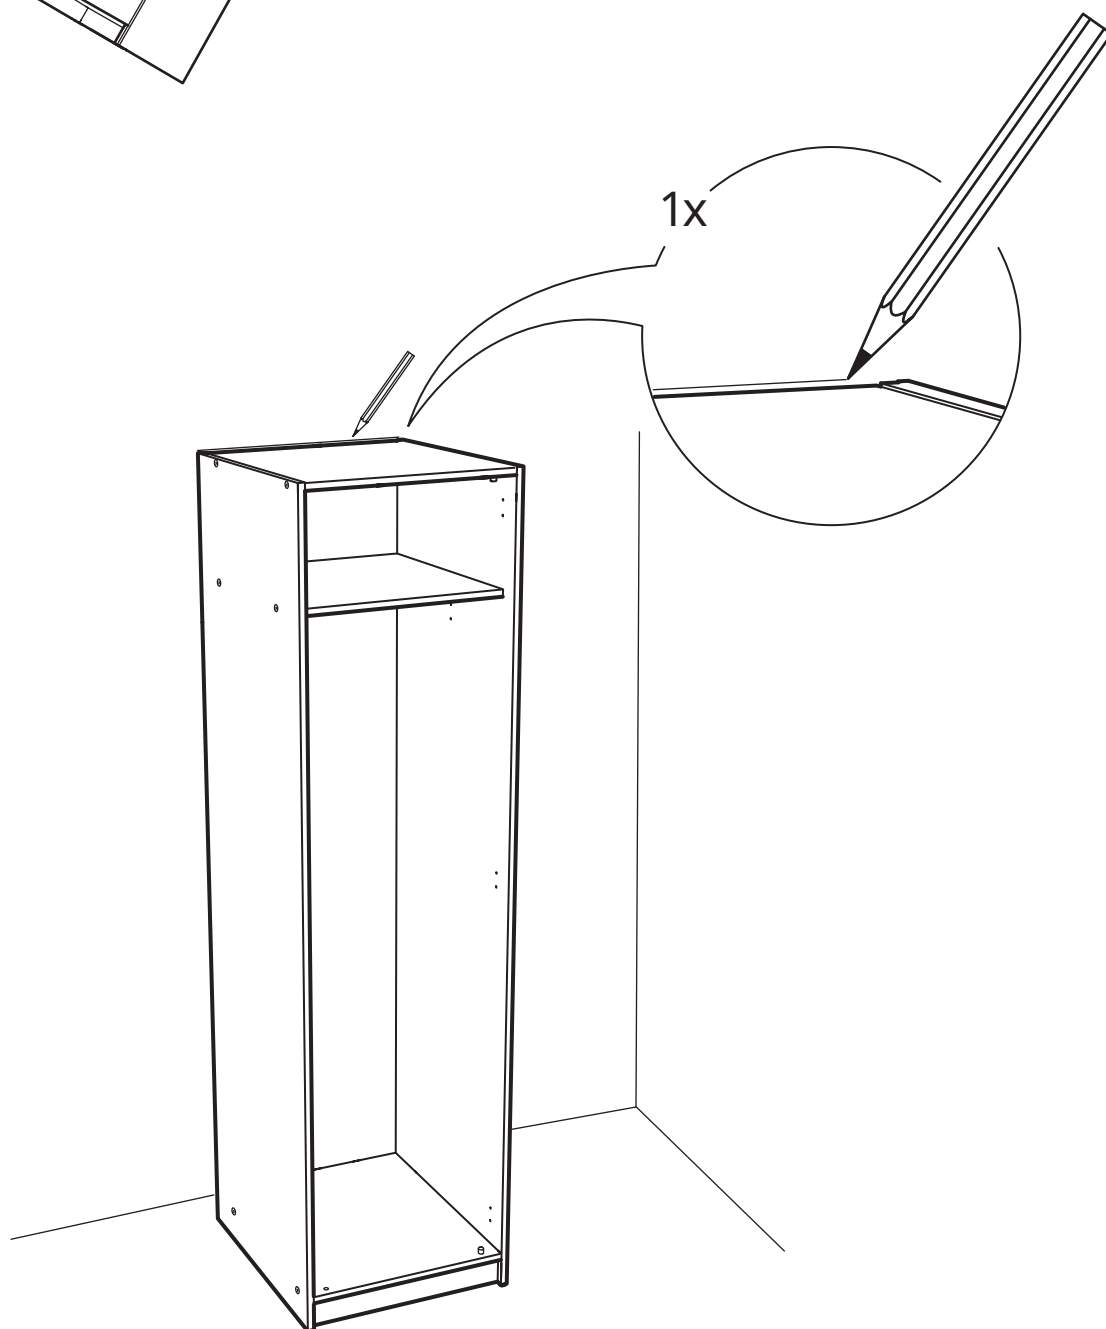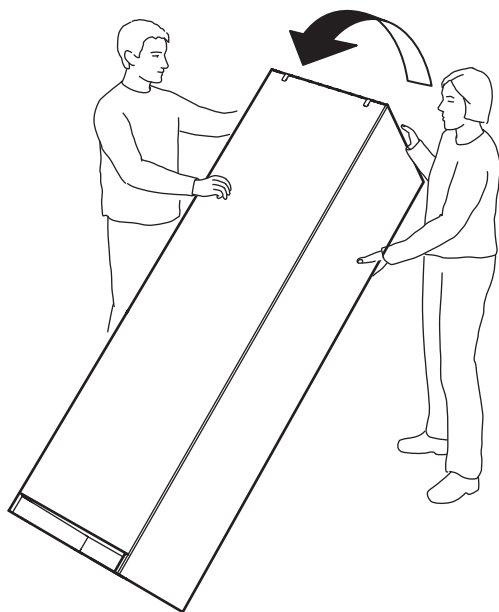  

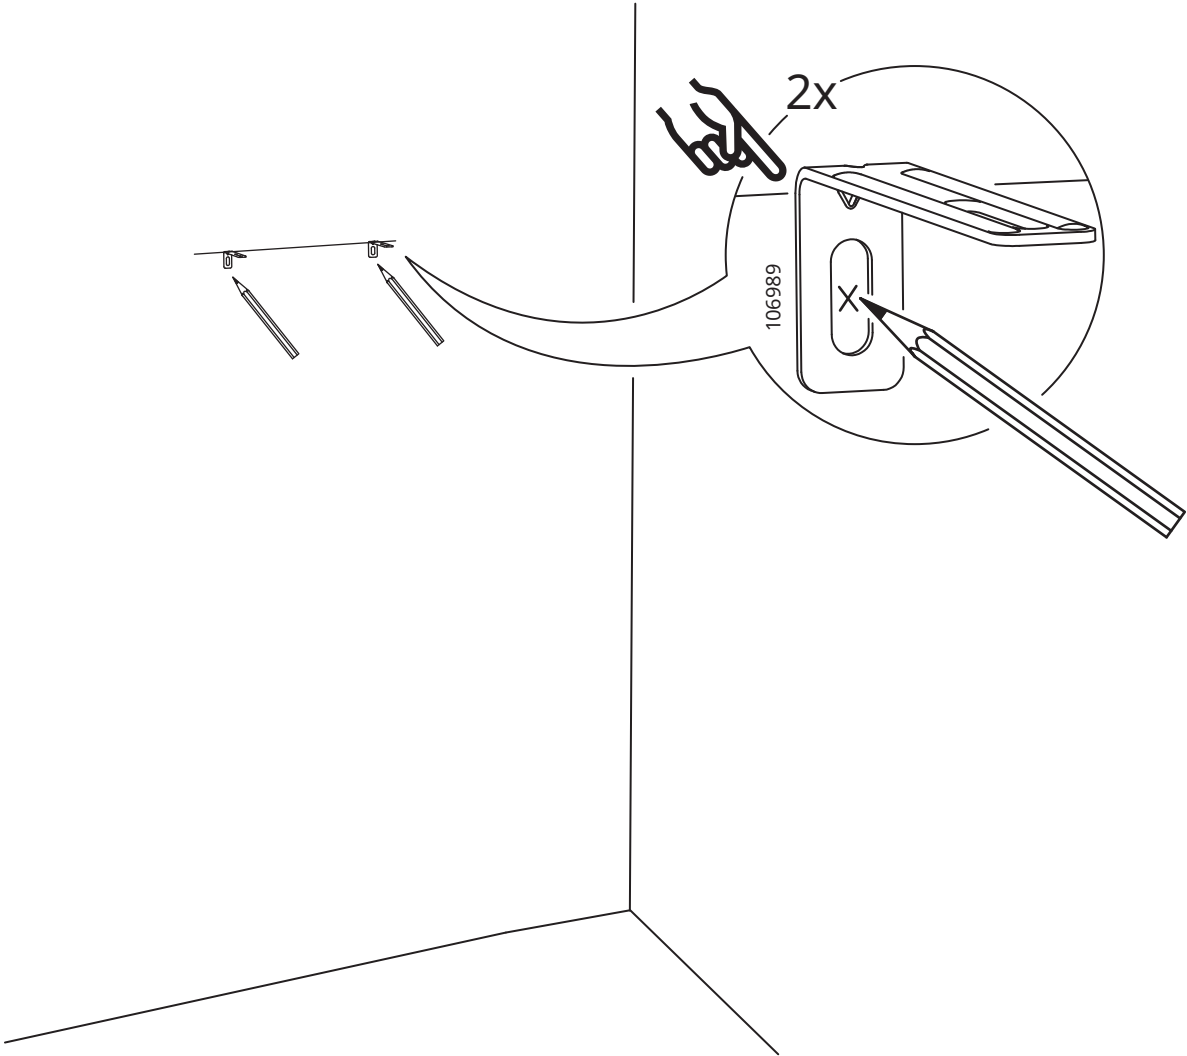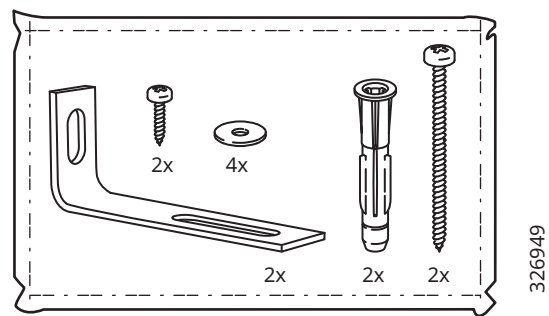  




[www.IKEA.com/secure-it](http://www.IKEA.com/secure-it)



 [www.IKEA.cn/secure-it](http://www.IKEA.cn/secure-it)

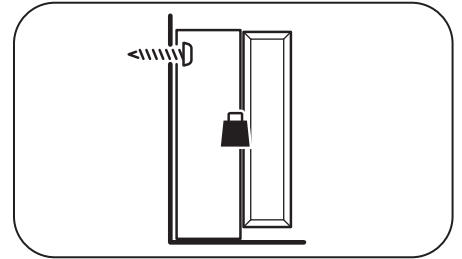


## 20

### English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

### עברית

 
הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.

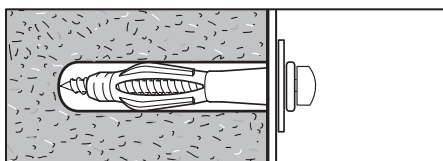


Ø 8 mm  
(5/16")





**1**

 

**2**

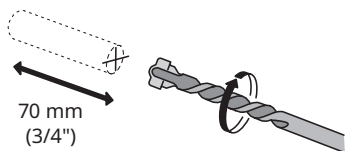 


**3**

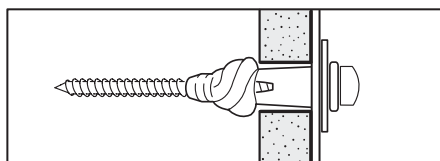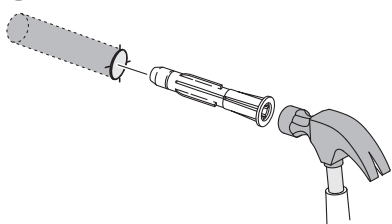  


Ø 8 mm  
(5/16")





**1**

 

**2**

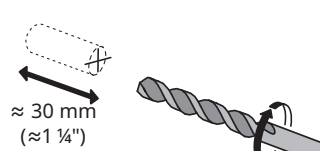 


**3**

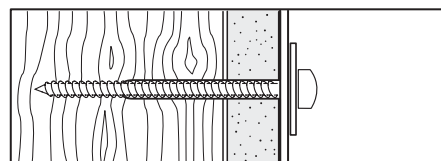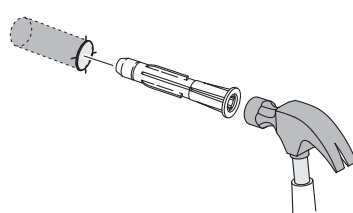  


Ø 3 mm  
(1/8")



**1**

 


**2**

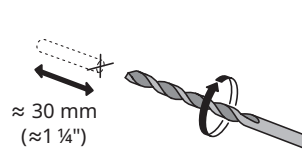 


**3**




 
# 21

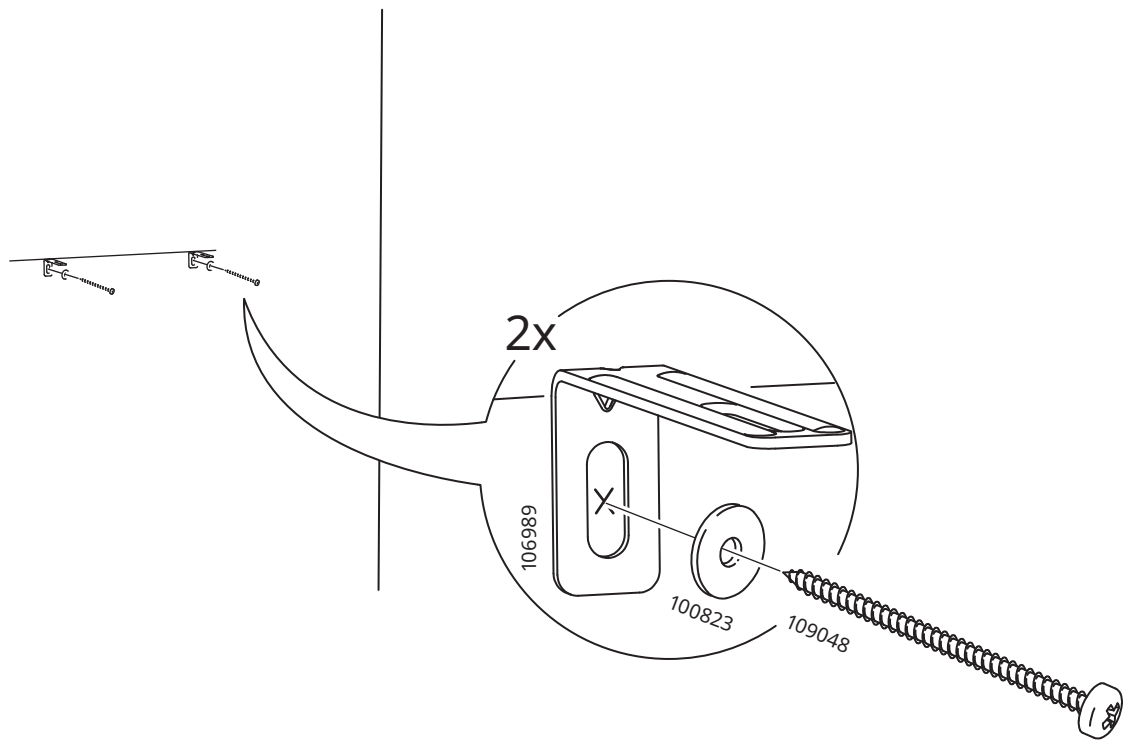


# 22

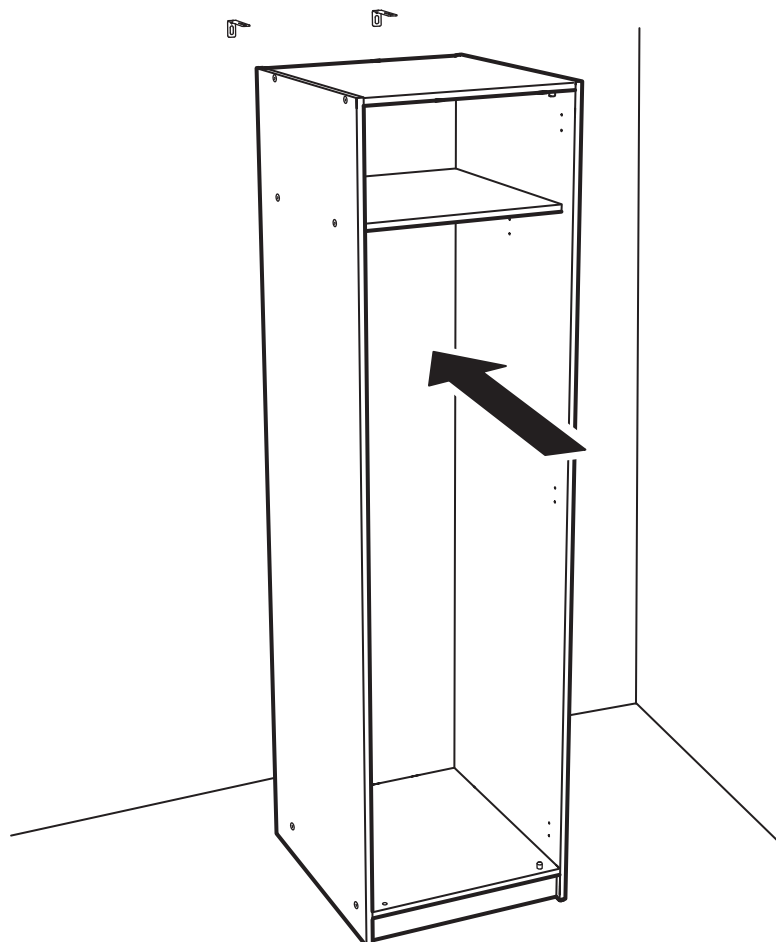 


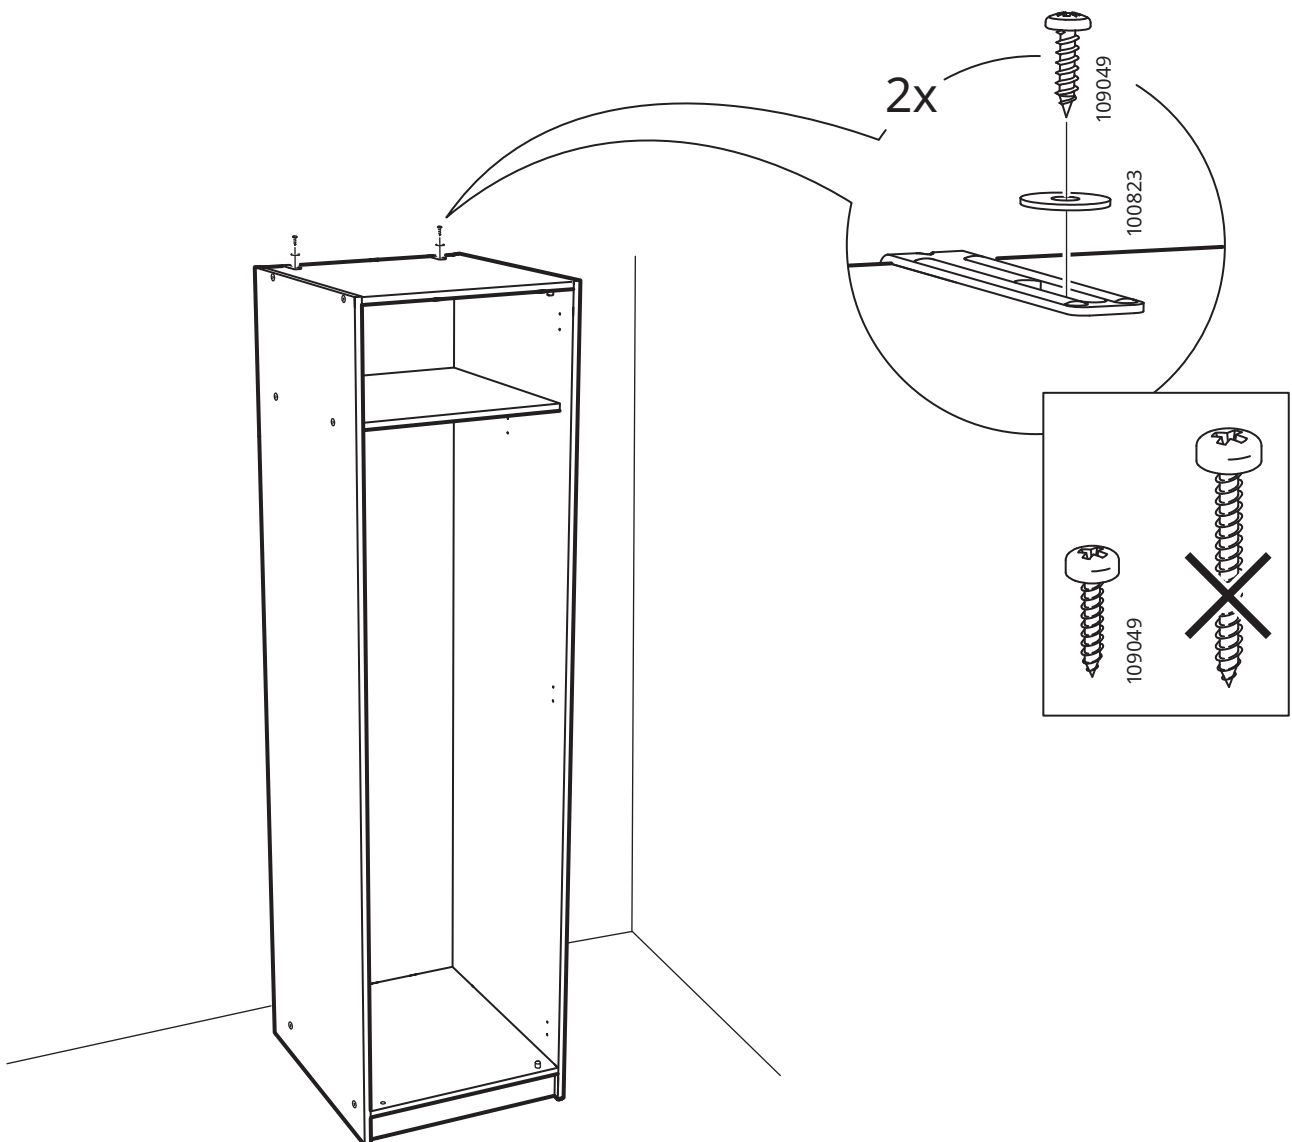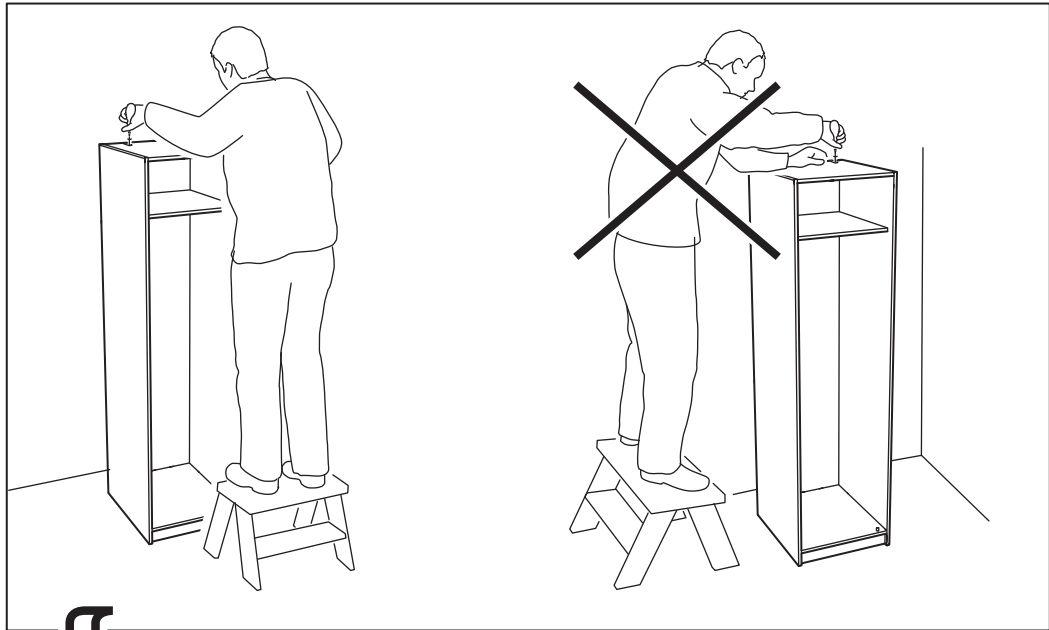  



24

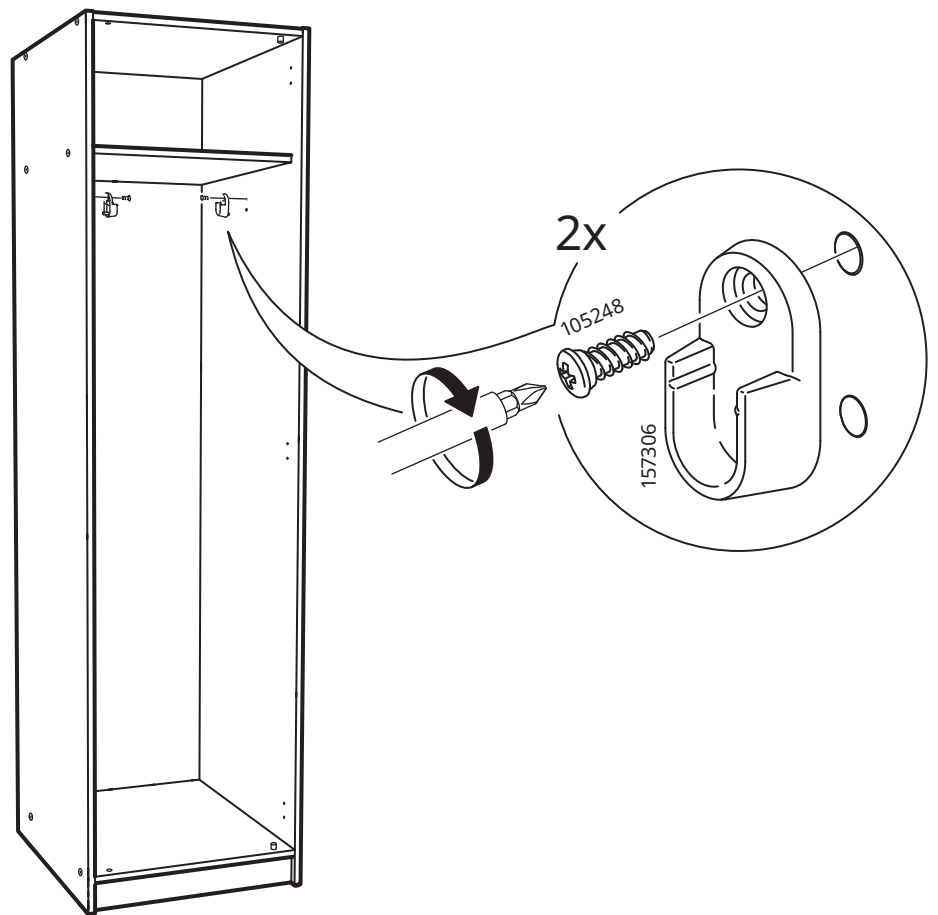 


25

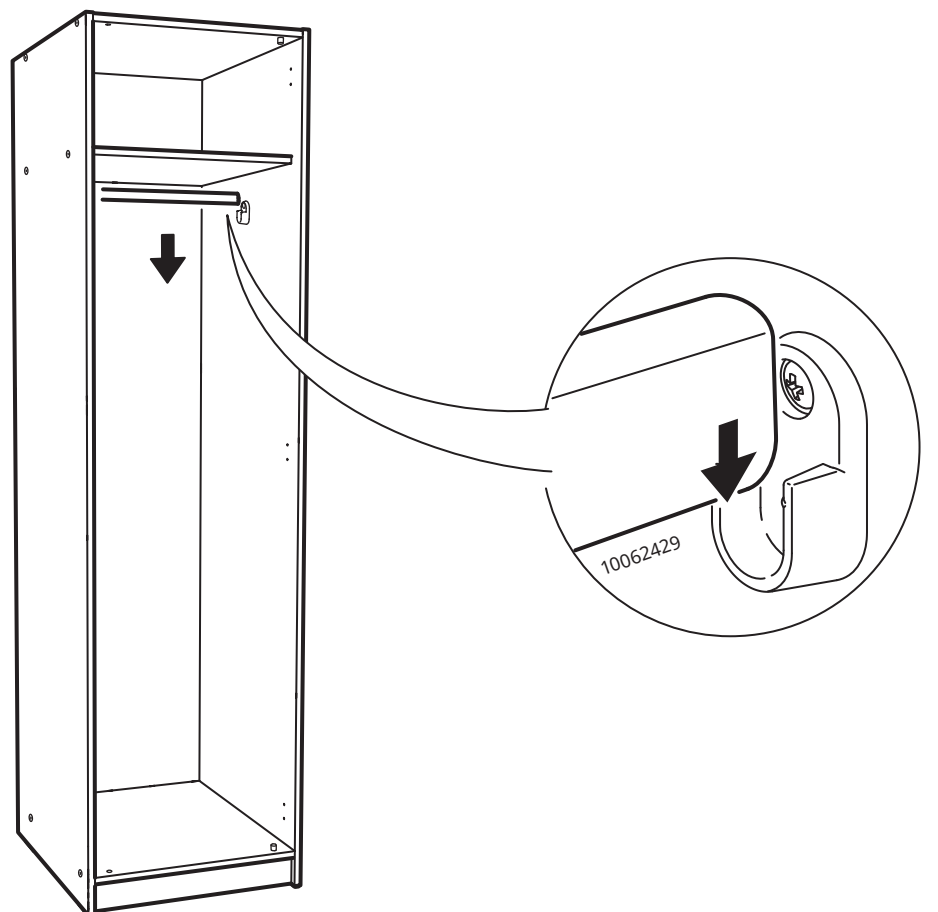 

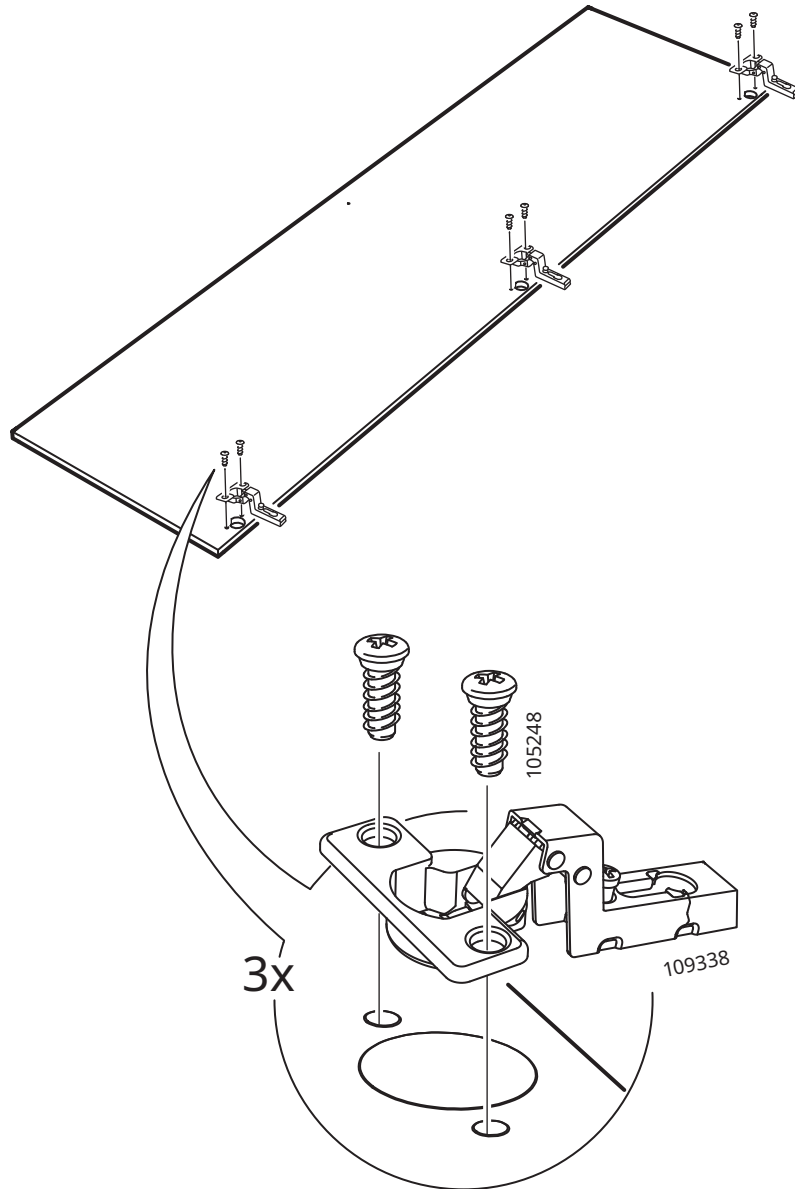 

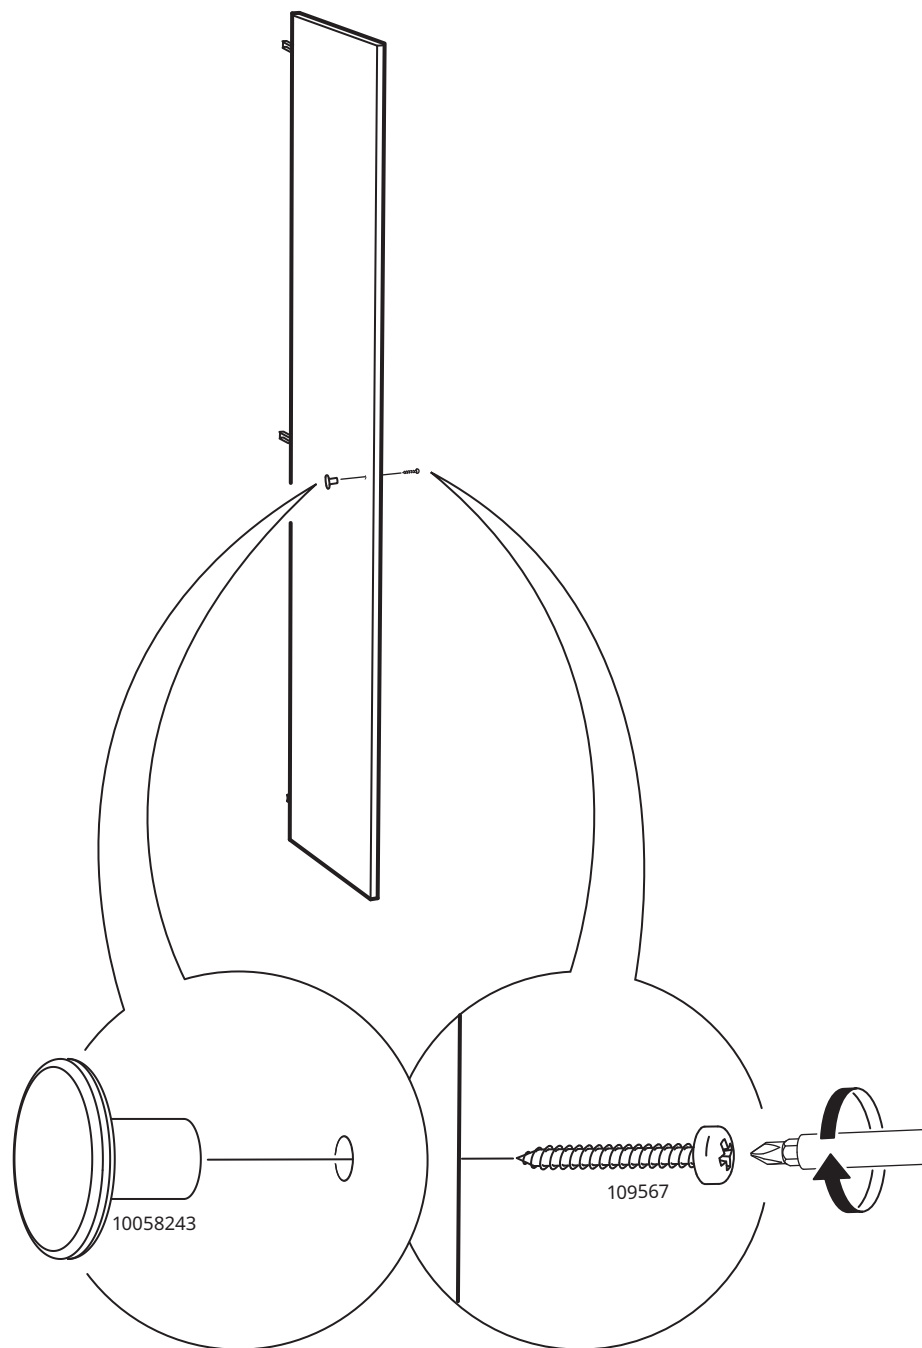 

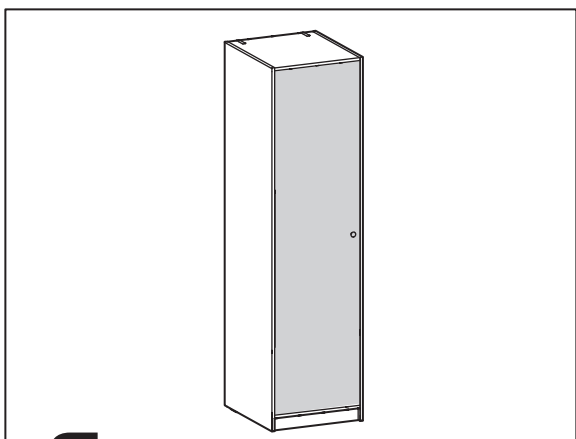 

28

