 
 


HAUGA

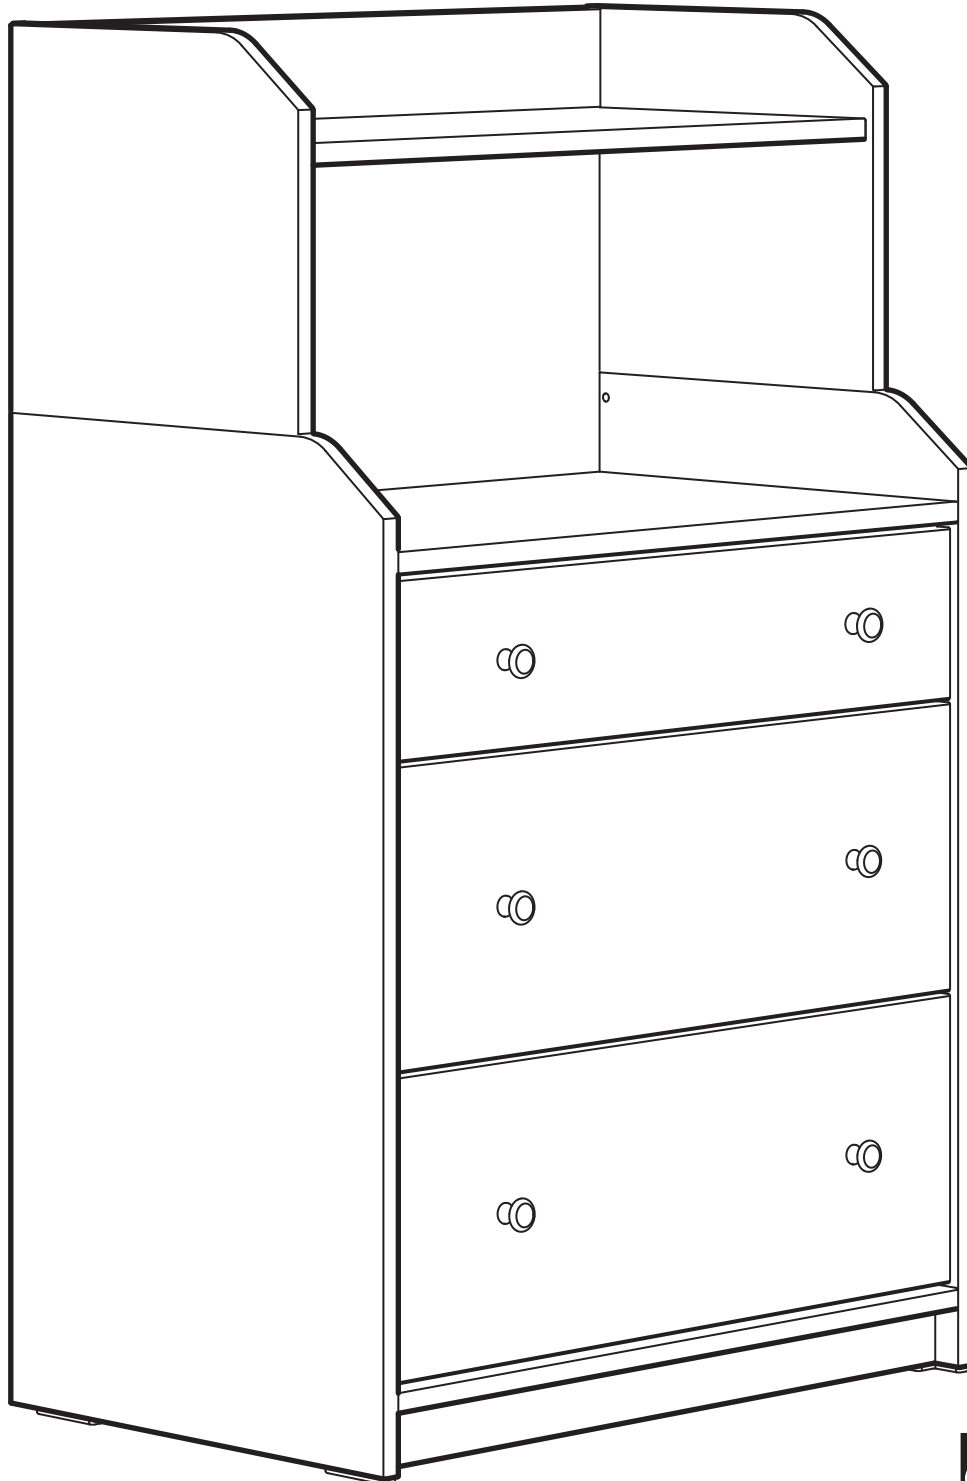

Design and Quality
IKEA of Sweden

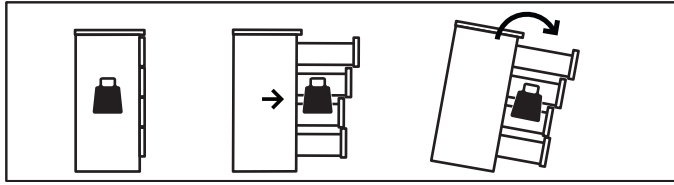

English

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, or shelves.

עברית

אזהרה

נפילת הרהיט עלולה לגרום לפגיעה גופנית חמורה או קטלנית.

 
יש לקבע את הרהיט לקיר באמצעות אבזרי הקיבוע המצורפים.

 
על-מנת למזער את סכנת הפגיעה הגופנית או המוות מנפילת רהיטים:

 
מקמו את הפריטים הכבדים ביותר במגירה התחתונה.

 
 
 
 
הימנעו מלהניח טלוויזיות או פריטים כבדים אחרים על מוצר זה.

 
 
 
 
 
אין לאפשר לילדים לטפס על המגירות, הדלתות או המדפים.

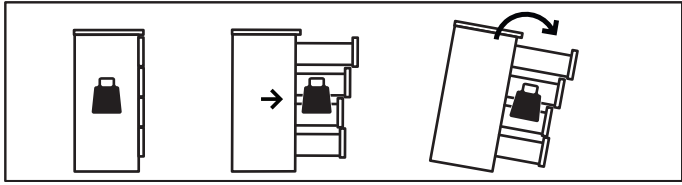

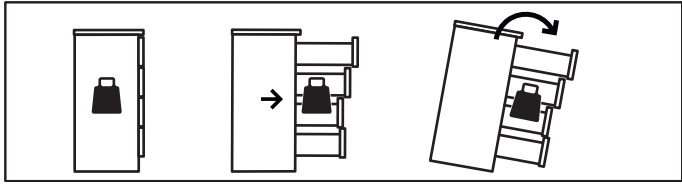

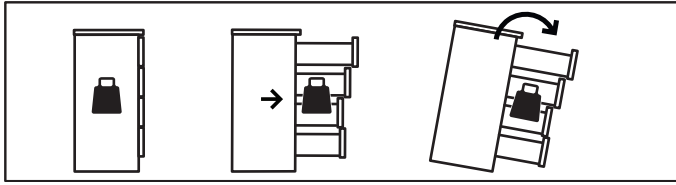


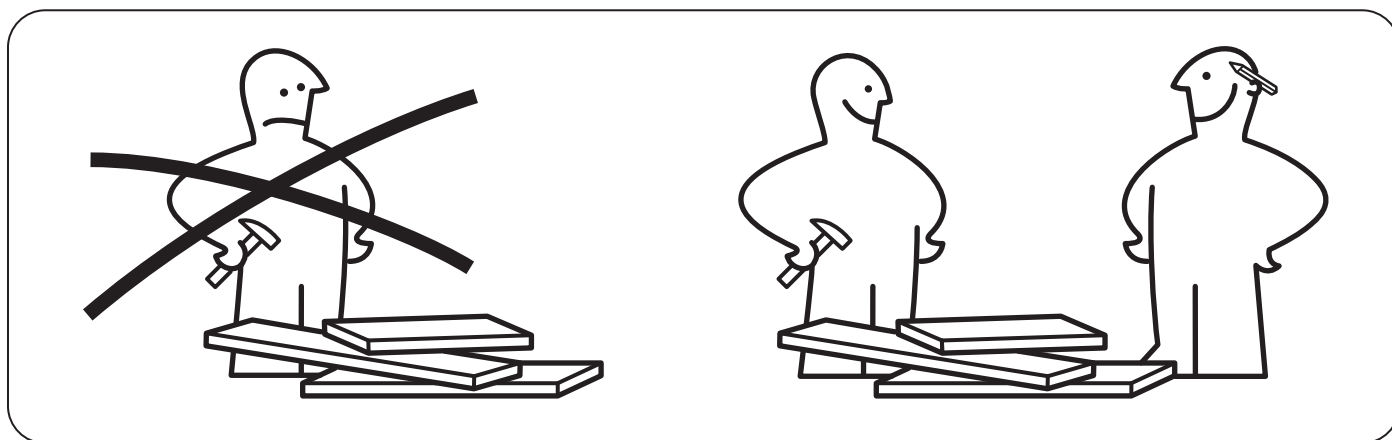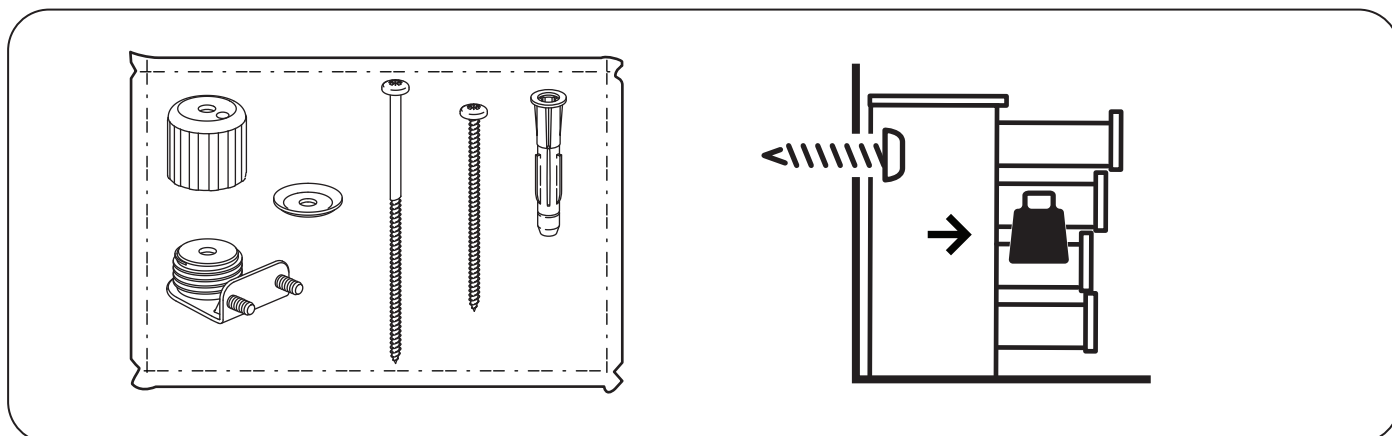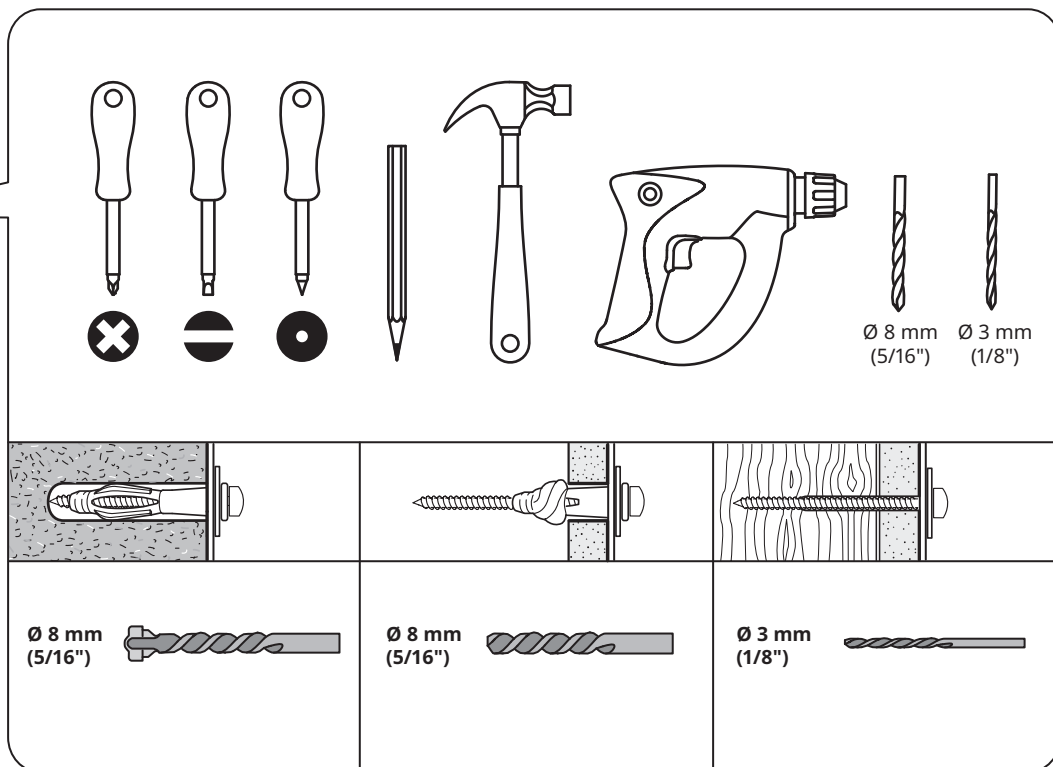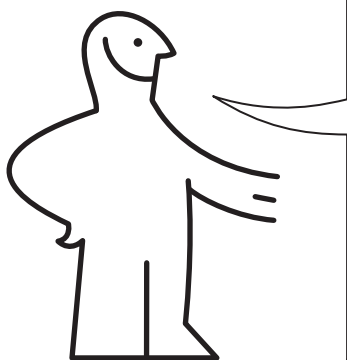

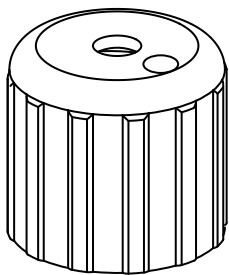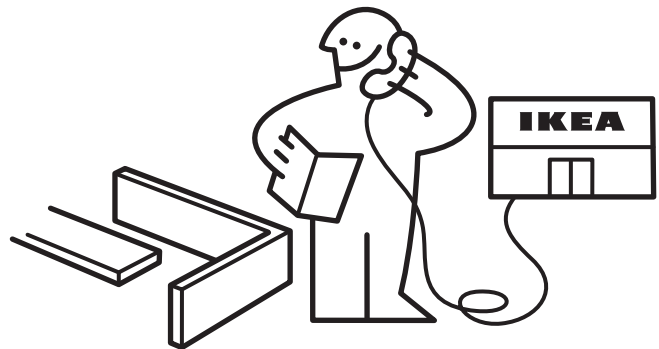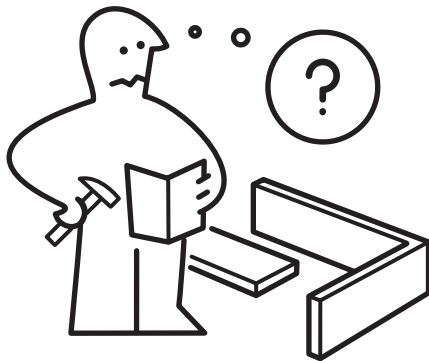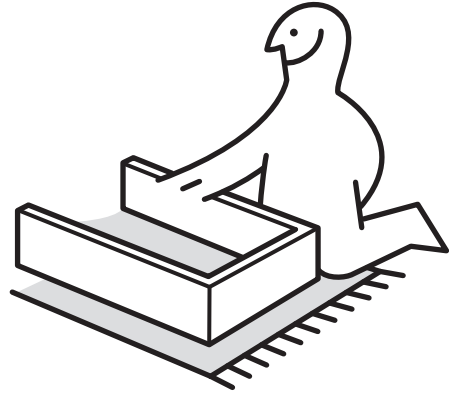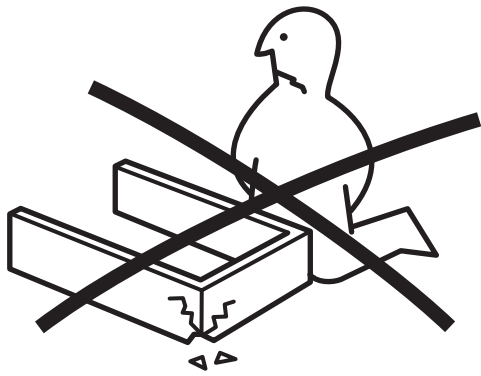


150689

 2x




126916

 2x

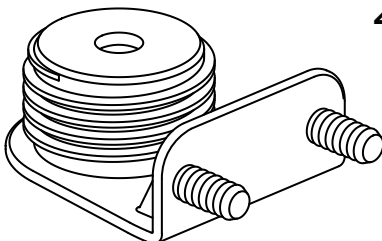


150688

 2x




147968

 2x



158469

 2x




121714

2x




22

 1



120173

 4x



101345

5x



146114
1004962

18x



 
10047146
10047130

2x




10093082

8x

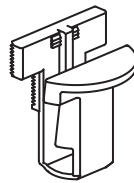


10093081

 8x




151706
151708

 10x




151705
151707

 10x

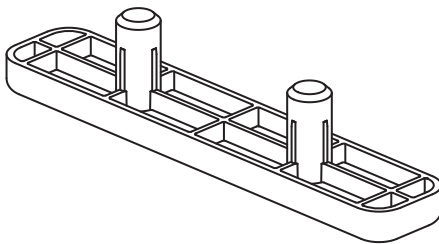

153548
158568

 2x

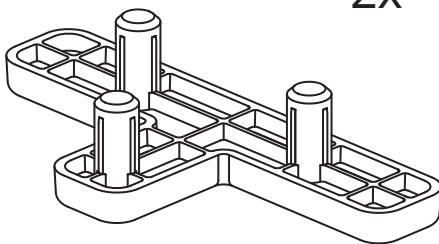

10040039
10051022

2x



11

2



 
144575

8x



144574

8x

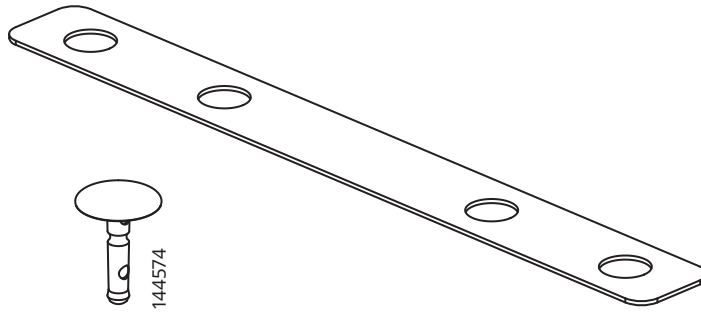

10049270

2x



 
21

A



118331

12x




119976

6x



146114

 18x



145718

 
159553

12x



101345


10x

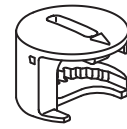

119030


118224

 24x

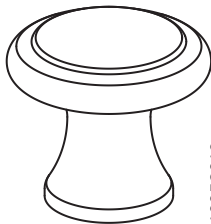

10052019

 6x

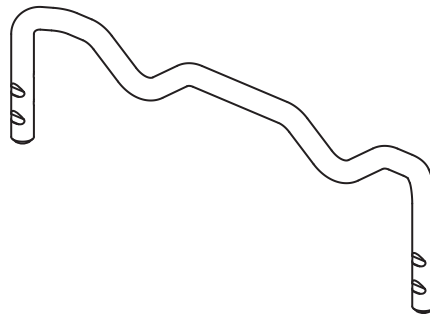


10040242



3x



 
30

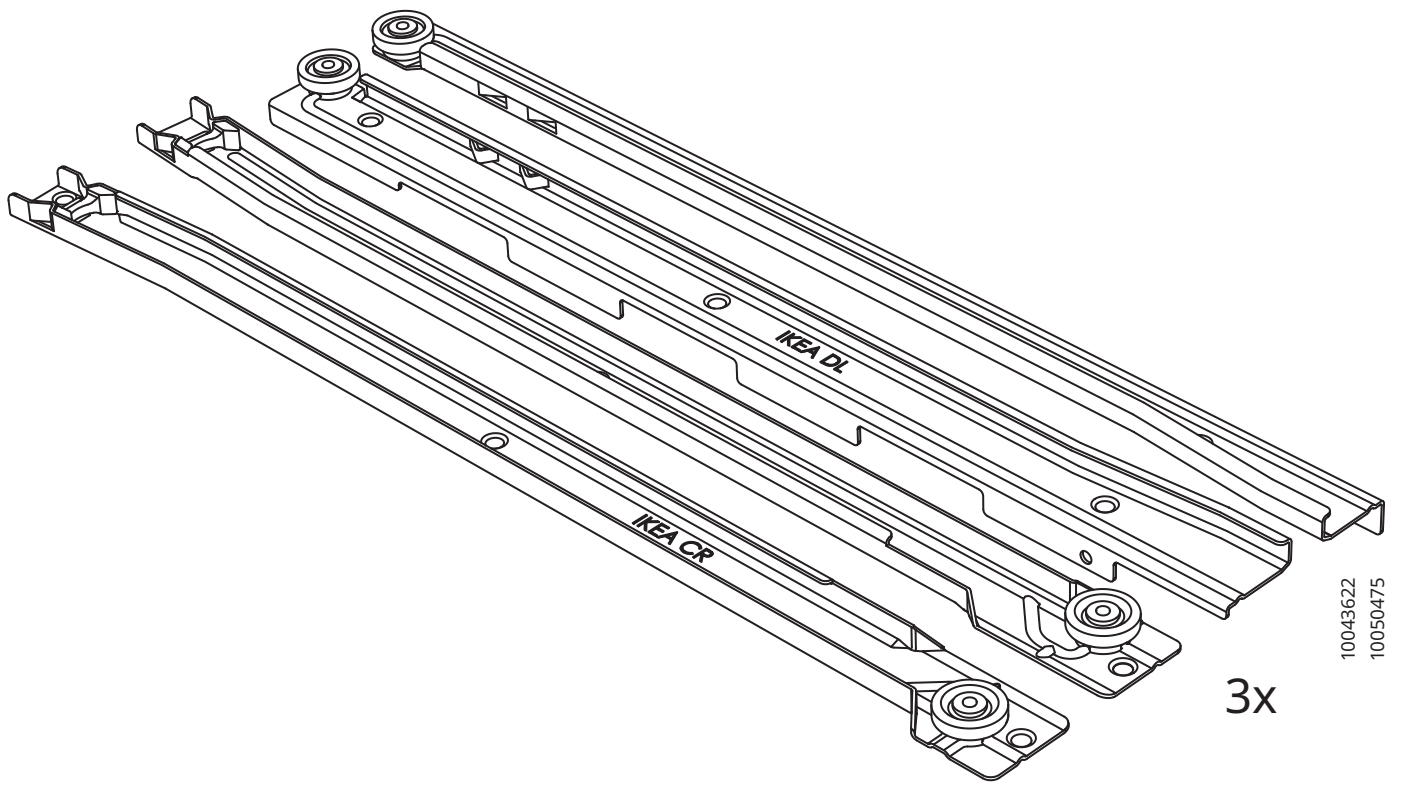


1

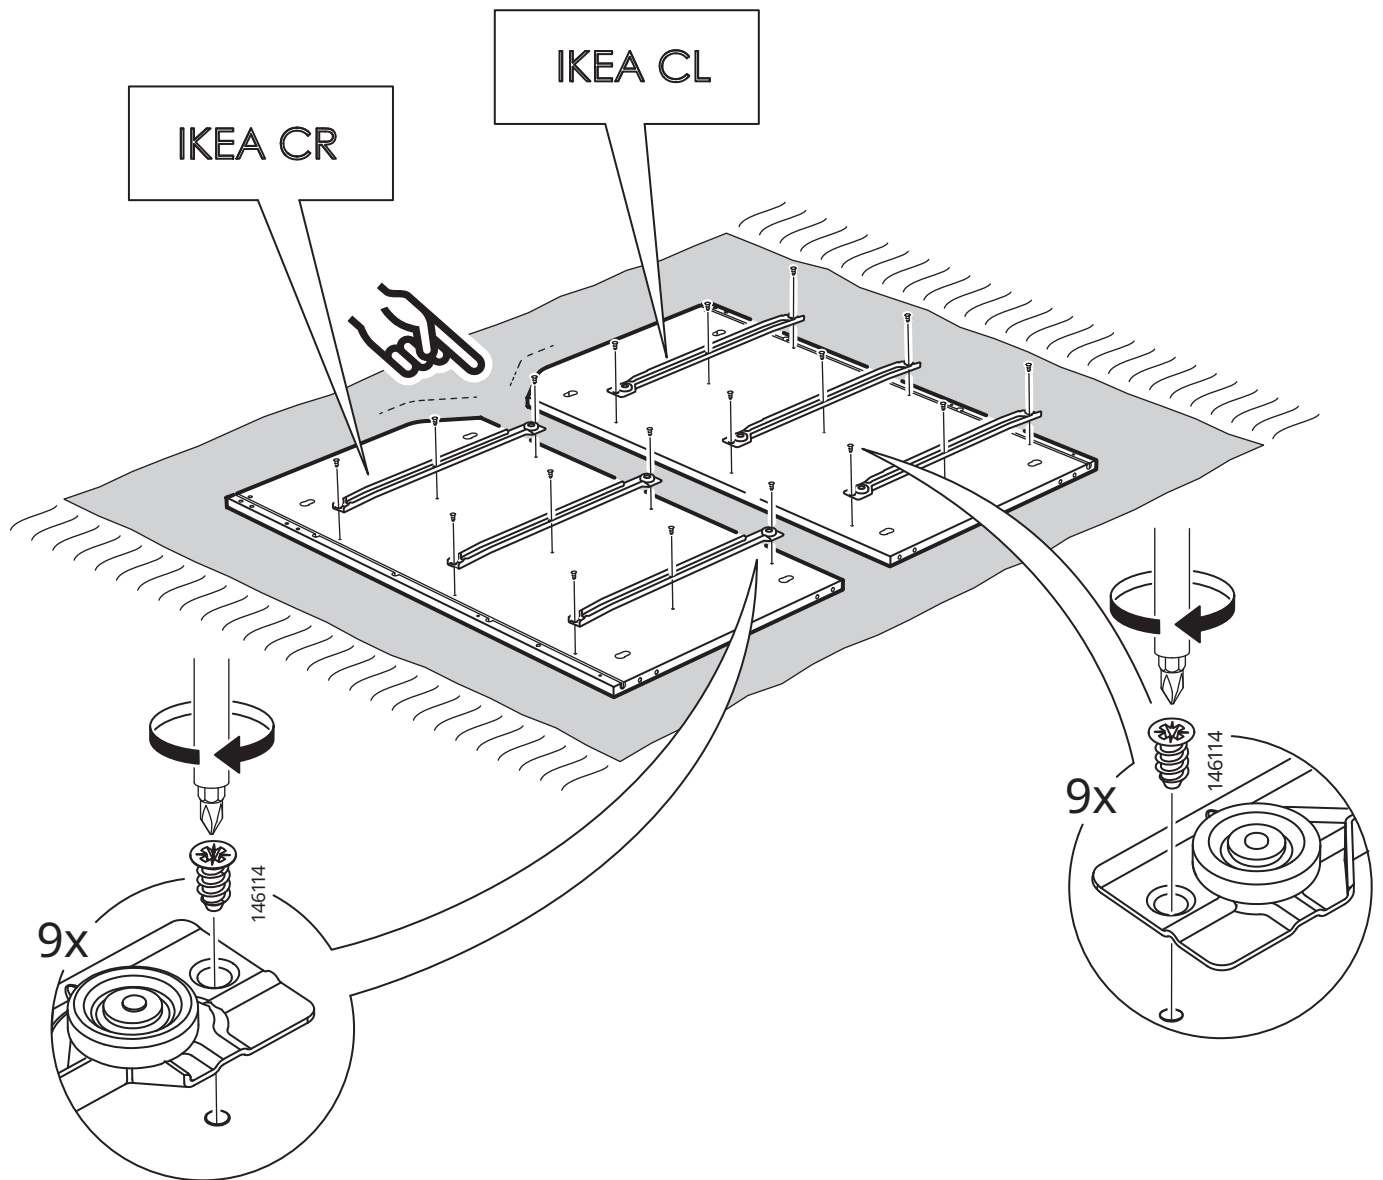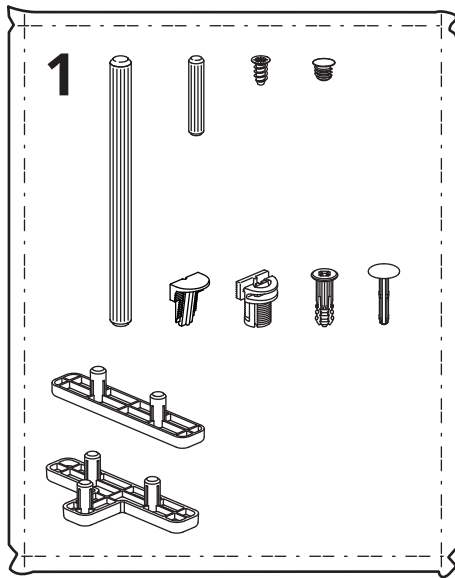  


2

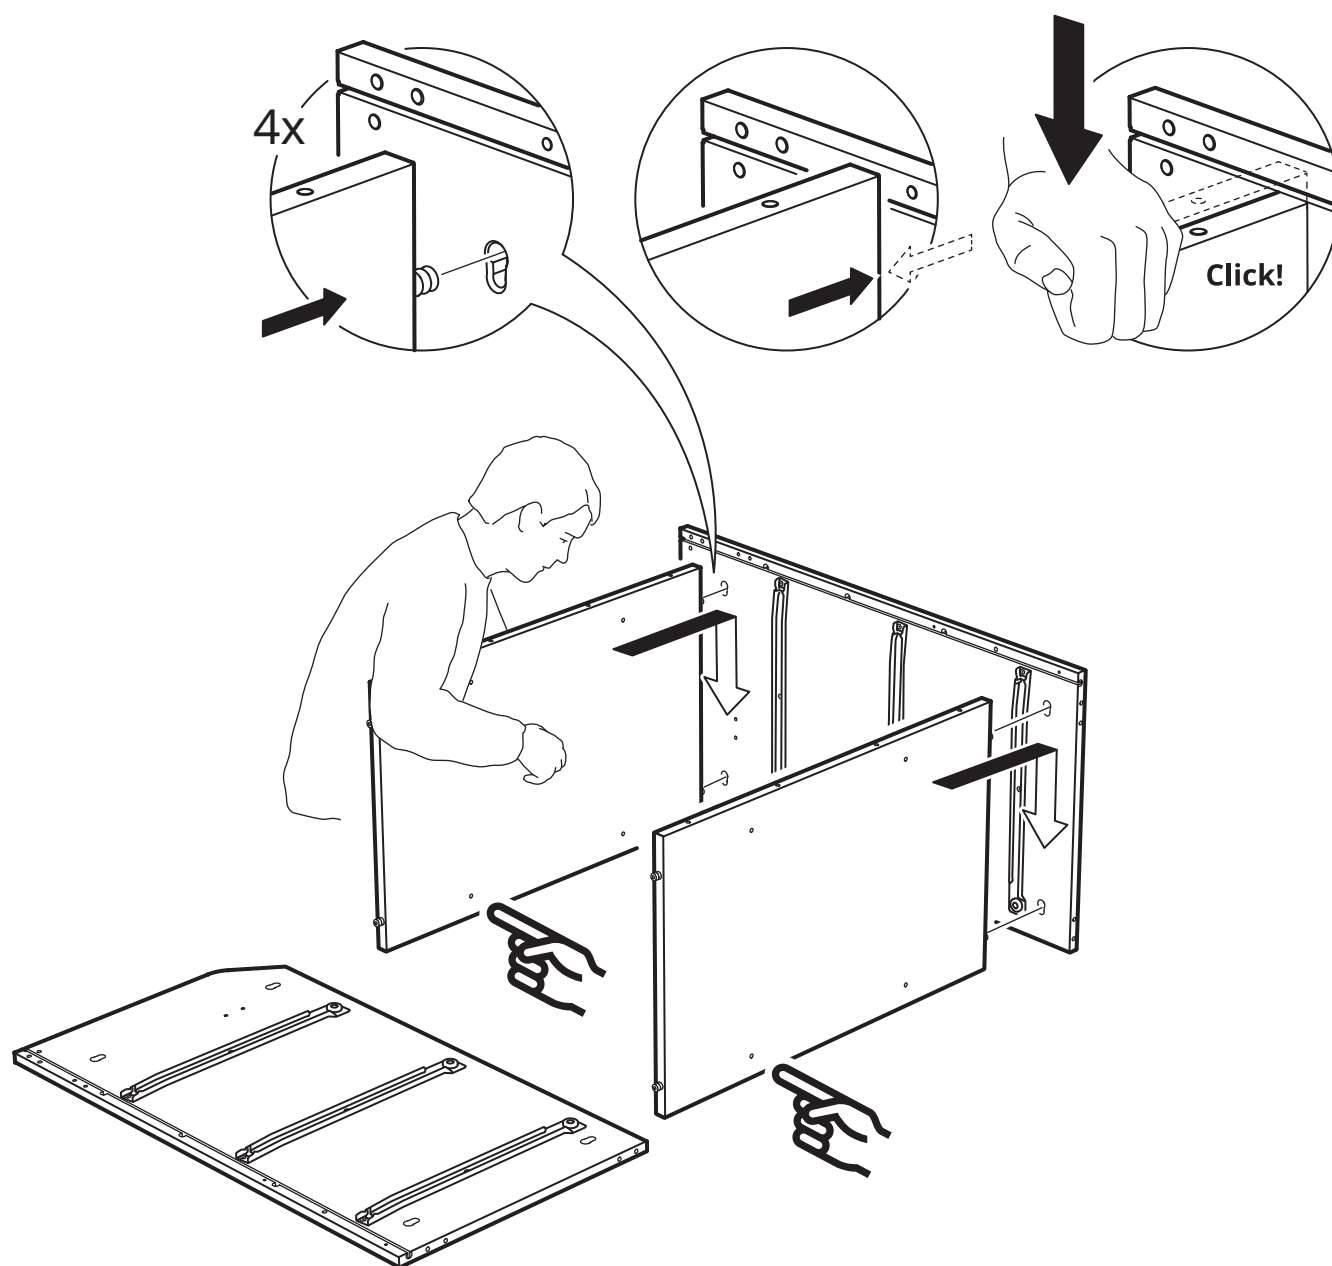 


3

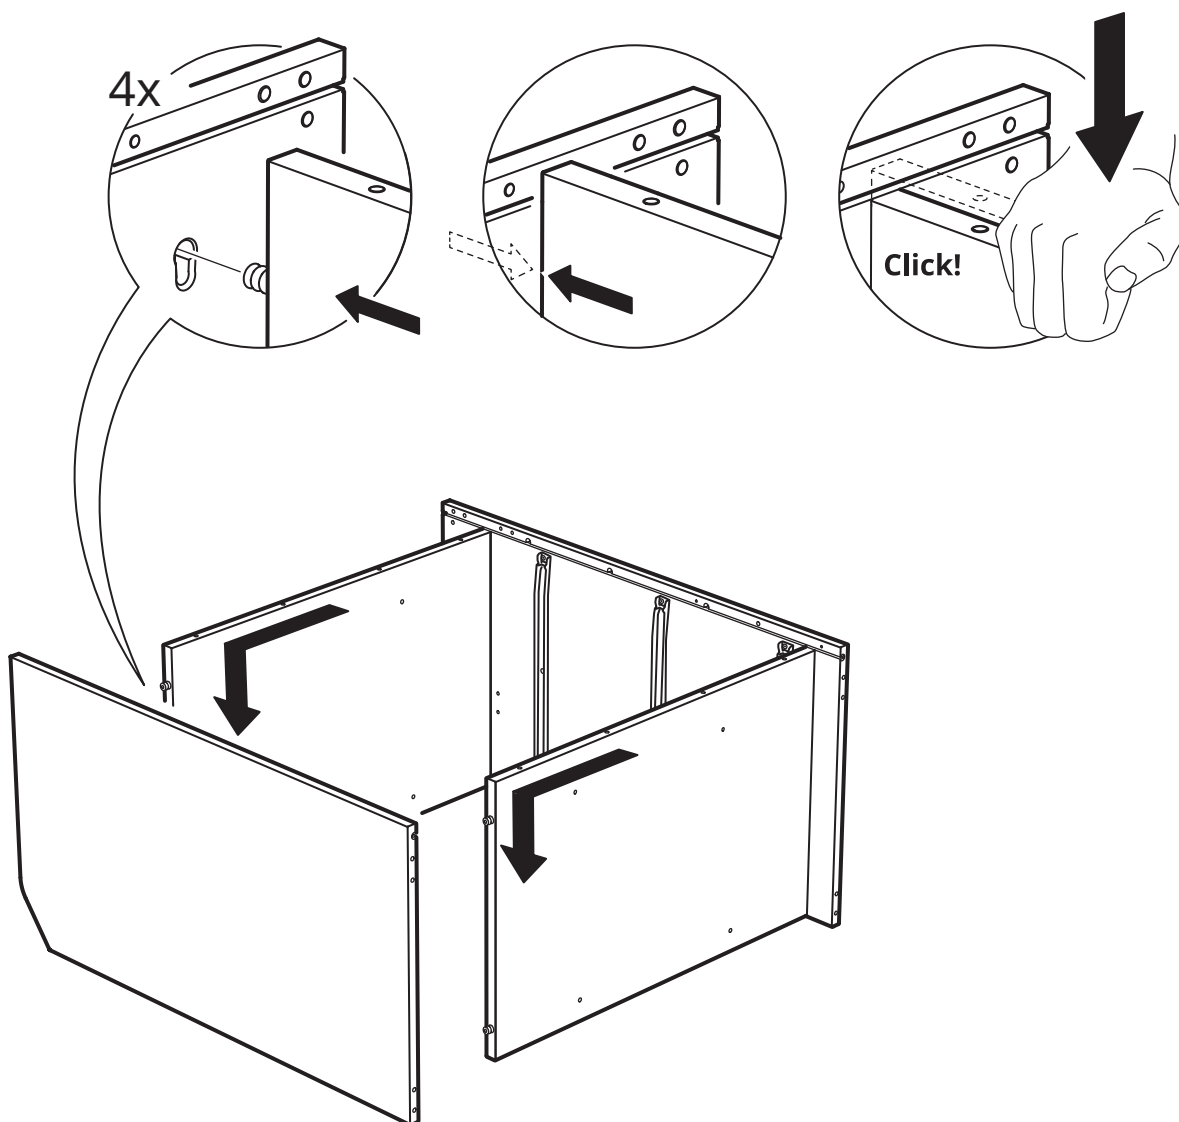 


4

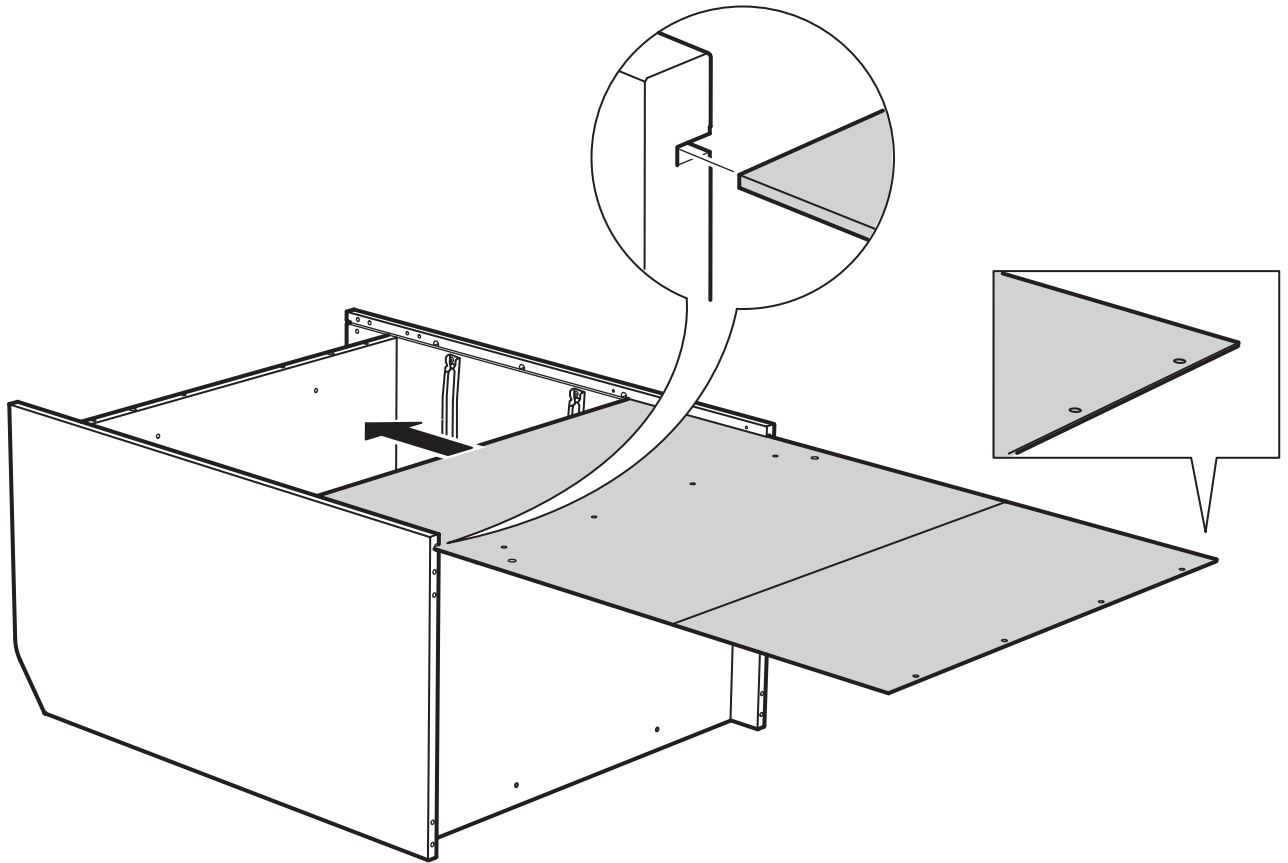 


5

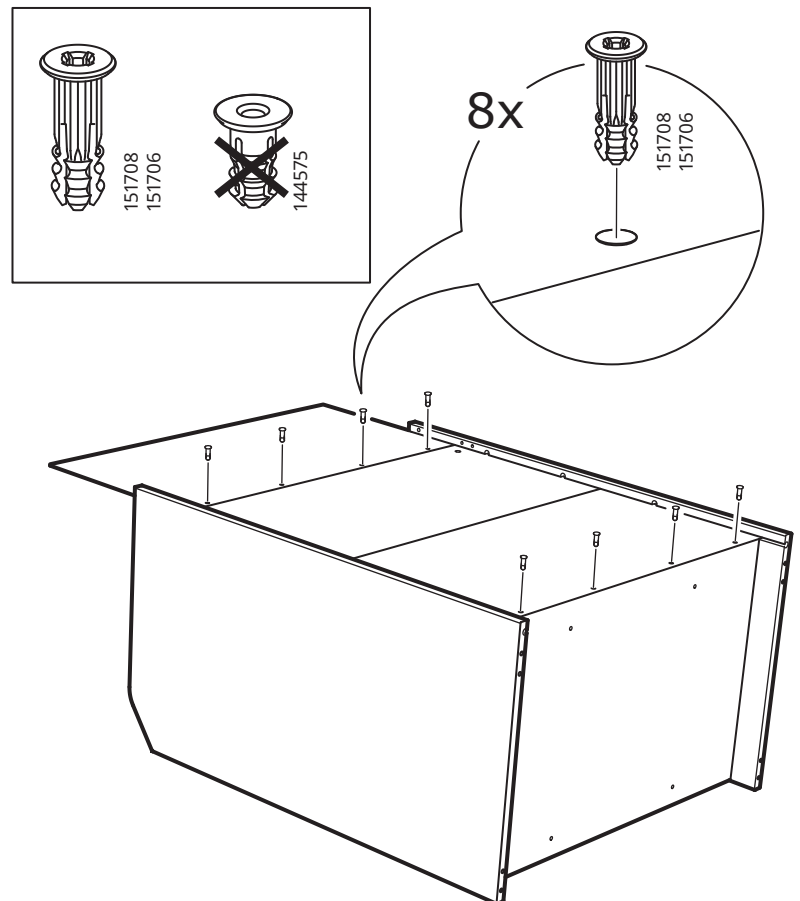 


6

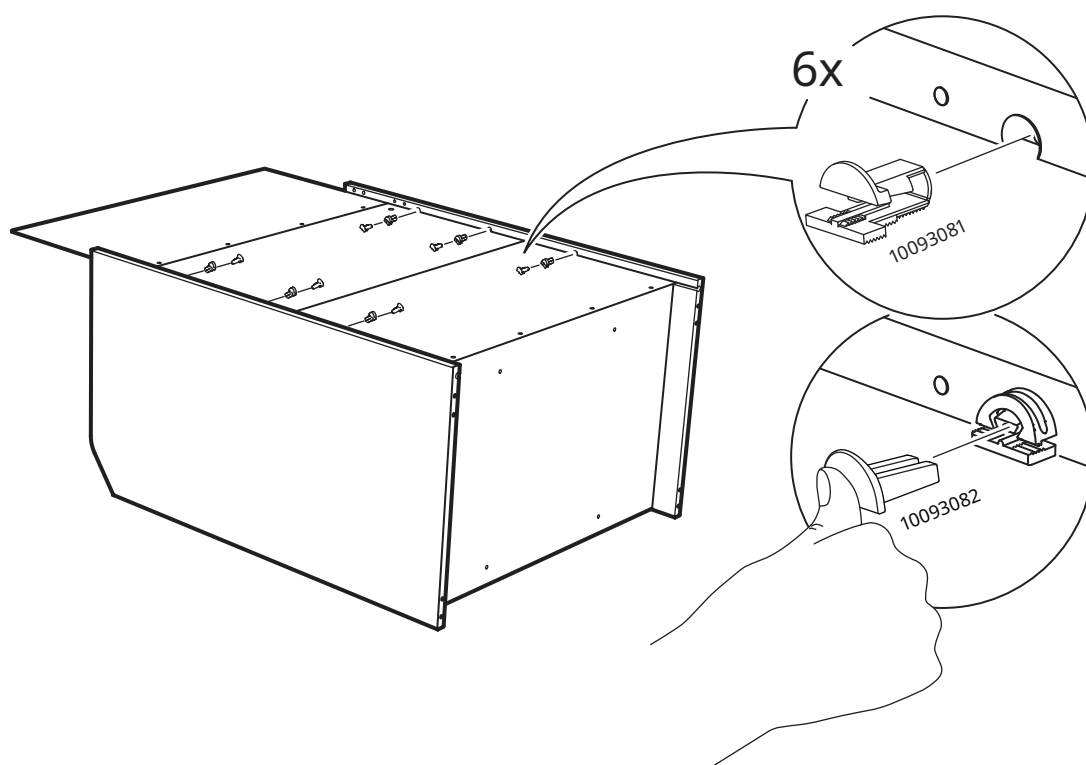 


7


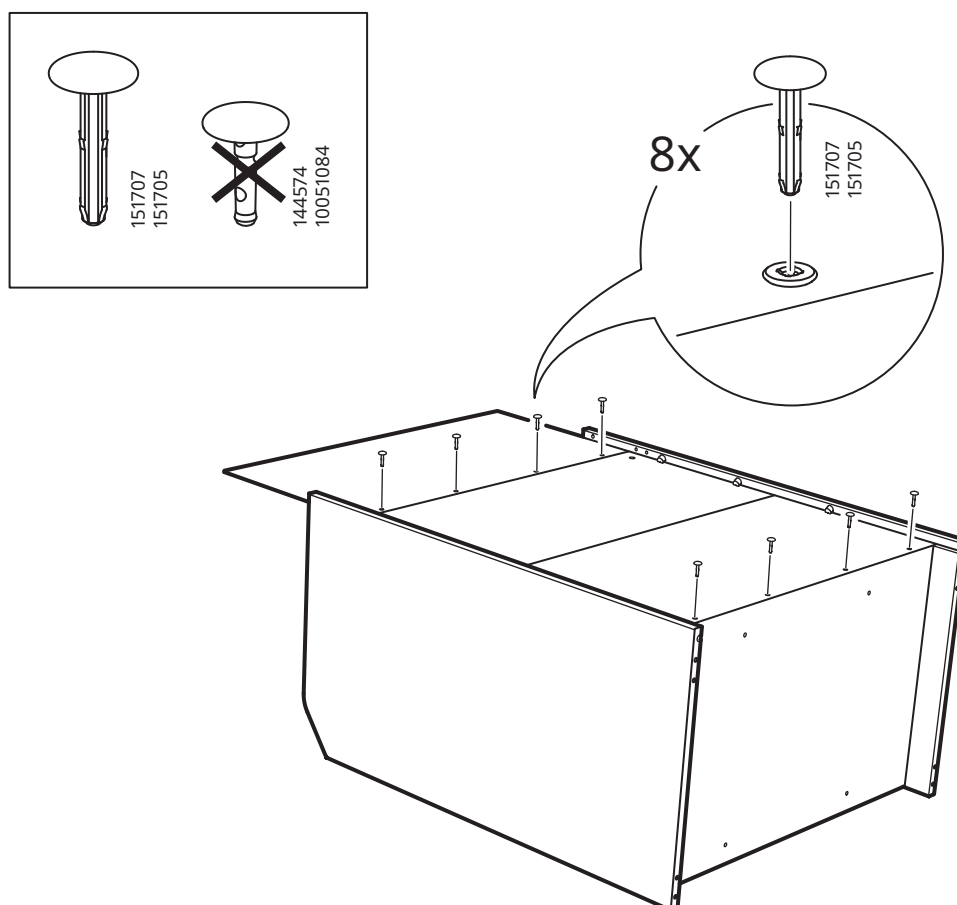 


8

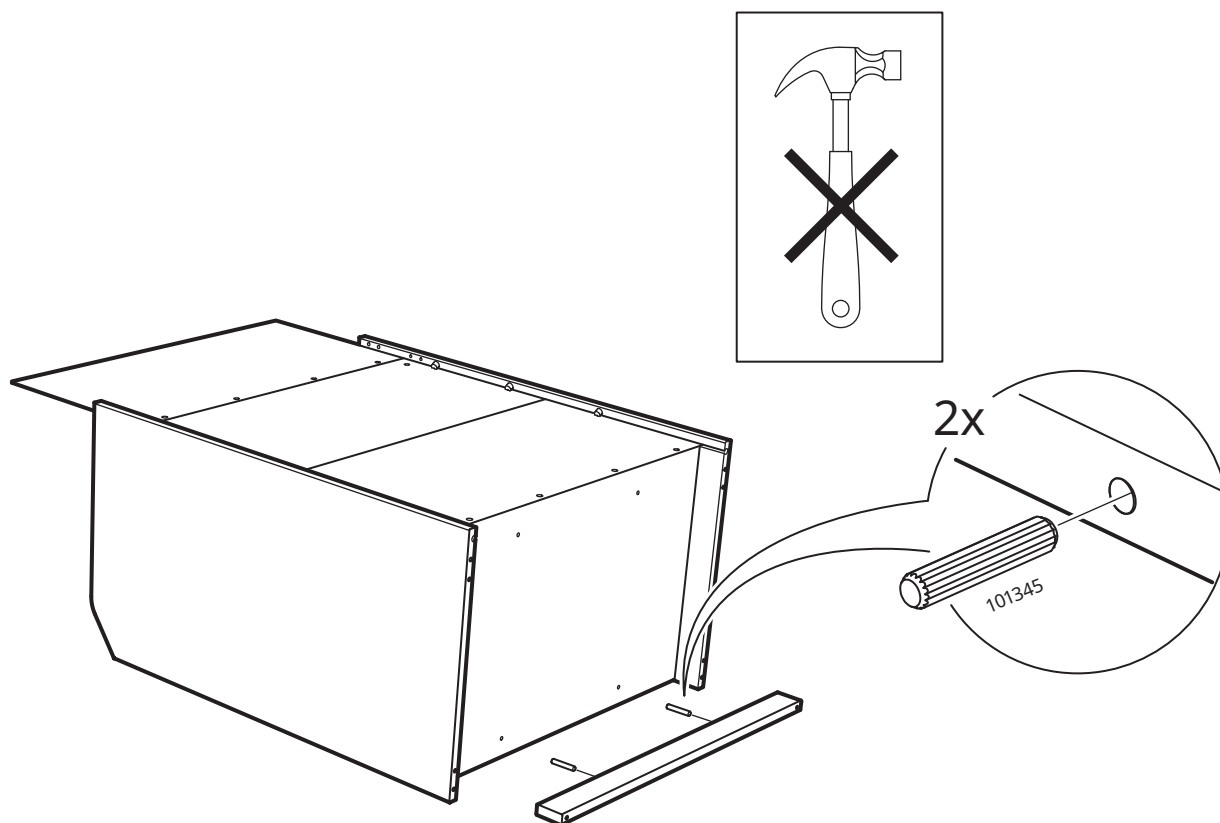 


9

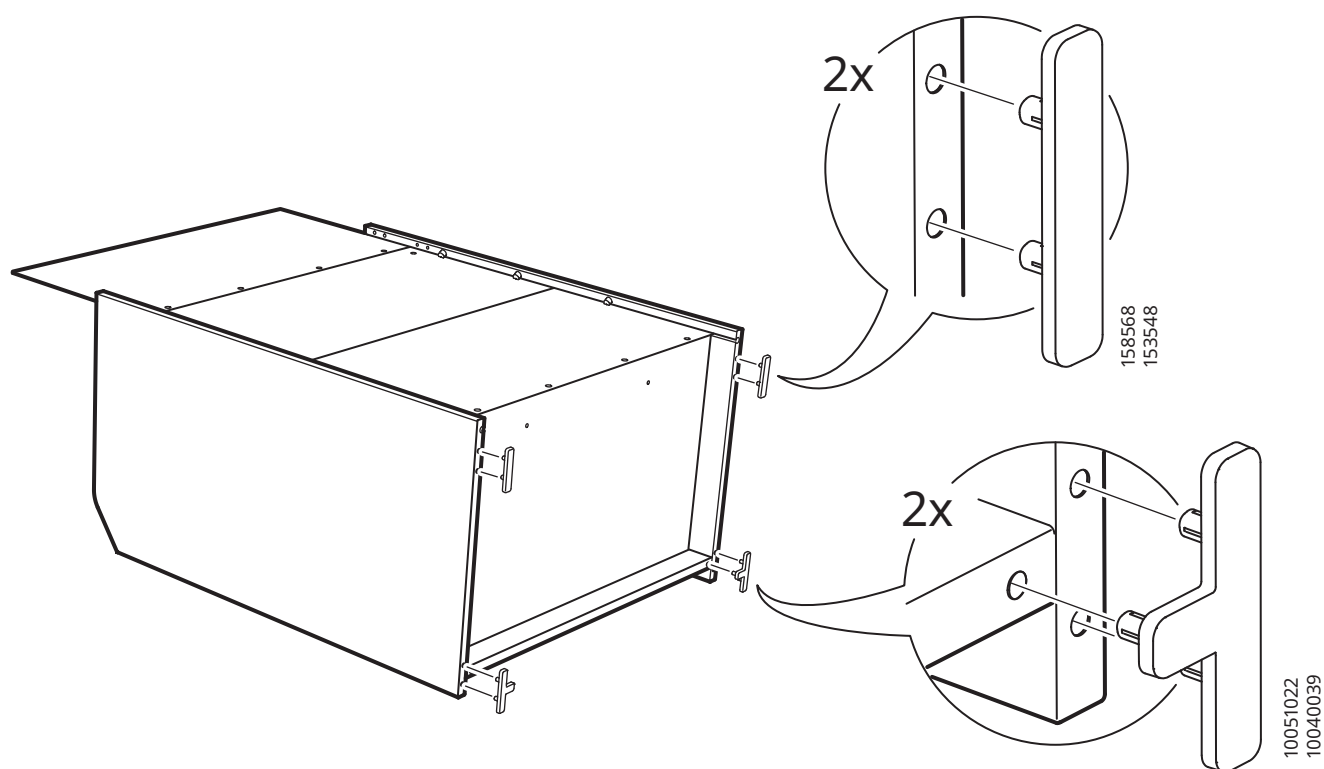 


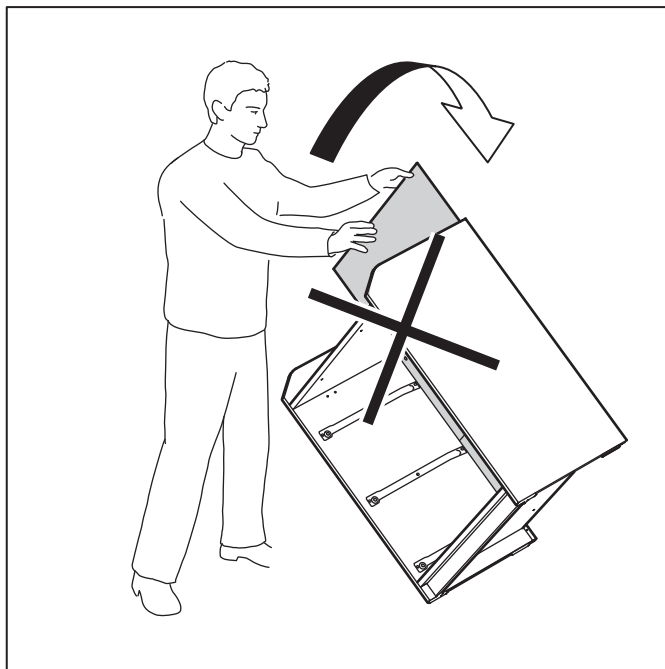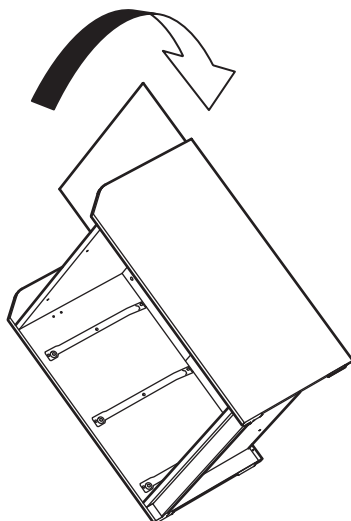  


10

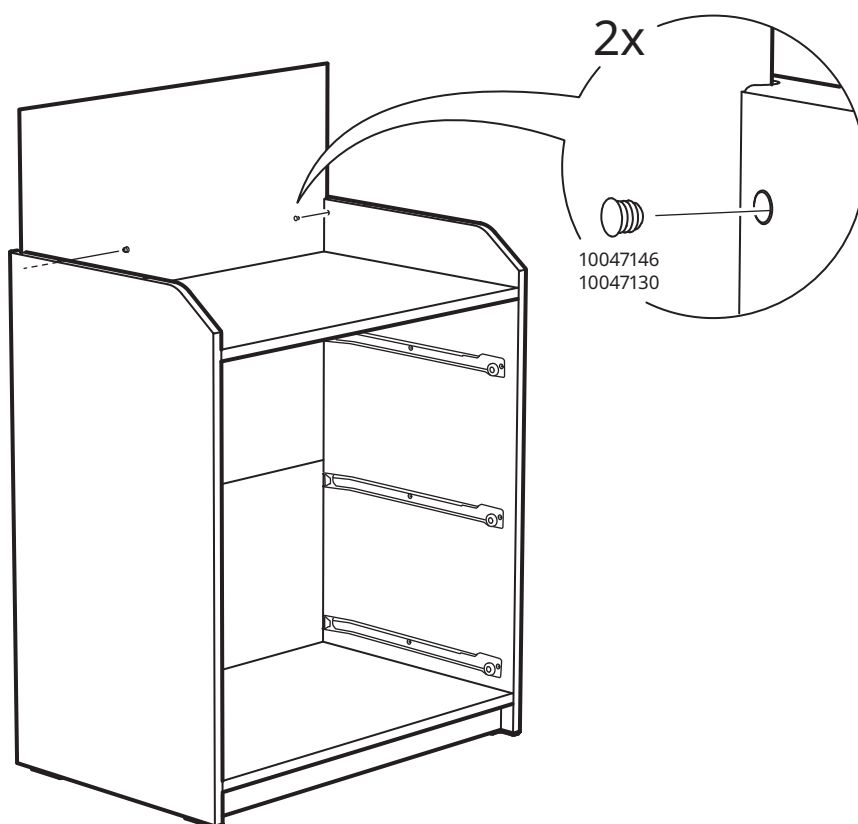 


11

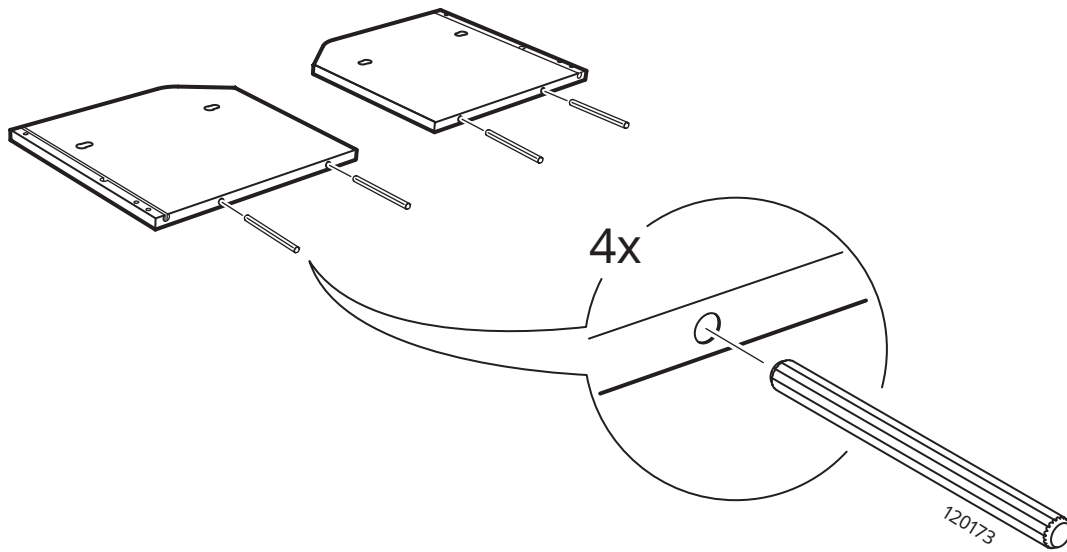 


12

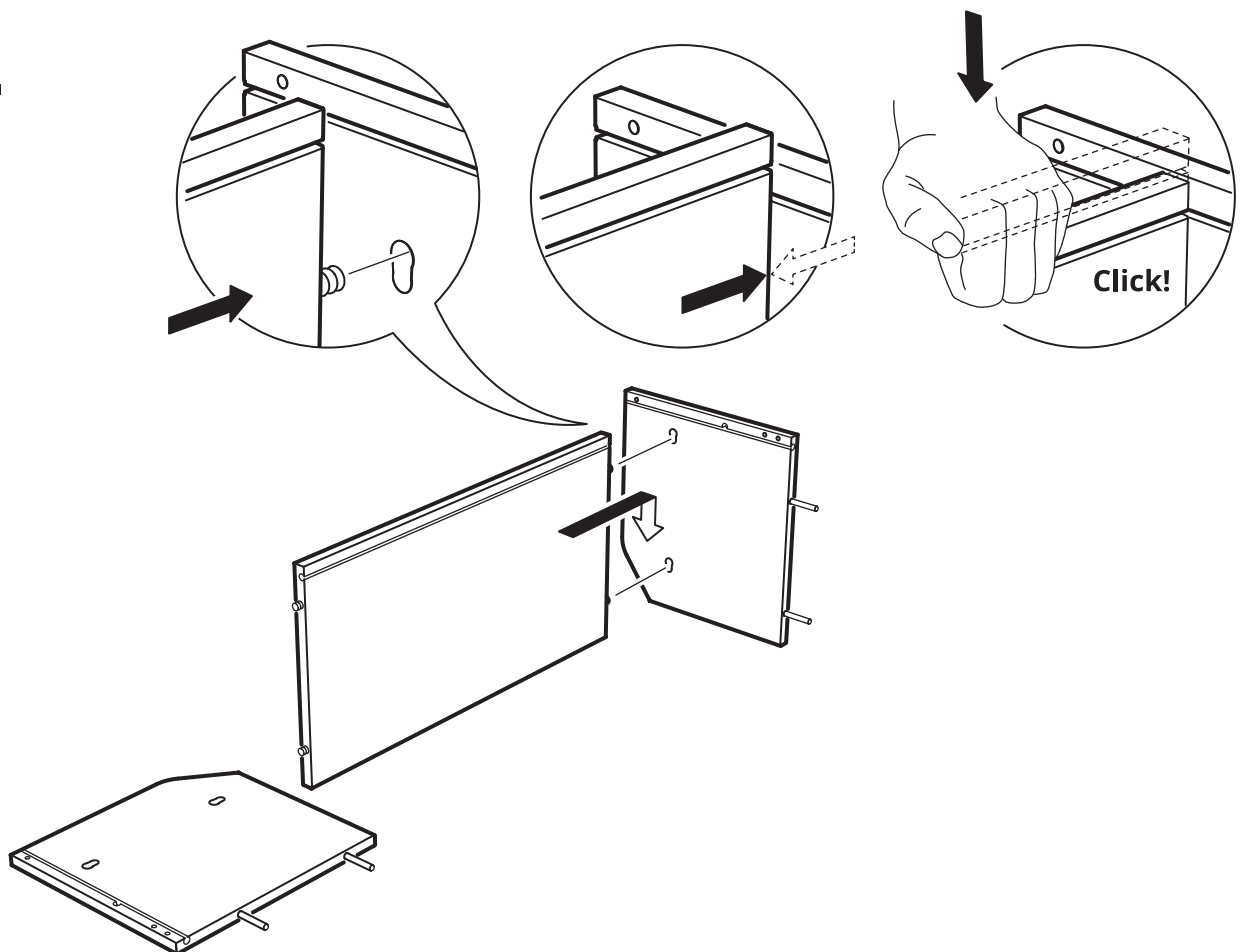 


13

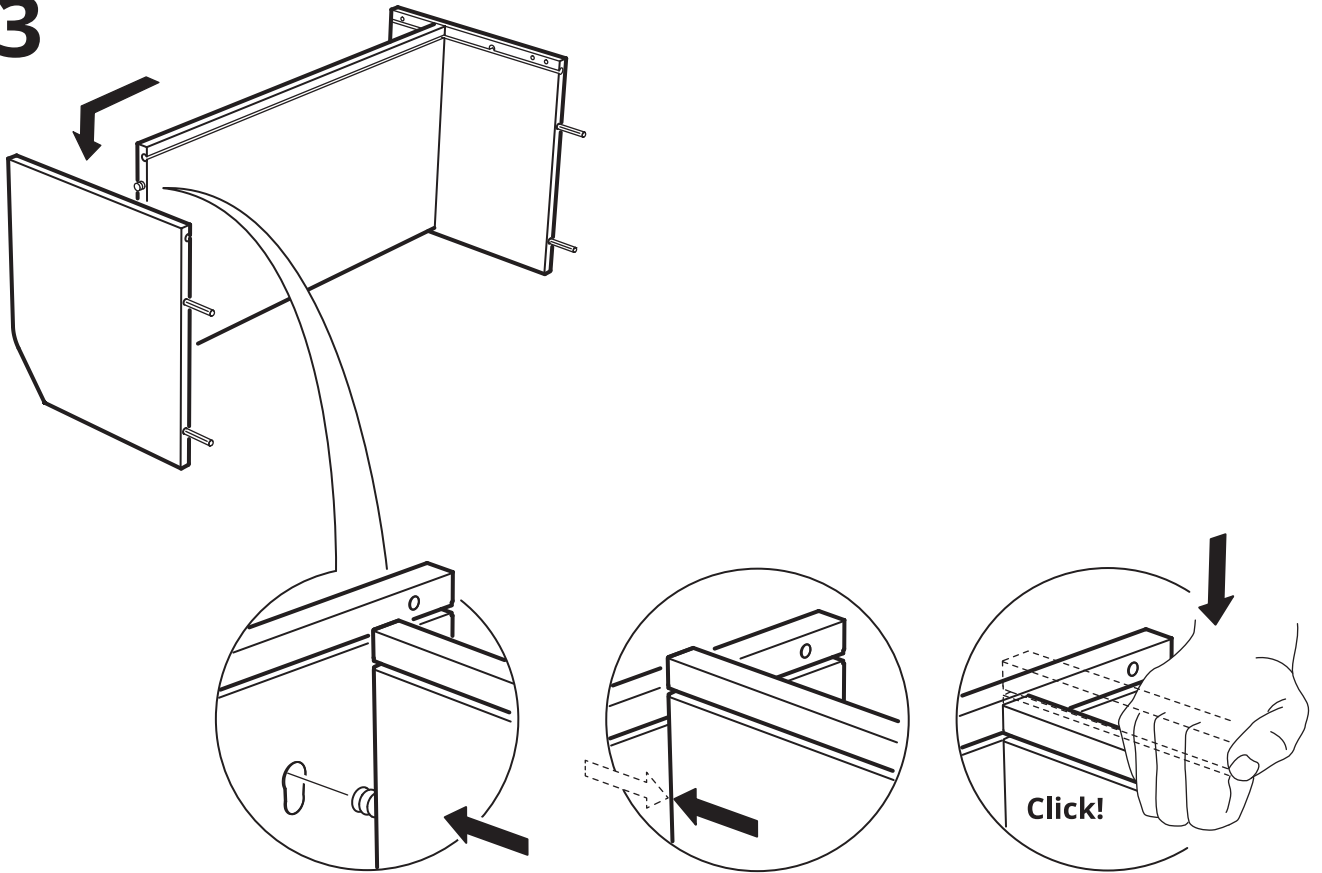 


14

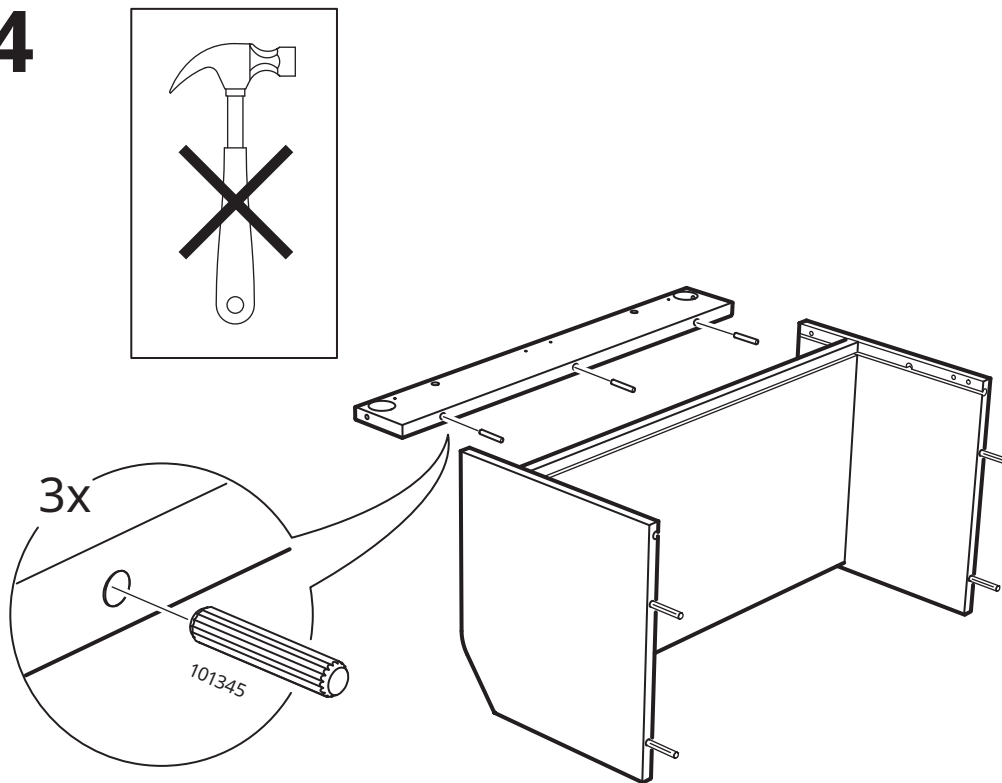 


15




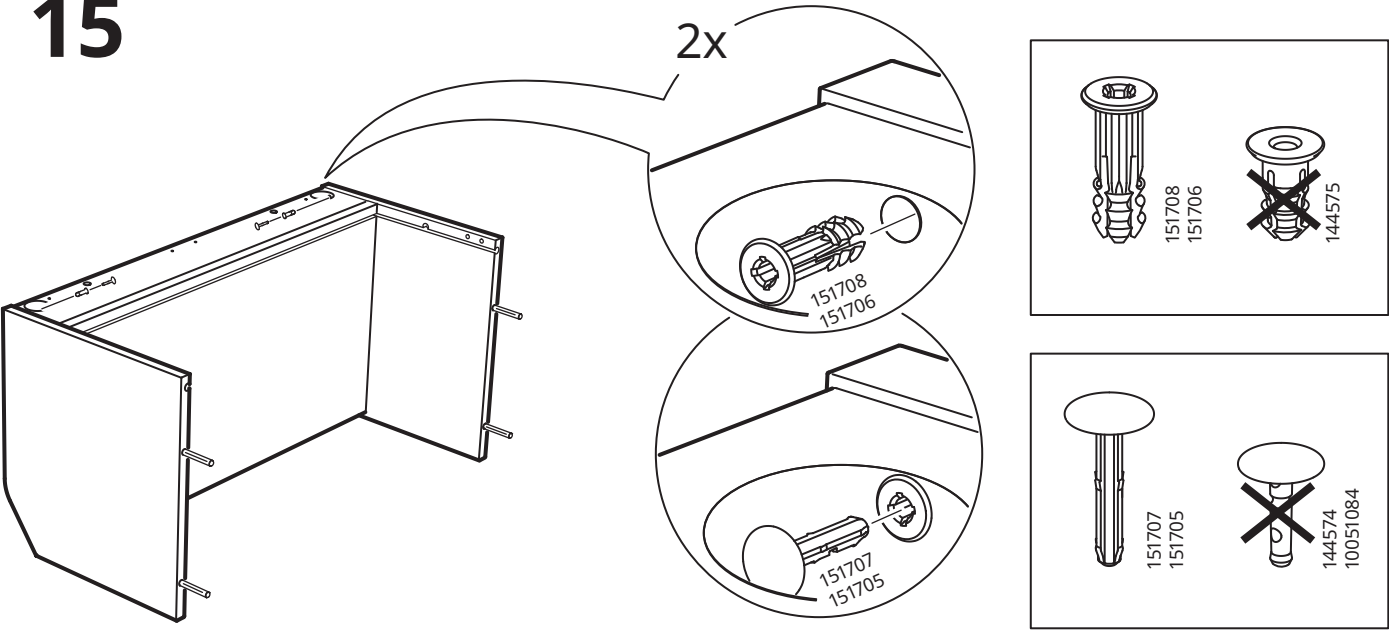 


16

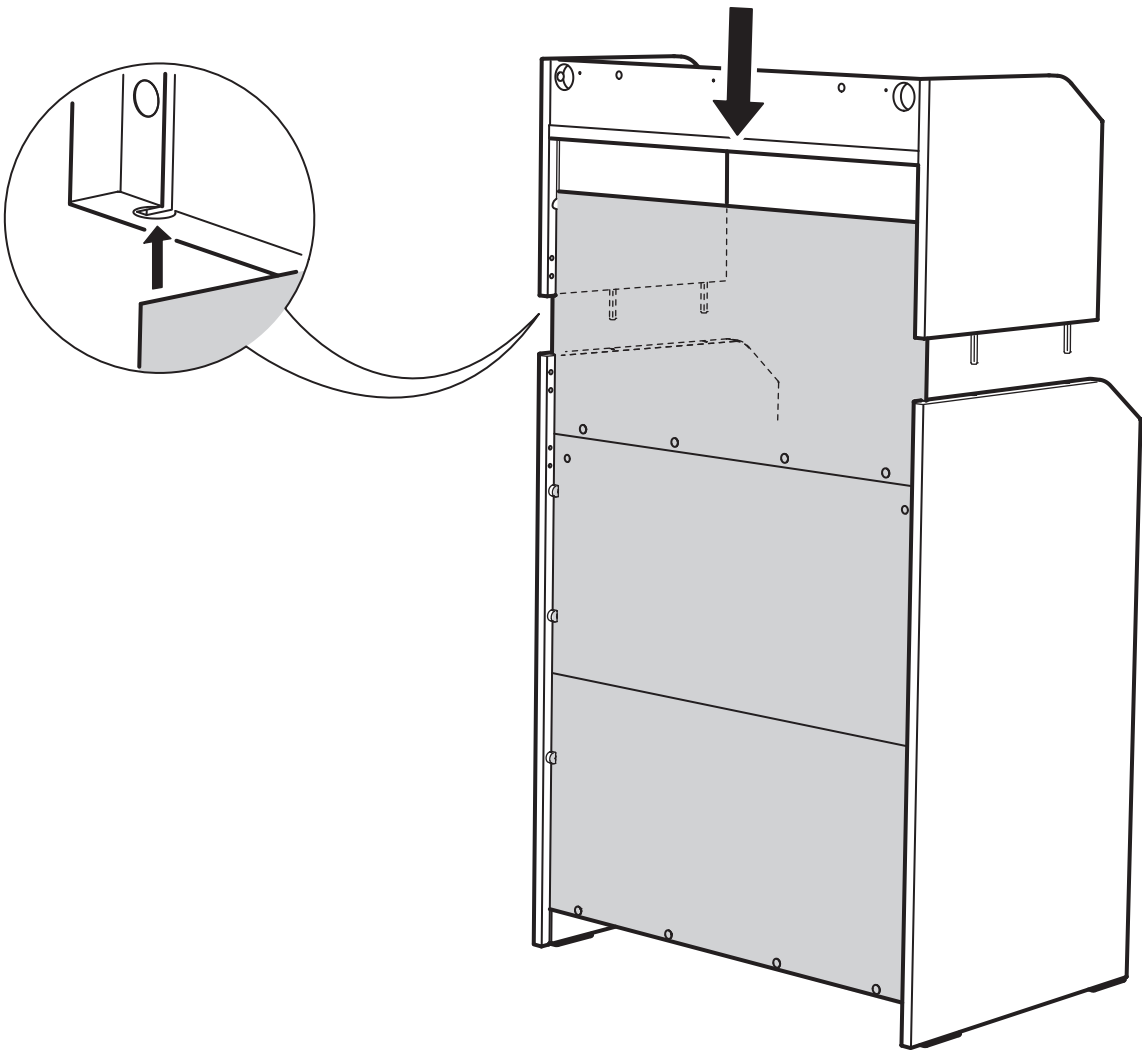 


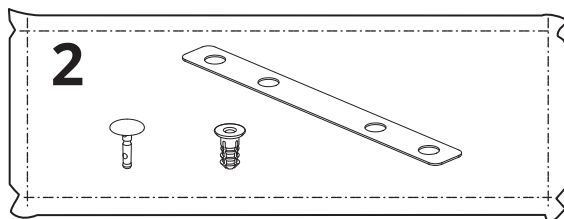 


17

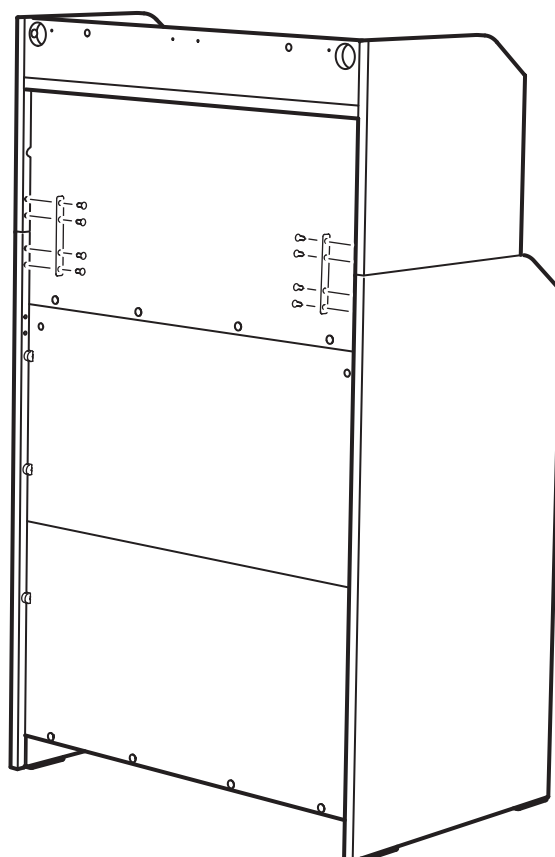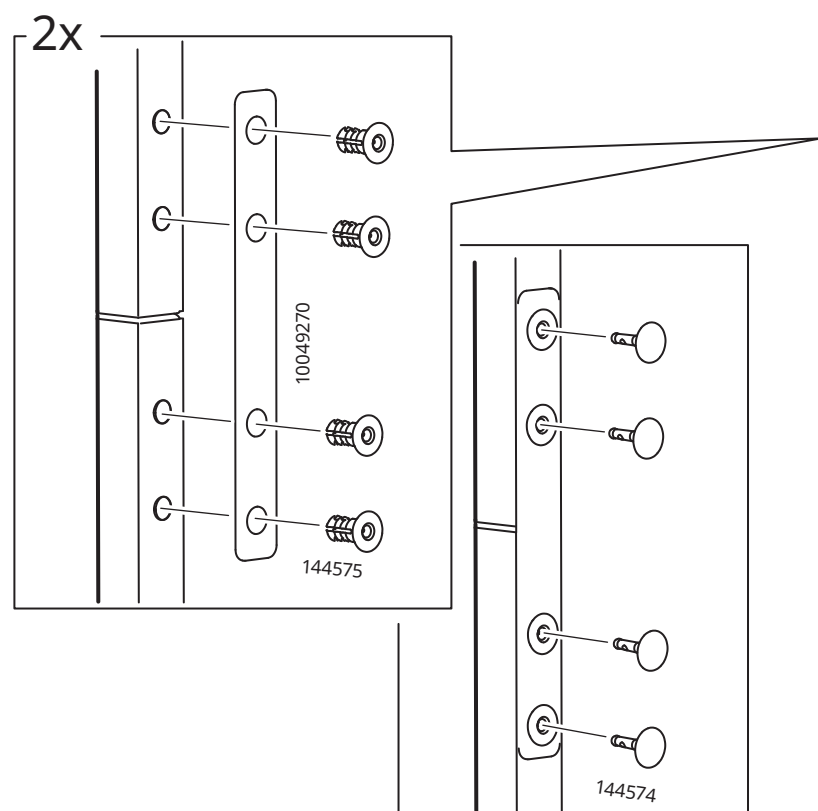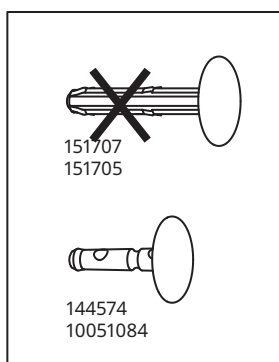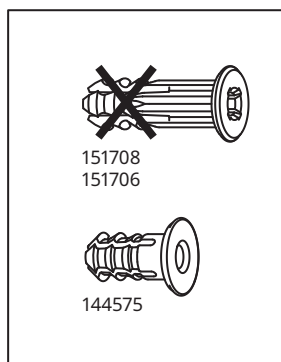    


18

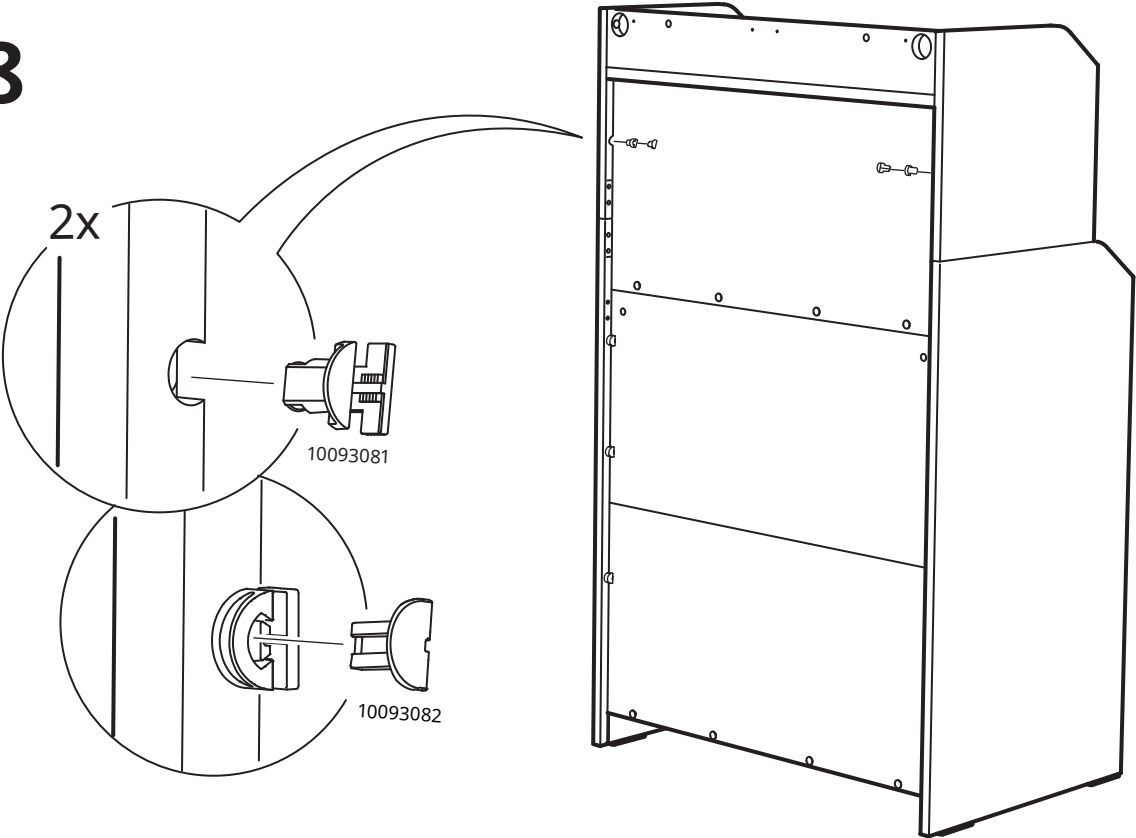 



19

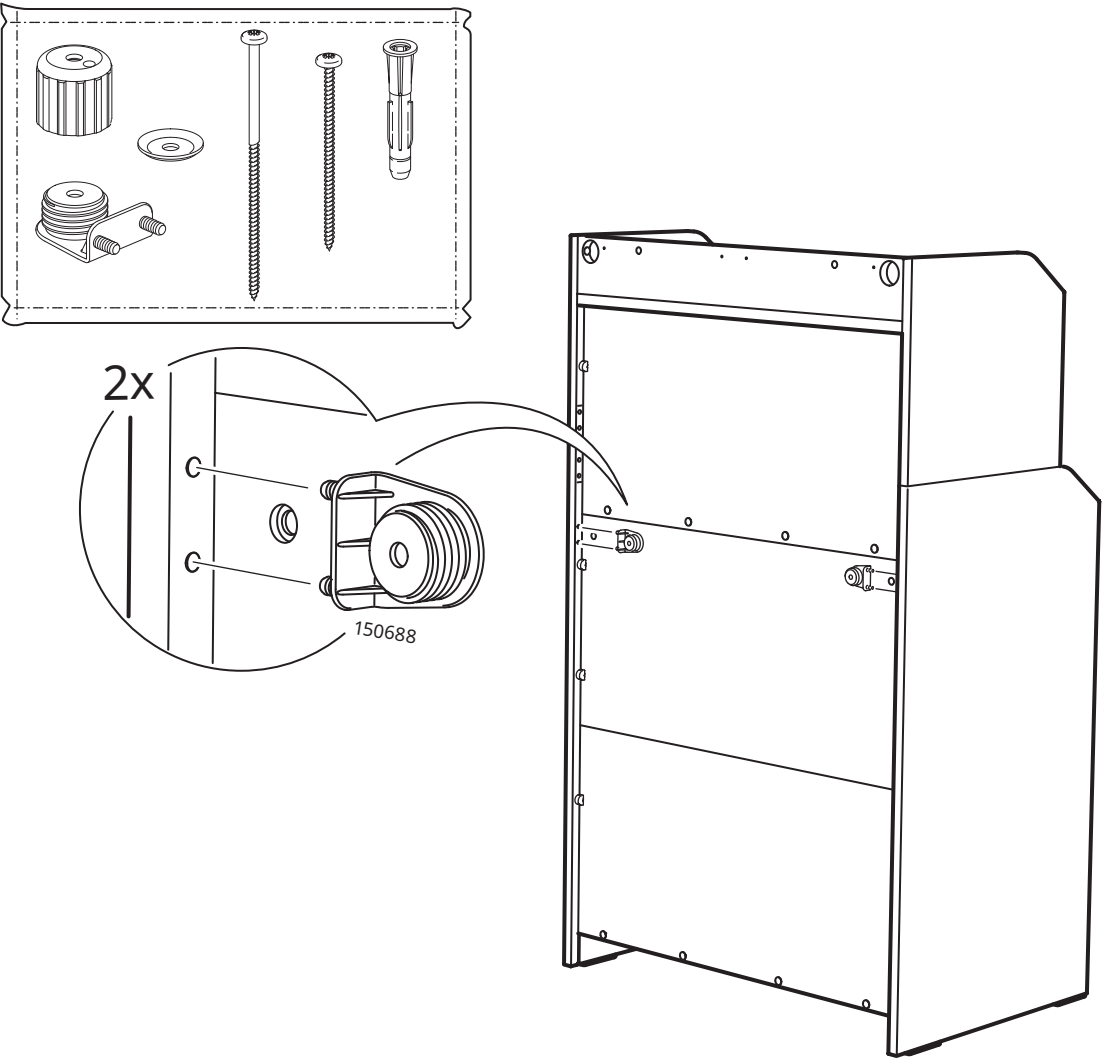 

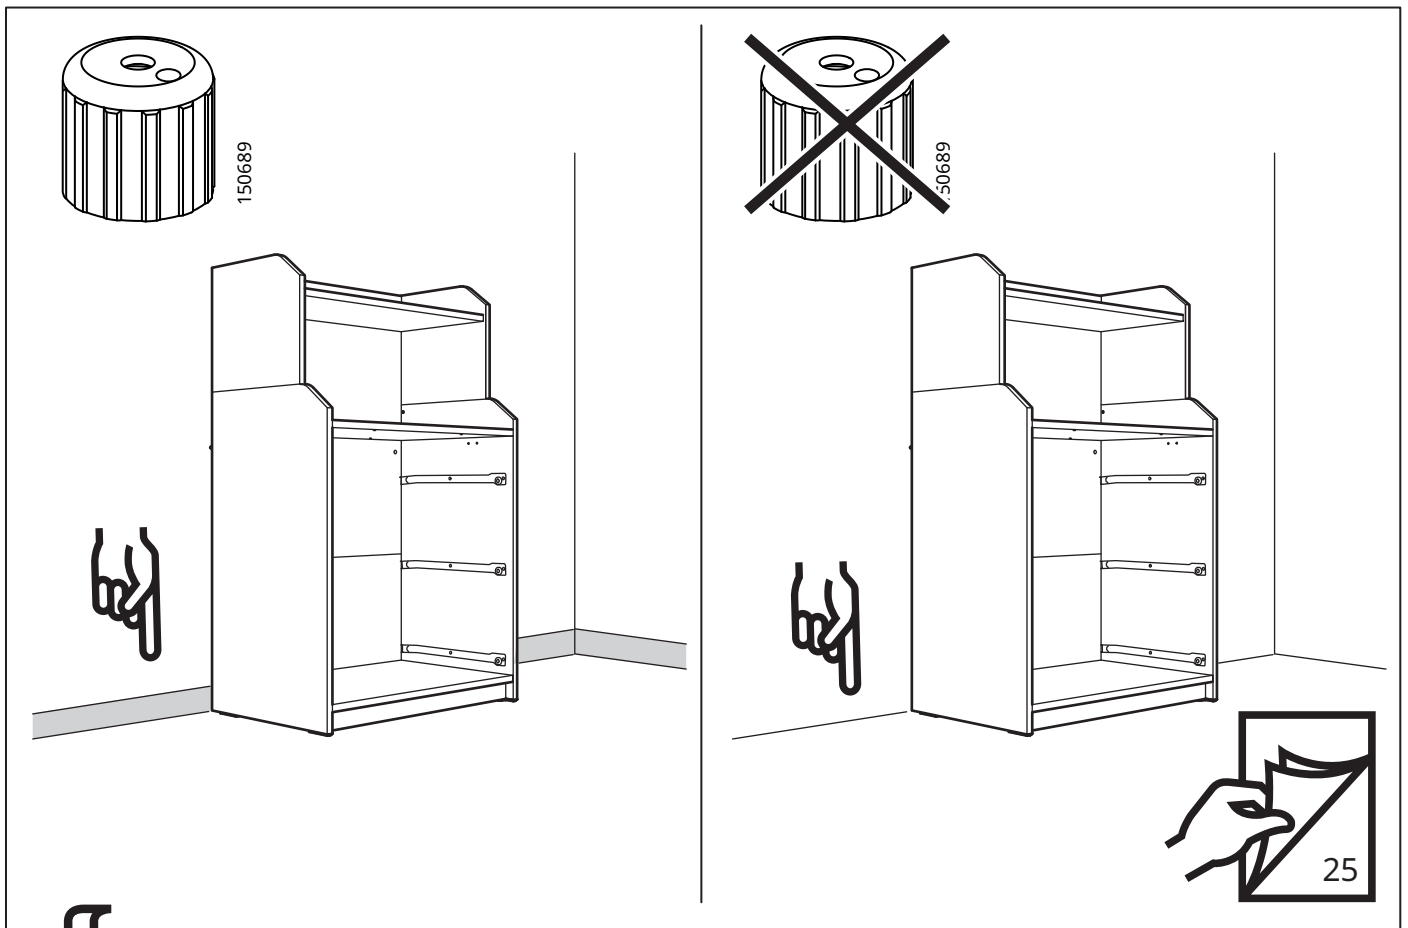 


20

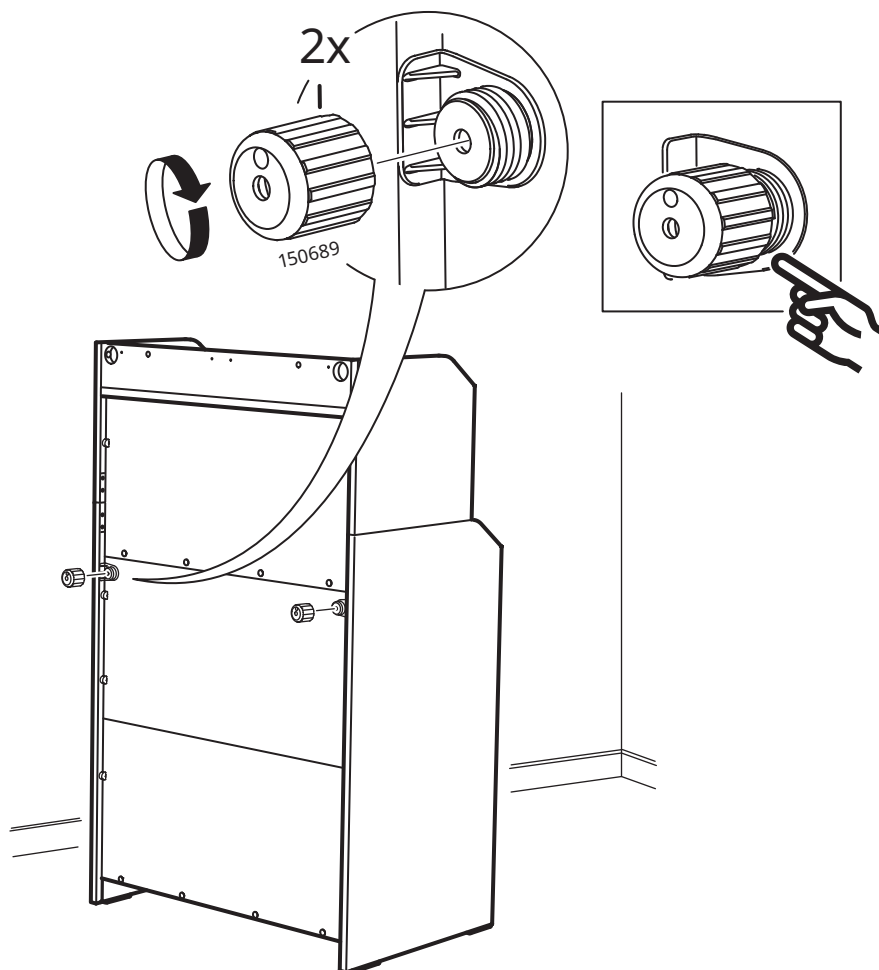 


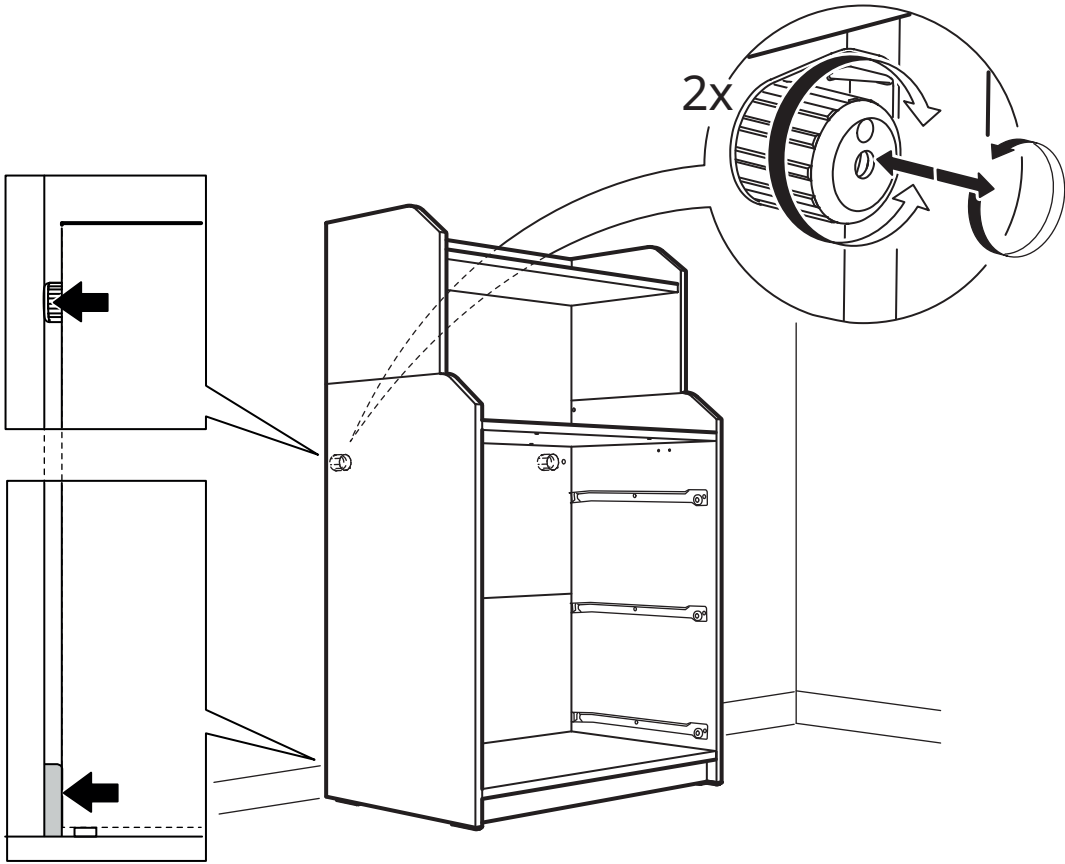 

22

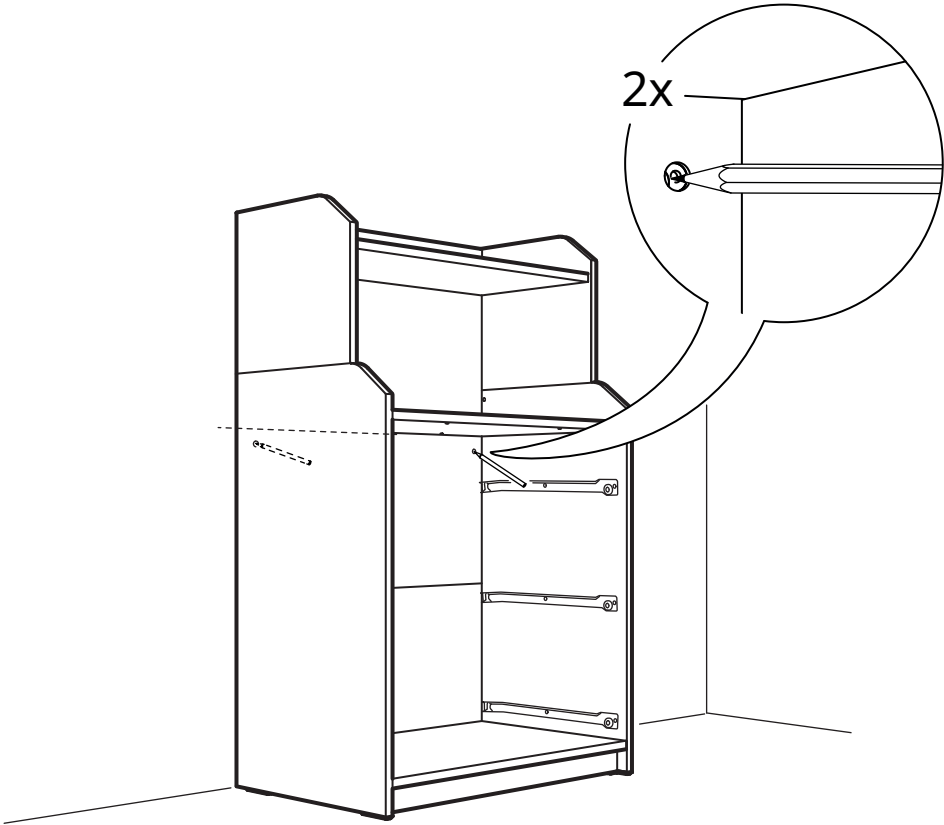 

23

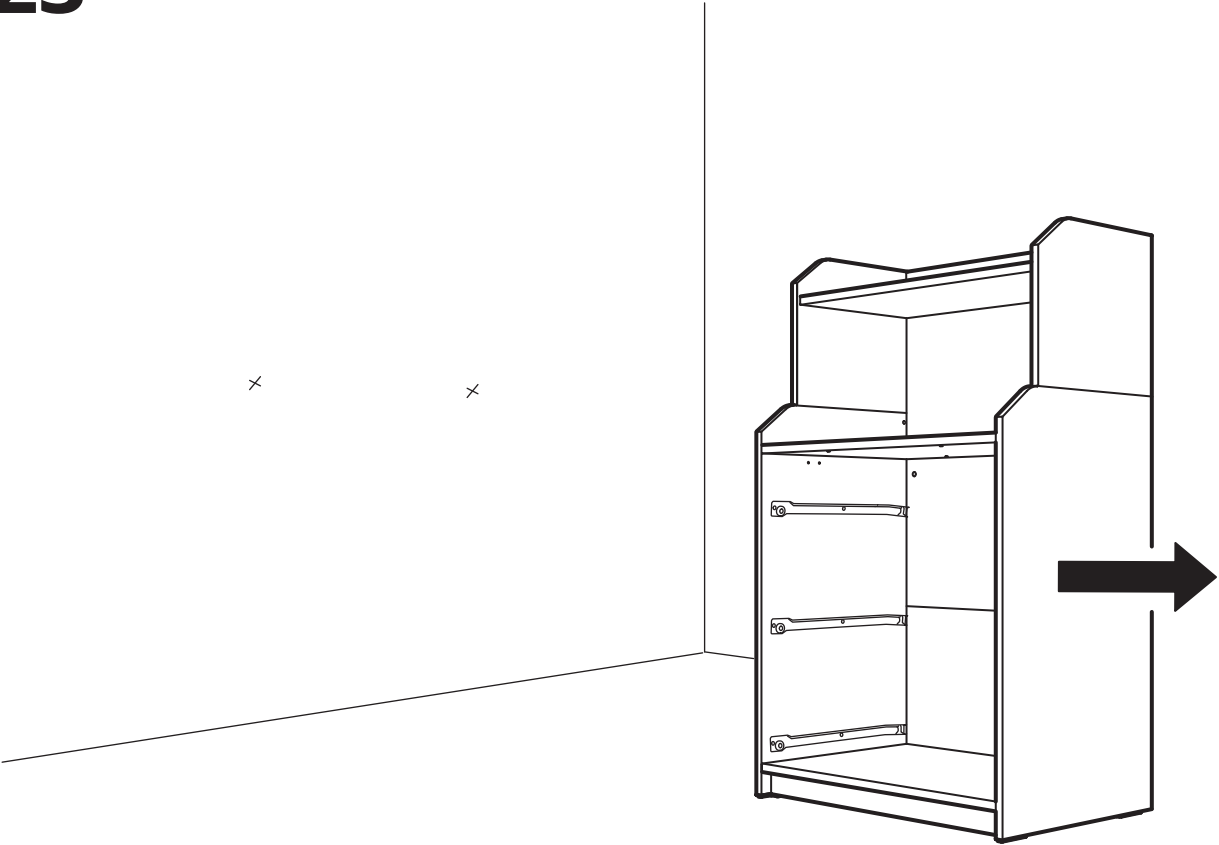 




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

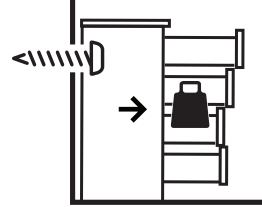

24

 
English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

עברית

הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.


A

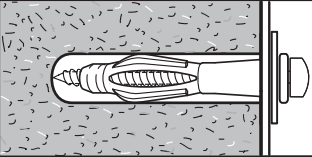


Ø 8 mm
(5/16")



 1




2

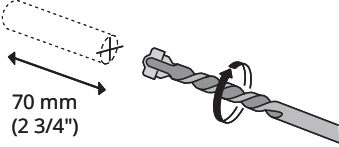 


70 mm
(2 3/4")

 3

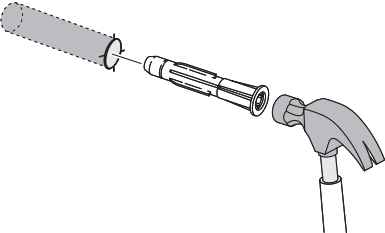


B

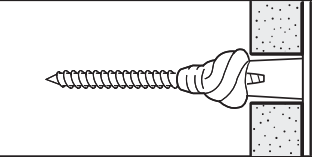 


Ø 8 mm
(5/16")



 1




2

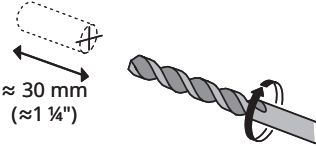 


≈ 30 mm
(≈ 1 1/4")

 3

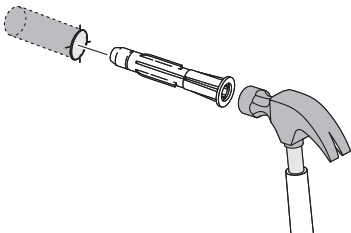


C

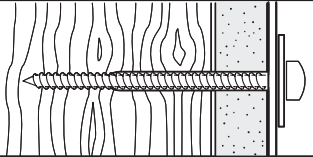 


Ø 3 mm
(1/8")



 1





2

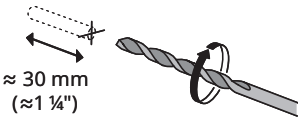 


≈ 30 mm
(≈ 1 1/4")

 
 
3



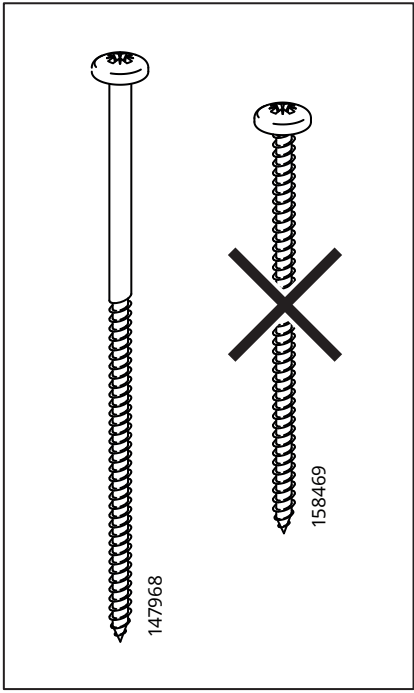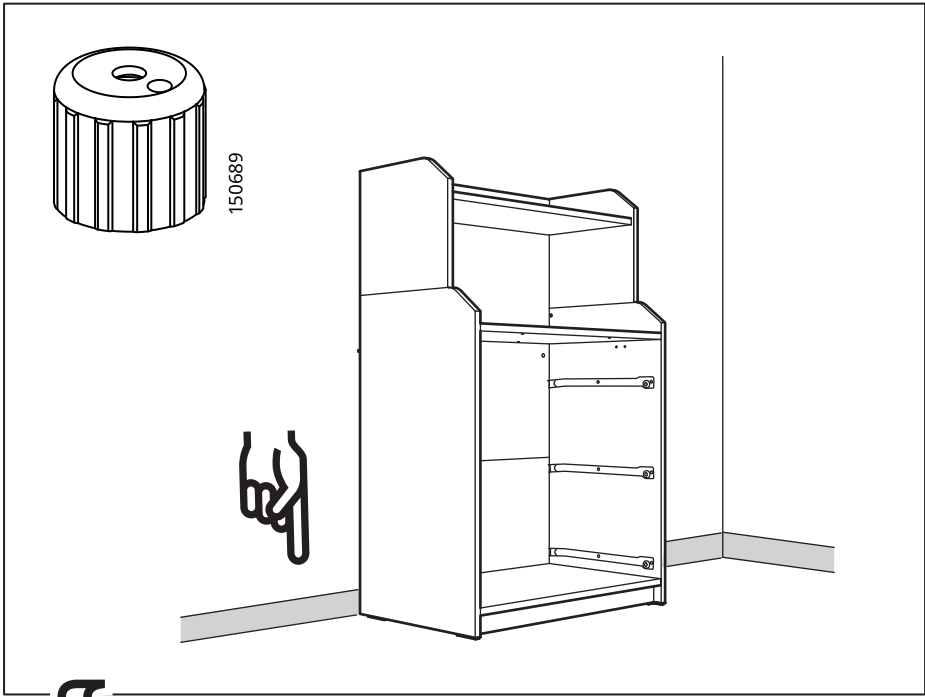





↕
25

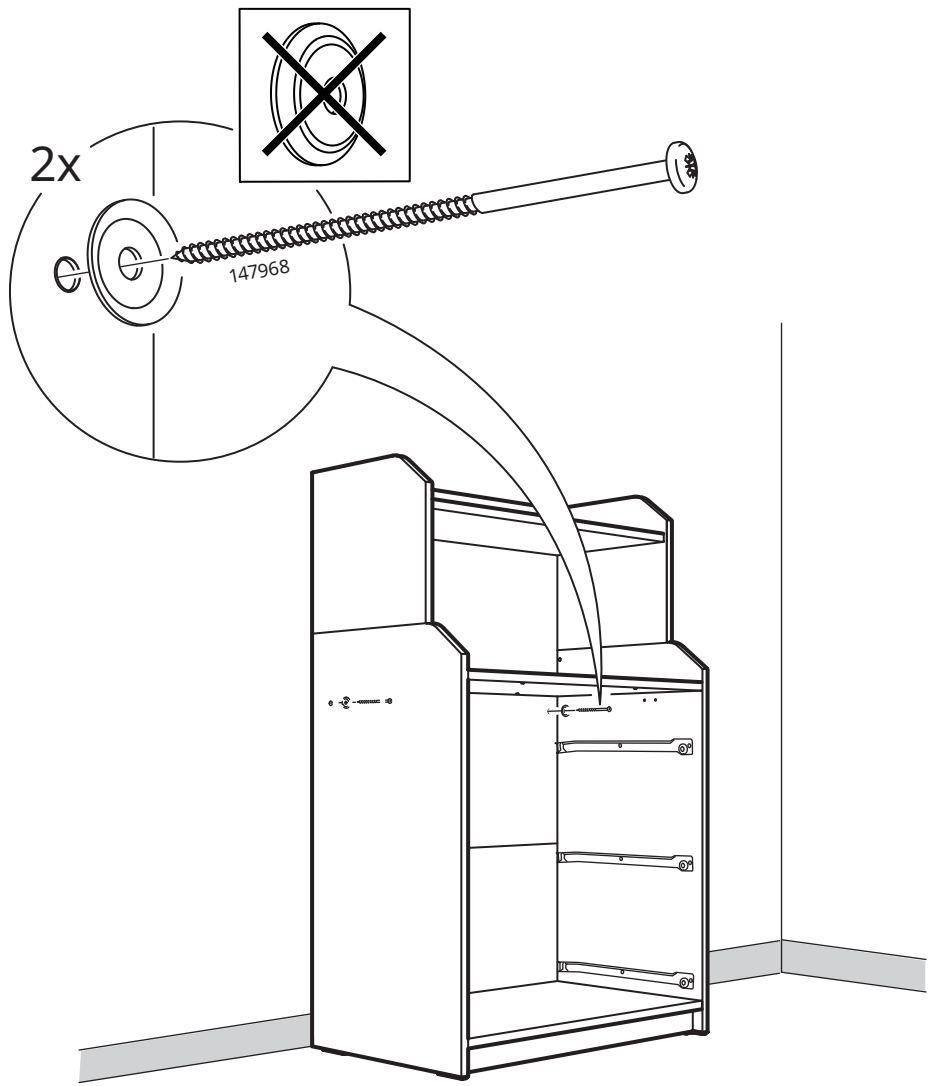 



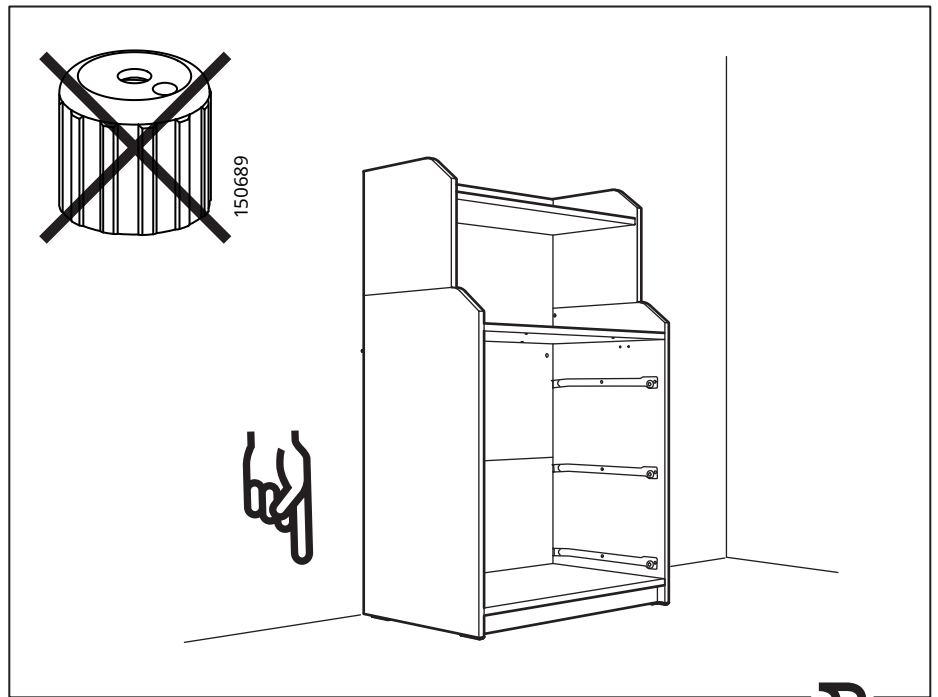 
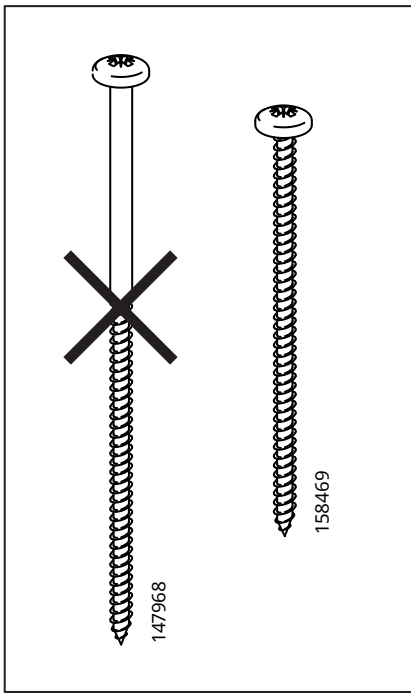 


25


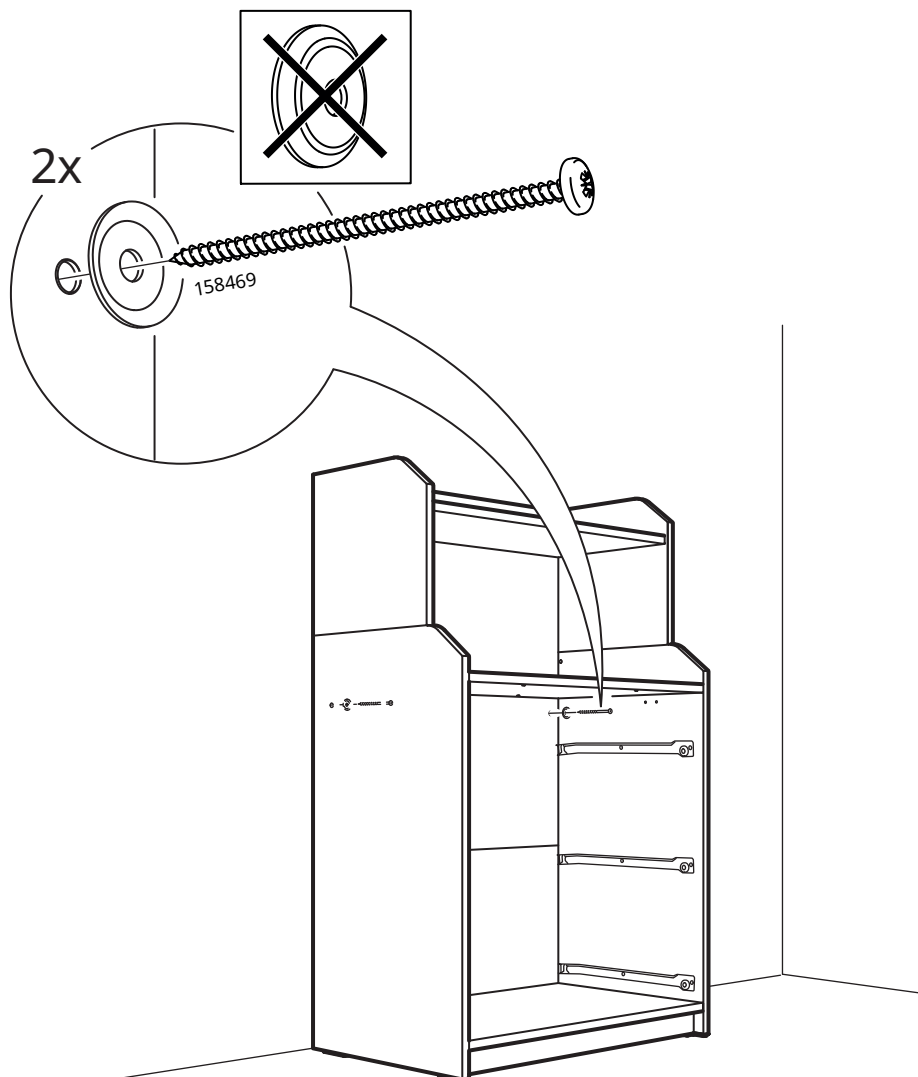 


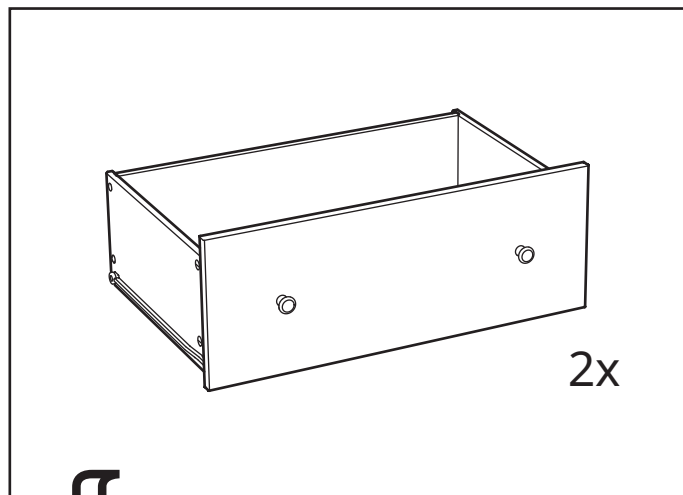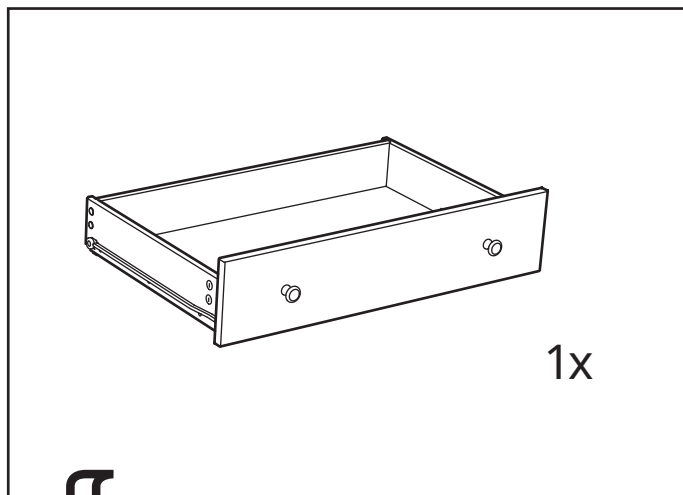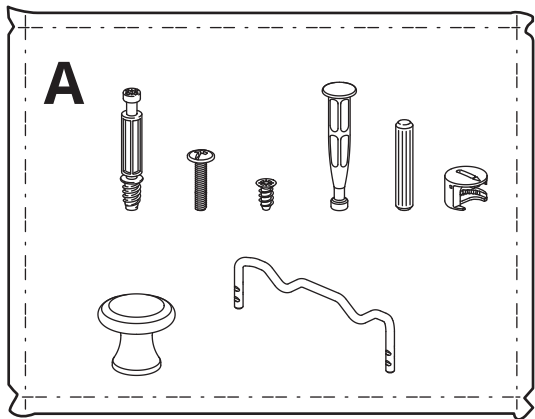   


26

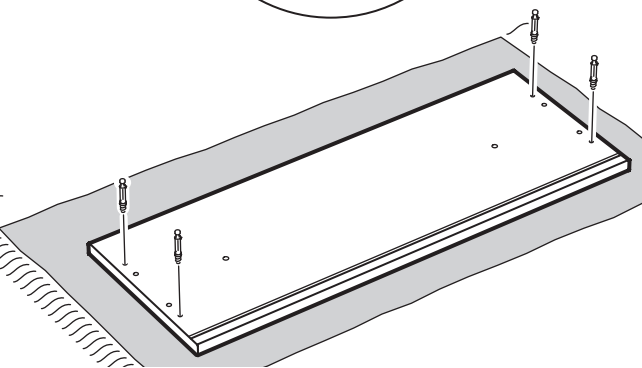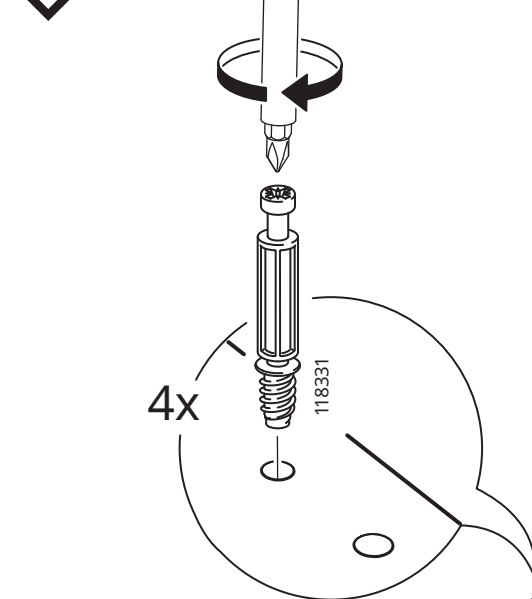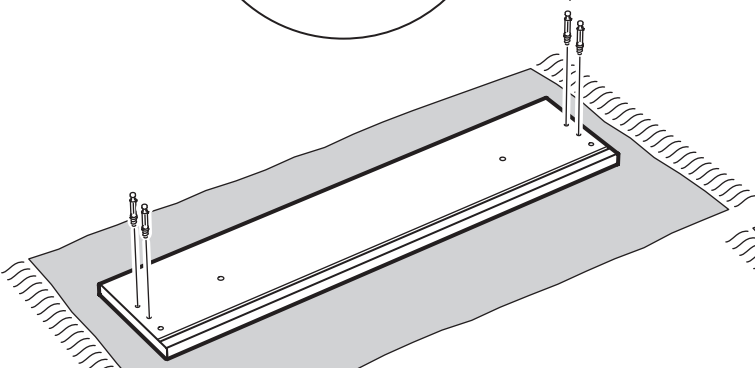   
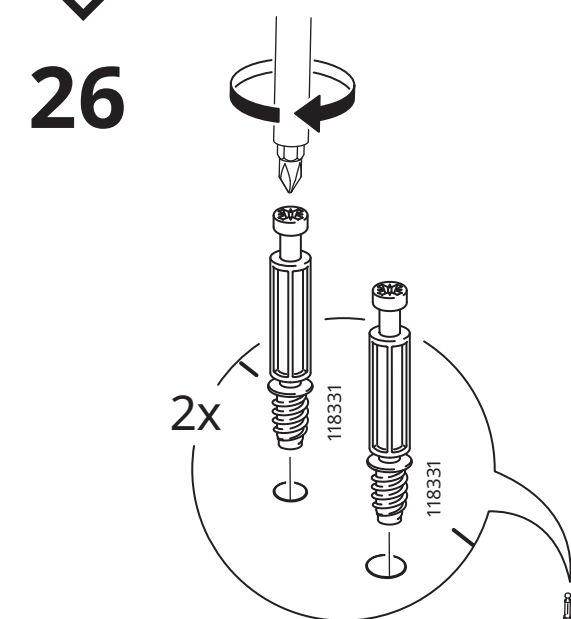 


27

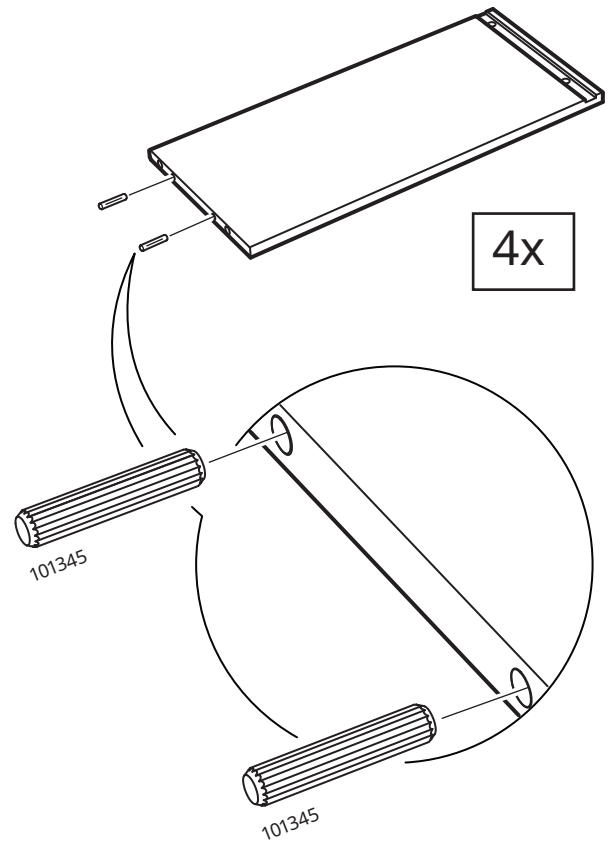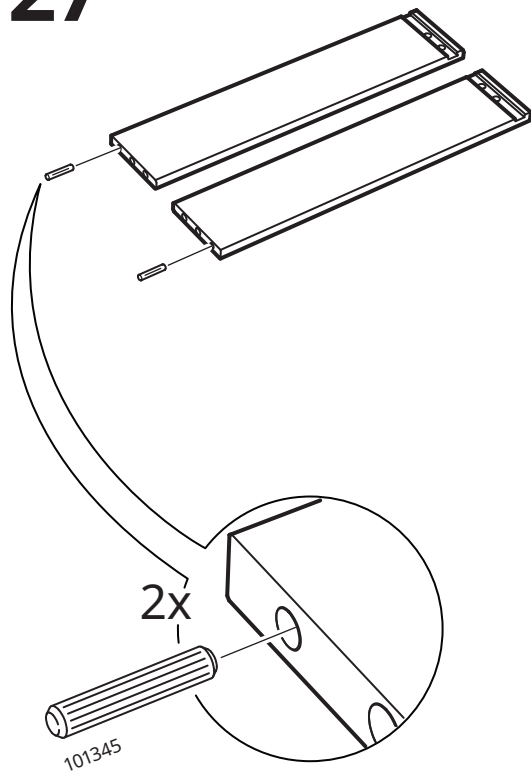  

28

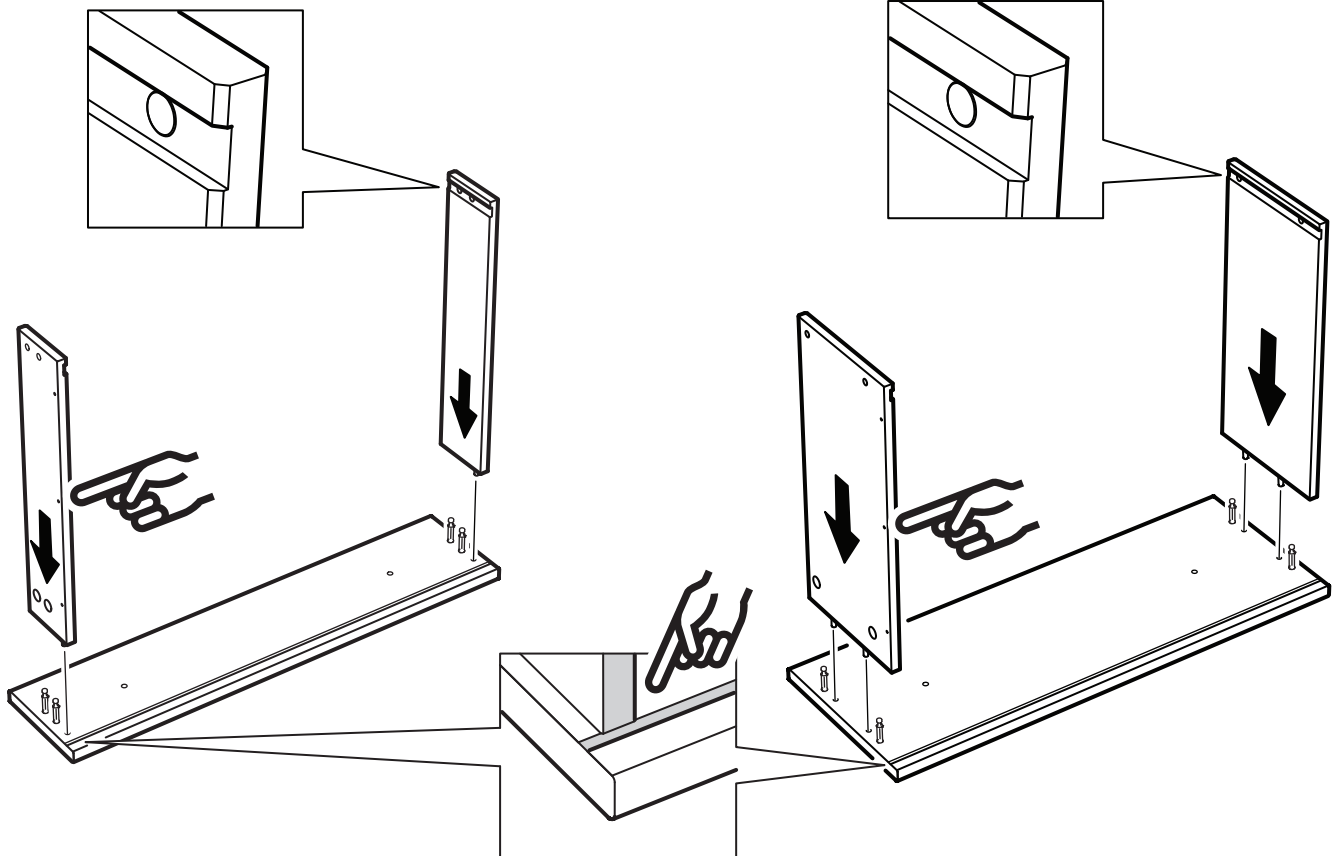 


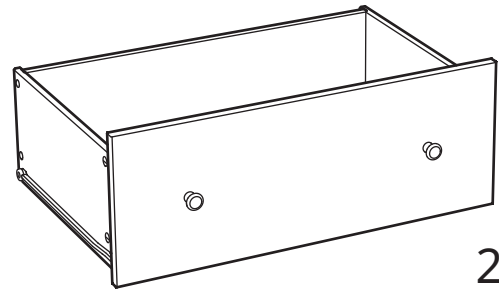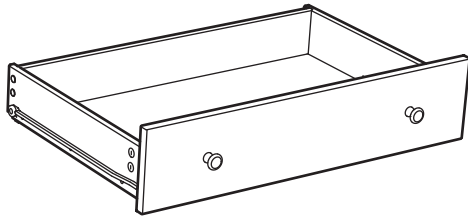  


2x



 
29

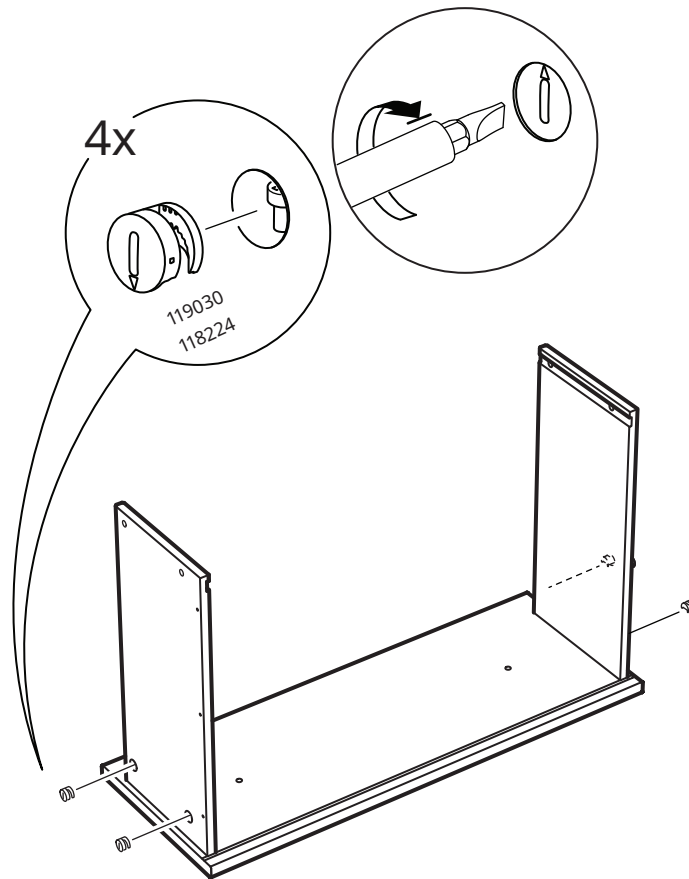


30

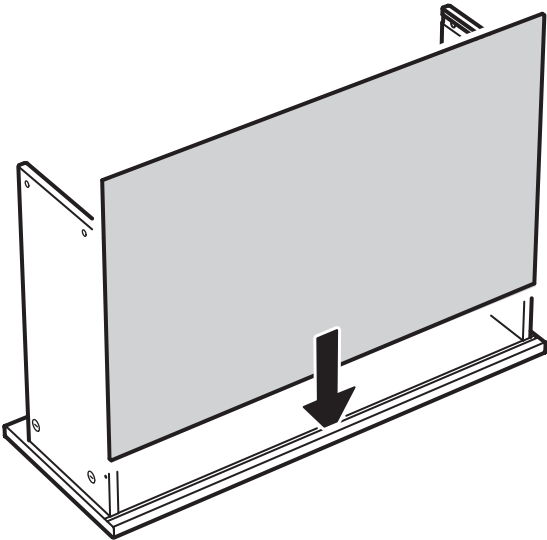 


31

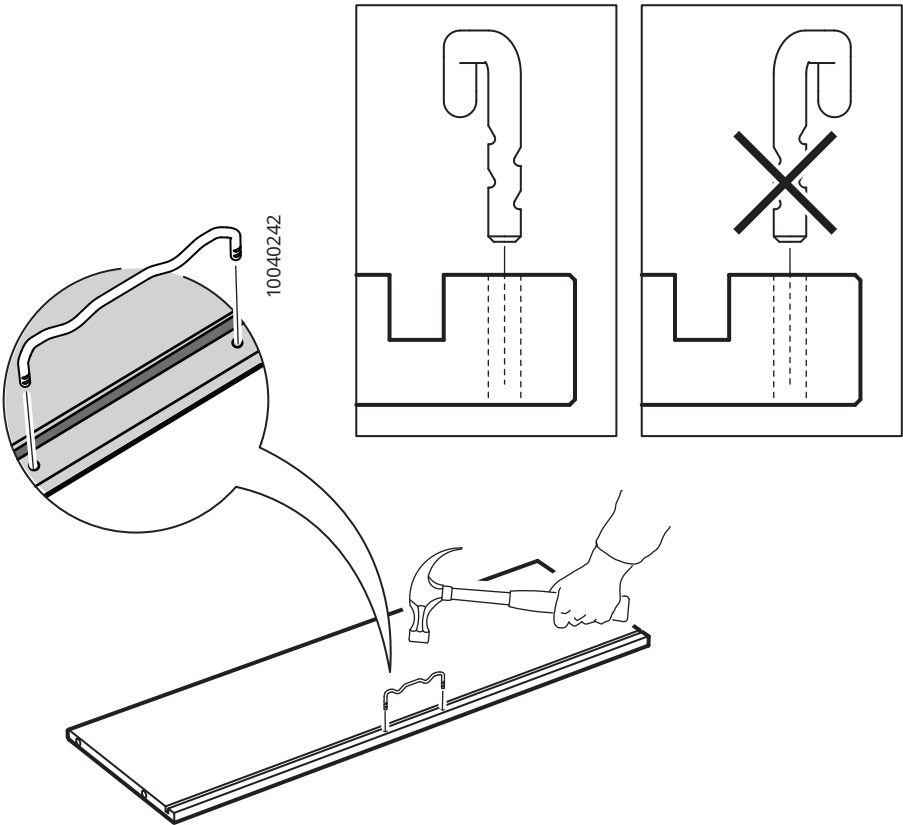 


32

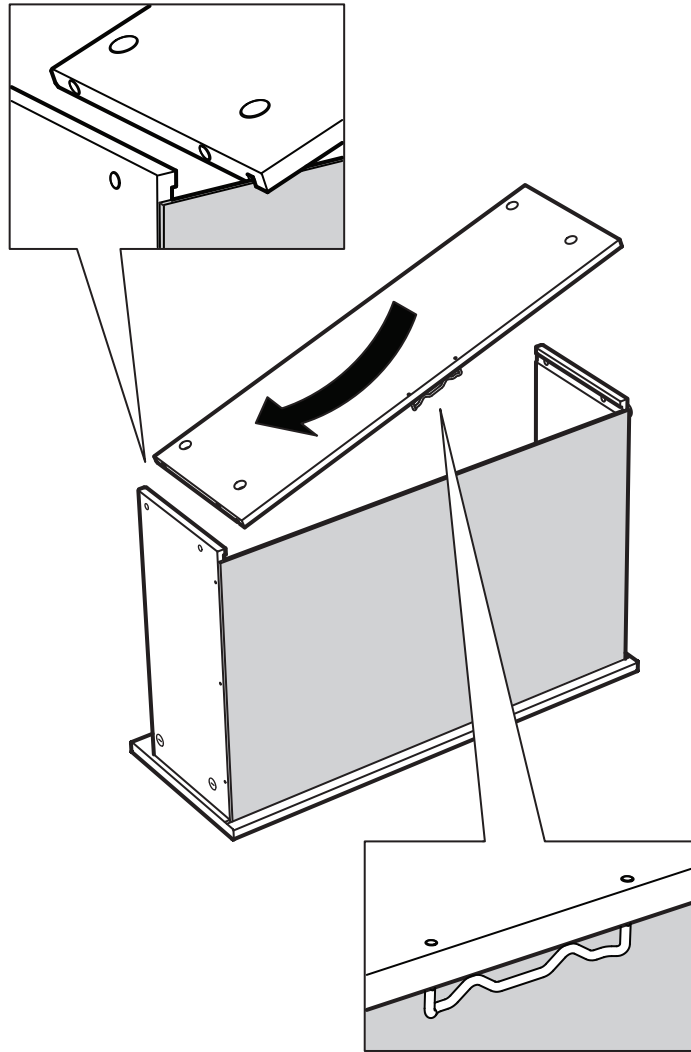 


33

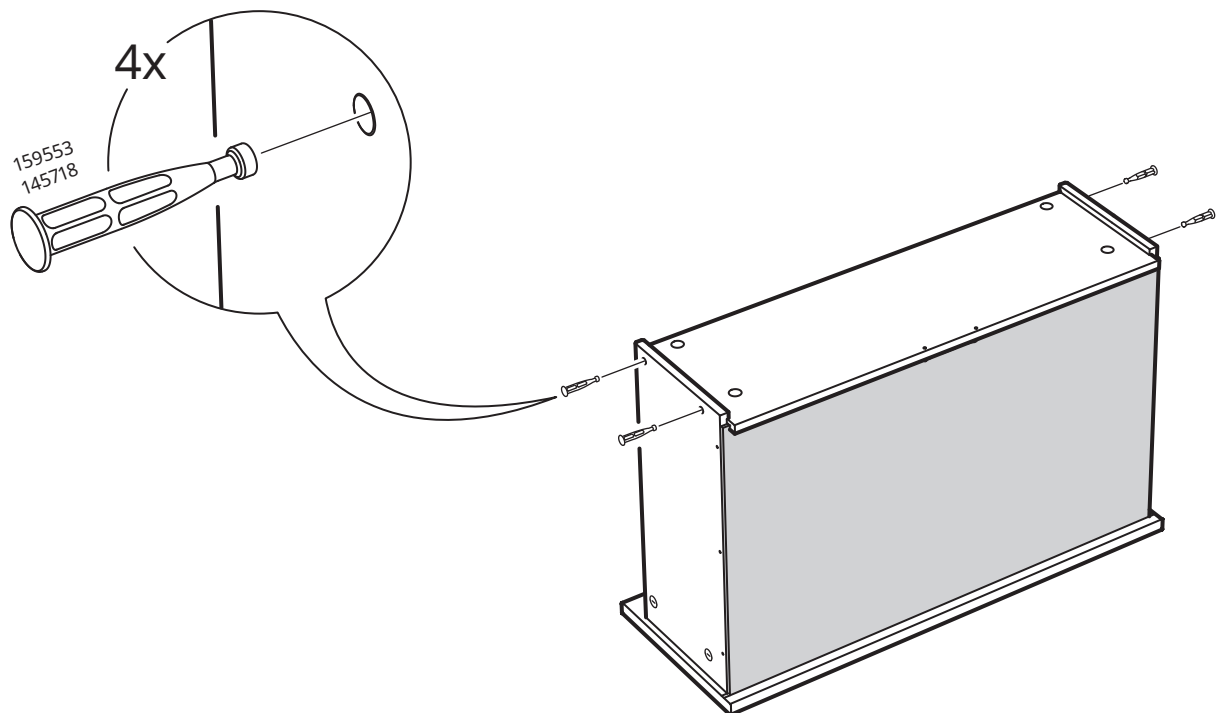 


34

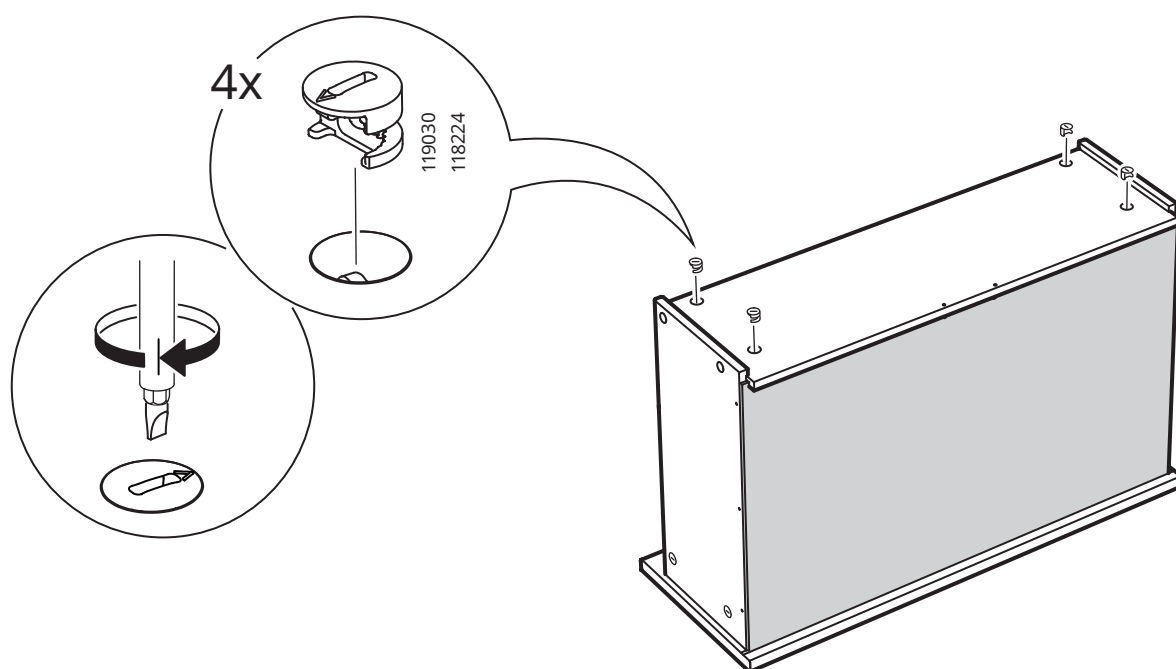 

35

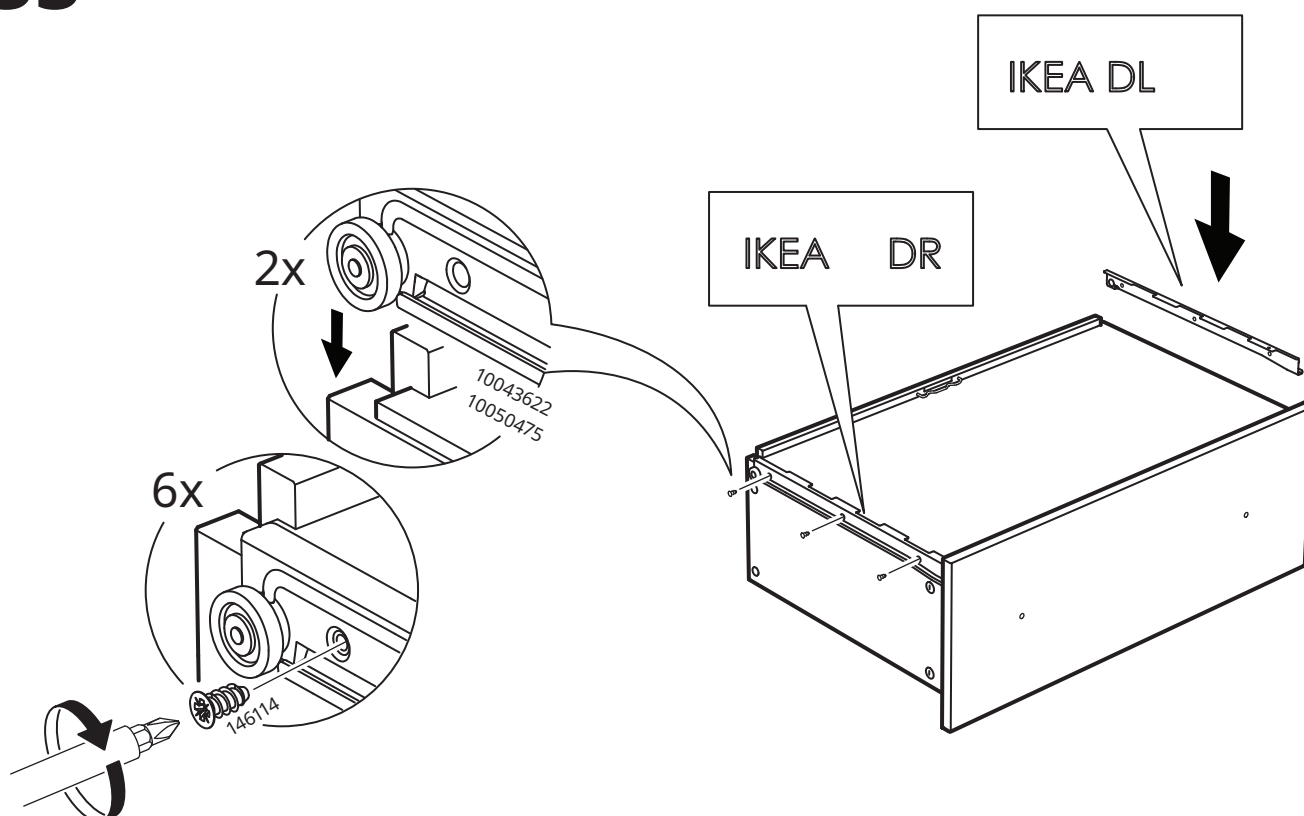 

36

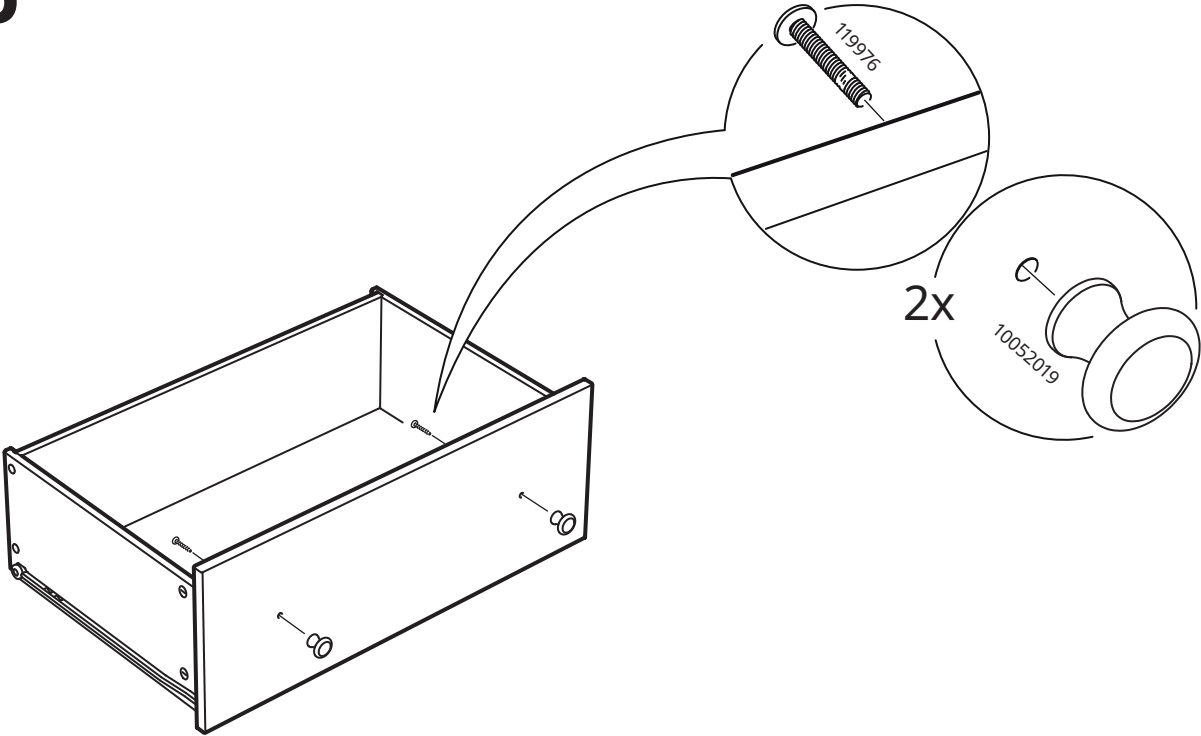 

37

