 
 


HAUGA

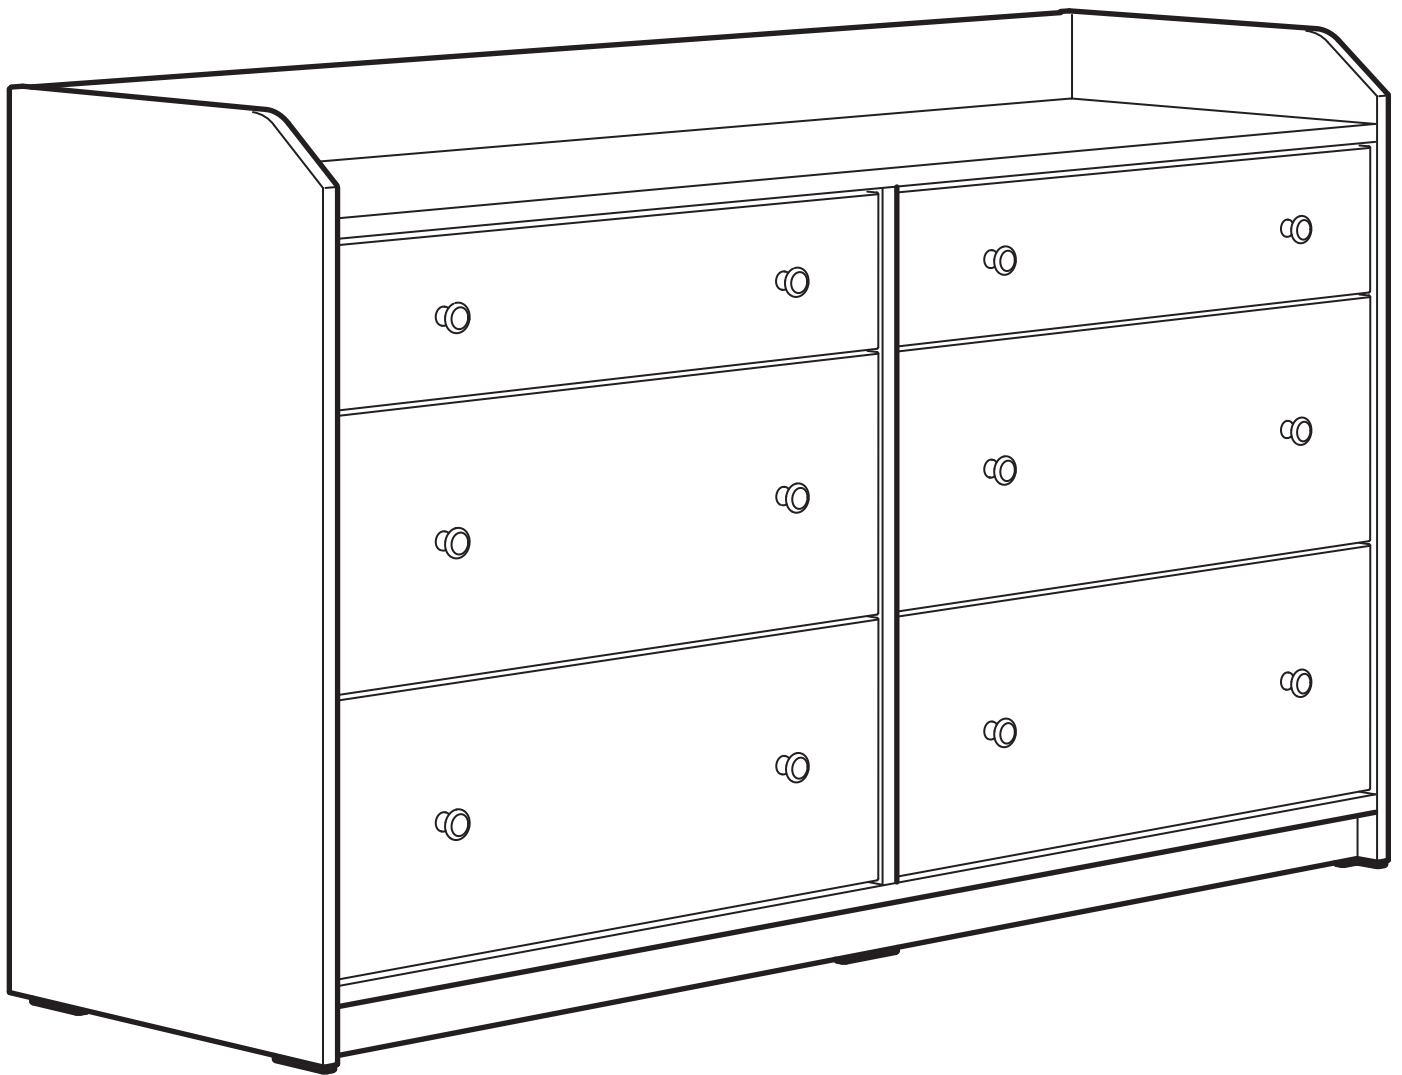

Design and Quality
IKEA of Sweden

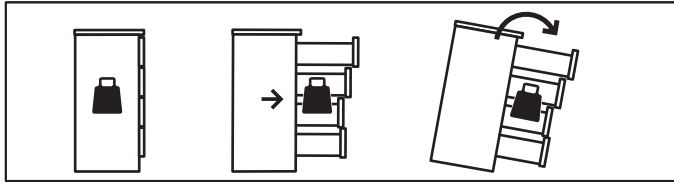

English

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, or shelves.

עברית

אזהרה

נפילת הרהיט עלולה לגרום לפגיעה גופנית חמורה או קטלנית.

 
יש לקבע את הרהיט לקיר באמצעות אבזרי הקיבוע המצורפים.

 
על-מנת למזער את סכנת הפגיעה הגופנית או המוות מנפילת רהיטים:

 
מקמו את הפריטים הכבדים ביותר במגירה התחתונה.

 
 
 
הימנעו מלהניח טלוויזיות או פריטים כבדים אחרים על מוצר זה.

 
 
 
 
אין לאפשר לילדים לטפס על המגירות, הדלתות או המדפים.

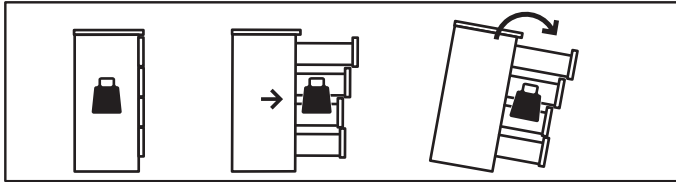

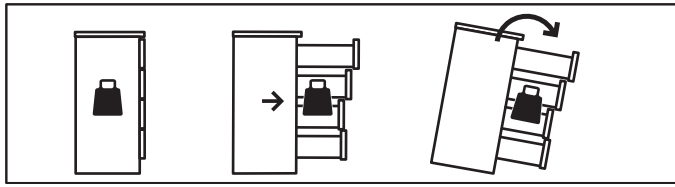


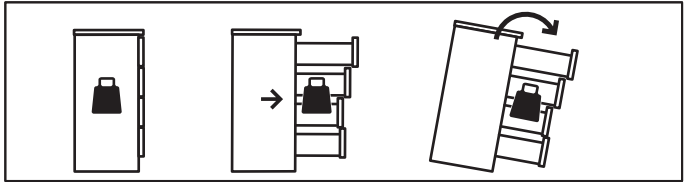

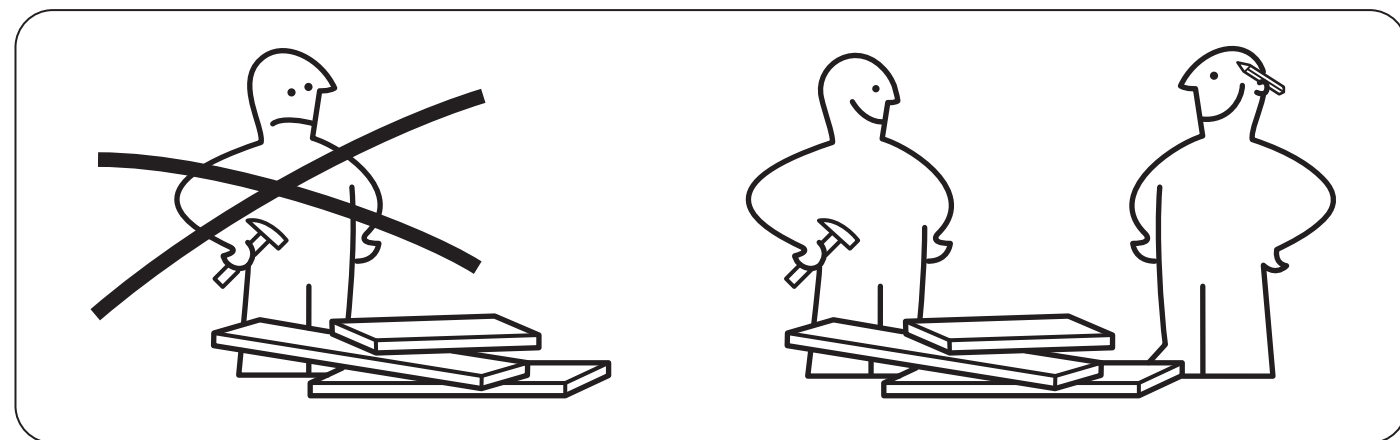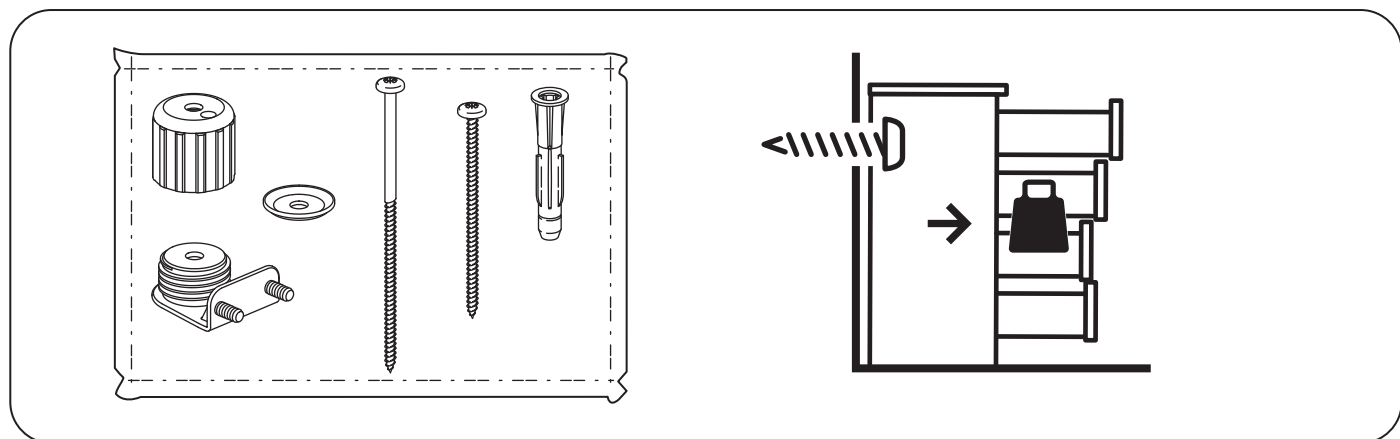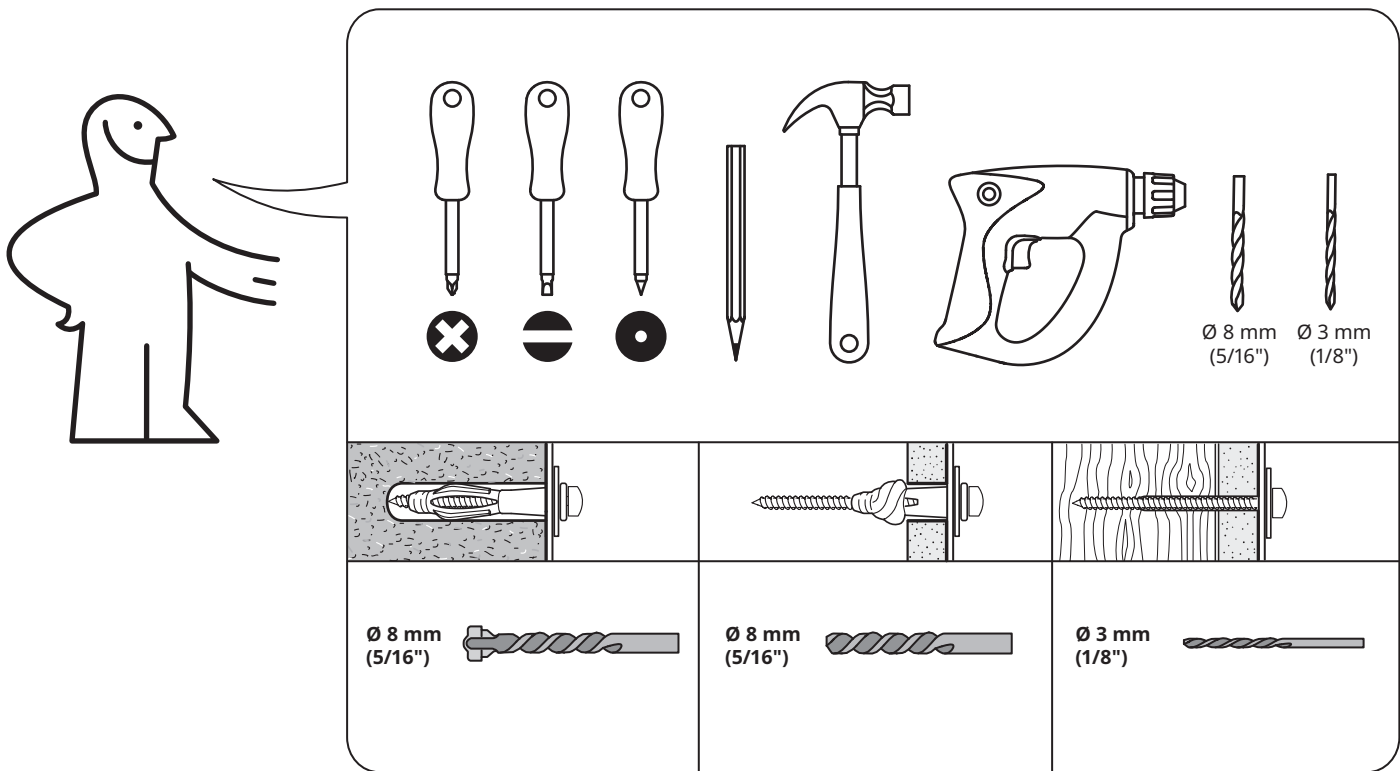

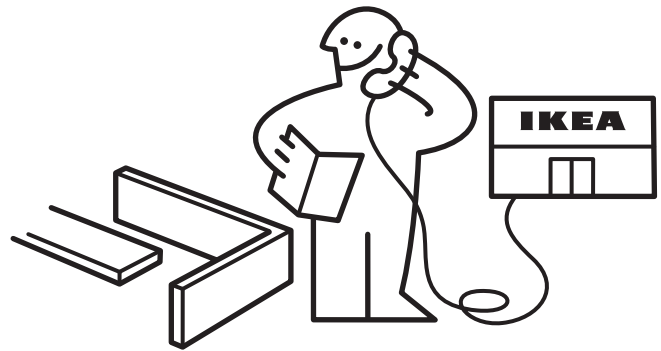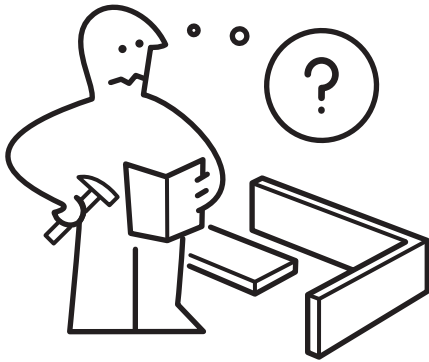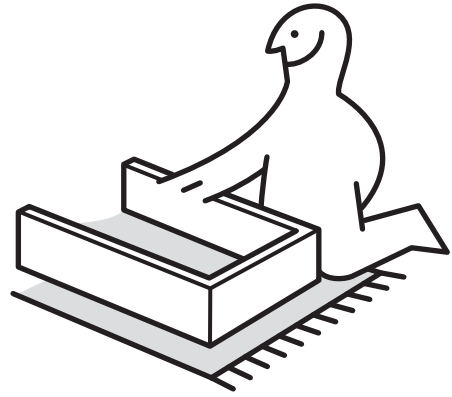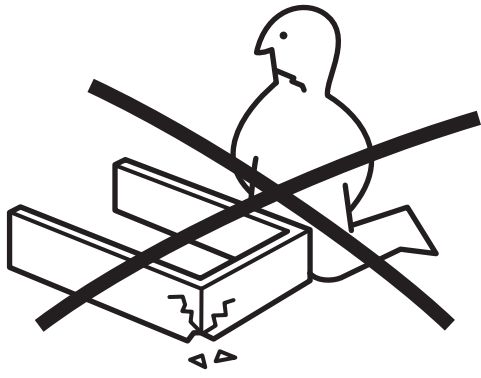


A

 

118331

 24x




119976

12x



146114

 
36x



145718


24x

 159553



101345

 
20x



119030


118224

 48x

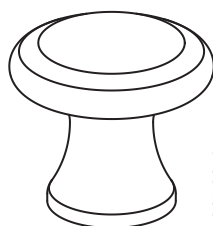

10052019

 12x

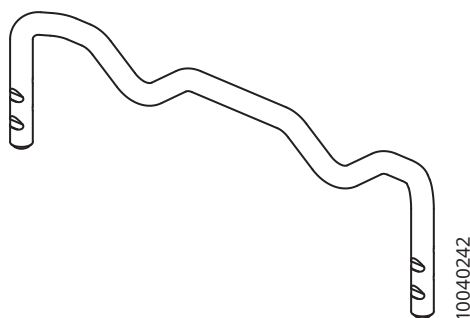


10040242

6x



 29

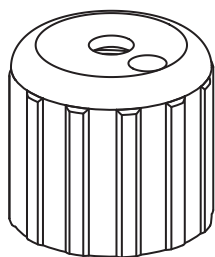


150689

2x




126916

 2x

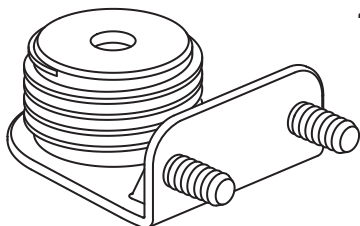


150688

 2x




147968

 2x



158469

 2x



121714

 
2x



19


327495

1



151706
151708

 14x




151705
151707

14x



146114

 36x

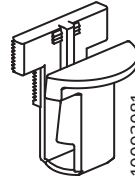

10093081

6x



 
10093082

6x




101345

14x

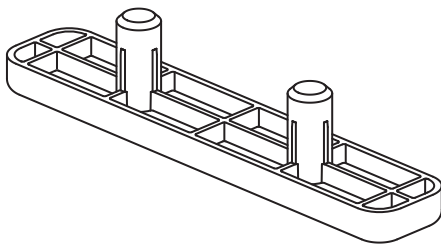


153548
158568

 2x

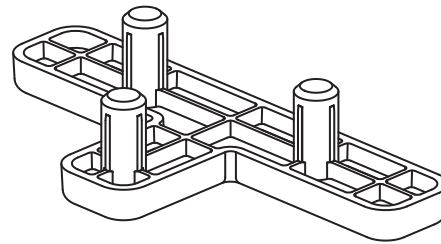


10040039
10051022

 4x

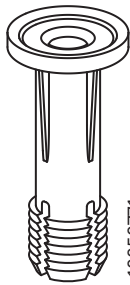

10050771

 
2x



10050769

 2x





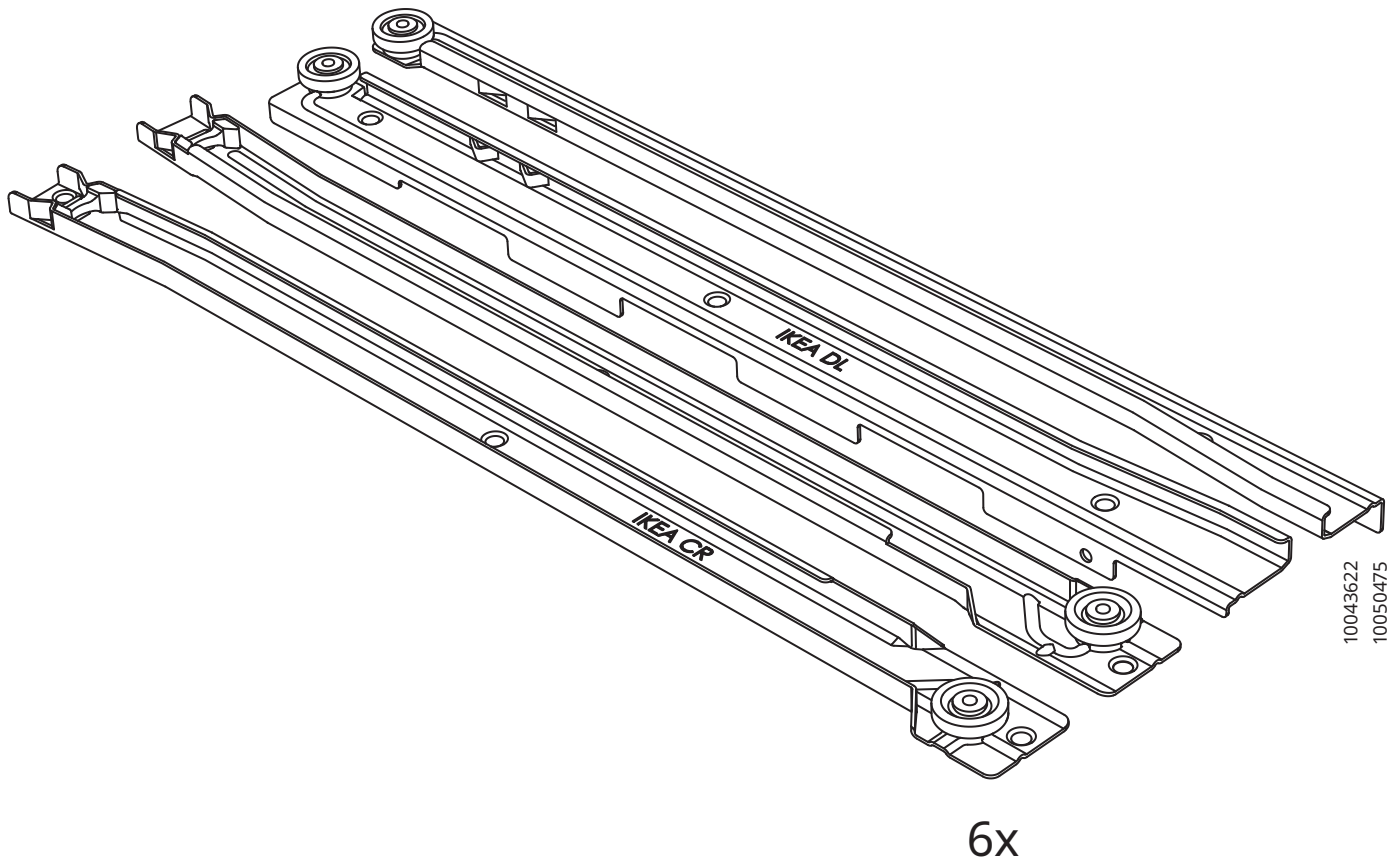


6x

10043622
10050475

  
1

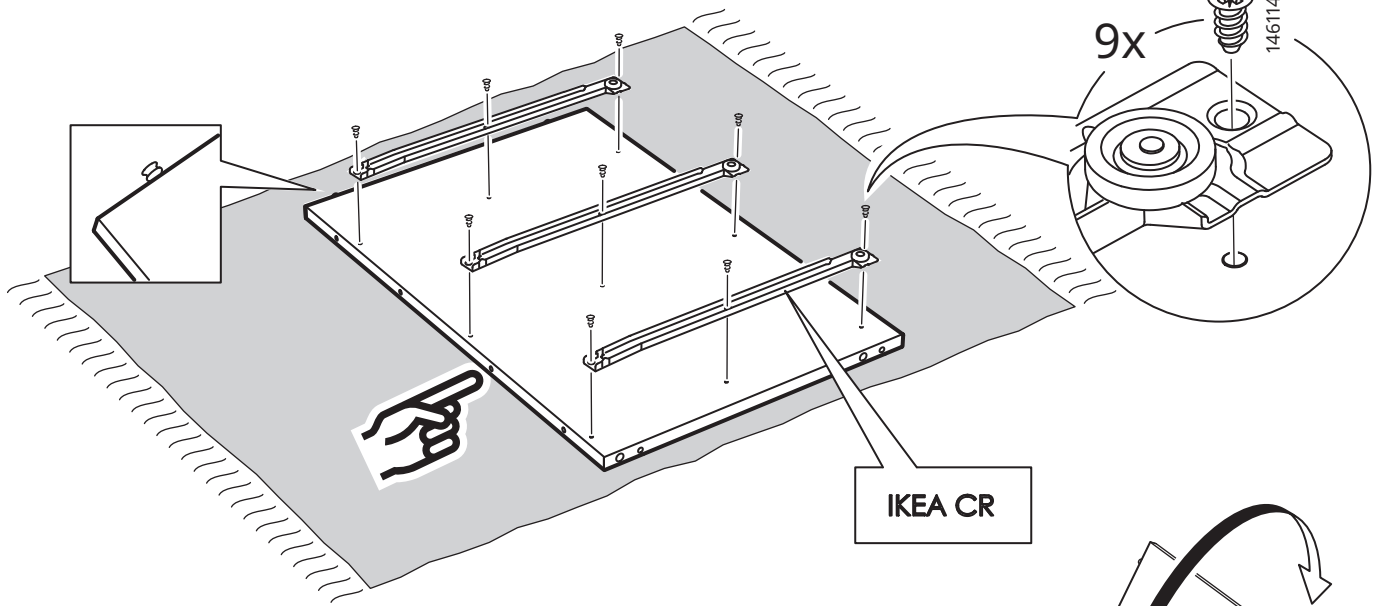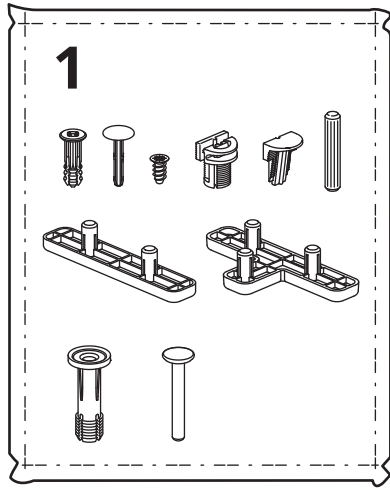


2

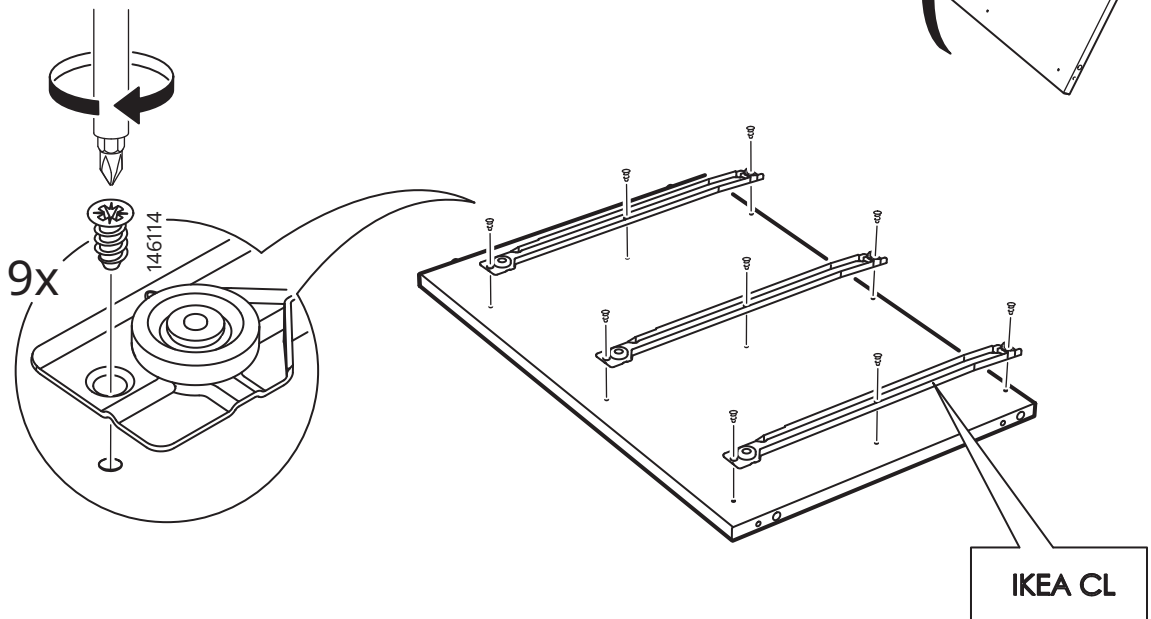 


3

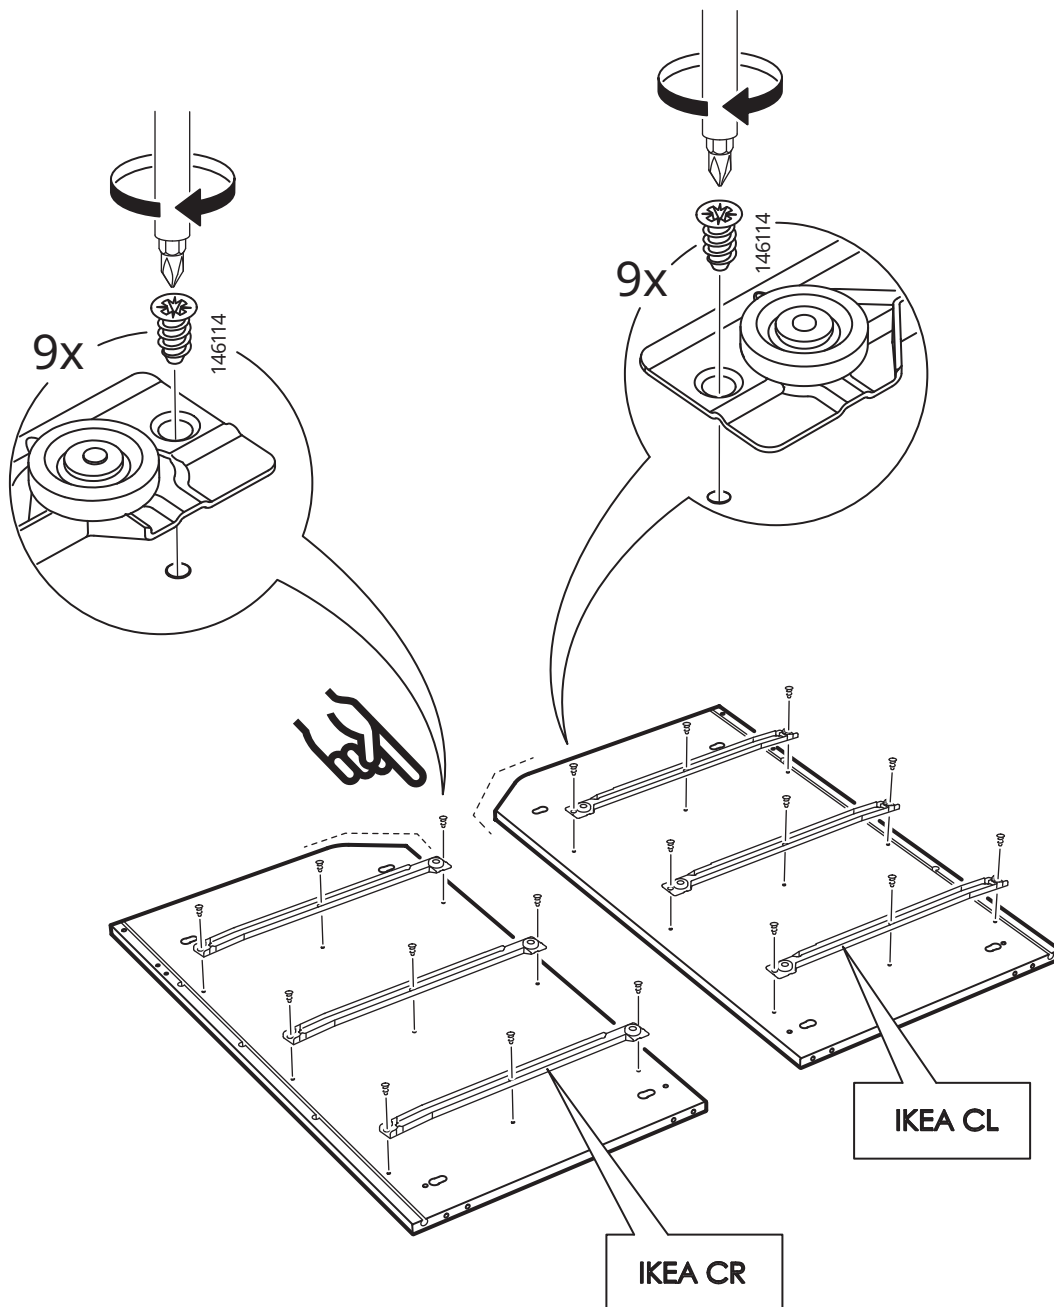 


4

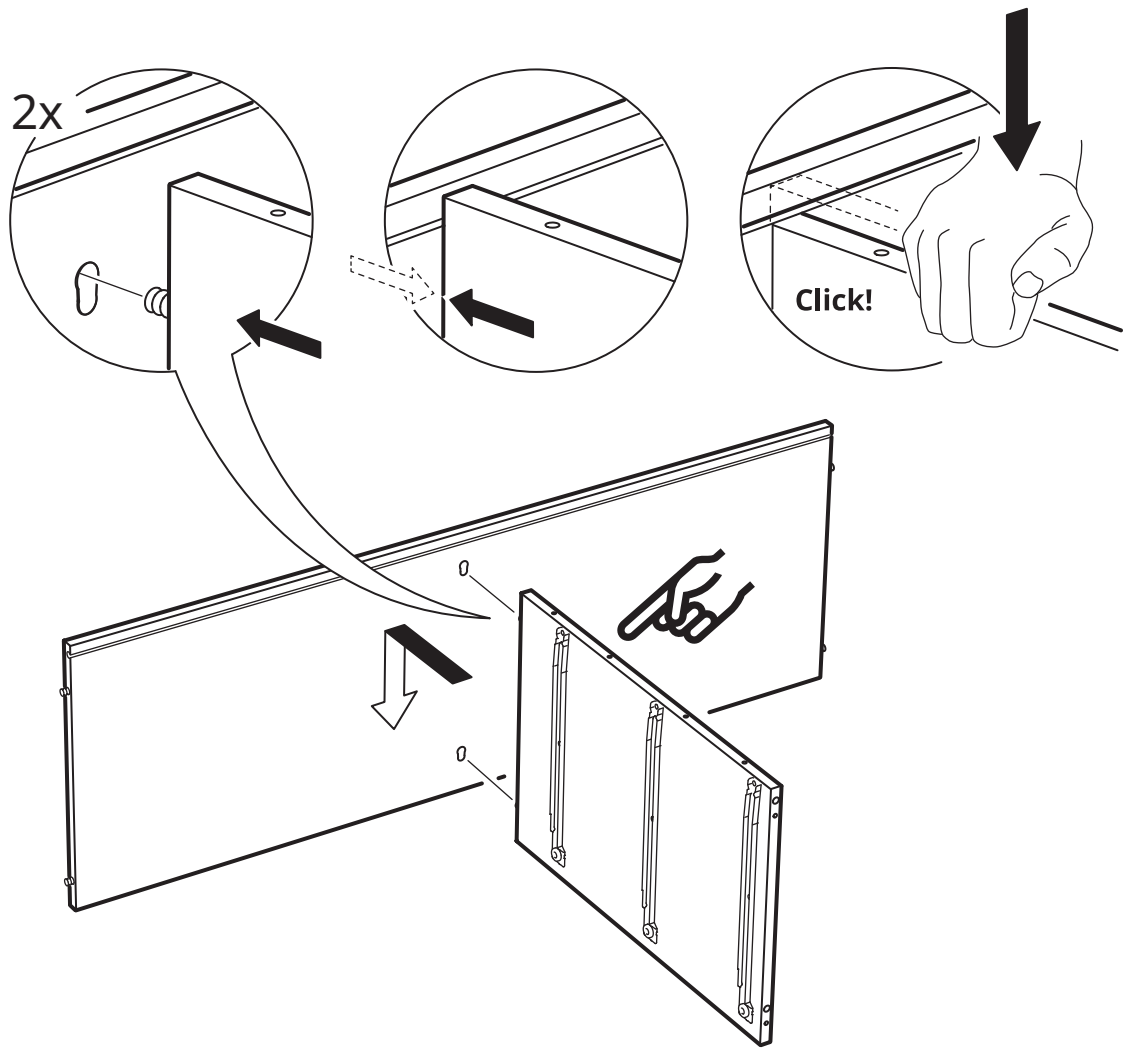 


5

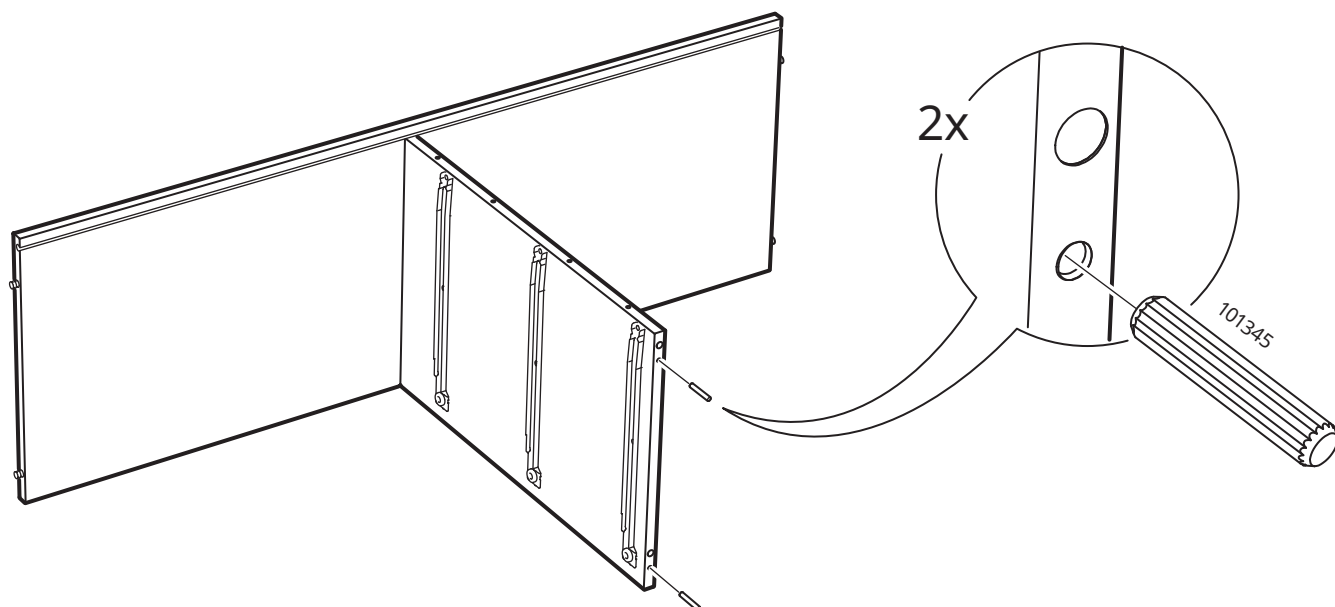 


6

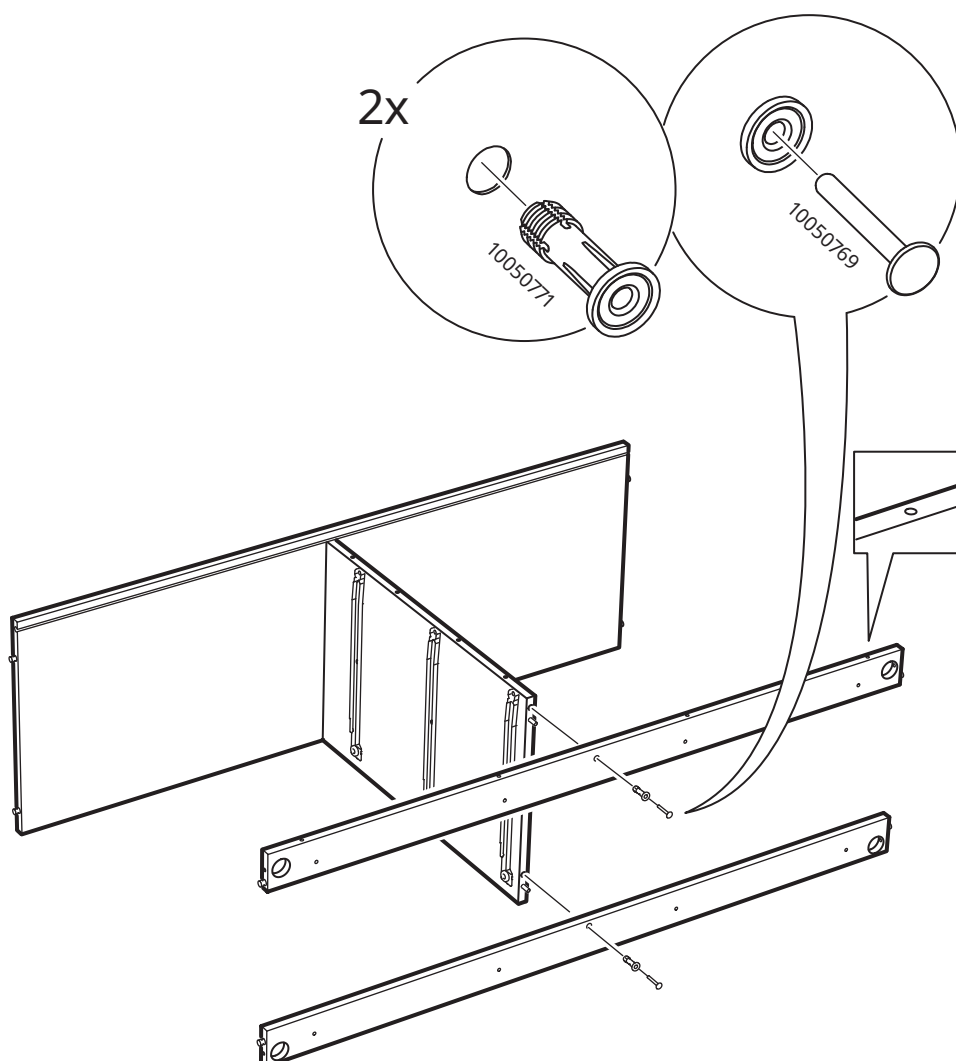 


7

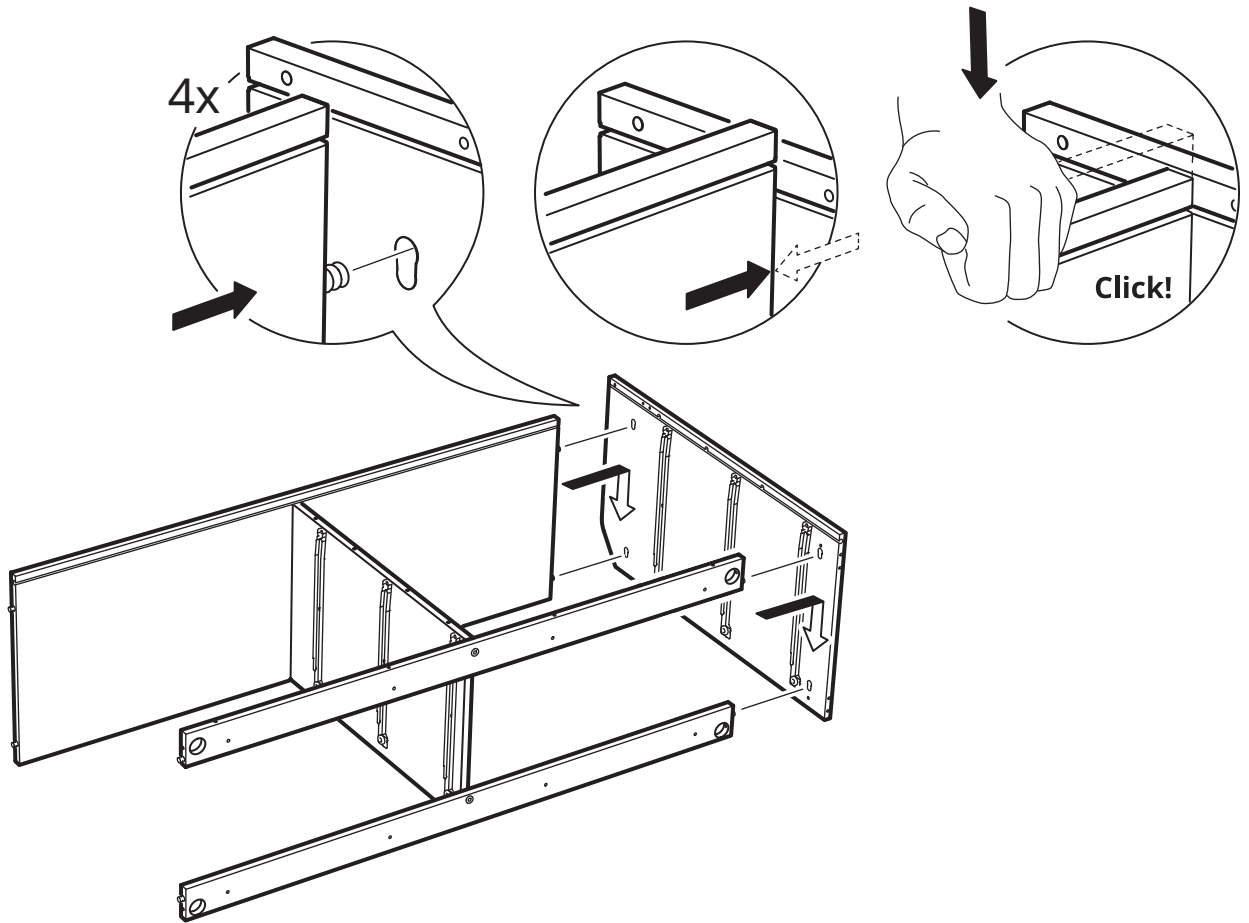 


8

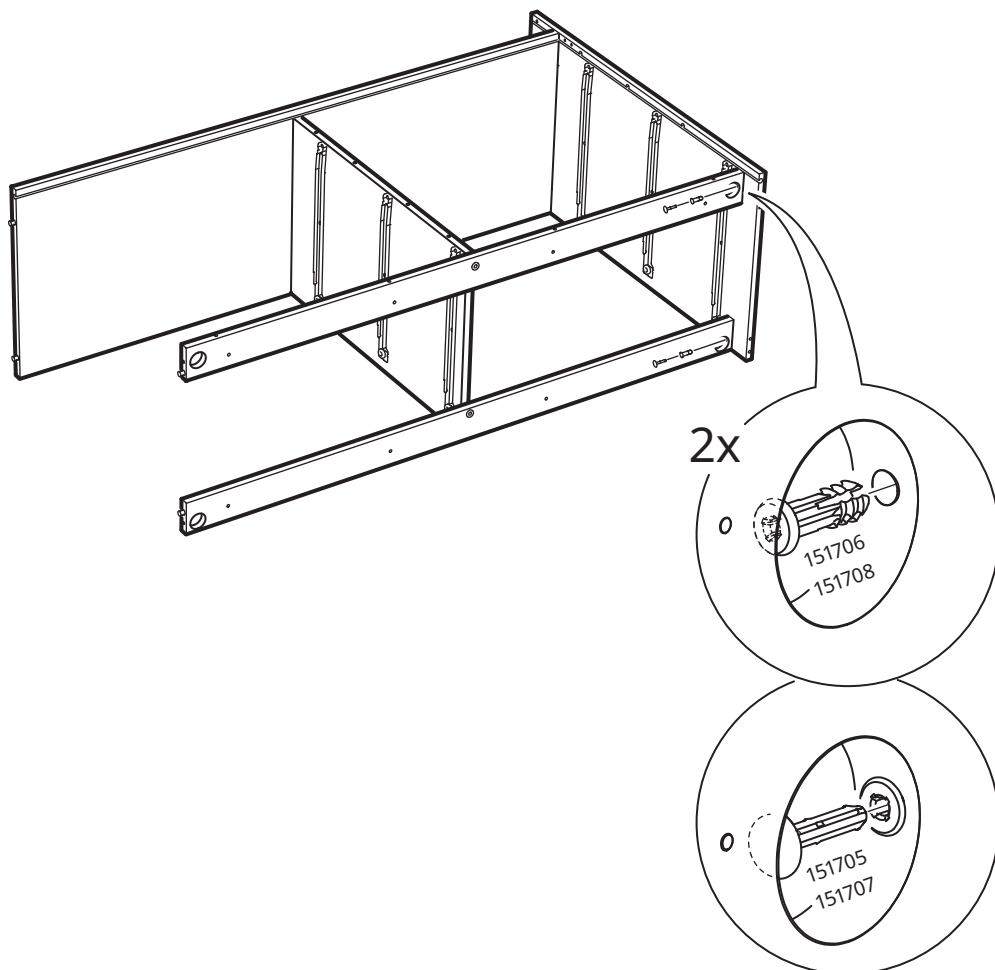 


9

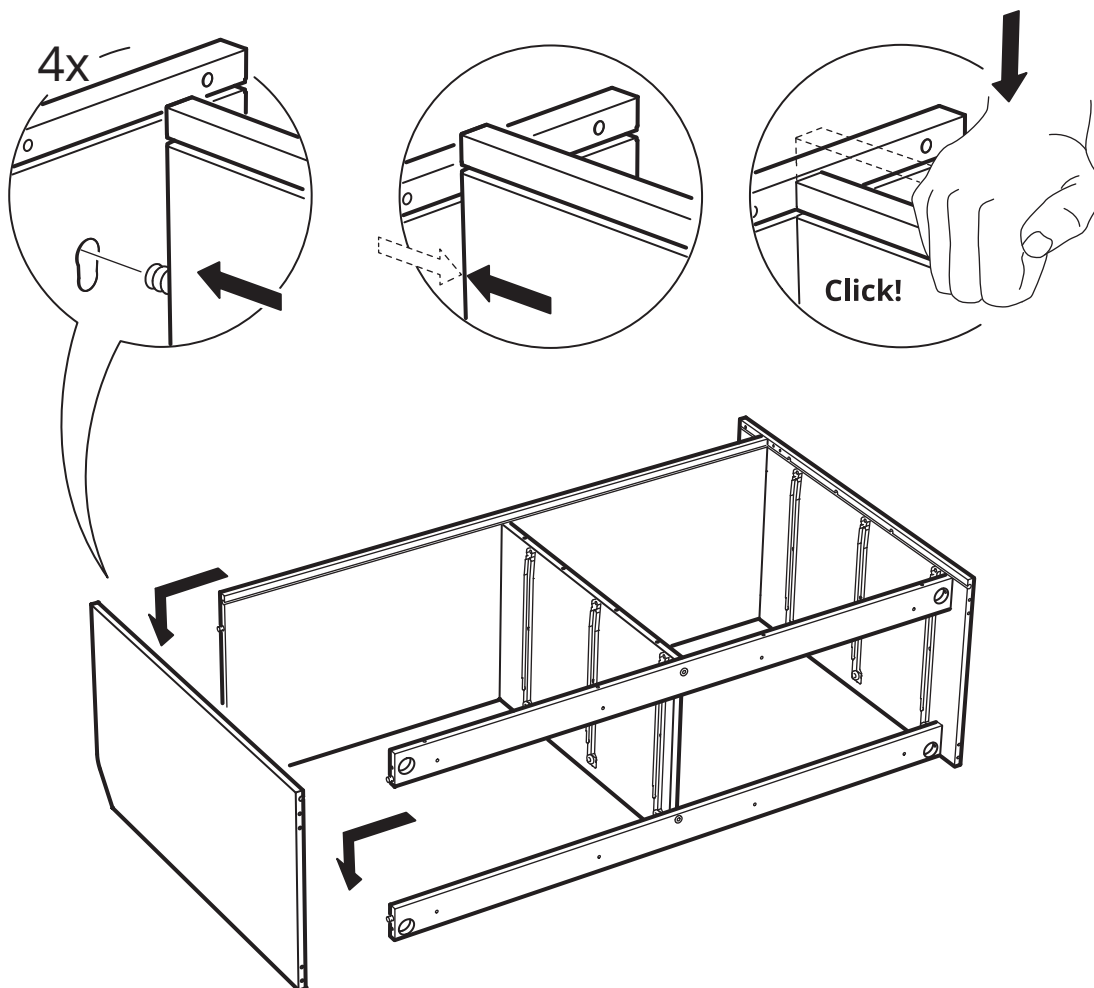 


10

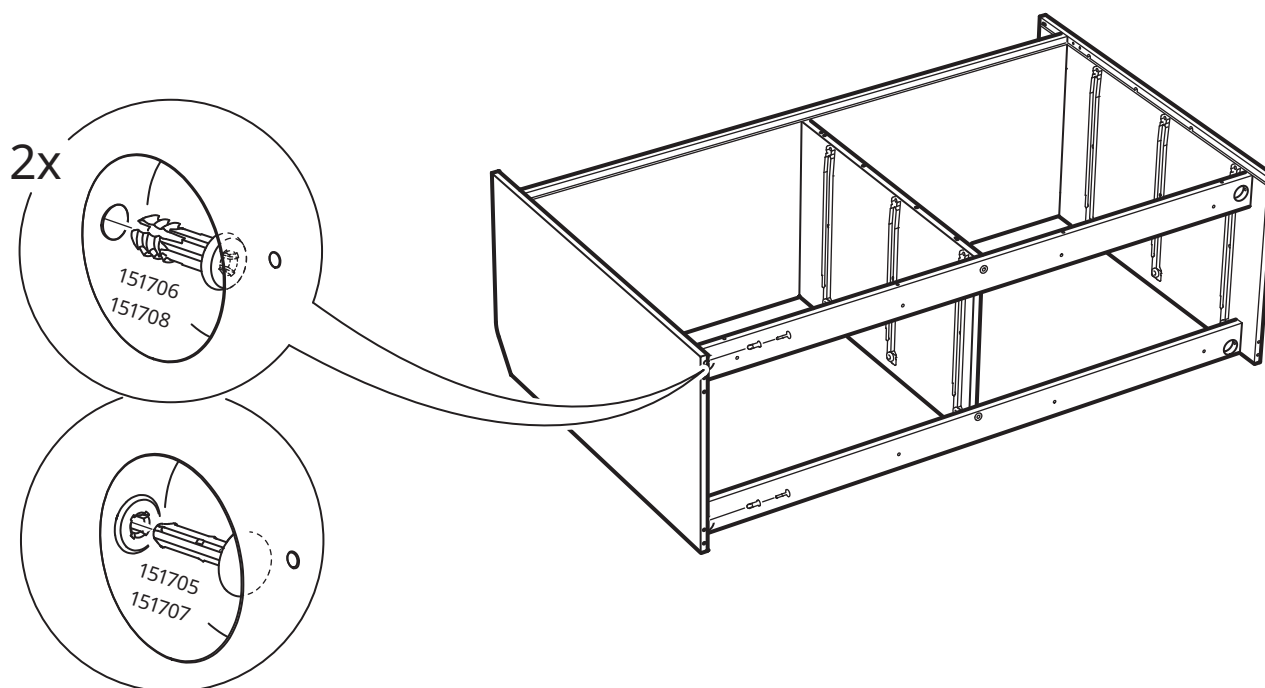 


11

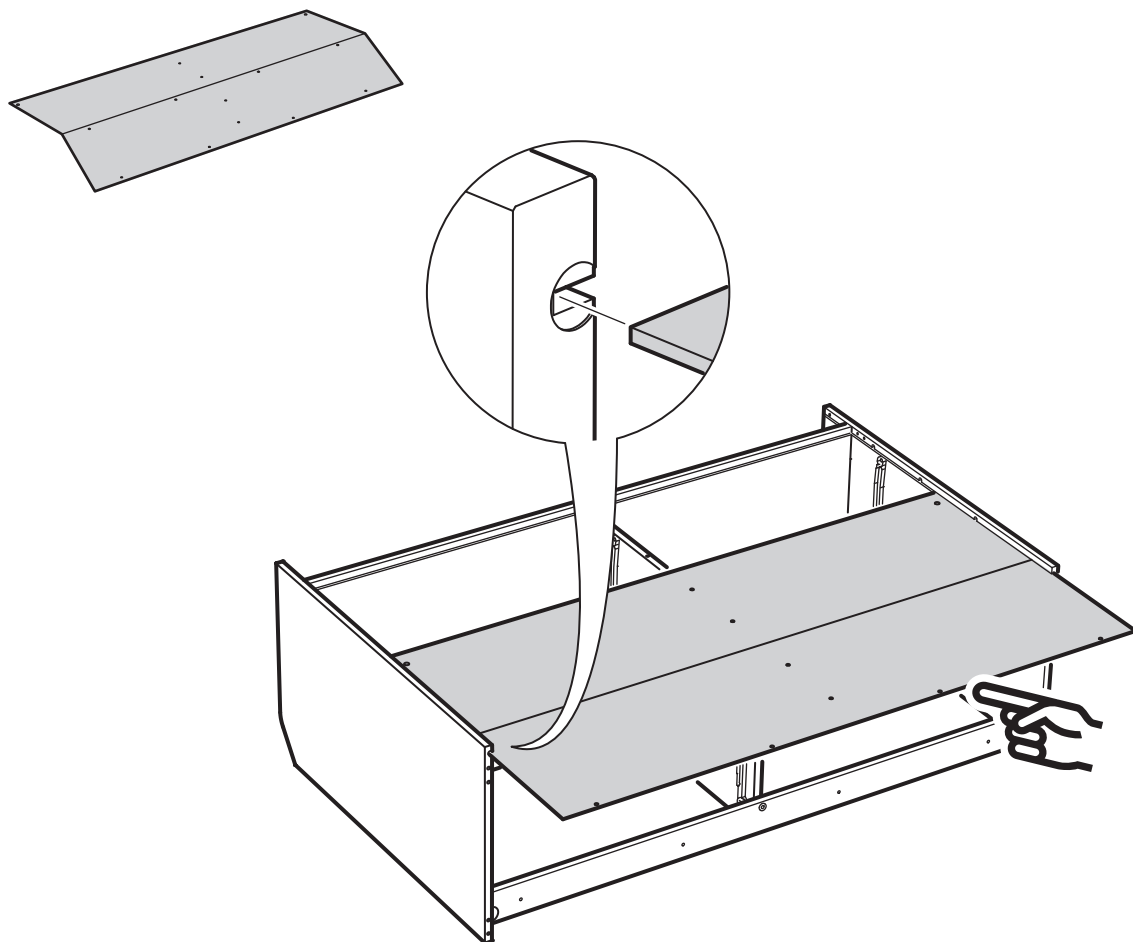 


12

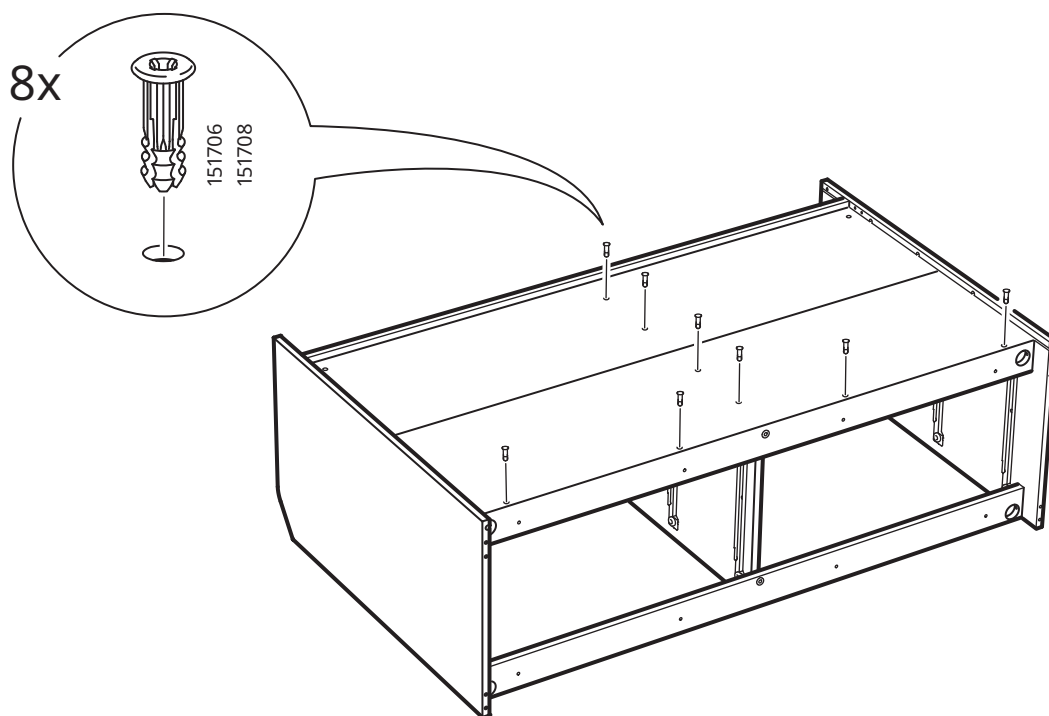 


13

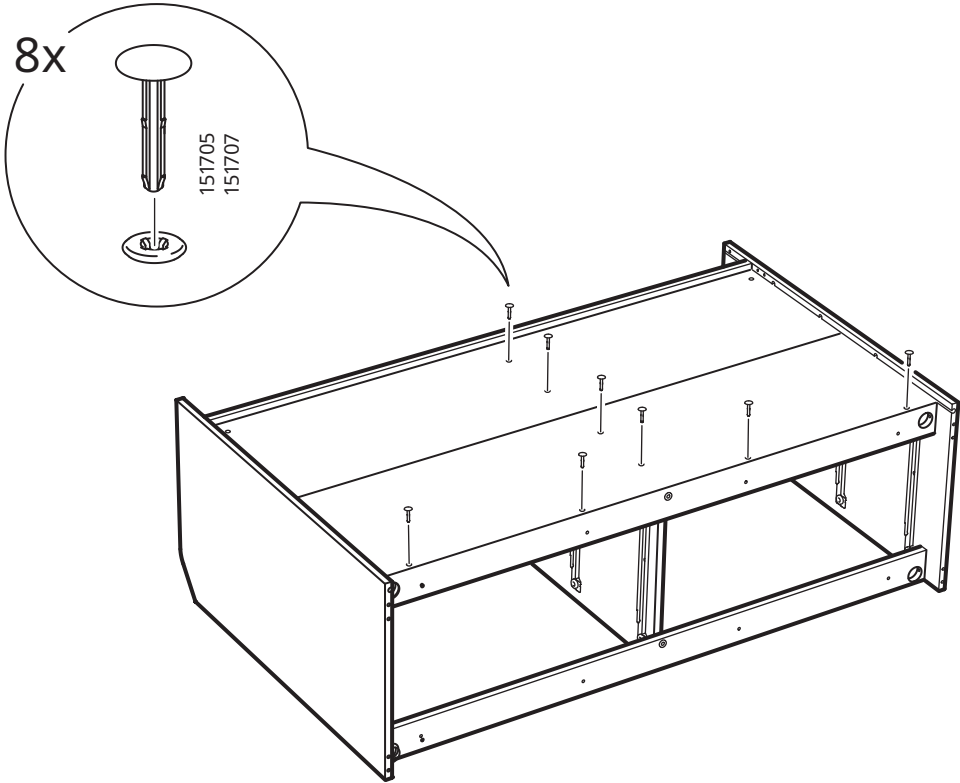 


14

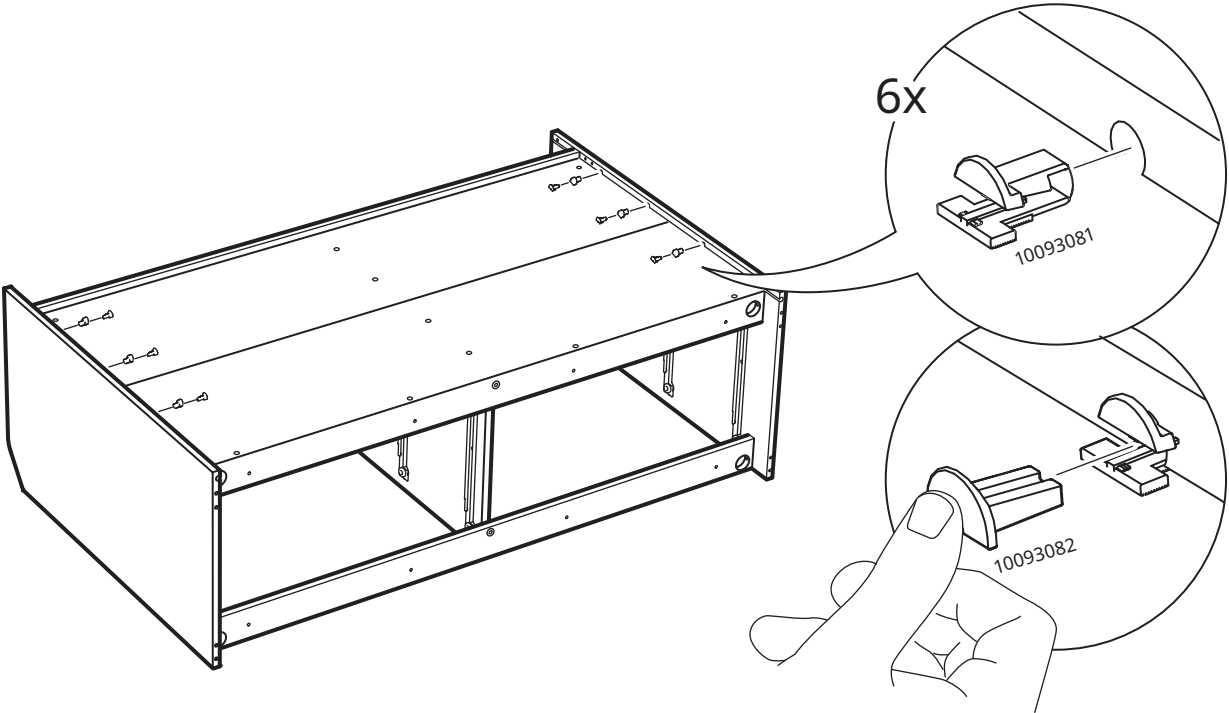 


15

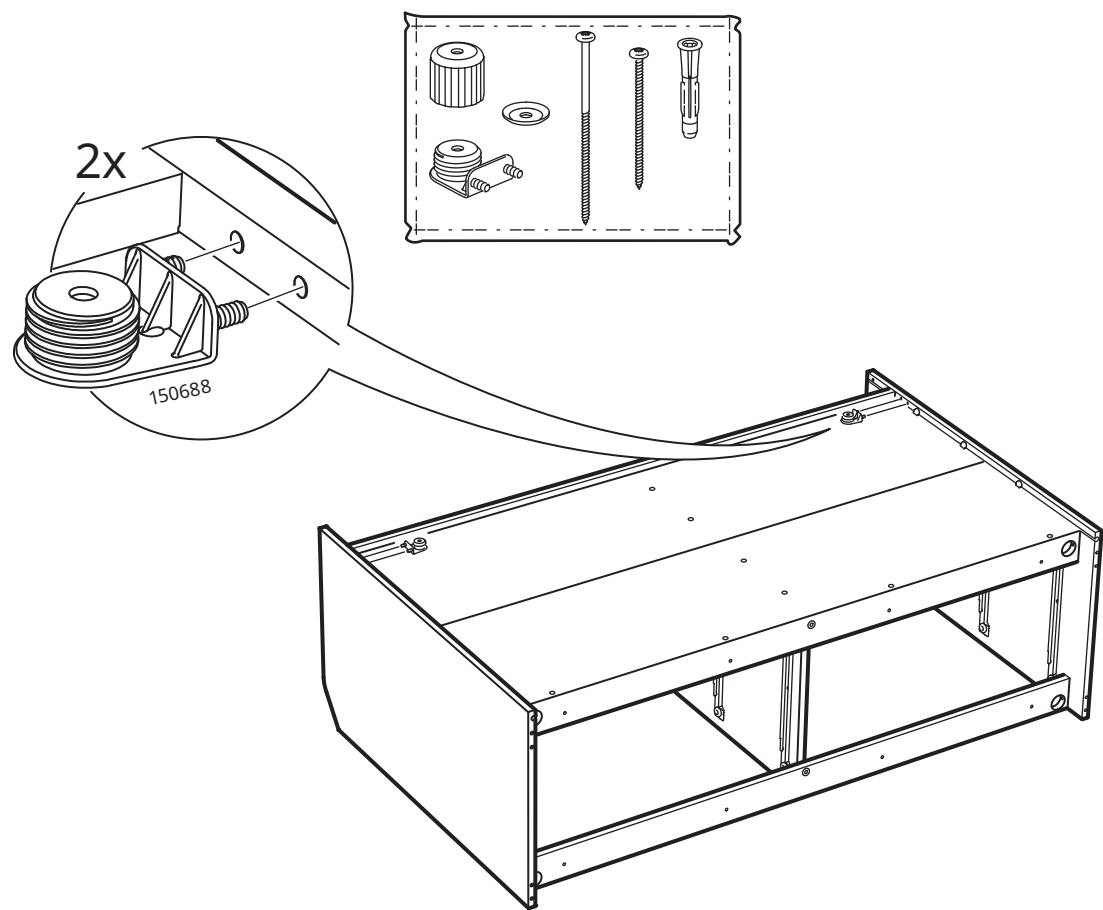 


16

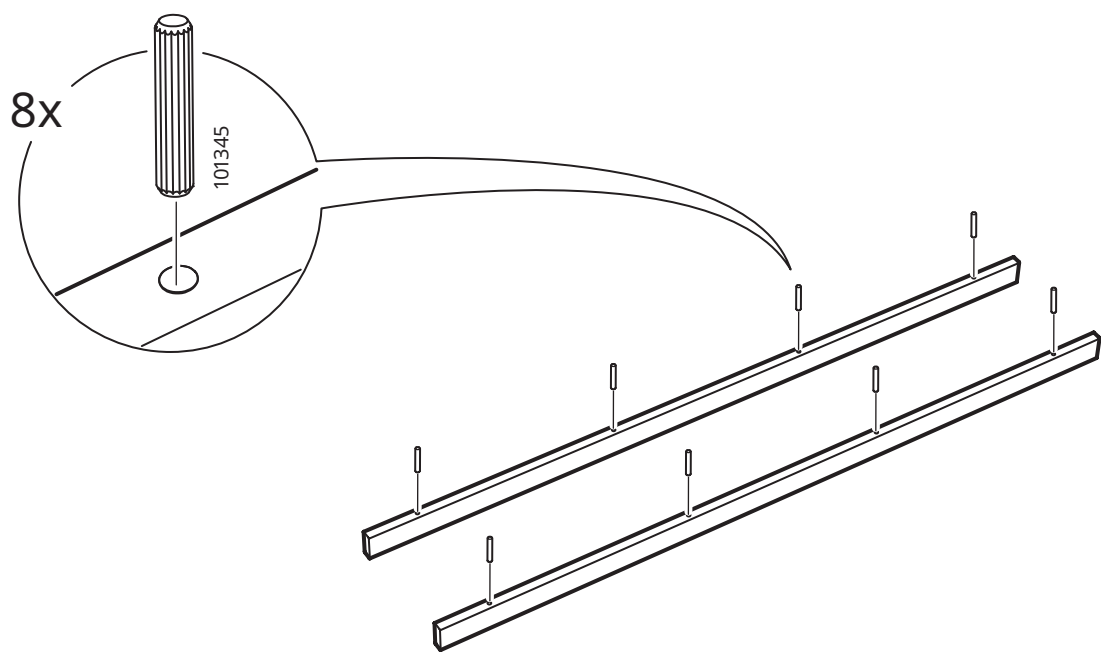 


17

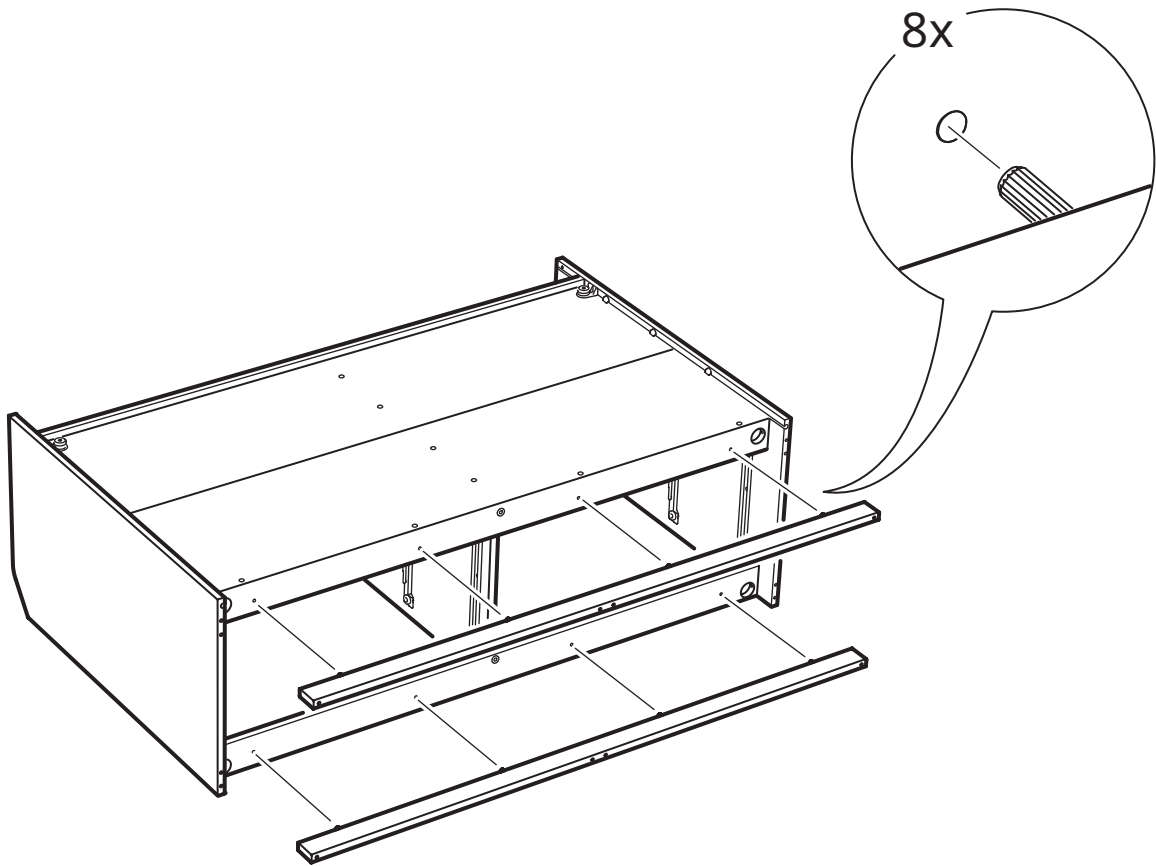 


18


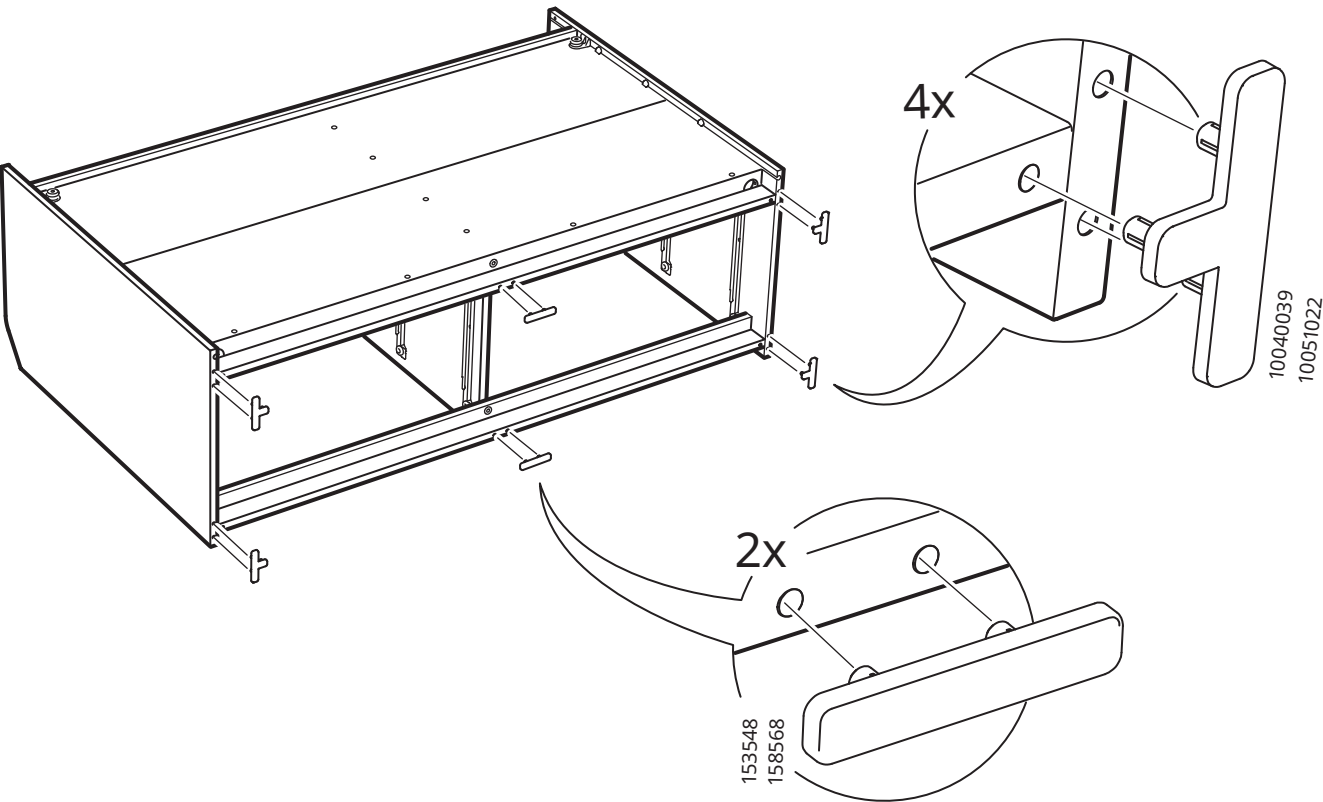 


19


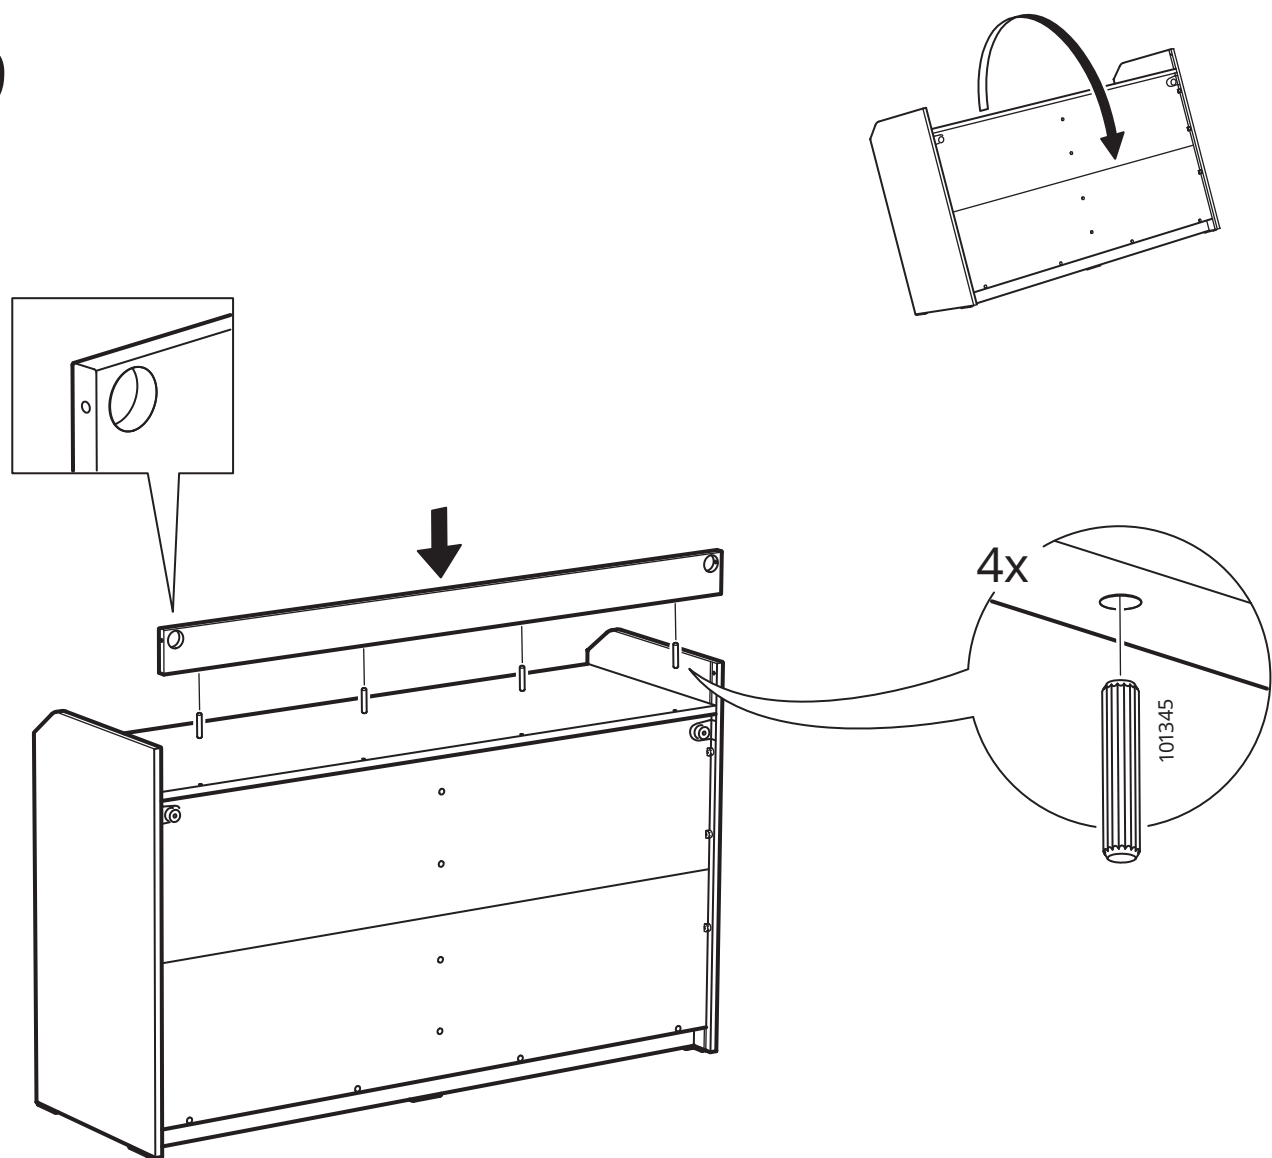 


20



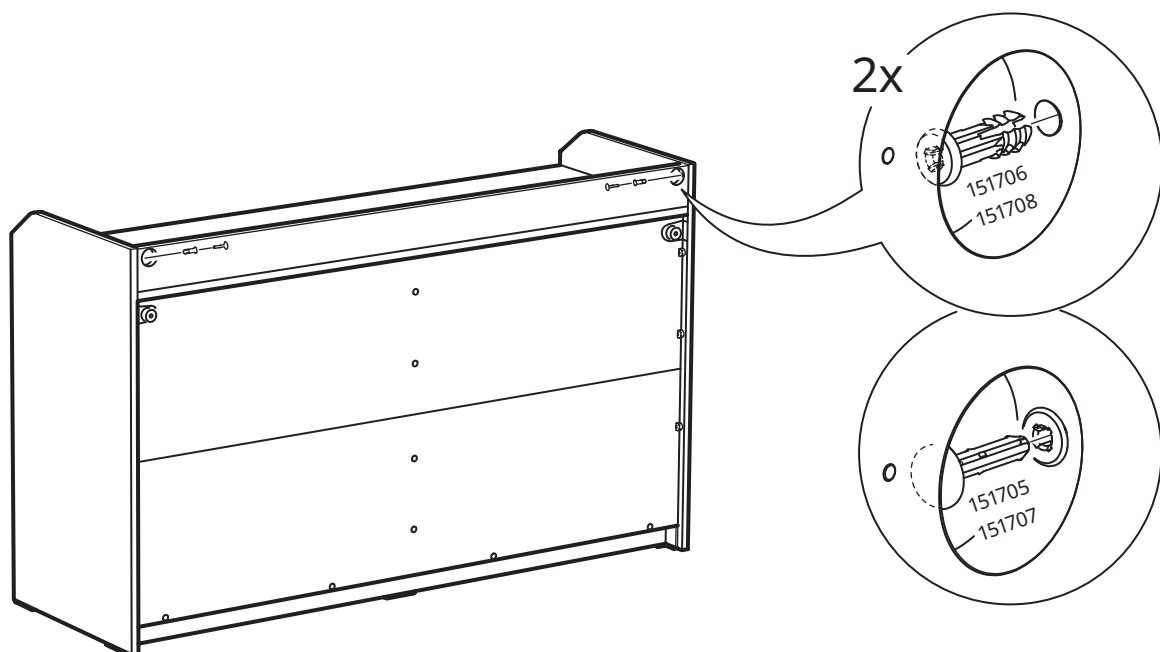 


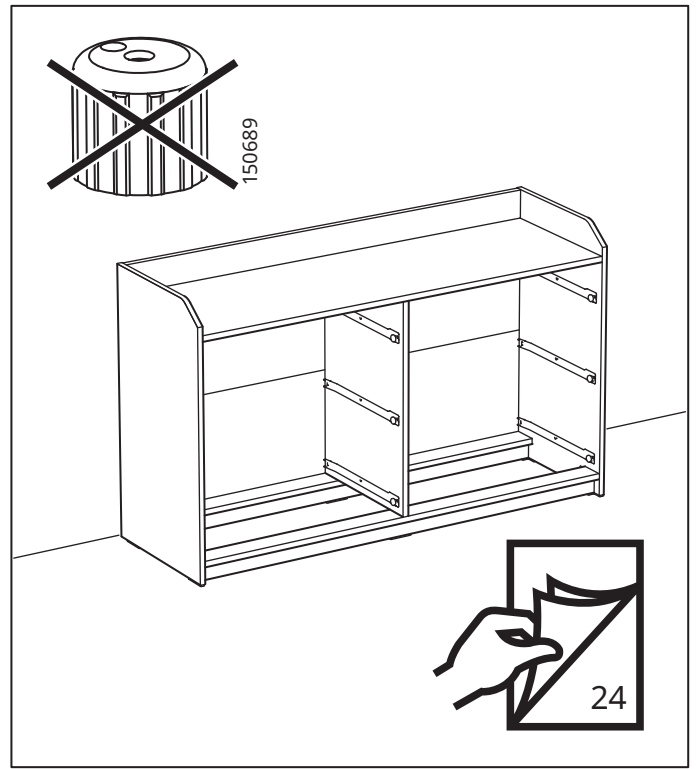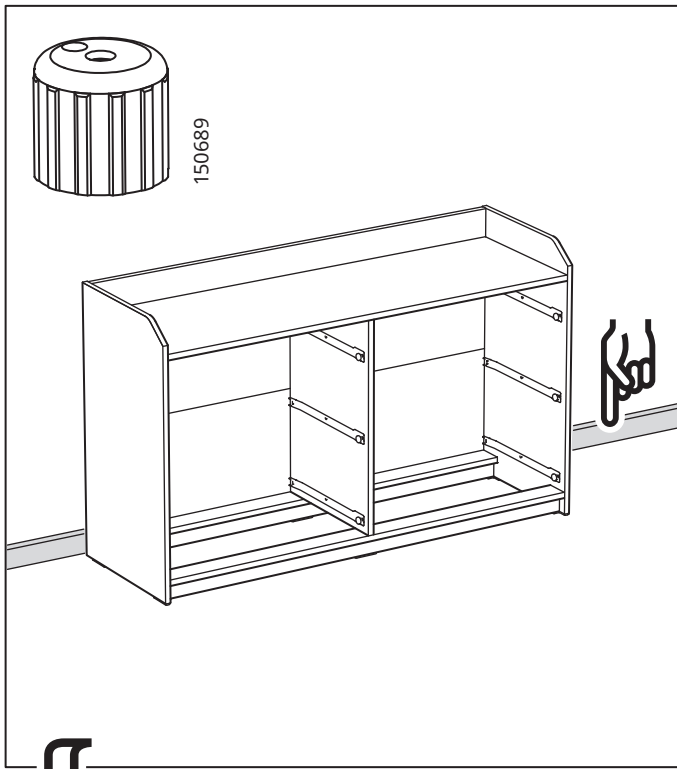  


21

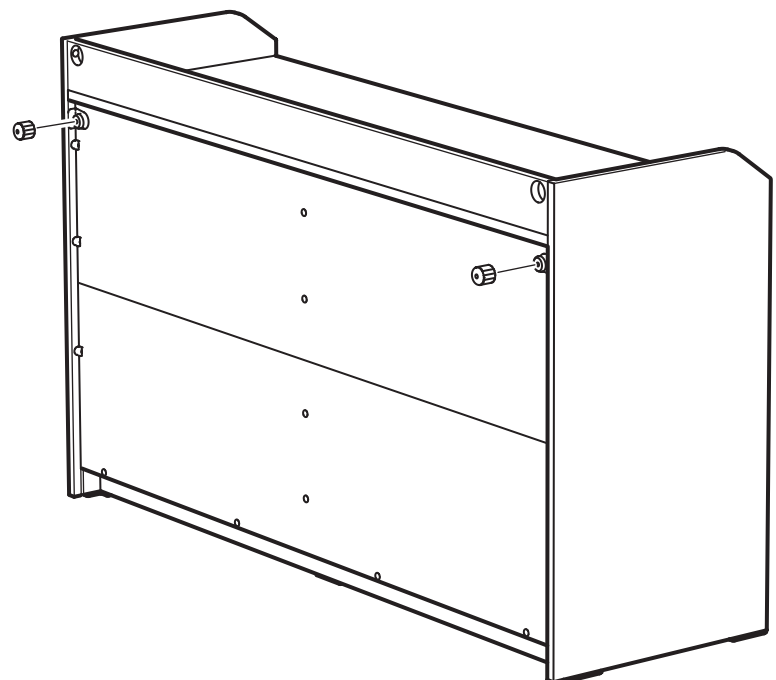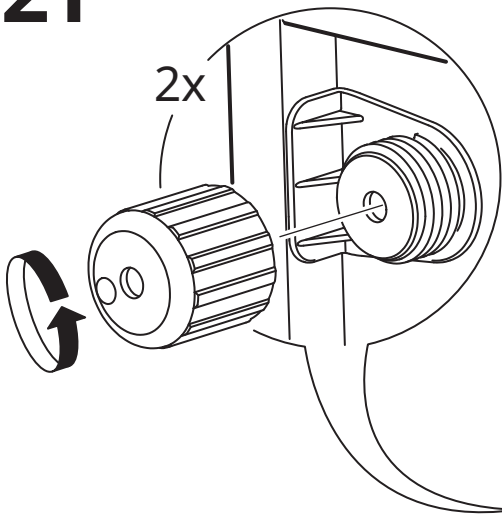  


22

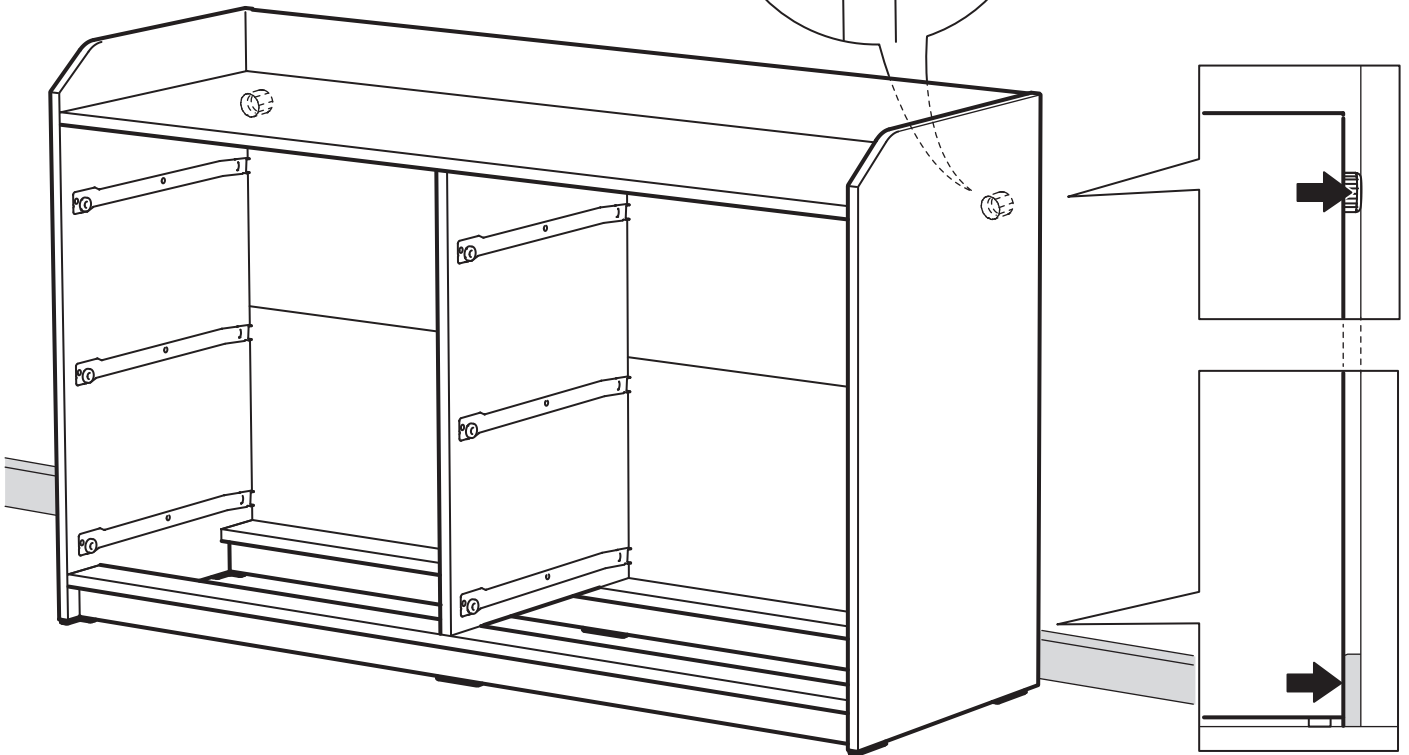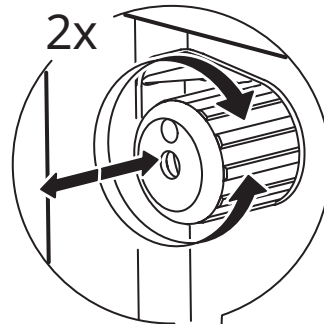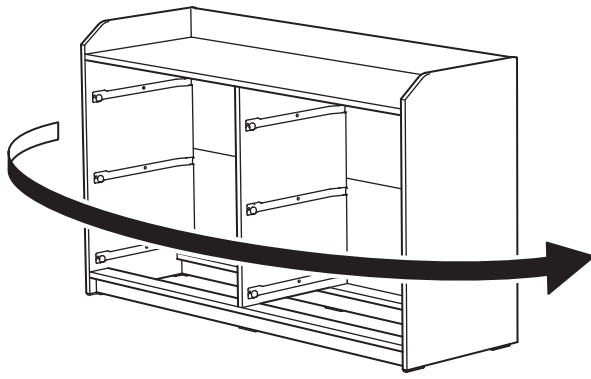   

23

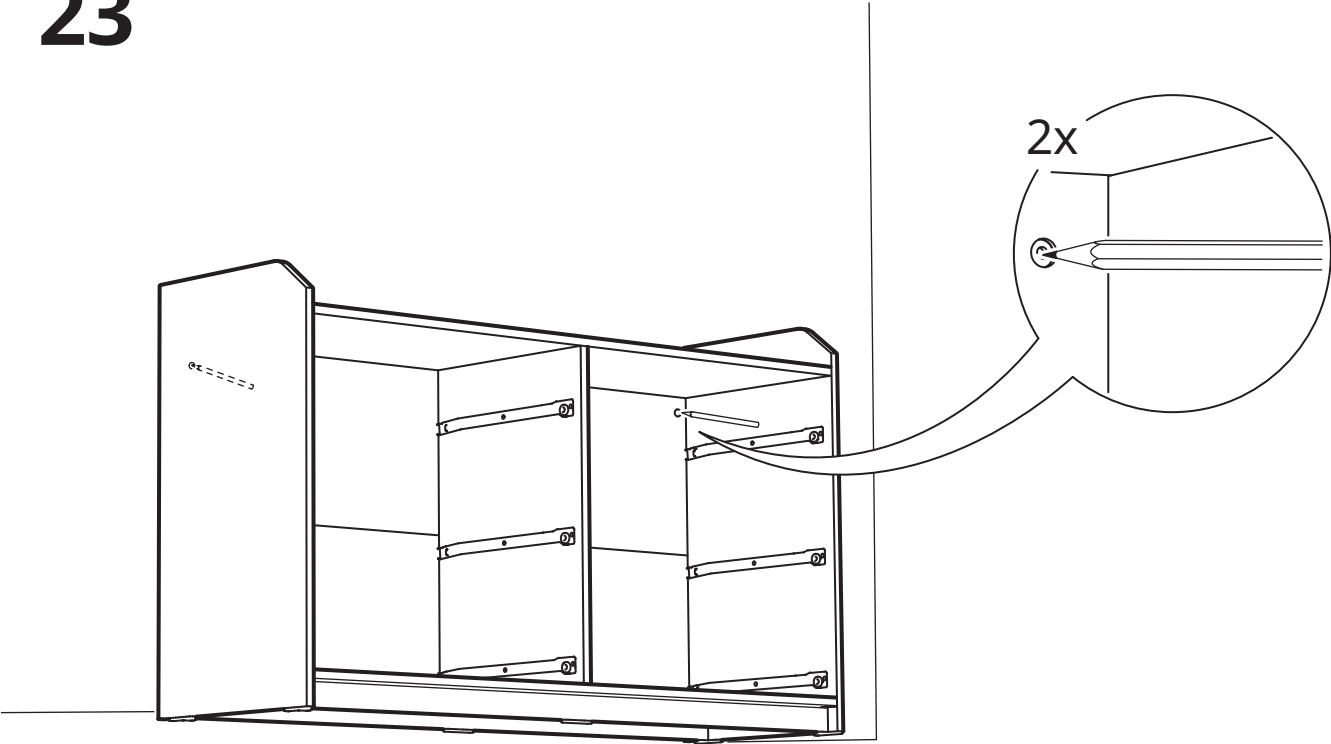 

24

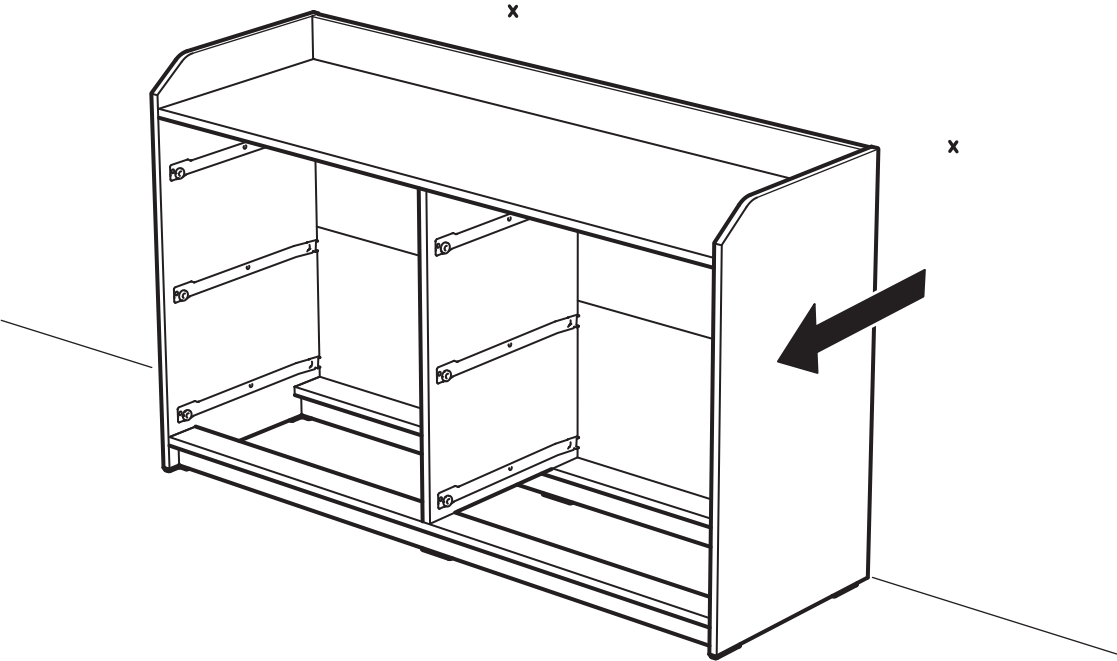 




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

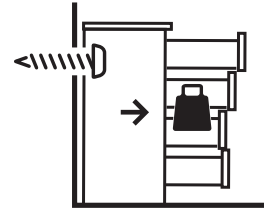

25

 
English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

עברית

הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.


A

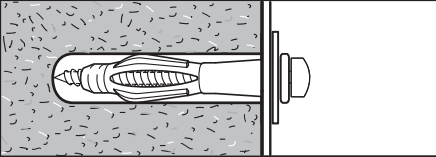


Ø 8 mm
(5/16")



 1




2

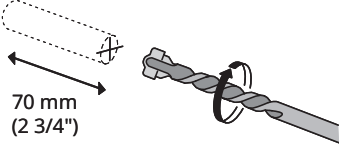 


70 mm
(2 3/4")

 3

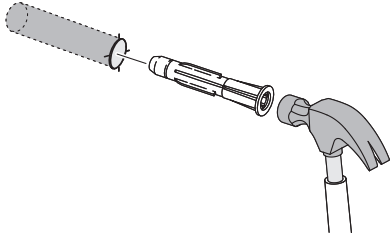


B

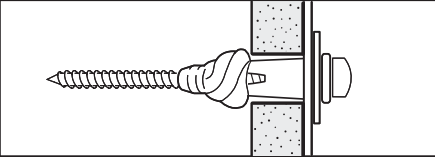 


Ø 8 mm
(5/16")



 1




2

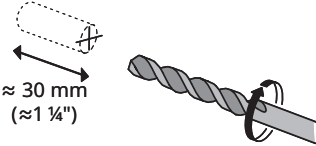 


≈ 30 mm
(≈ 1 1/4")

 3

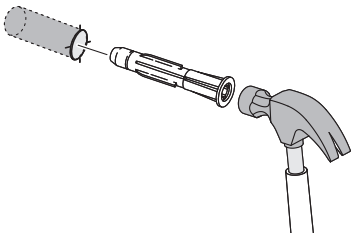


C

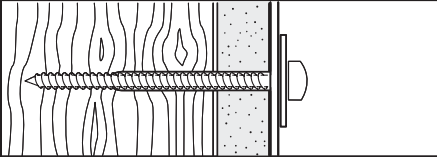 


Ø 3 mm
(1/8")



 1





2

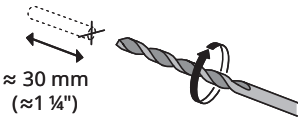 



≈ 30 mm
(≈ 1 1/4")

 
 
3



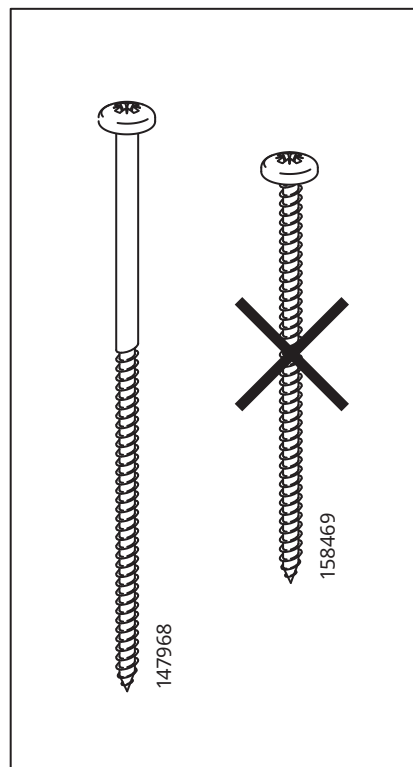
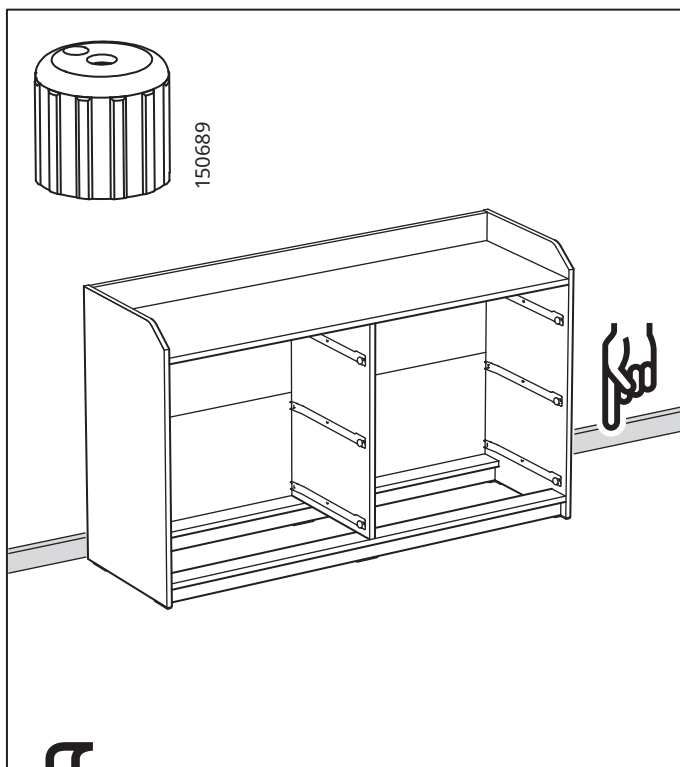





26

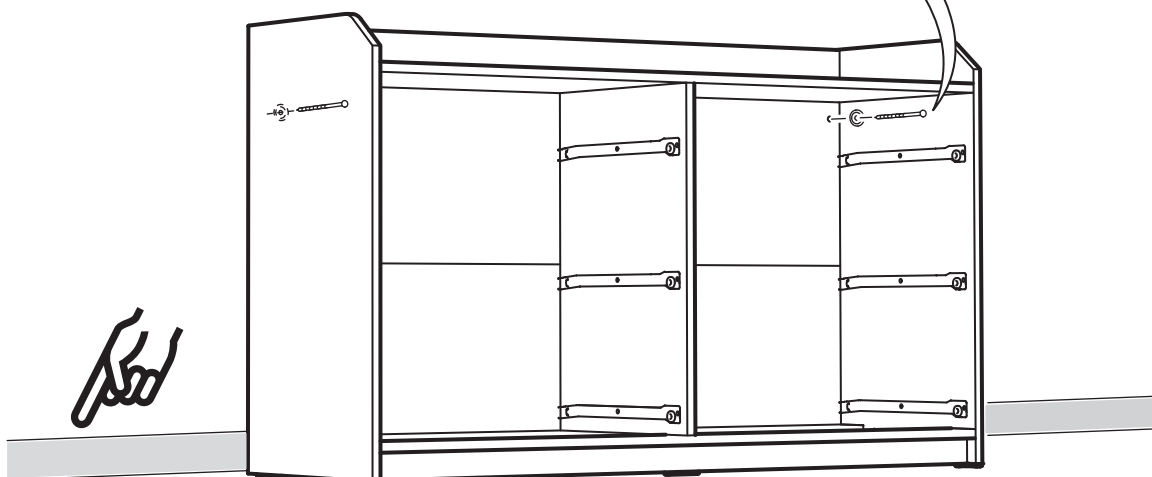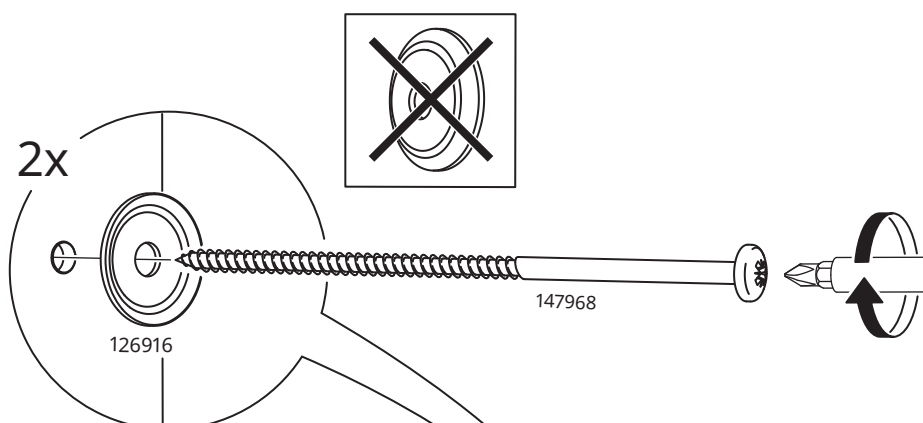  

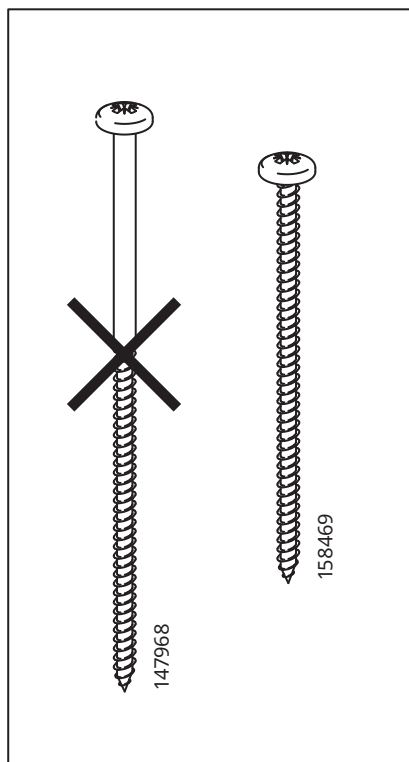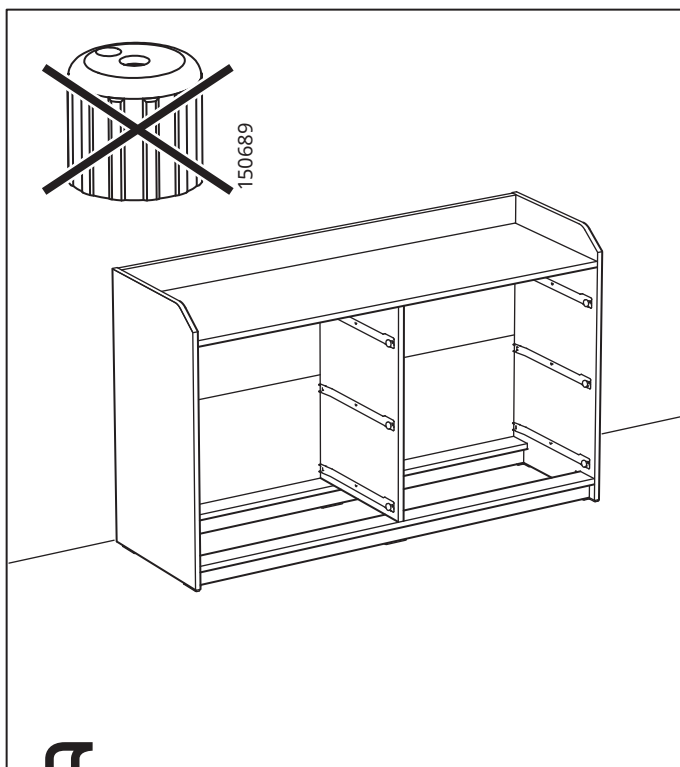  


26

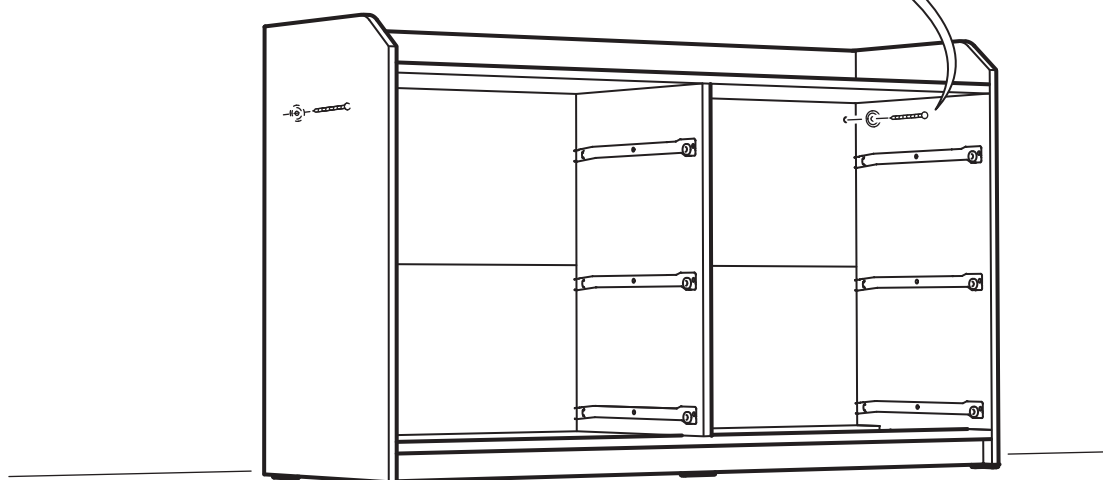 
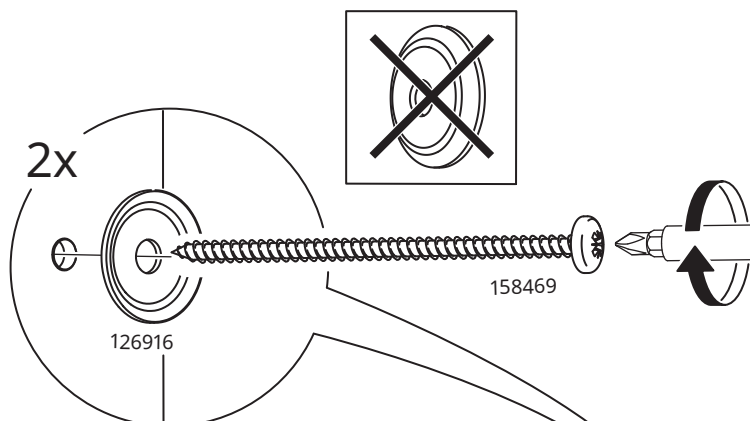 


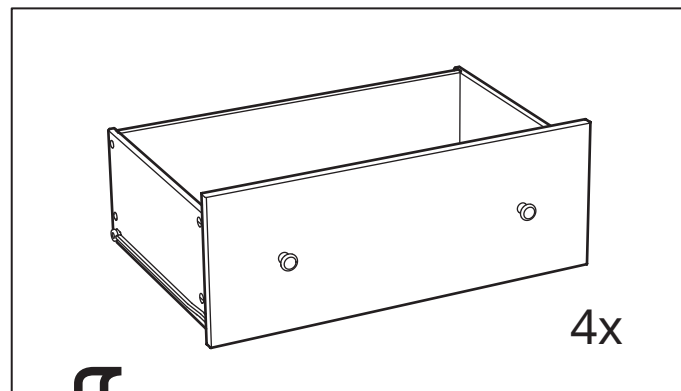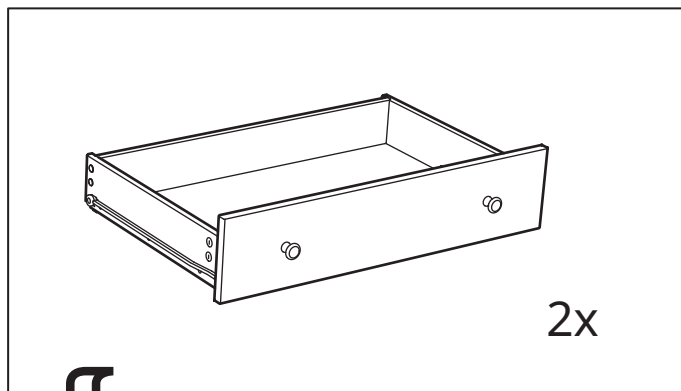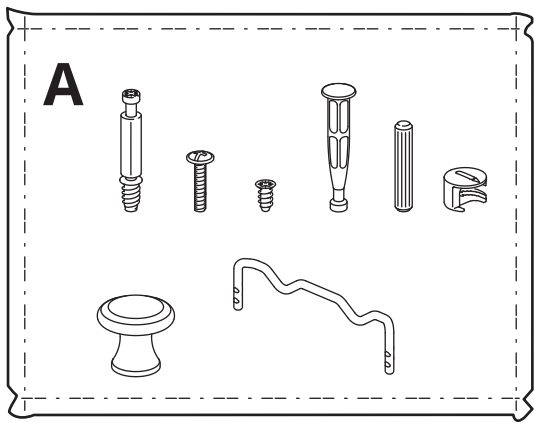   


27

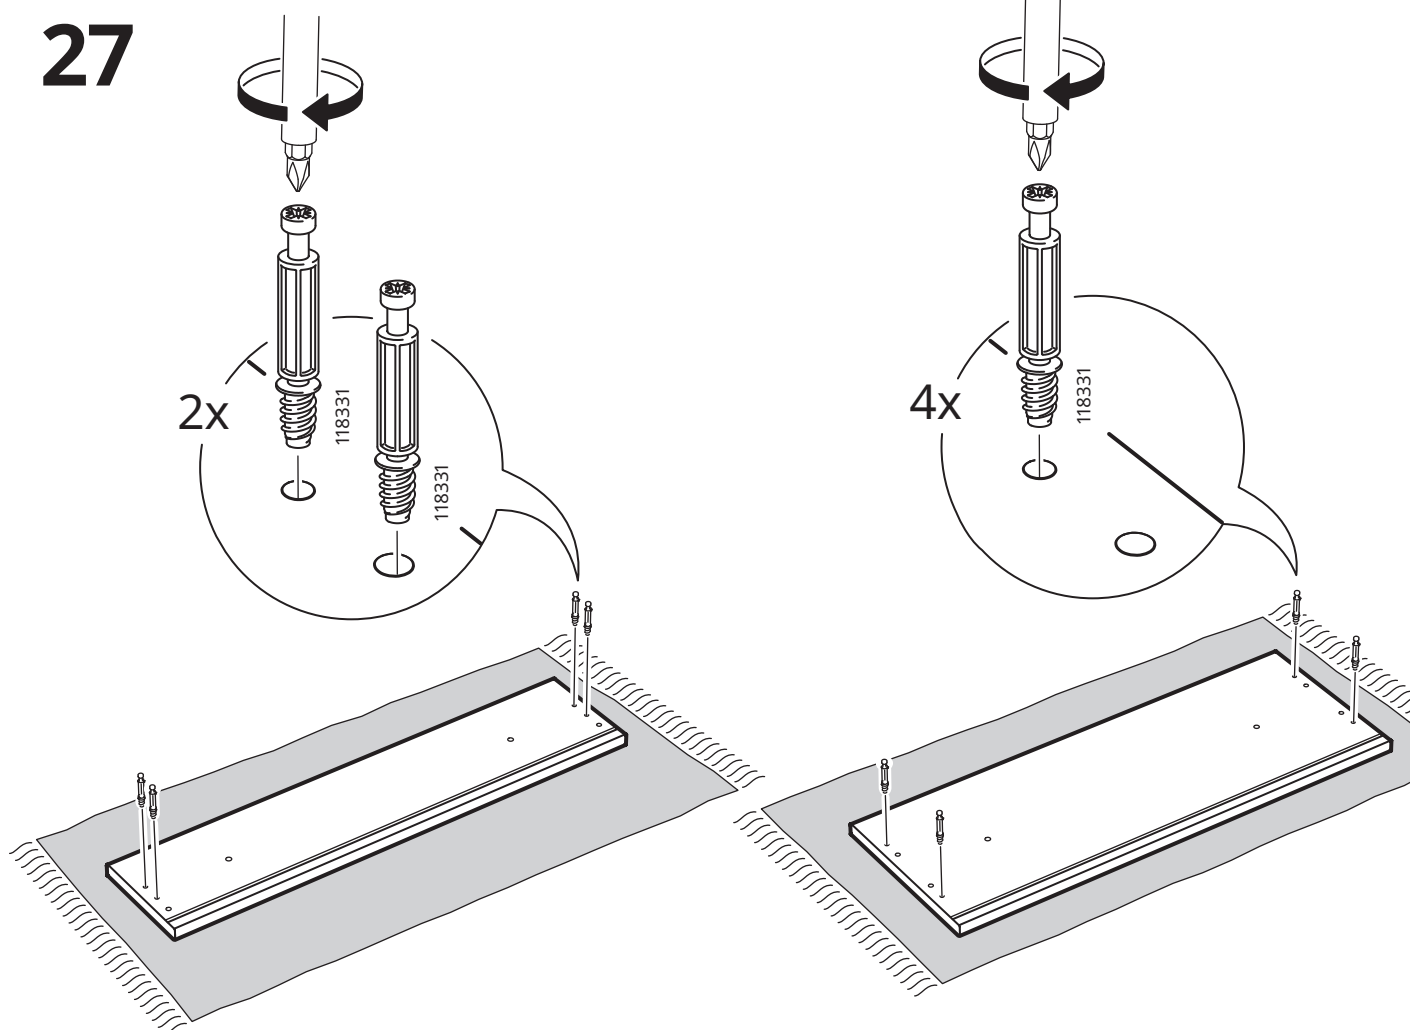 


28

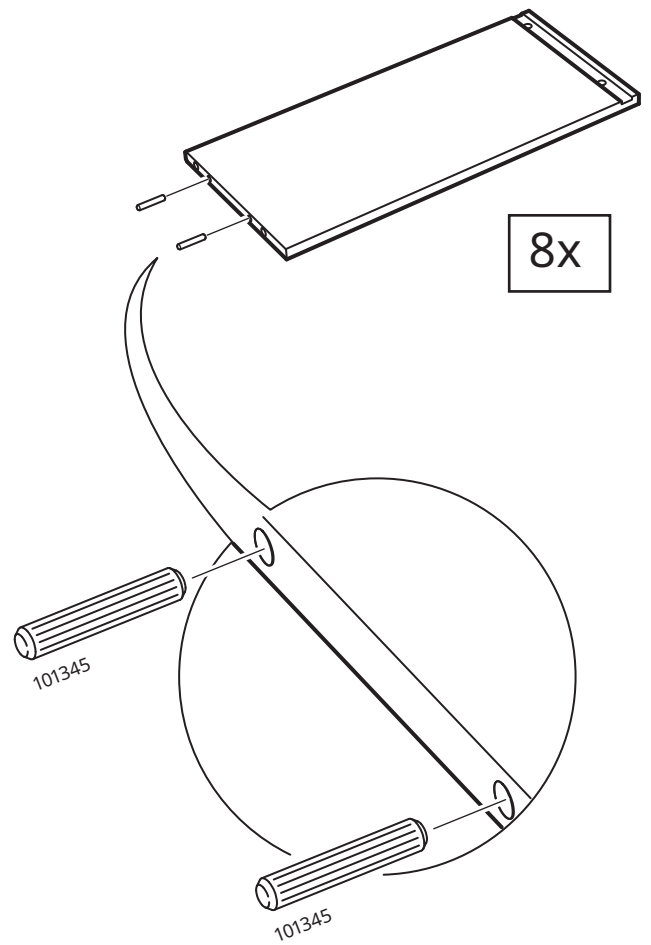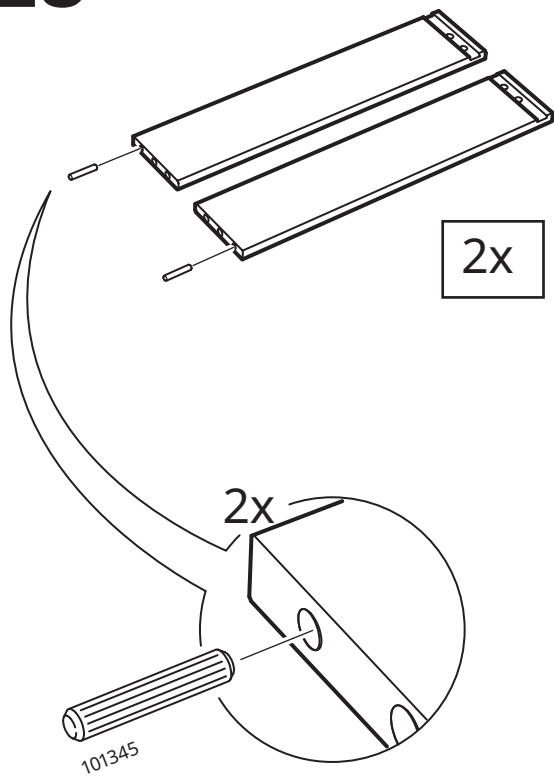  


29

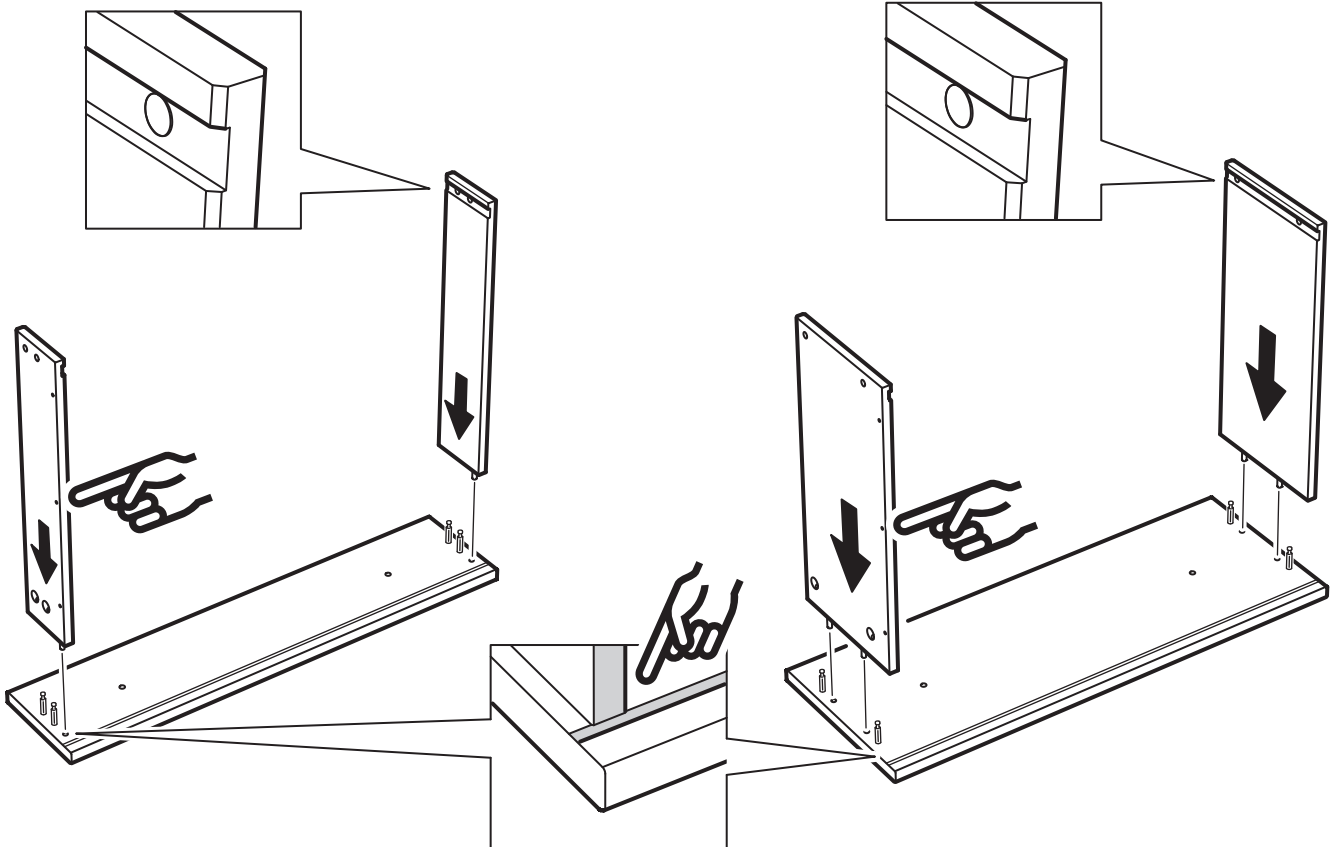 

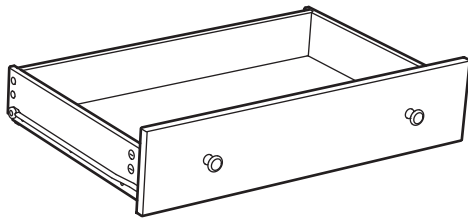 


2x

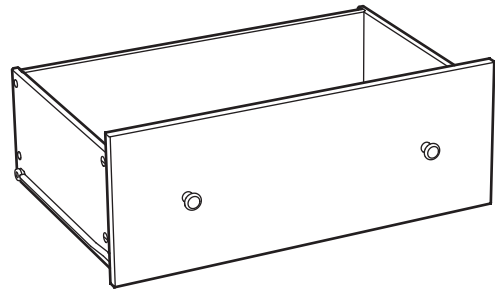 


4x



 
30

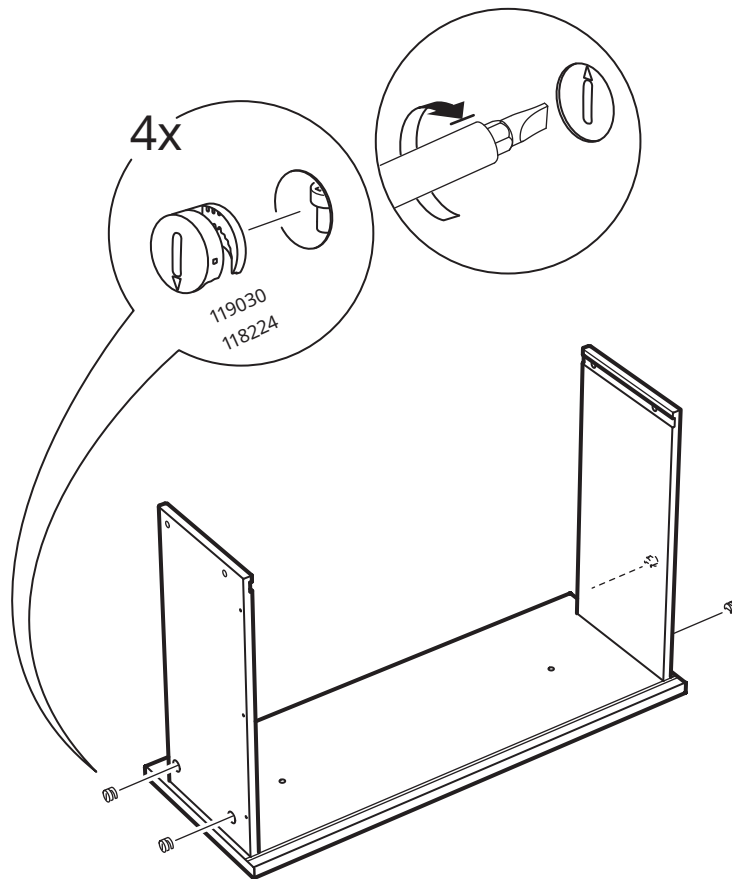


31

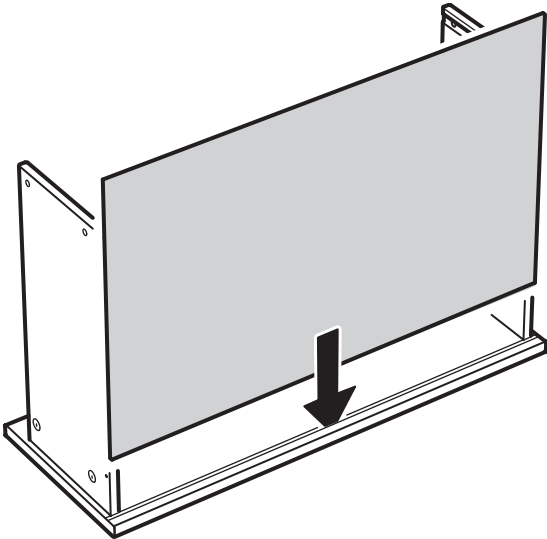 


32

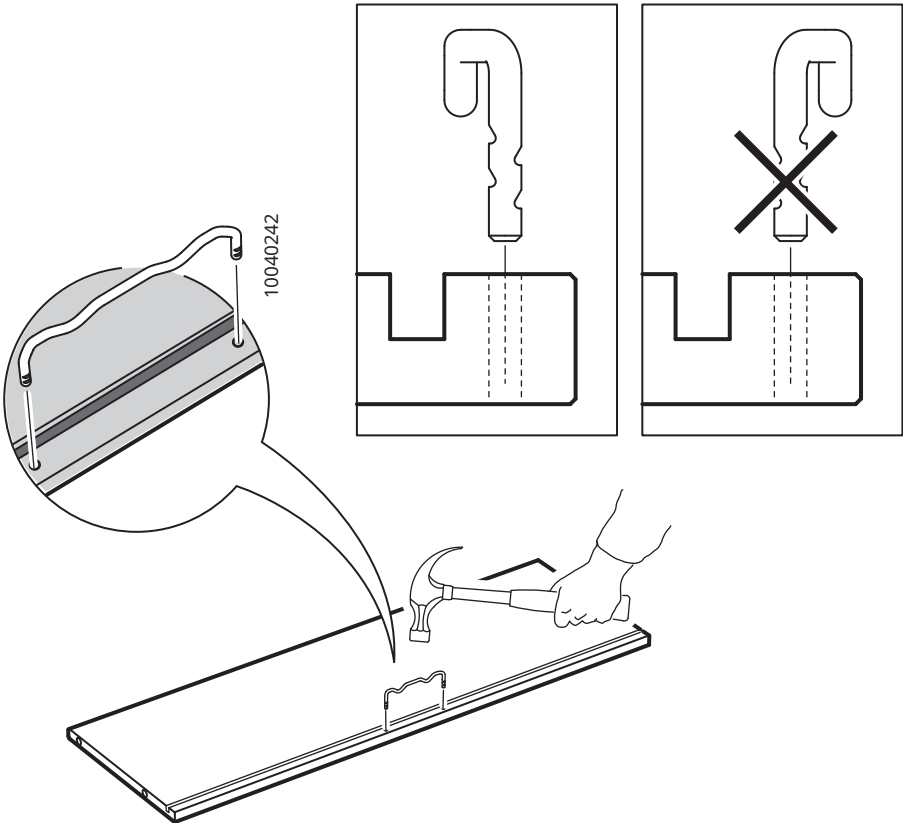 


33

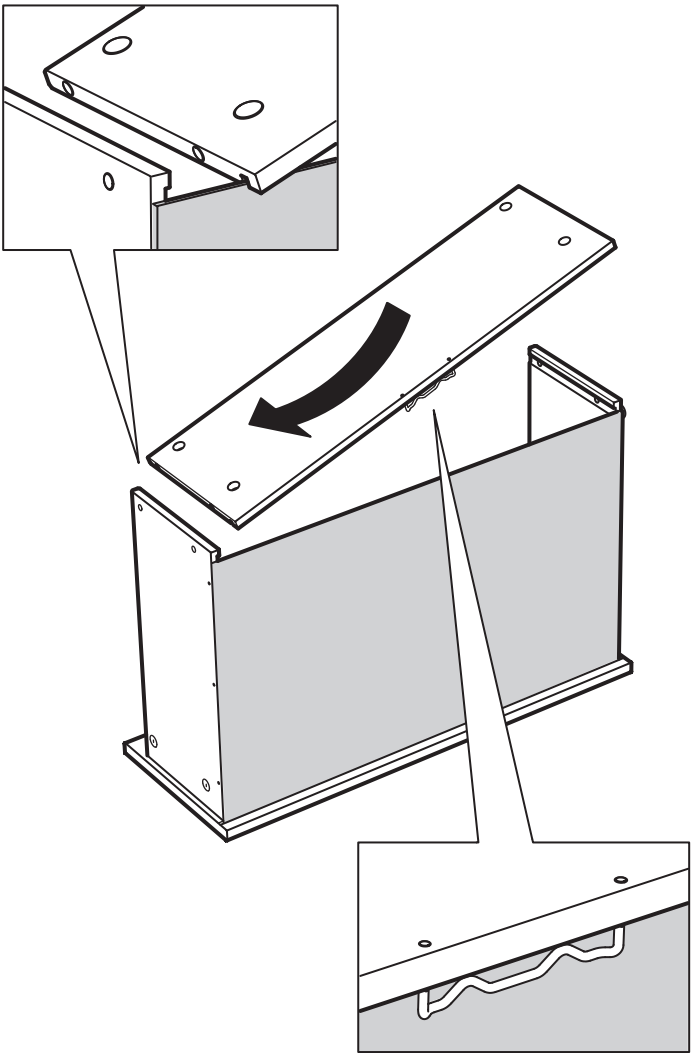 


34

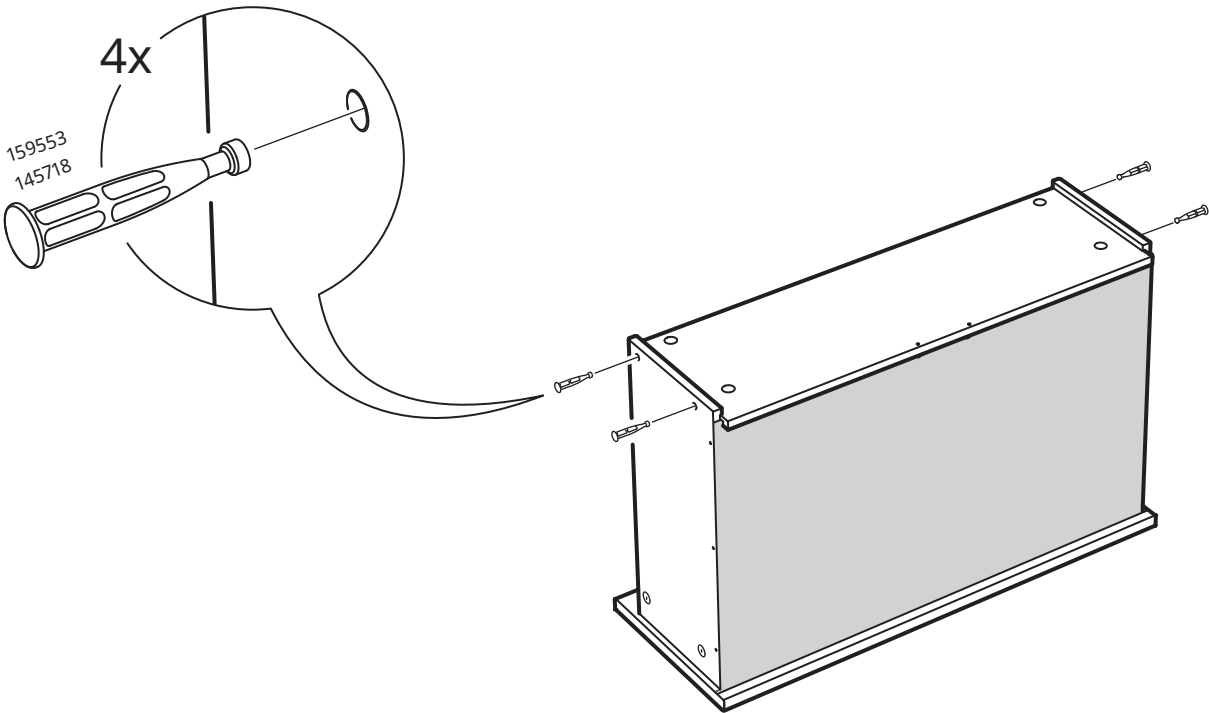 


35

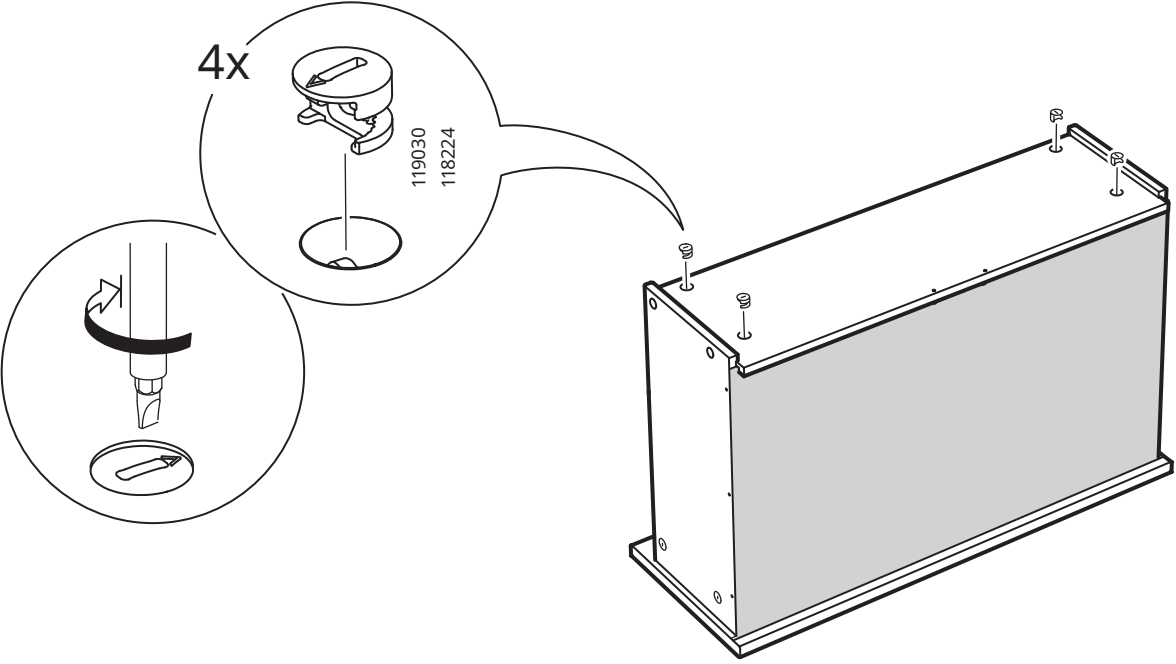 

36

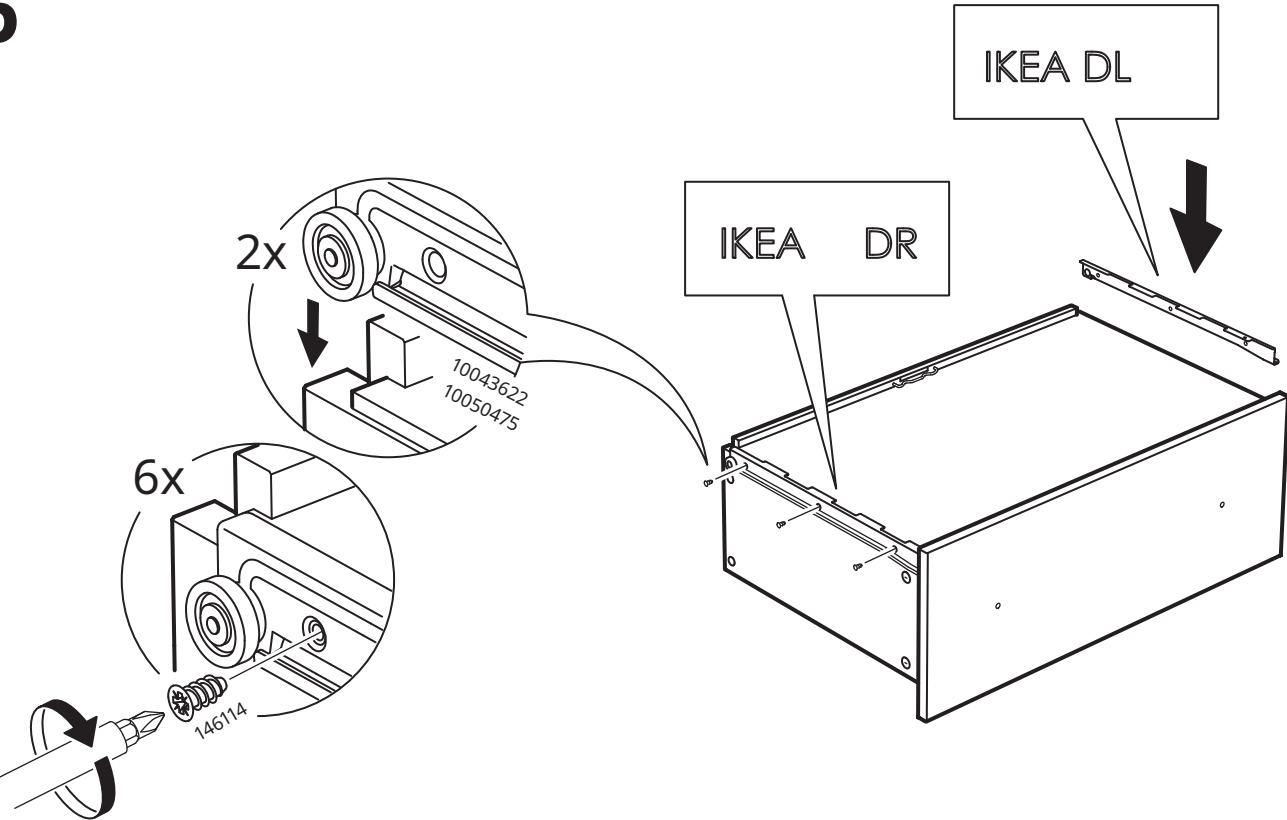 

37

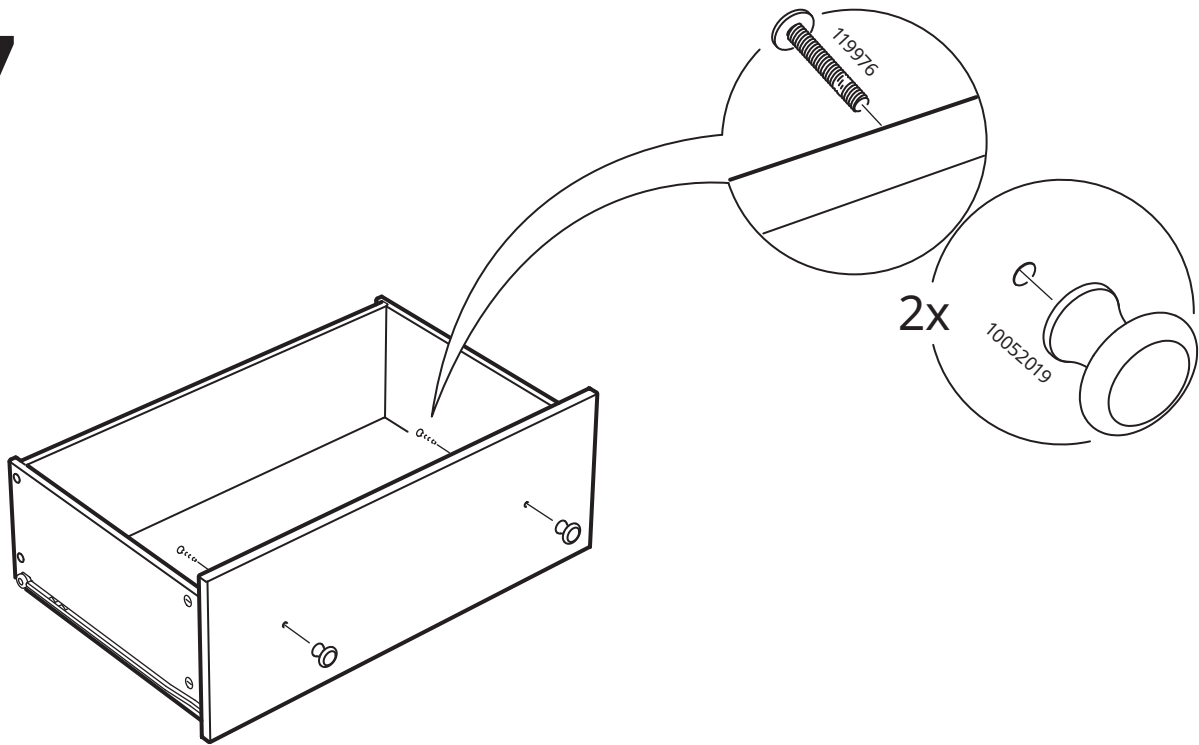 

38

