

HAUGA



Design and Quality
IKEA of Sweden



English

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, or shelves.

עברית

אזהרה

נפילת הרהיט עלולה לגרום לפגיעה גופנית חמורה או קטלנית.

יש לקבע את הרהיט לקיר באמצעות אבזרי הקיבוע המצורפים.

על-מנת למזער את סכנת הפגיעה הגופנית או המוות מנפילת רהיטים:

מקמו את הפריטים הכבדים ביותר במגירה התחתונה.

 
 
 
הימנעו מלהניח טלוויזיות או פריטים כבדים אחרים על מוצר זה.

 
 
אין לאפשר לילדים לטפס על המגירות, הדלתות או המדפים.







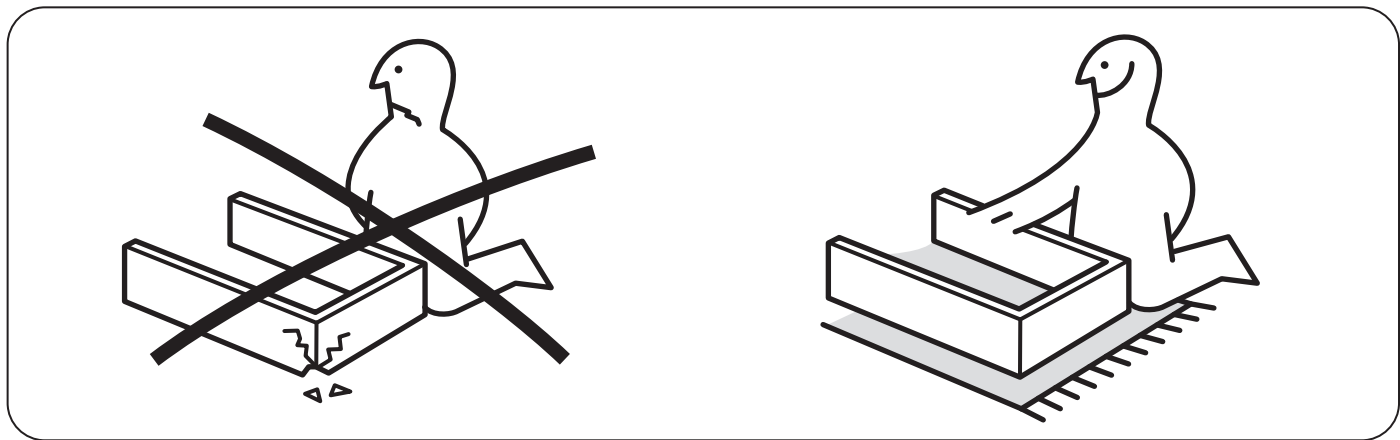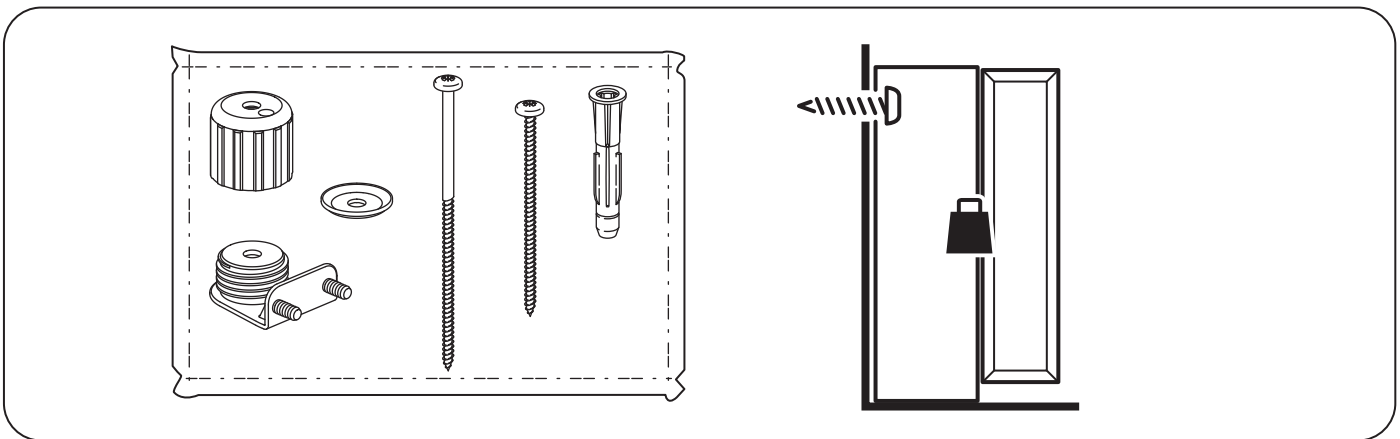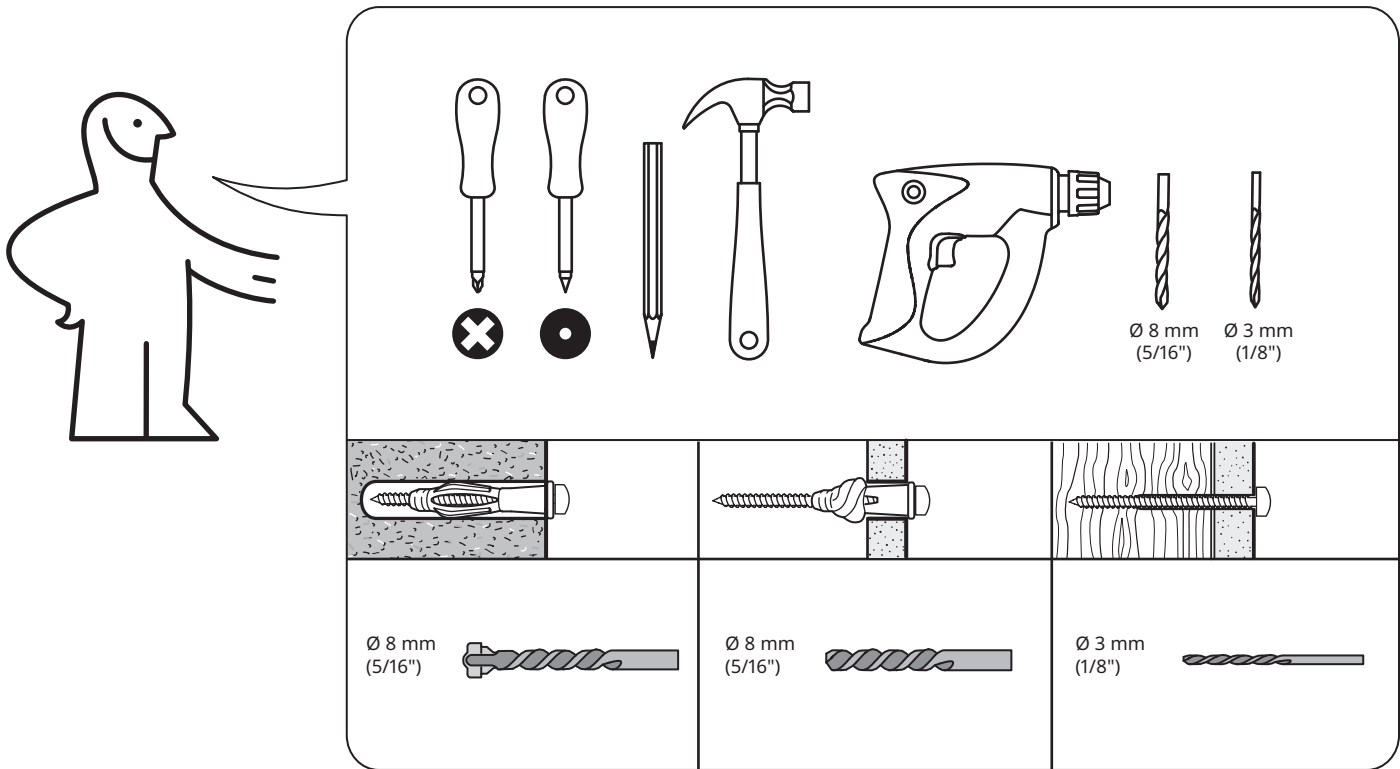

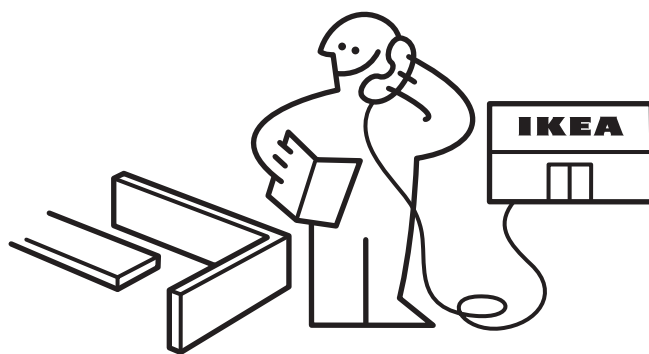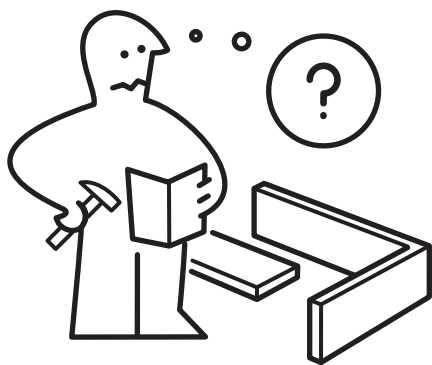


1




151708

 10x



151707

 10x

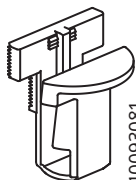

10093081

8x



10093082

8x



 
101345

9x




10051650
10051660

24x

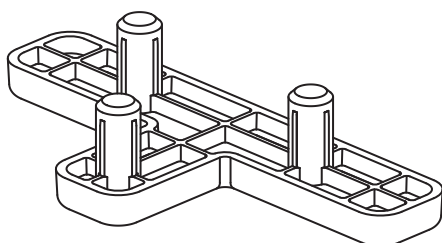

10040039
10051022

 4x

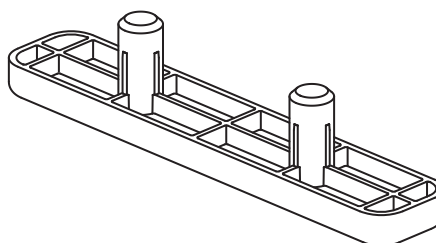


153548
158568

2x




 2



192158
192166

 20x

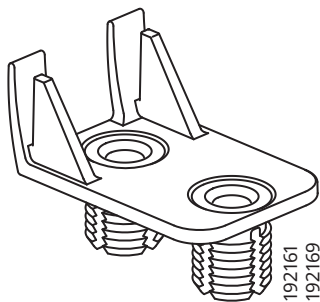


192161
192169

2x




115339

 8x




119976

 2x

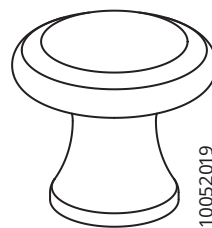


10052019

 2x

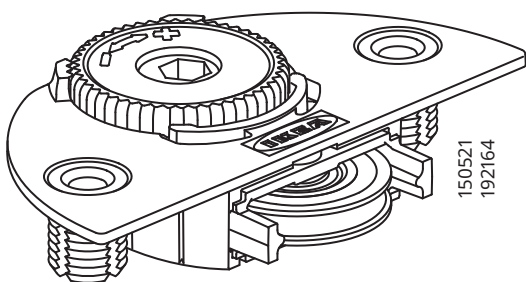


150521
192164

 4x

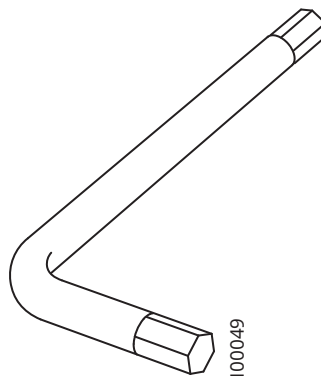


100049

 1x

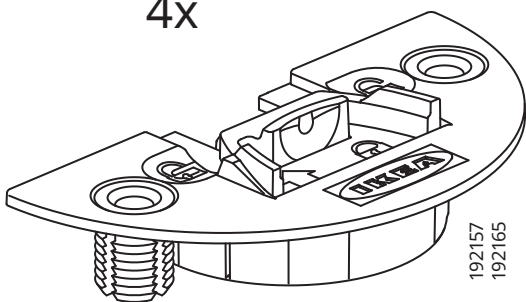

192157
192165

 4x

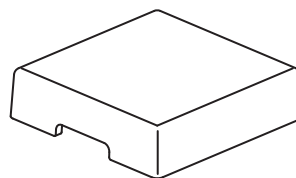


133303
190586


2x



 
26

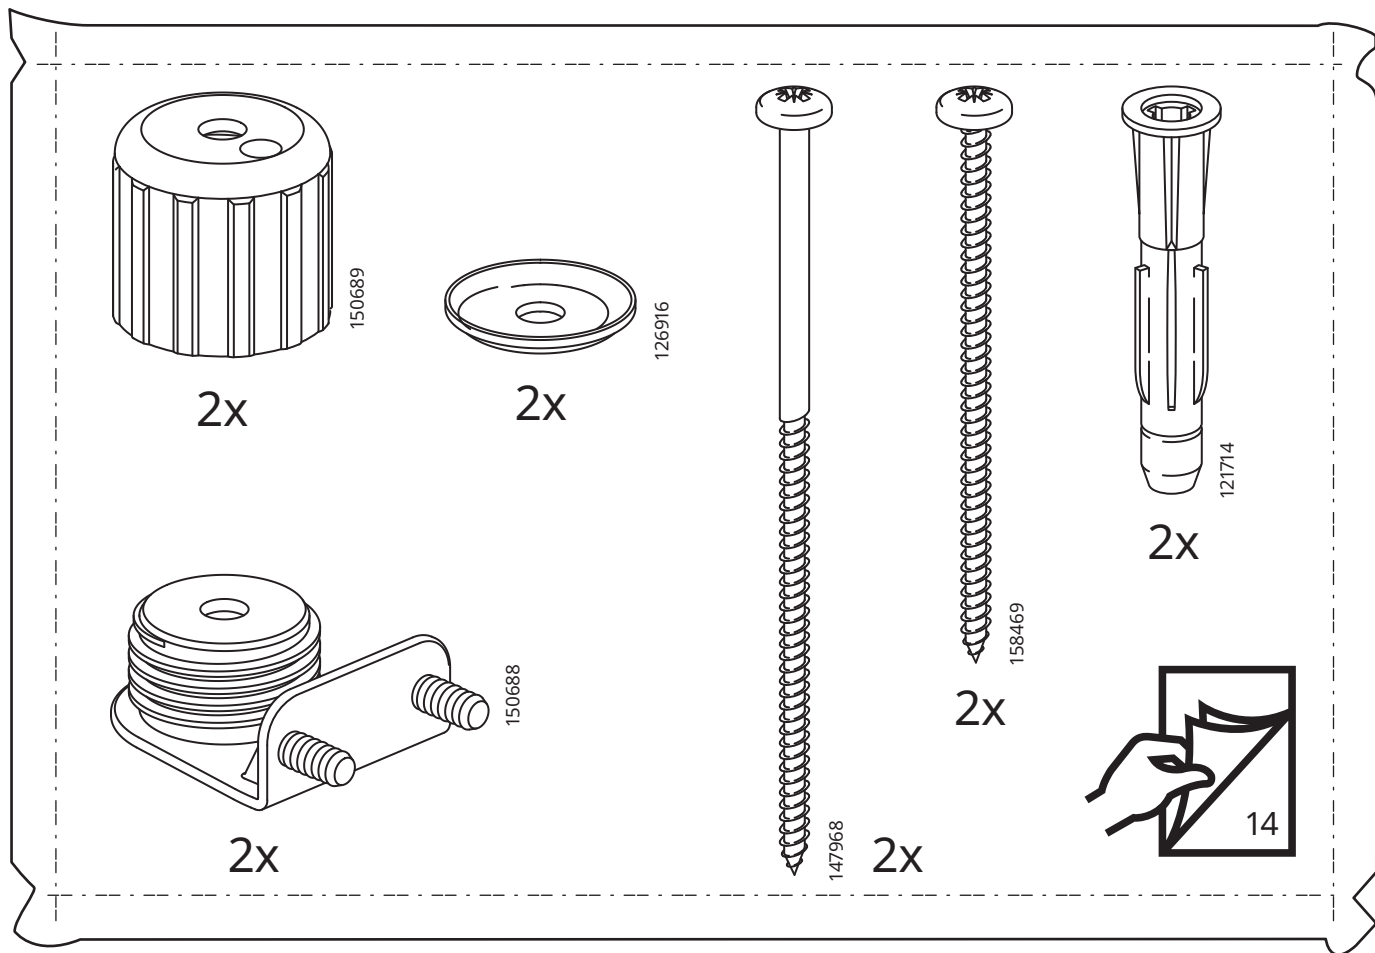


327495

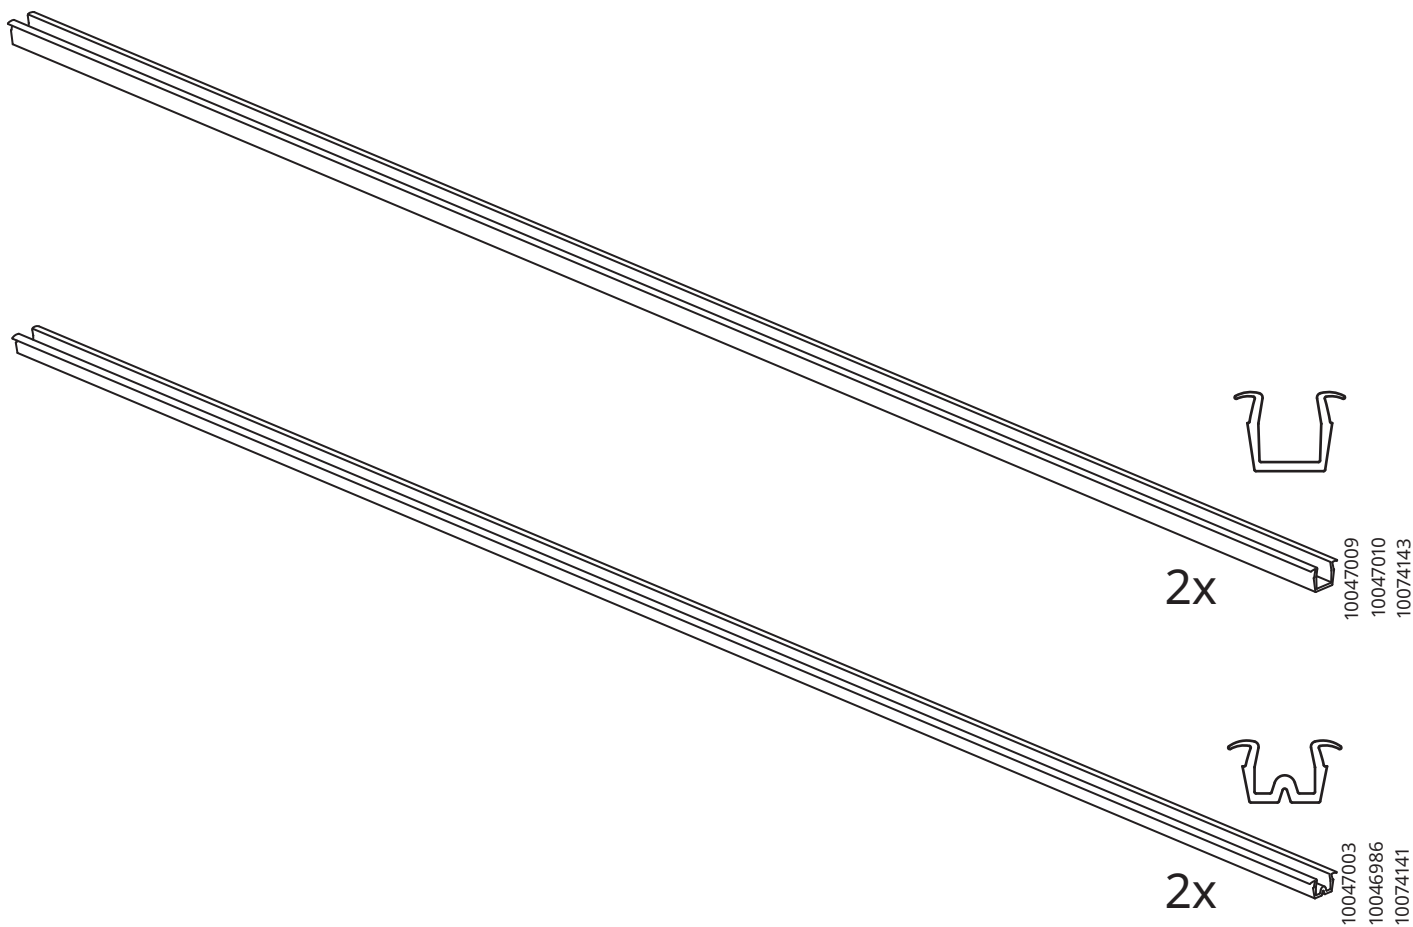 


1

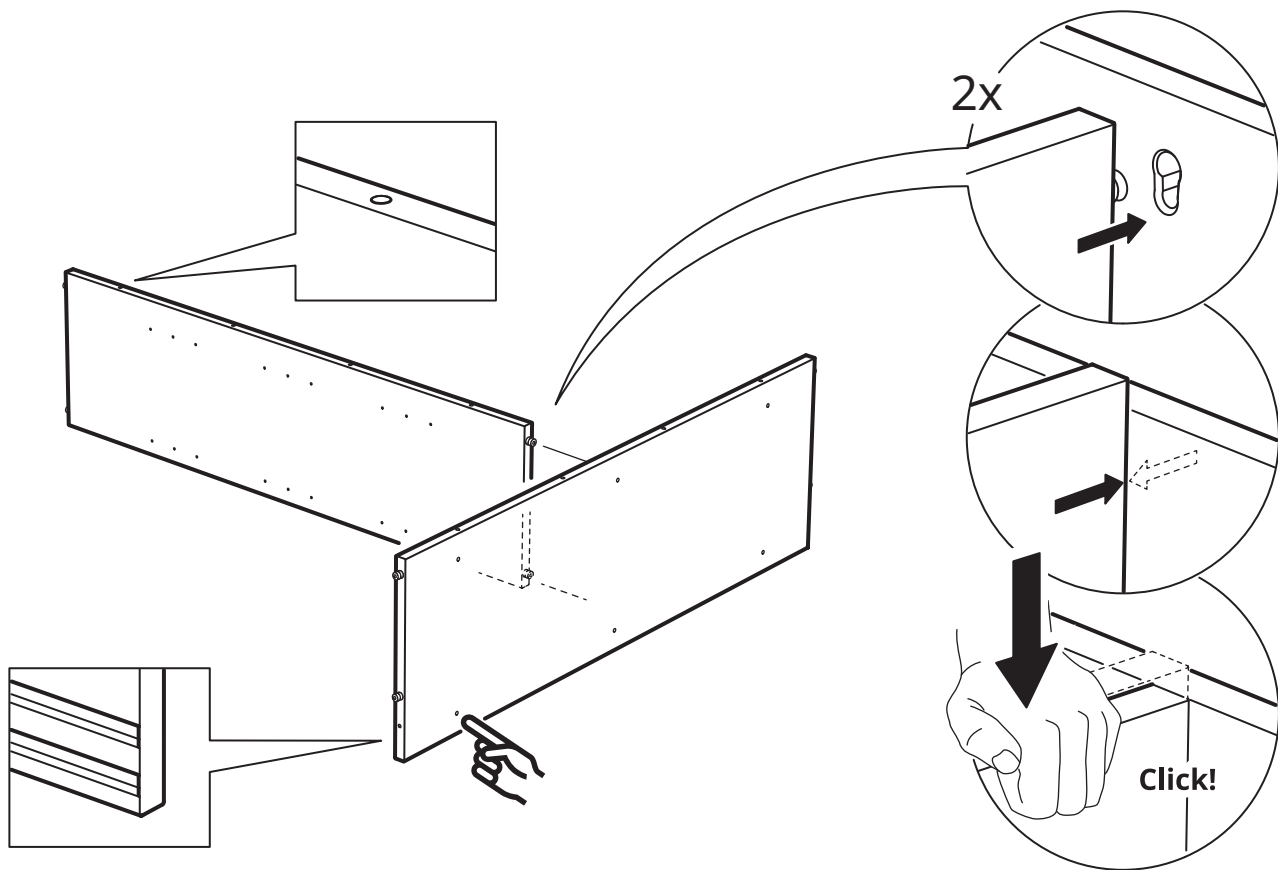 


2

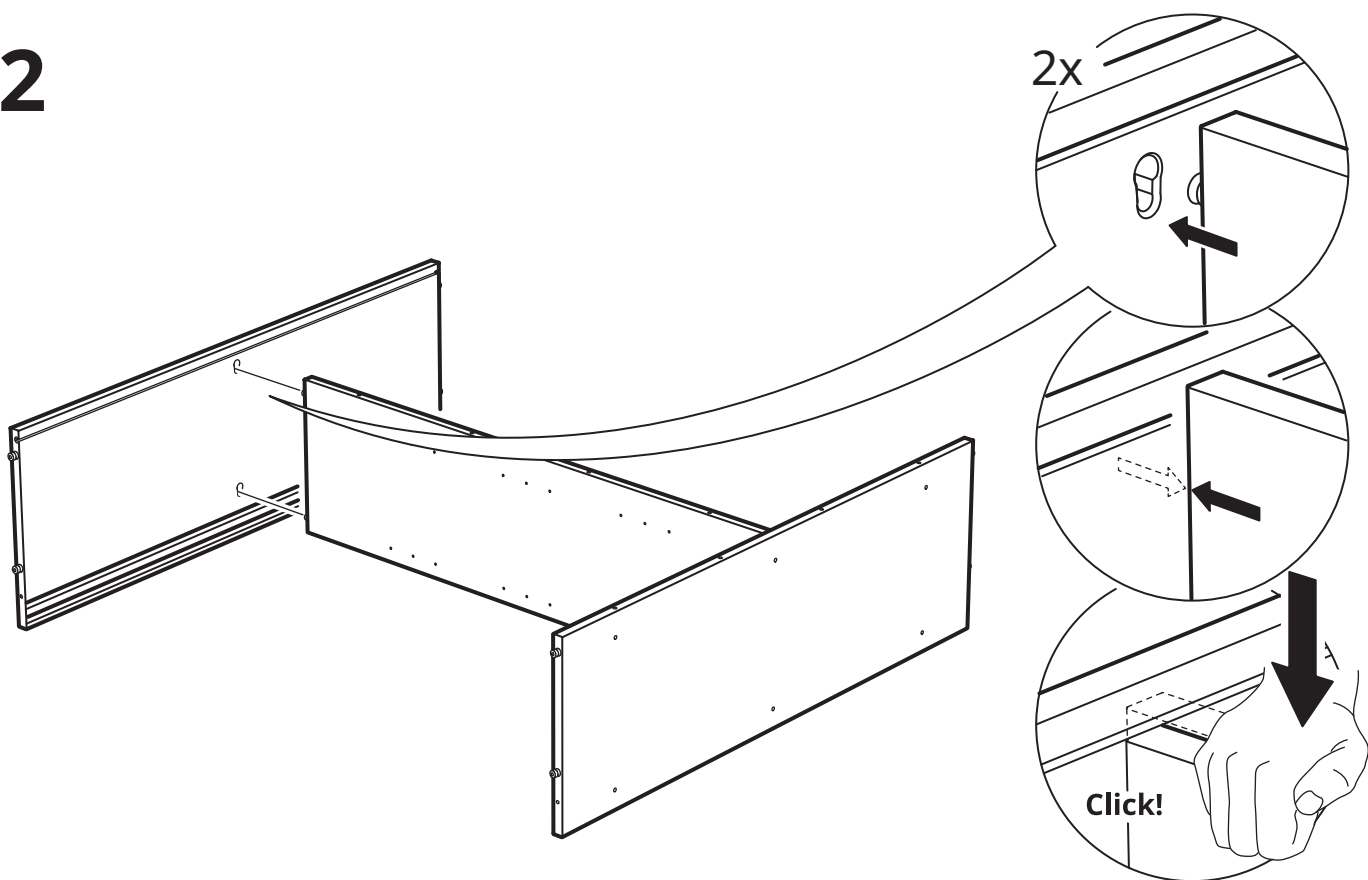 


3

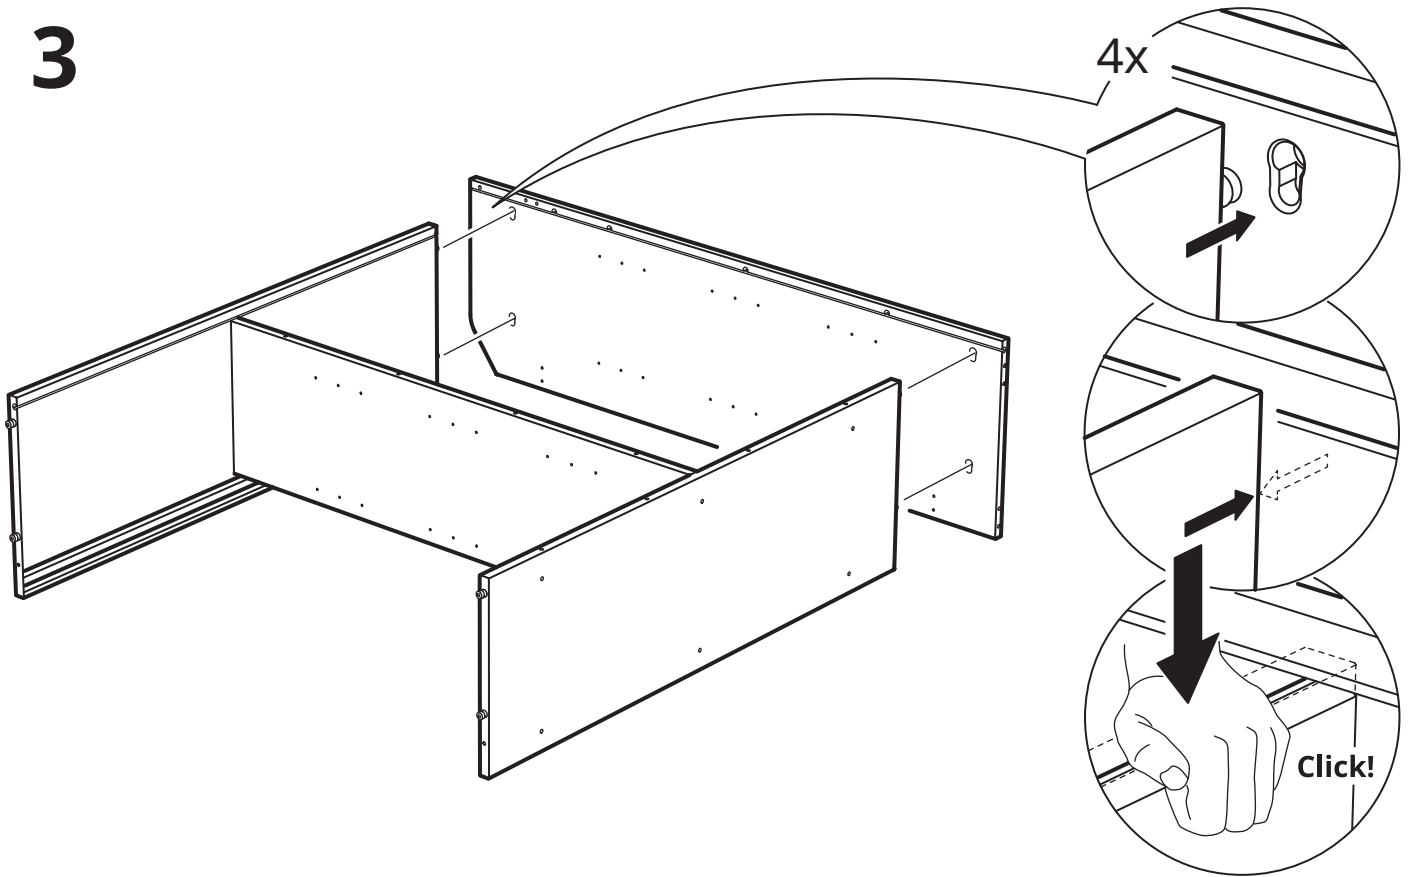 


4

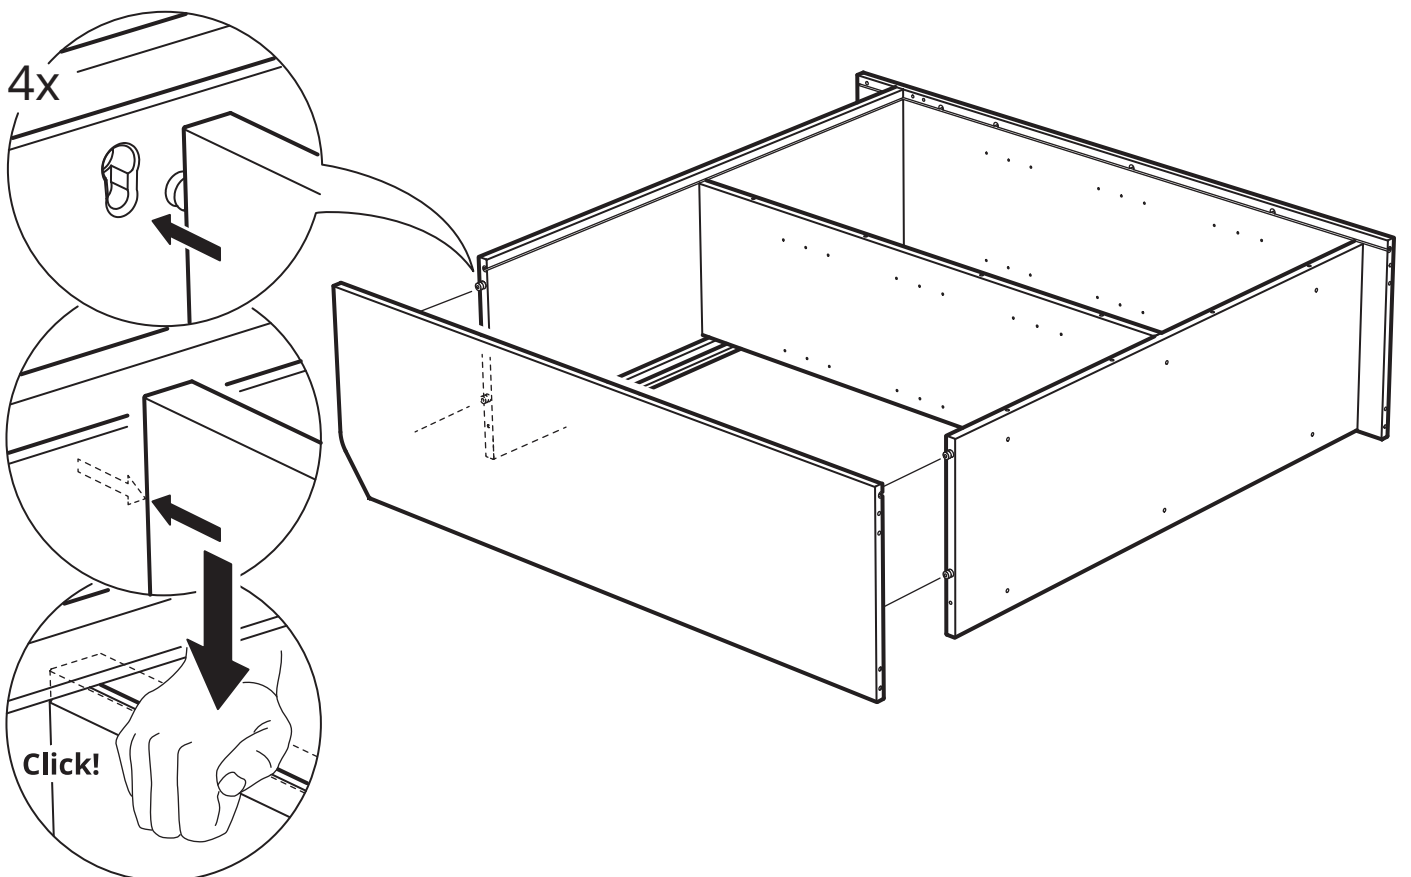 


5

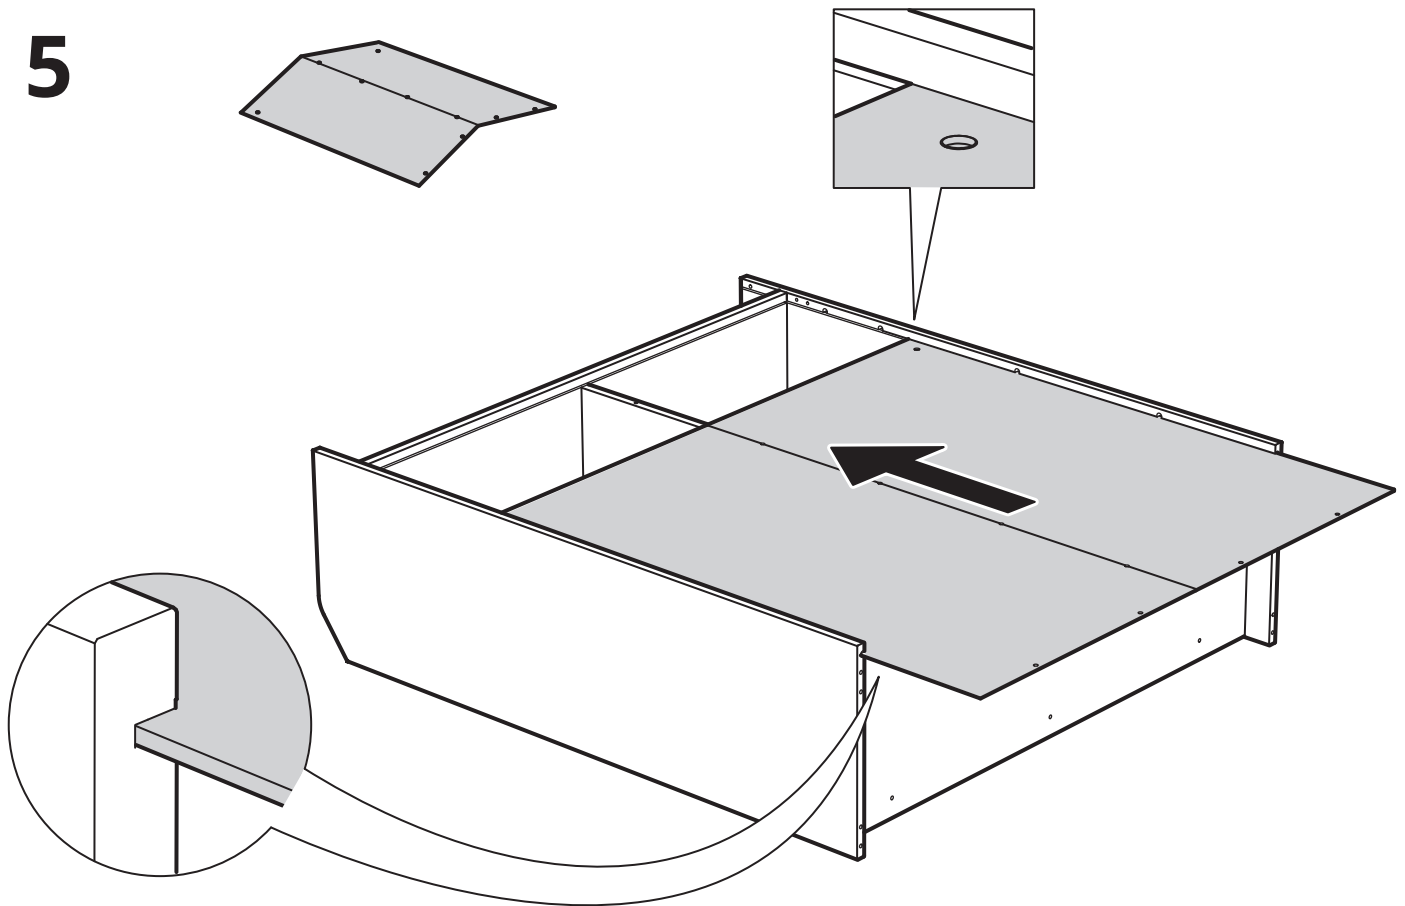 


6

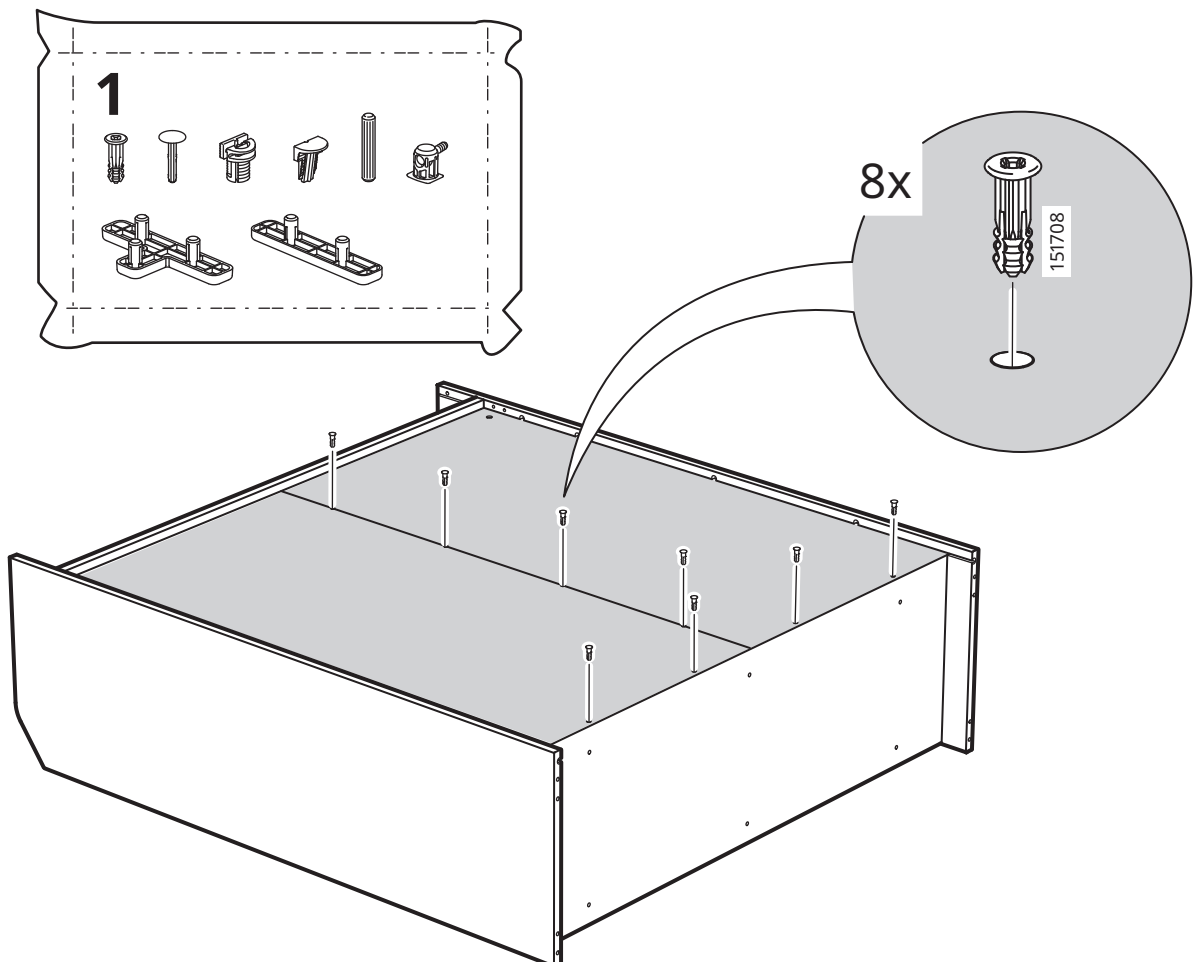 




7

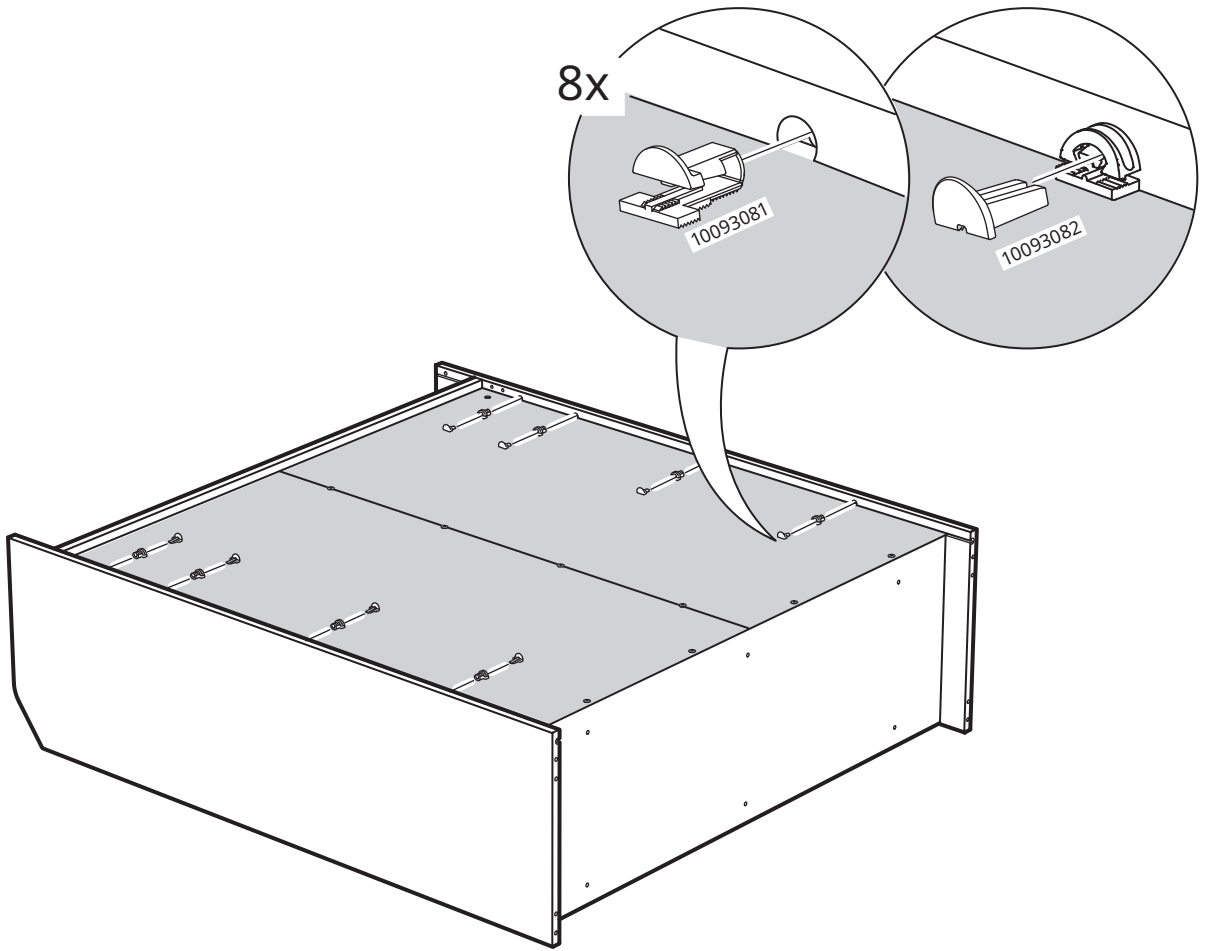 



8

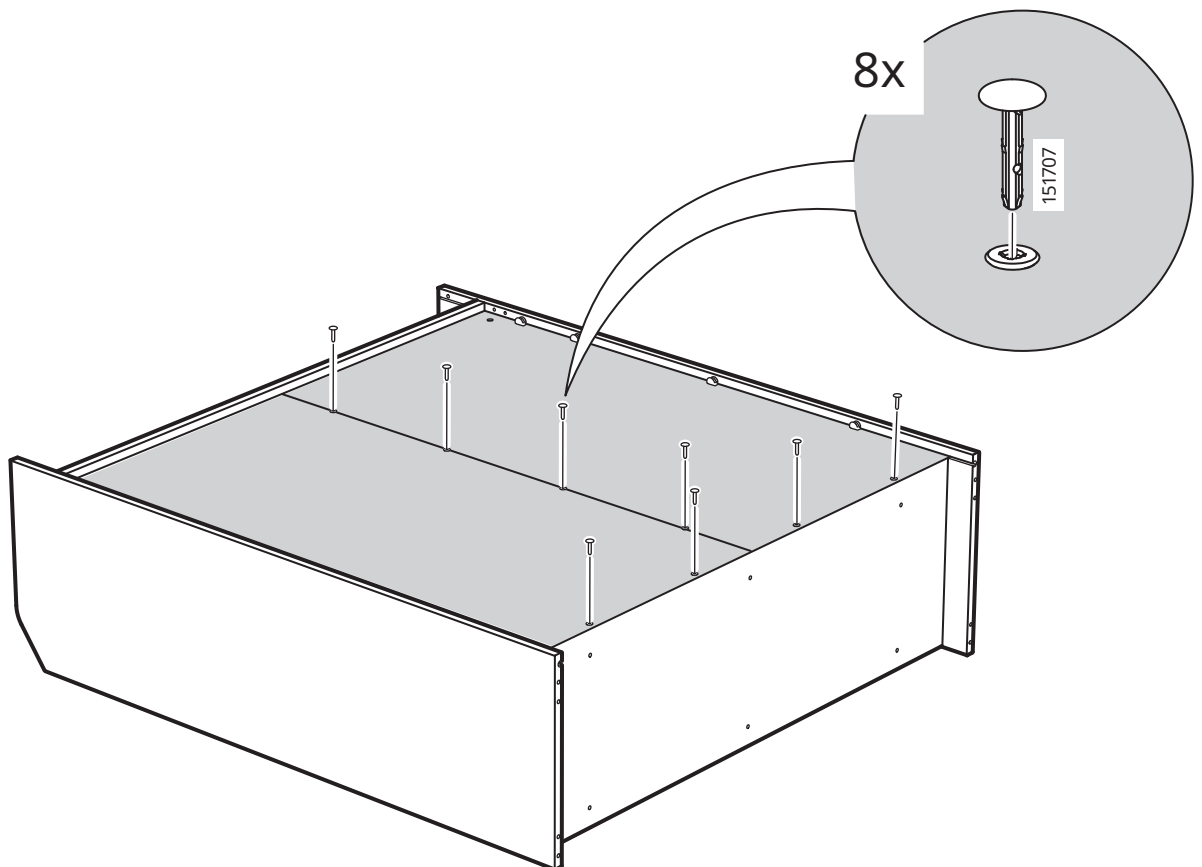 


9

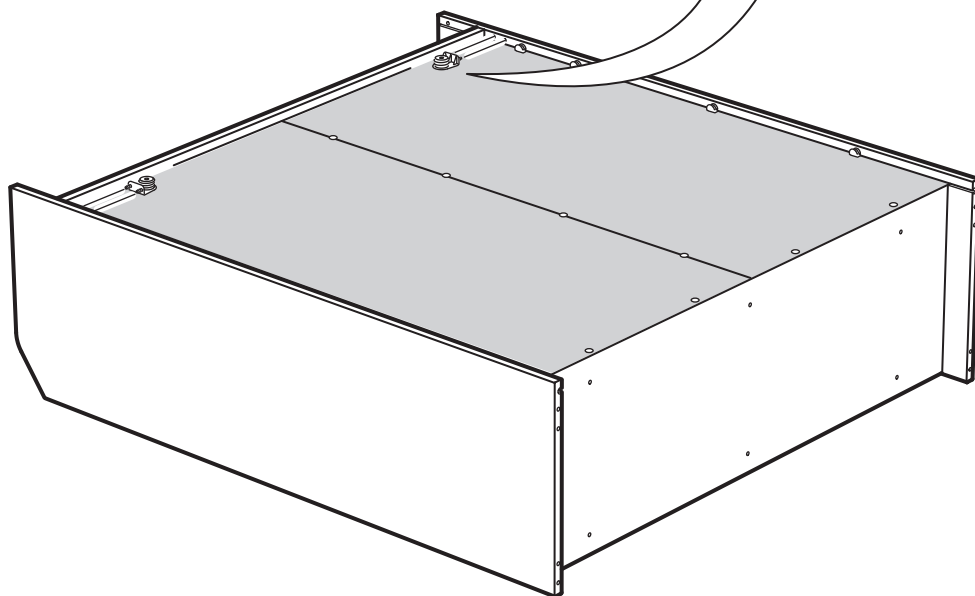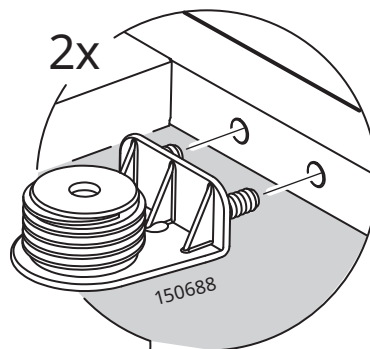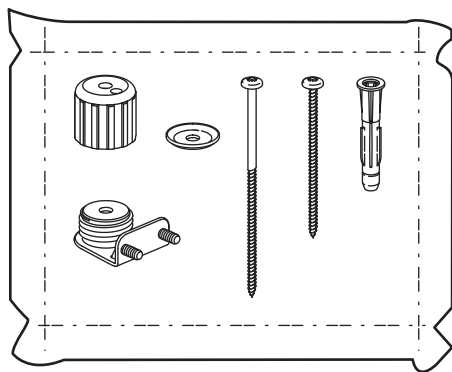   


10

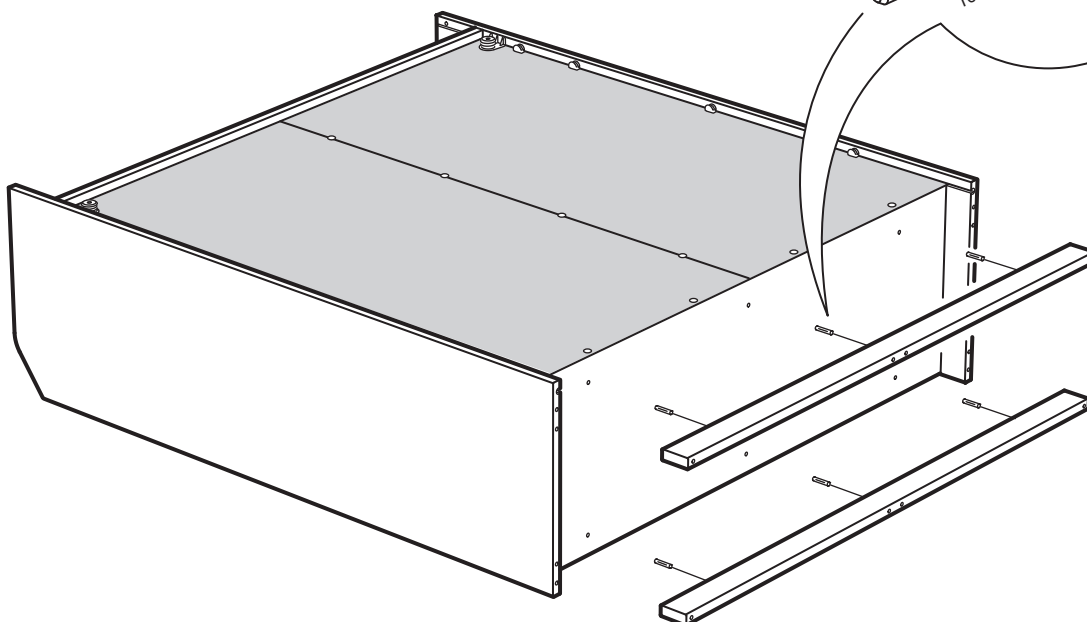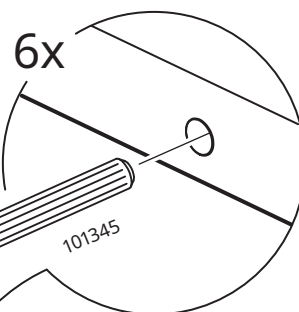  


11

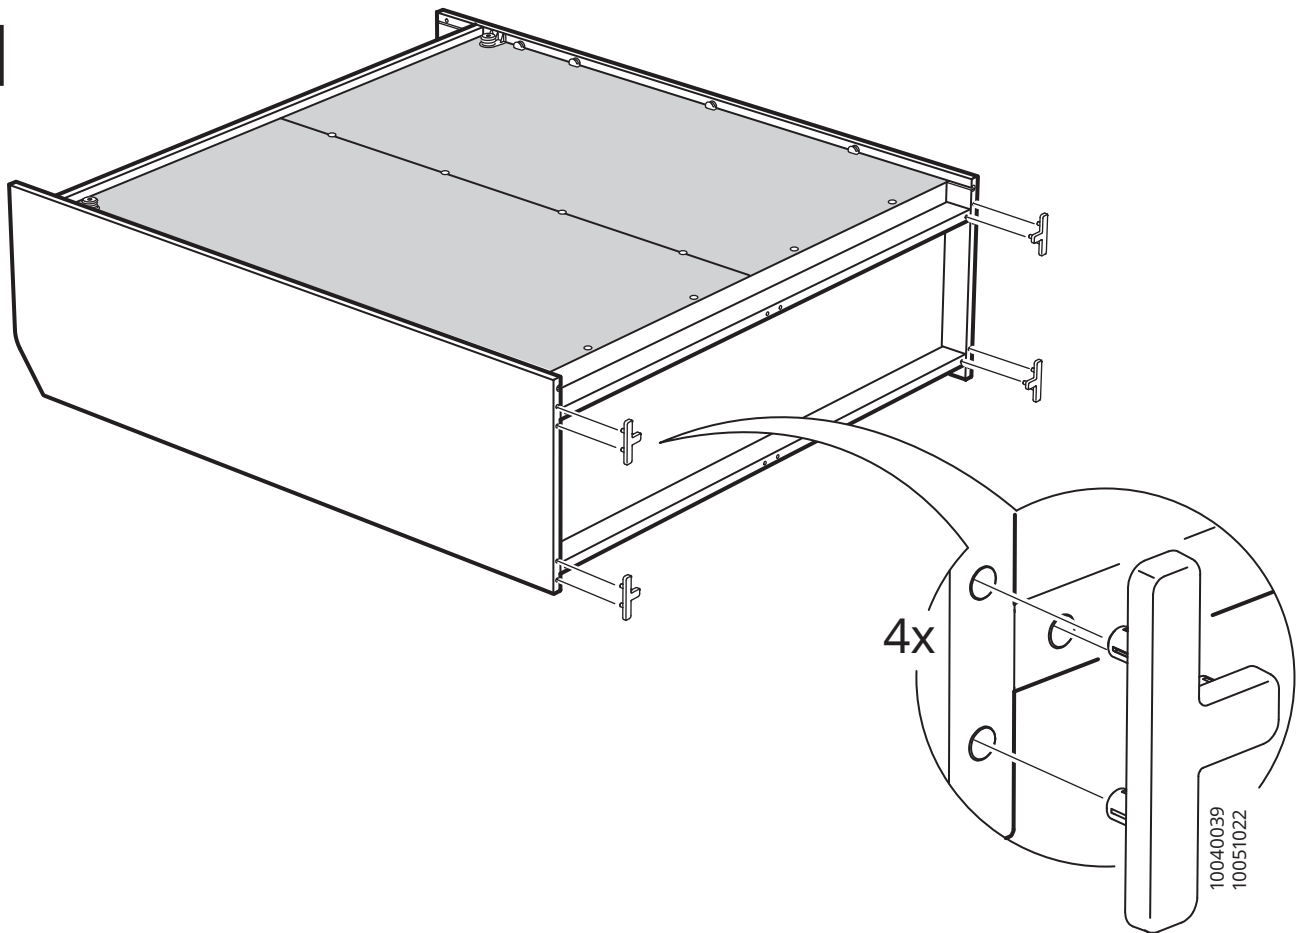 


12


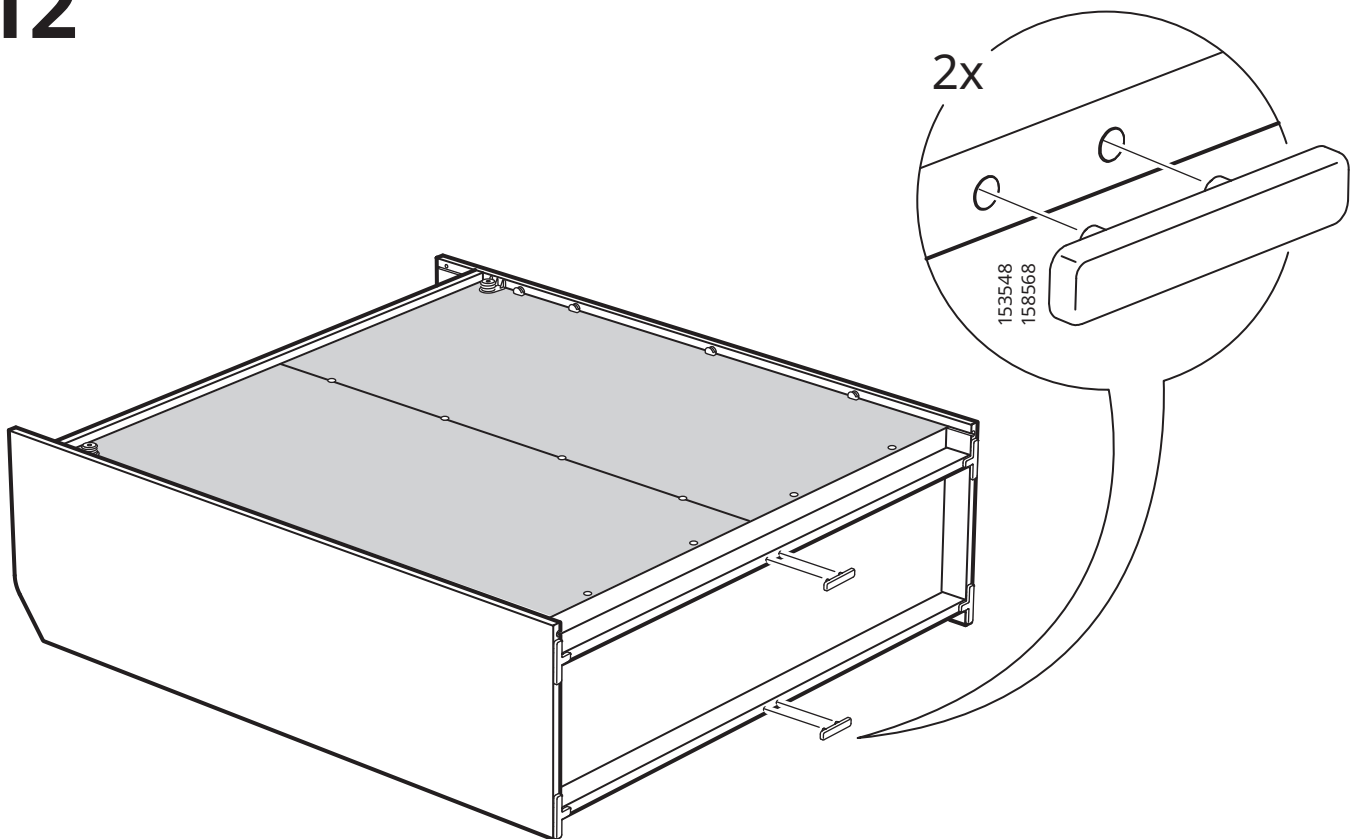 


13

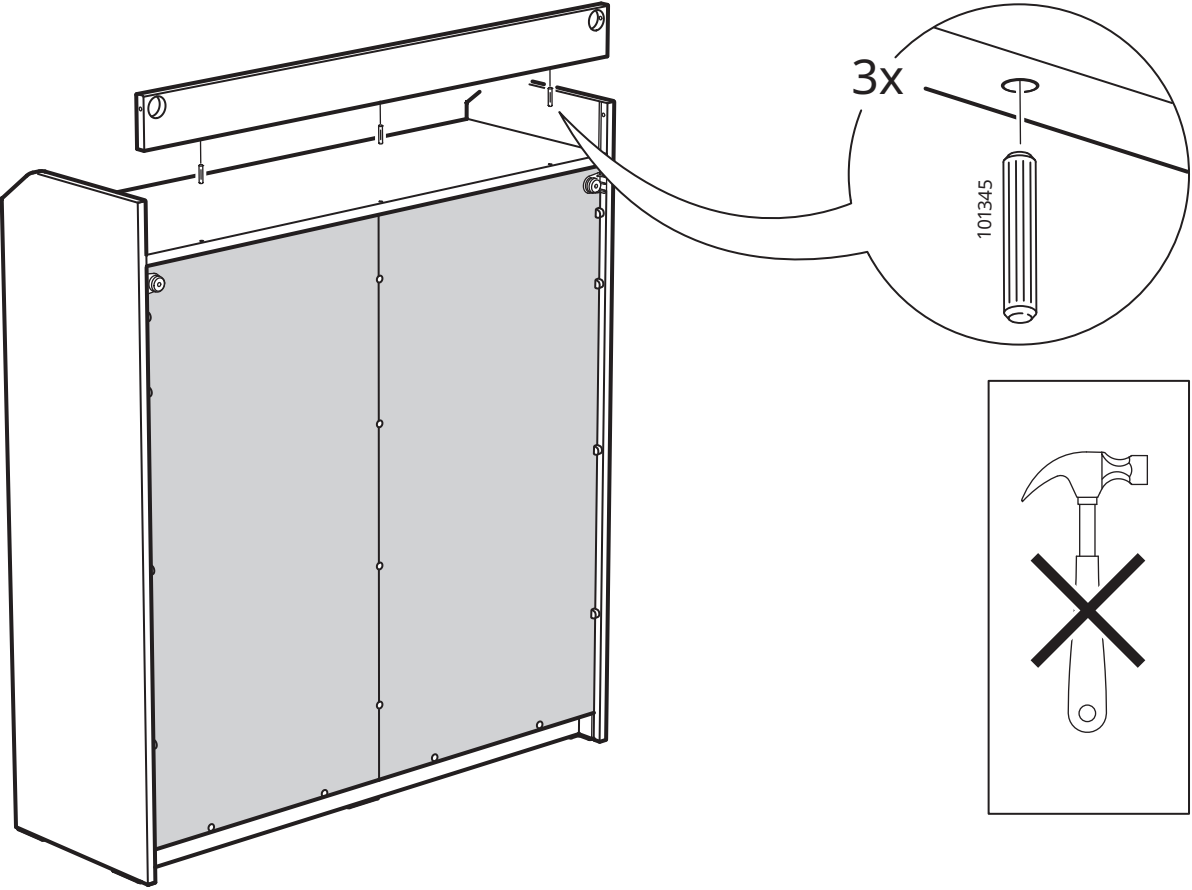 



14

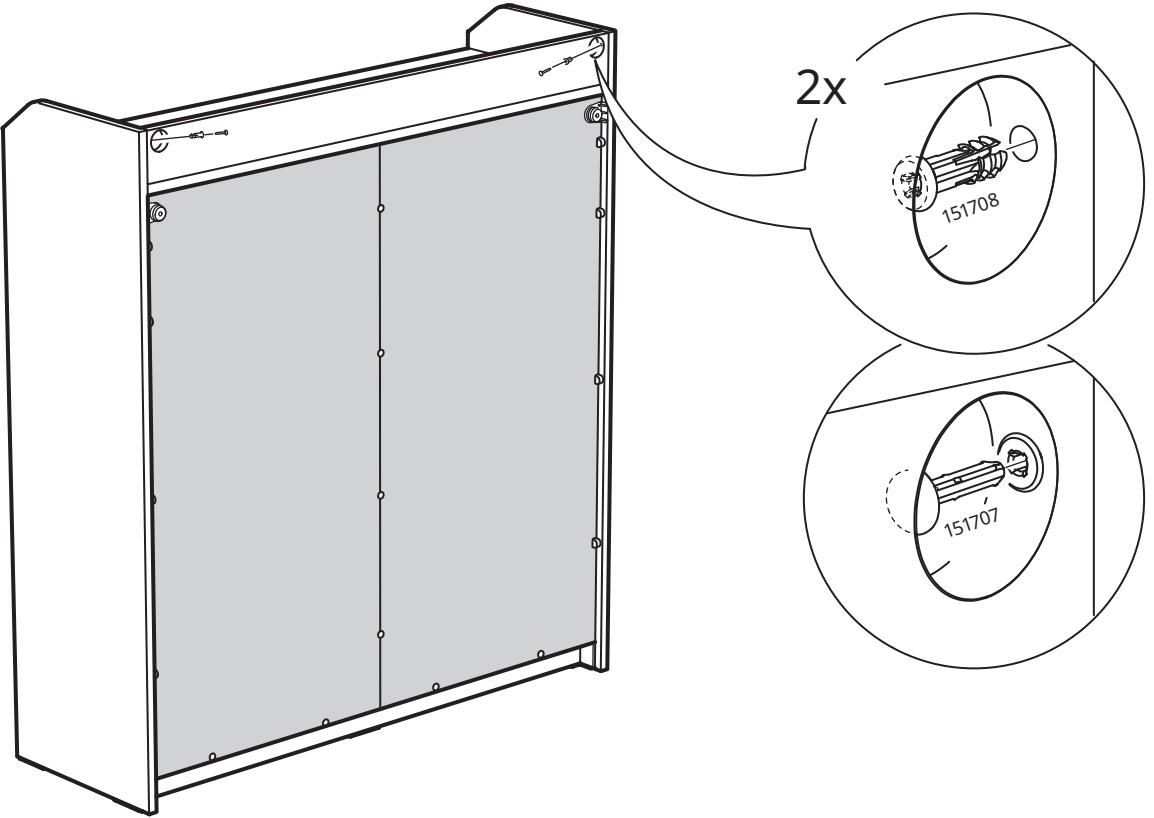 

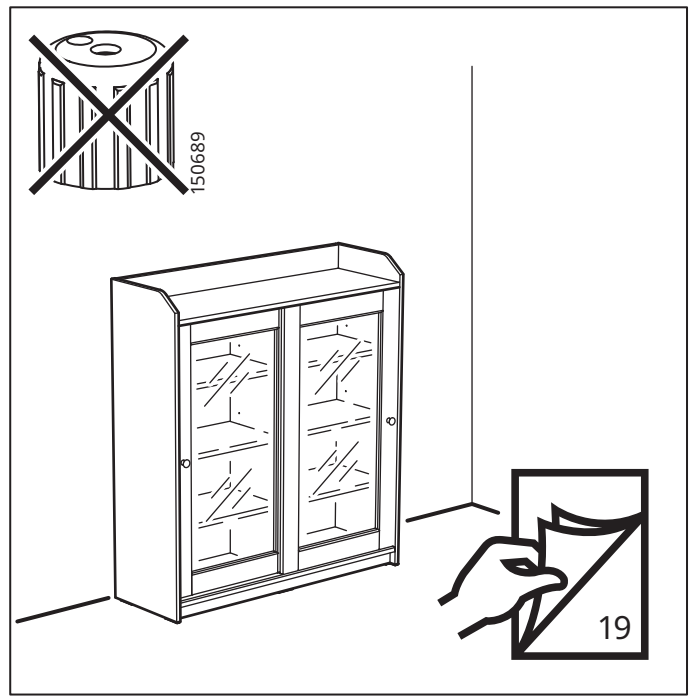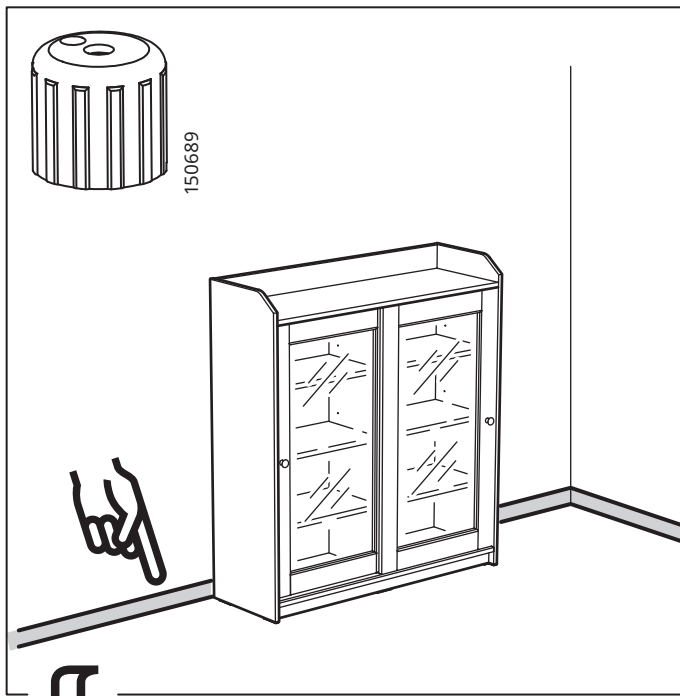  


↓
15

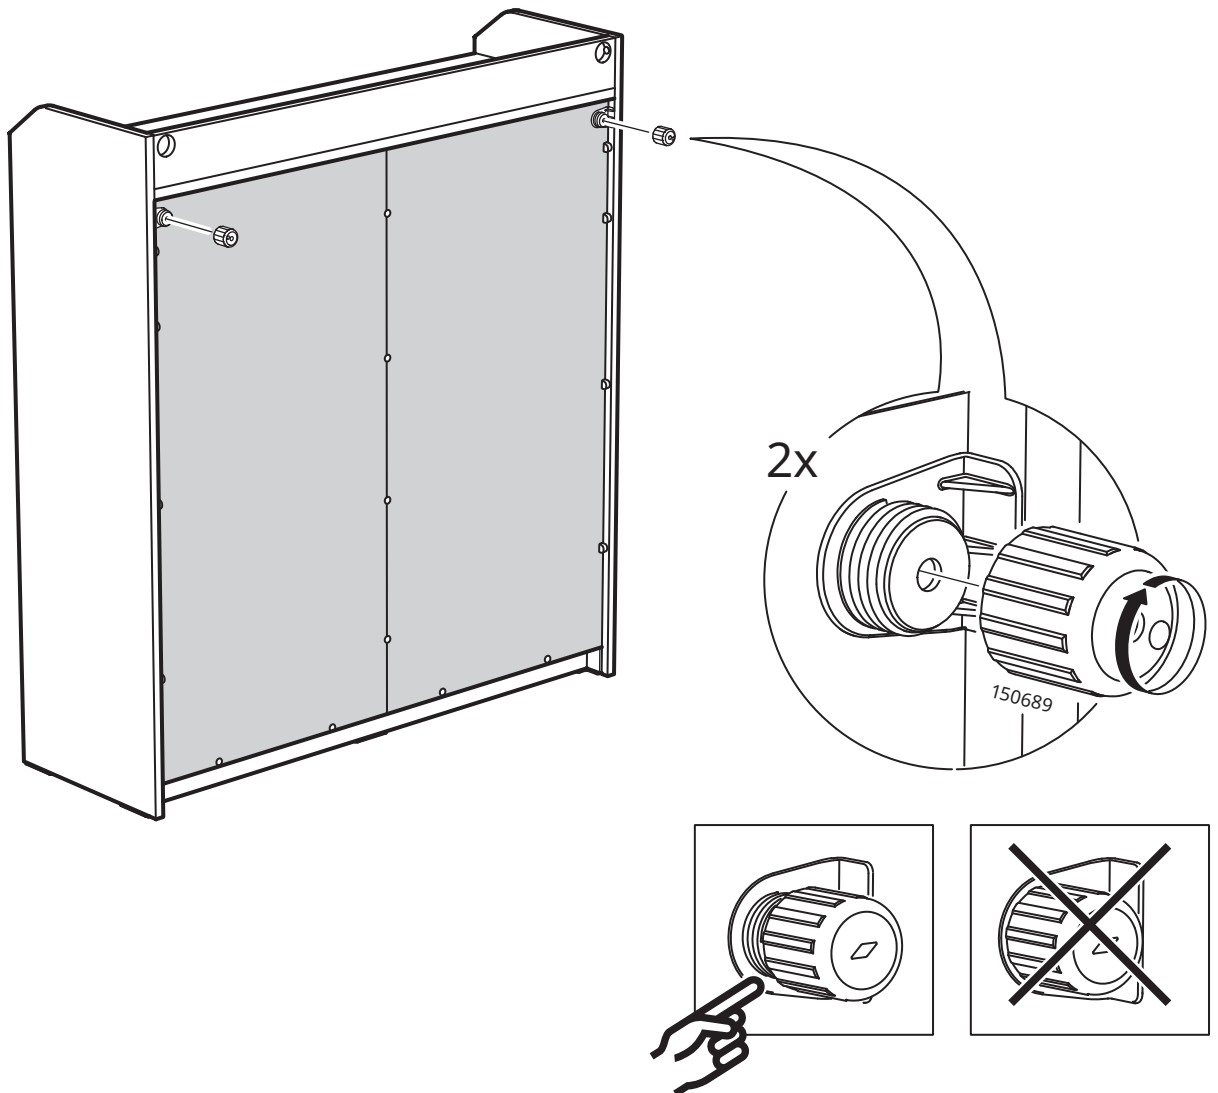 


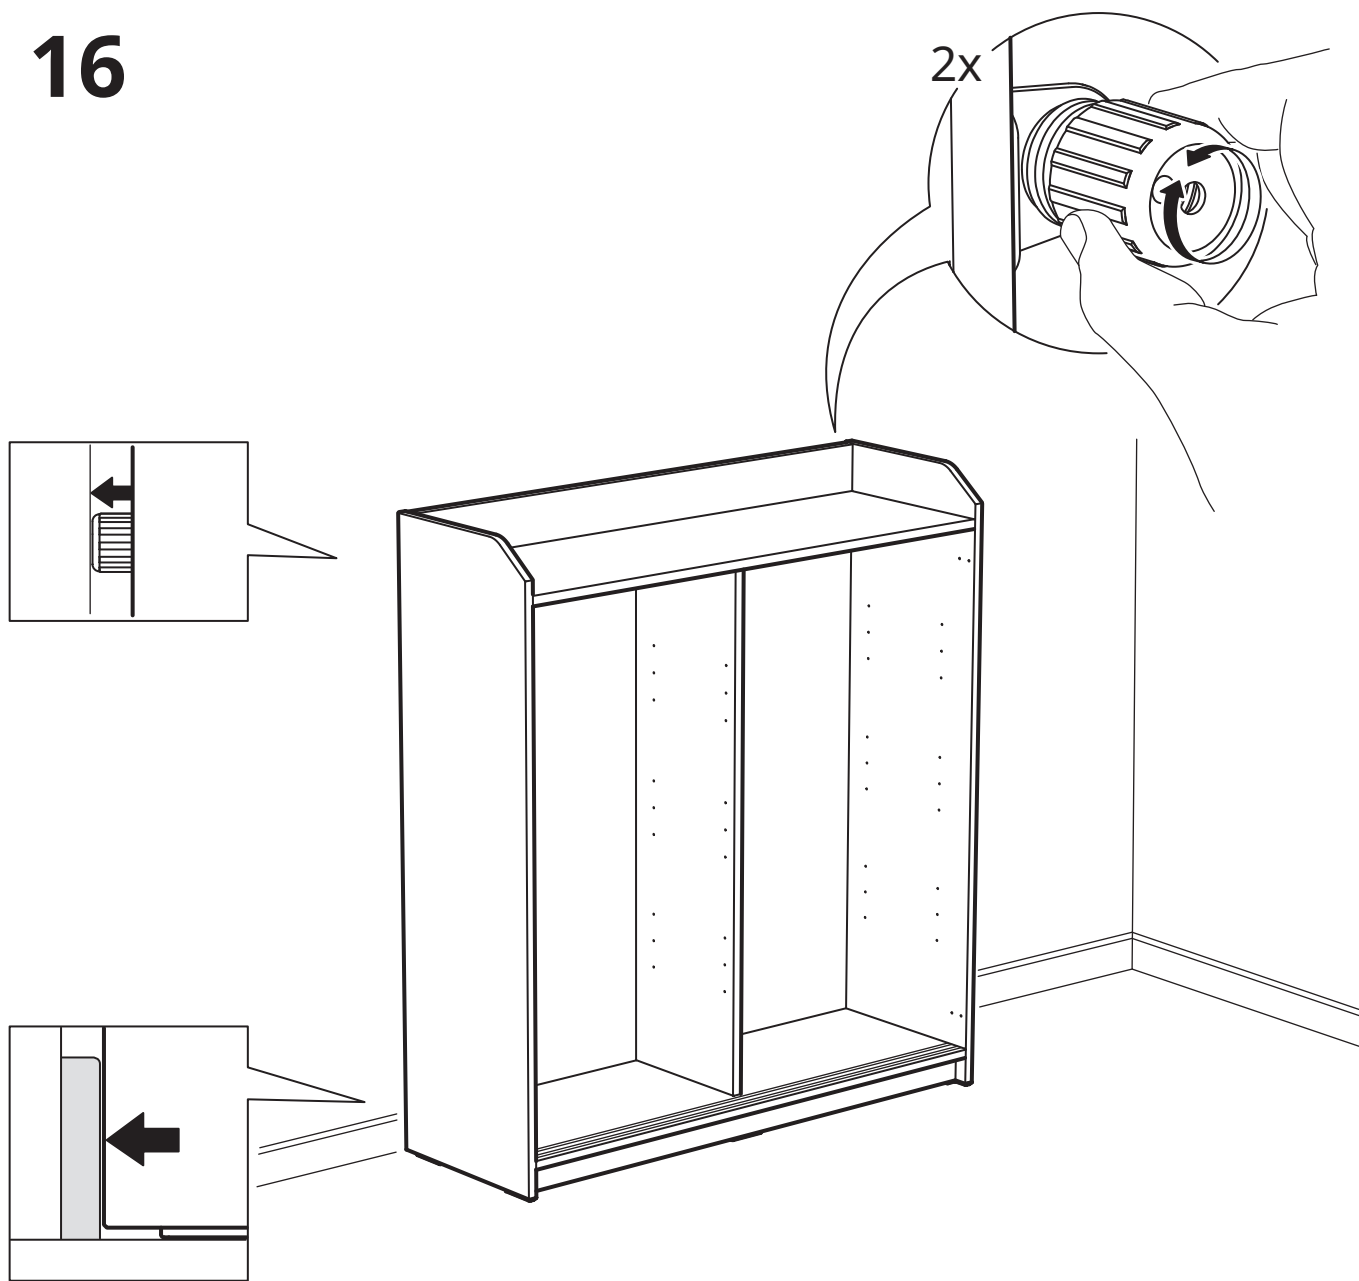 

17

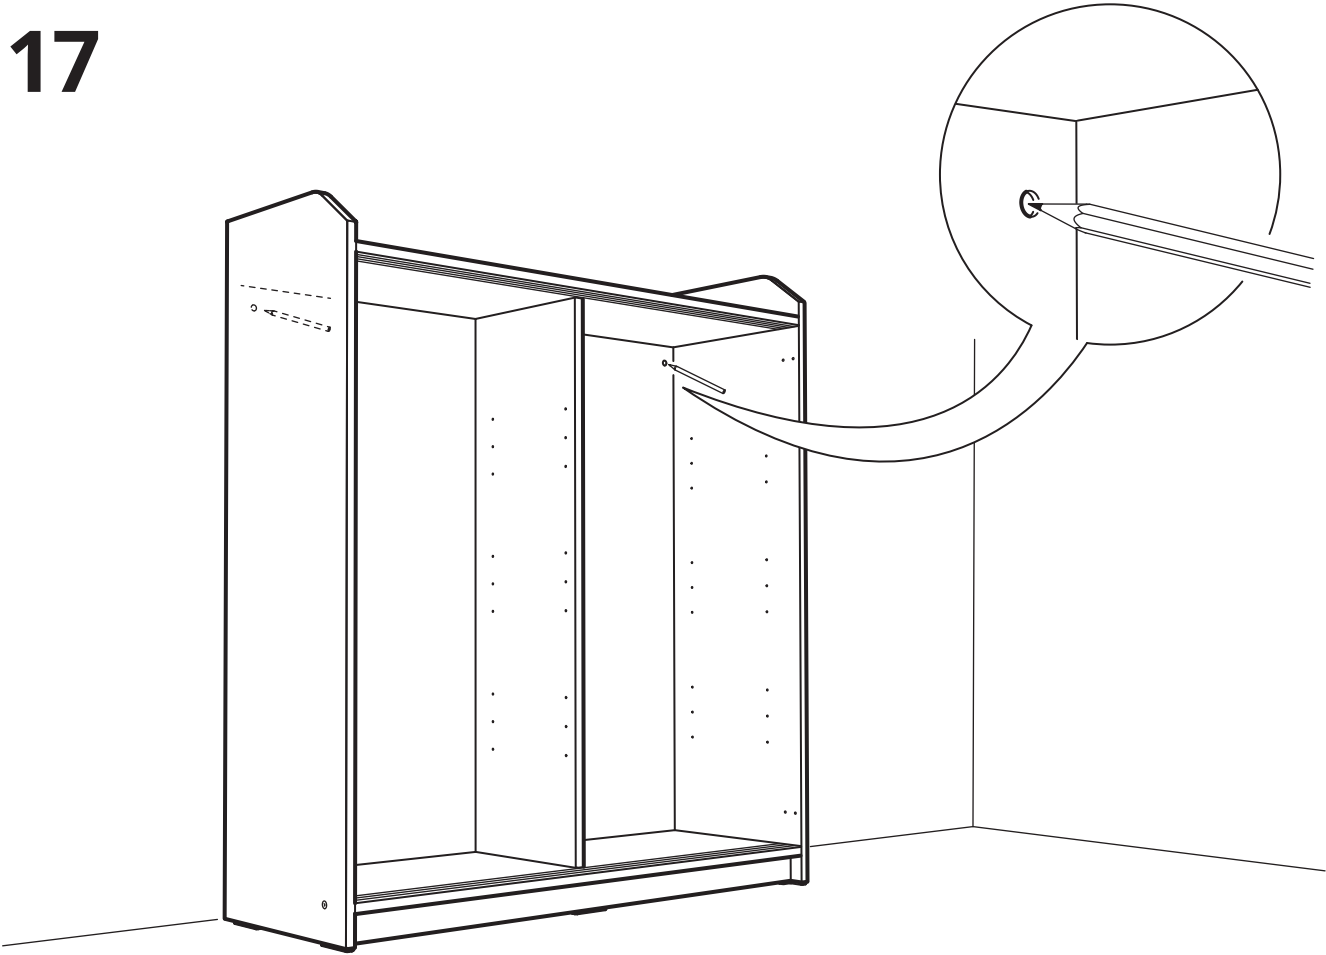 

18

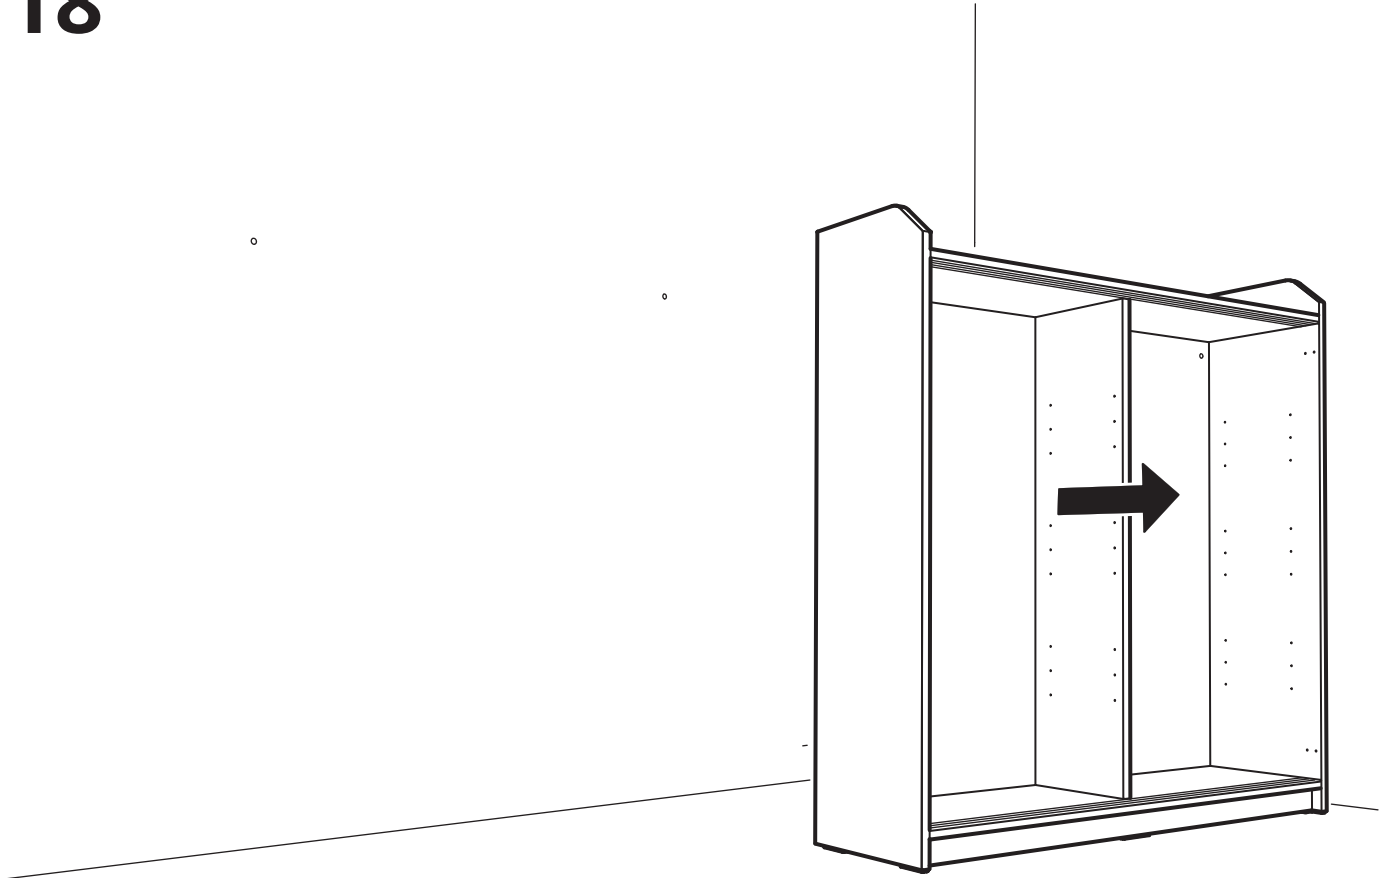 




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

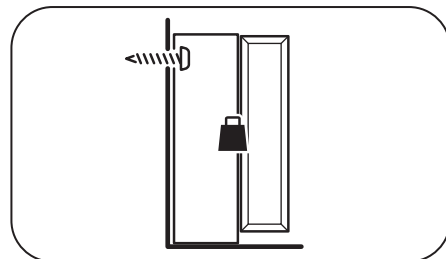

19

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

עברית

הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.

A

Ø 8 mm
(5/16")

1

2

70 mm
(2 3/4")

3

B

Ø 8 mm
(5/16")

1

2

≈ 30 mm
(≈ 1 1/4")

3

C

 
 
Ø 3 mm
(1/8")

1




2



≈ 30 mm
(≈ 1 1/4")

3



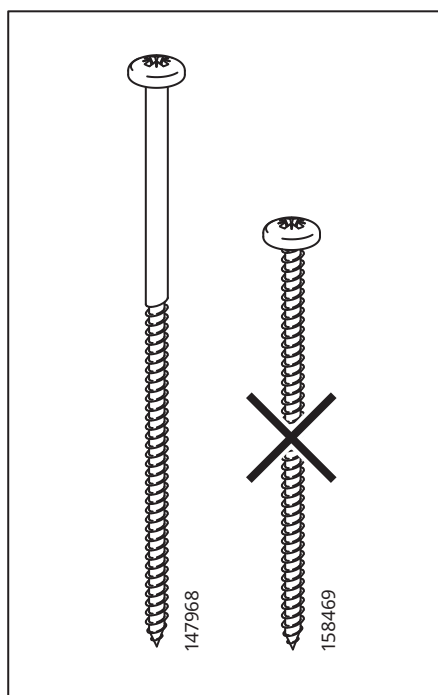
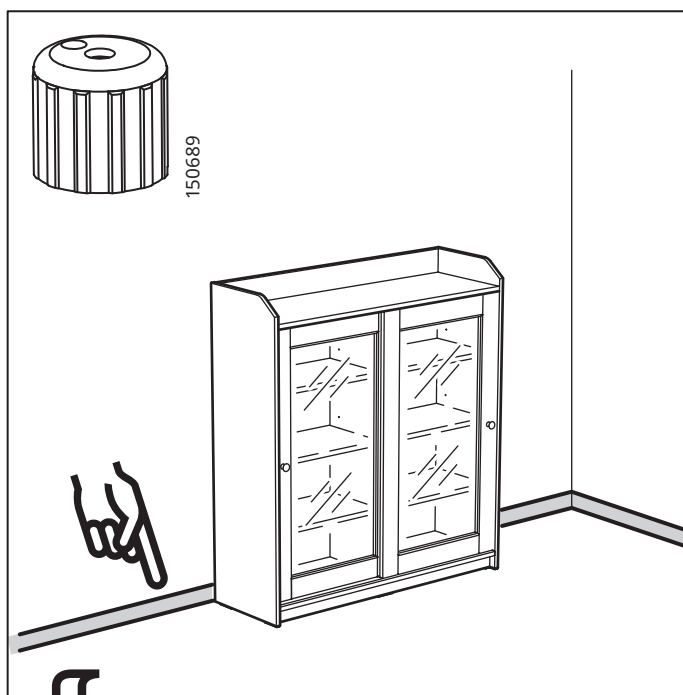






20

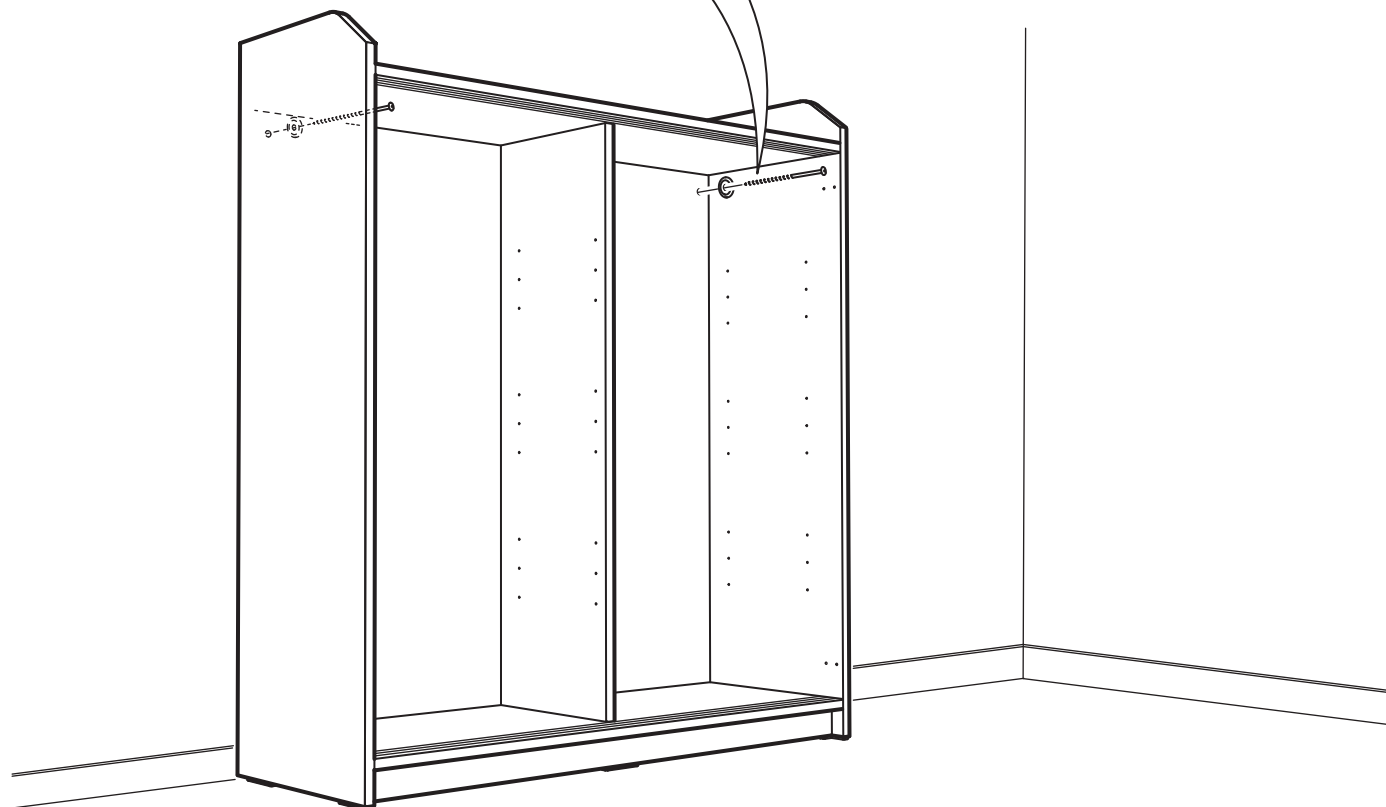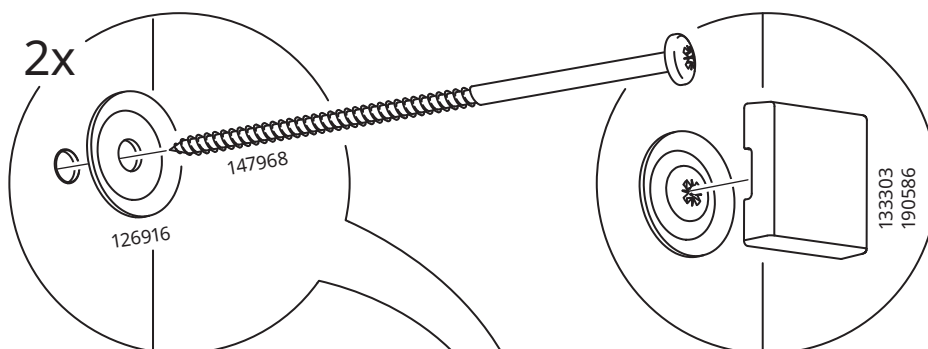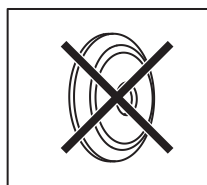   



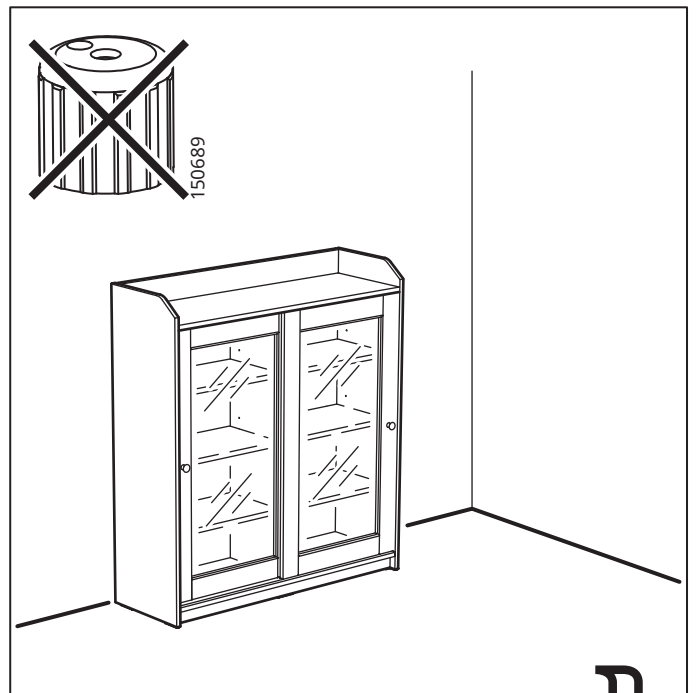 
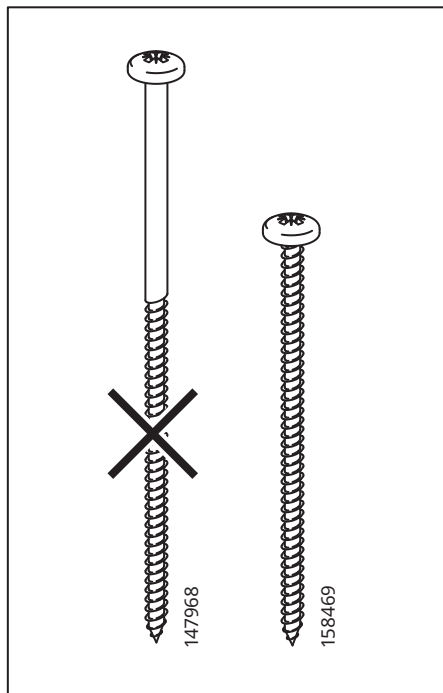 


20

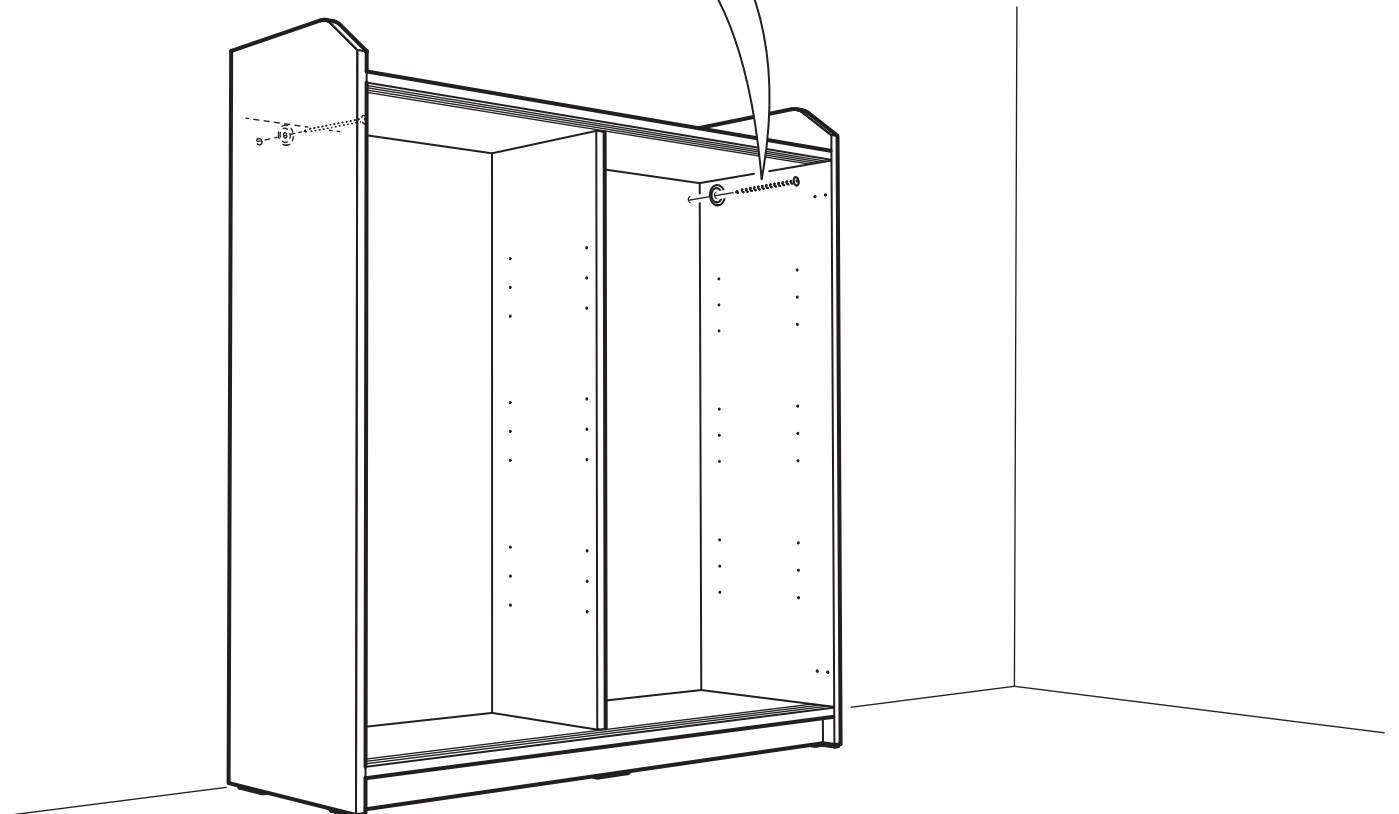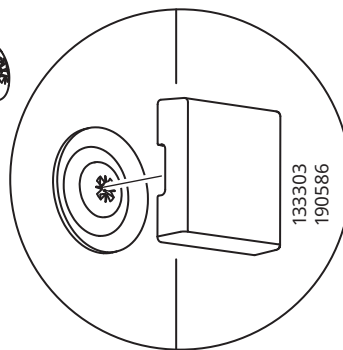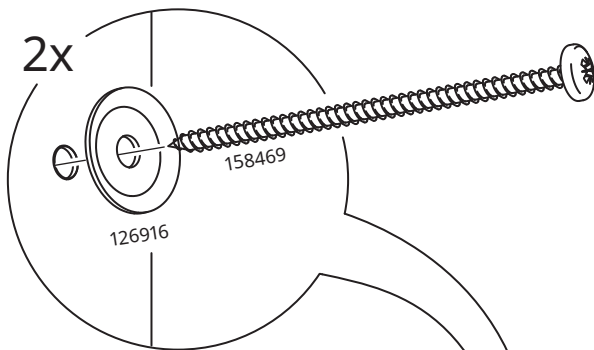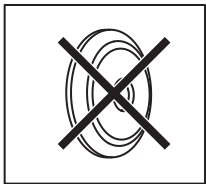    

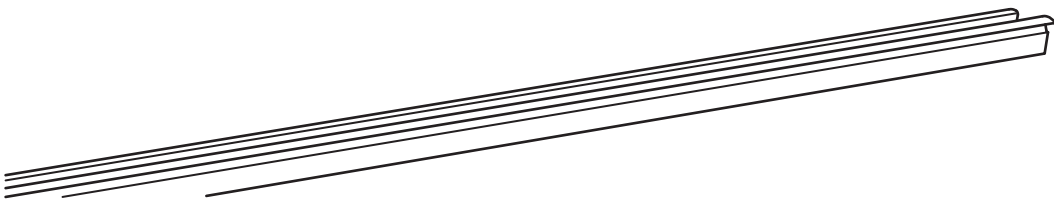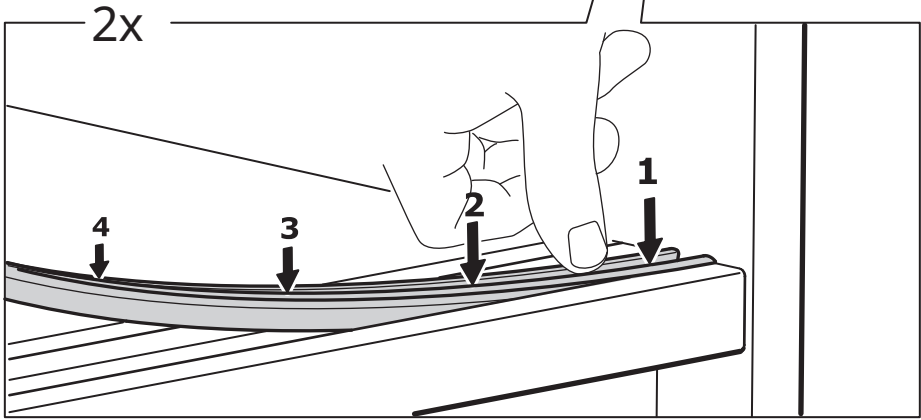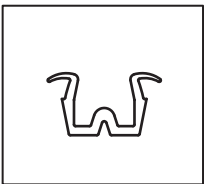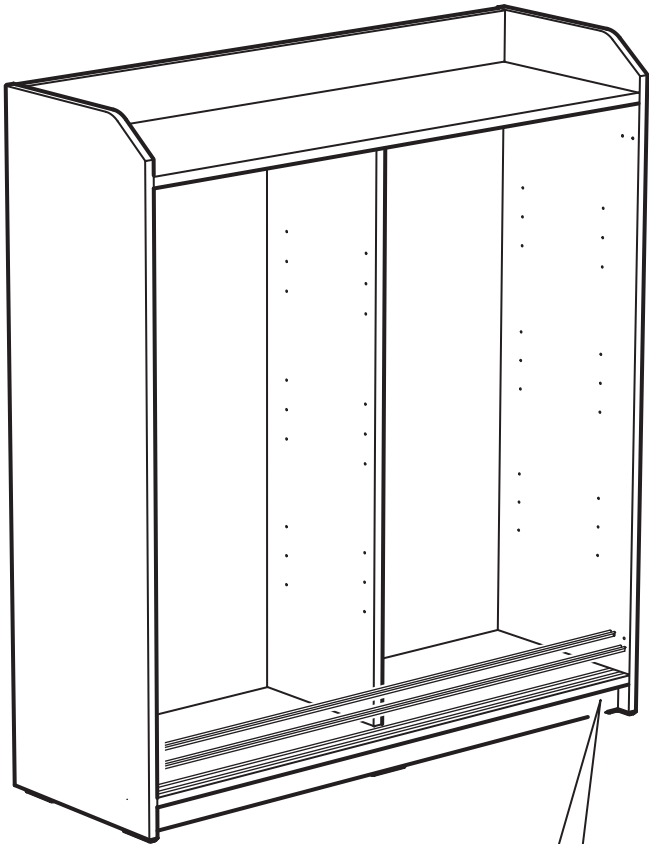    


10047003
10046986
10074141

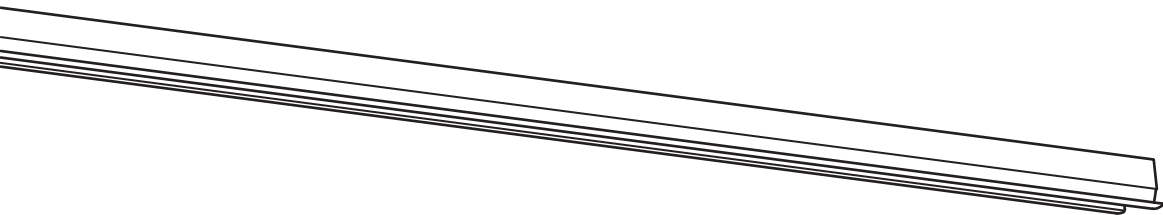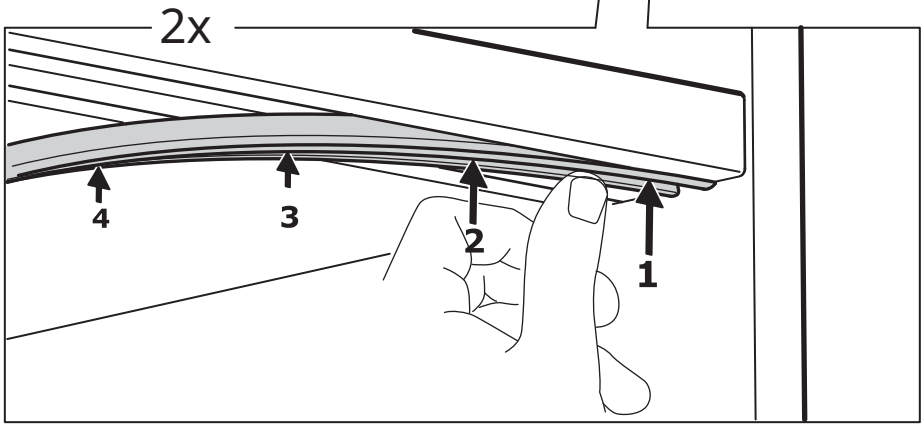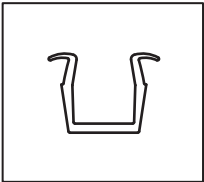   
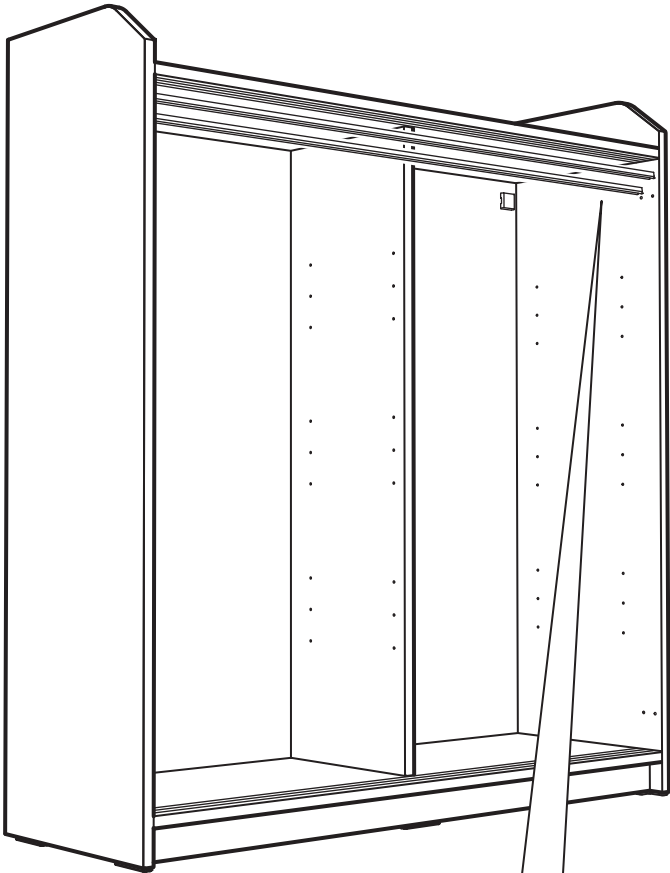 



10047009
10047010
10074143

 
23

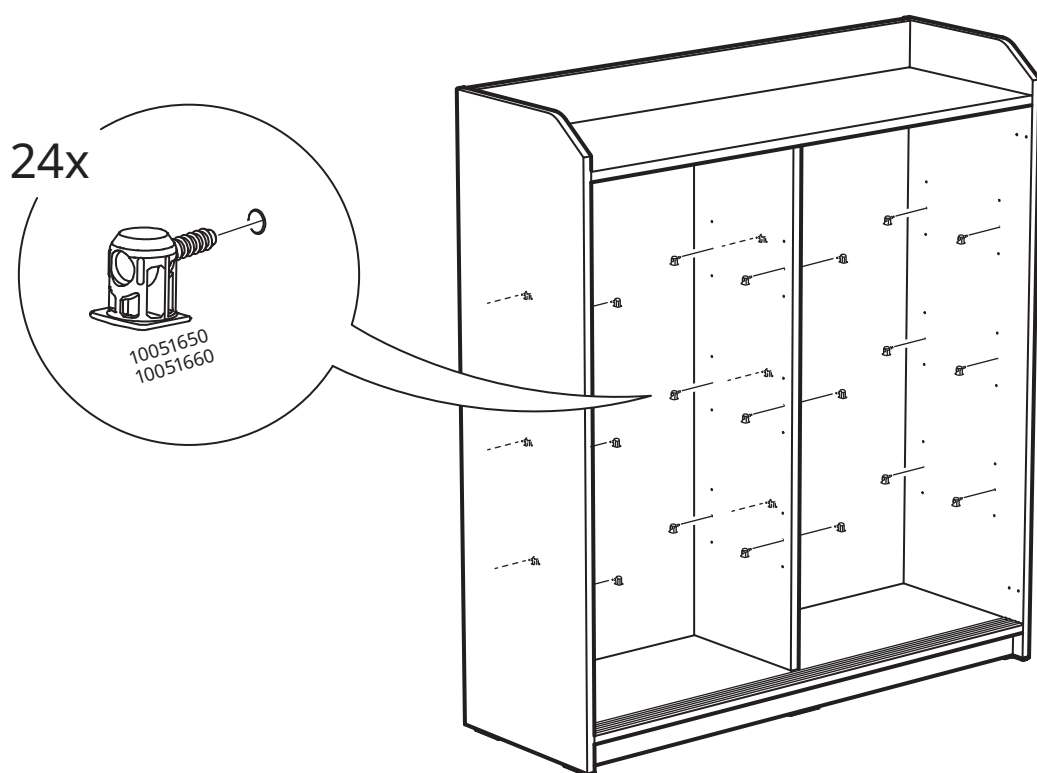



24



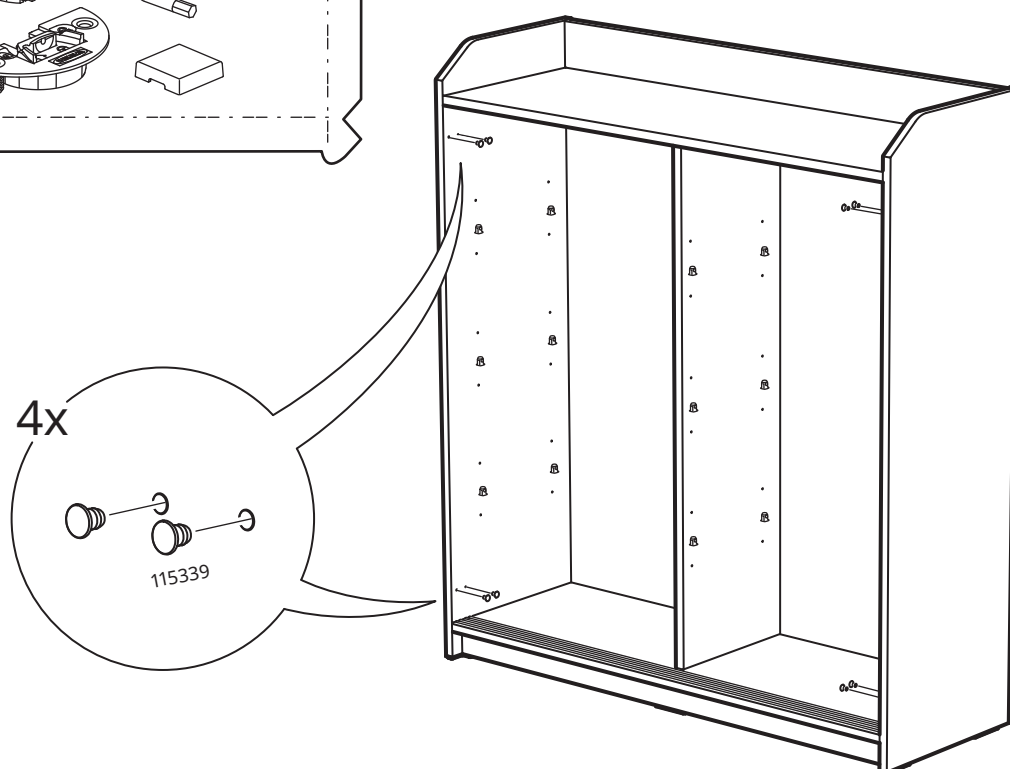 
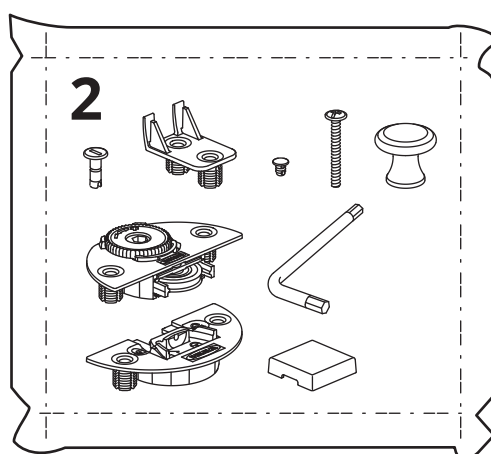 


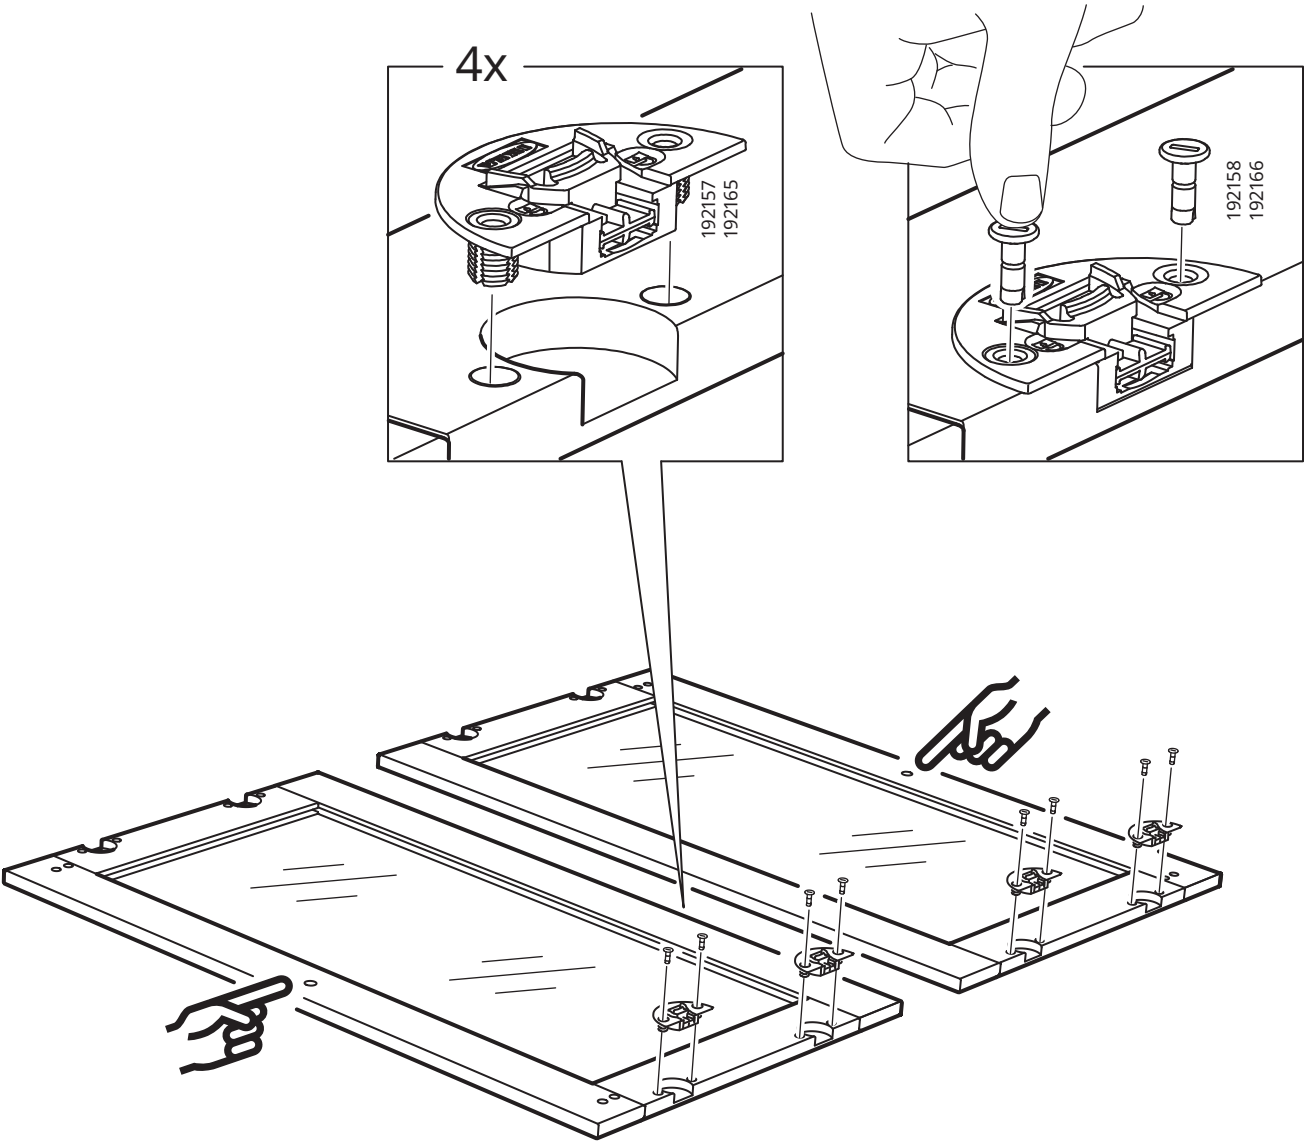 

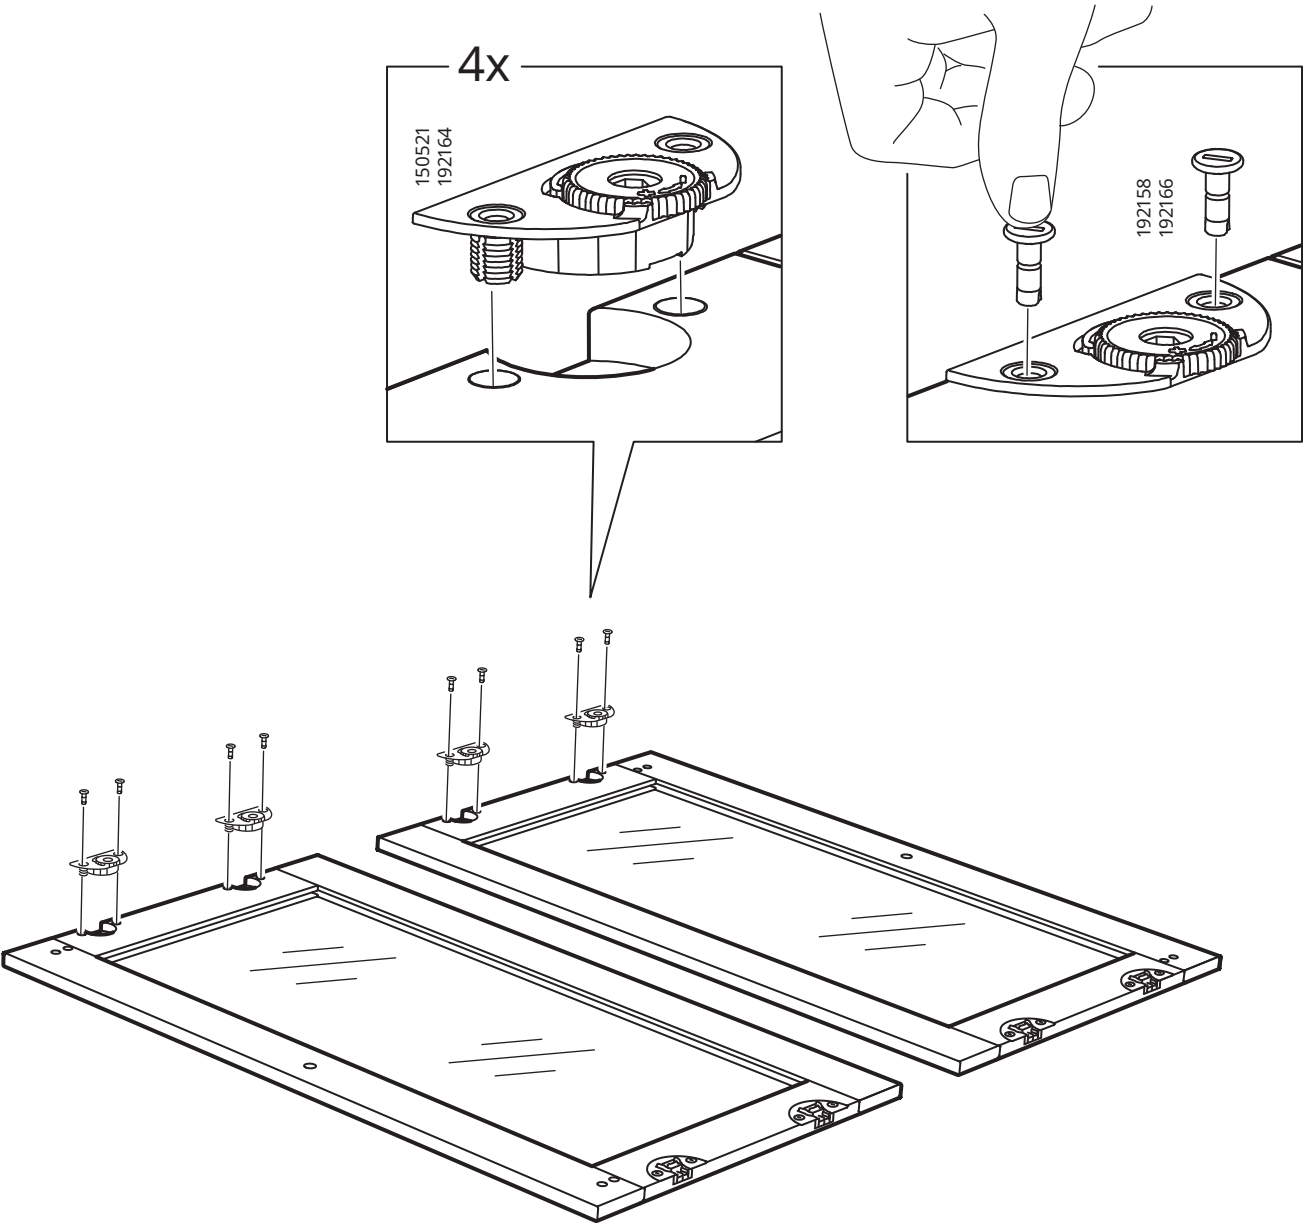 


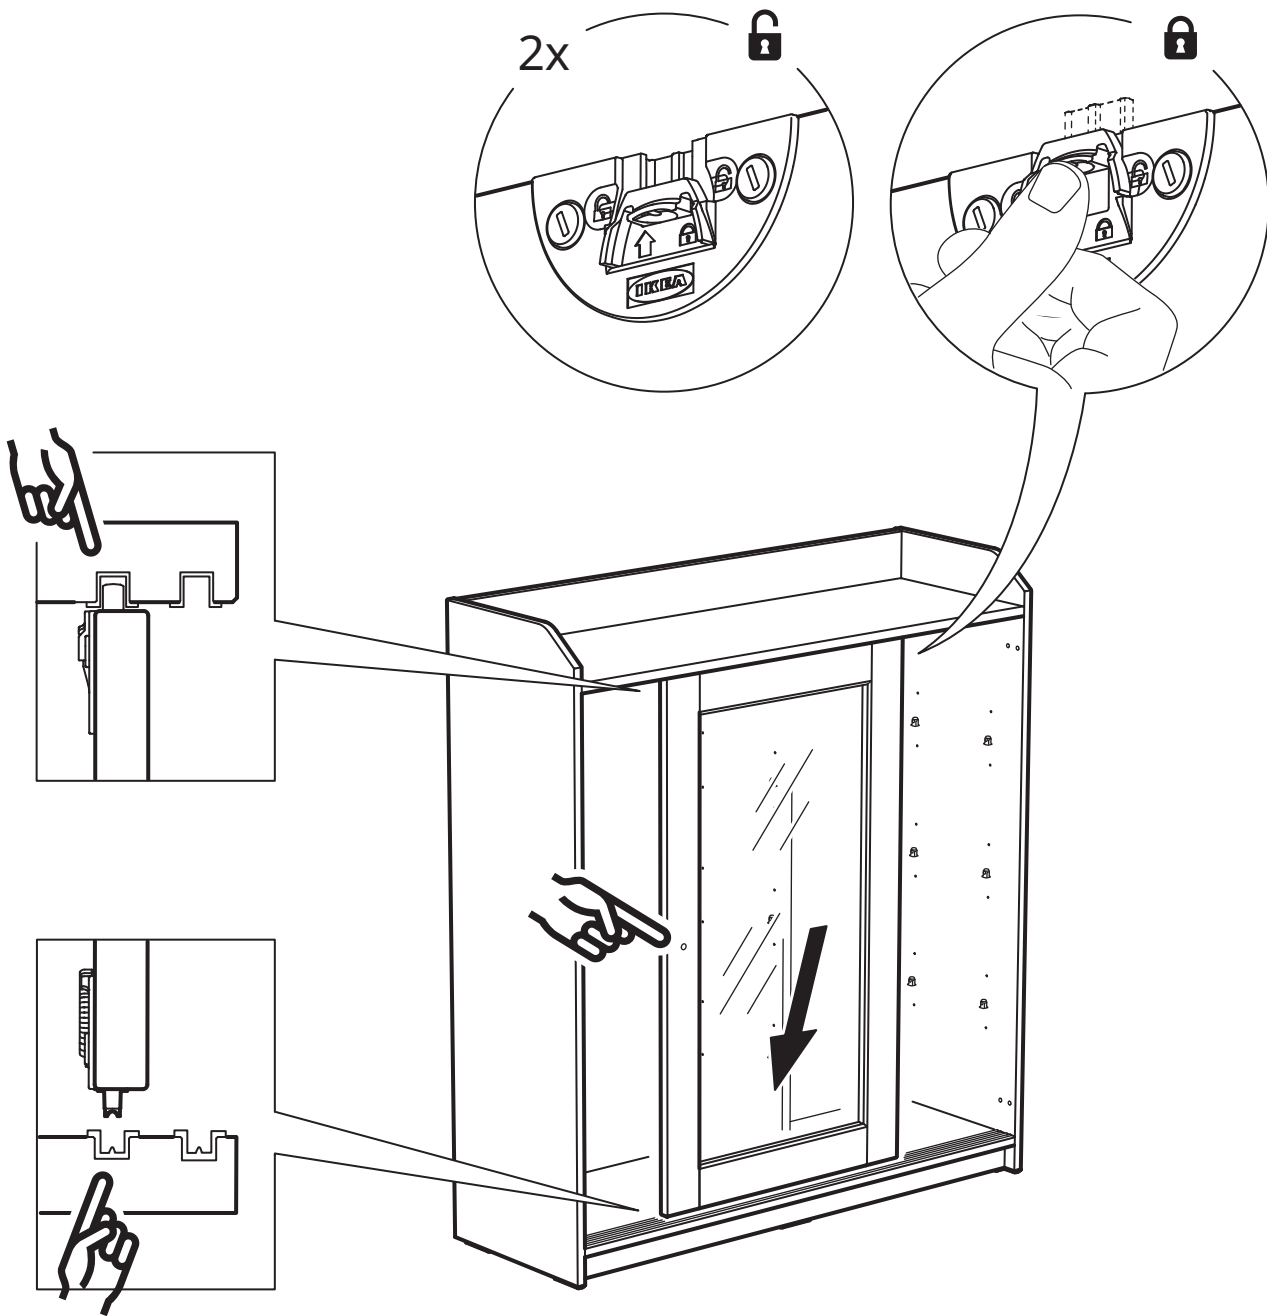 

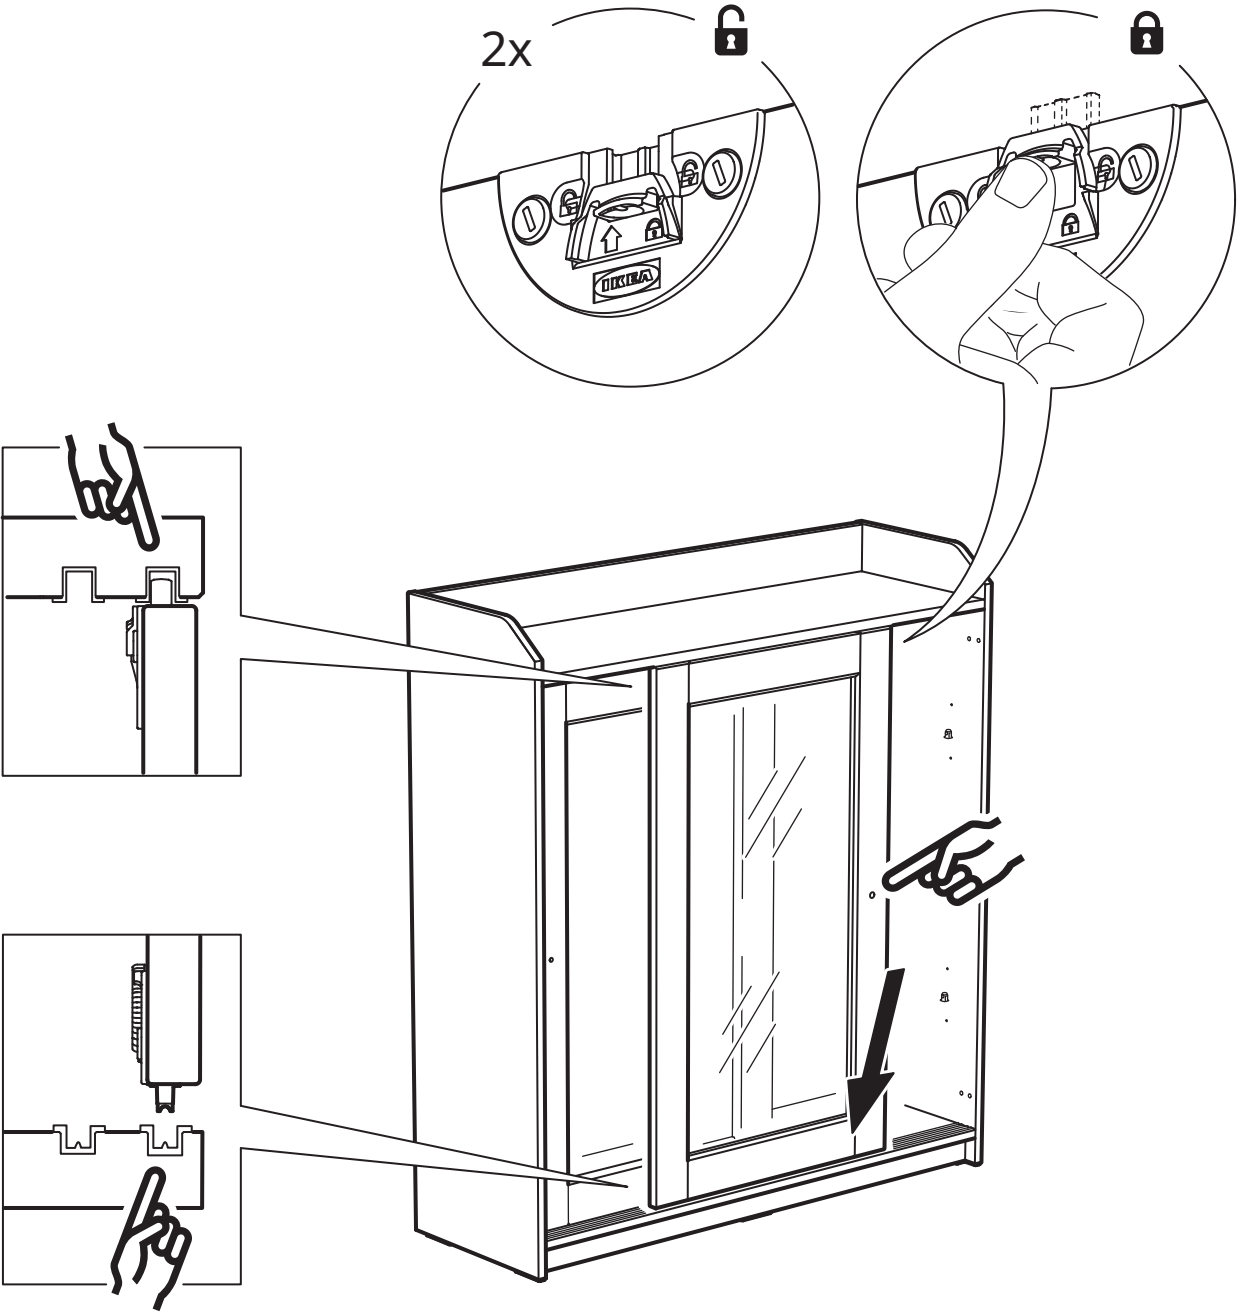     


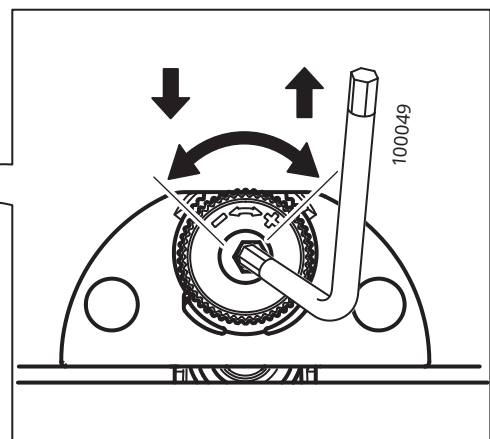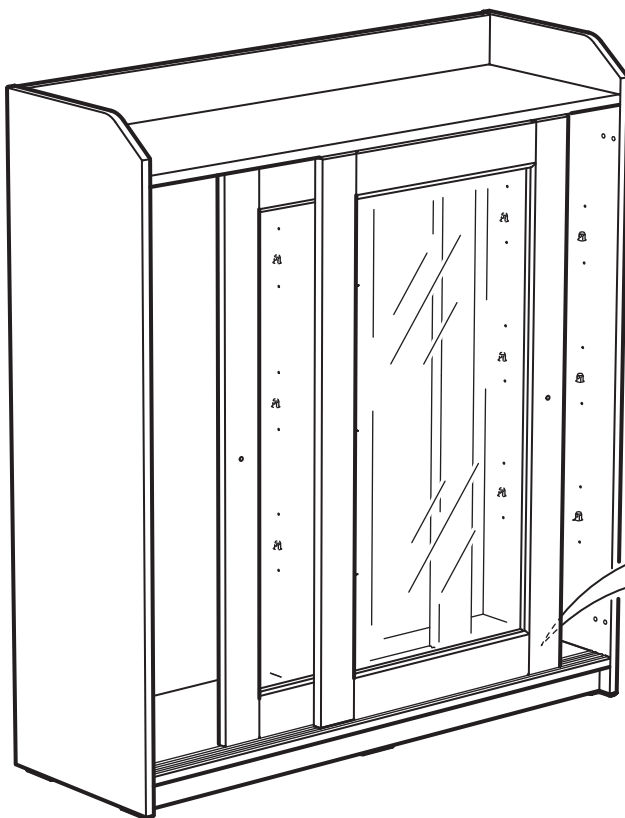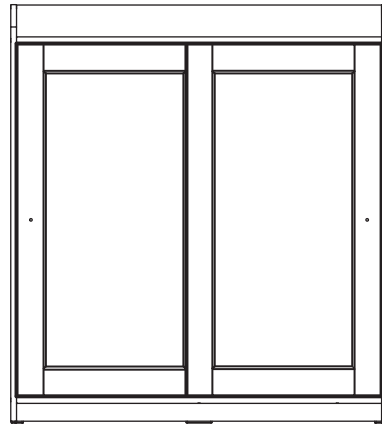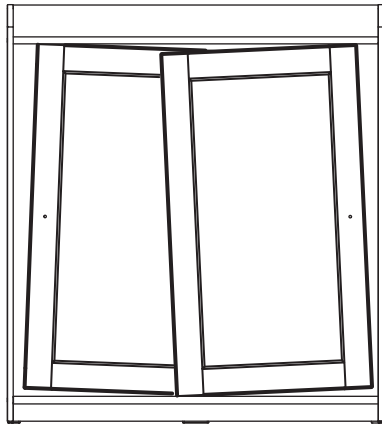



29

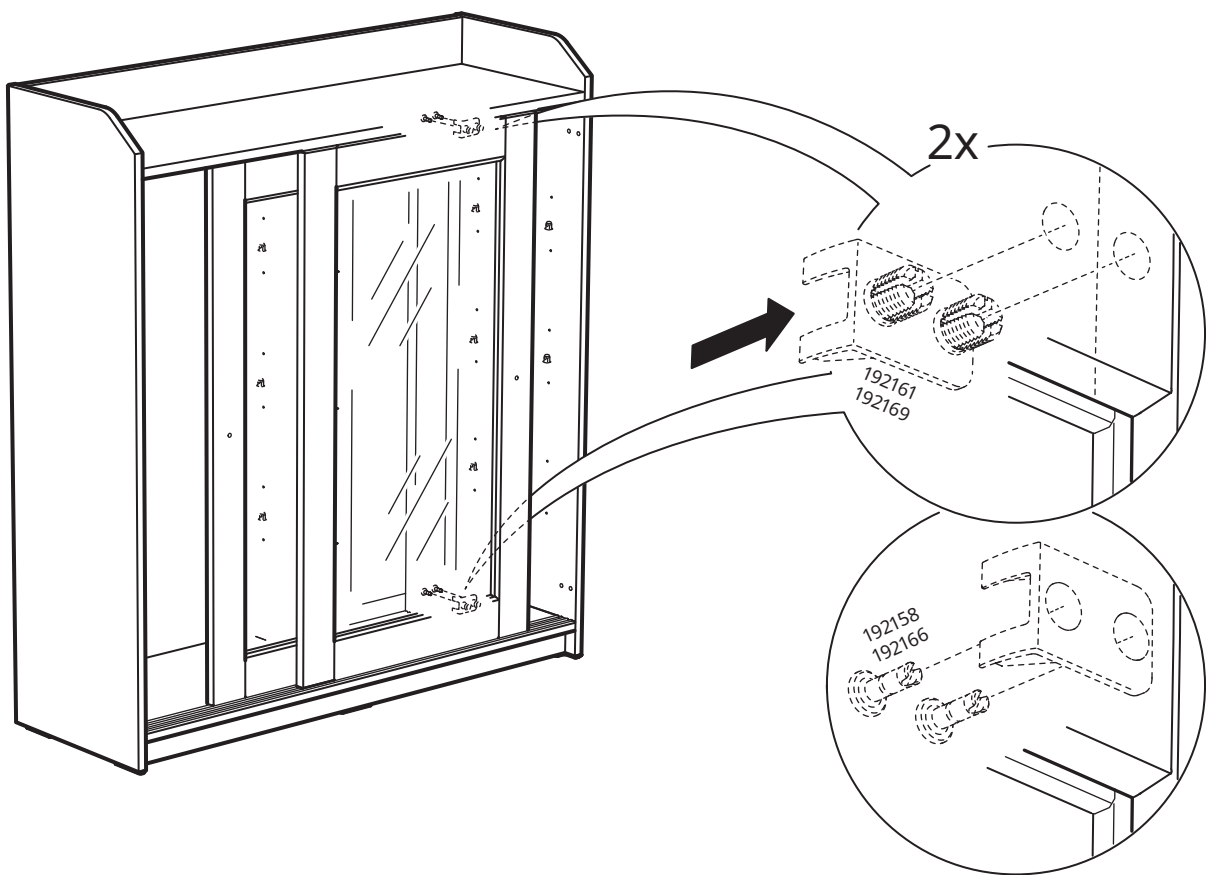 

30

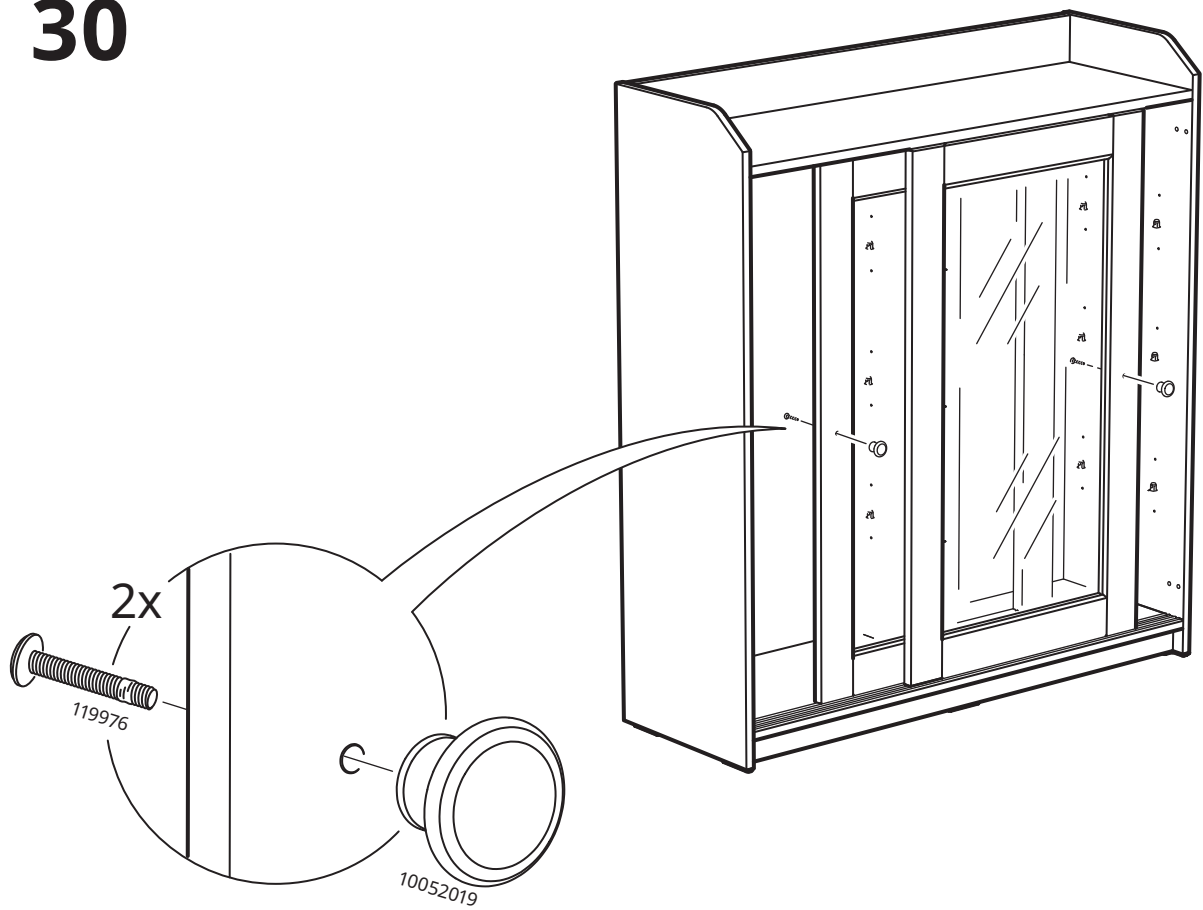 

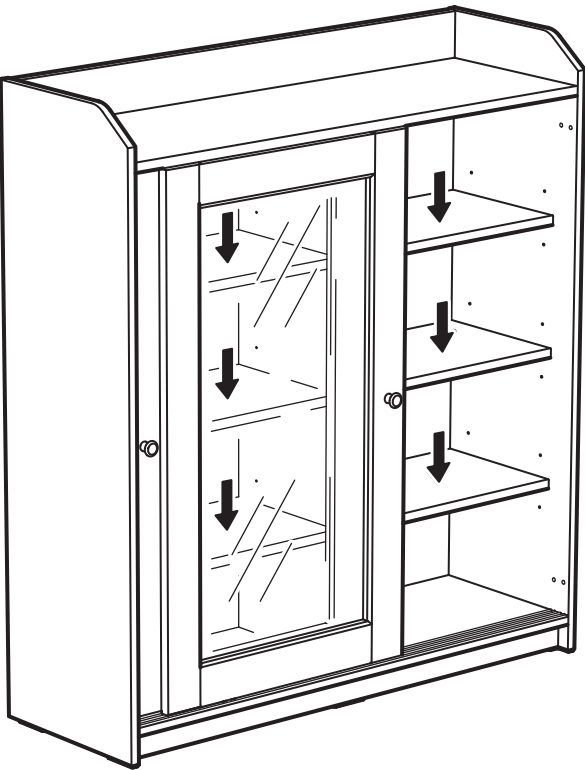 

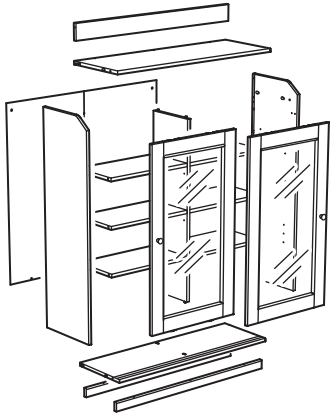 

31 - 1

