 


HAUGA

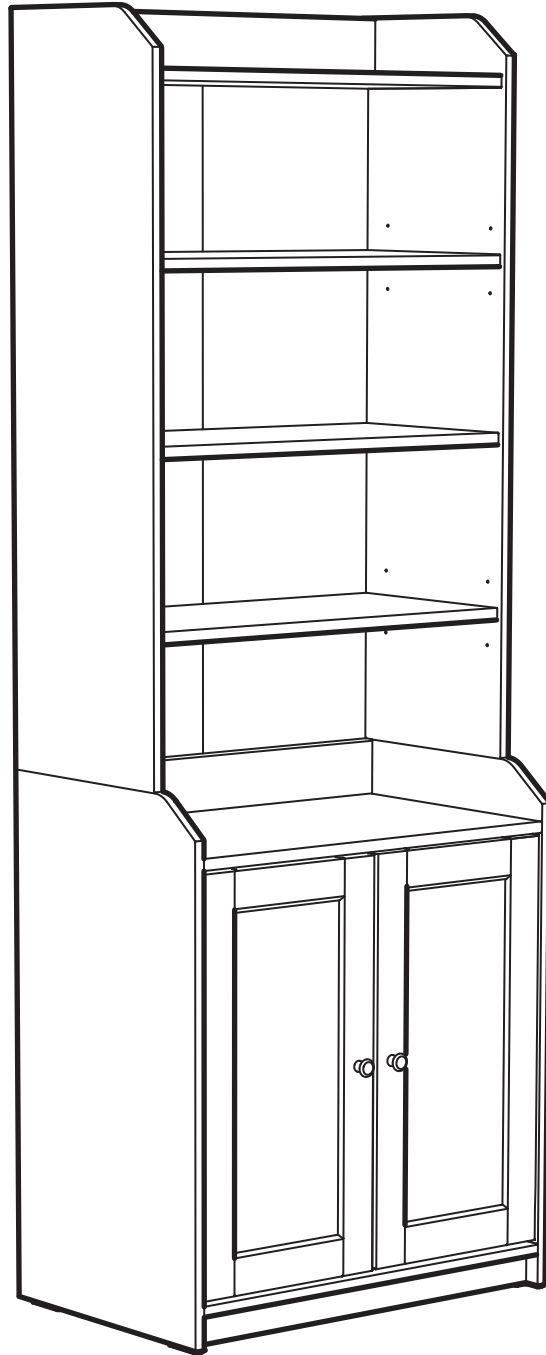

Design and Quality
IKEA of Sweden



English

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, or shelves.

עברית

אזהרה

נפילת הרהיט עלולה לגרום לפגיעה גופנית חמורה או קטלנית.

יש לקבע את הרהיט לקיר באמצעות אבזרי הקיבוע המצורפים.

 
 
 
על-מנת למזער את סכנת הפגיעה הגופנית או המוות מנפילת רהיטים:

 
 
 
 
 
- מקמו את הפריטים הכבדים ביותר במגירה התחתונה.
- הימנעו מלהניח טלוויזיות או פריטים כבדים אחרים על מוצר זה.
- אין לאפשר לילדים לטפס על המגירות, הדלתות או המדפים.







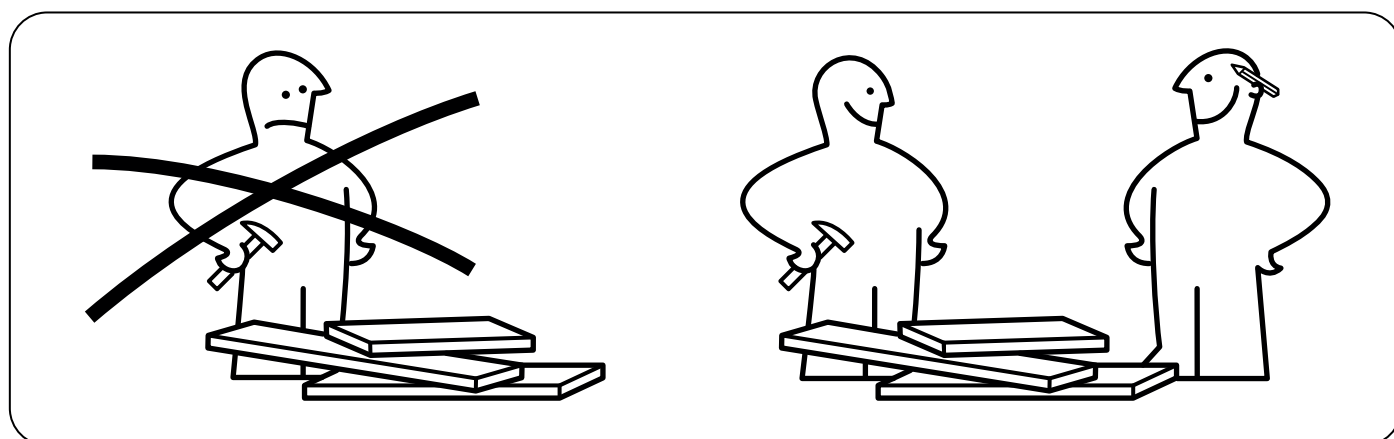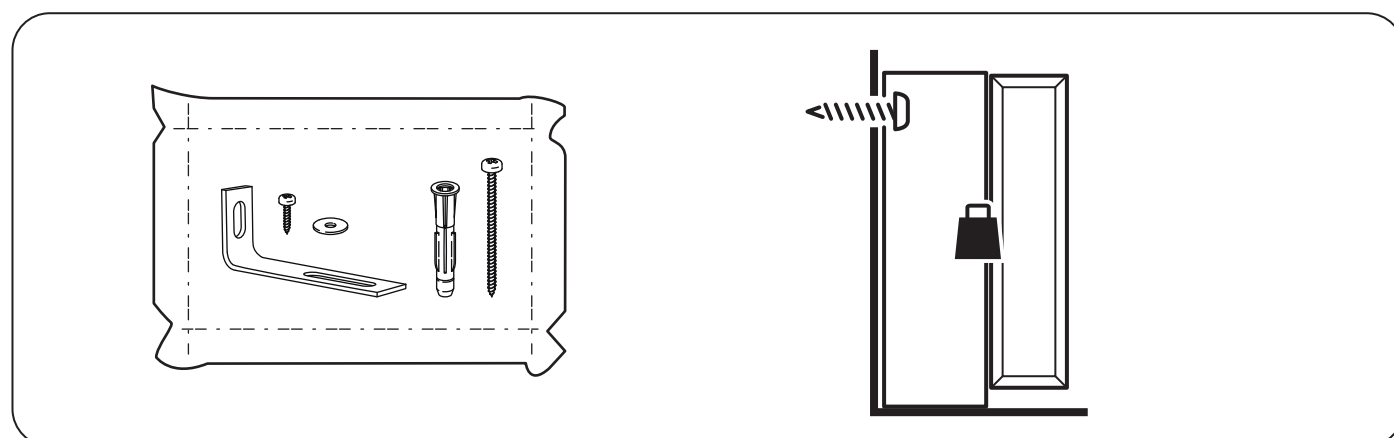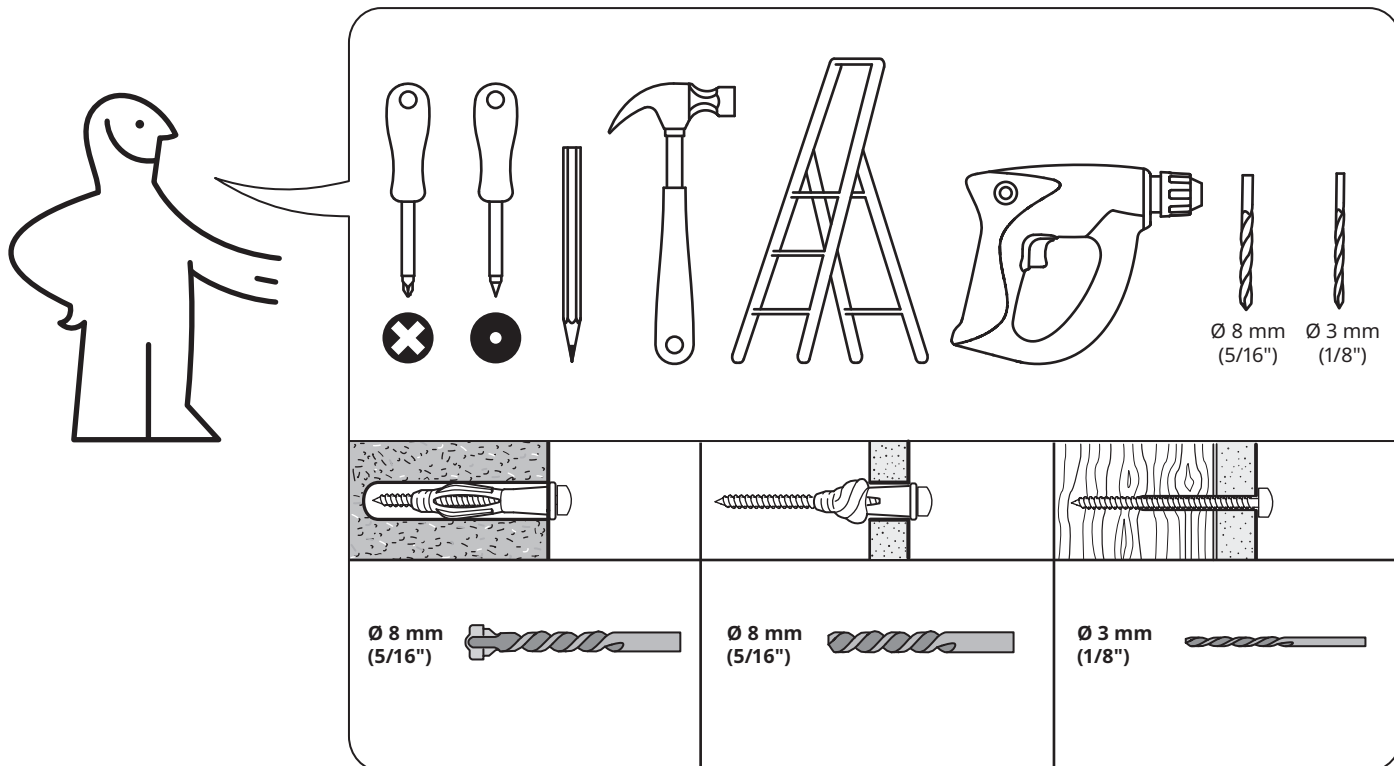

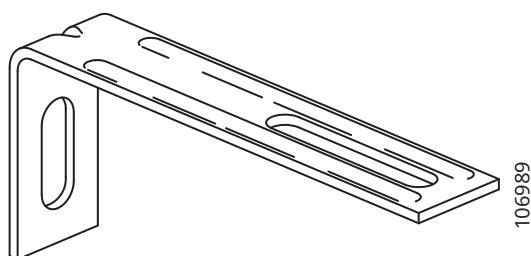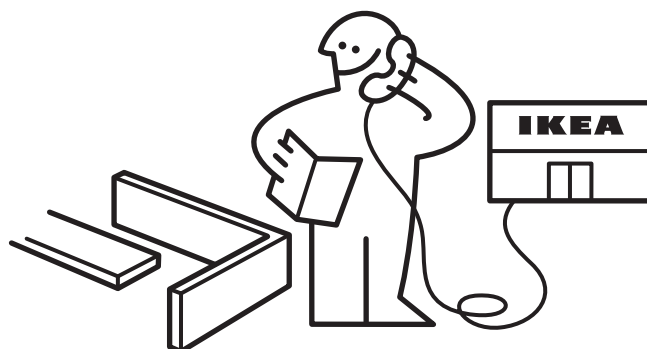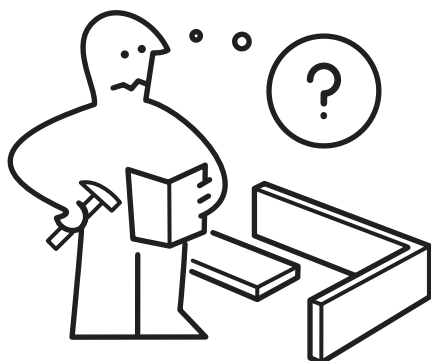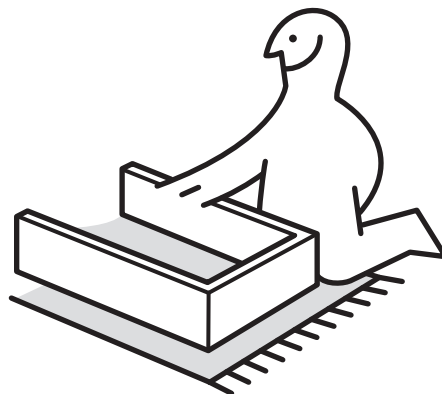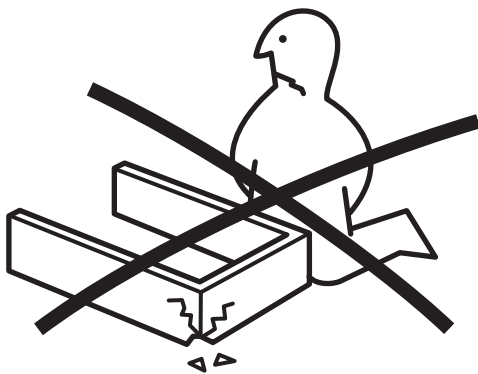

2x



 
2x



4x




2x




2x



 
1



18x

 


18x

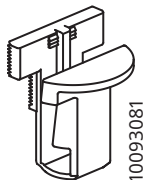 


14x



 
14x




9x

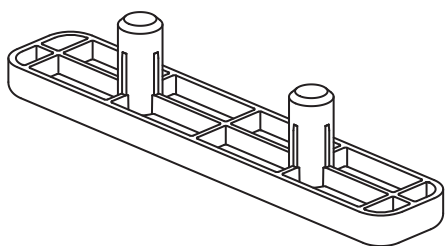 


2x

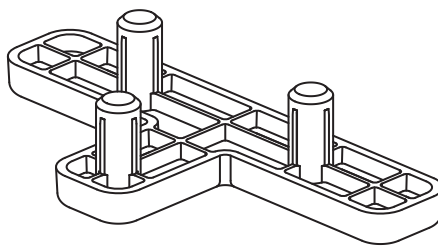 


2x

 


4x

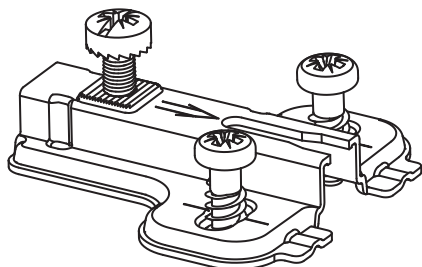 


4x

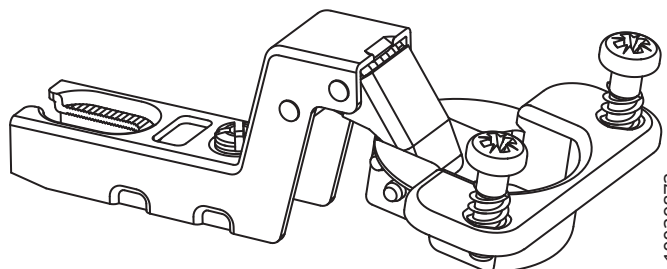 

4x

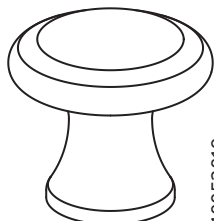 

2x

 

2x



16x



12

2



 
144574

8x



144575

8x

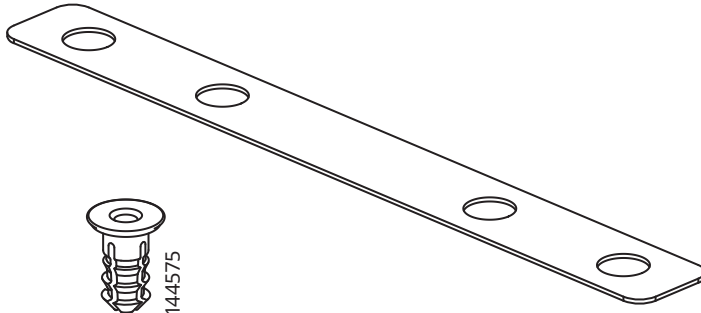

10049270

2x



 
22

3



144574
10051084

2x

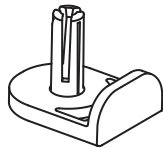



10050715
10042135
10070233

2x




31

  
1

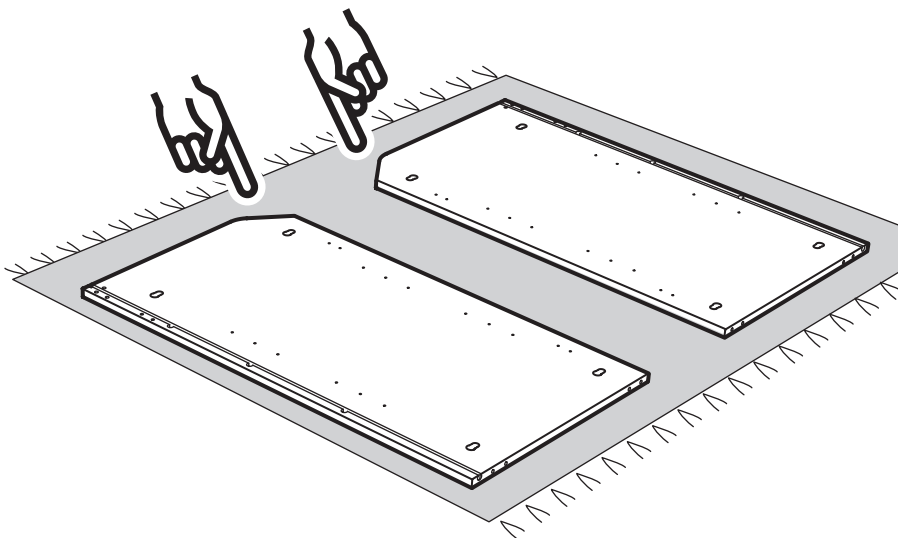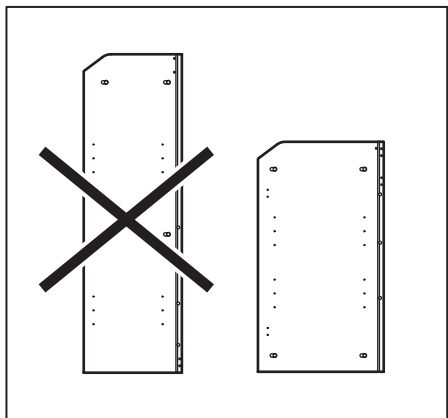


2

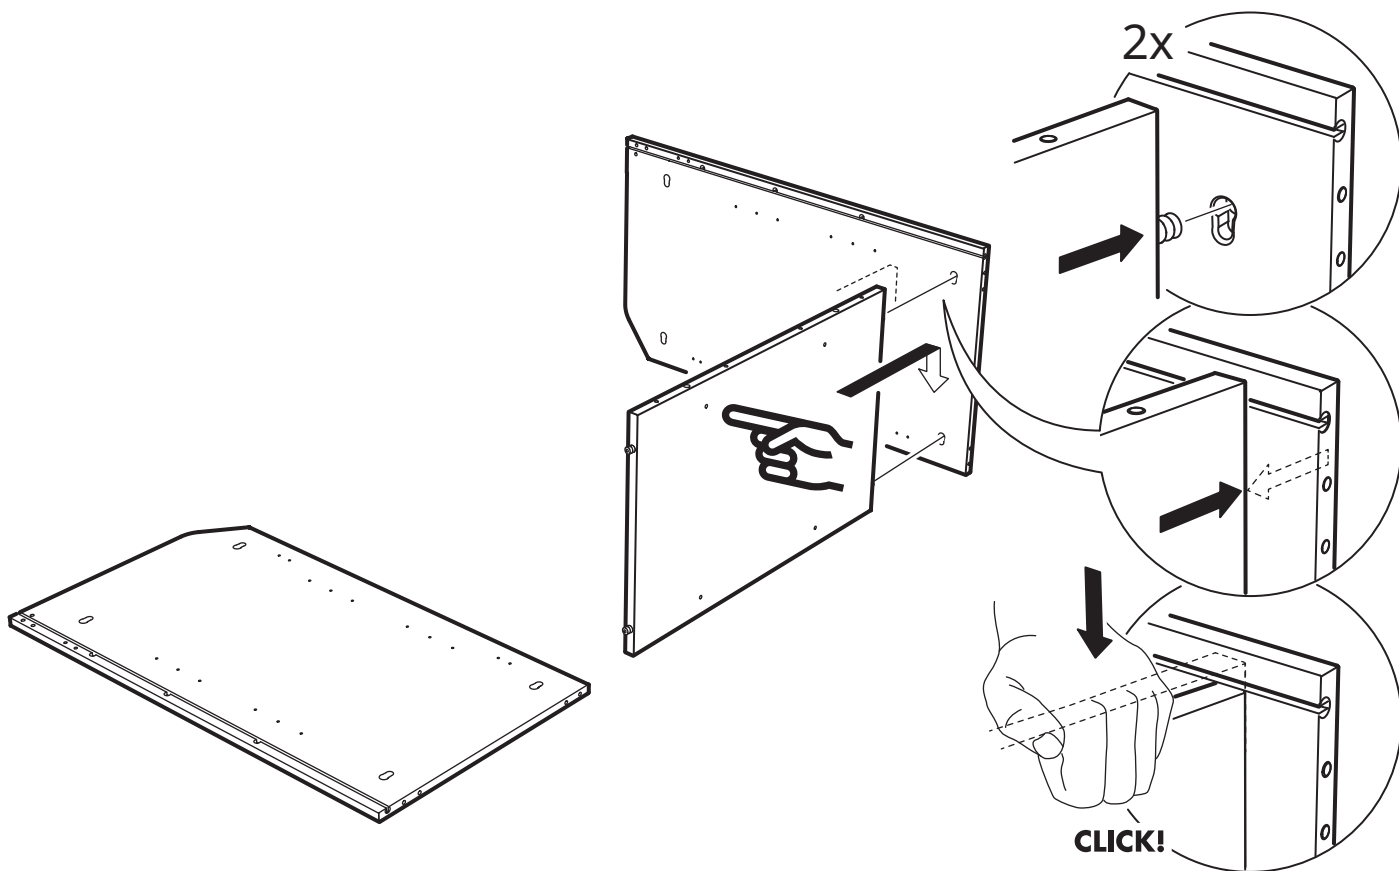 


3

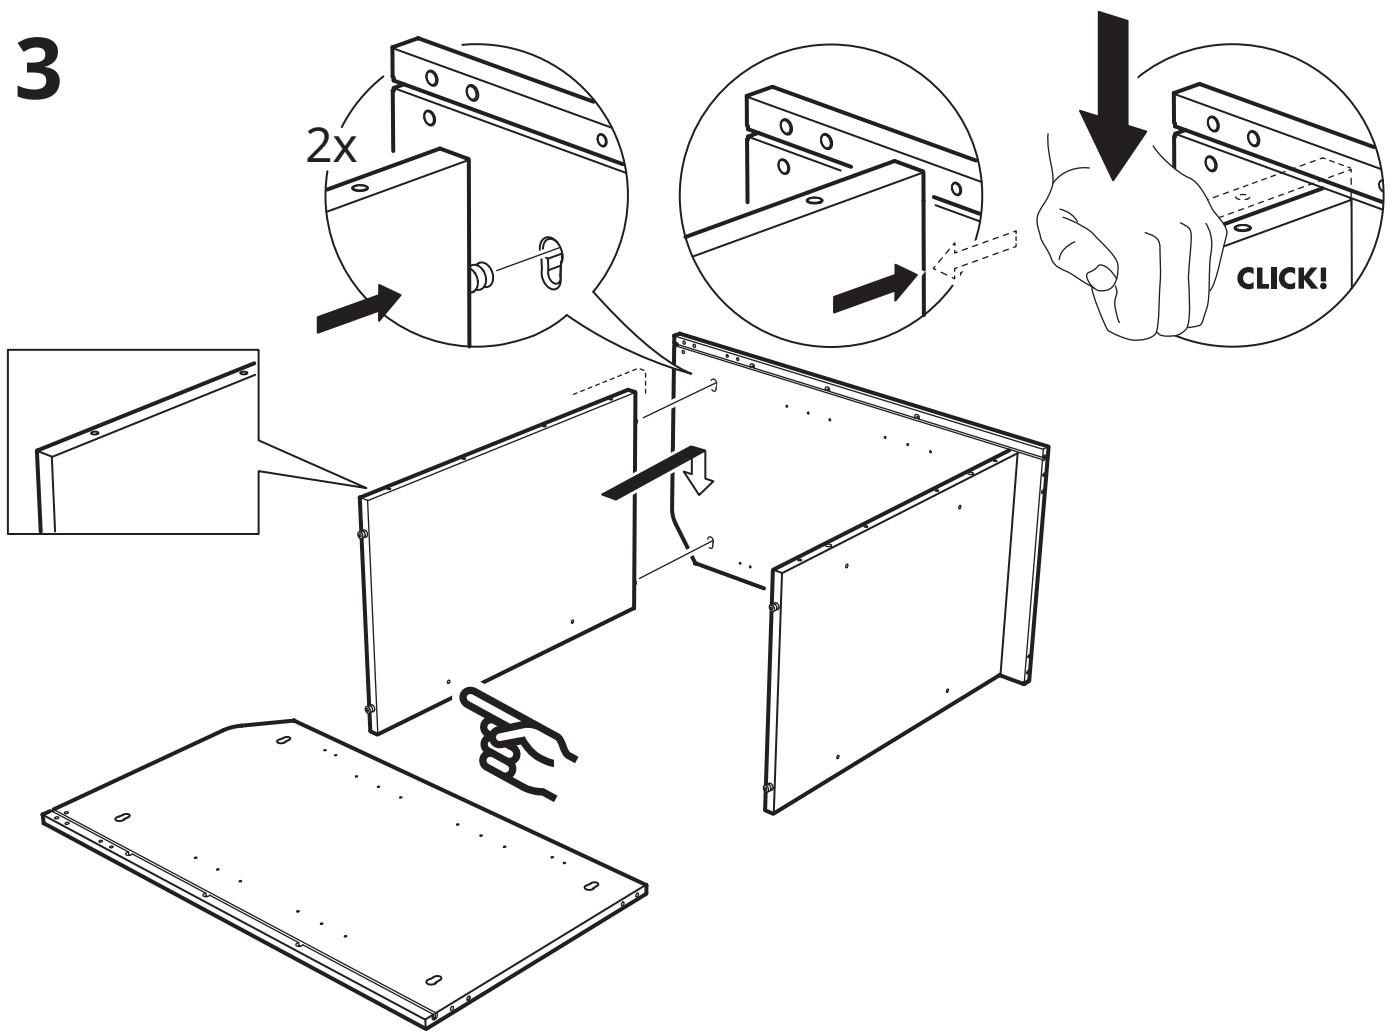 





4

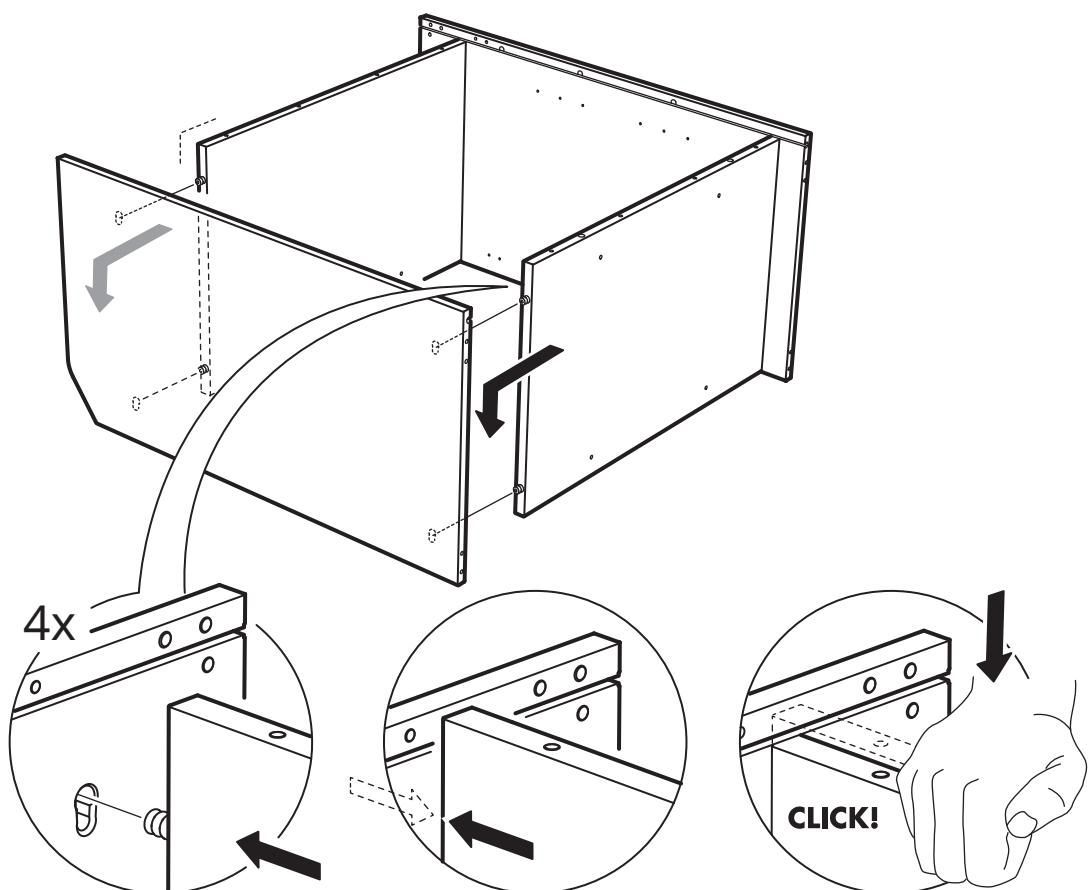 


5

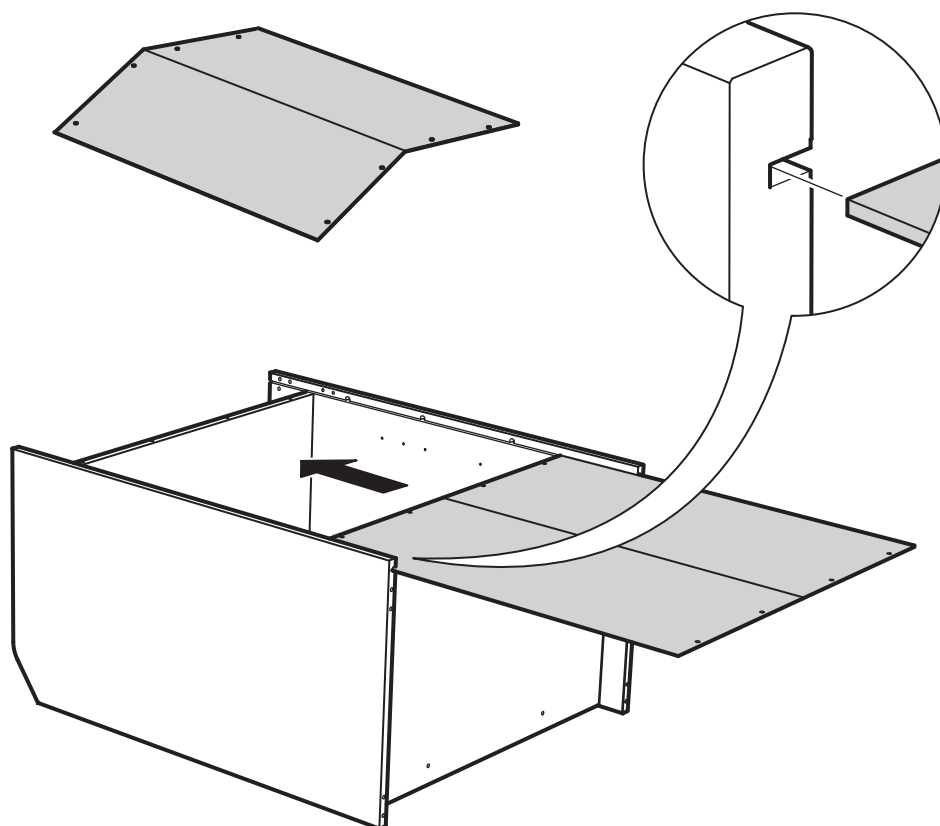 


6

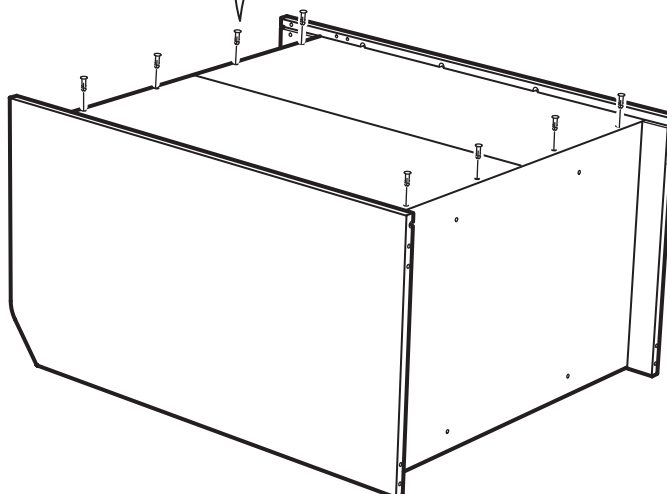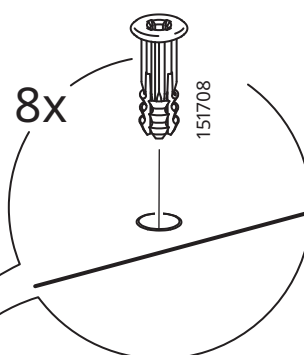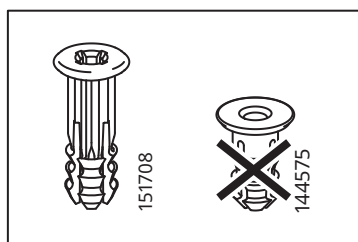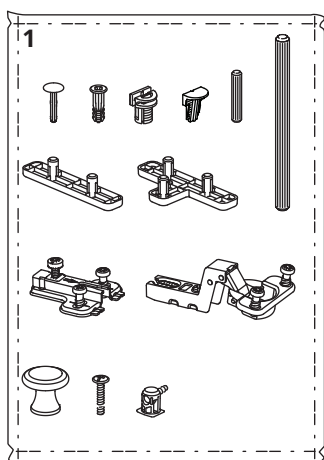    


7

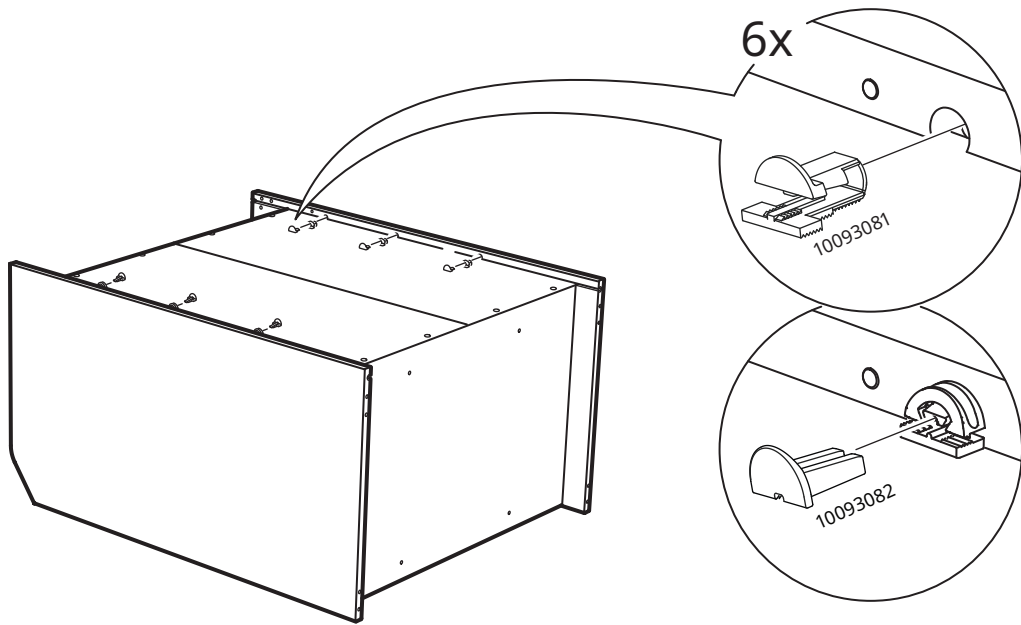 


8

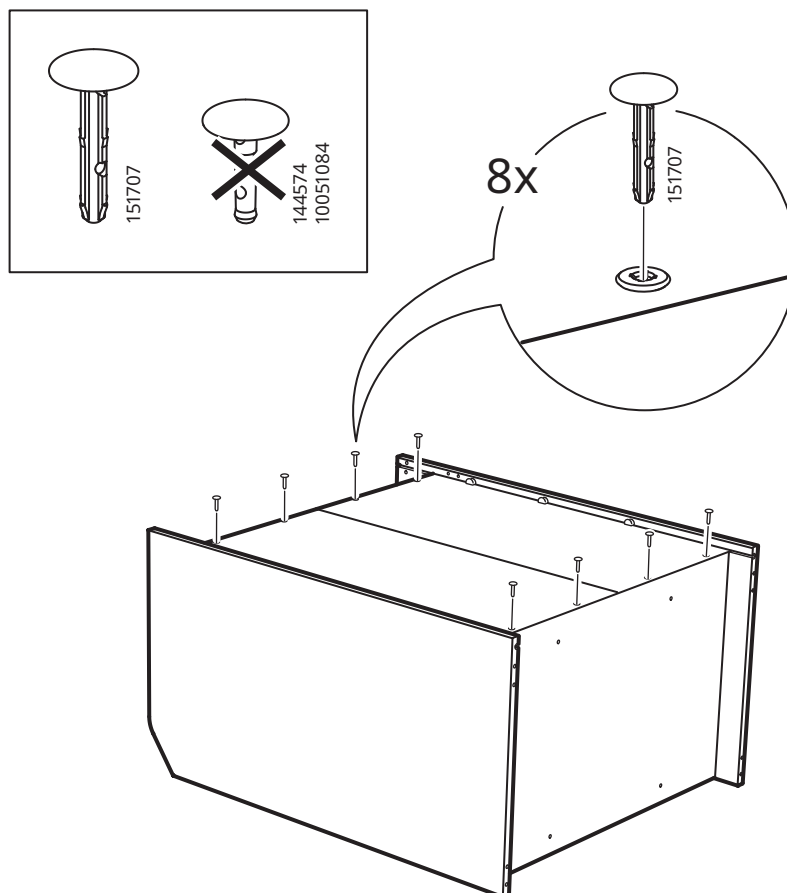 





9

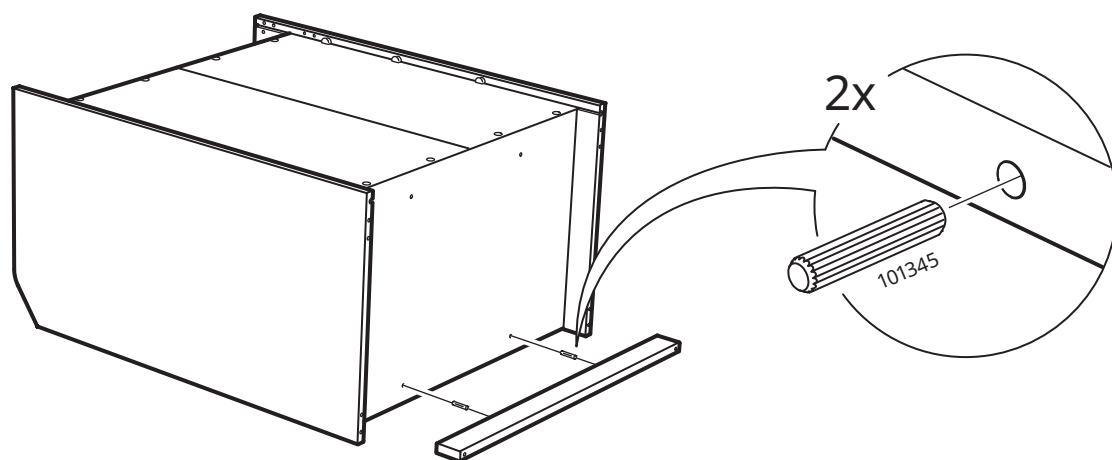 


10

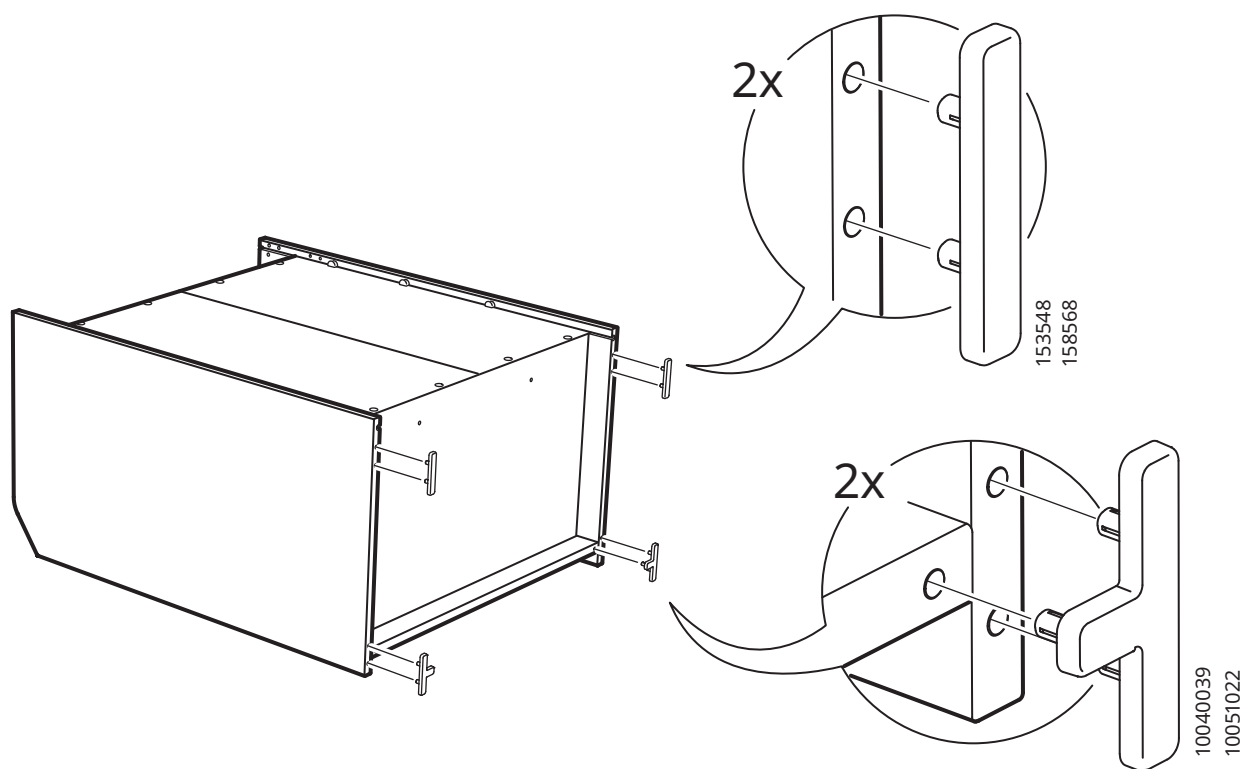 


11

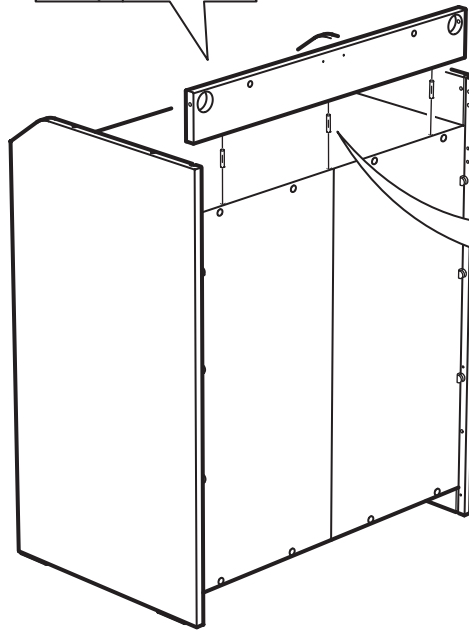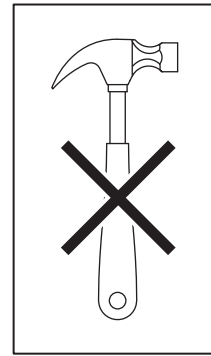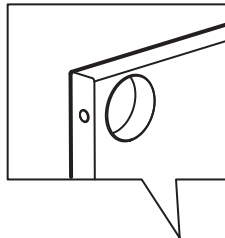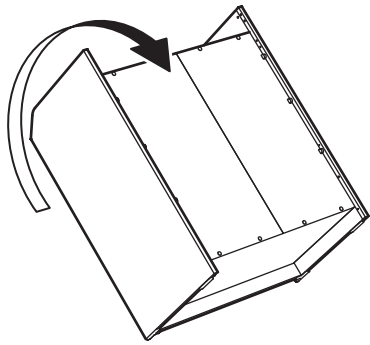    





3x

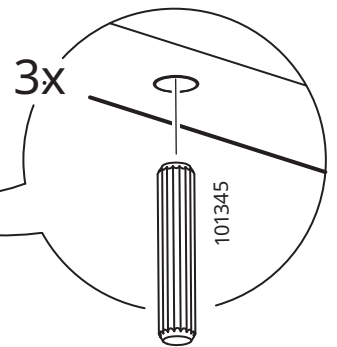 


12

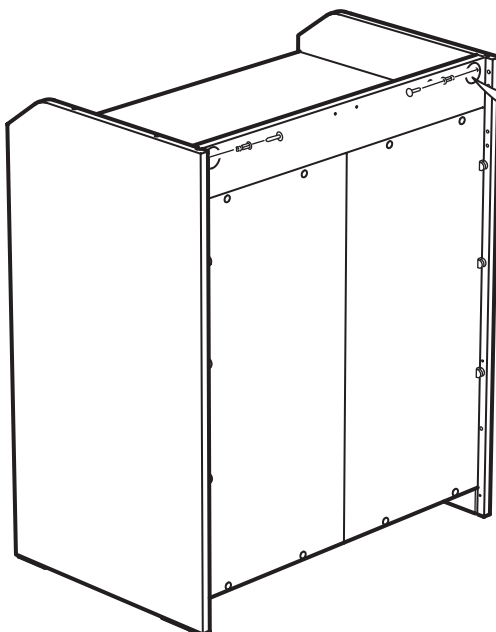 


2x

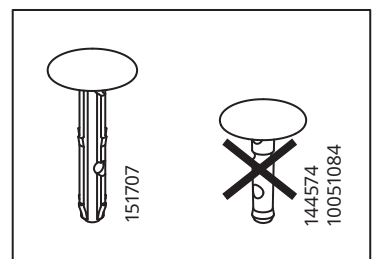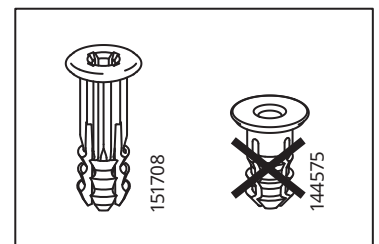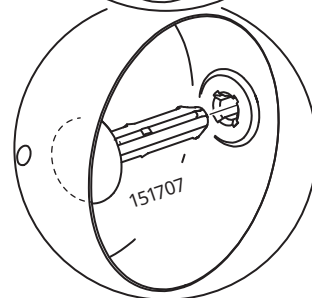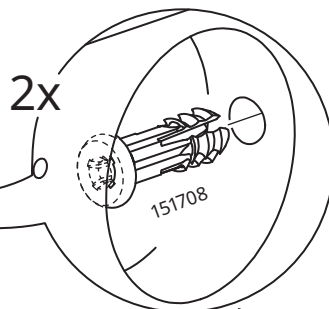    


13

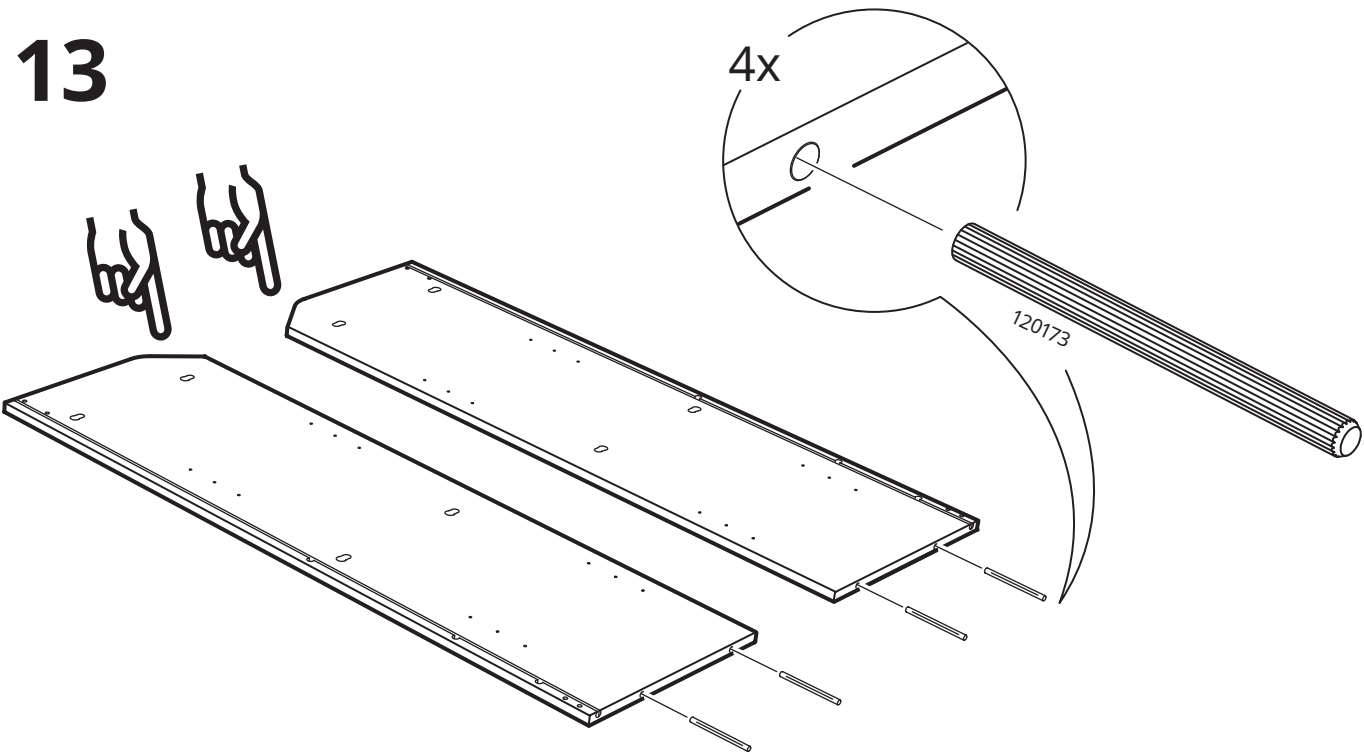 


14

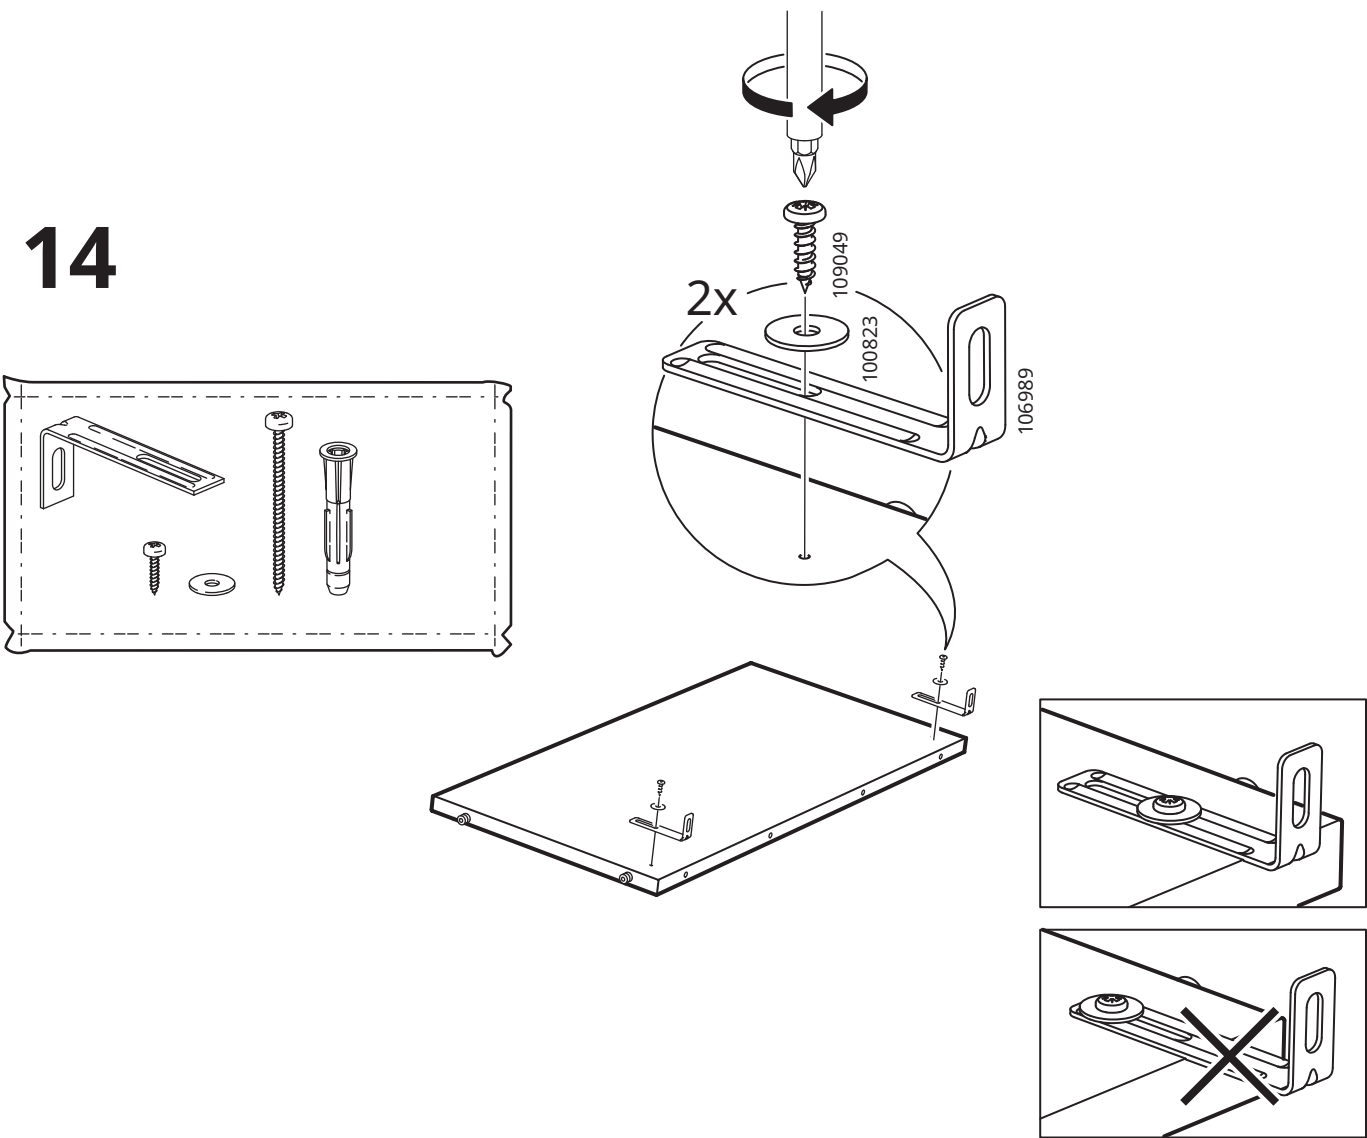 


15

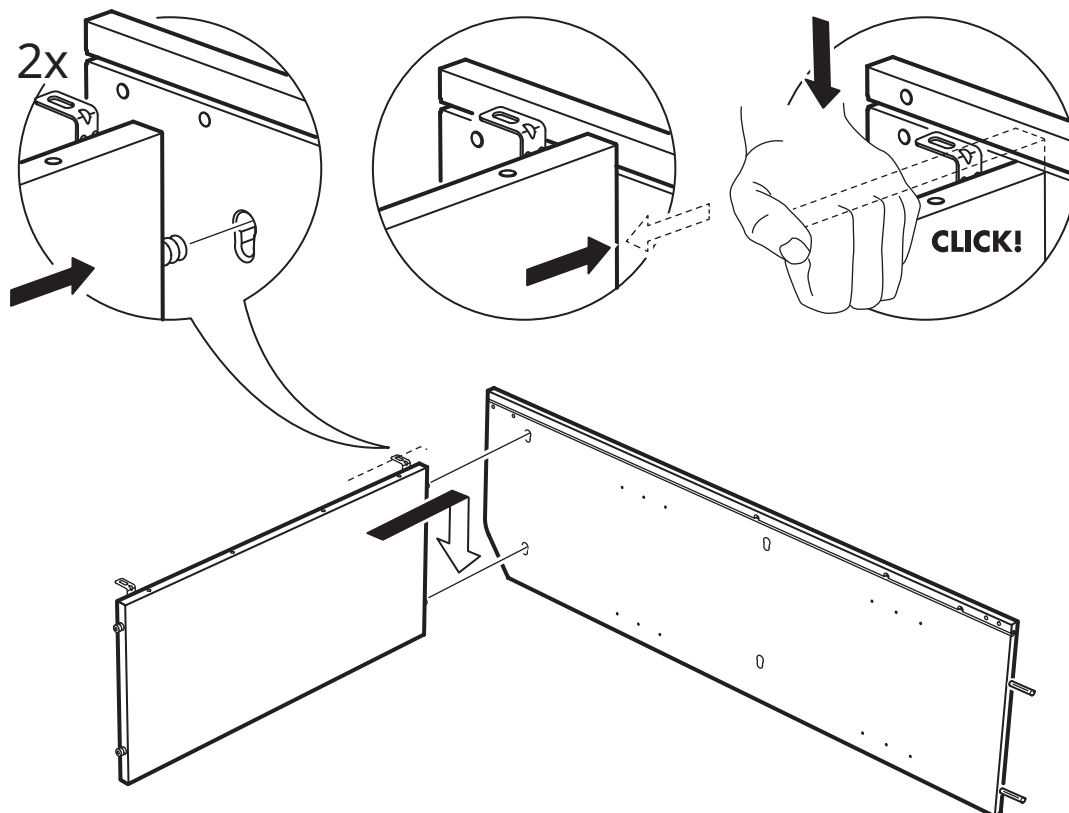 


16

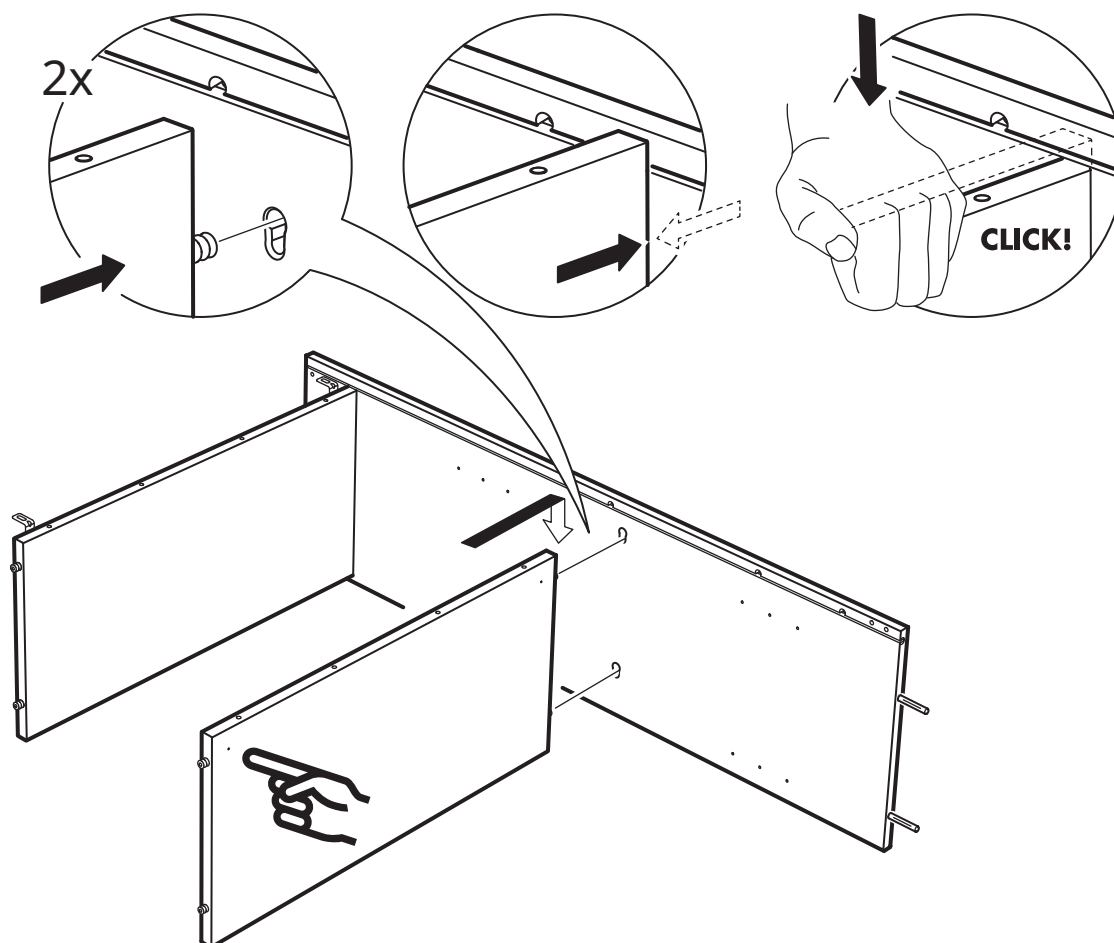 


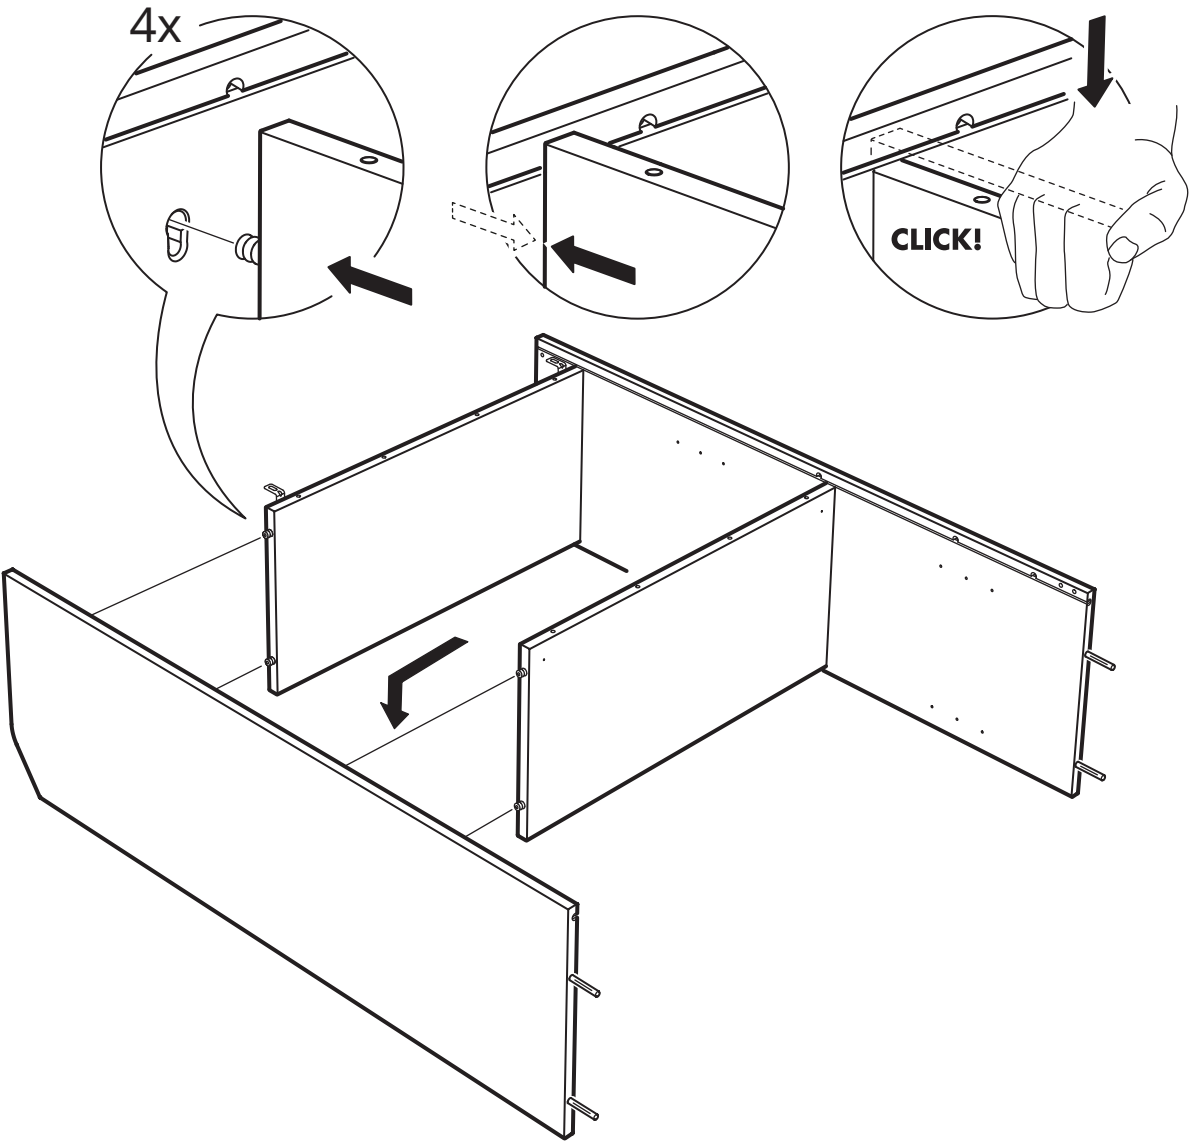 


18

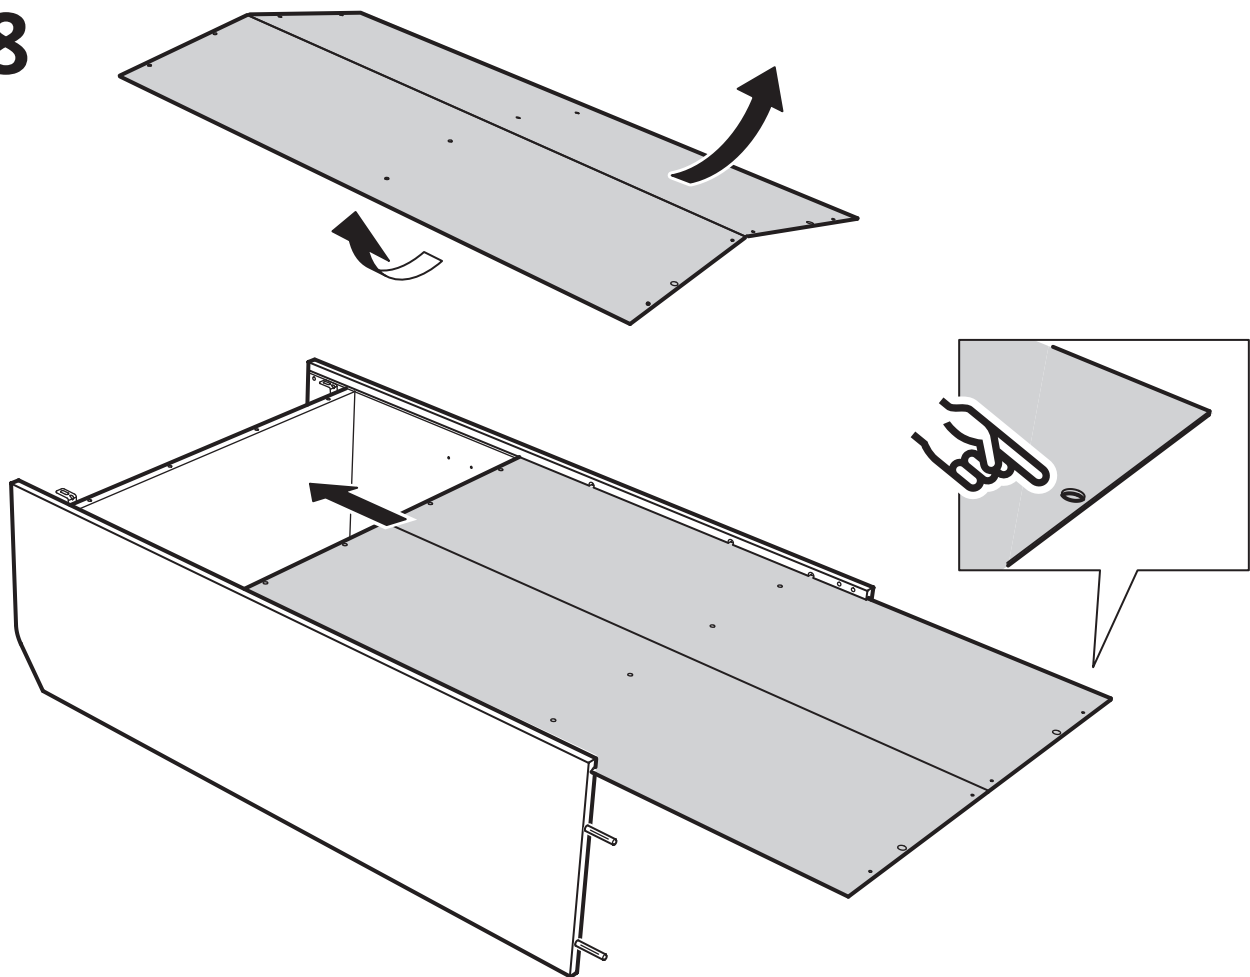 


19

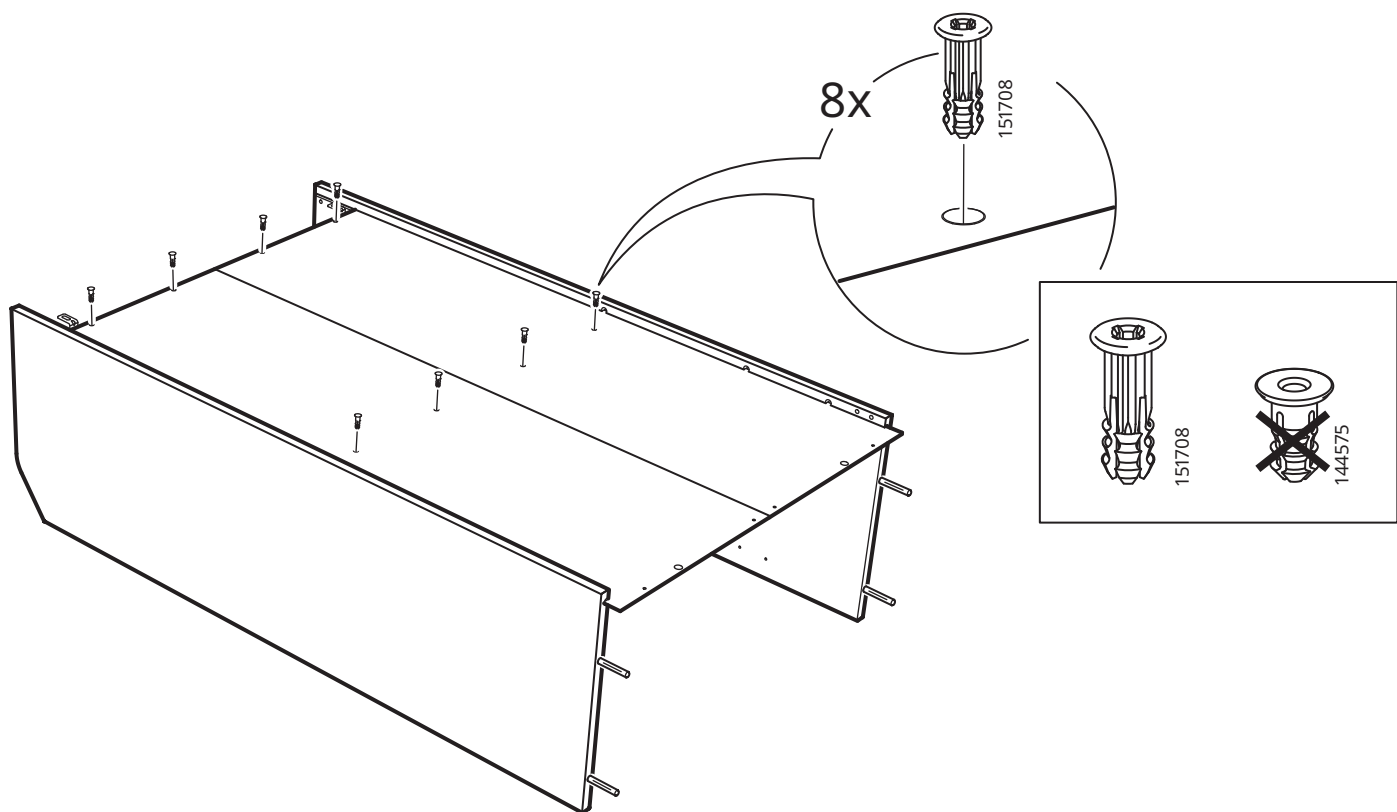 


20



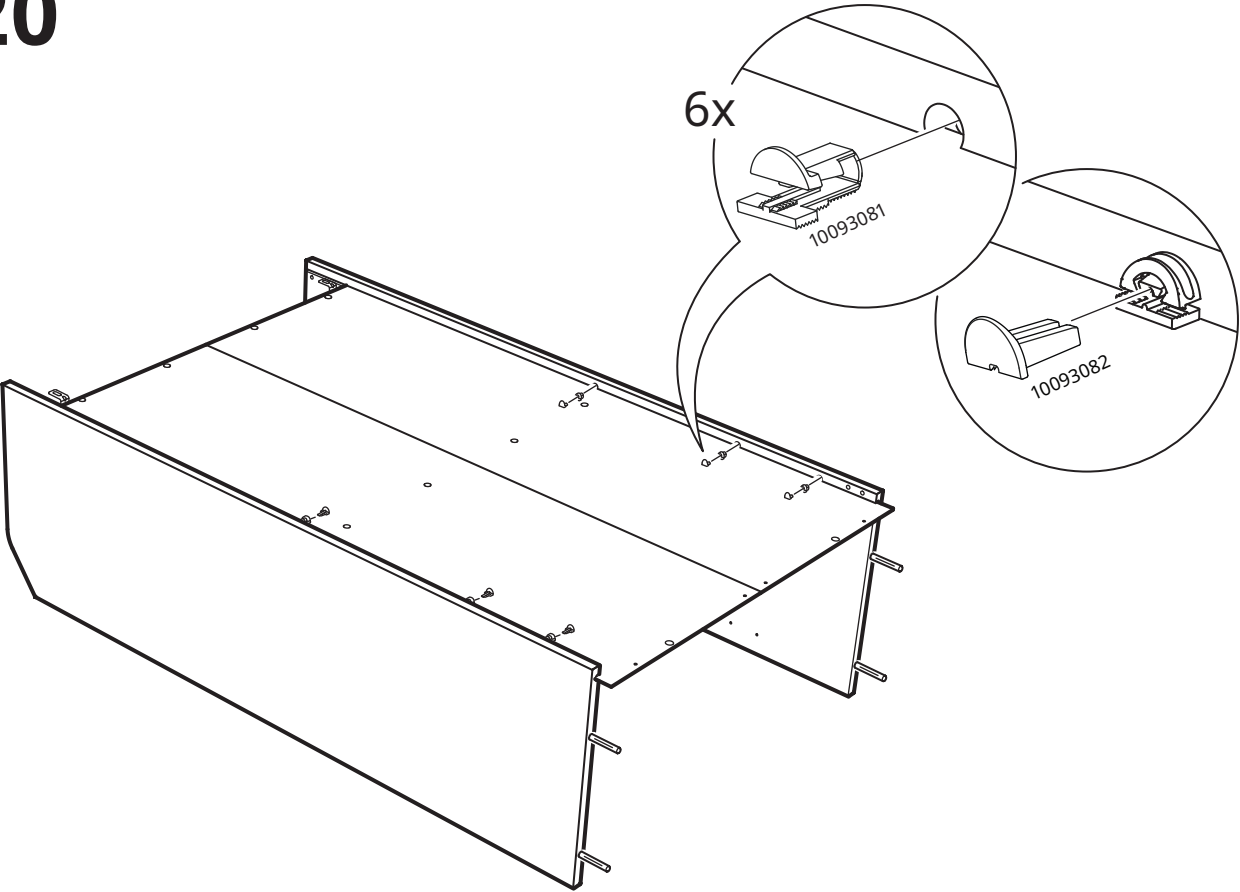 


21


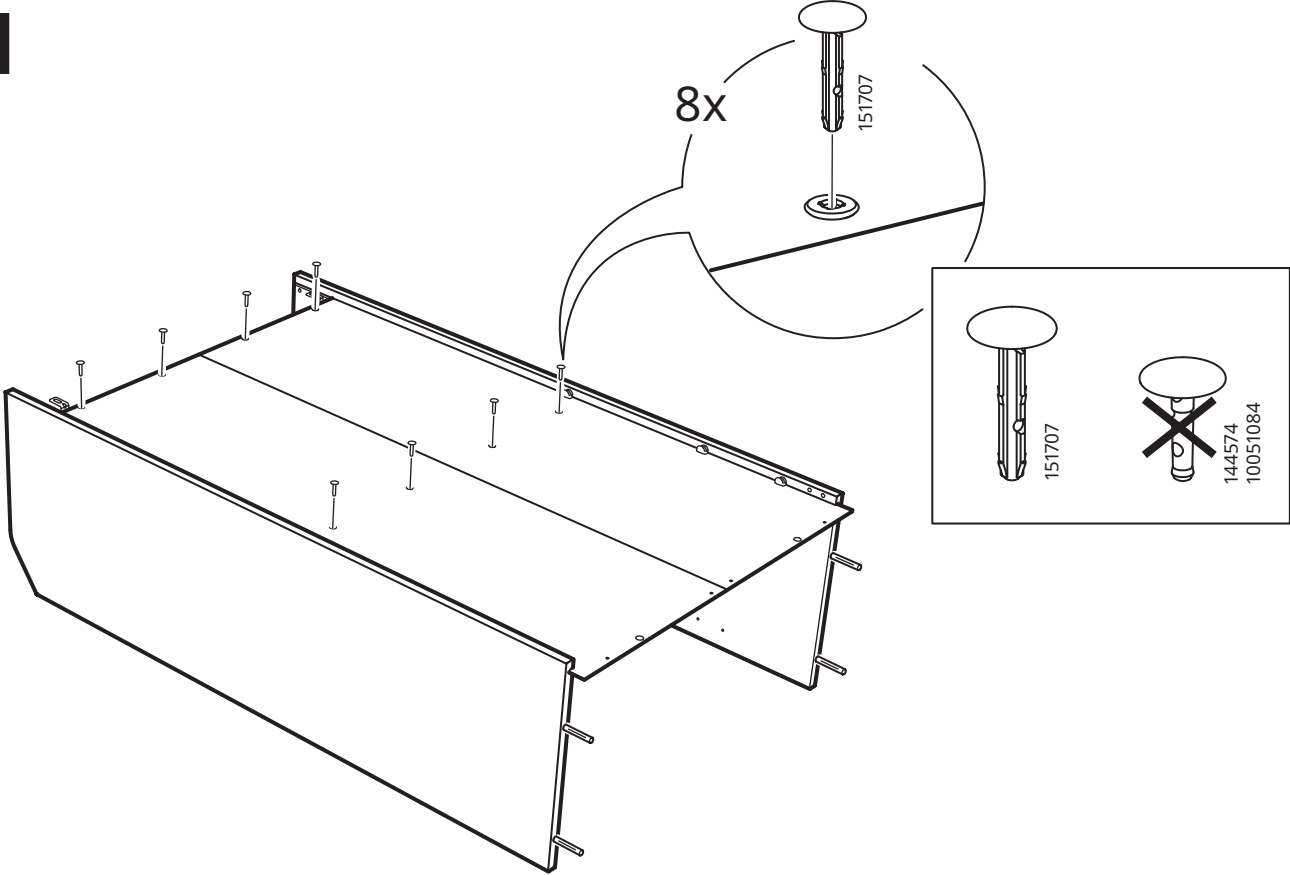 


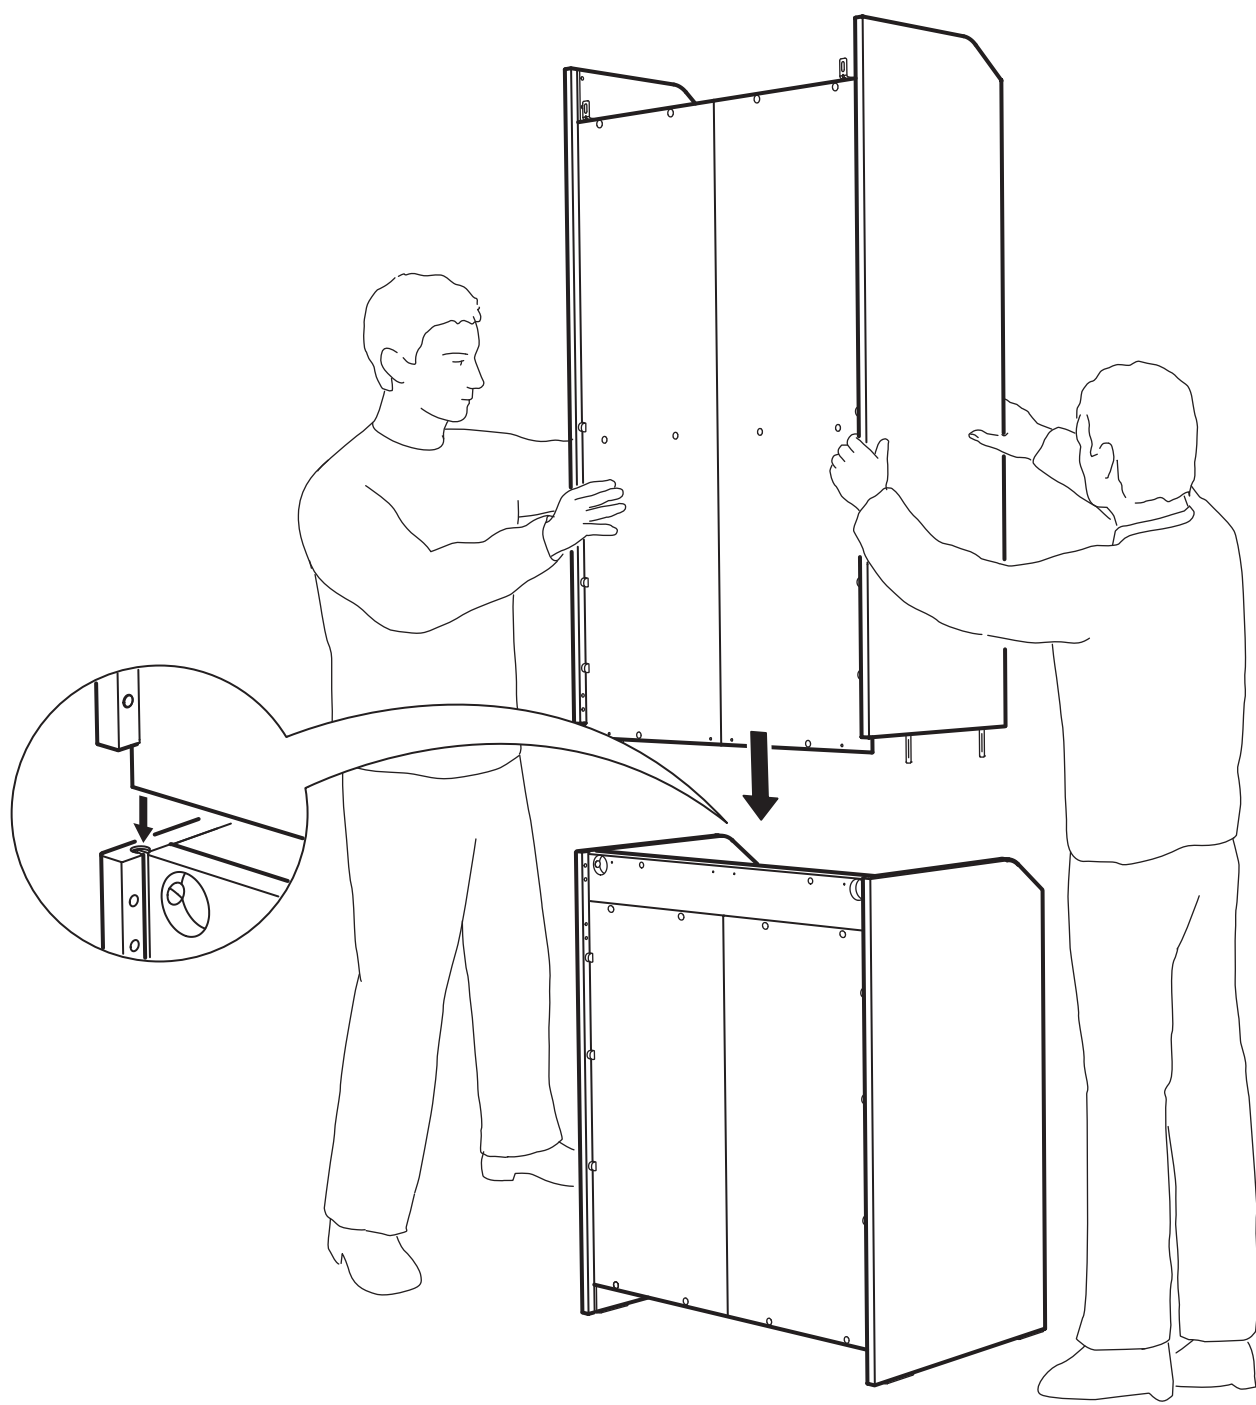 



23

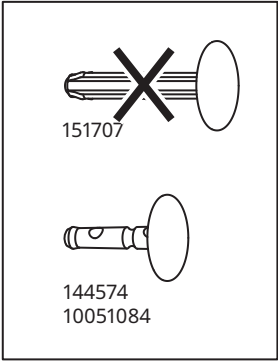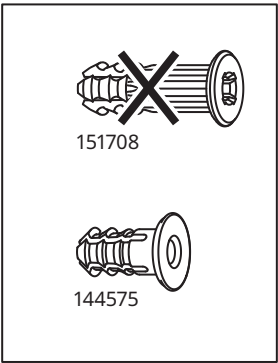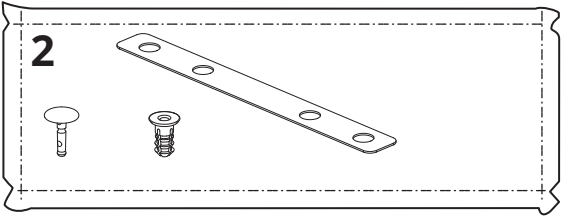   



2x

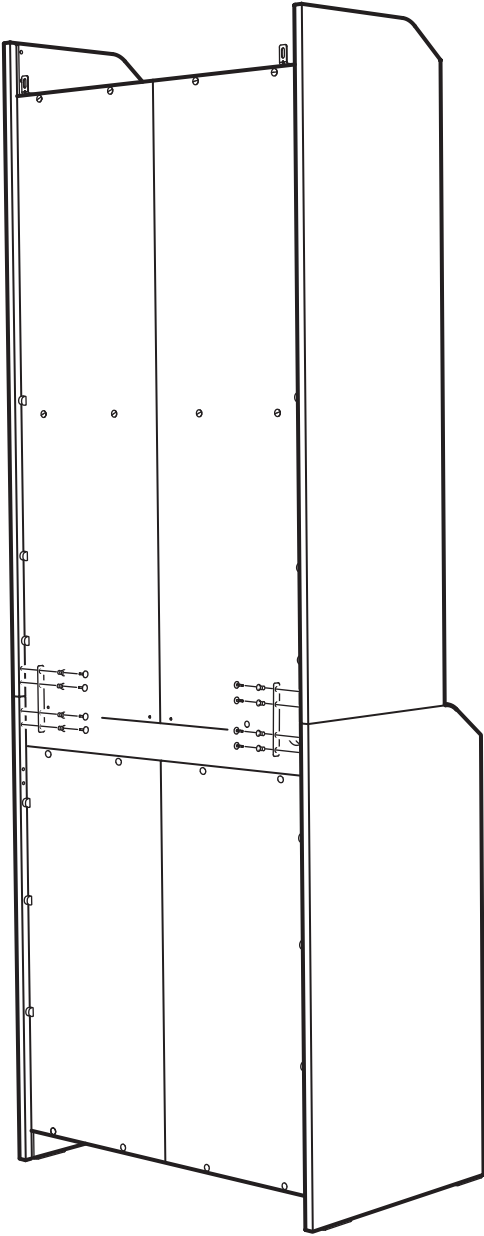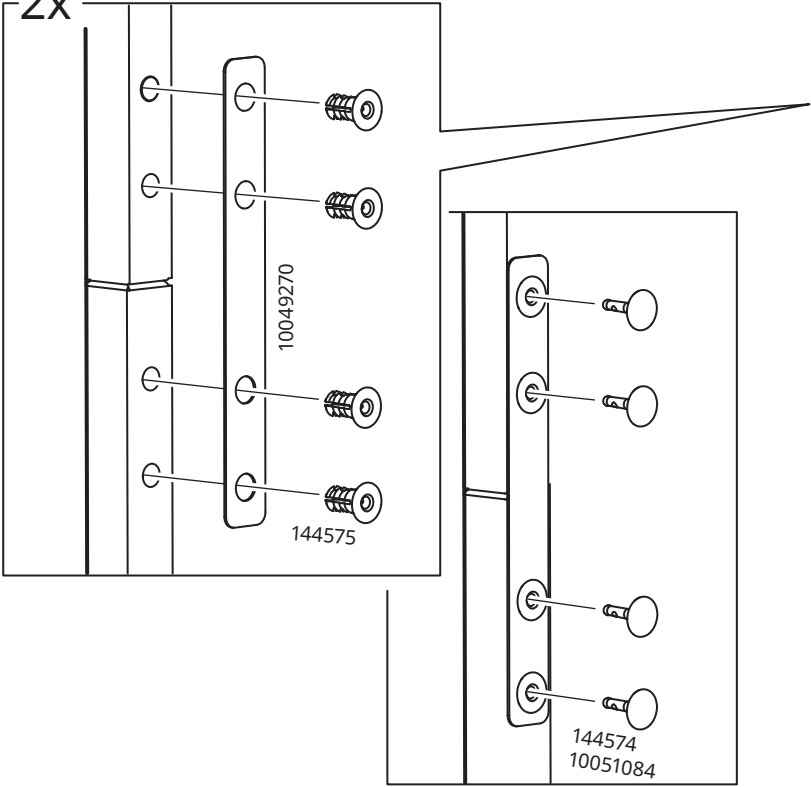  


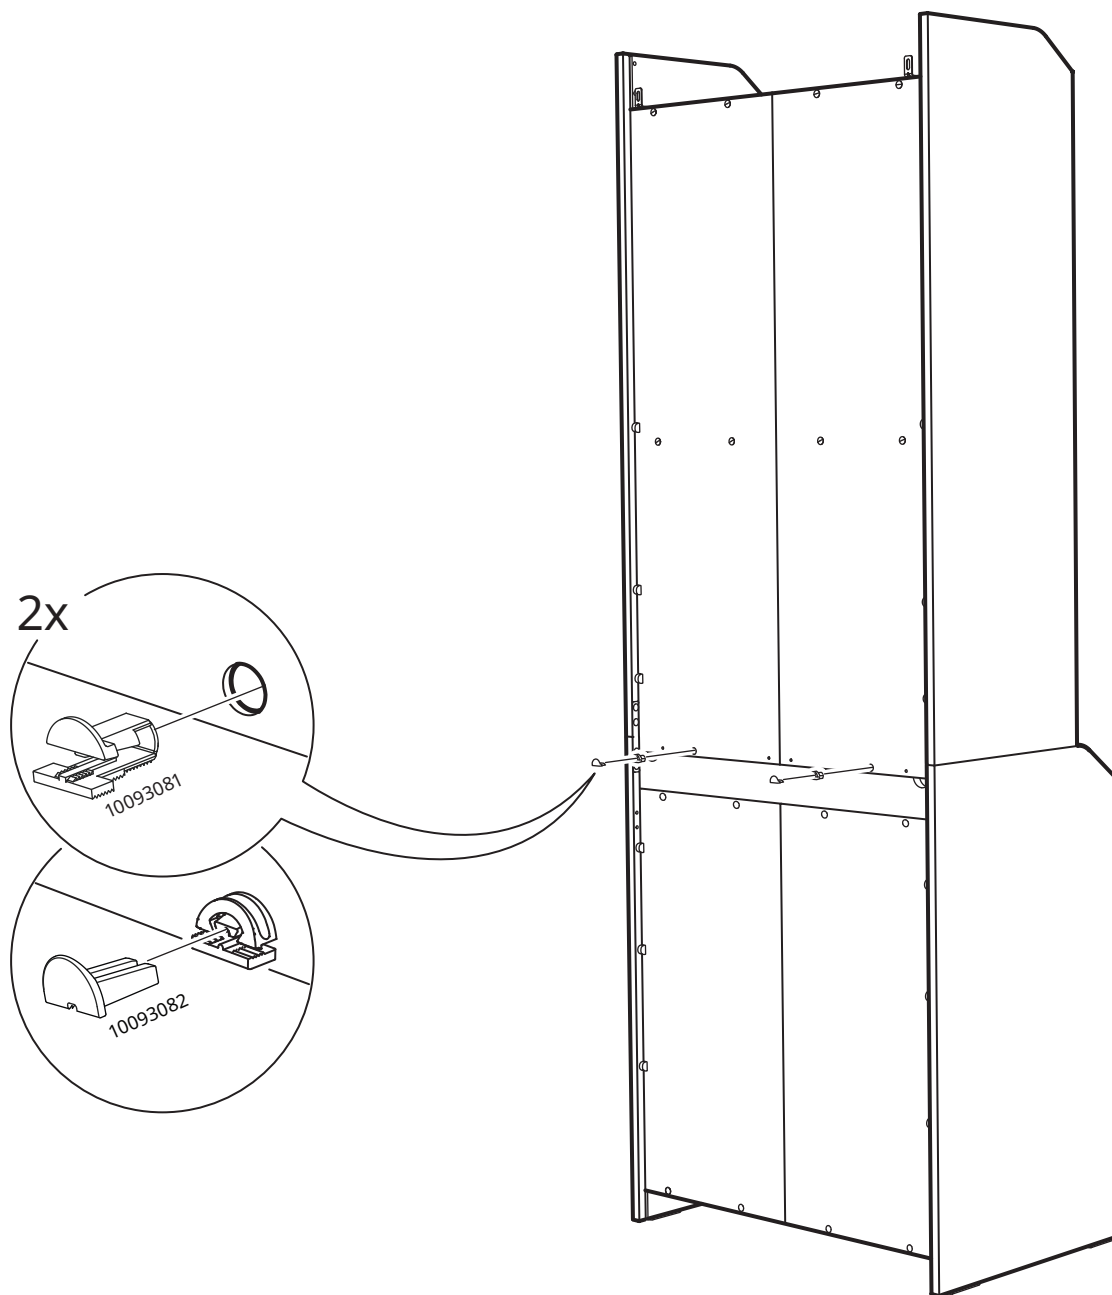 


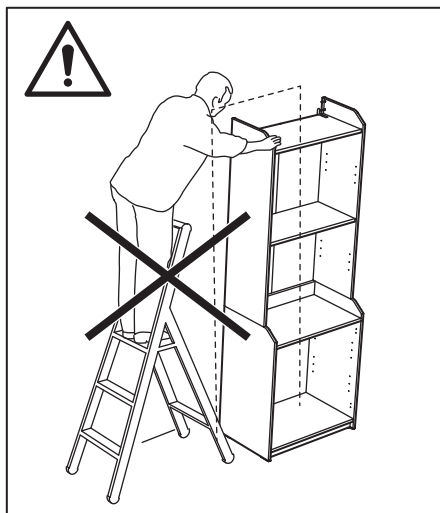 

25

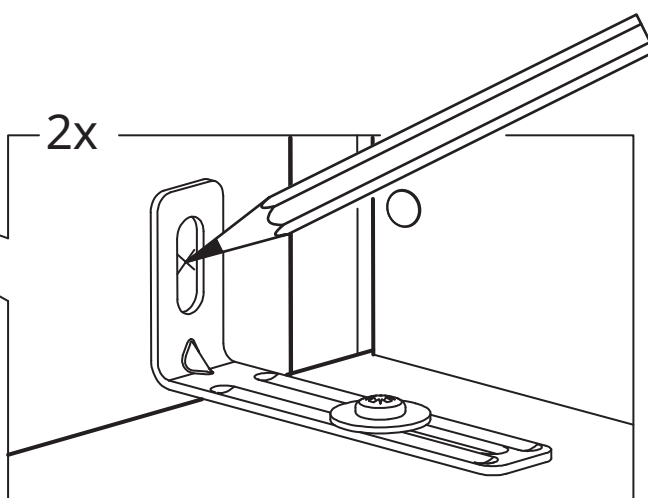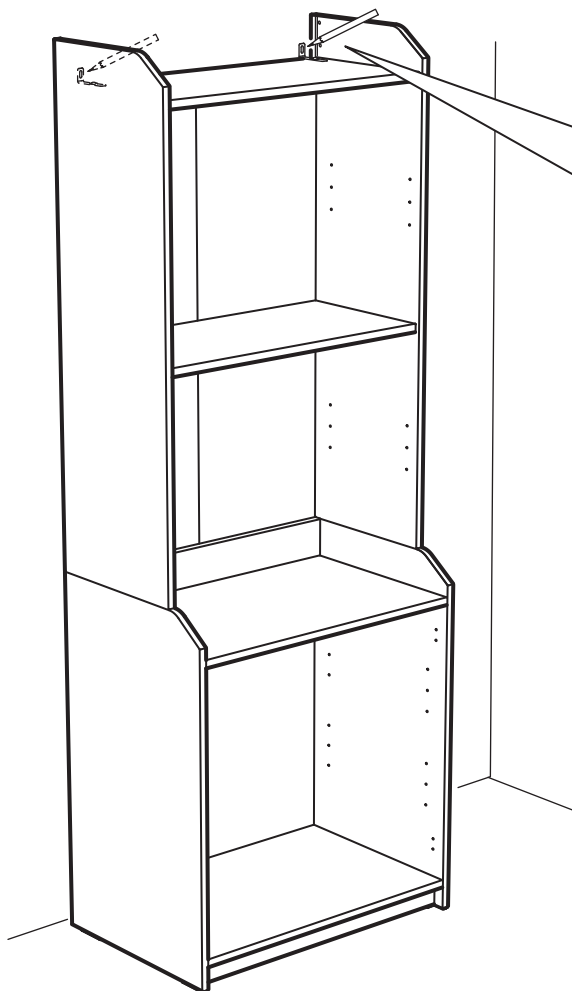  

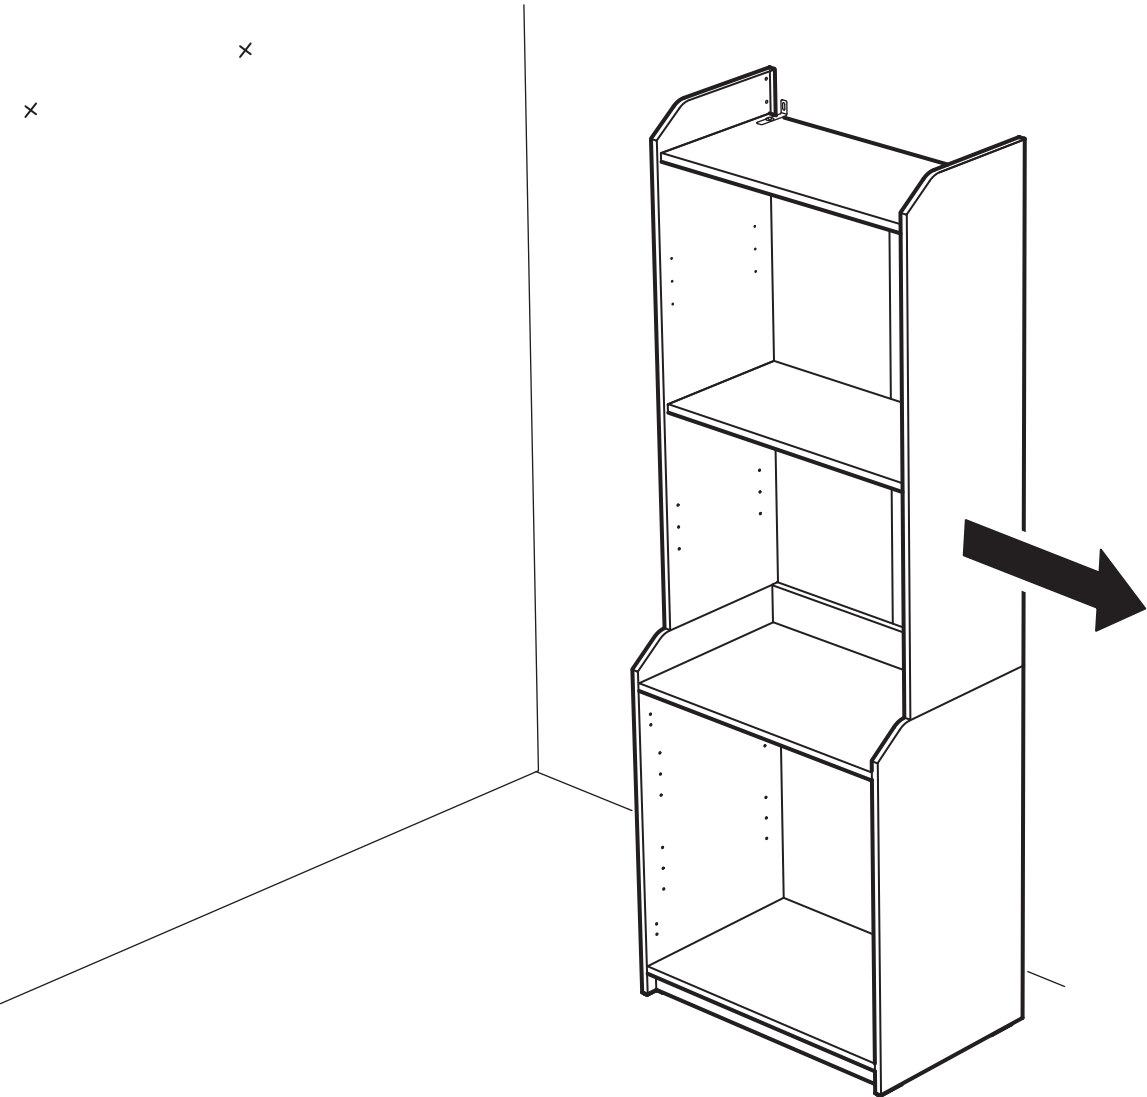 

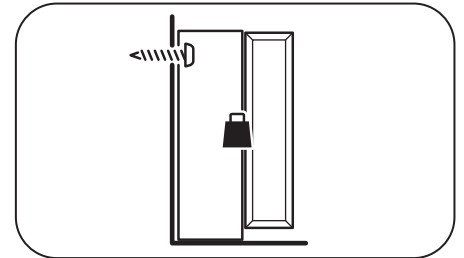 


English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

עברית

הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.

 
A

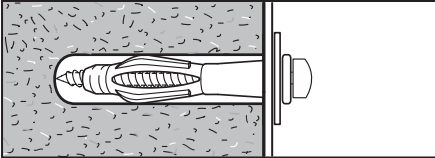


Ø 8 mm
(5/16")



 1




2

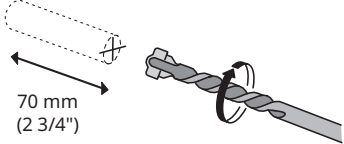 


70 mm
(2 3/4")

 3

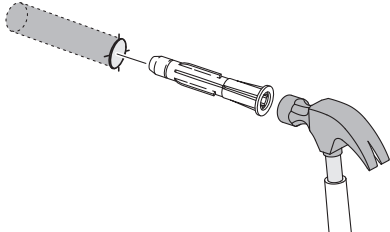


B

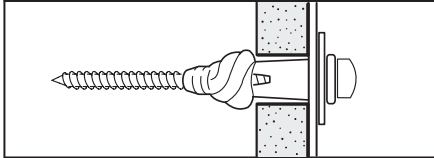 


Ø 8 mm
(5/16")



 1




2

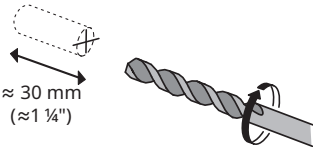 


≈ 30 mm
(≈ 1 1/4")

 3

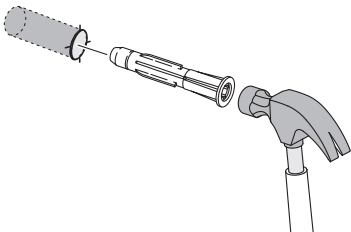


C

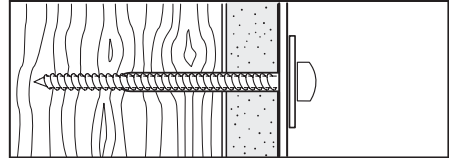 

Ø 3 mm
(1/8")



 1



2

 


≈ 30 mm
(≈ 1 1/4")


3




27

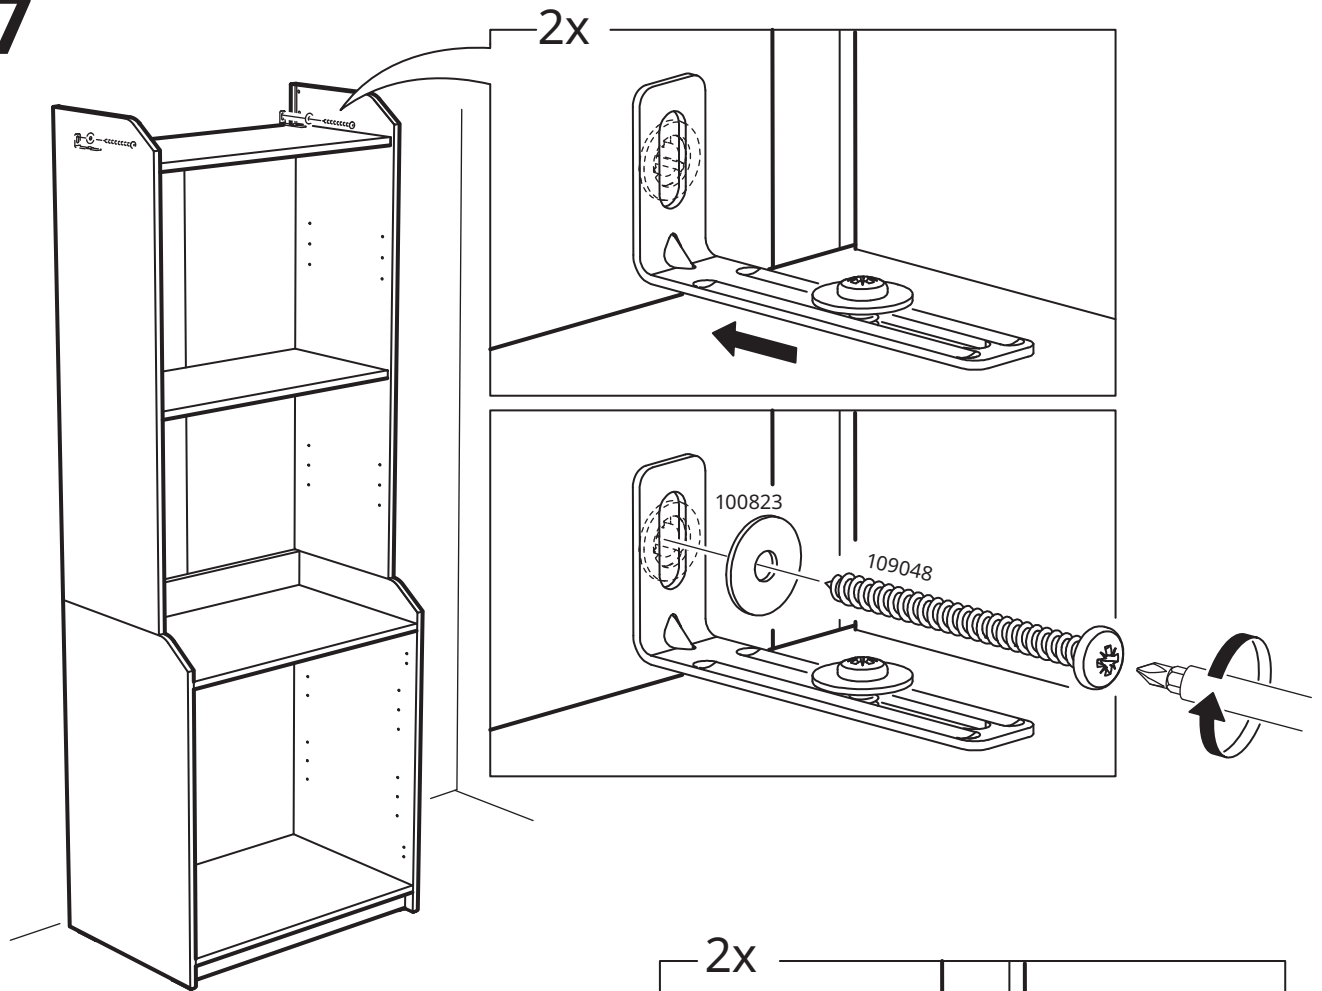


28

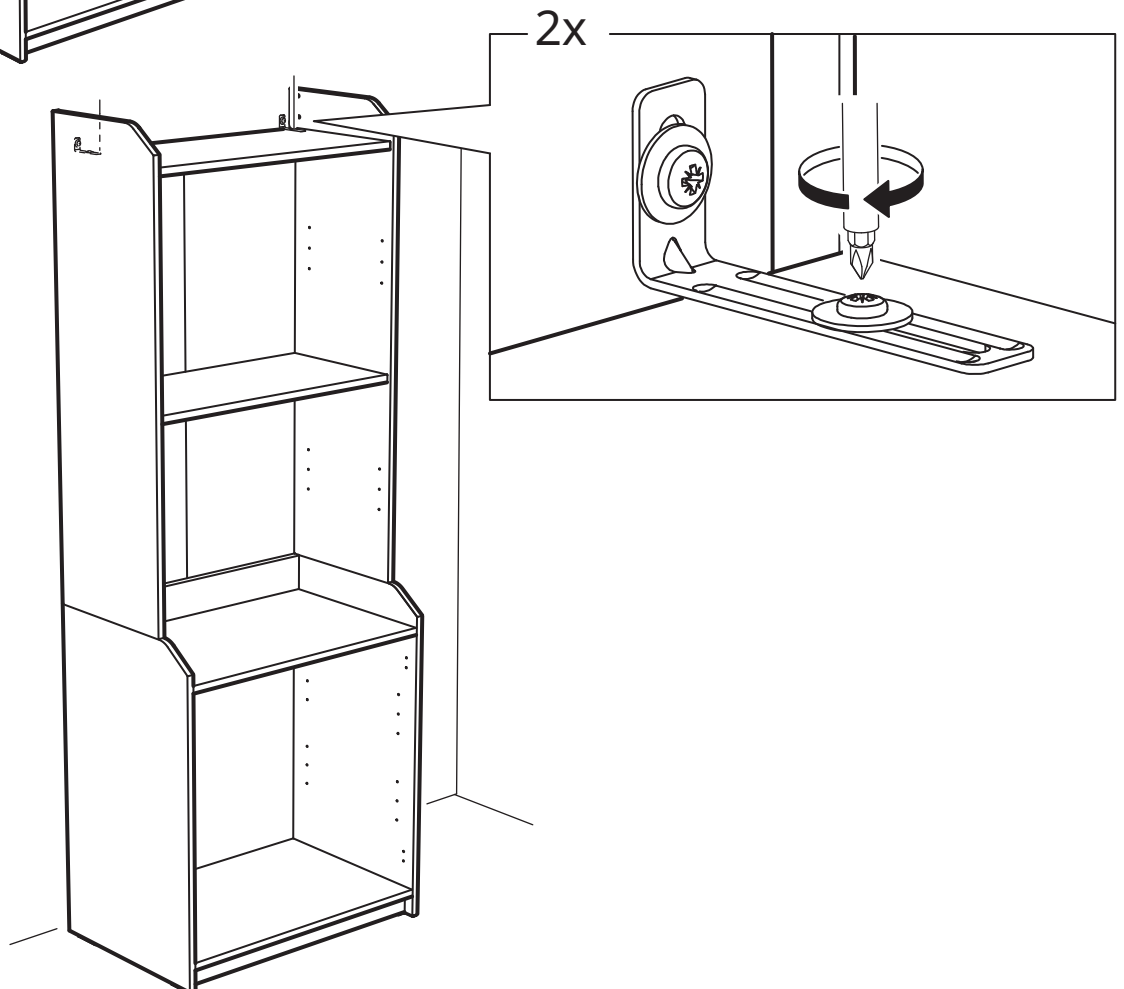 


29



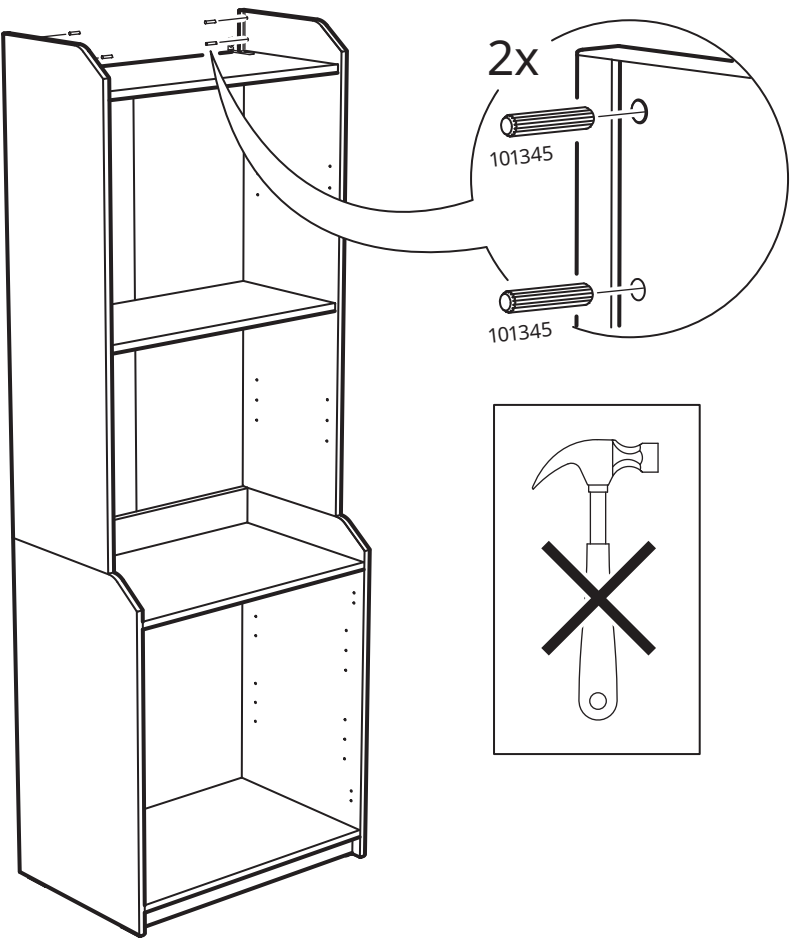 


30

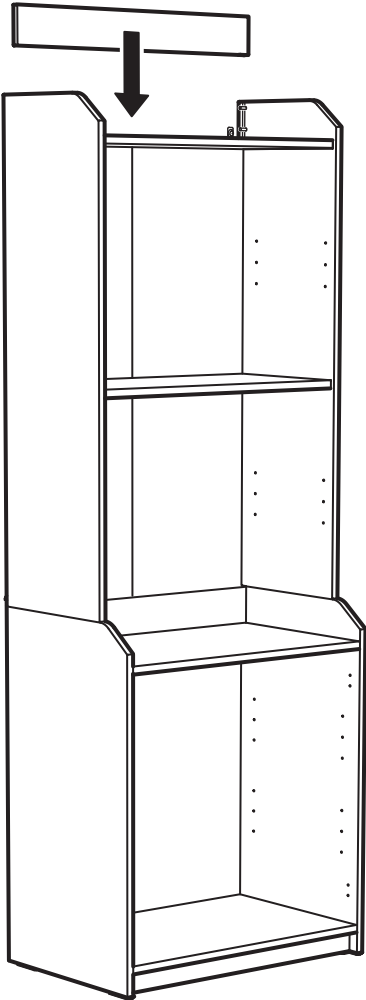 


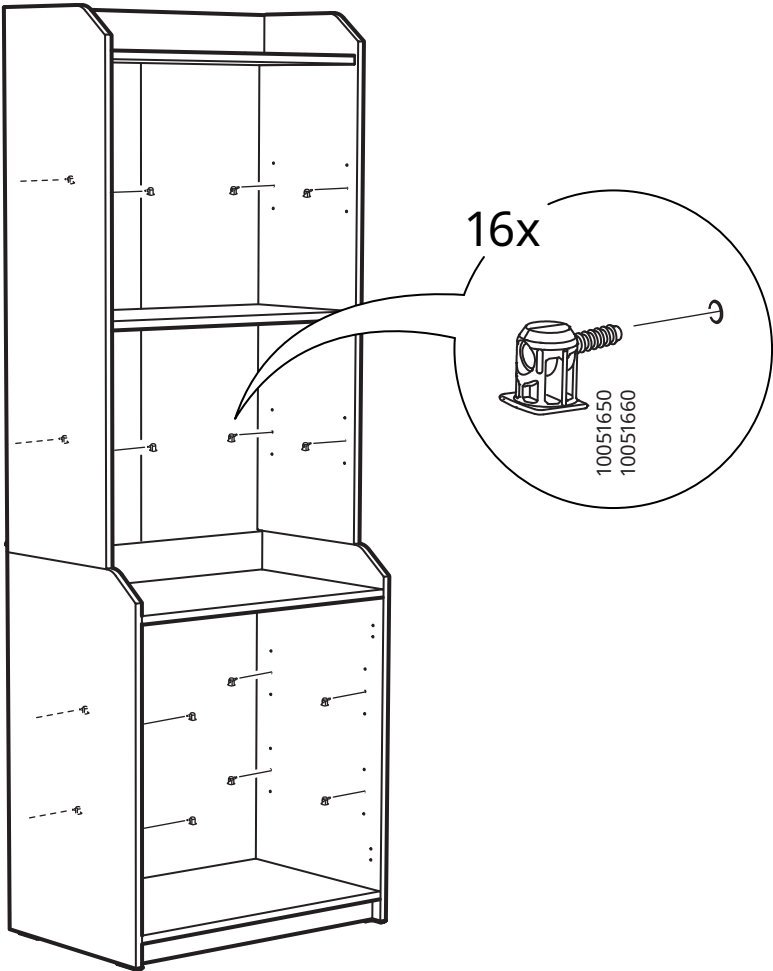 


32

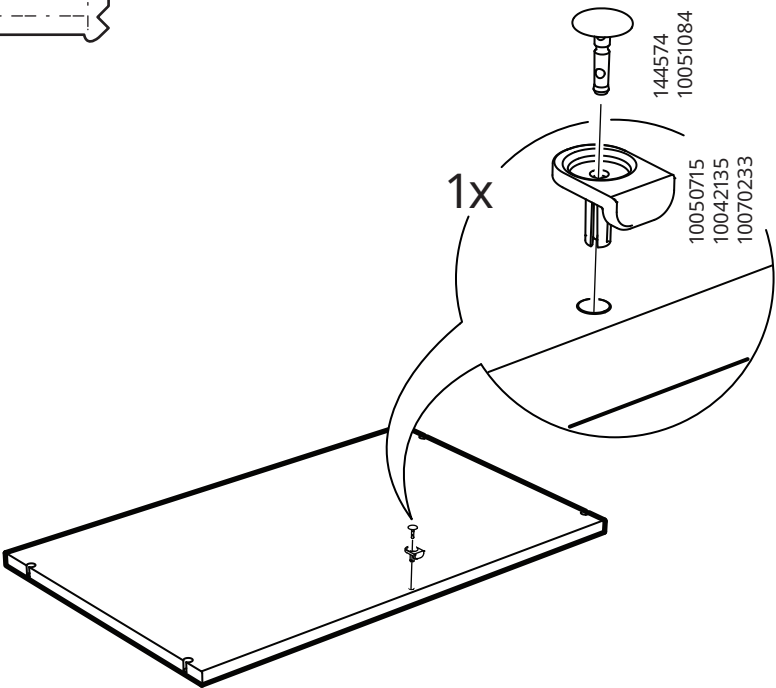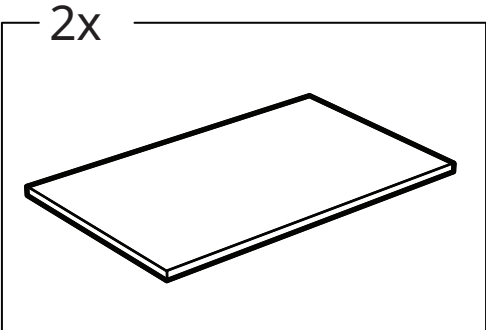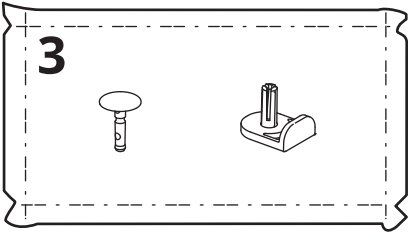   

33

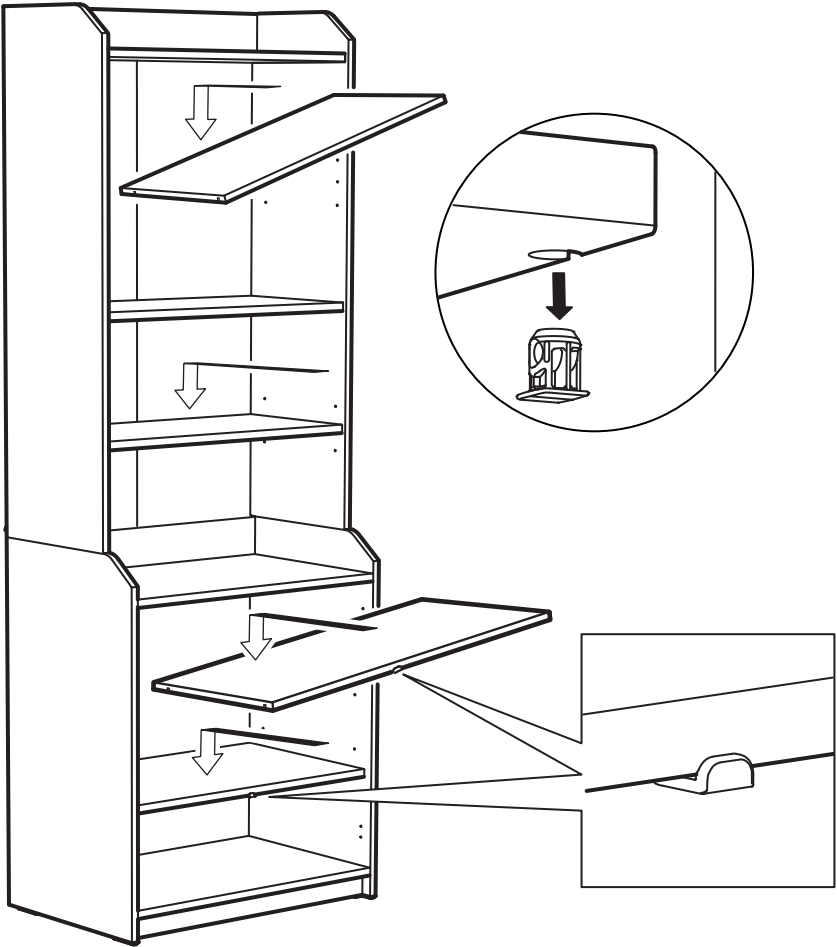 

34

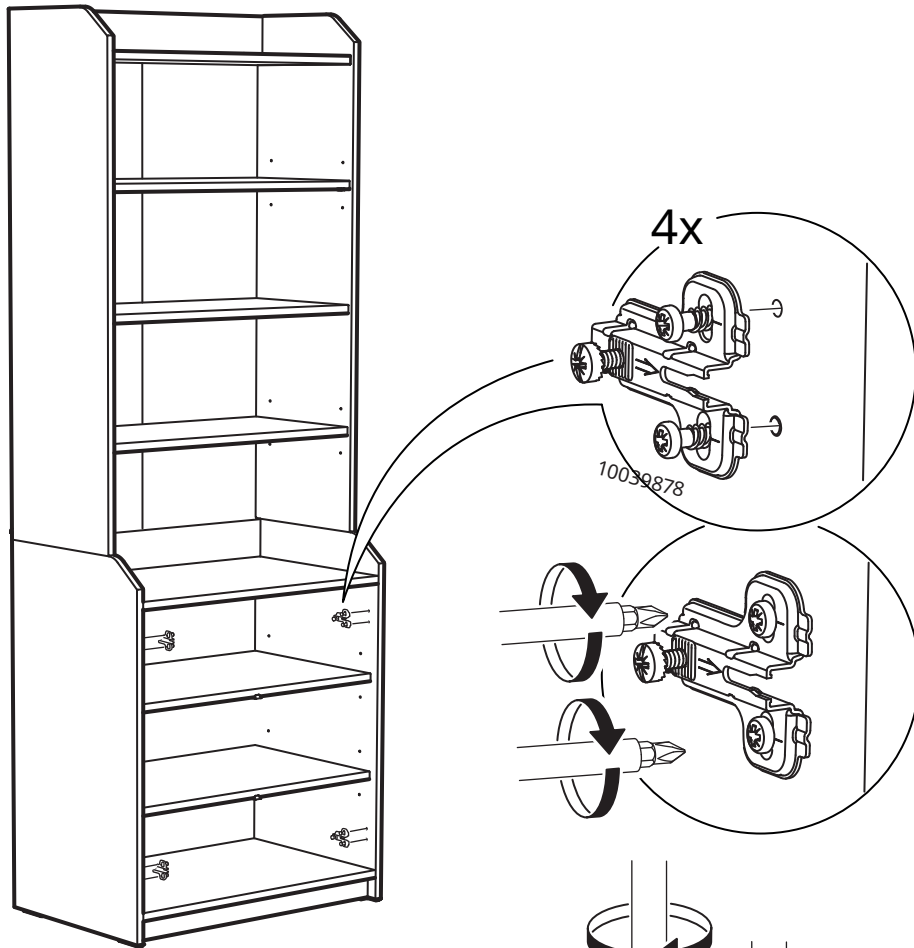 

35

