 
 


HAVSTA

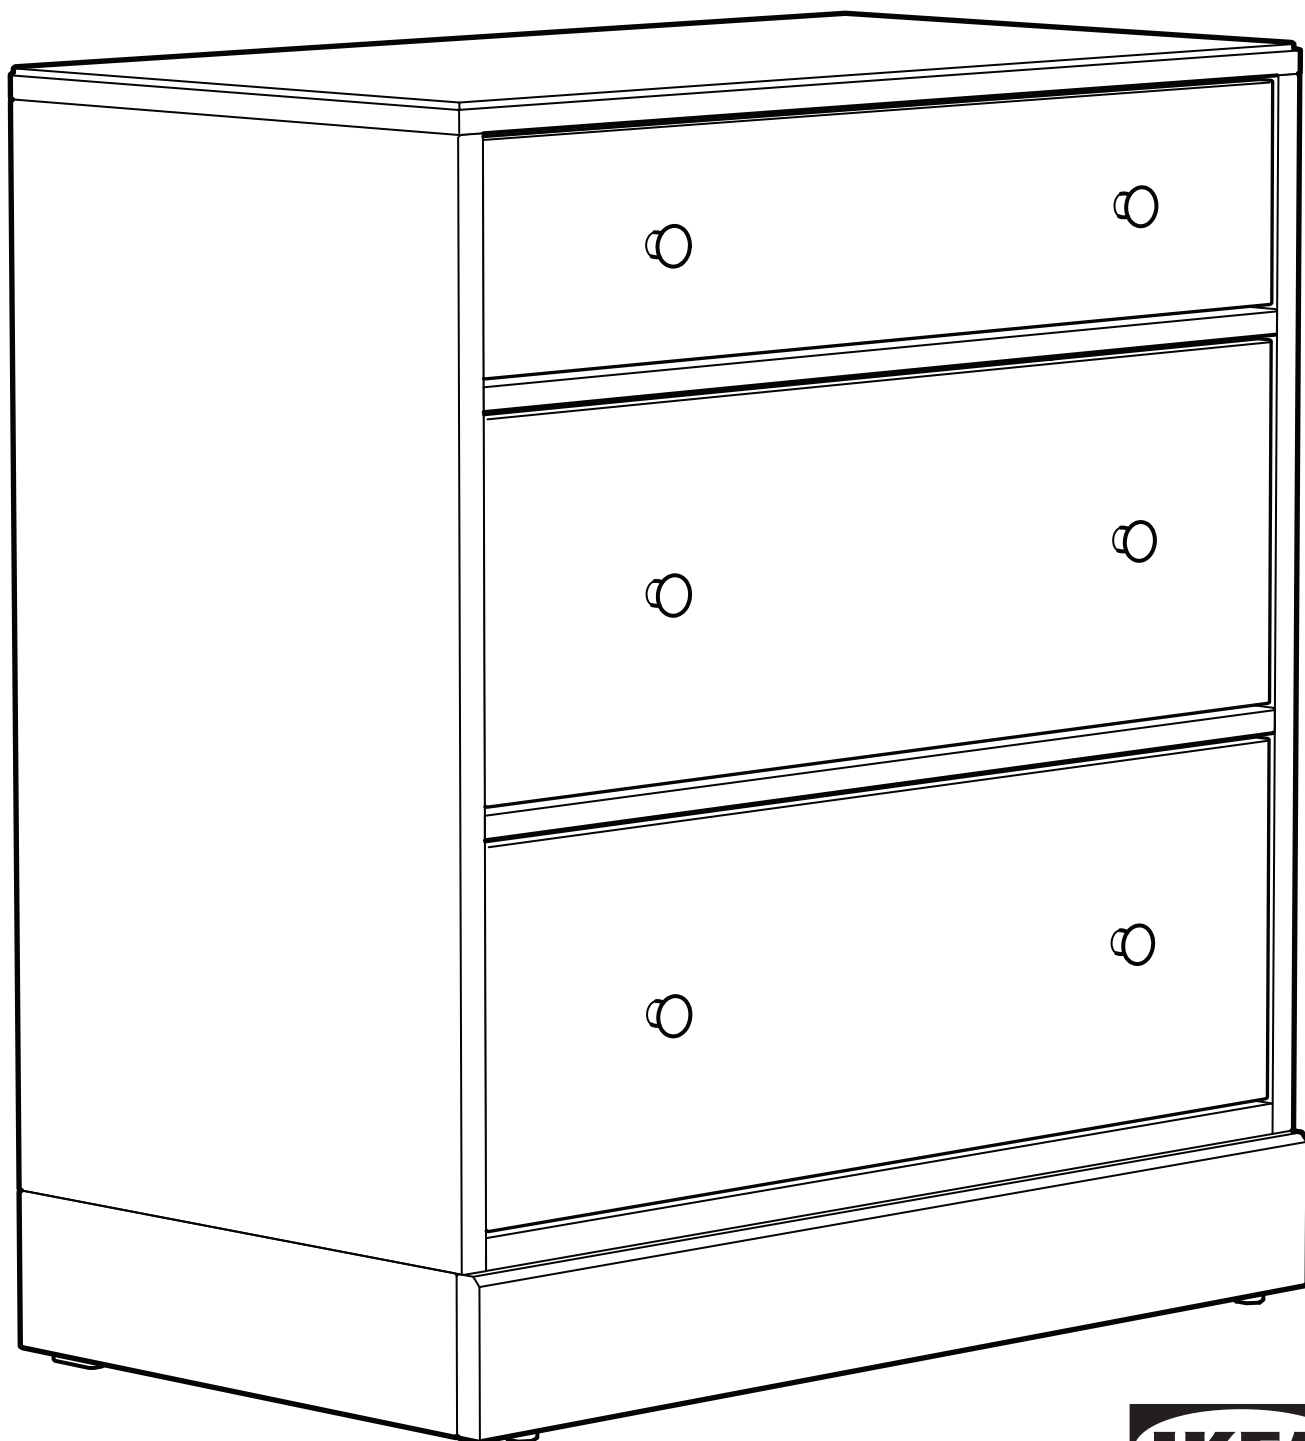

Design and Quality
IKEA of Sweden

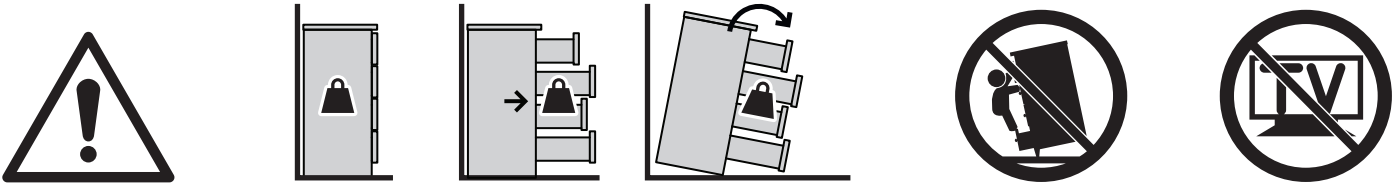

English

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using the tip-over restraints provided.

To further reduce the risk of serious injury and death from tip-overs:

- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, or shelves.

עברית

אזהרה

נפילת הרהיט עלולה לגרום לפגיעה גופנית חמורה או קטלנית.

 
 
יש להקפיד ולקבע את הריהוט לקיר באמצעות אביזרי קיבוע המצורפים.

 
 
 
על-מנת למזער את סכנת הפגיעה הגופנית או המוות מנפילת הרהיטים:

 
 
 
מקמו את הפריטים הכבדים ביותר במגירה התחתונה.

 
 
 
 
הימנעו מלהניח טלוויזיות או פריטים כבדים אחרים על מוצר זה.

אין לאפשר לילדים לטפס על המגירות, הדלתות או המדפים.

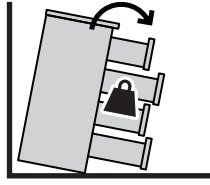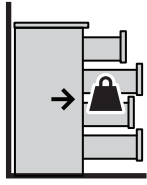


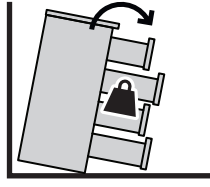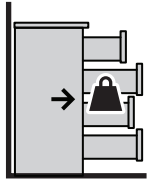

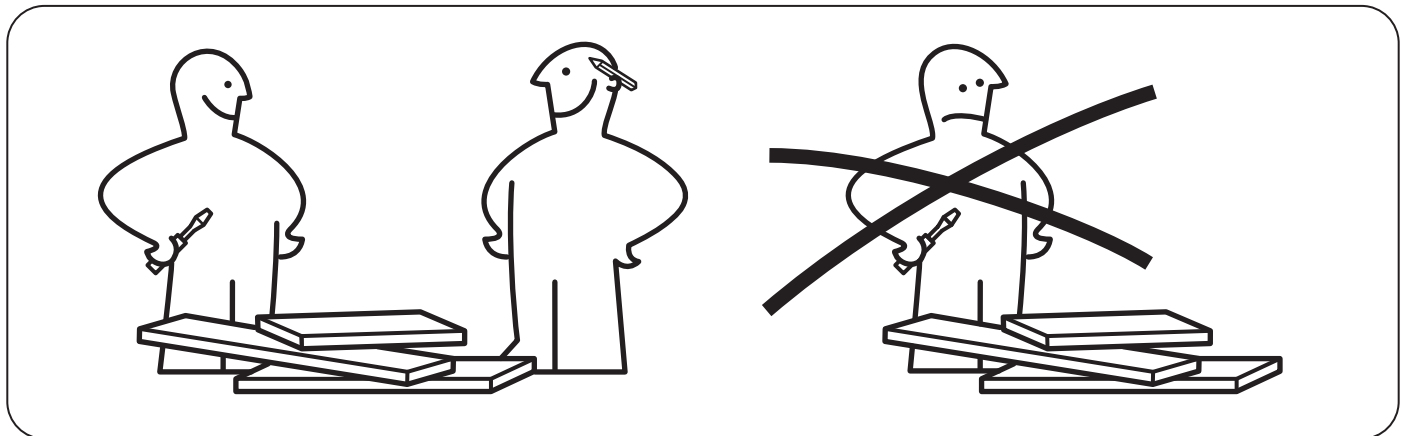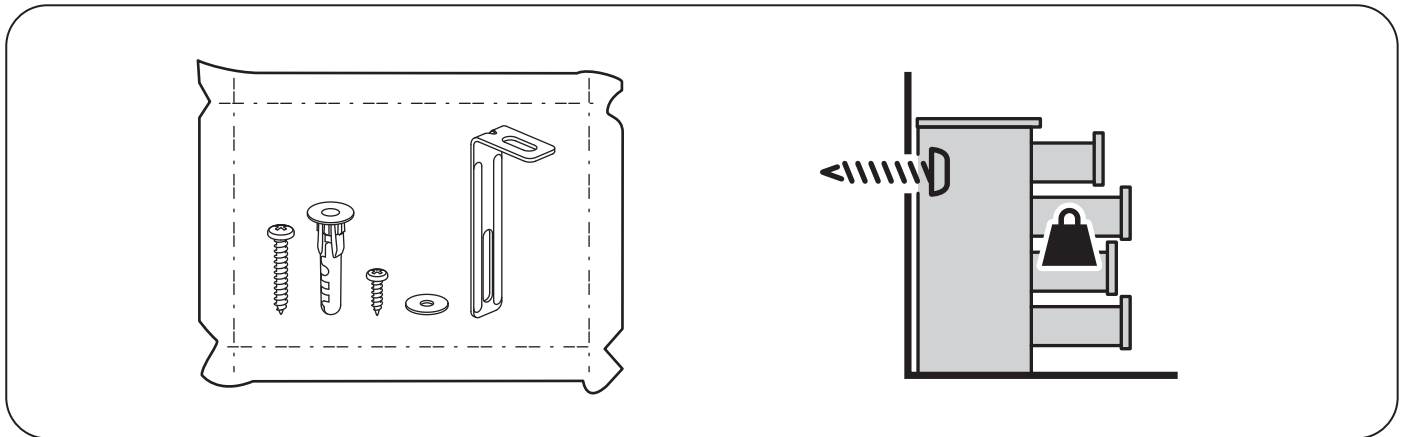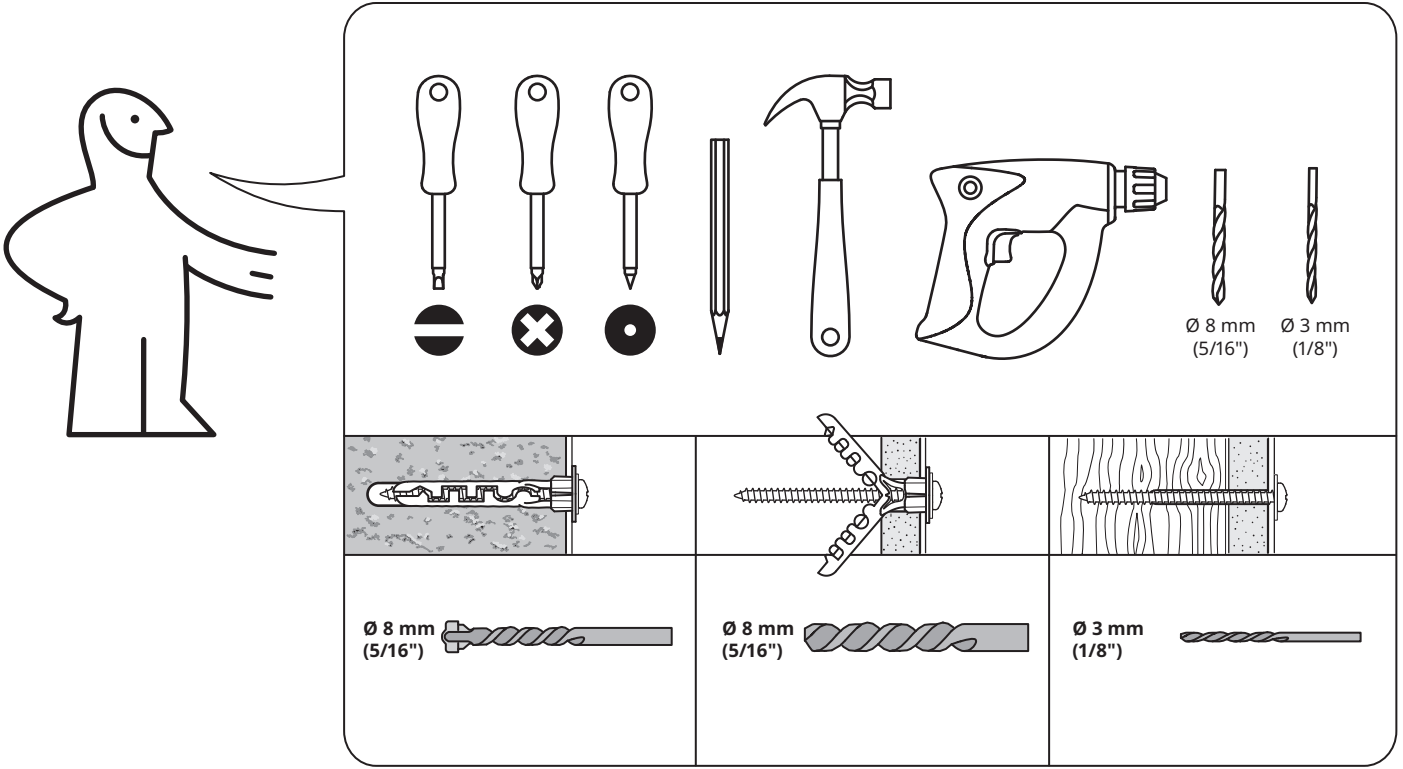


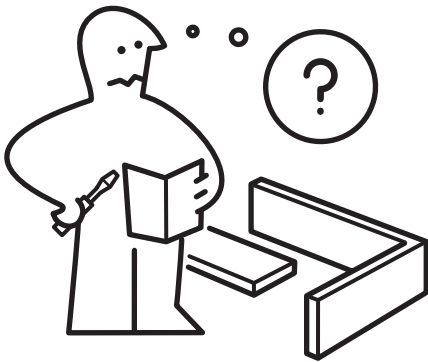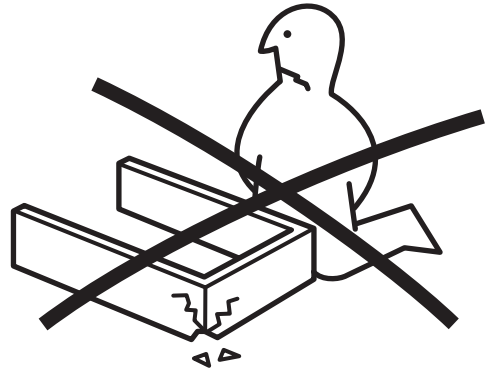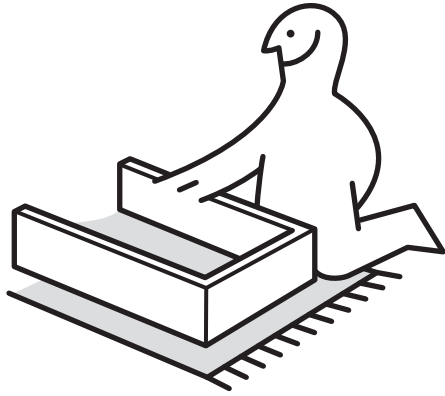

2x

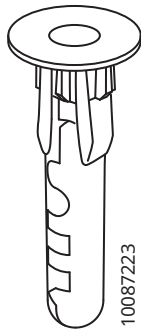 


2x

 

2x



 4x

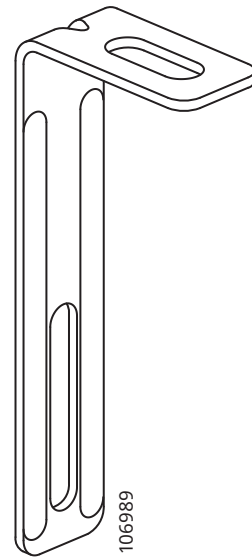

2x

1



3x



18x



 
18x



15x



12x

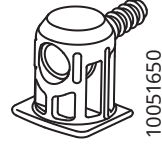

4x

2



8x



8x



 
8x




8x




8x

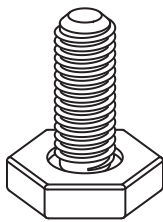

2x

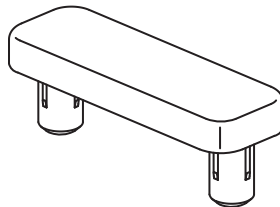 

2x

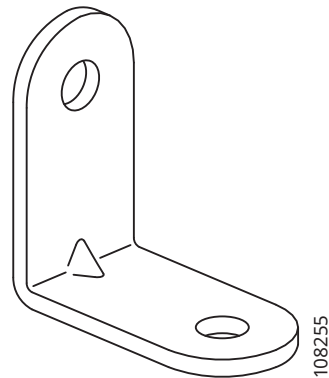 


4x

3




194867

 6x



10091382

 6x




139615

12x



110630

 12x



10095420

12x



 
119030

12x




101345

10x

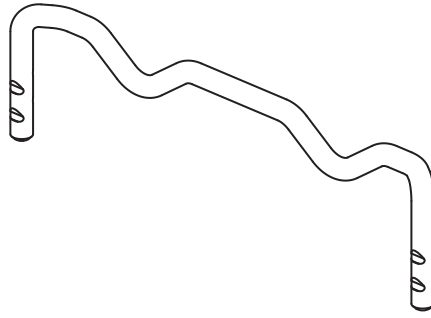

10040242

 3x

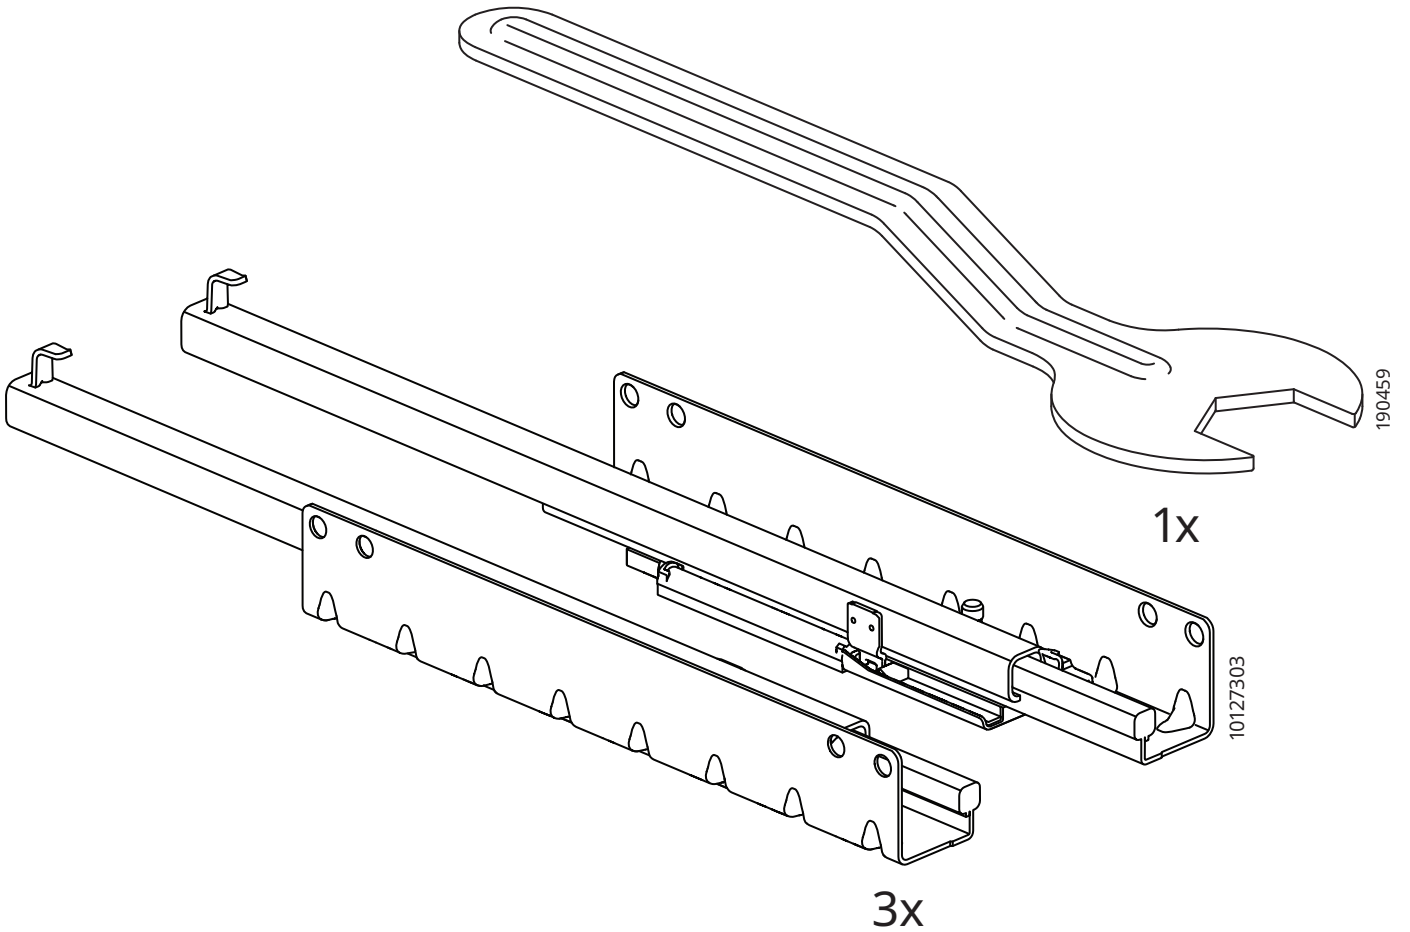


10127303

190459


1x

3x

 
1

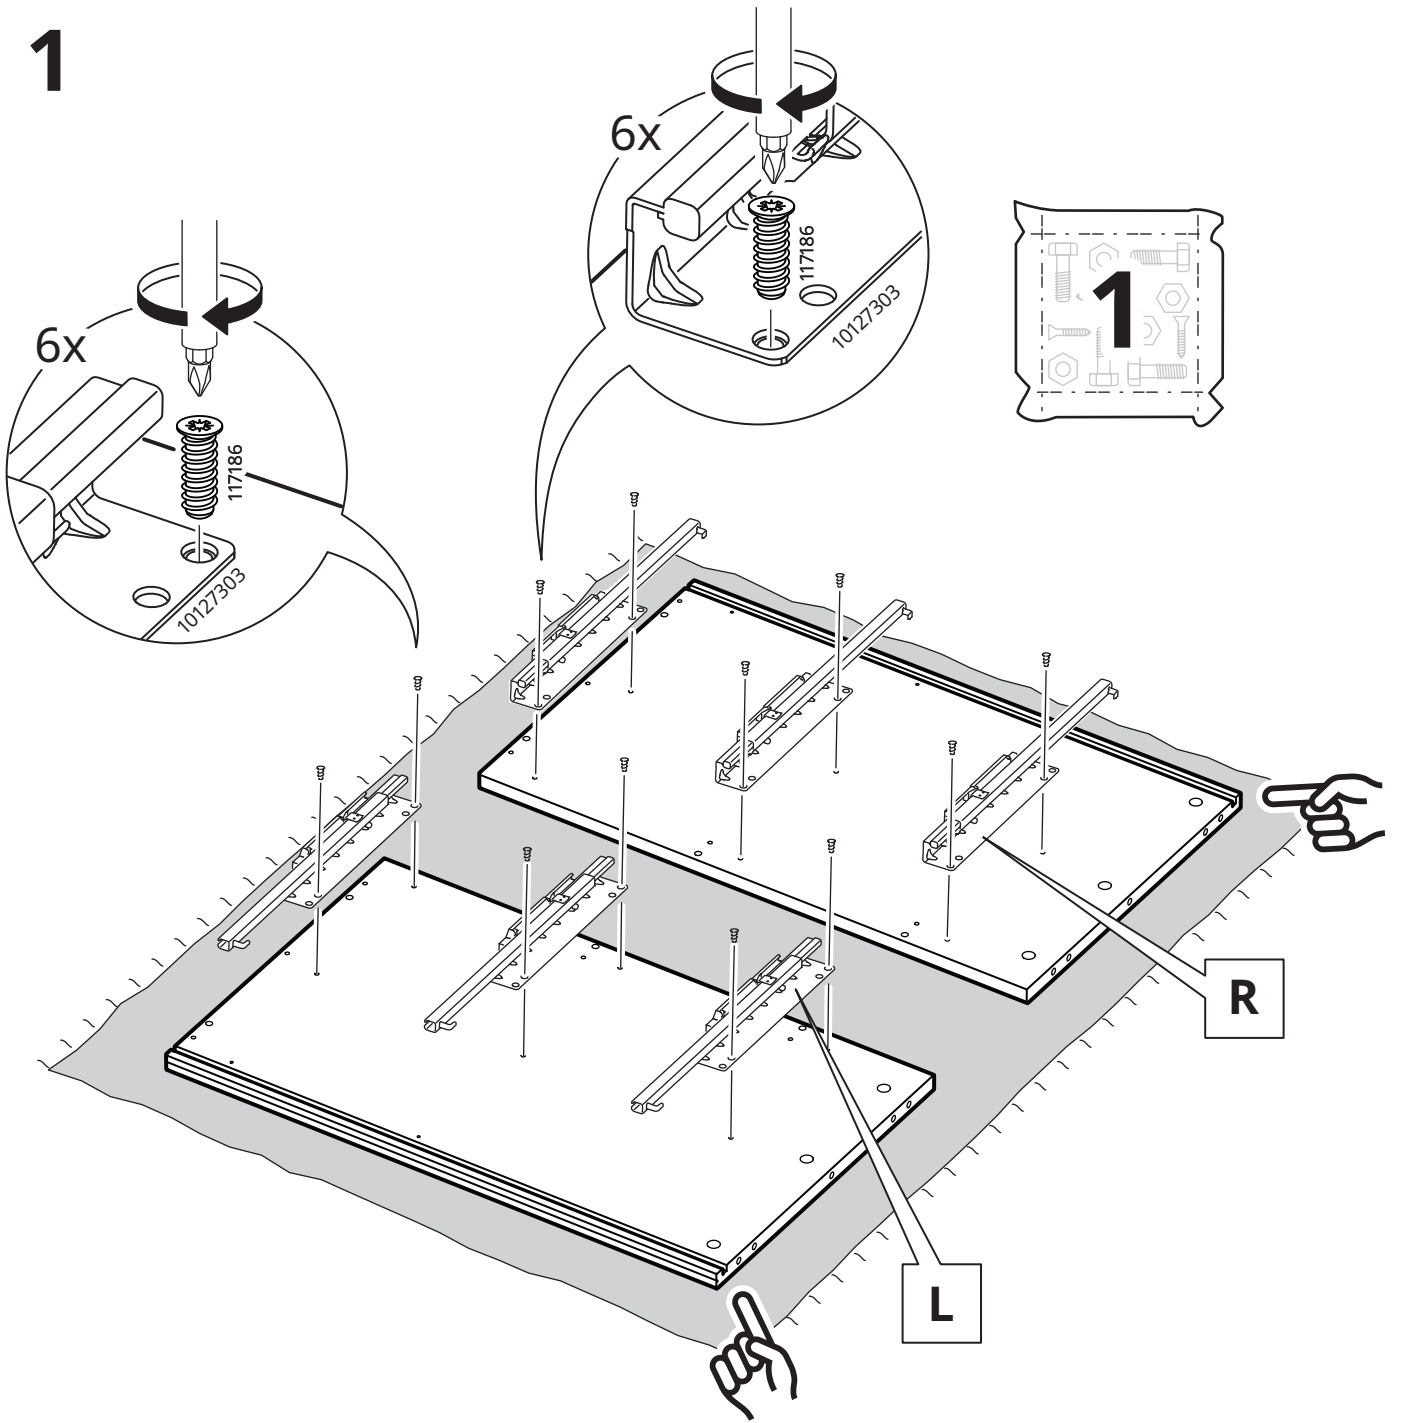


2

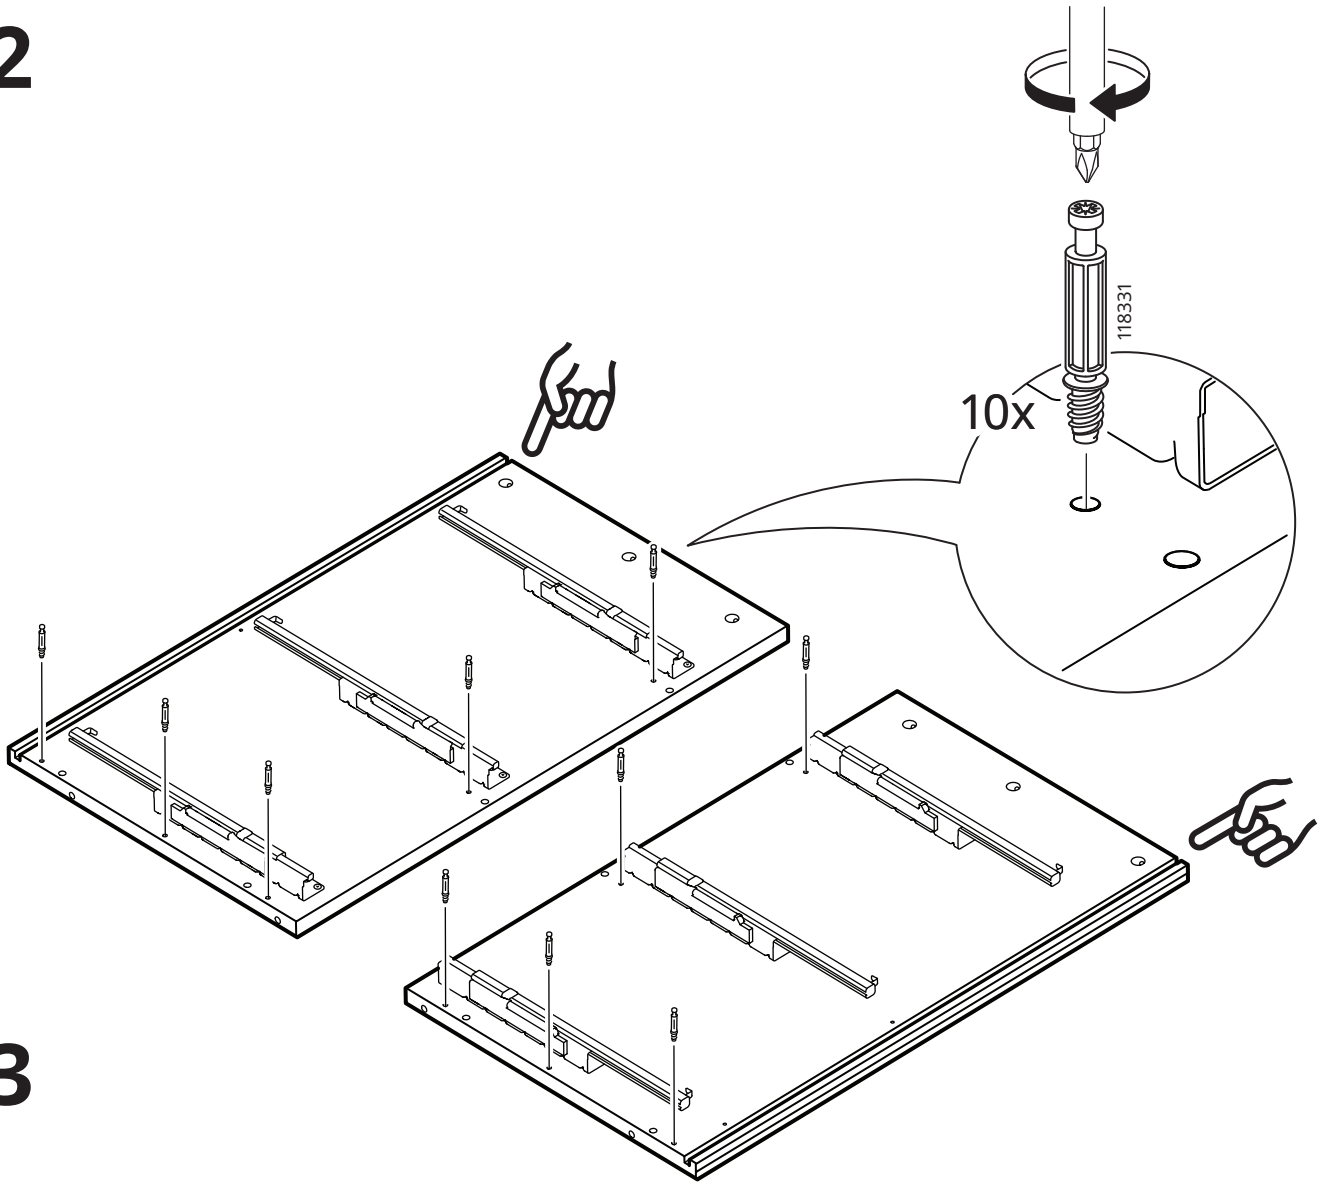 


3

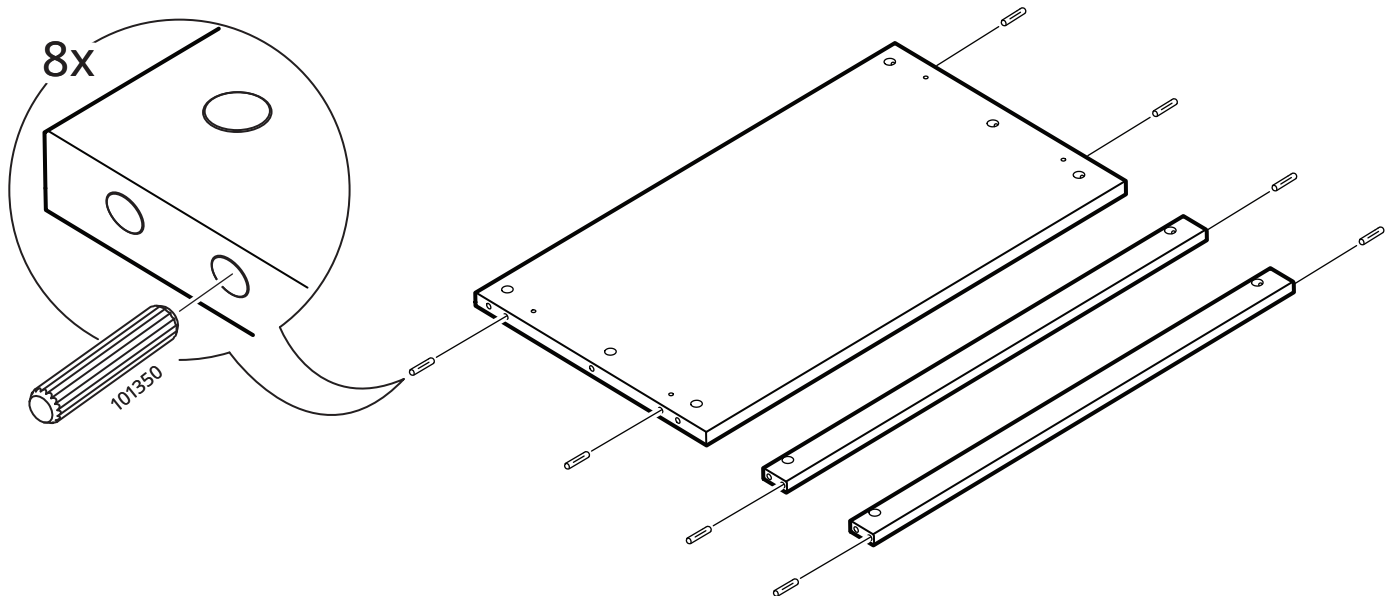 


4

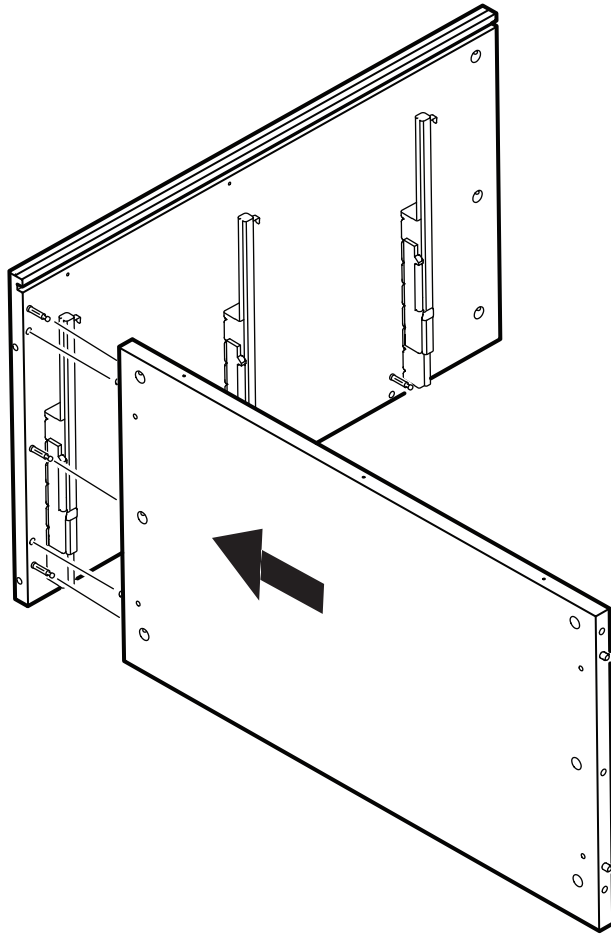 


5

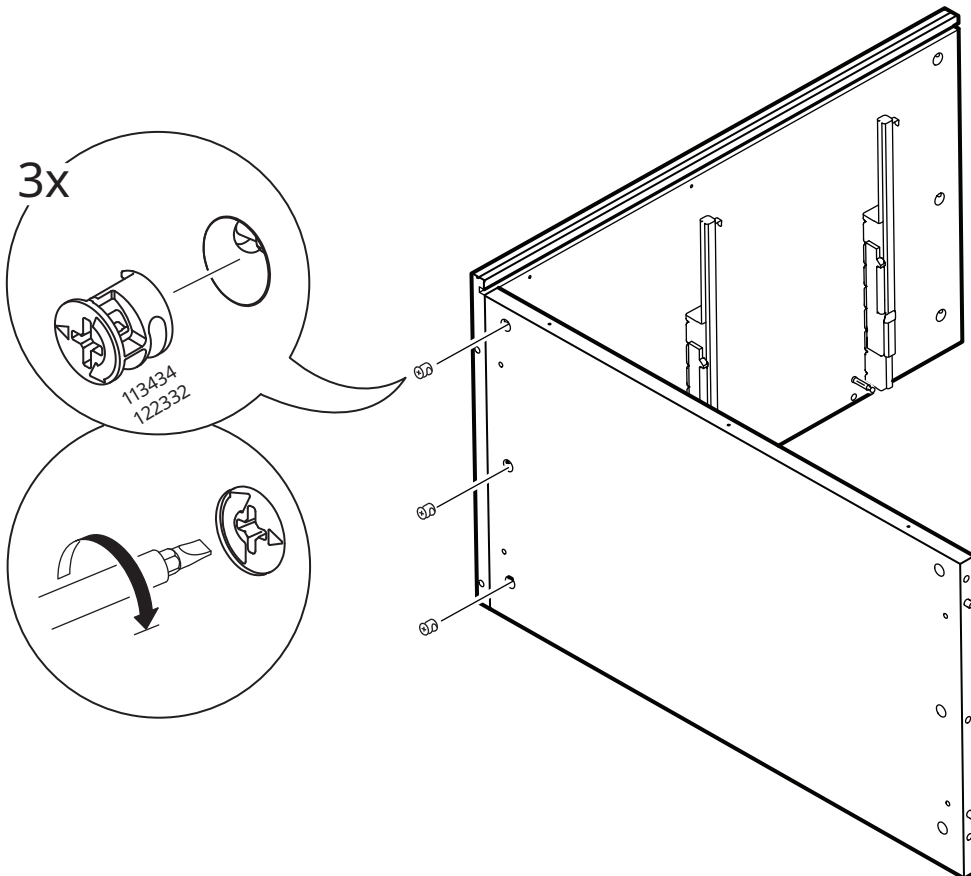 


6

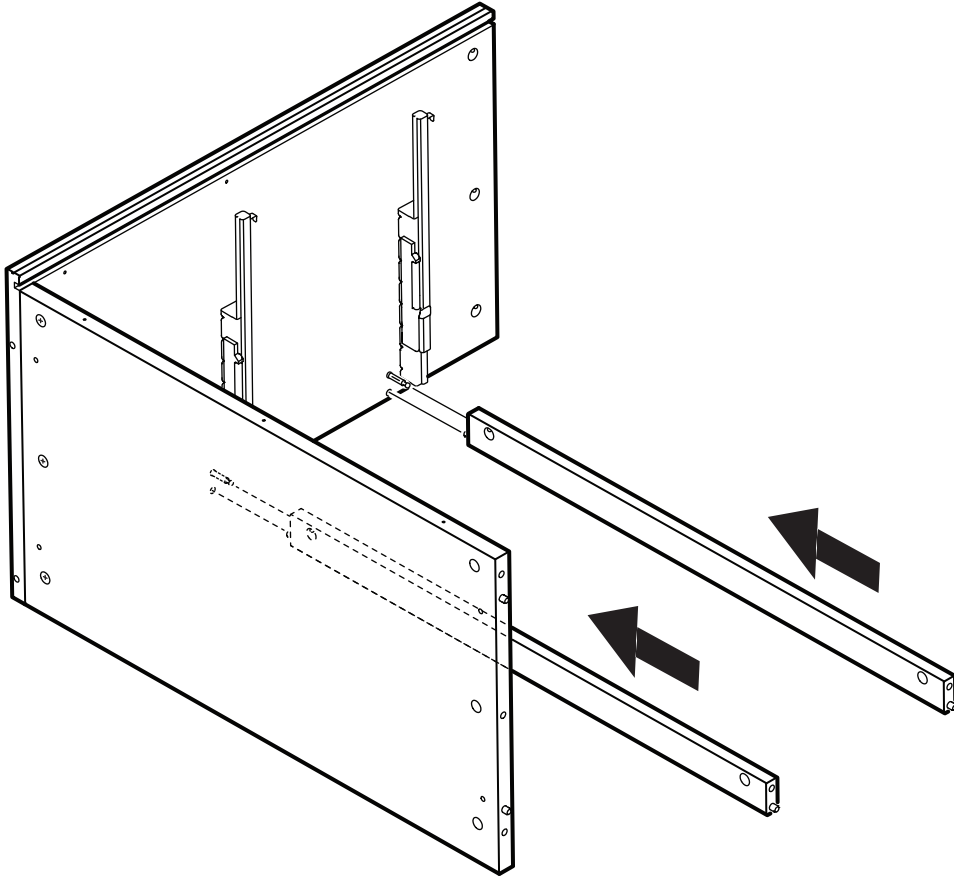 


7

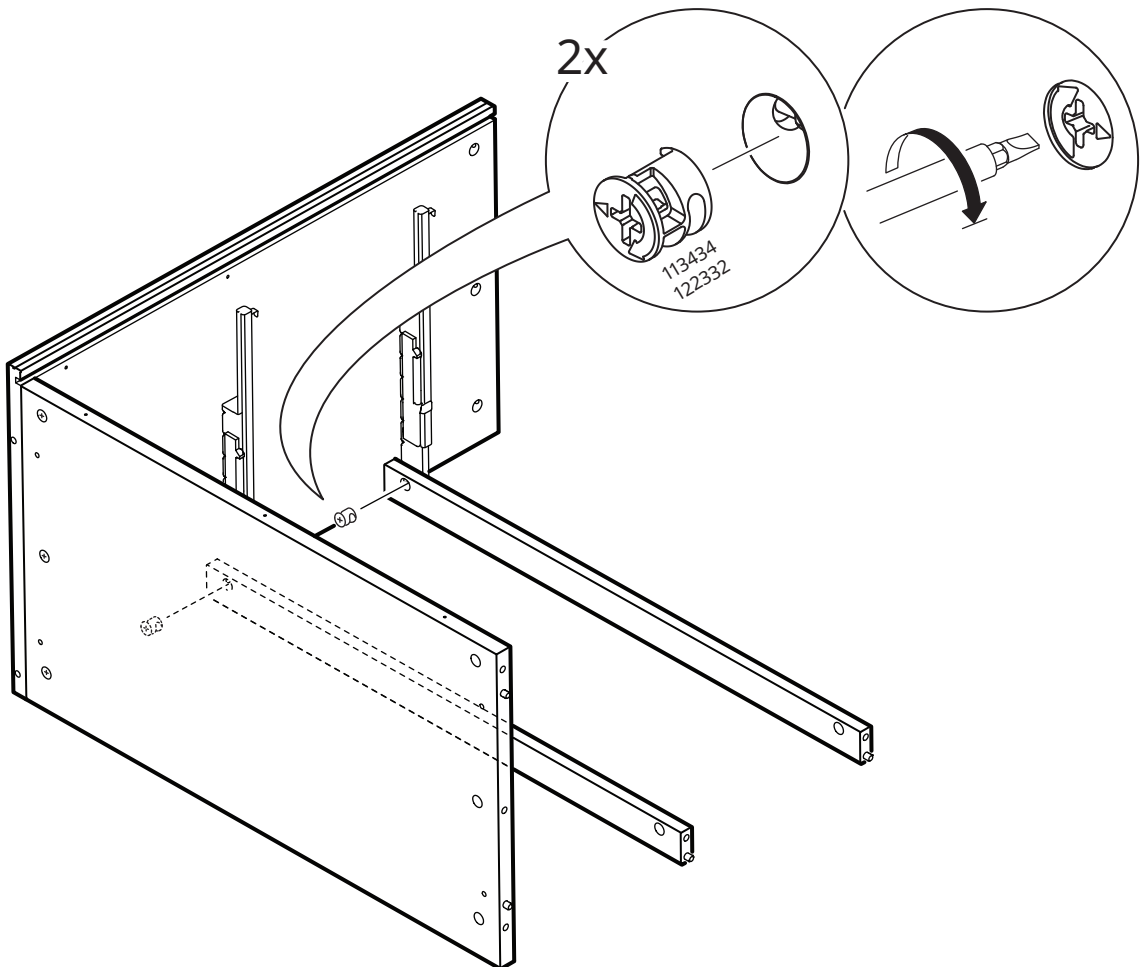 


8

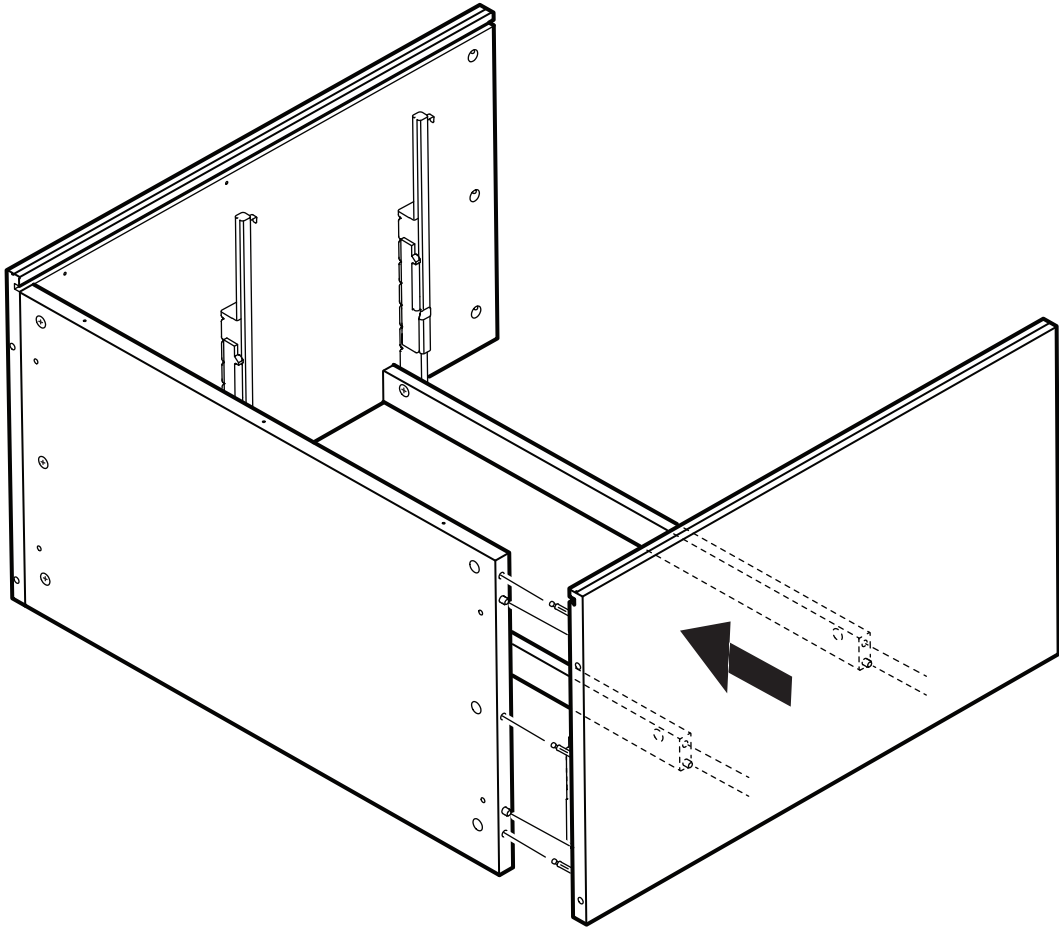 


9

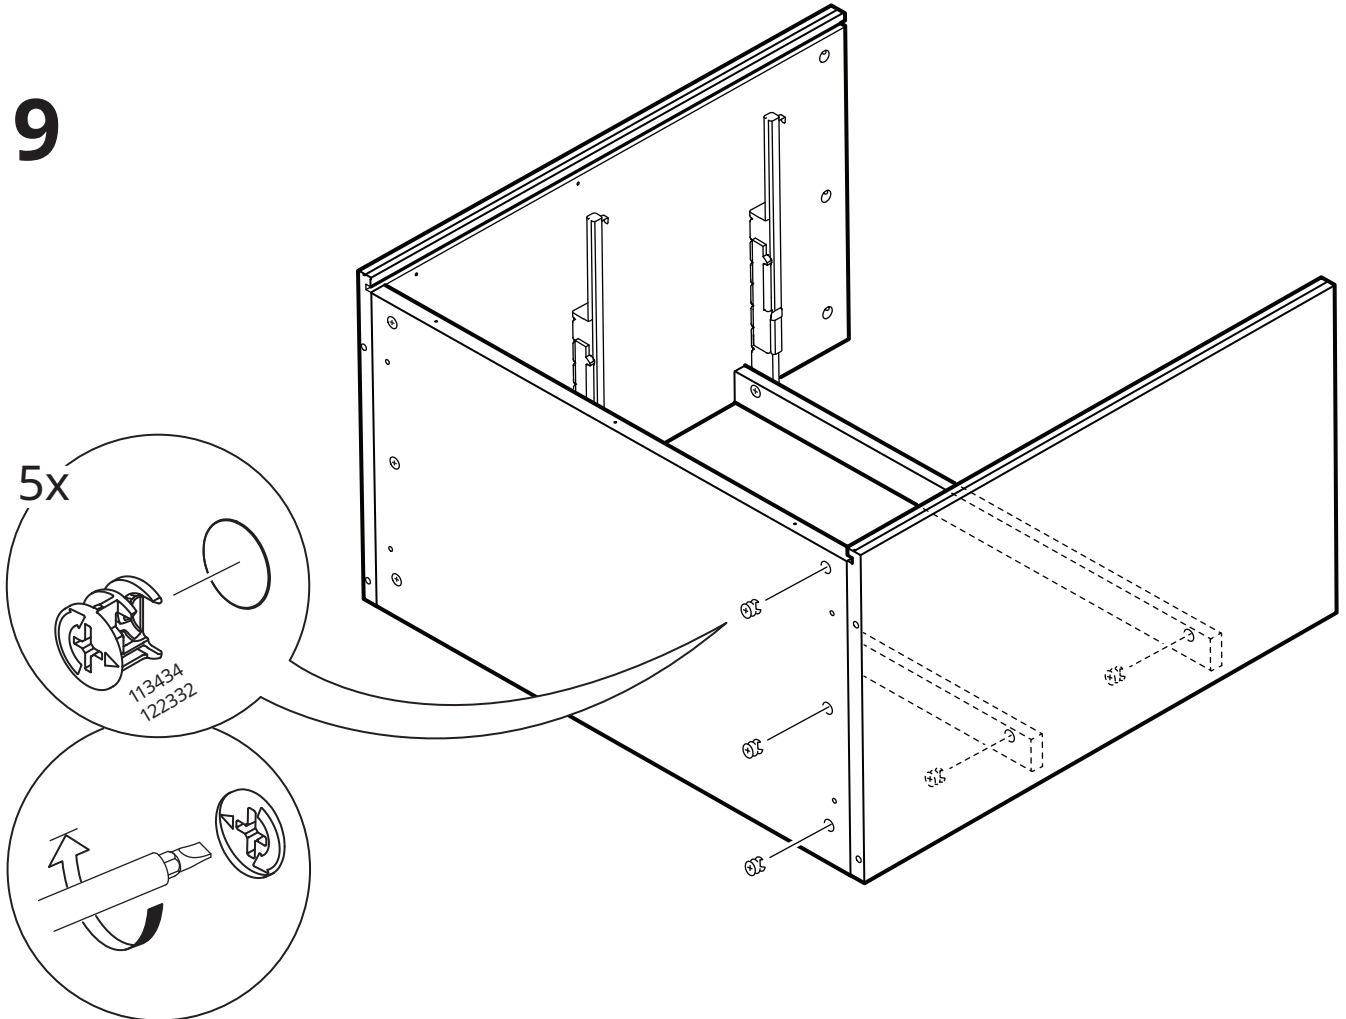 


10

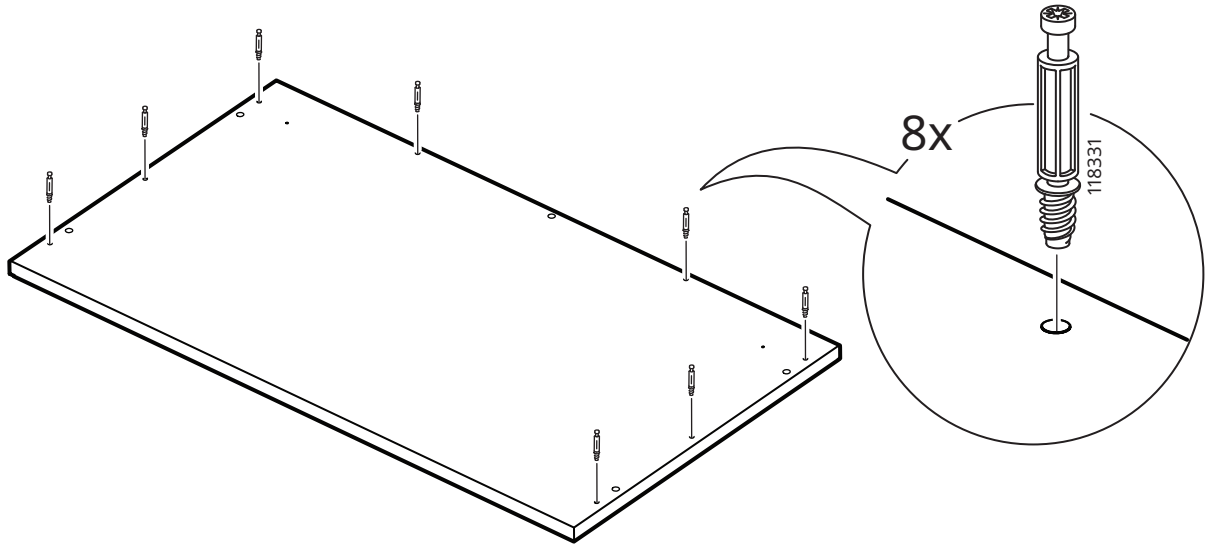 


11

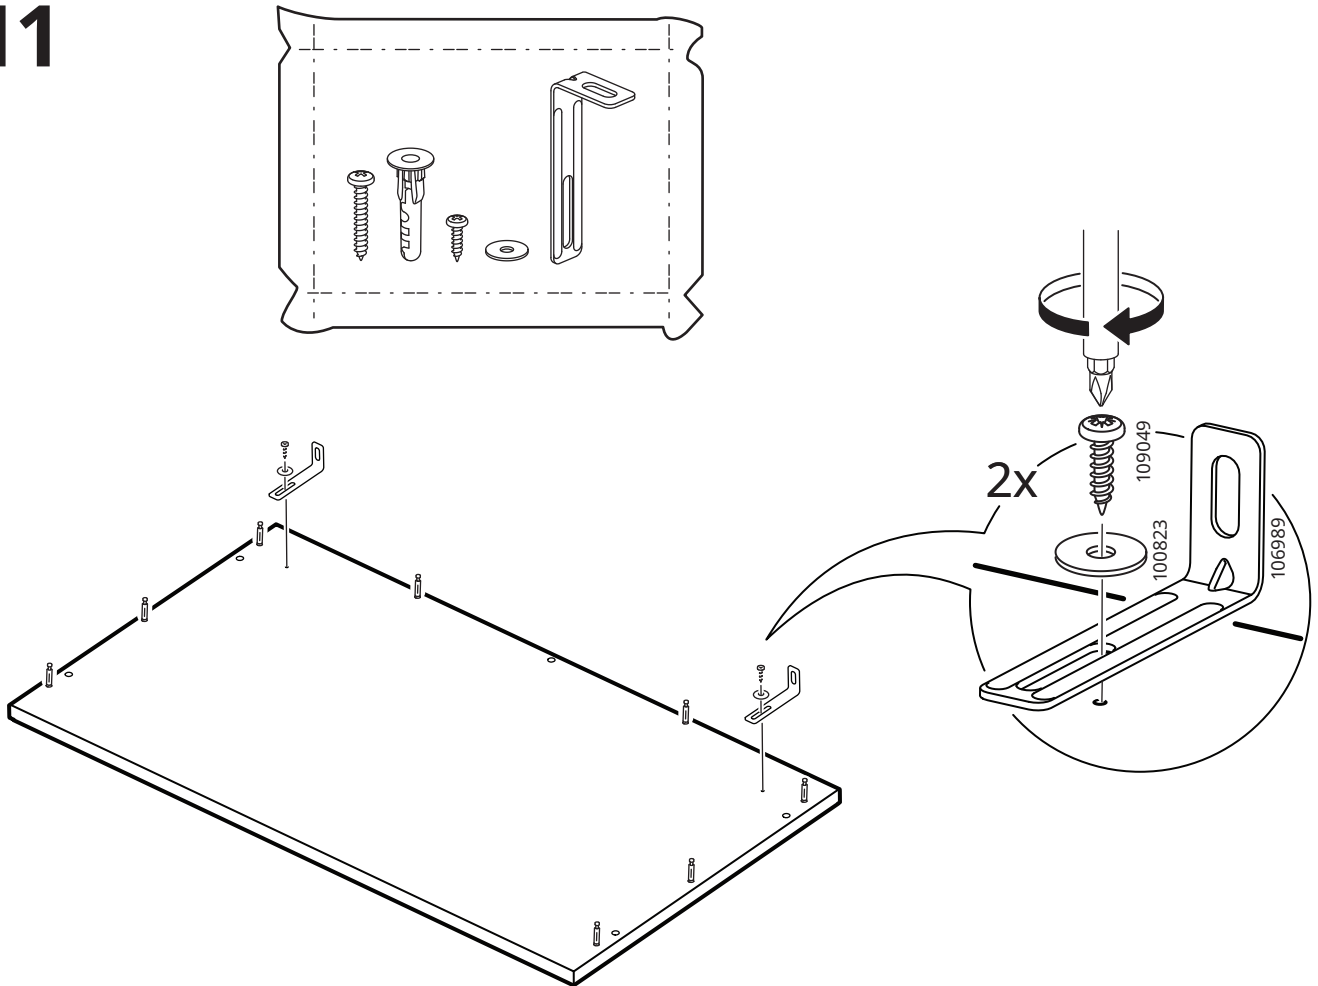 


12

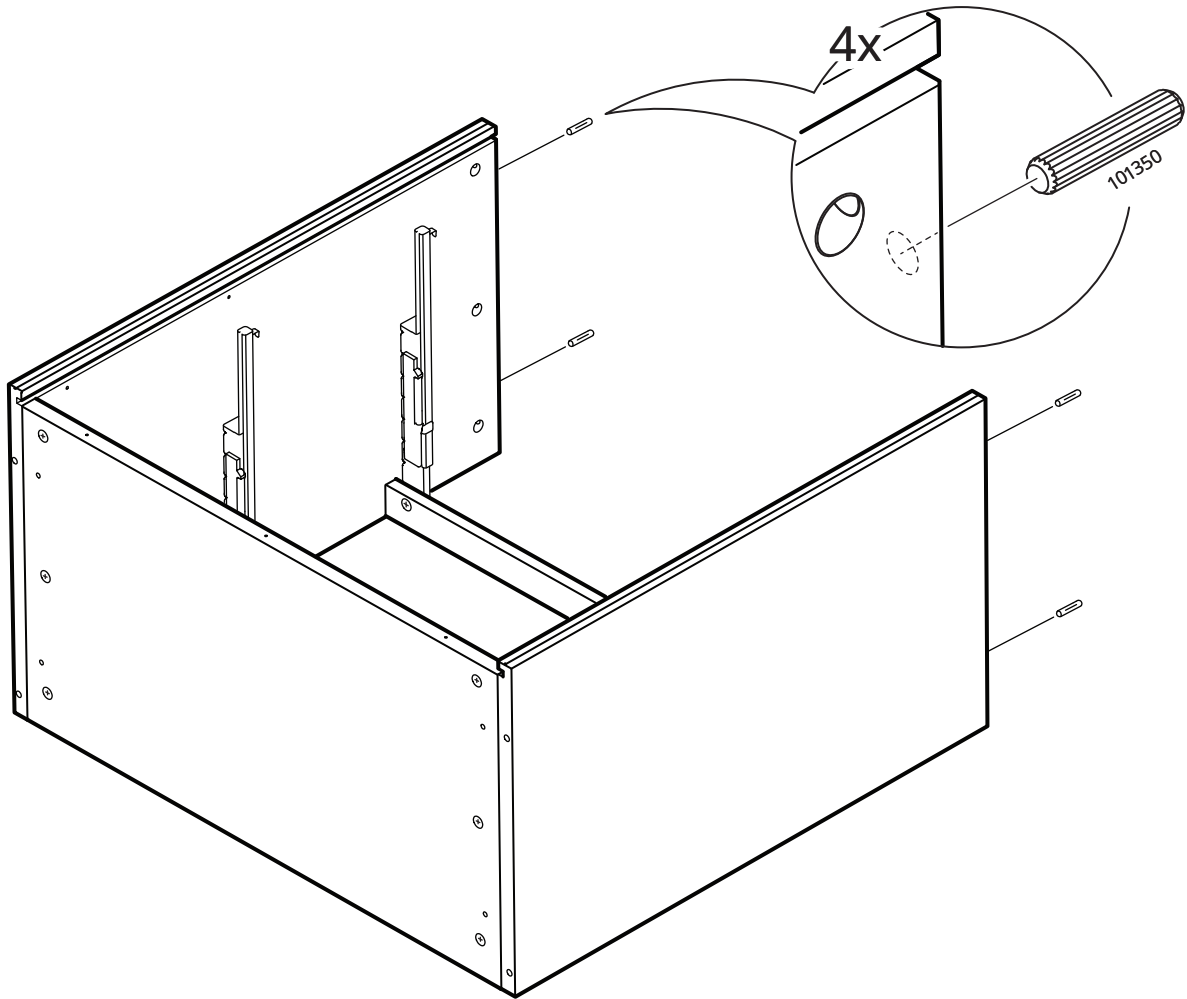 


13

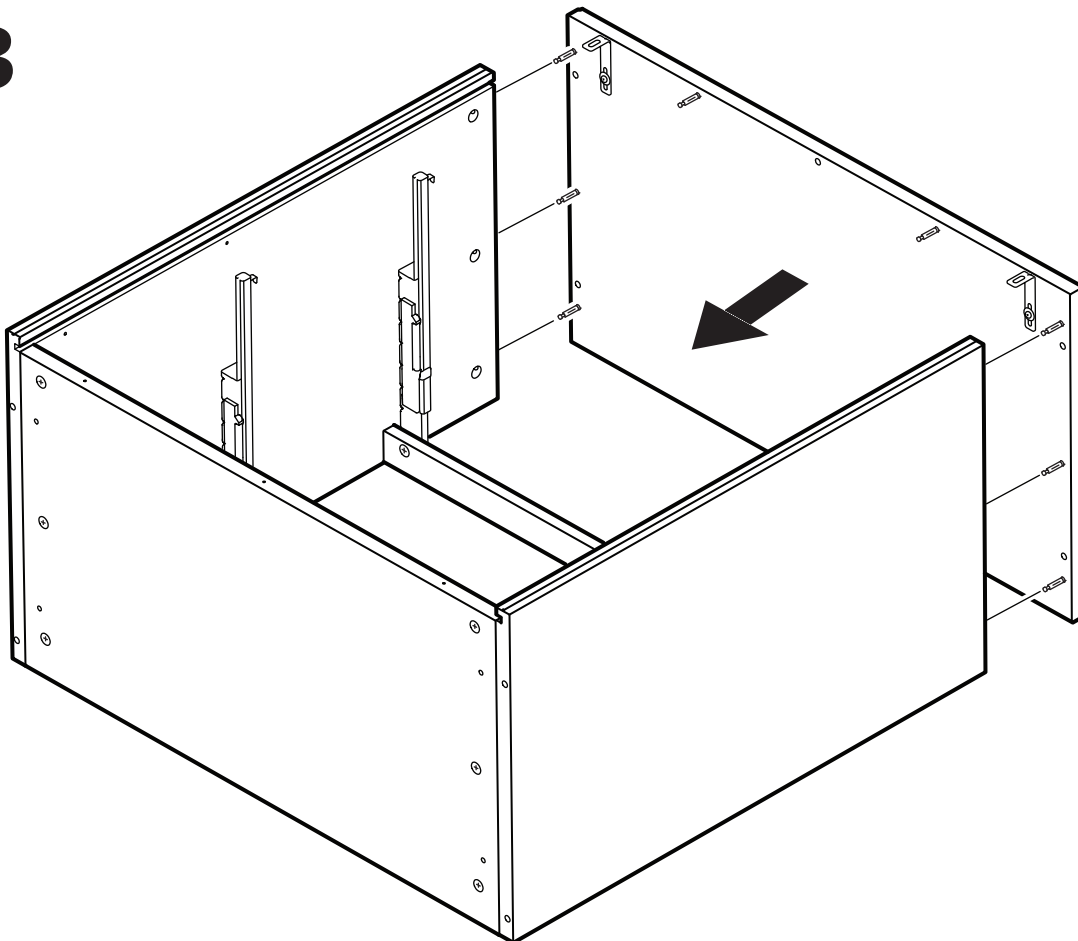 


14

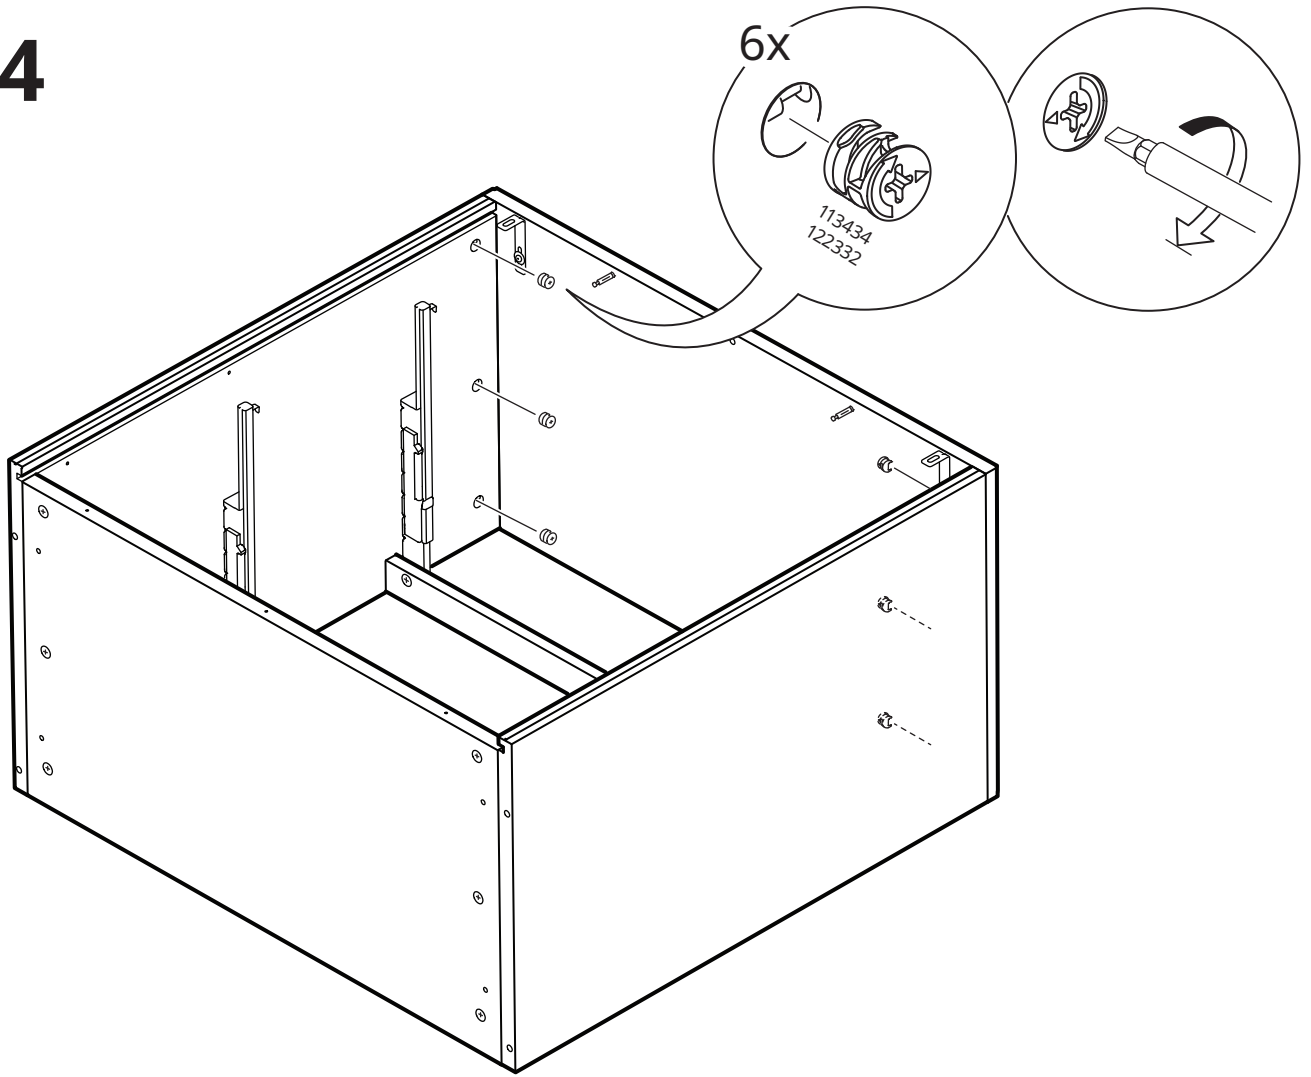 


15

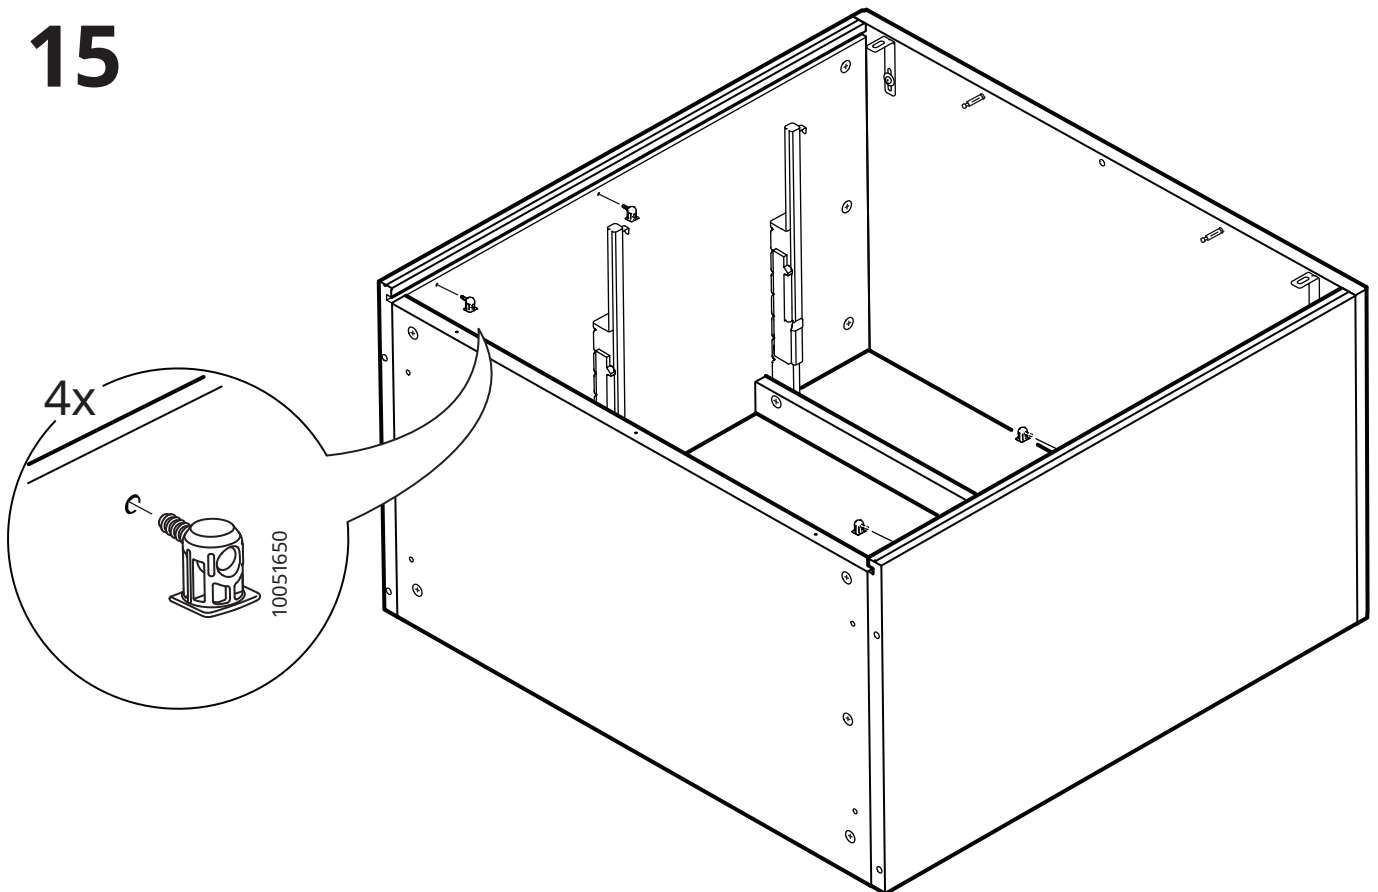 


16

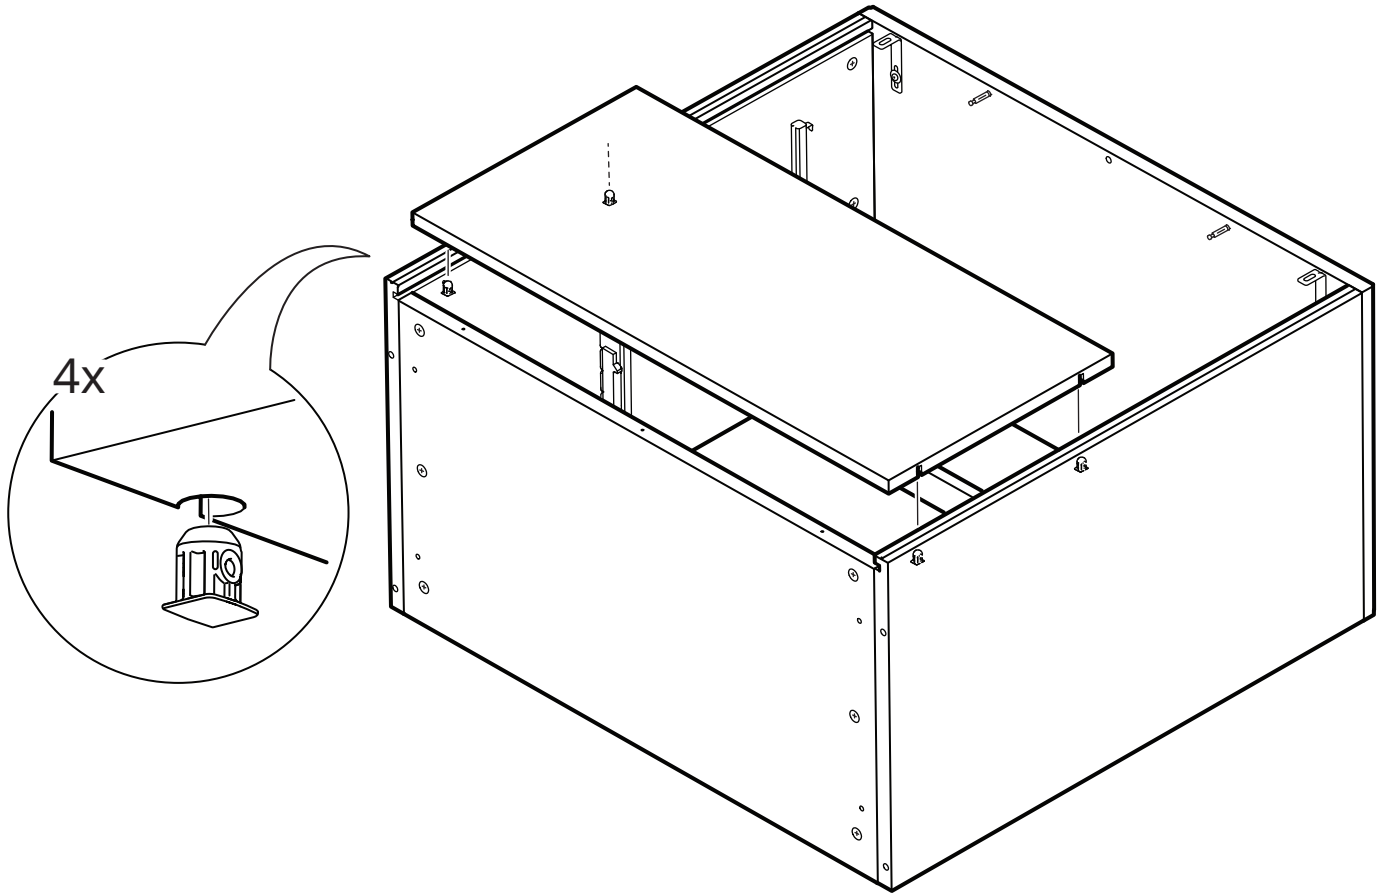 


17

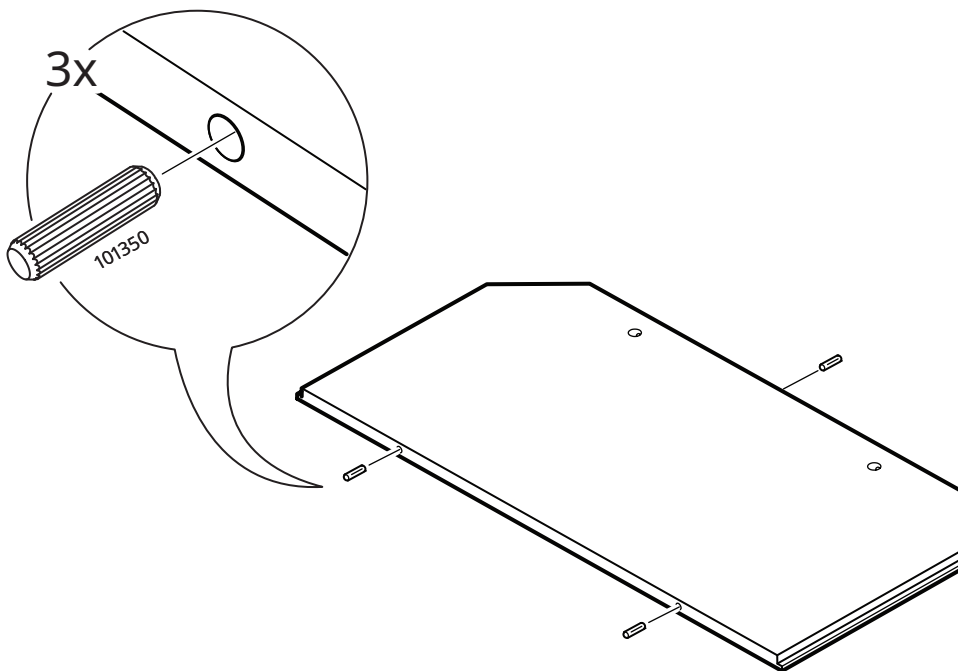 


18

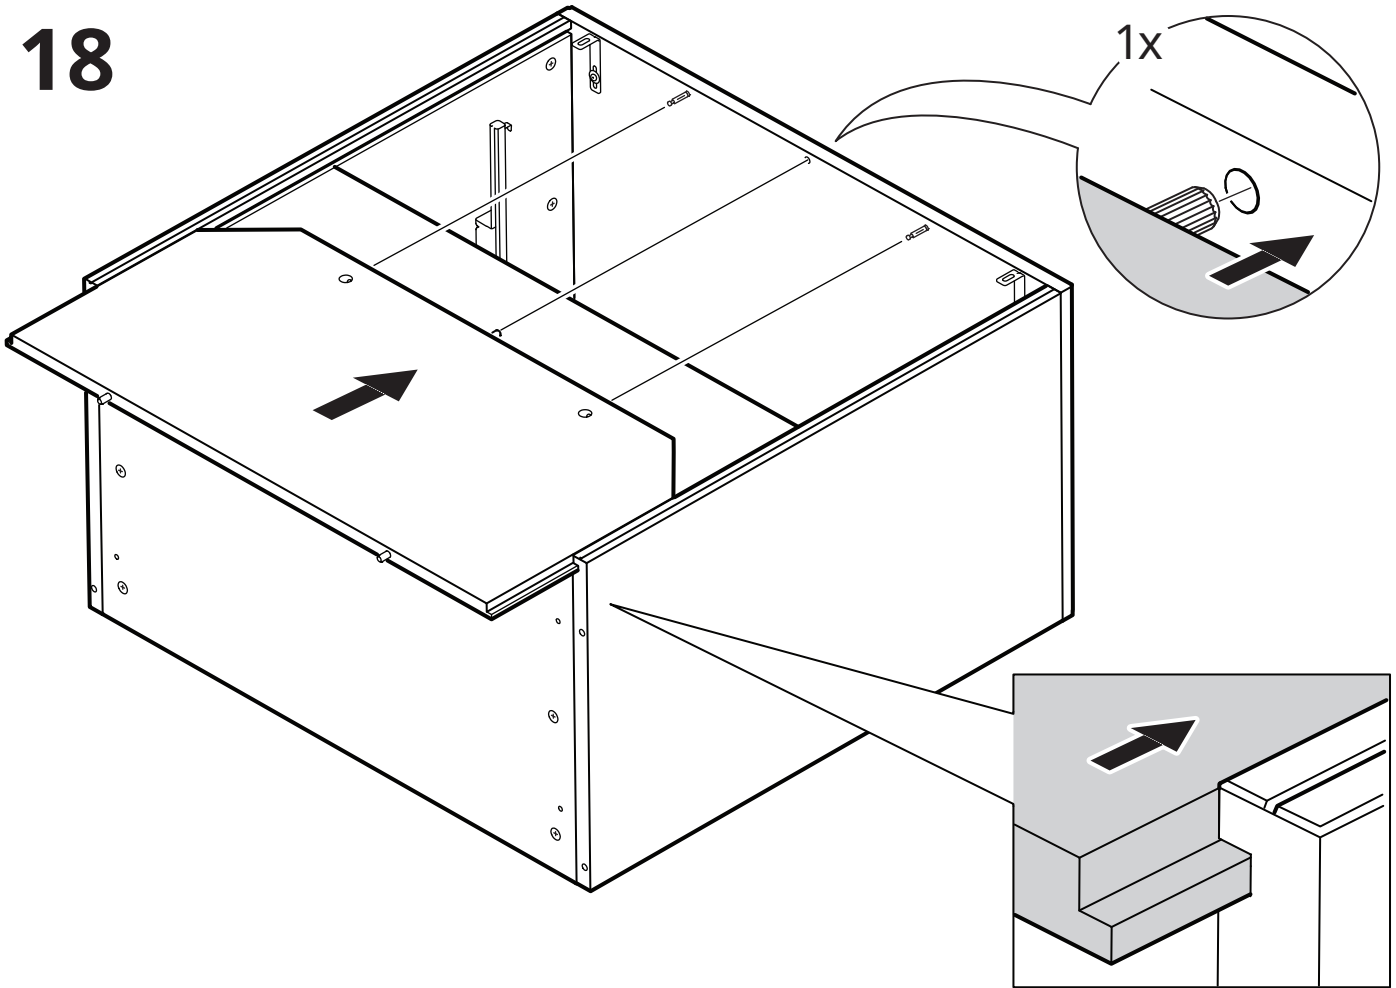 


19

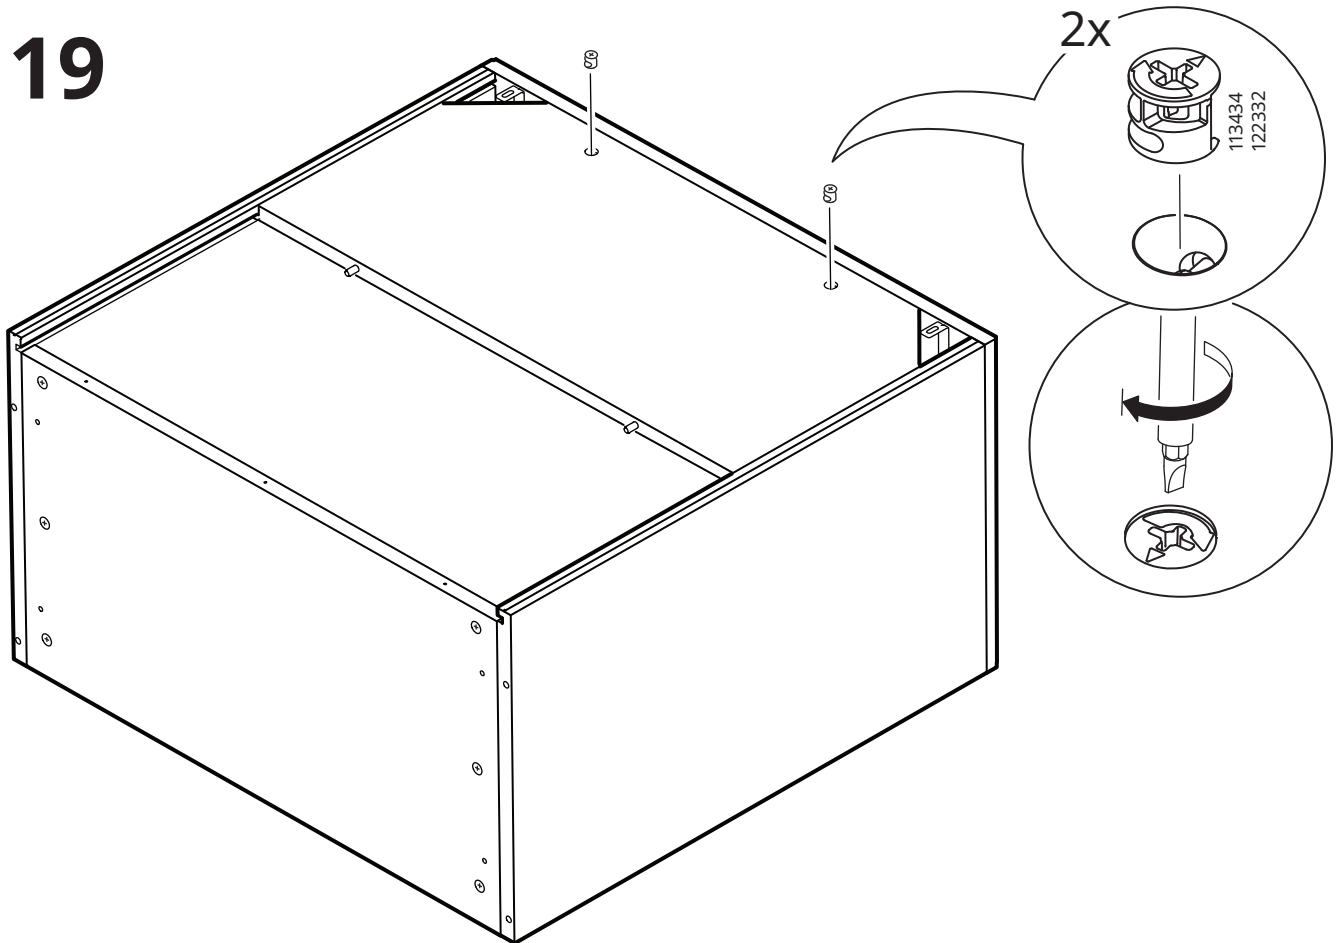 


20

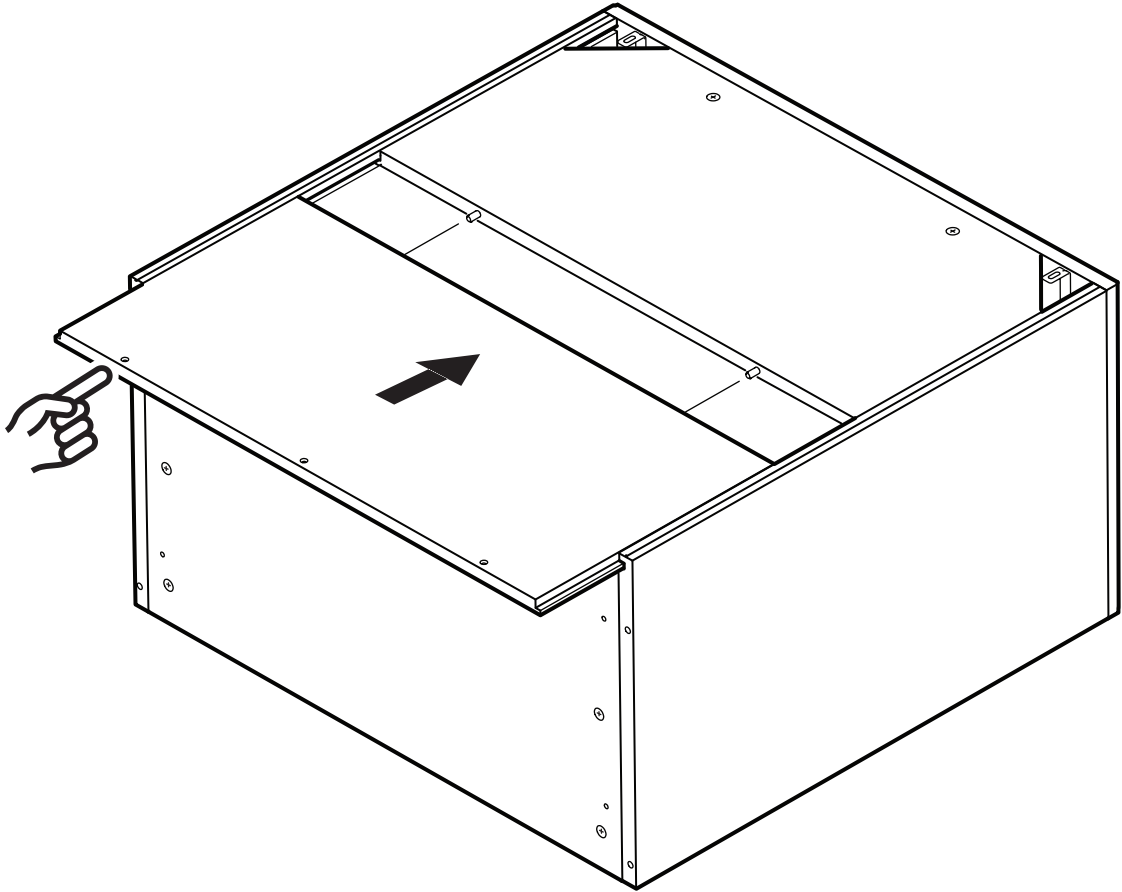 


21

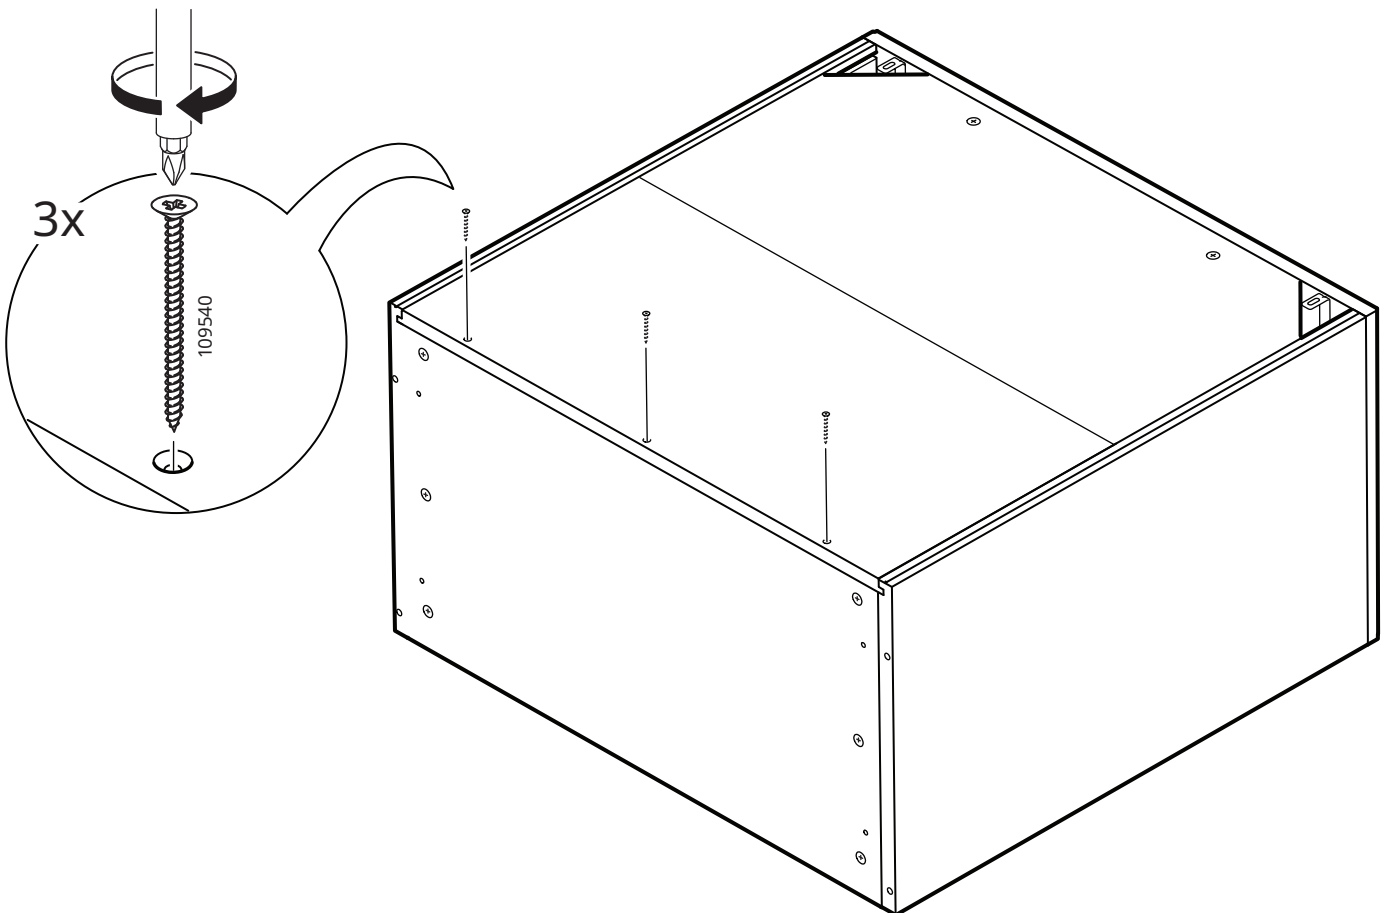 


22

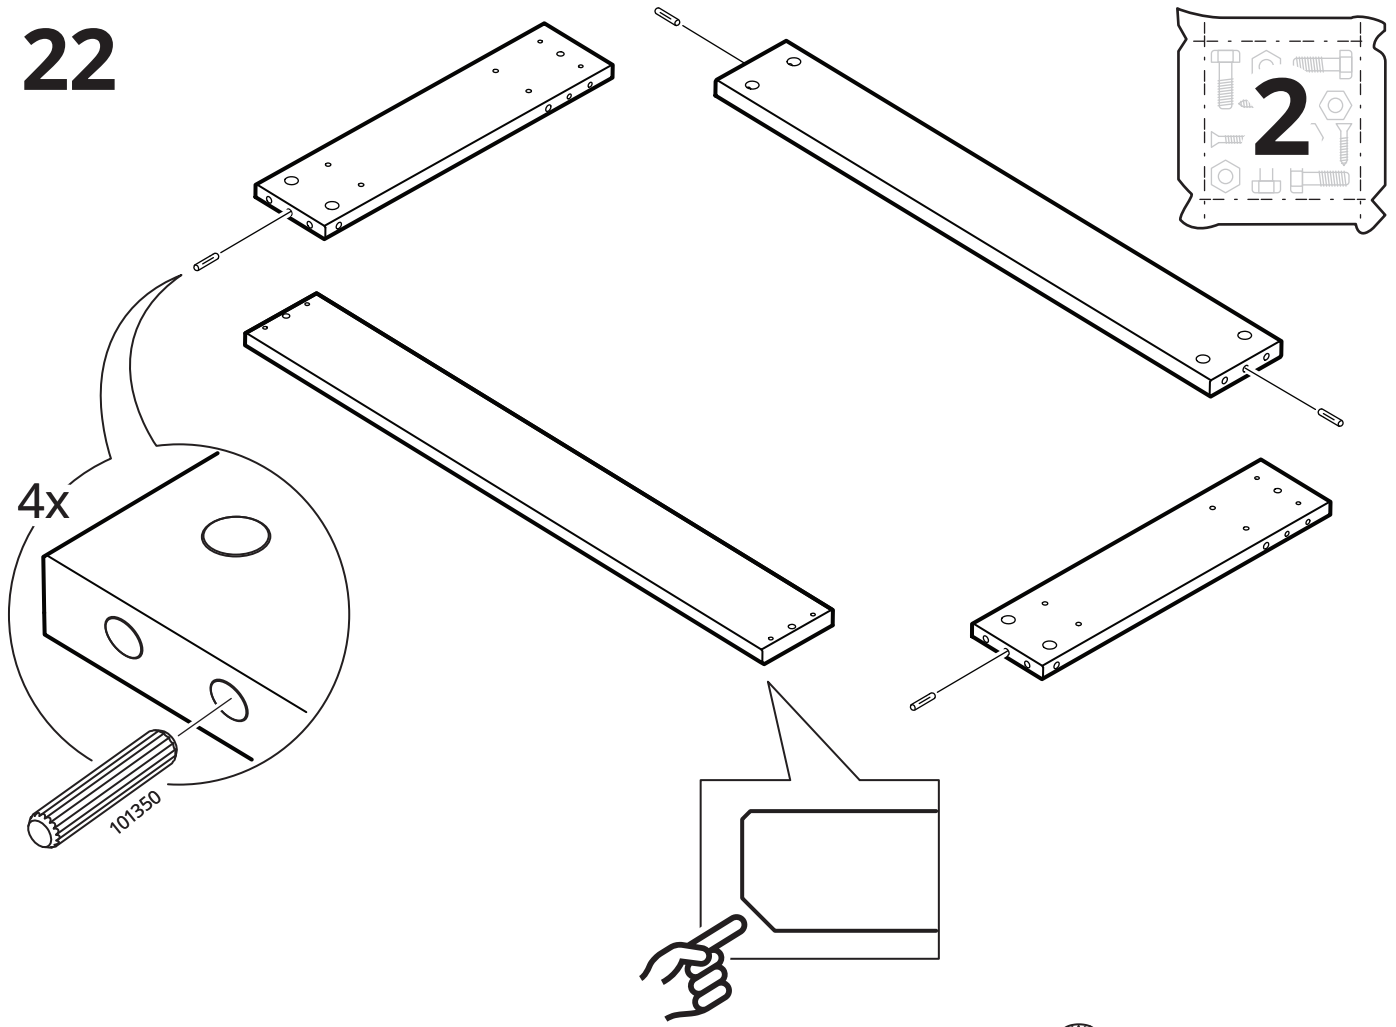 


23

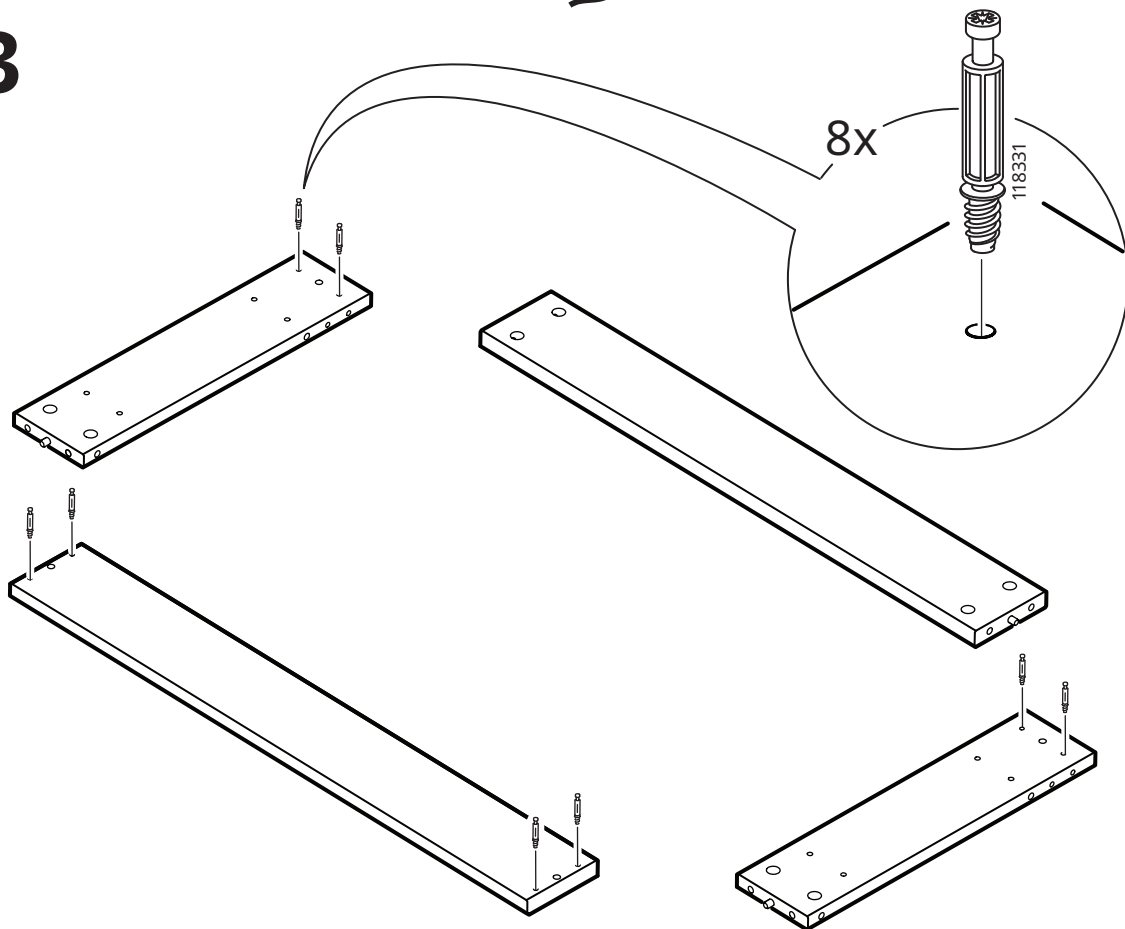 


24

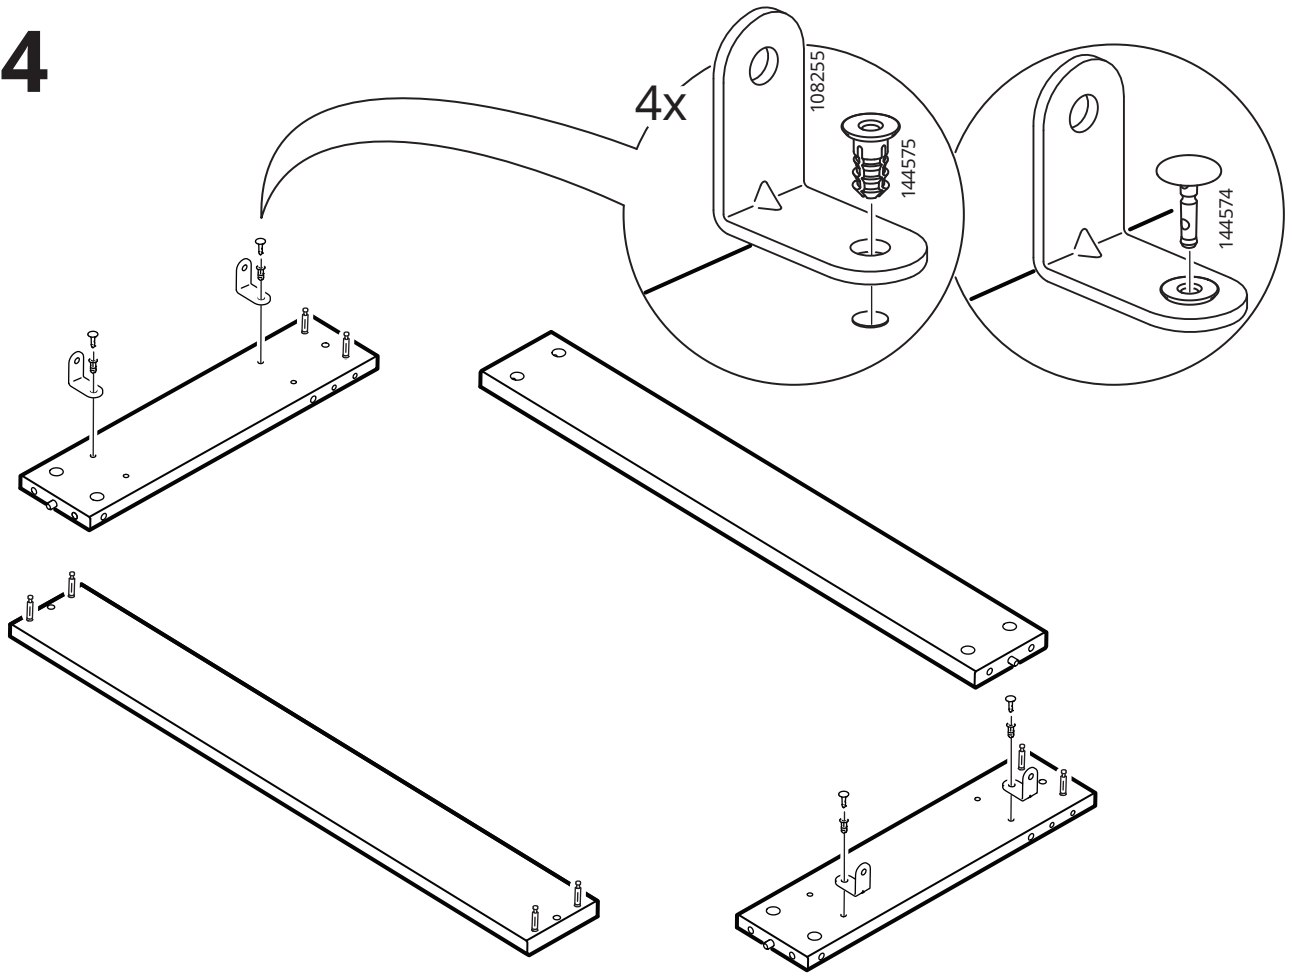 


25

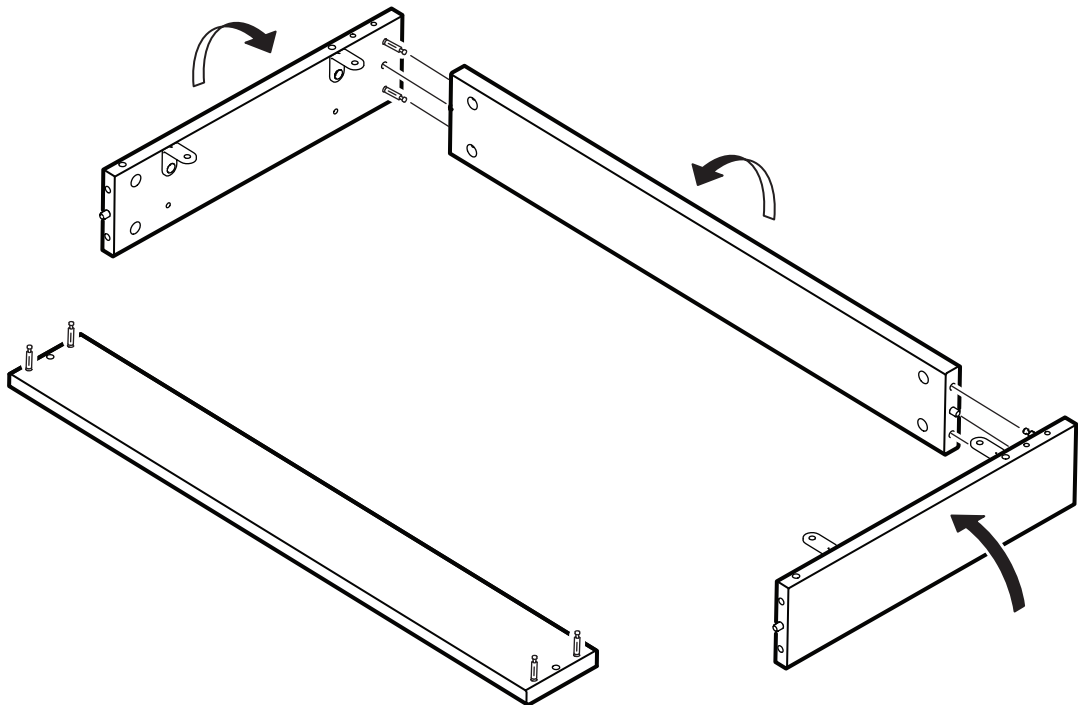 


26

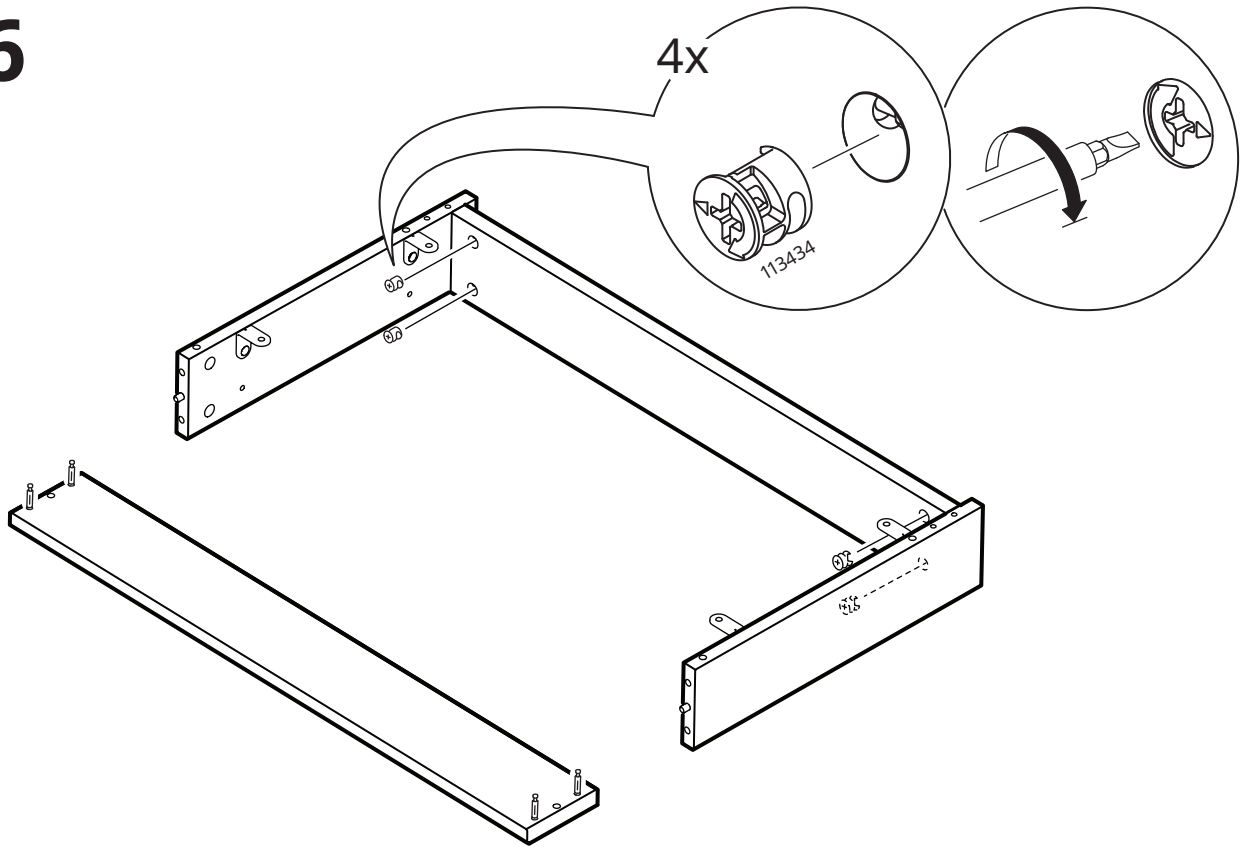 


27

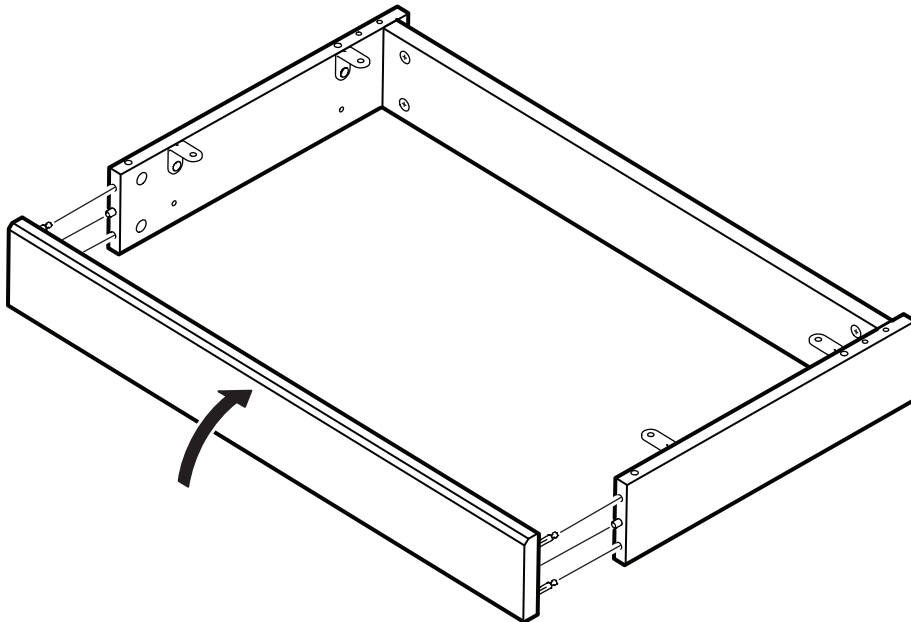 


28


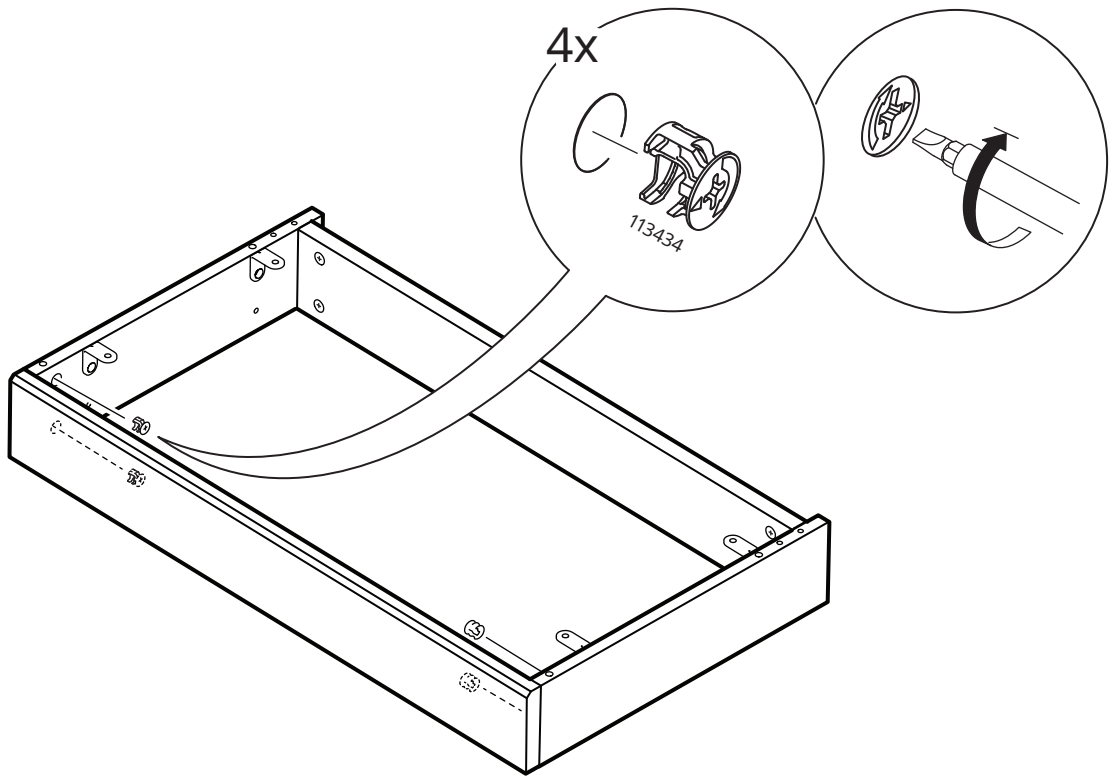 


29

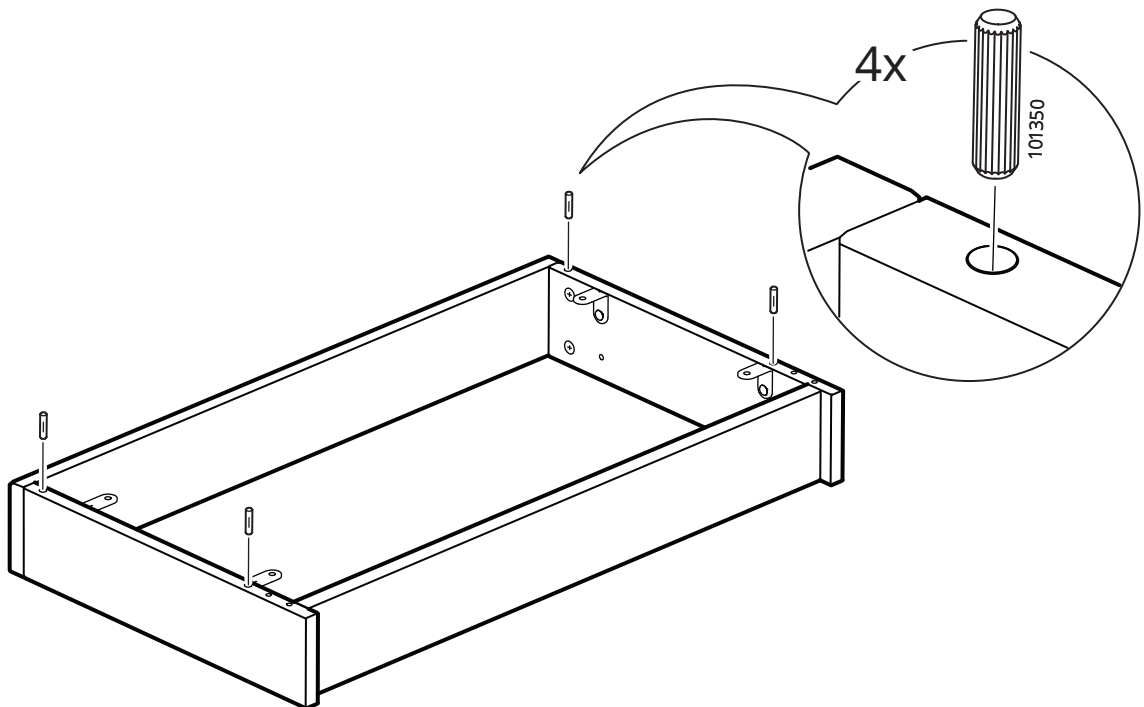 


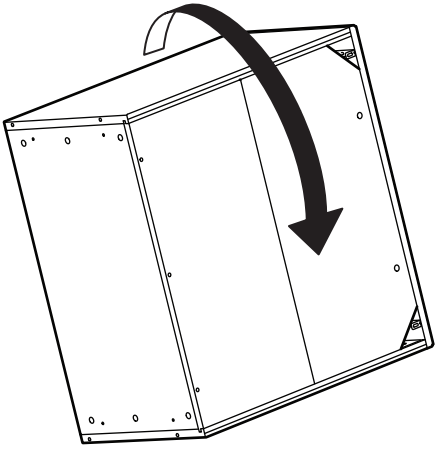 


30

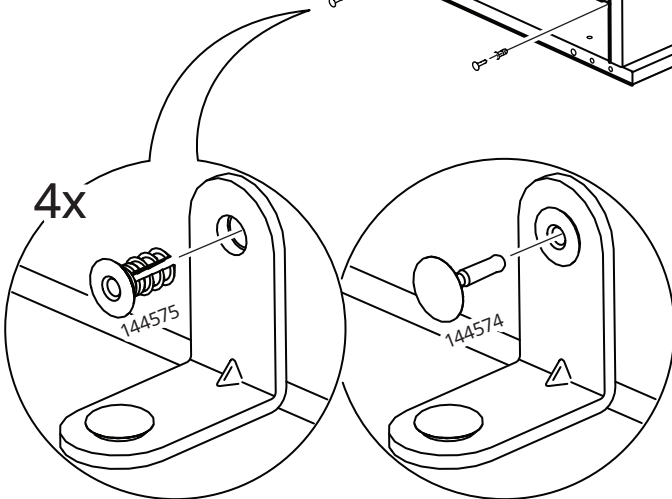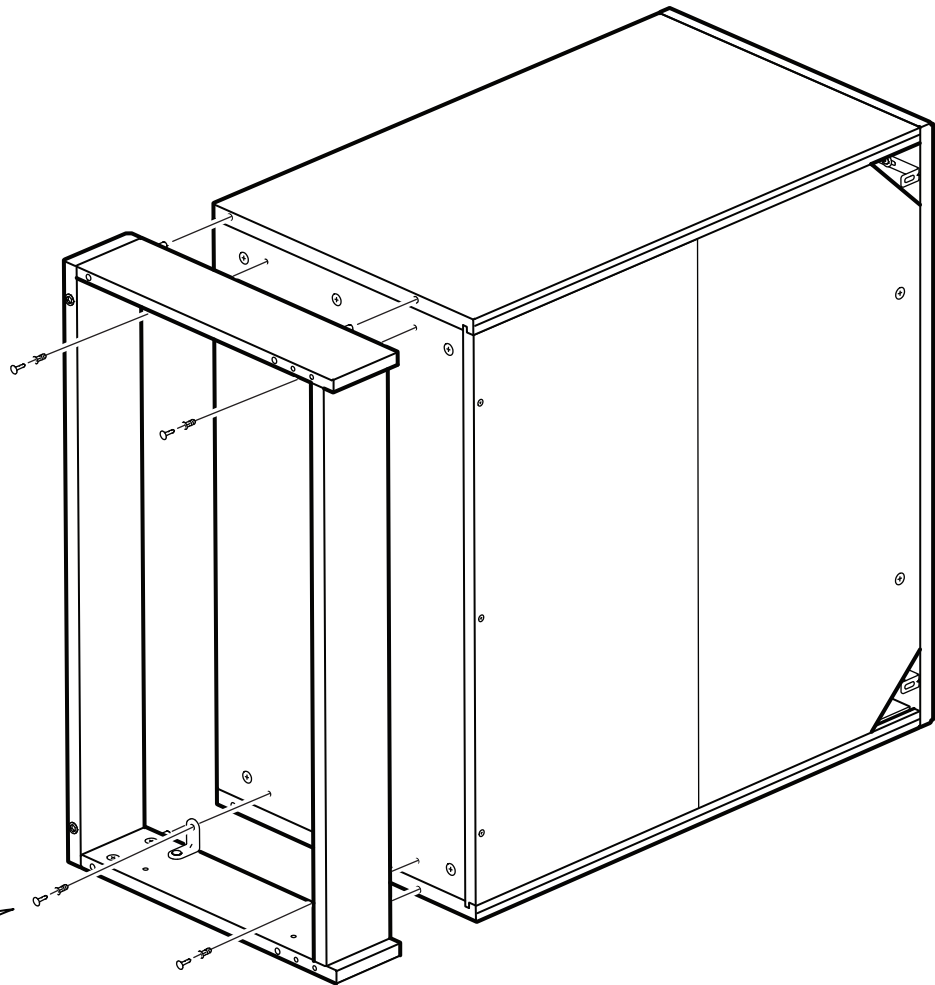  


31


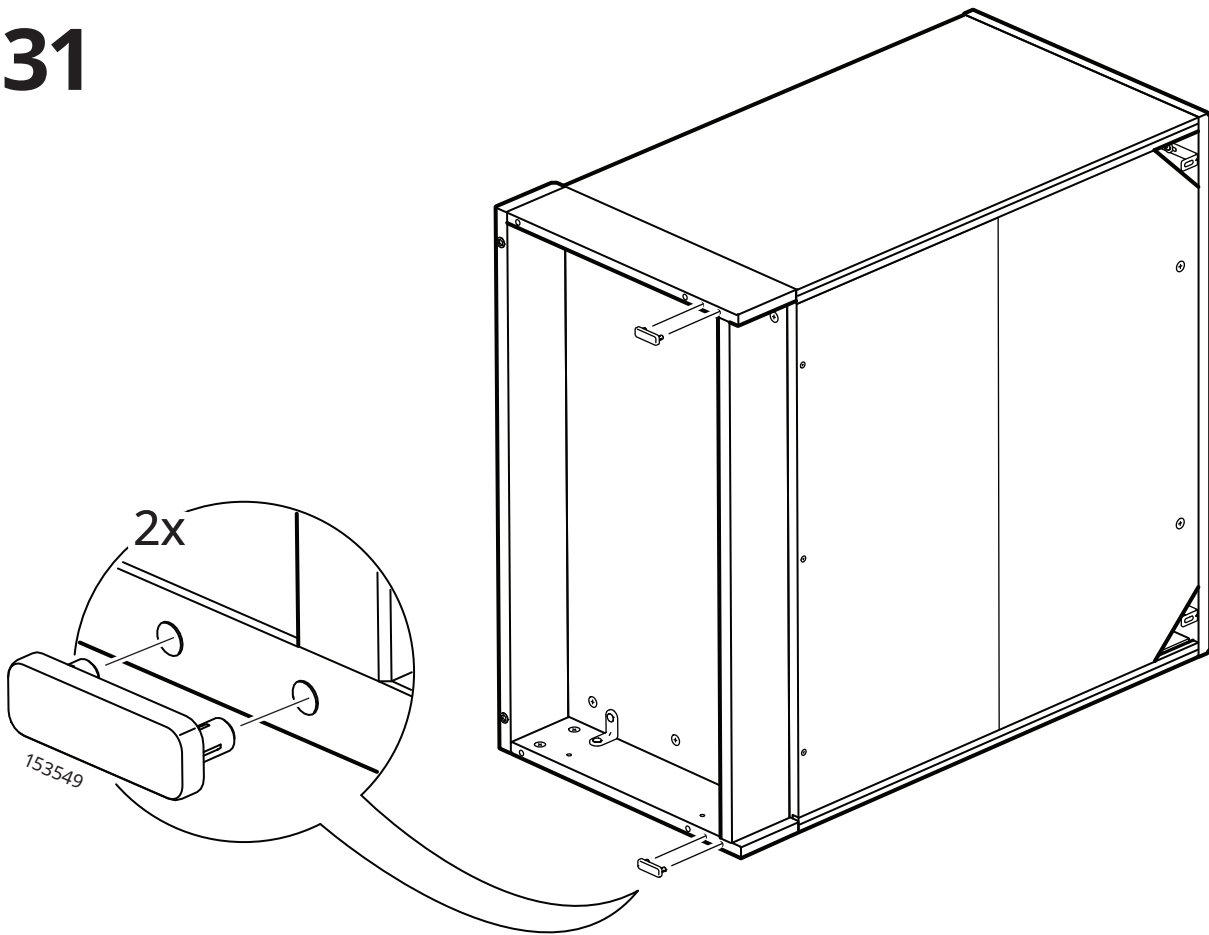 


32

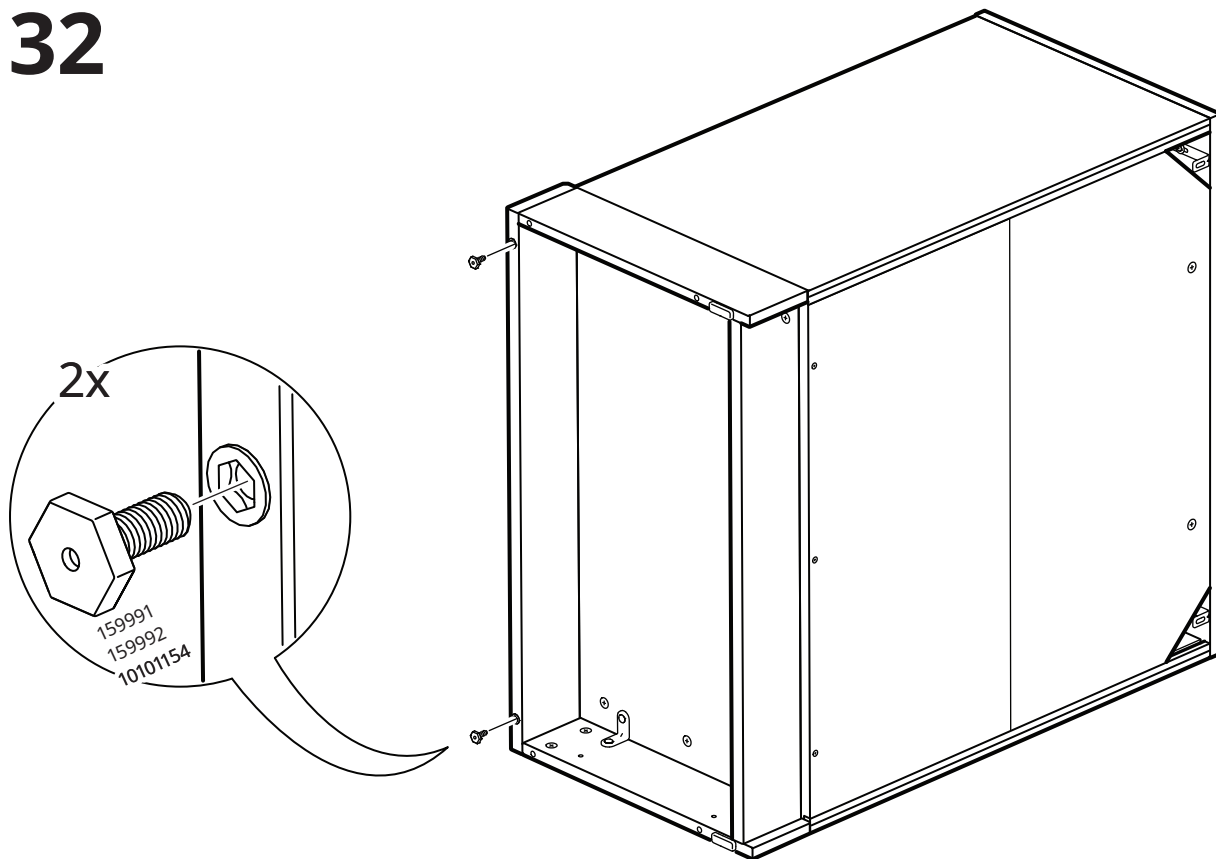 


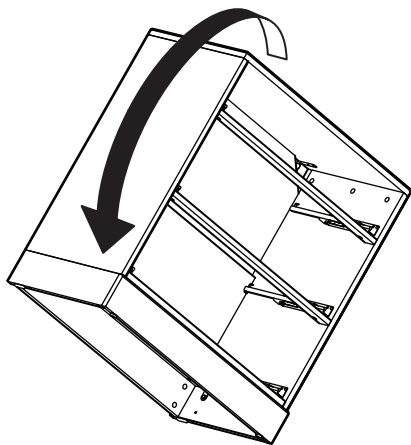 


33

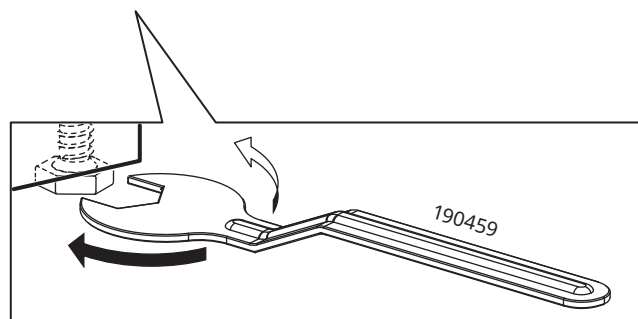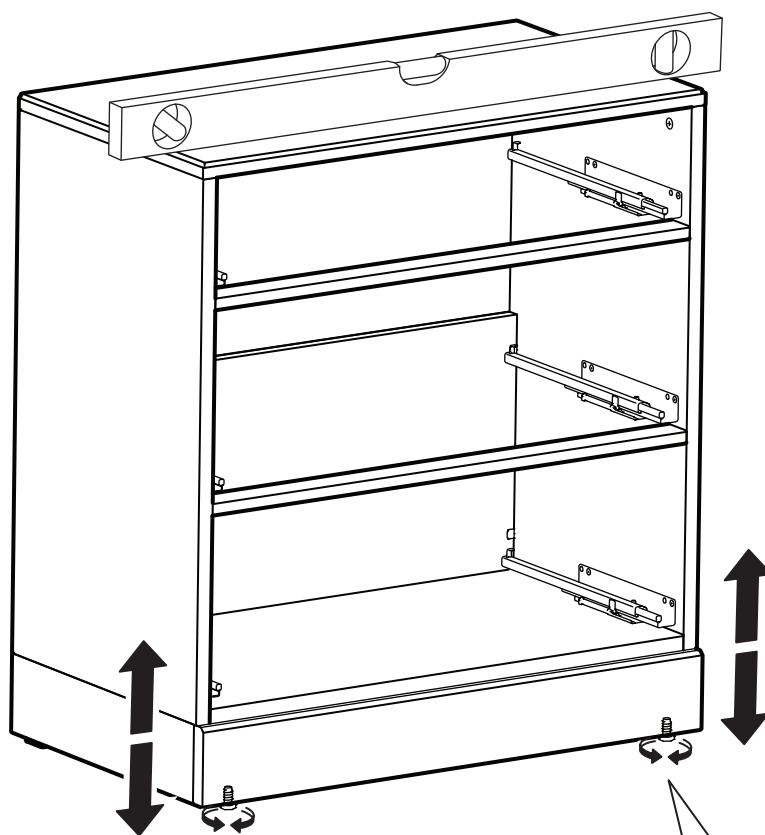  

34

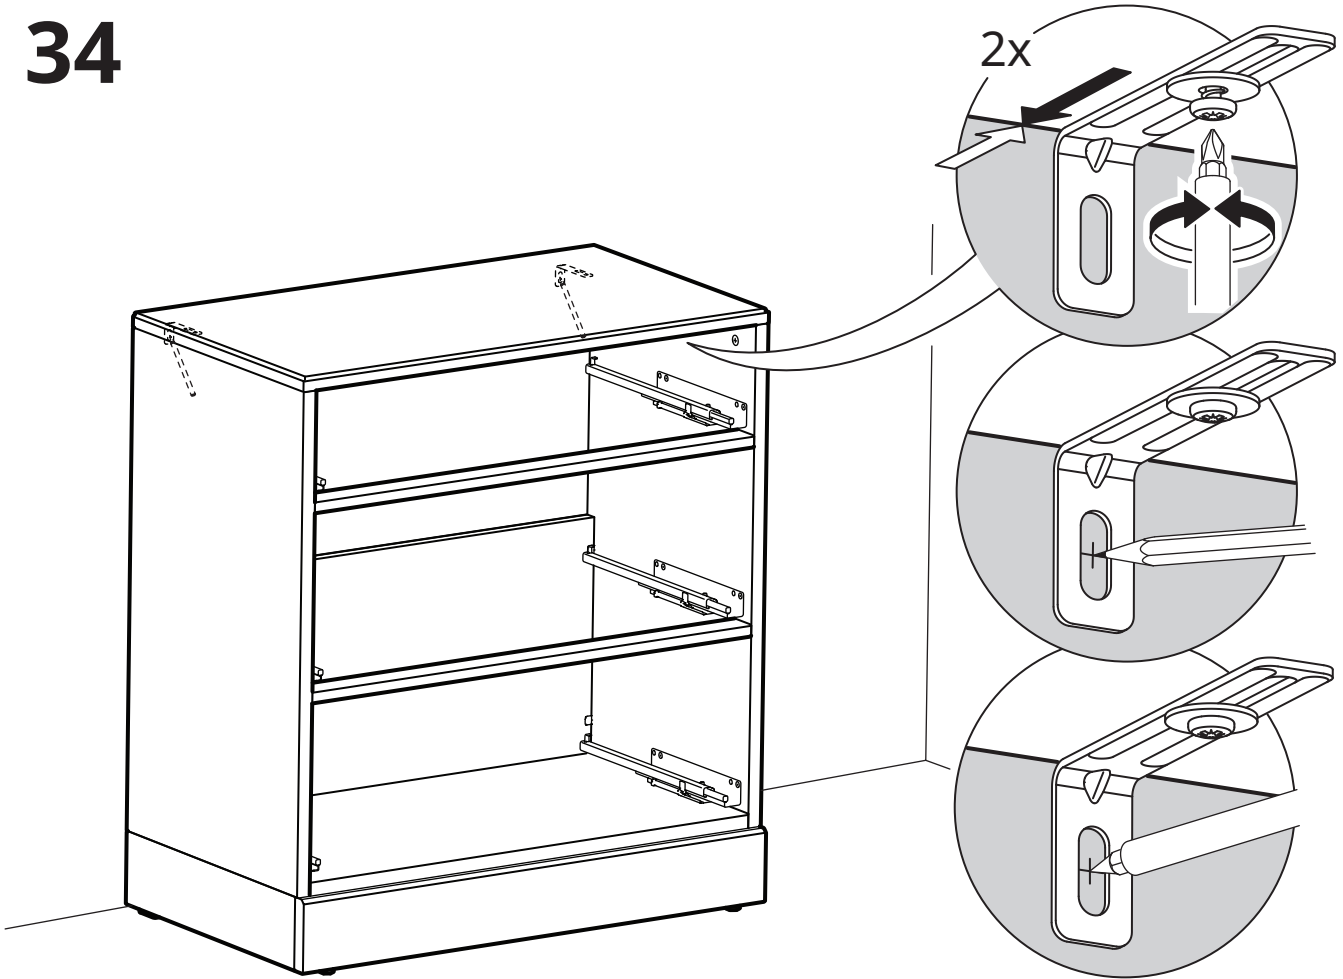 

35

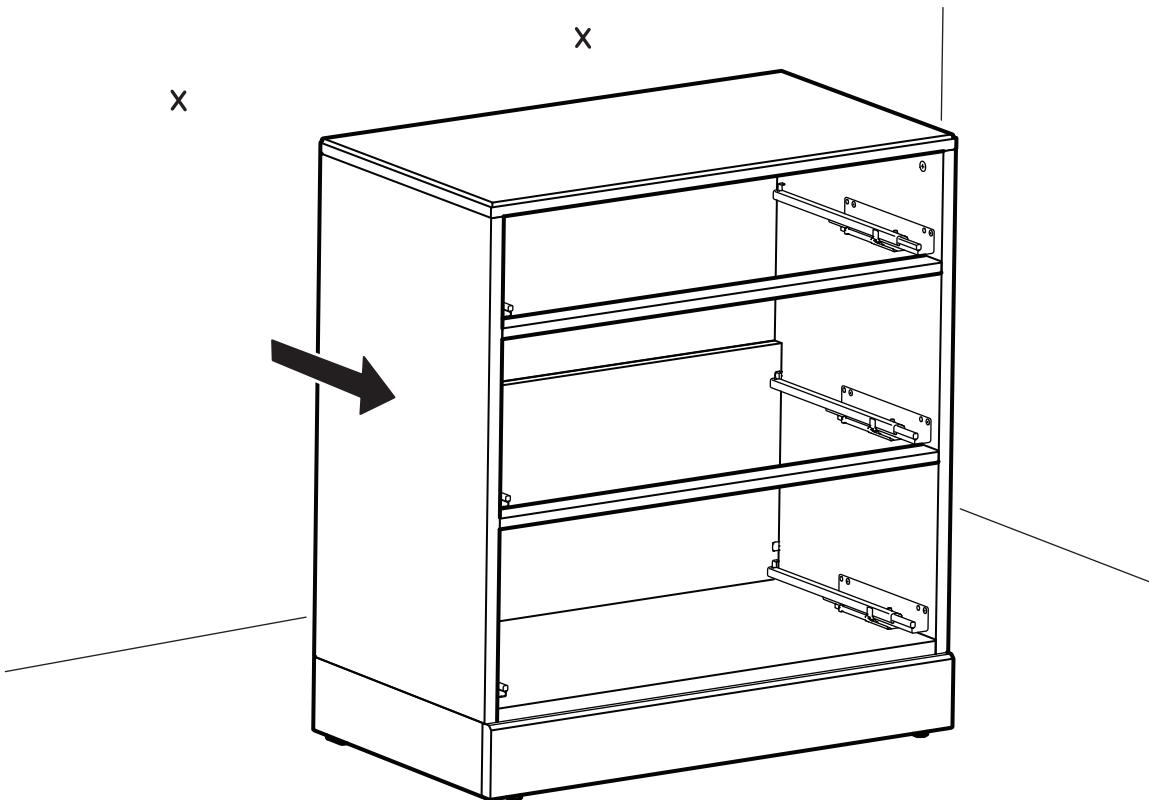 




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

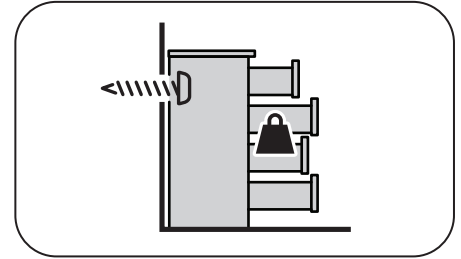

36

 
English


The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.


עברית


הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.


A

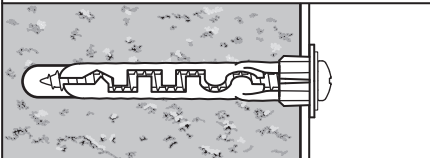


Ø 8 mm (5/16") 

 
1 

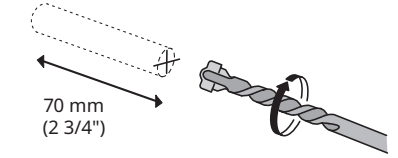 
2 
70 mm (2 3/4")

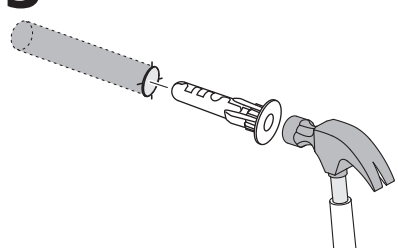 
3 

  
B

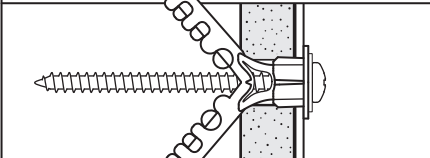


Ø 8 mm (5/16") 

 
1 

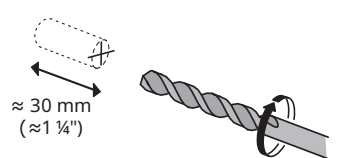 
2 
≈ 30 mm (≈ 1 1/4")

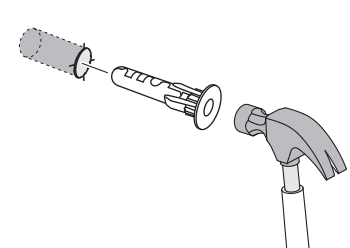 
3 

 
C

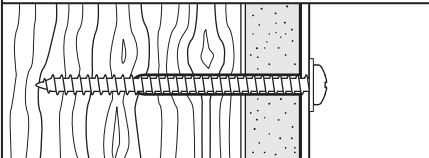



Ø 3 mm (1/8") 

 1 


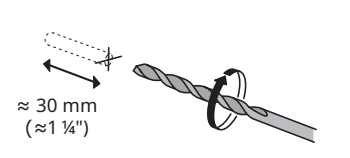 
2 
≈ 30 mm (≈ 1 1/4")

  3 

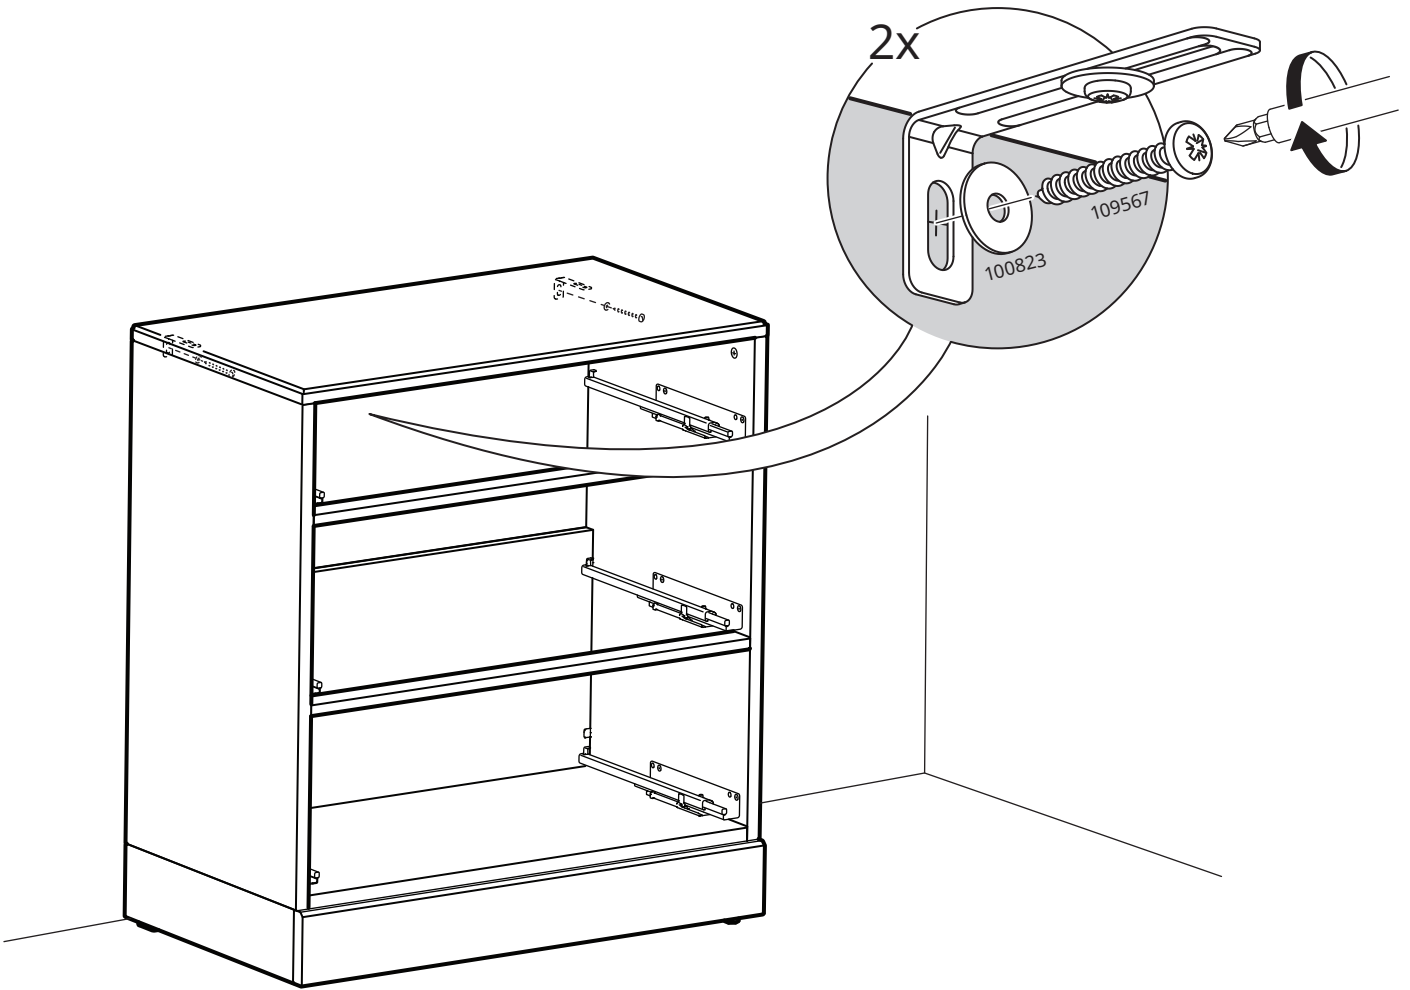



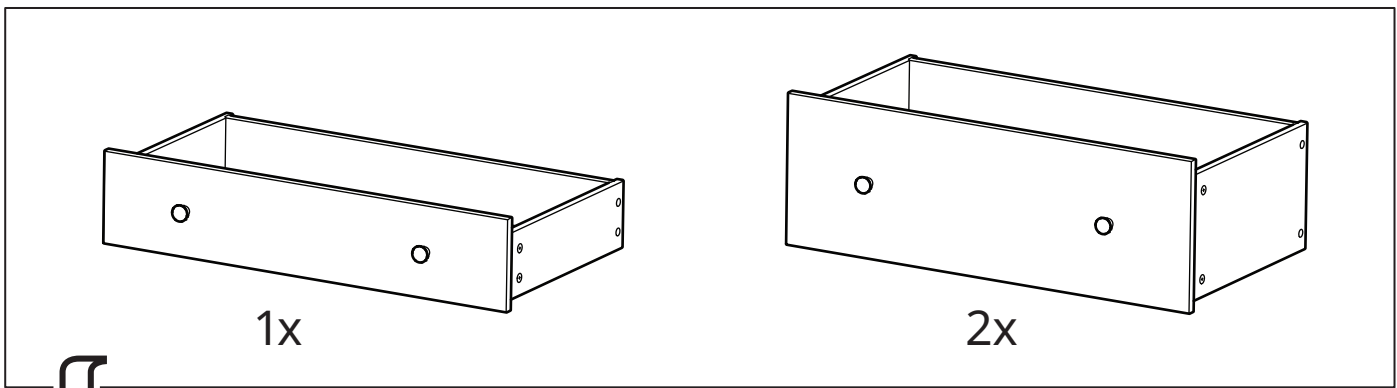


38

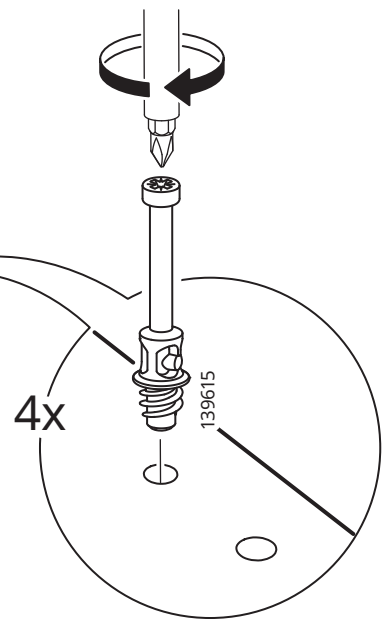 
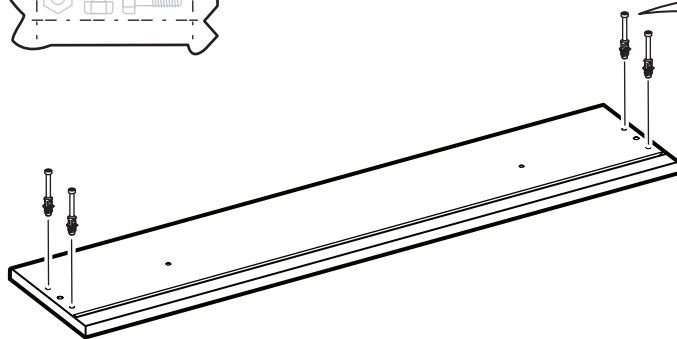 


39

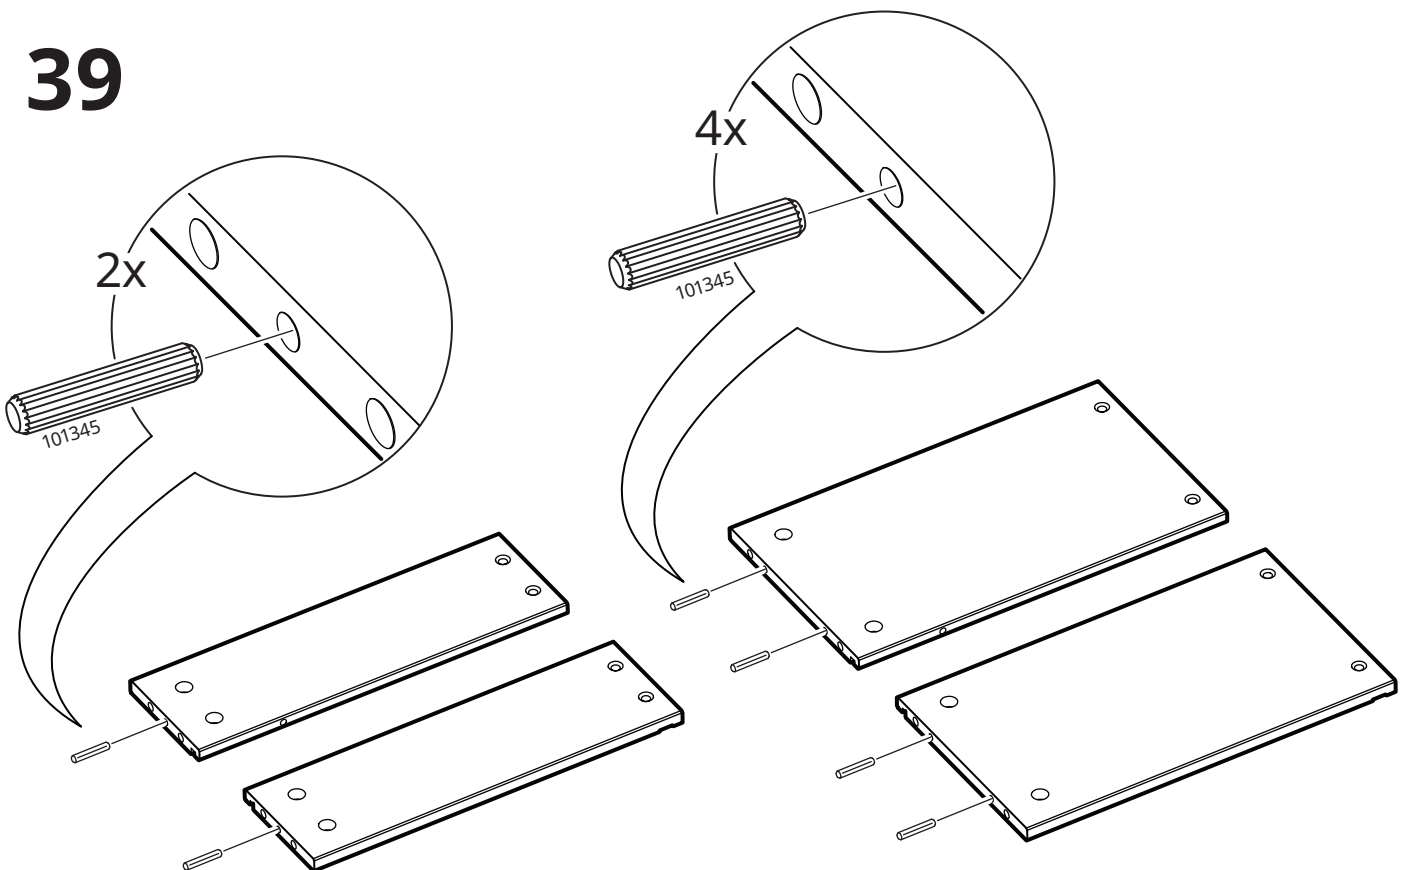 

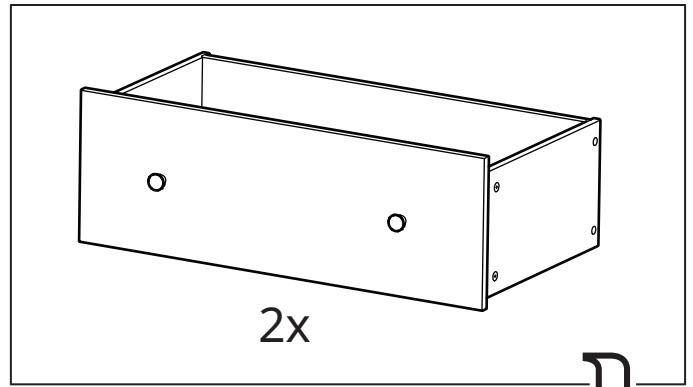 
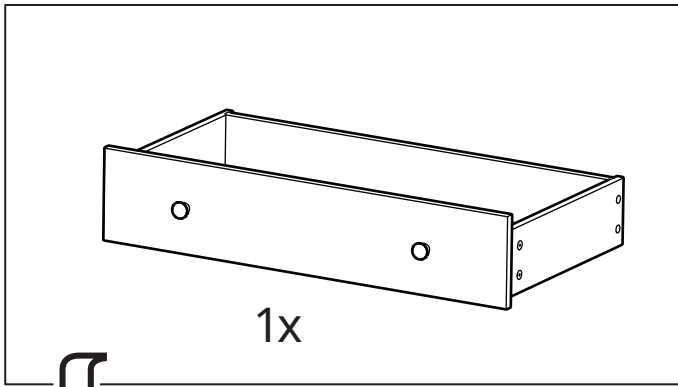 




40

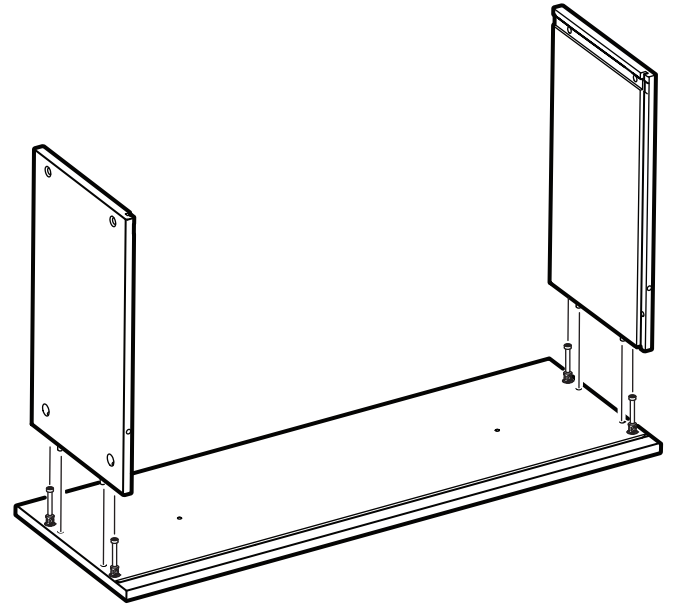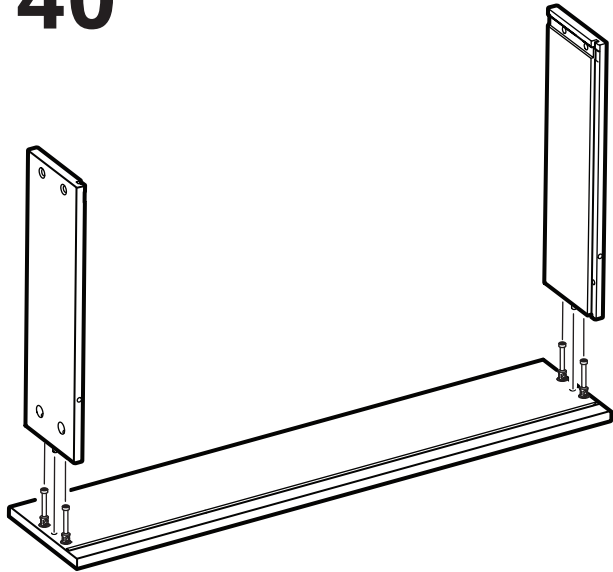  







41

    42

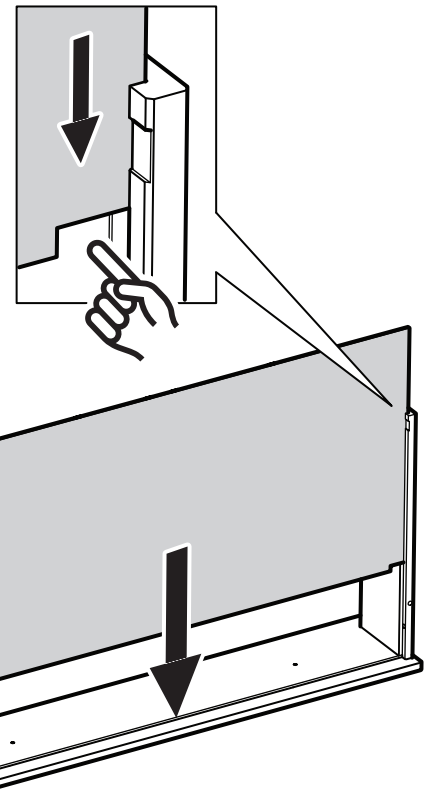
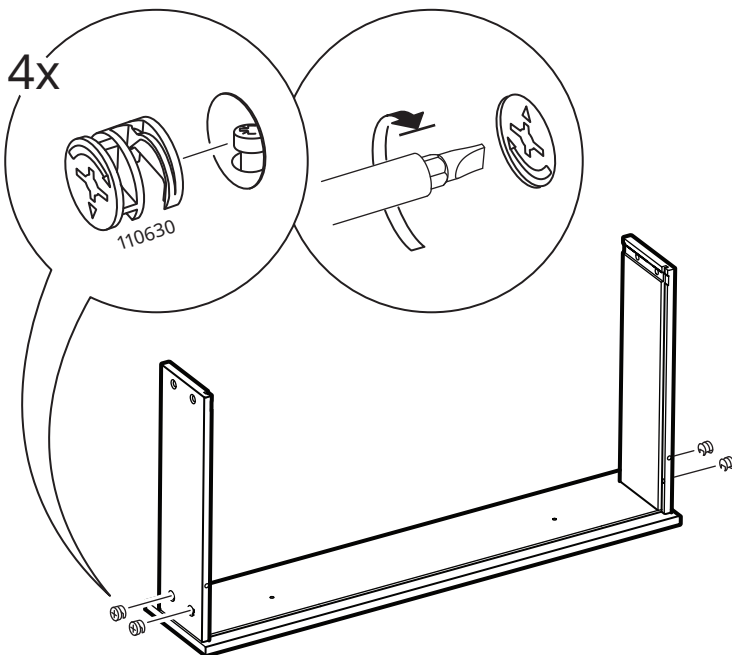


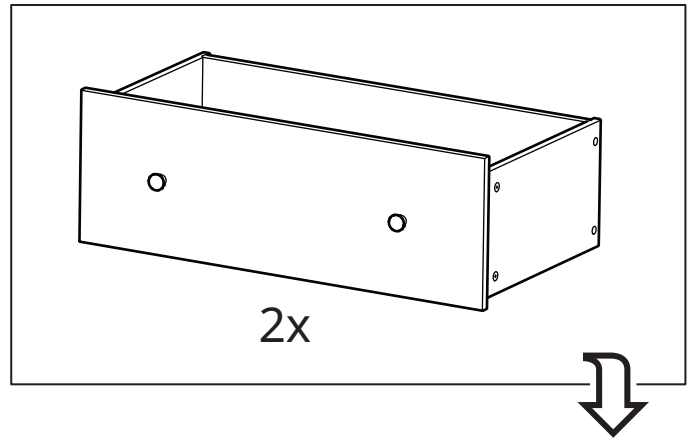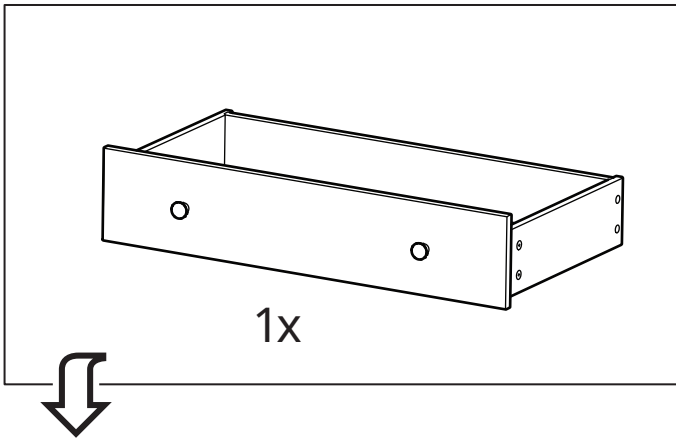


43

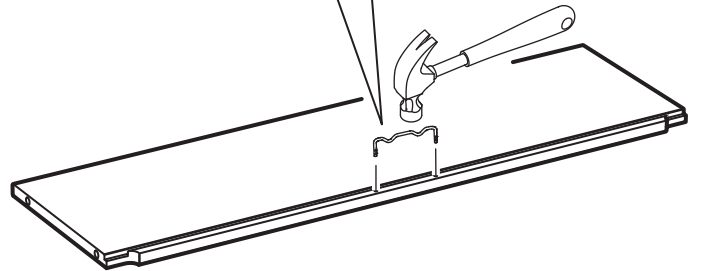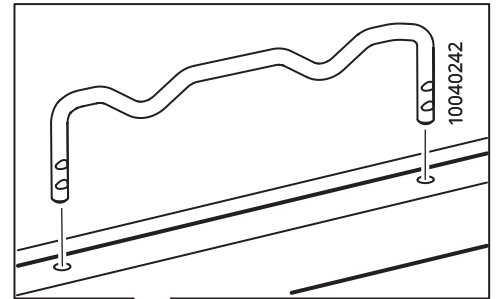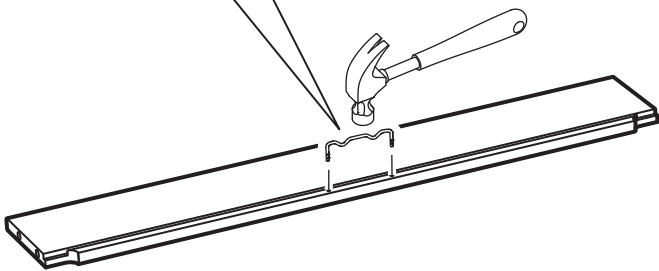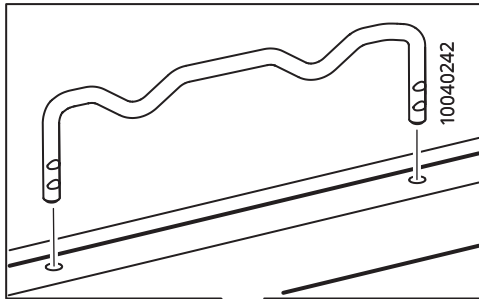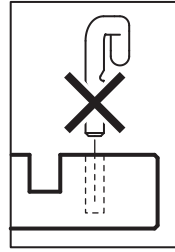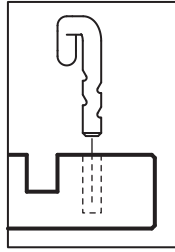      


44

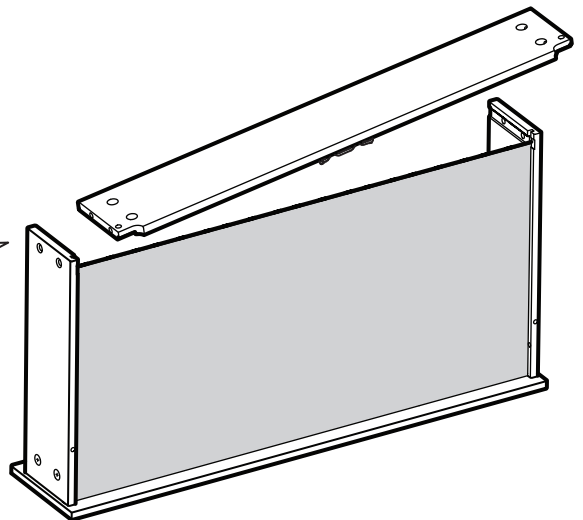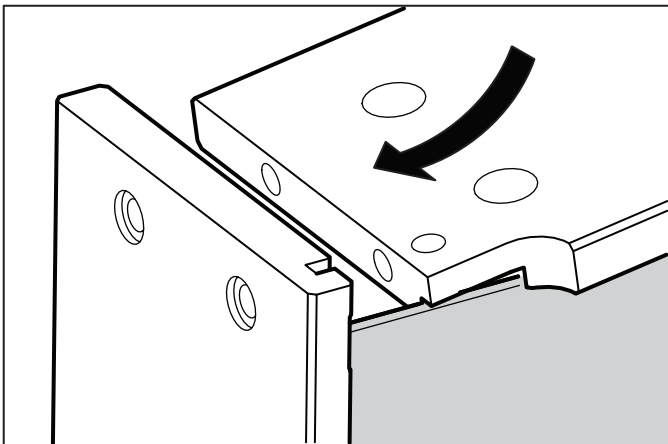  


45

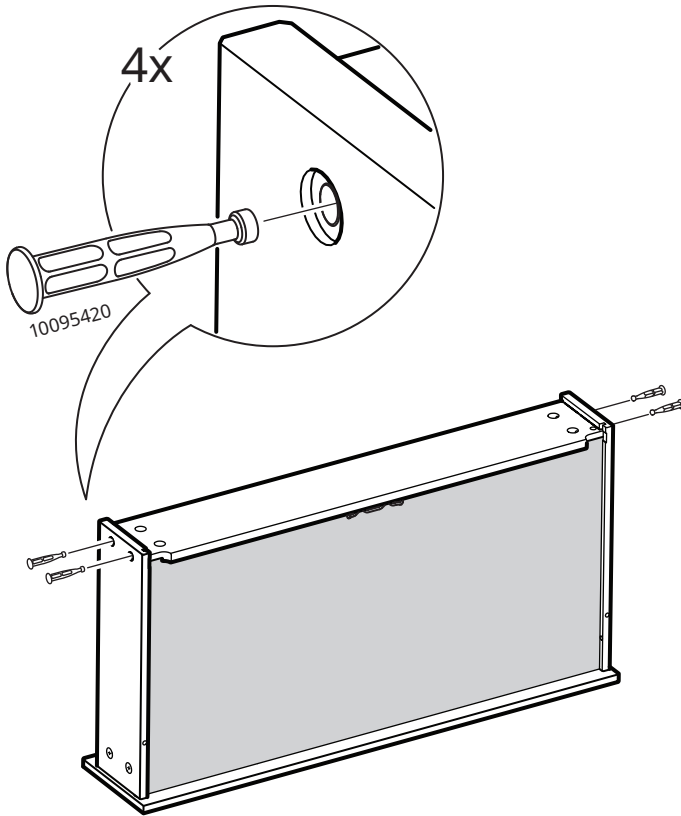 


46

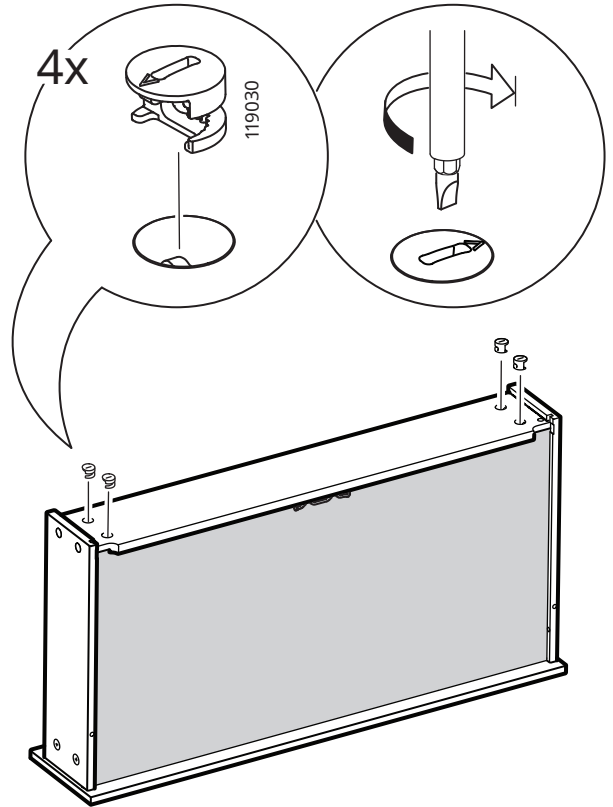 


47

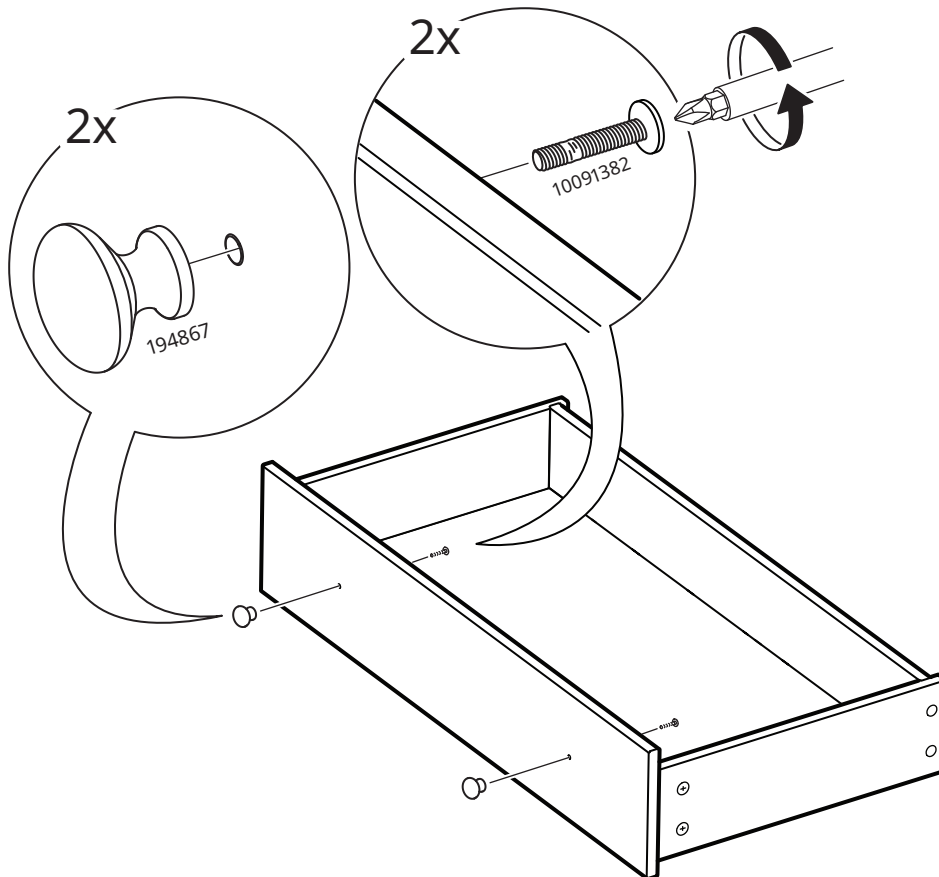 


48

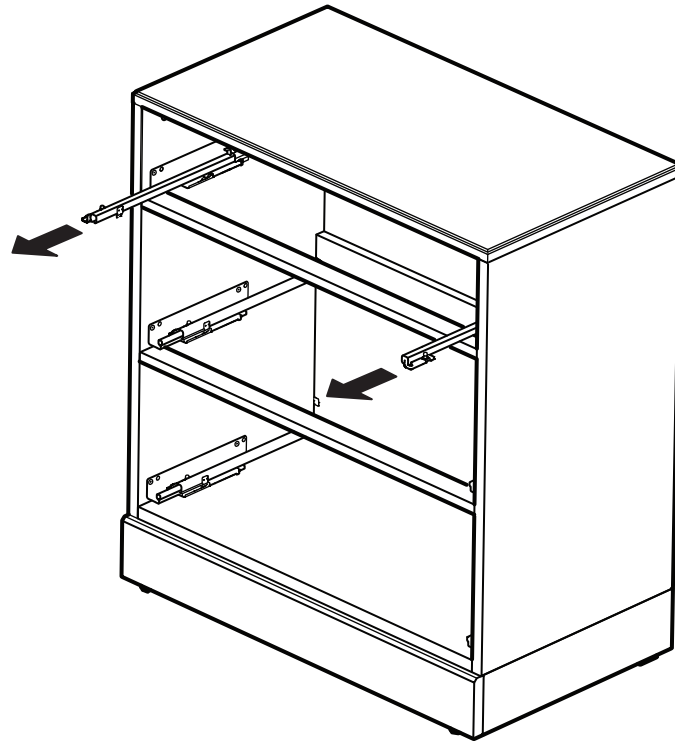 


49

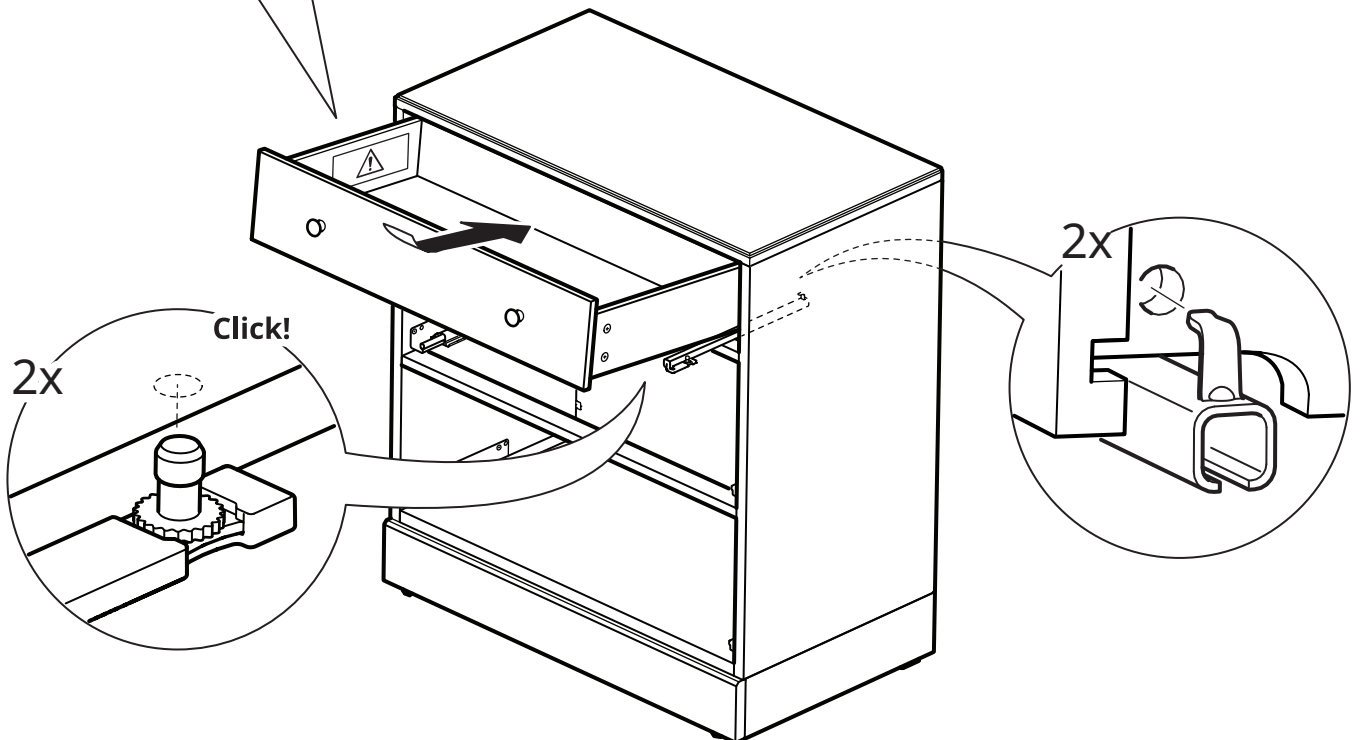 


50

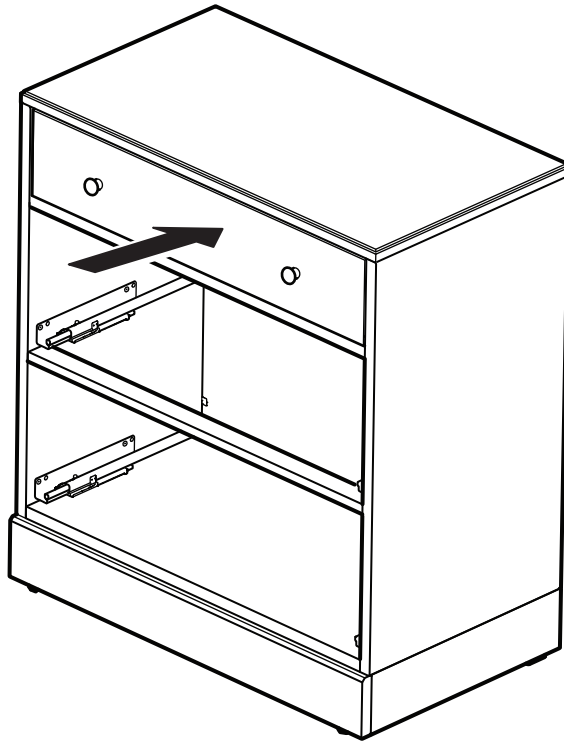 

51

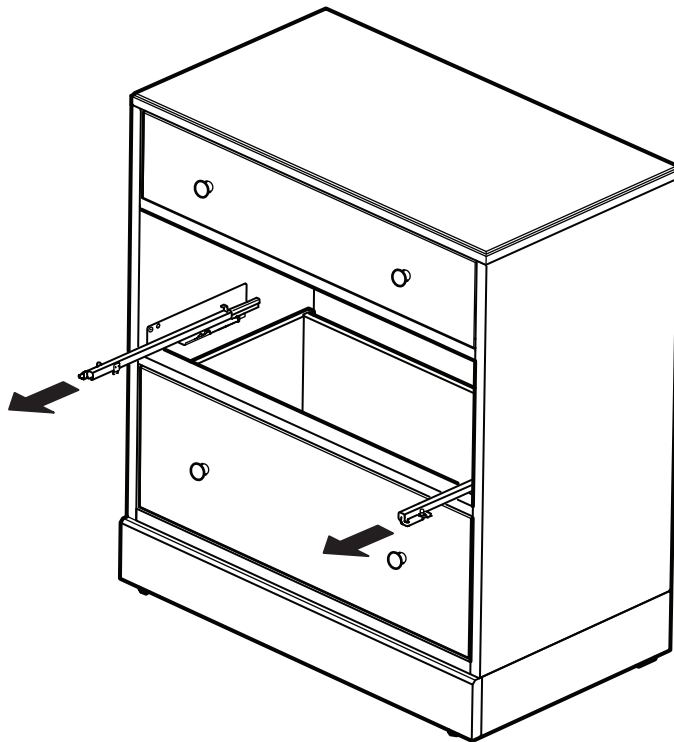 

52

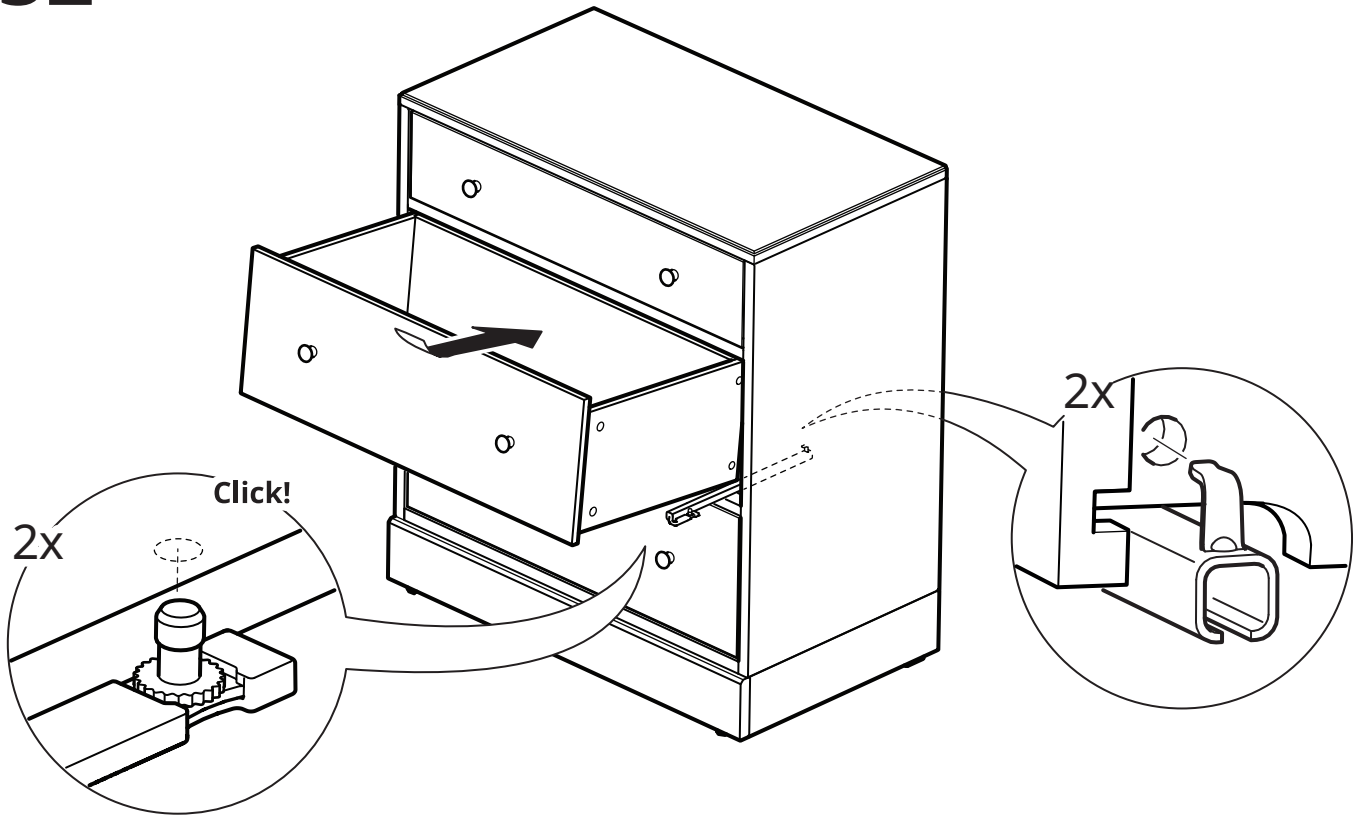 

53

