 


IDANÄS

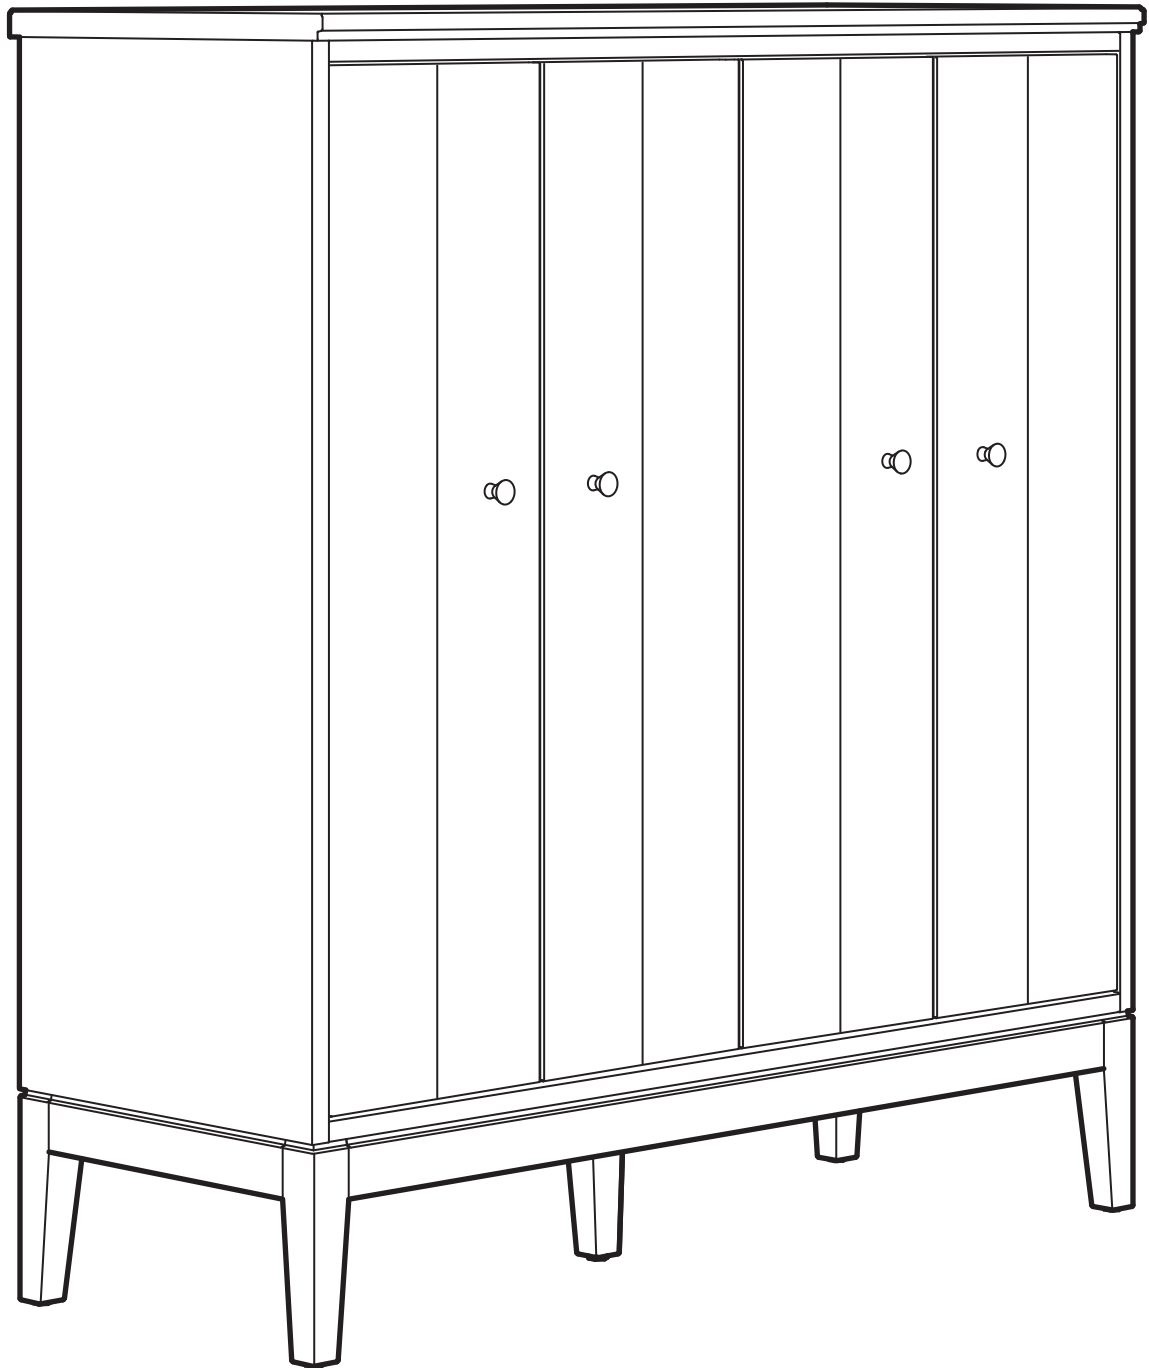

Design and Quality
IKEA of Sweden



English

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, or shelves.

עברית

אזהרה

נפילת הרהיט עלולה לגרום לפגיעה גופנית חמורה או קטלנית.

יש לקבע את הרהיט לקיר באמצעות אבזרי הקיבוע המצורפים.

 
 
 
 
על-מנת למזער את סכנת הפגיעה הגופנית או המוות מנפילת רהיטים:

 
 
 
 
- מקמו את הפריטים הכבדים ביותר במגירה התחתונה.
- הימנעו מלהניח טלוויזיות או פריטים כבדים אחרים על מוצר זה.
- אין לאפשר לילדים לטפס על המגירות, הדלתות או המדפים.








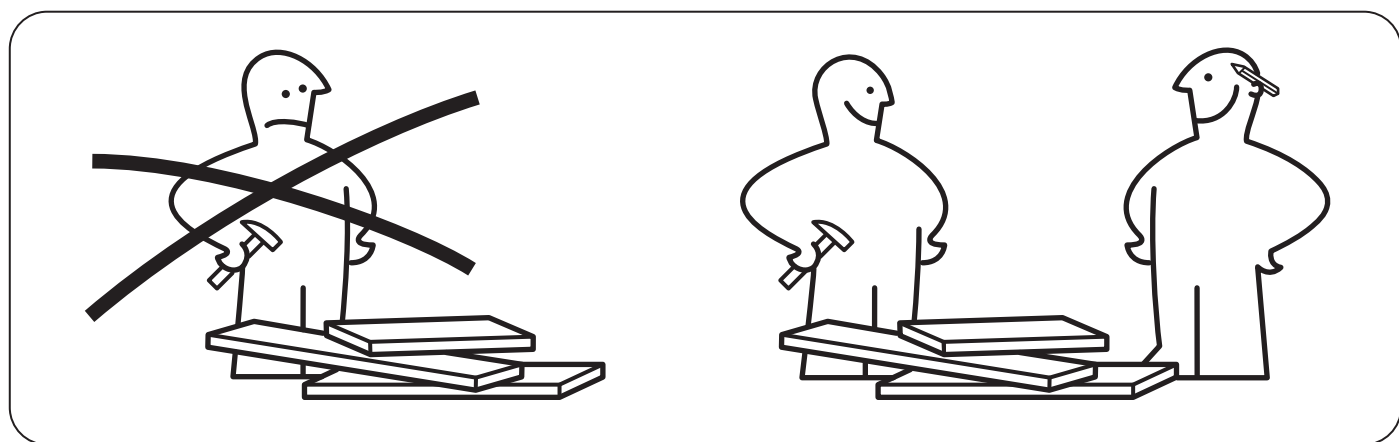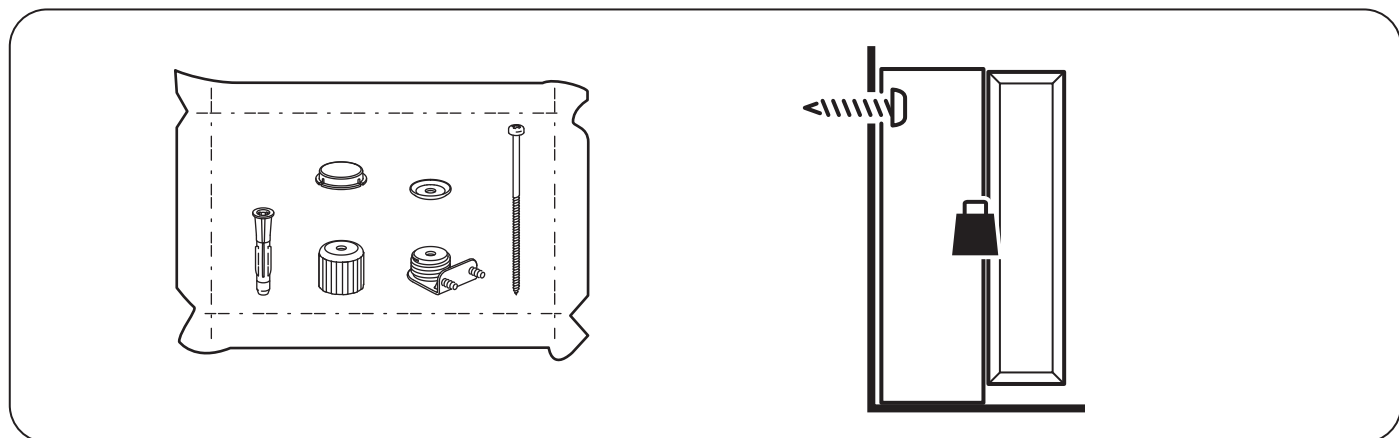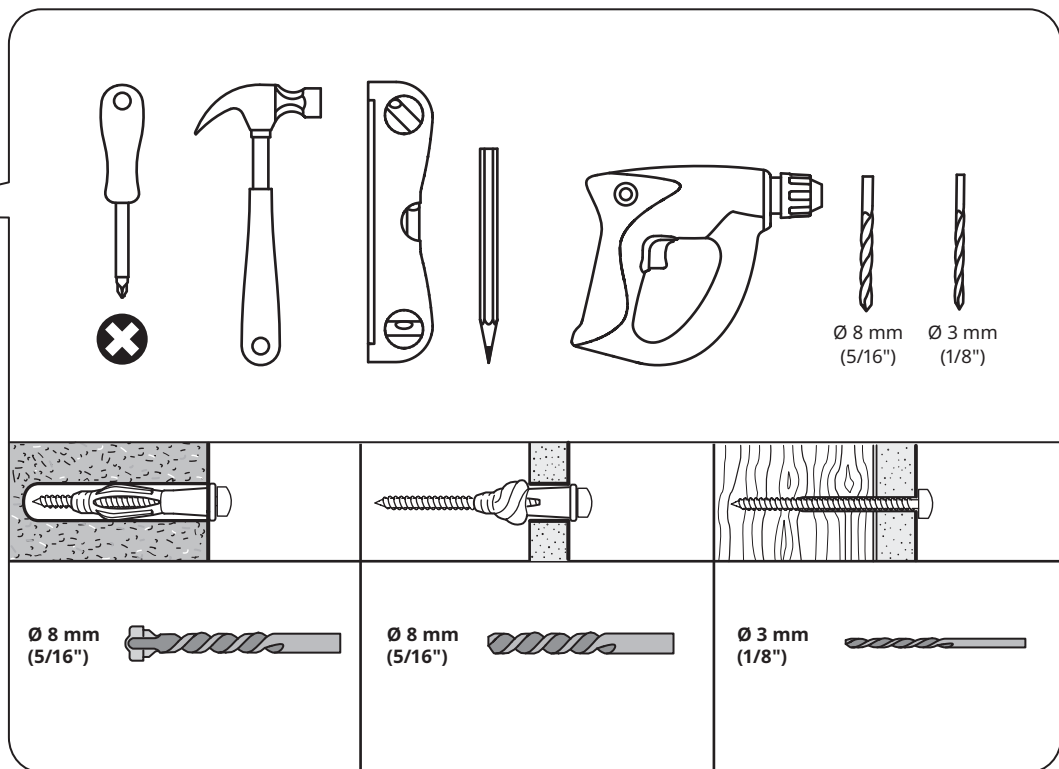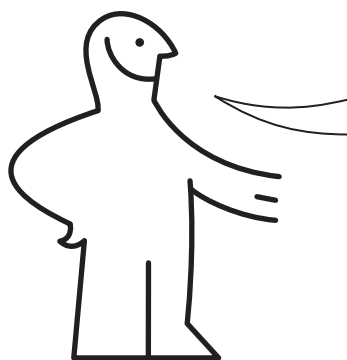

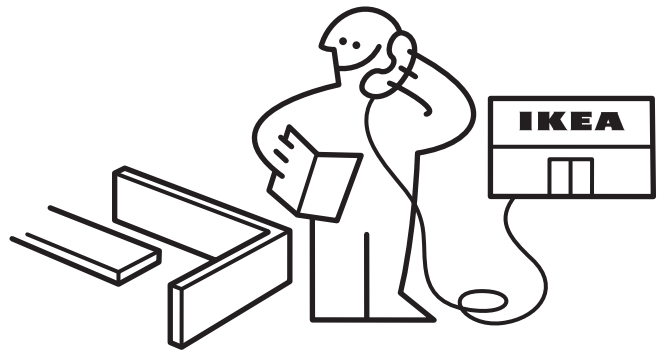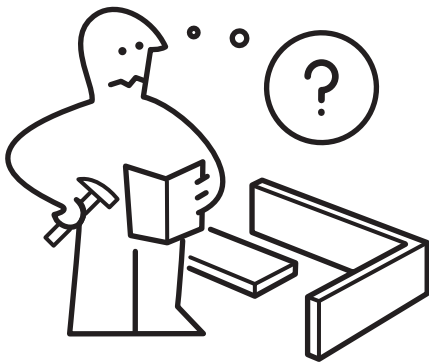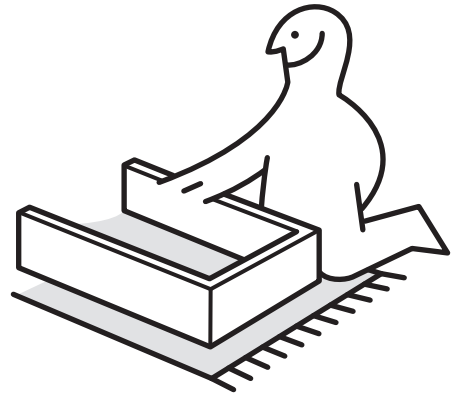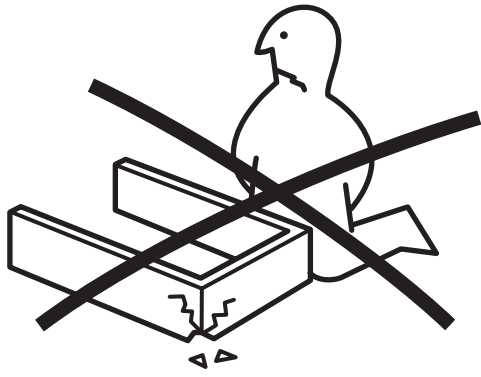

1

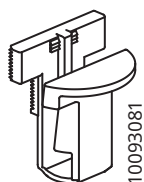 


10093081

8x




10093082

 8x




151706

 8x




151705

 8x




100217

 1x




100214

 1x



10093458

 4x




131372

16x




100347

 4x

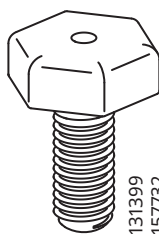


131399
157732

 5x

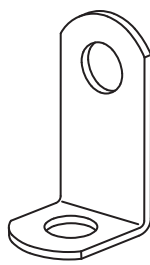


102553

 2x

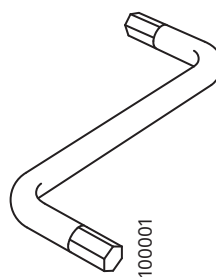

100001

 1x




101352

9x



13

 2

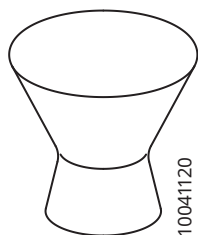


10041120

4x



119976

 4x



192158
192166

12x



10051084

10x



 
10075558

10x




150769

16x

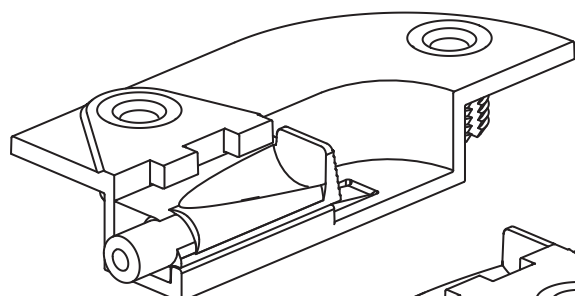


2x

 10050531
10075931

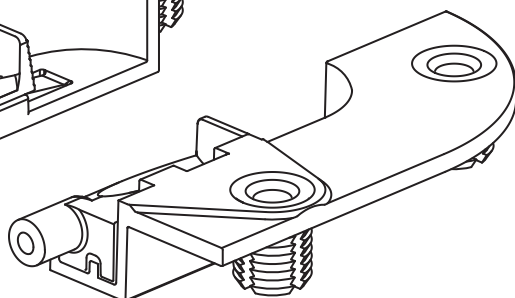


2x

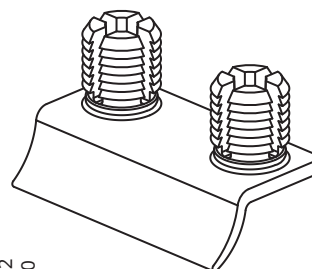 


10050549
10075918

 2x

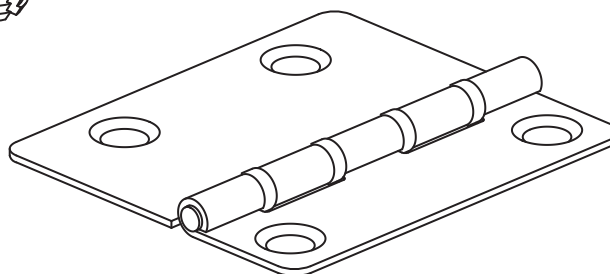


10042027

 4x

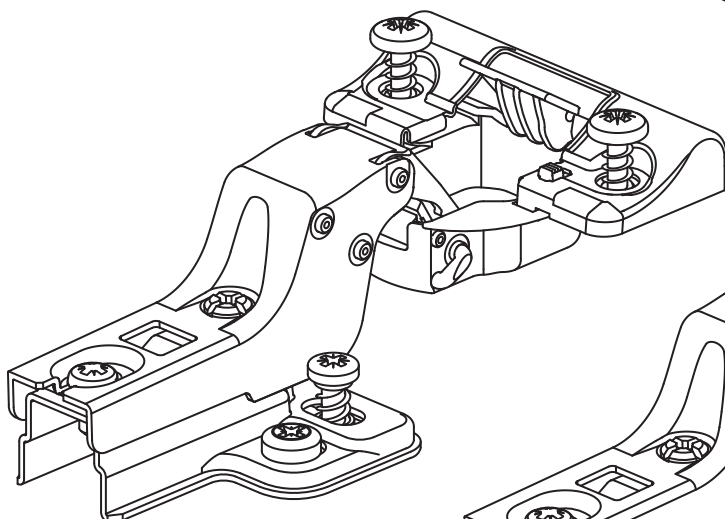

2x

 175136

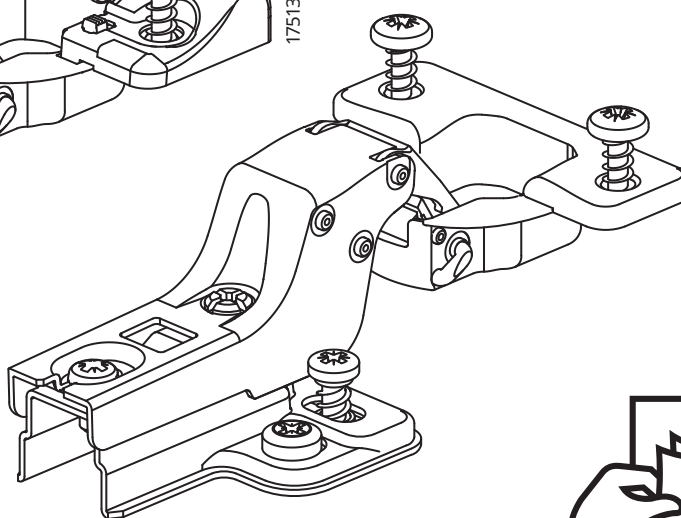


152517


2x



 
31

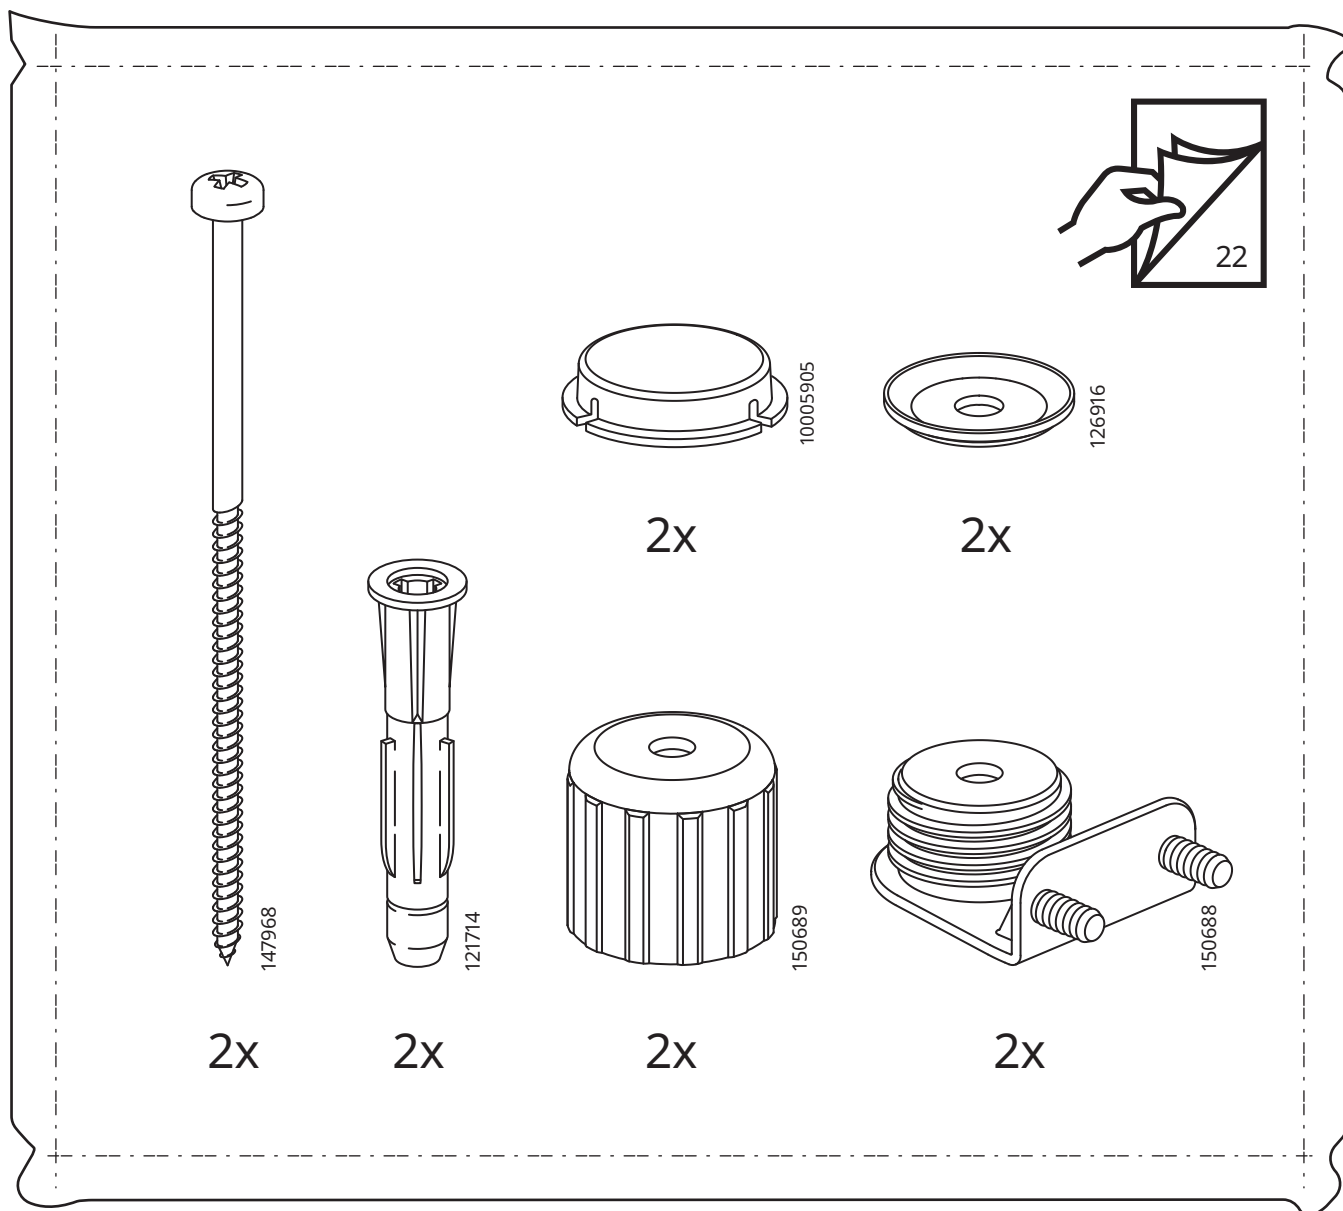


363576

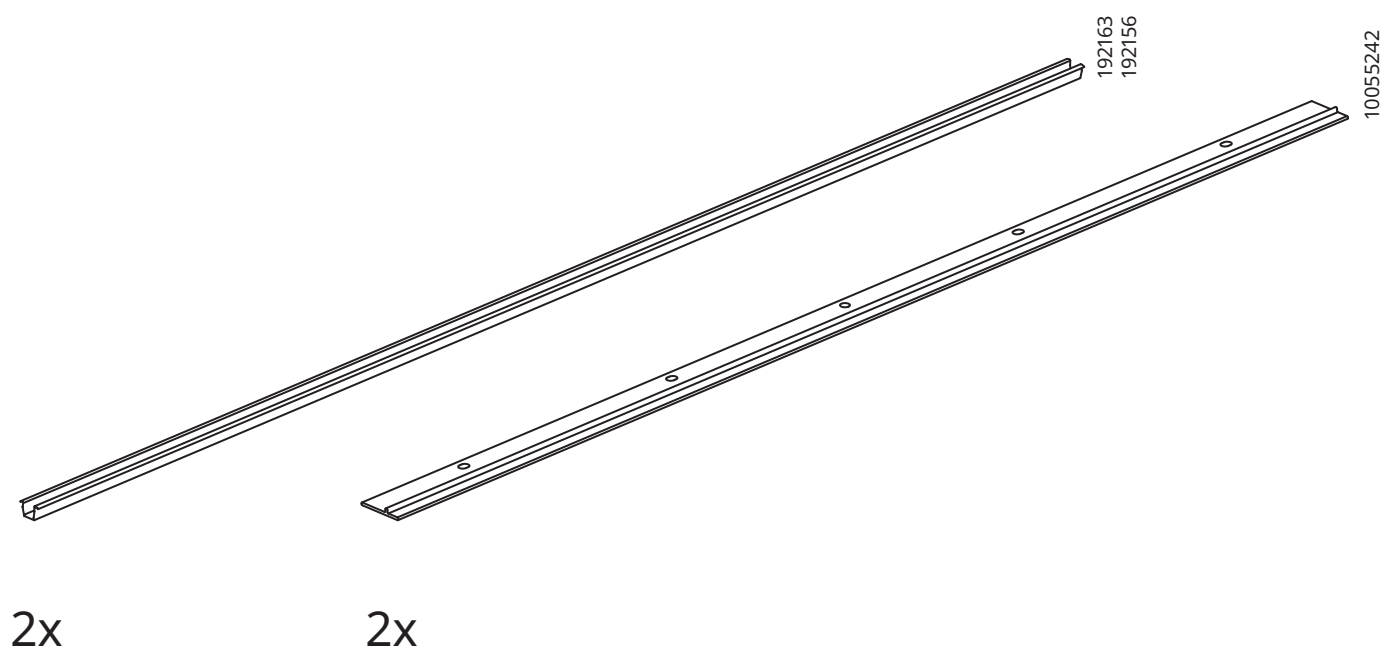 




1

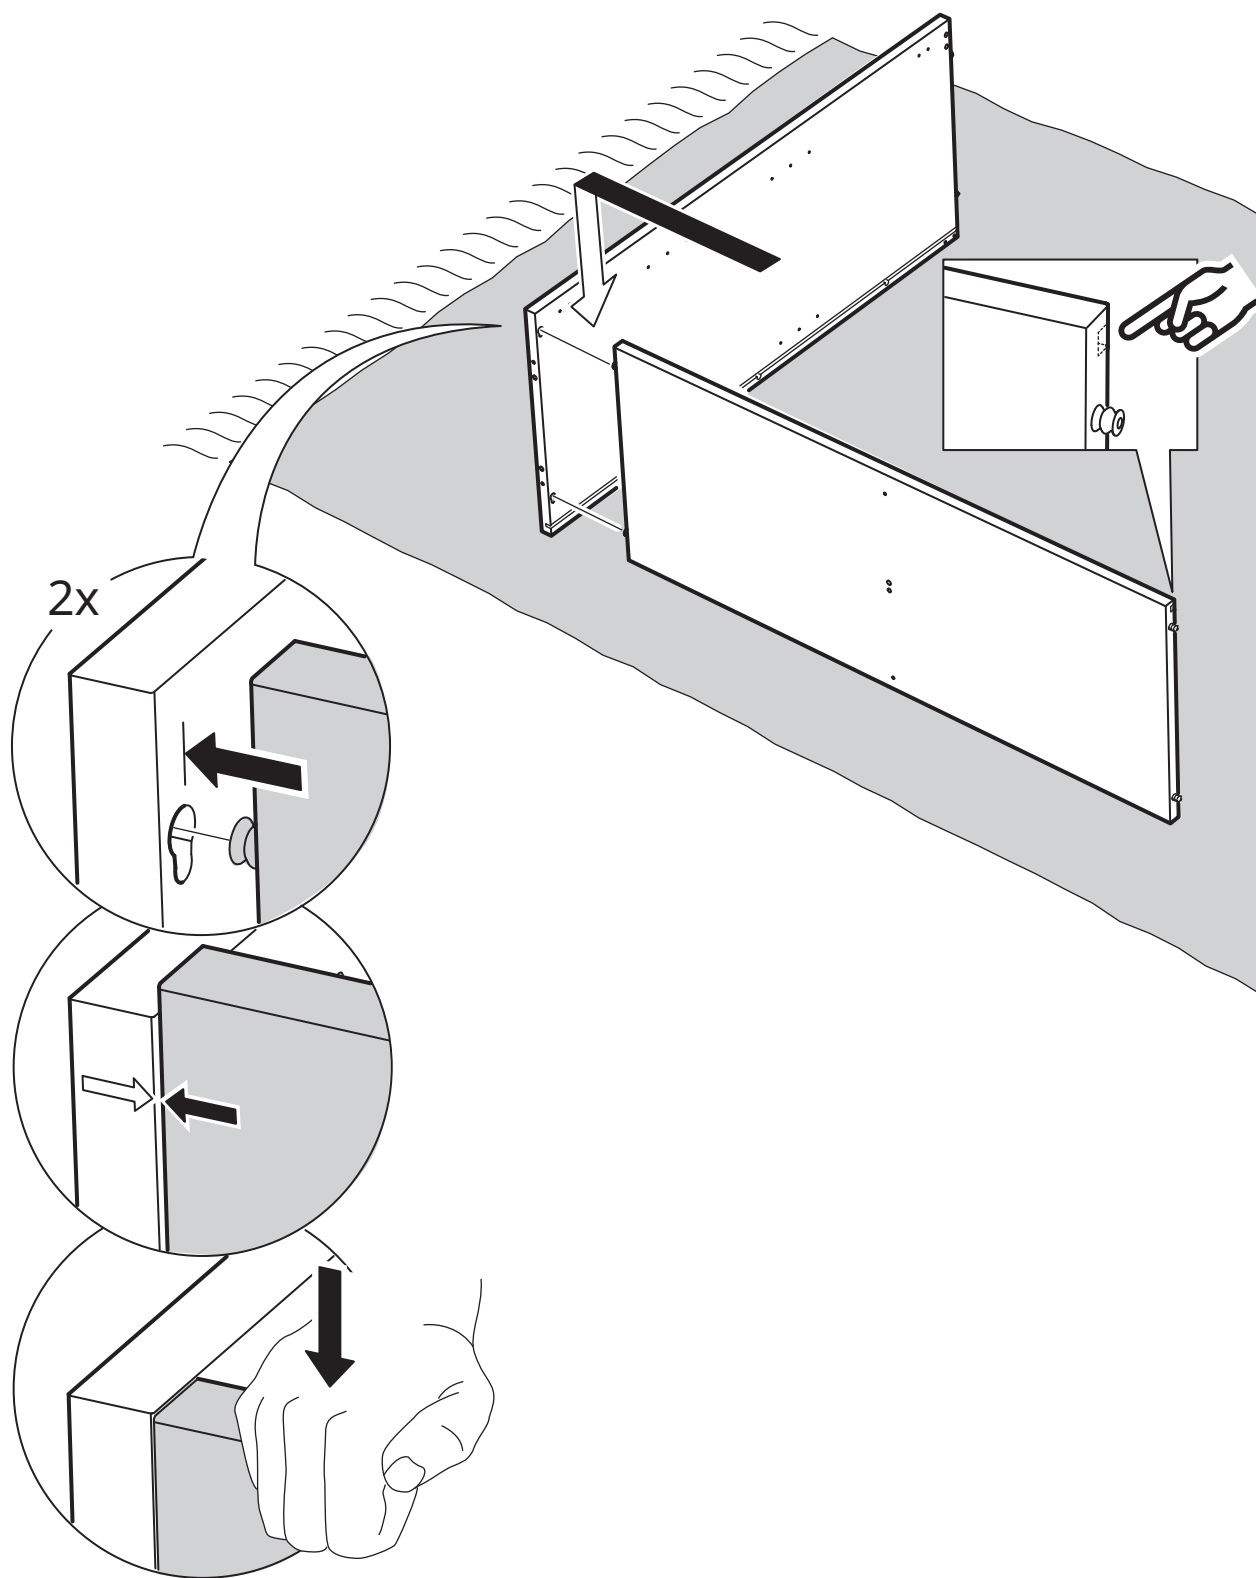 


2

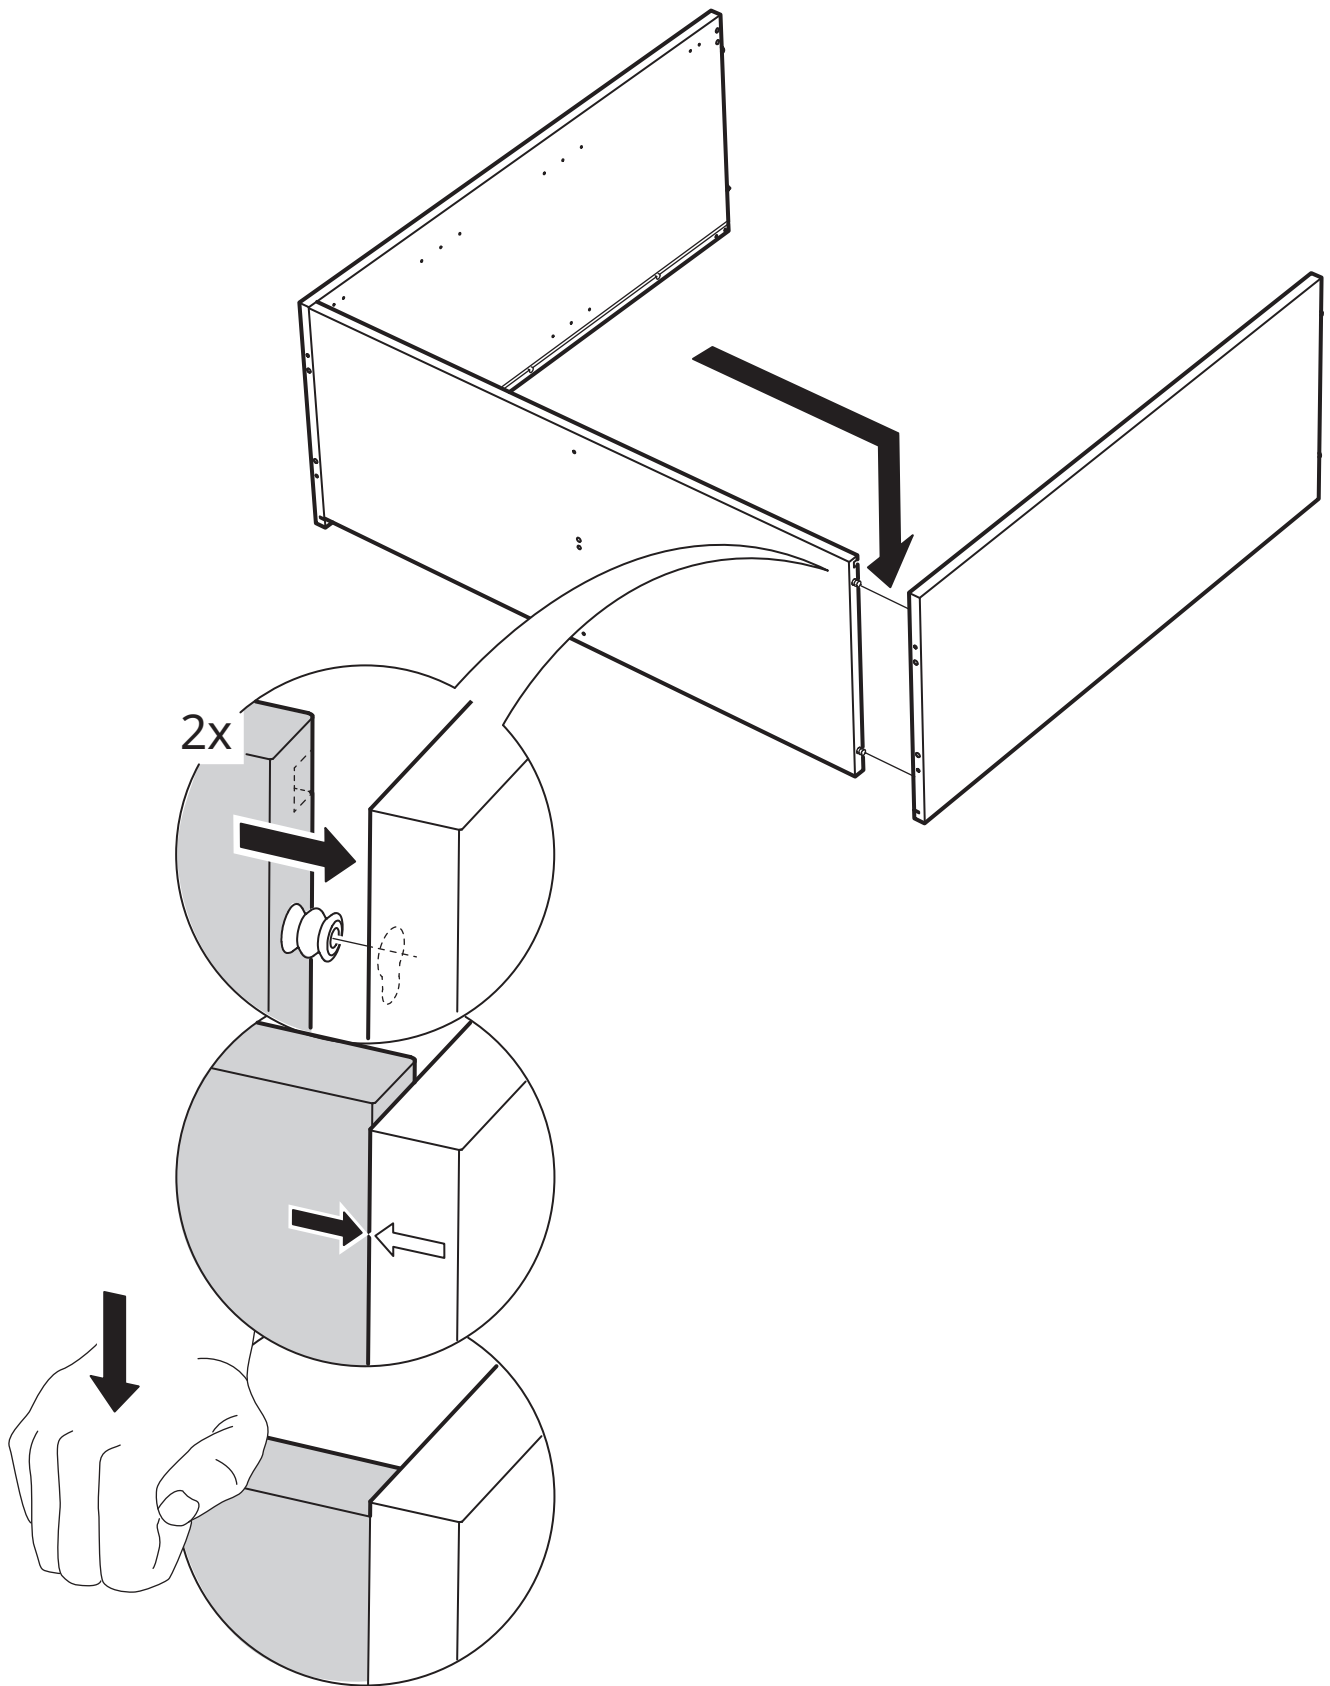 


3

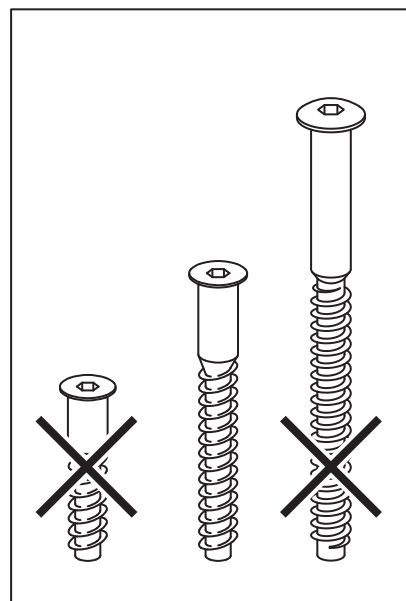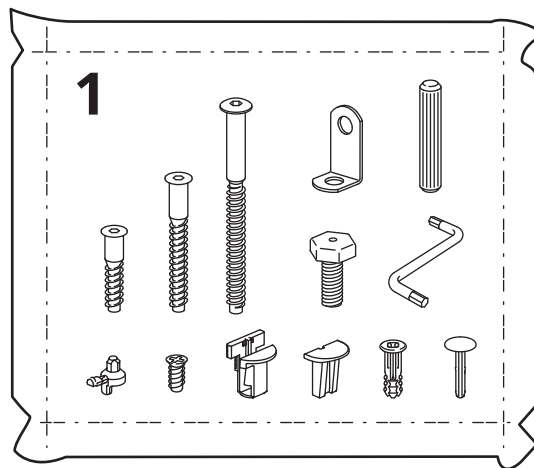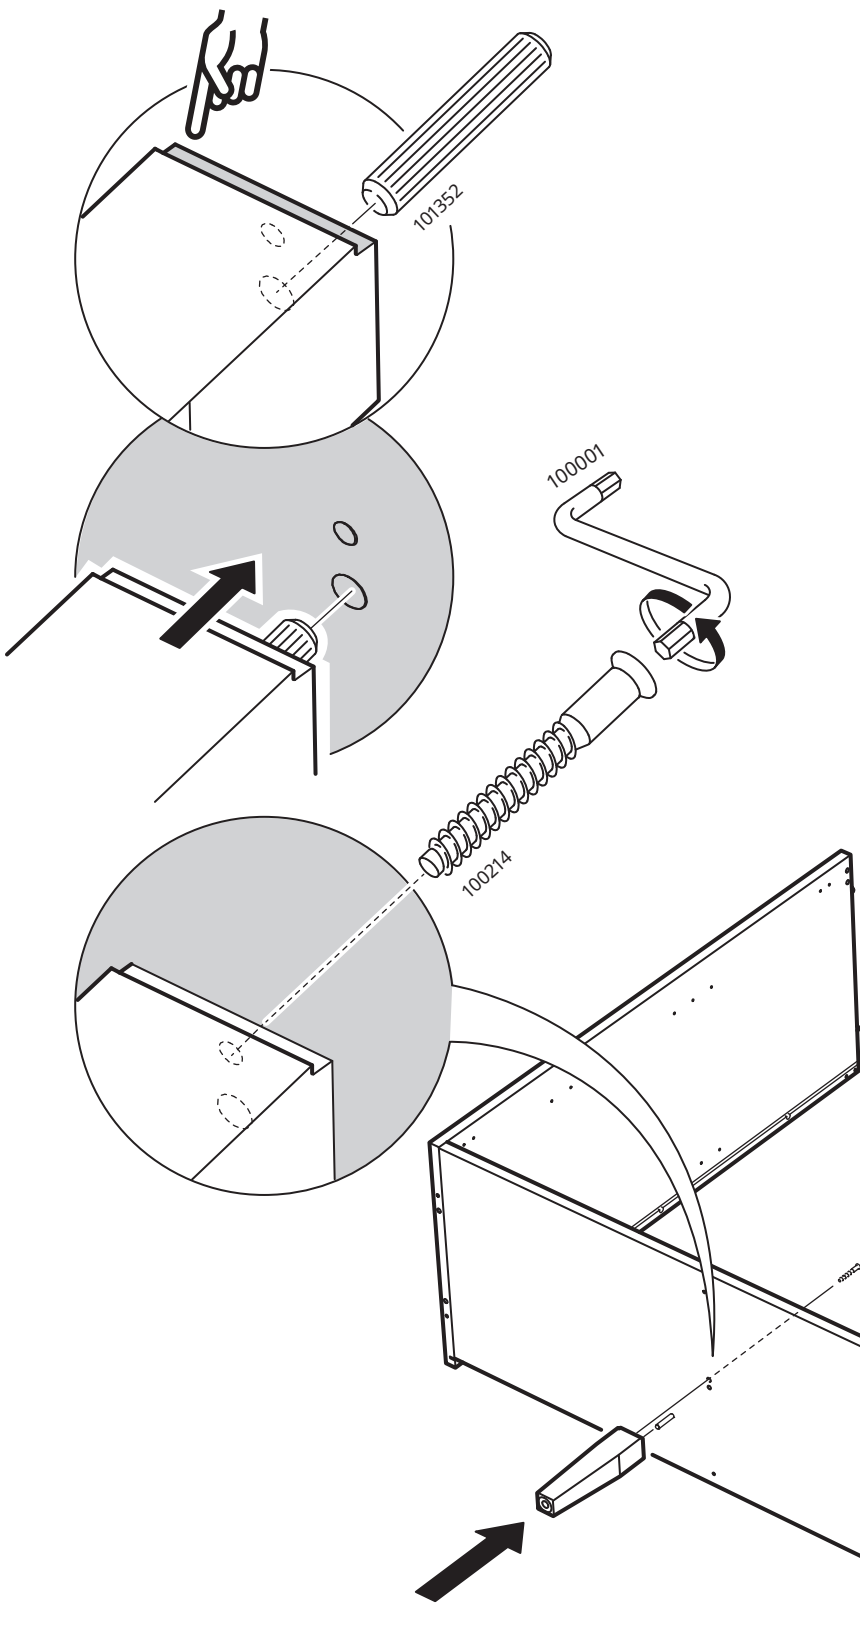   


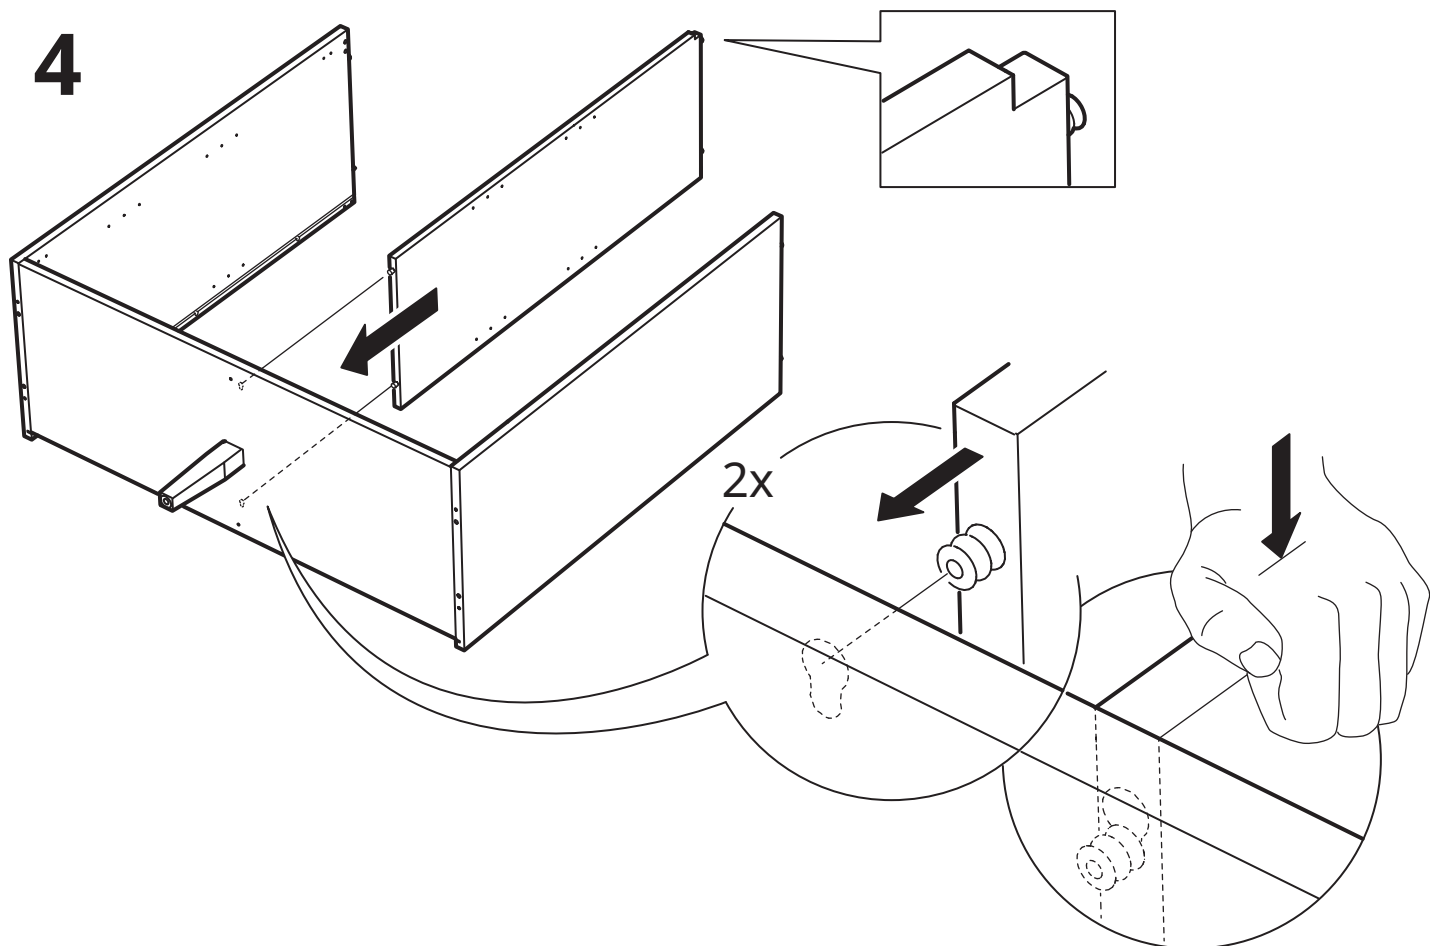 


5


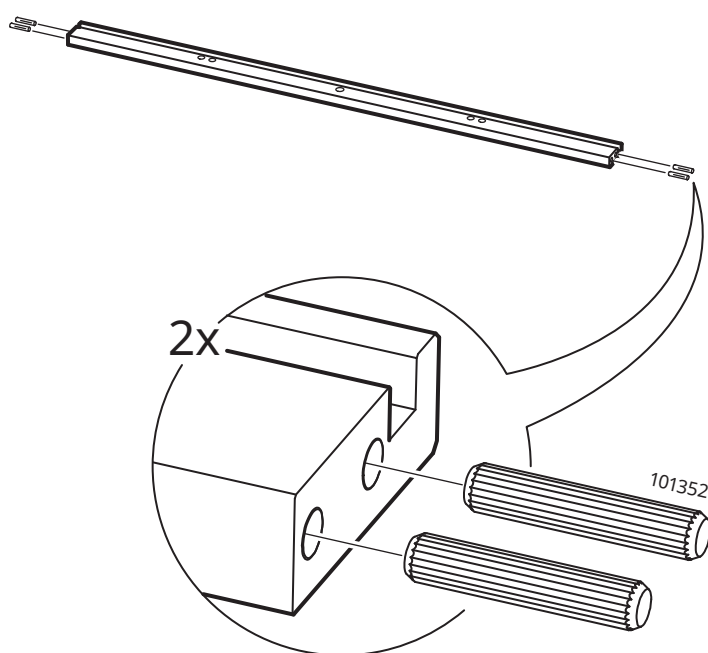 


6

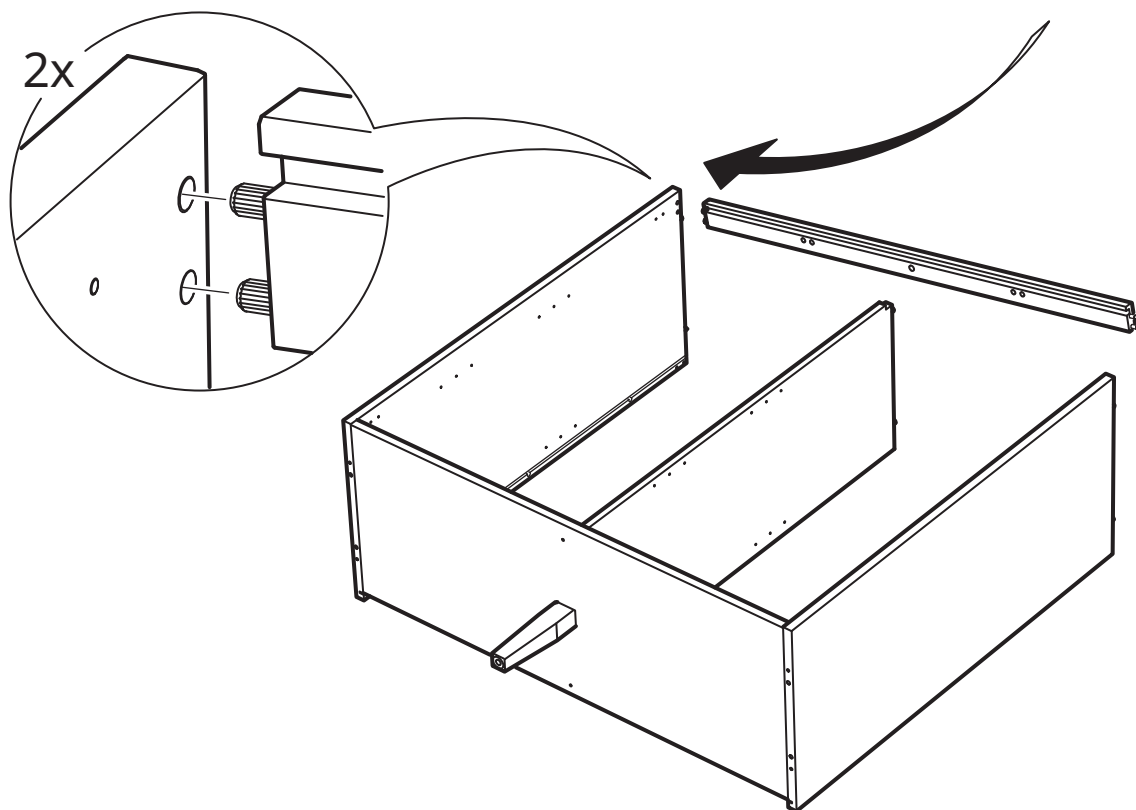 


7

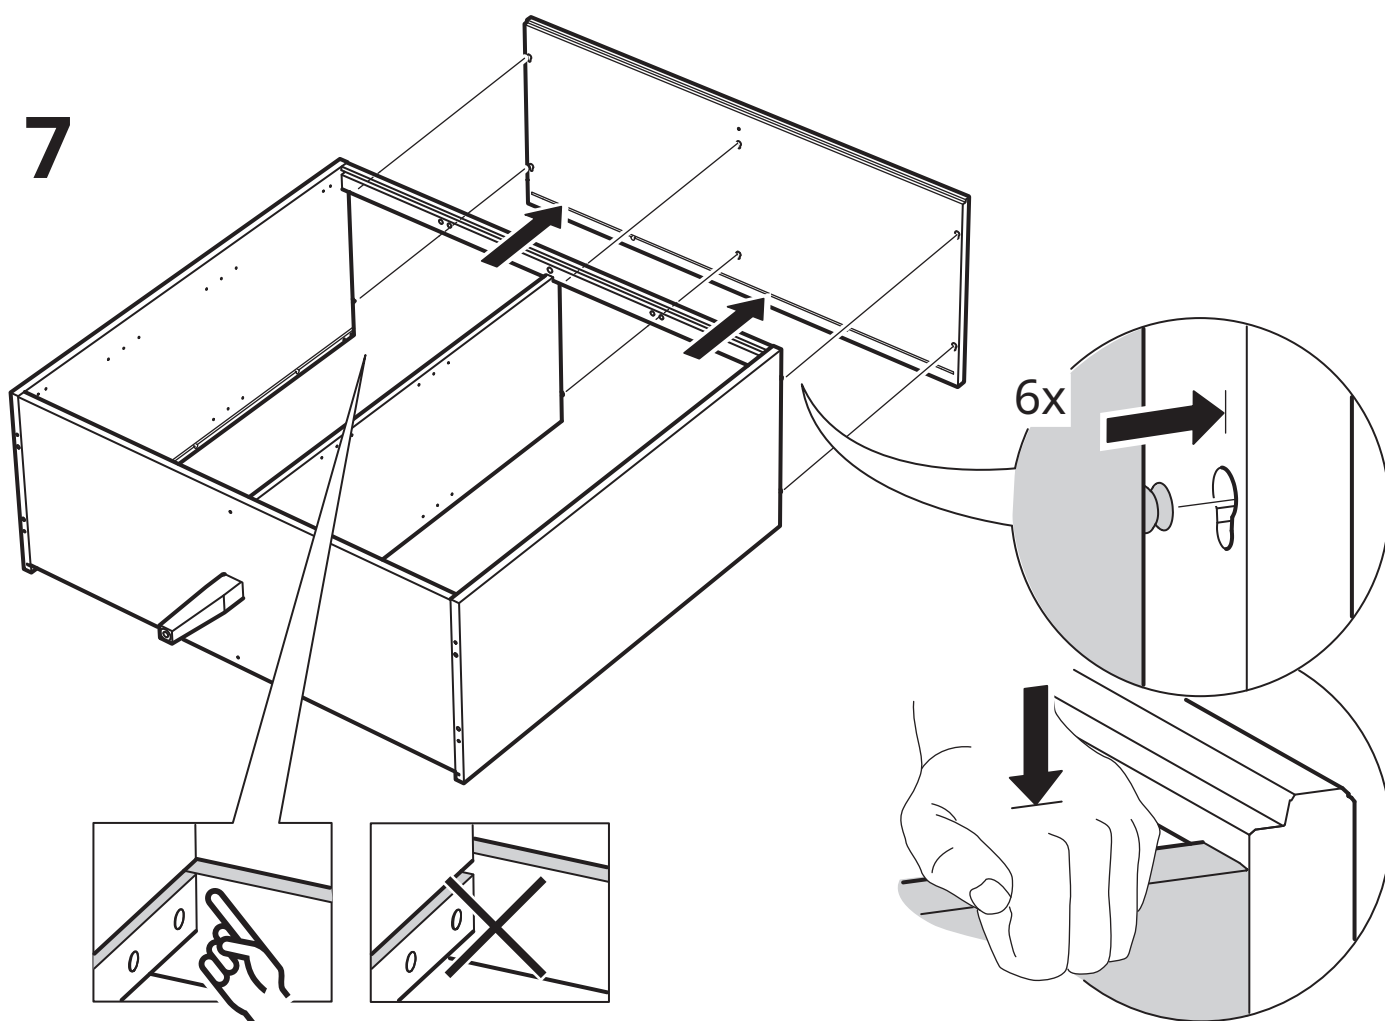 


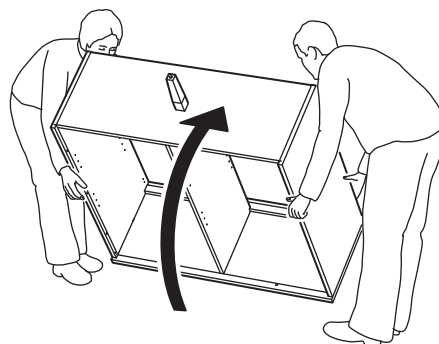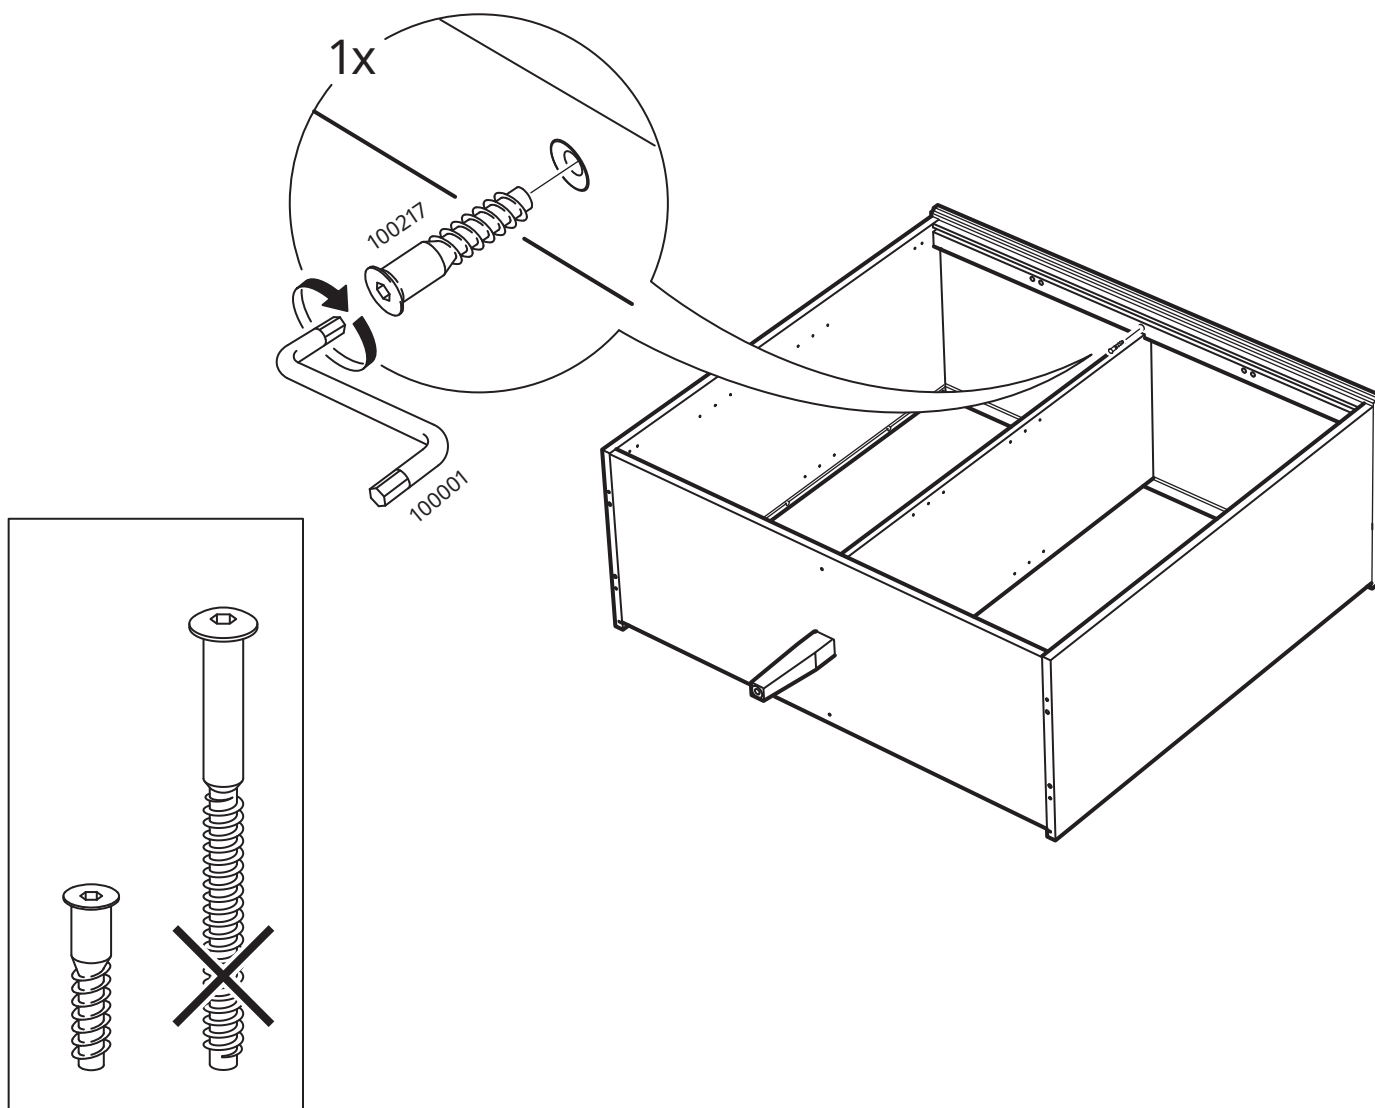  


9

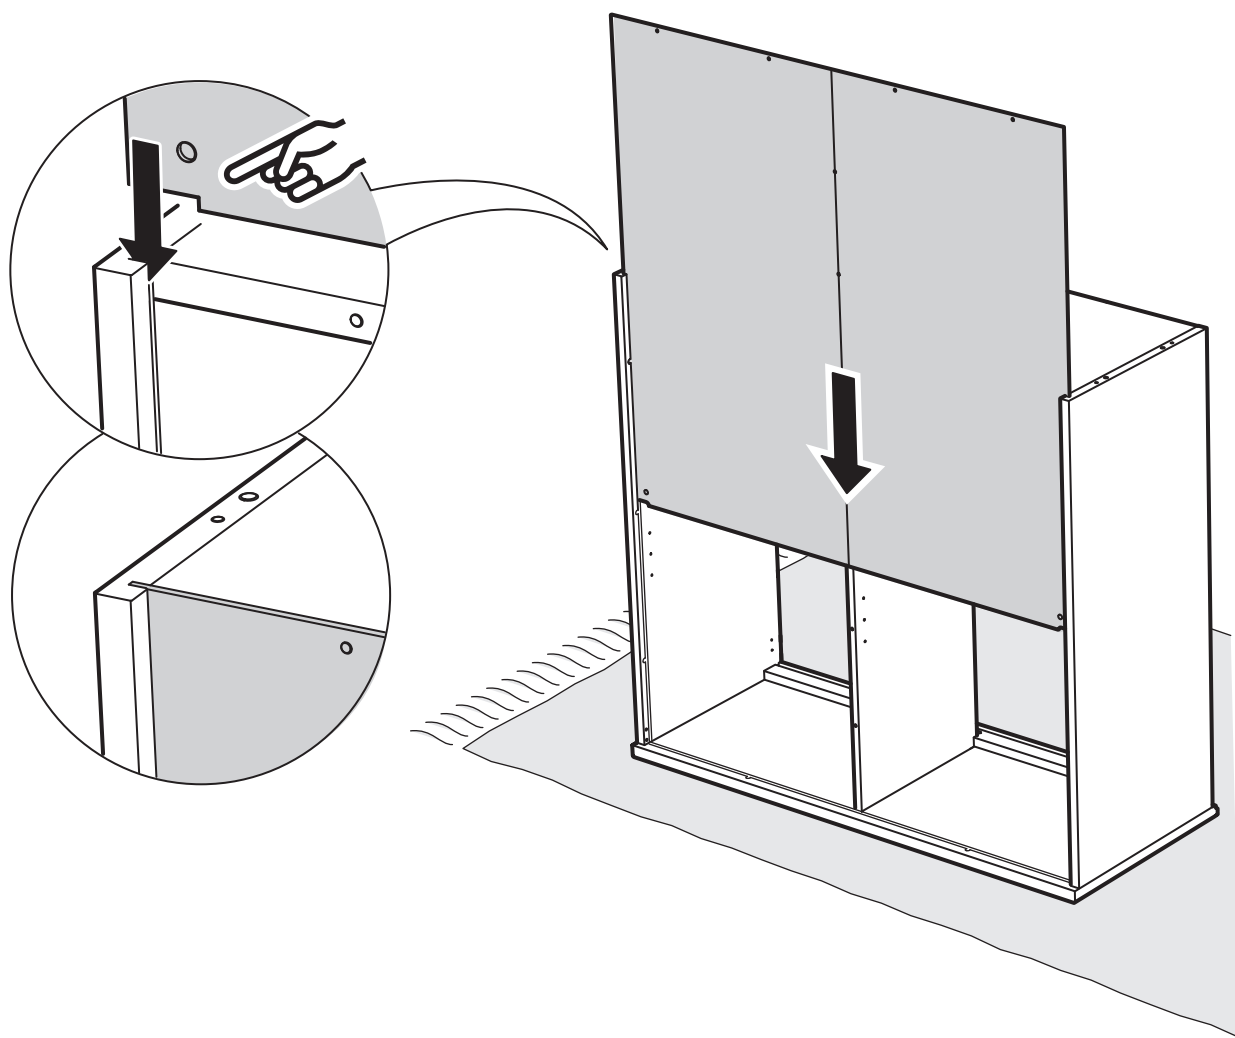 


10

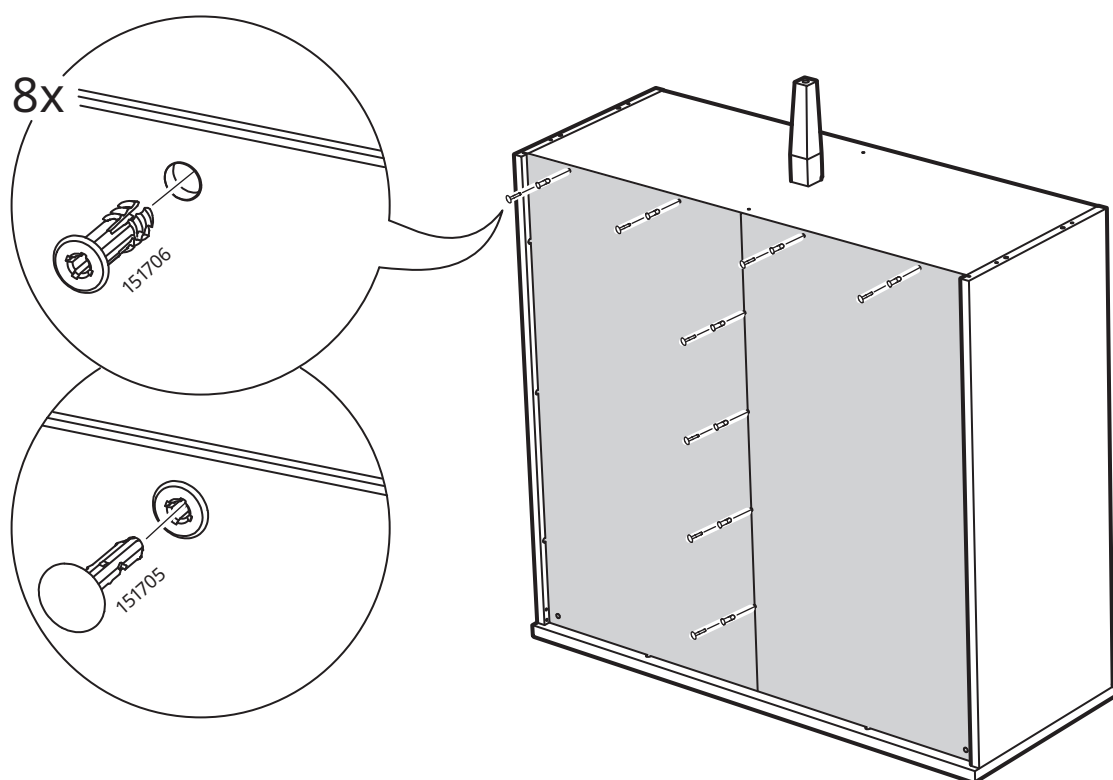 


11

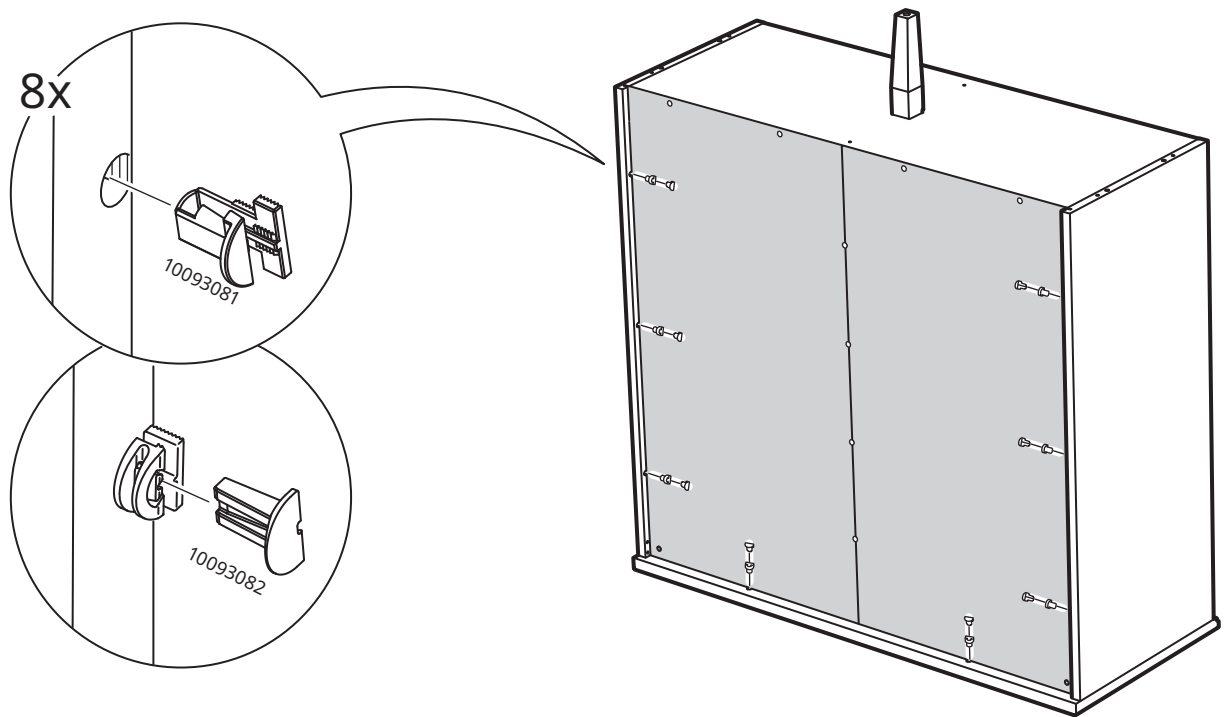 


12

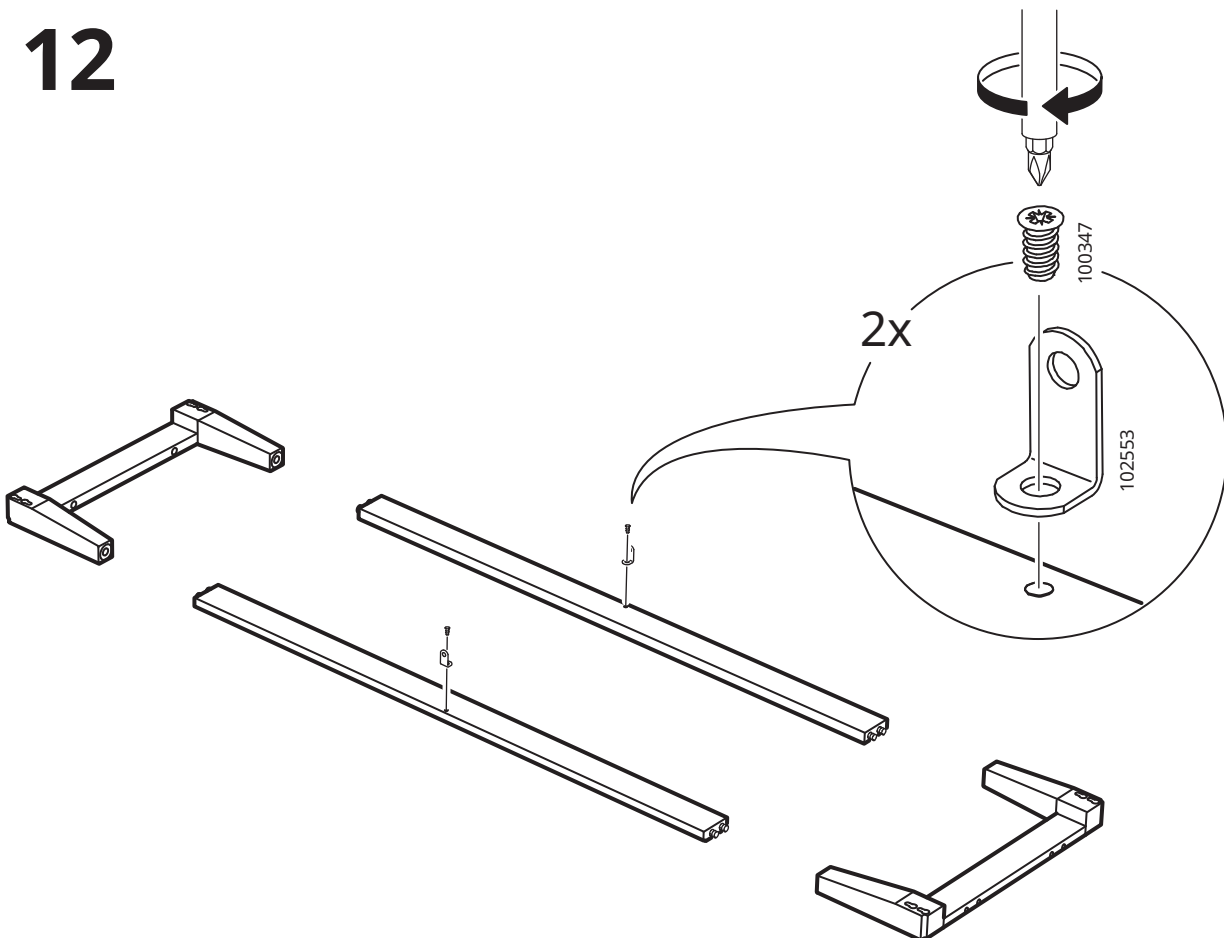 


13

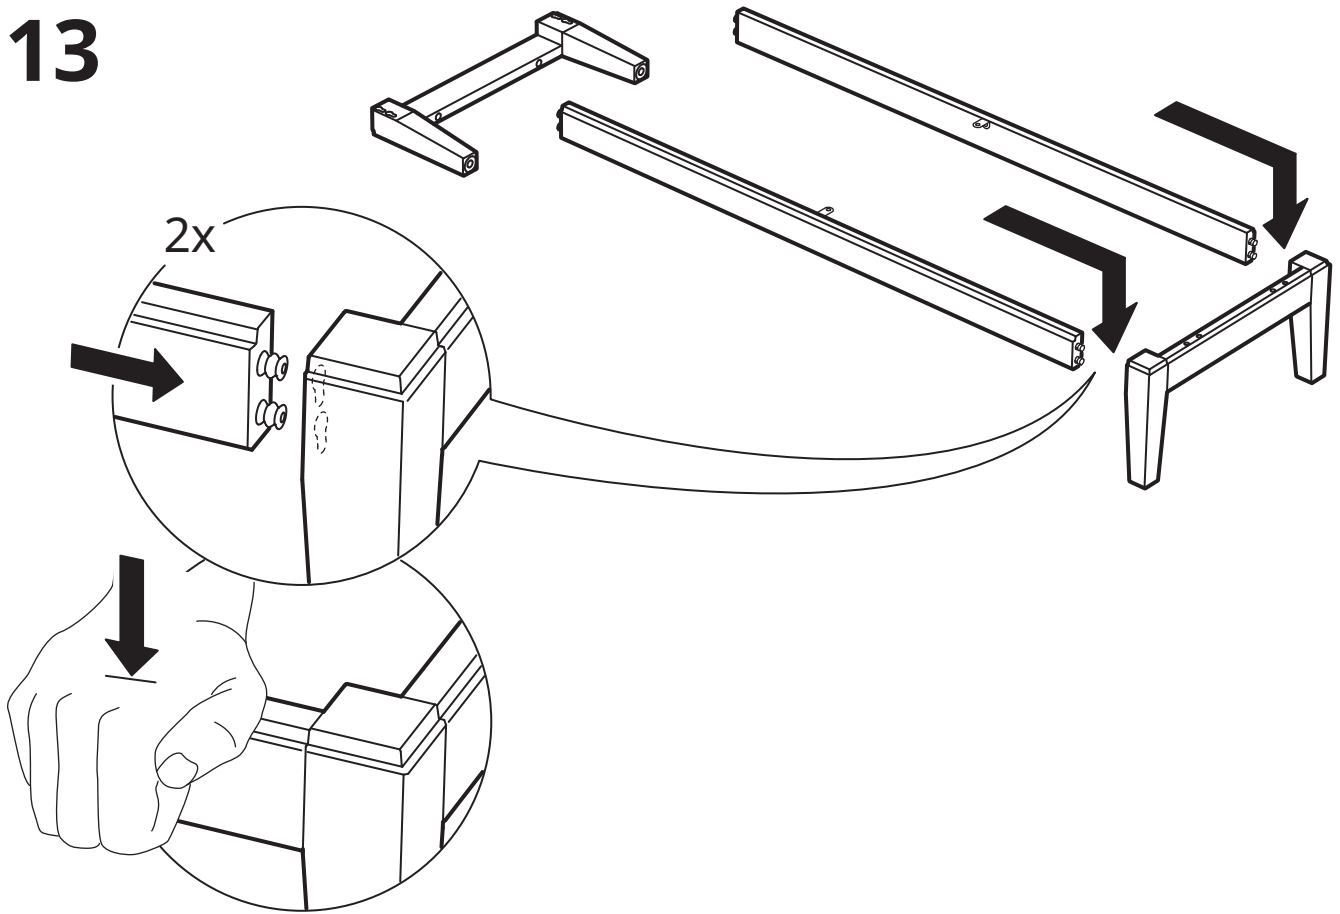 


14

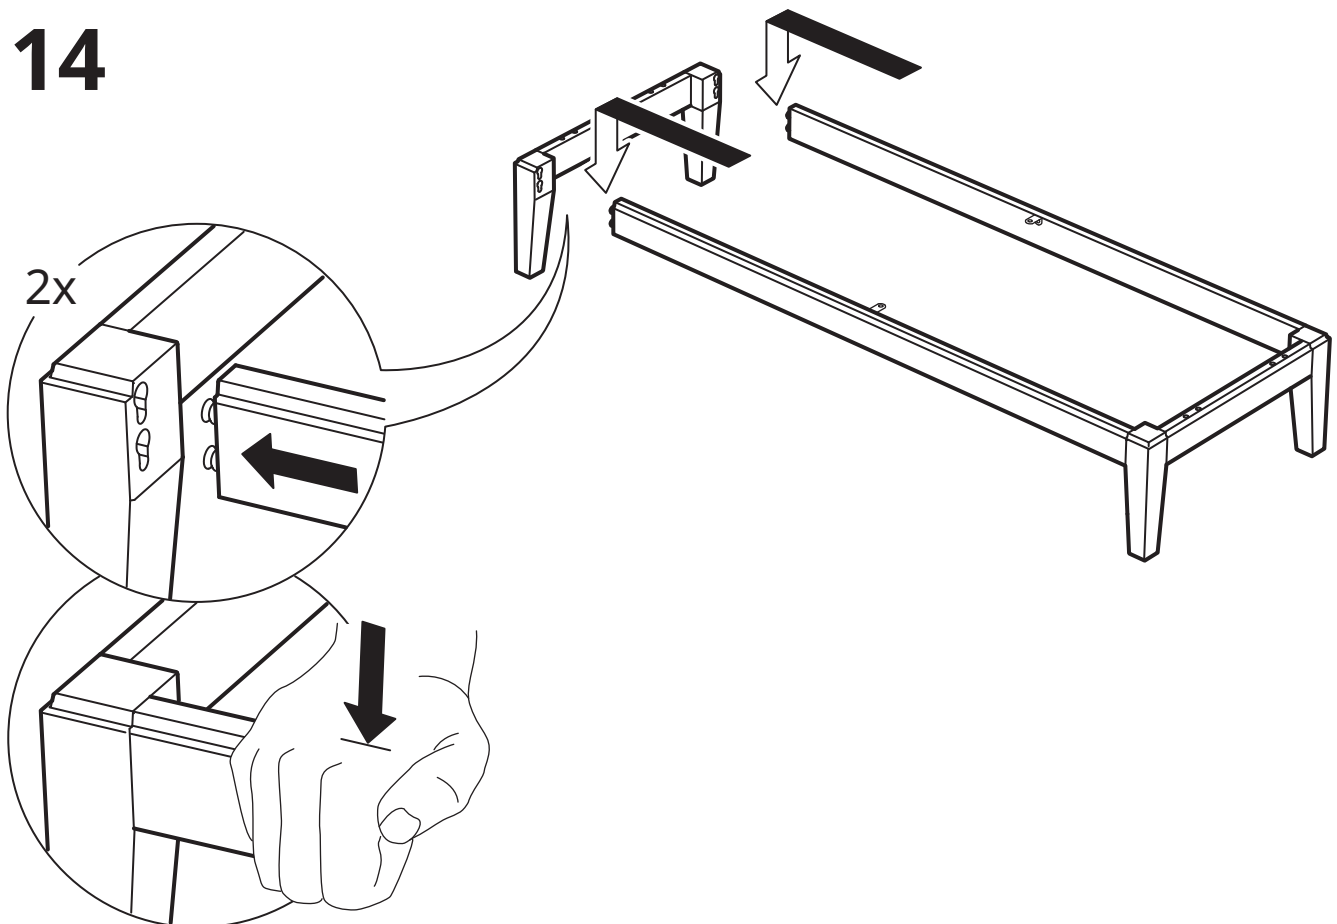 


15

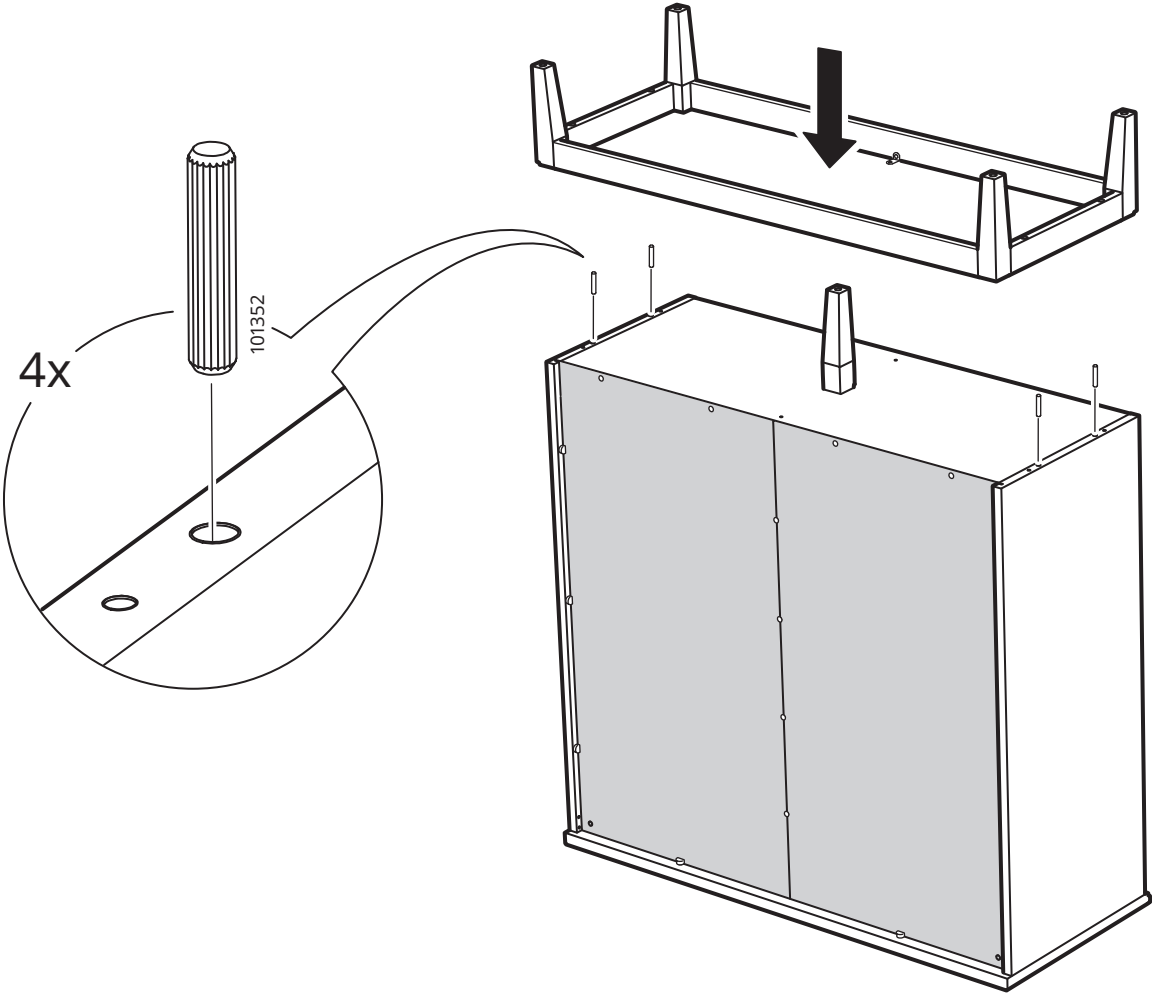 


16

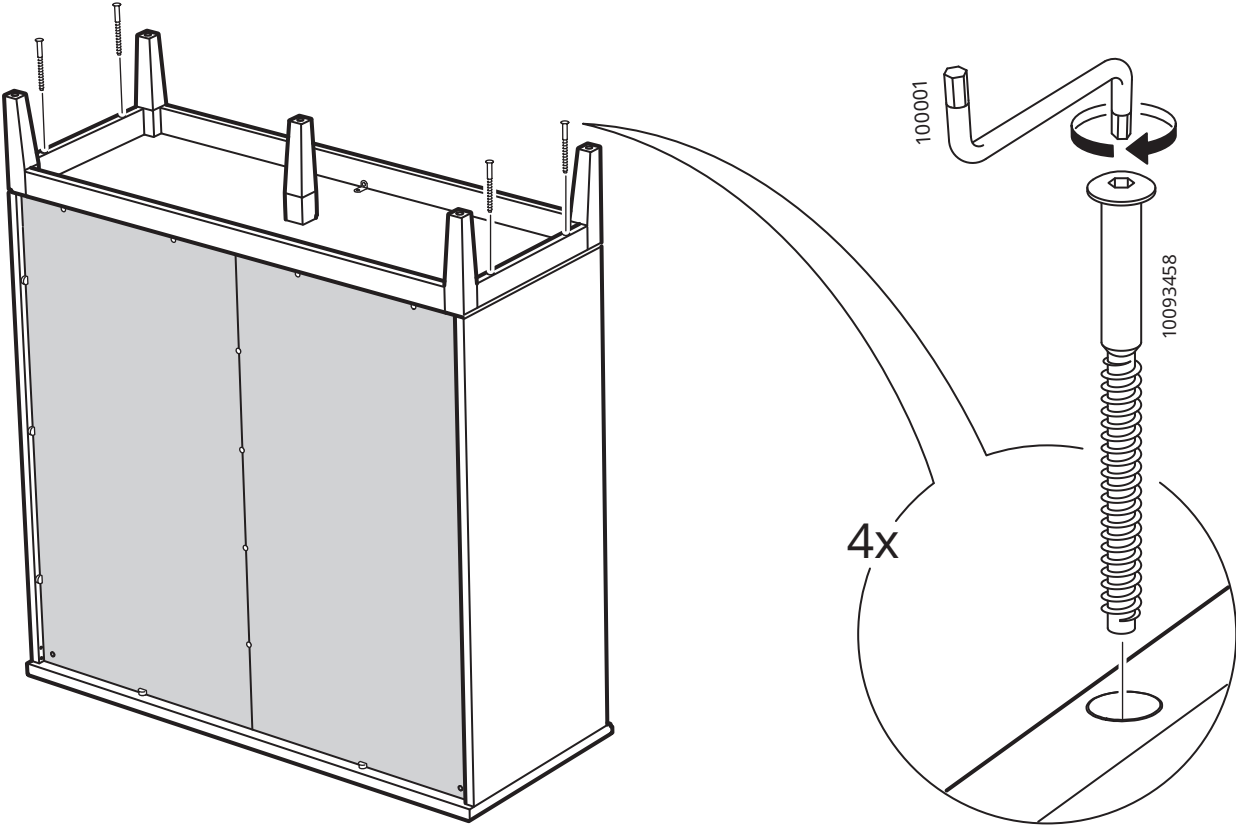 





17

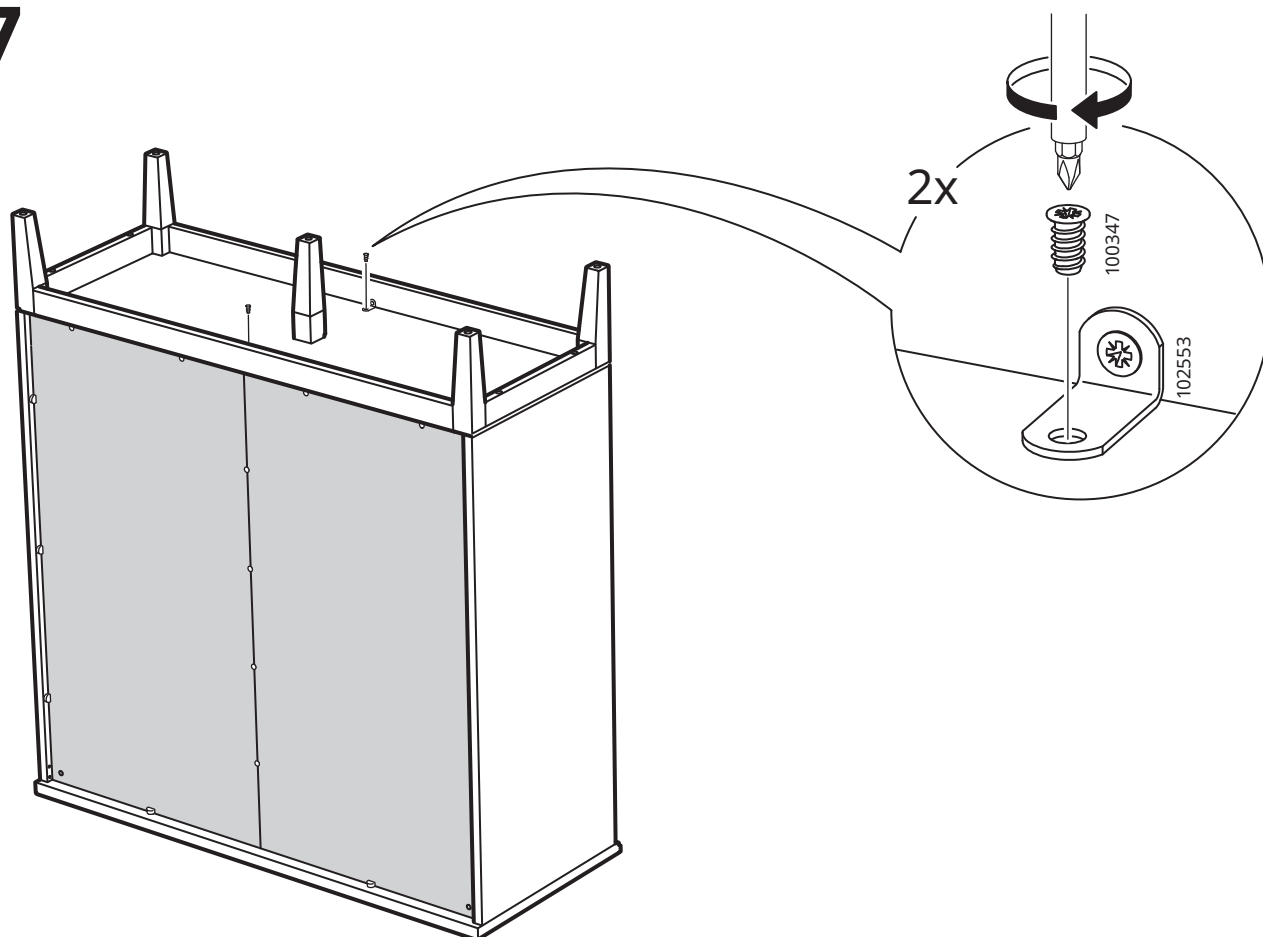 



18

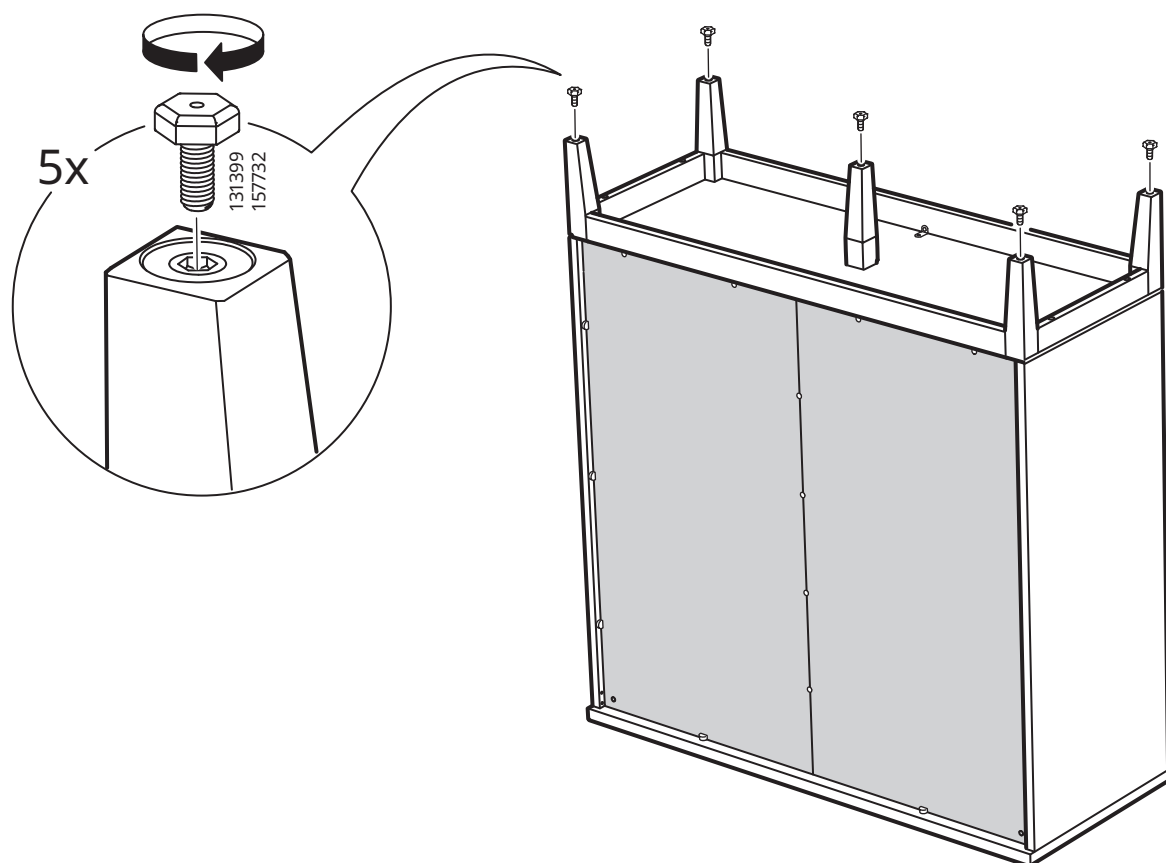 



19

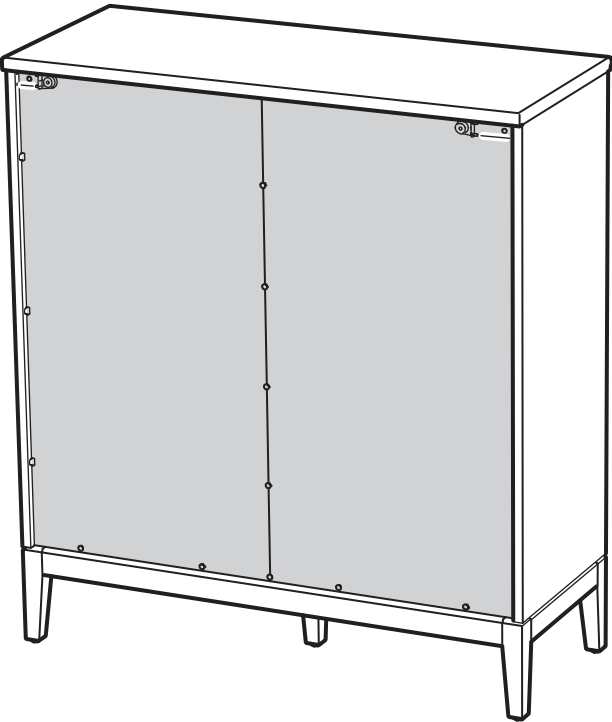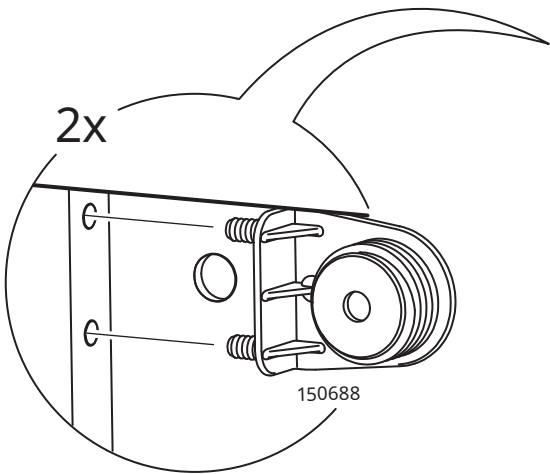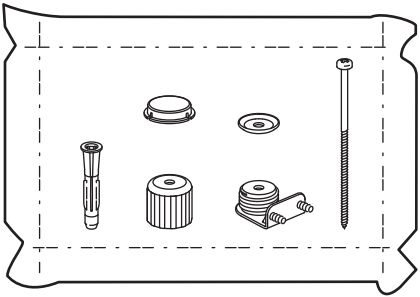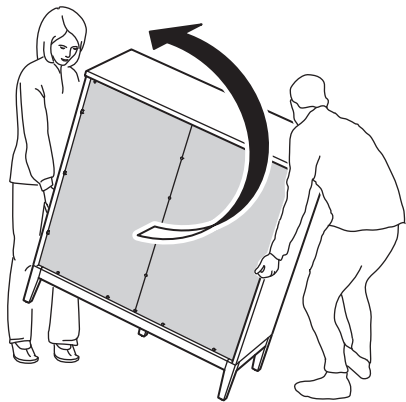    


20

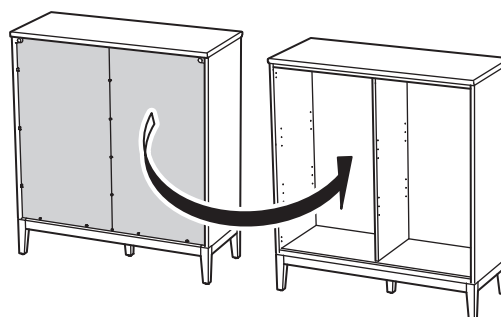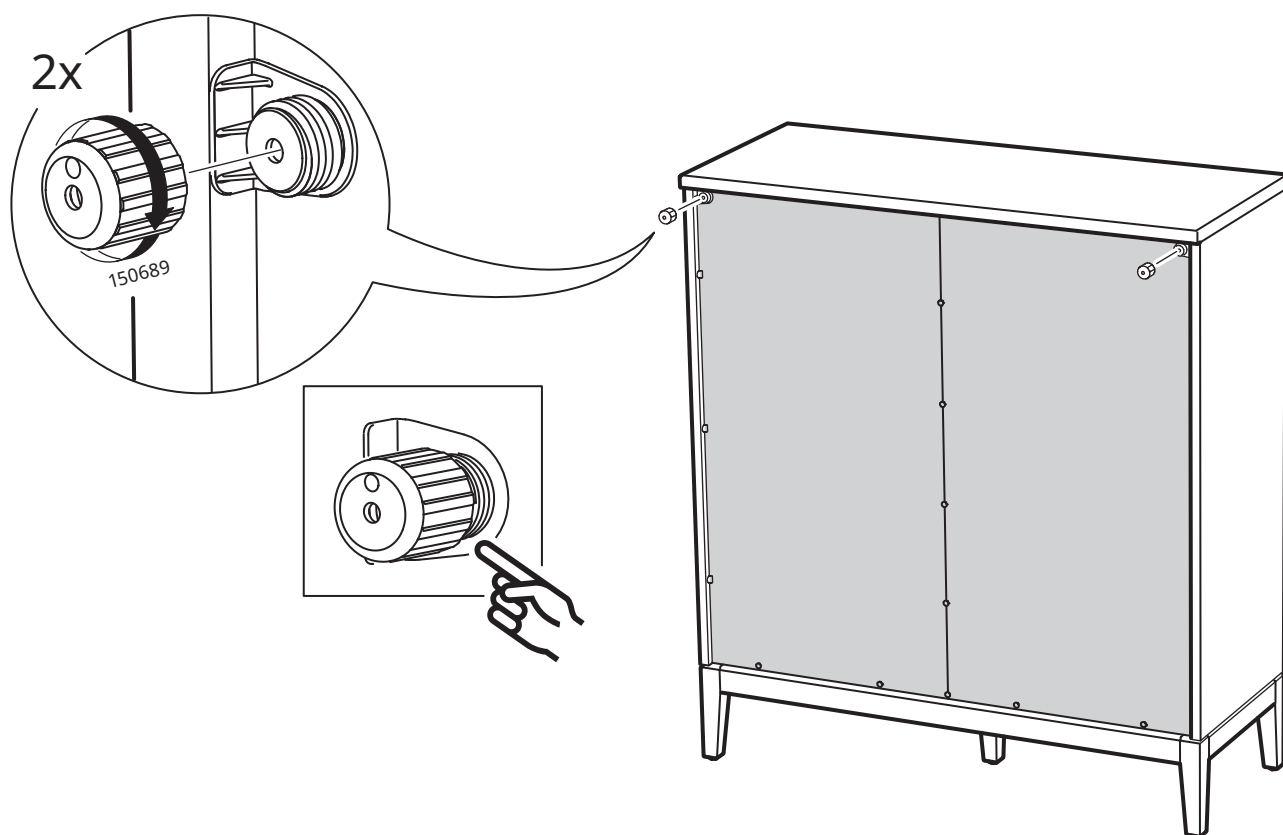  

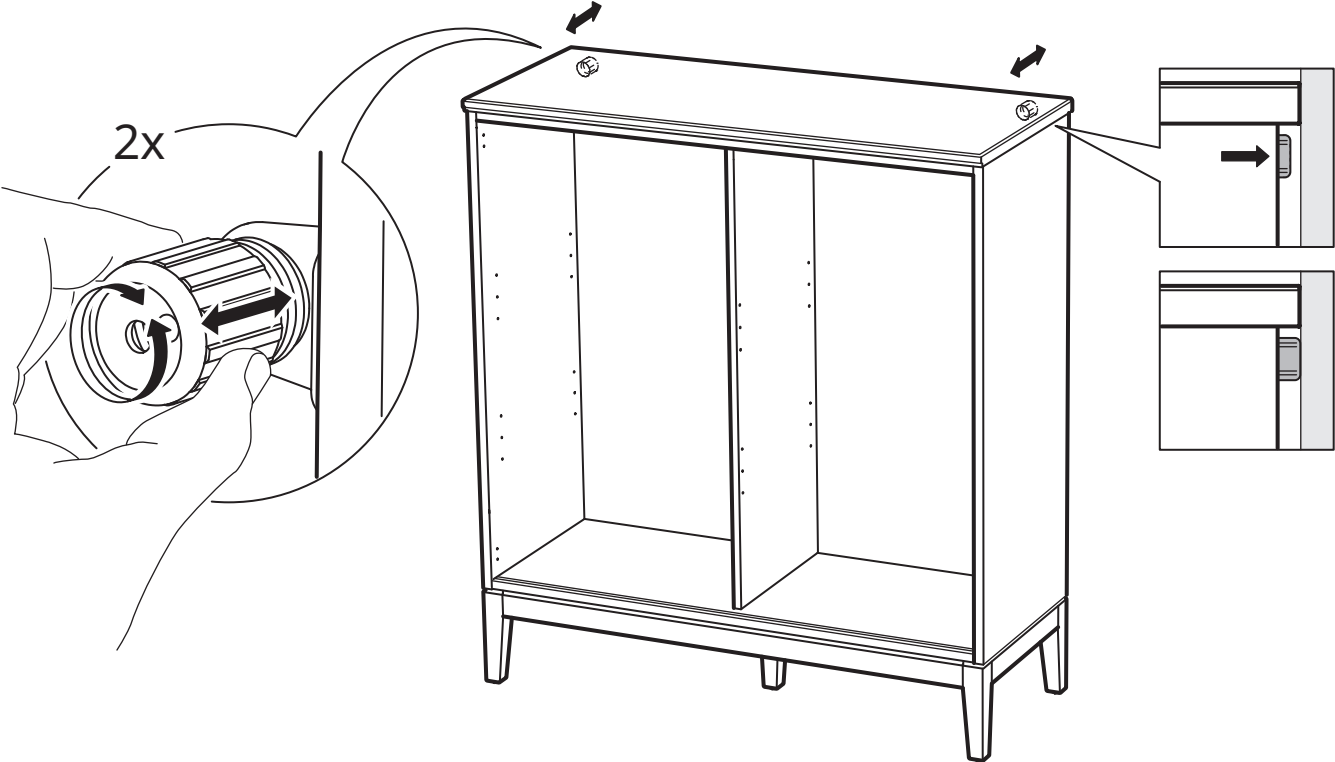 


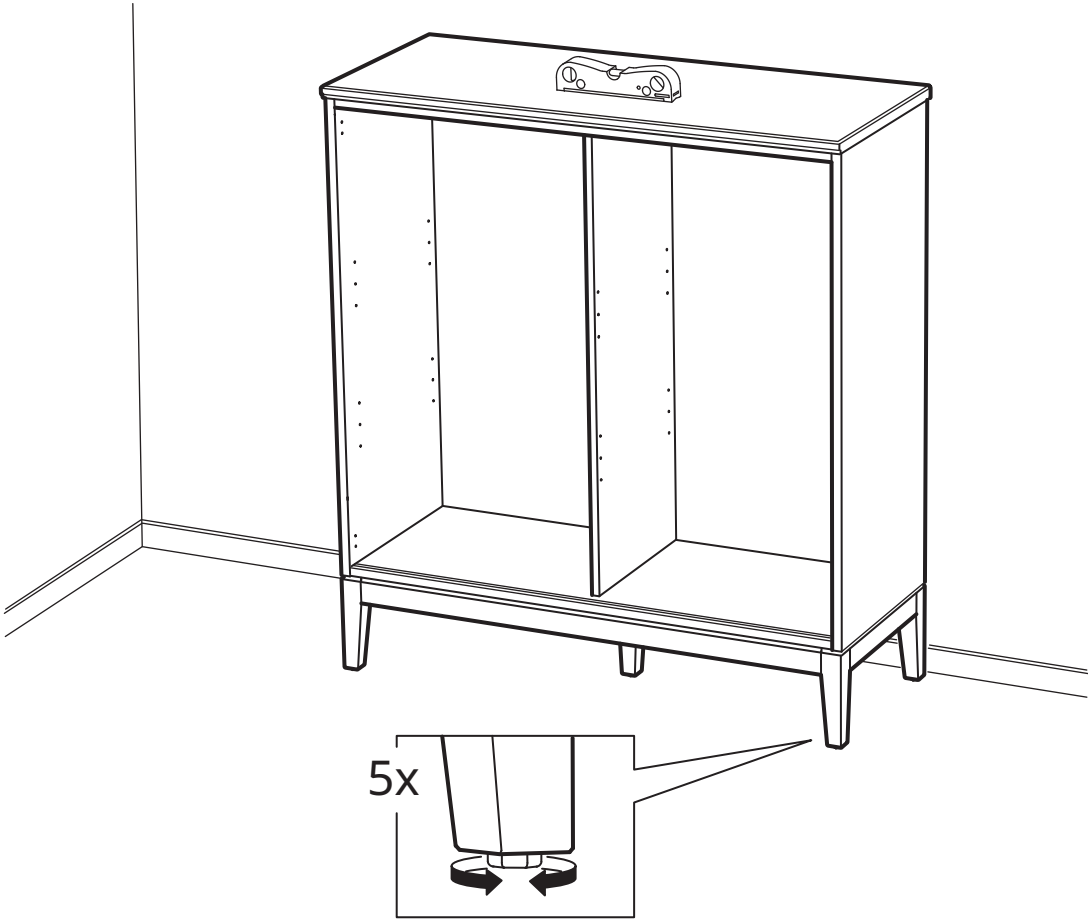 

23

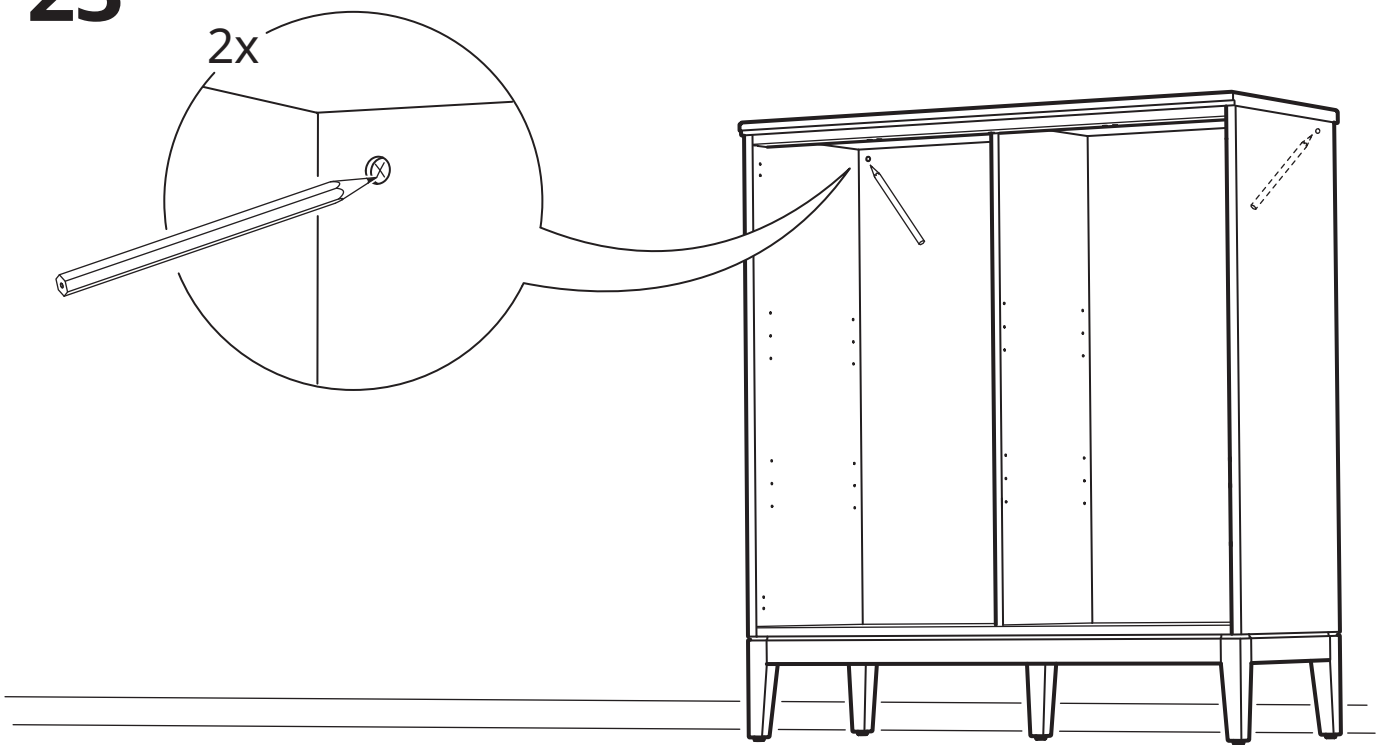 

24

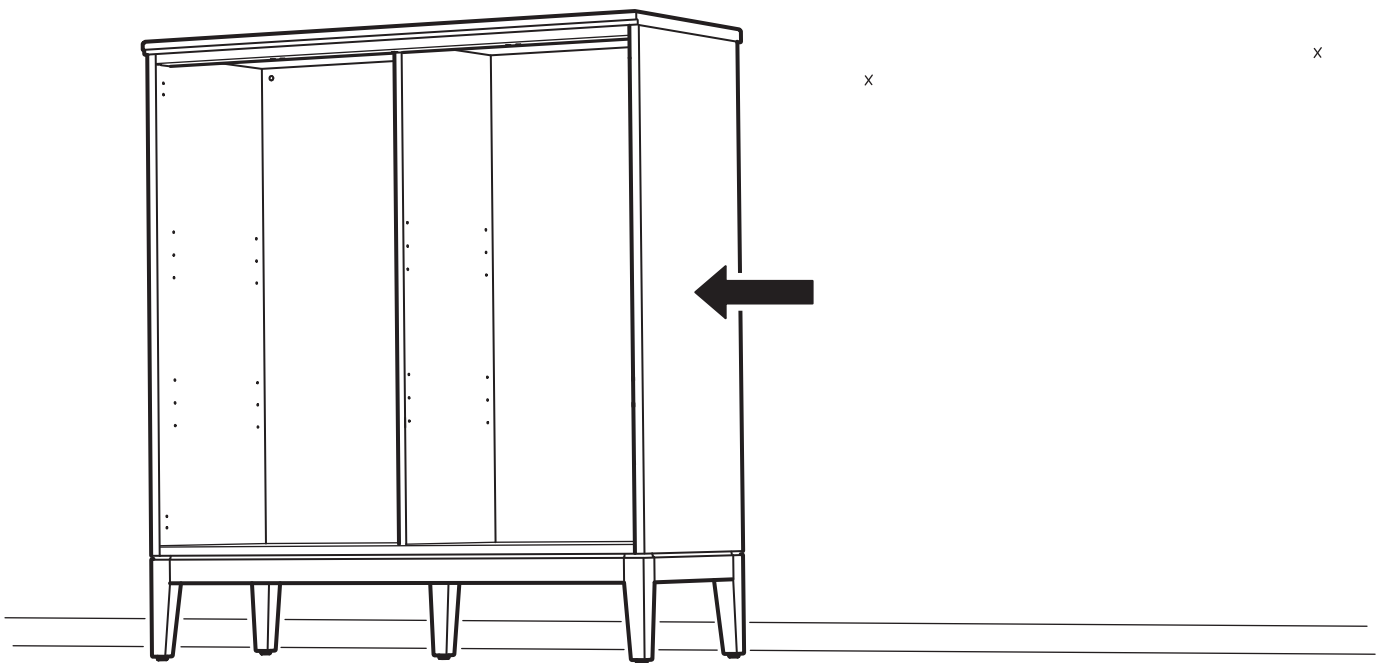 




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

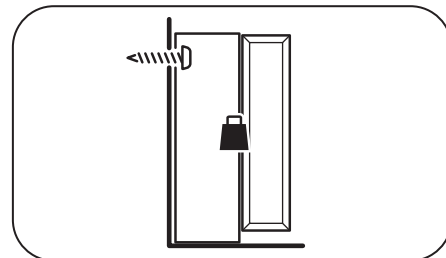


English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

עברית

הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.

 
A

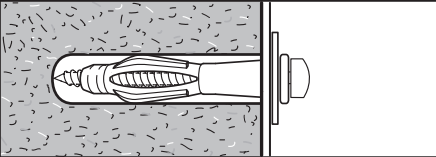


Ø 8 mm
(5/16")



 1




2

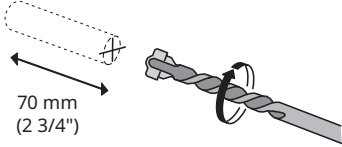 


70 mm
(2 3/4")

 3

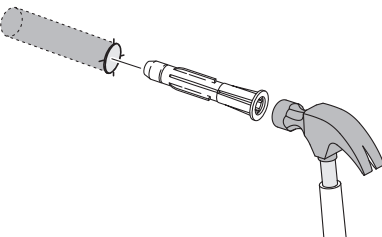


B

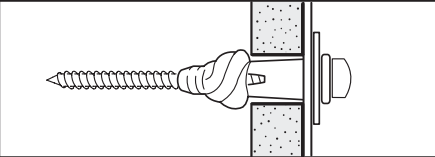 


Ø 8 mm
(5/16")



 1




2

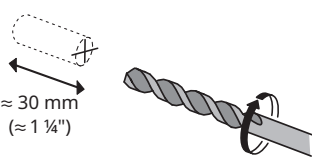 


≈ 30 mm
(≈ 1 1/4")

 3

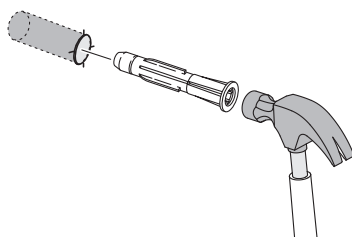


C

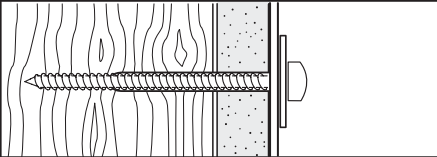 


Ø 3 mm
(1/8")



 1



2

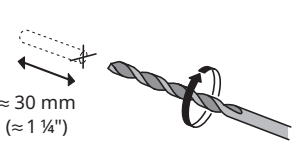 


≈ 30 mm
(≈ 1 1/4")


3



 
25

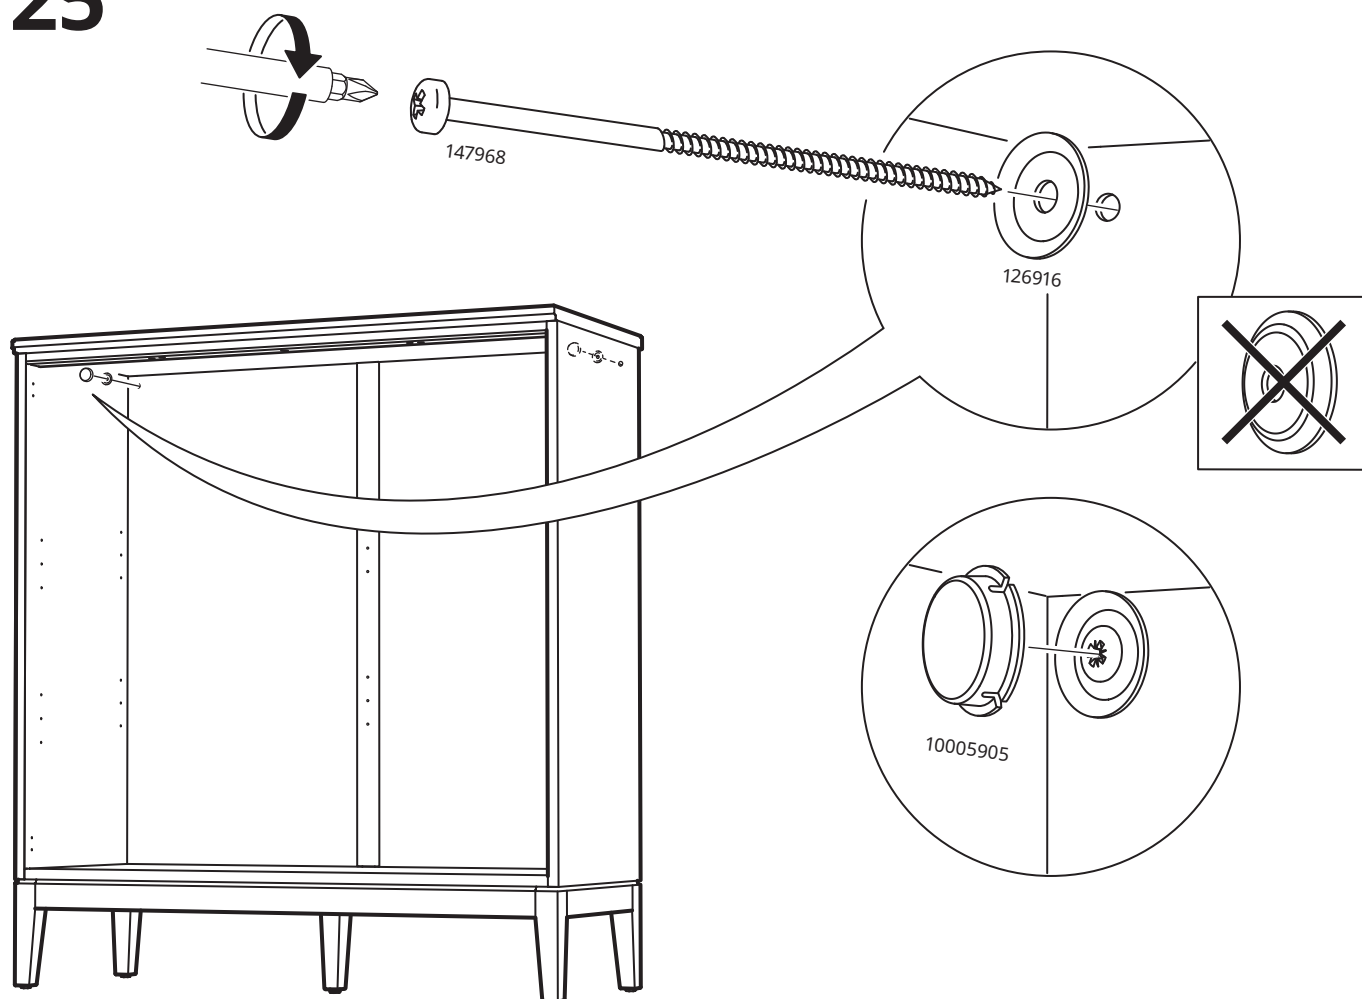


26

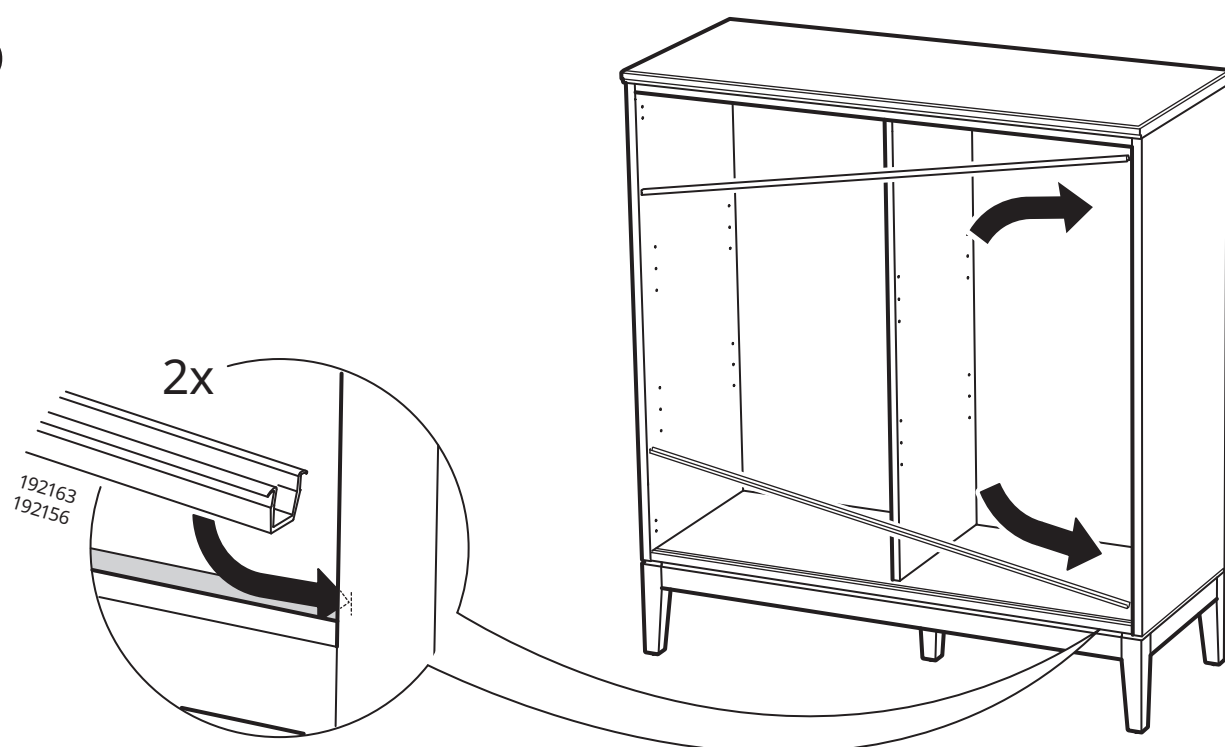 


27


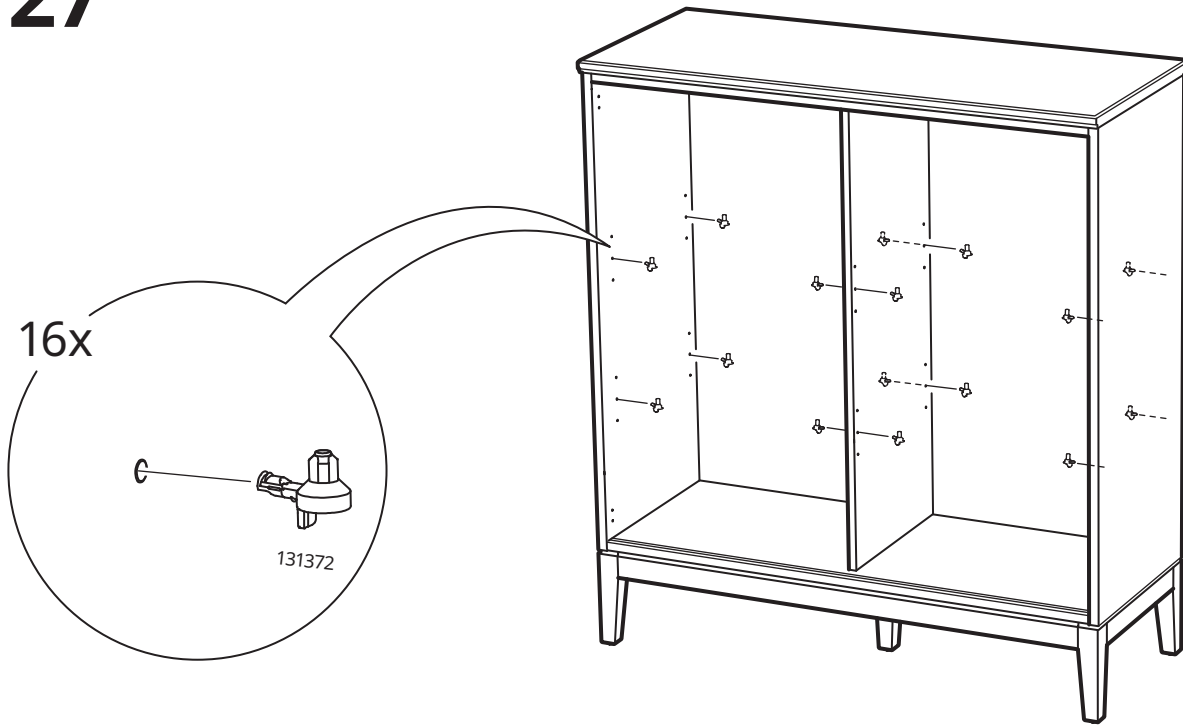 


28

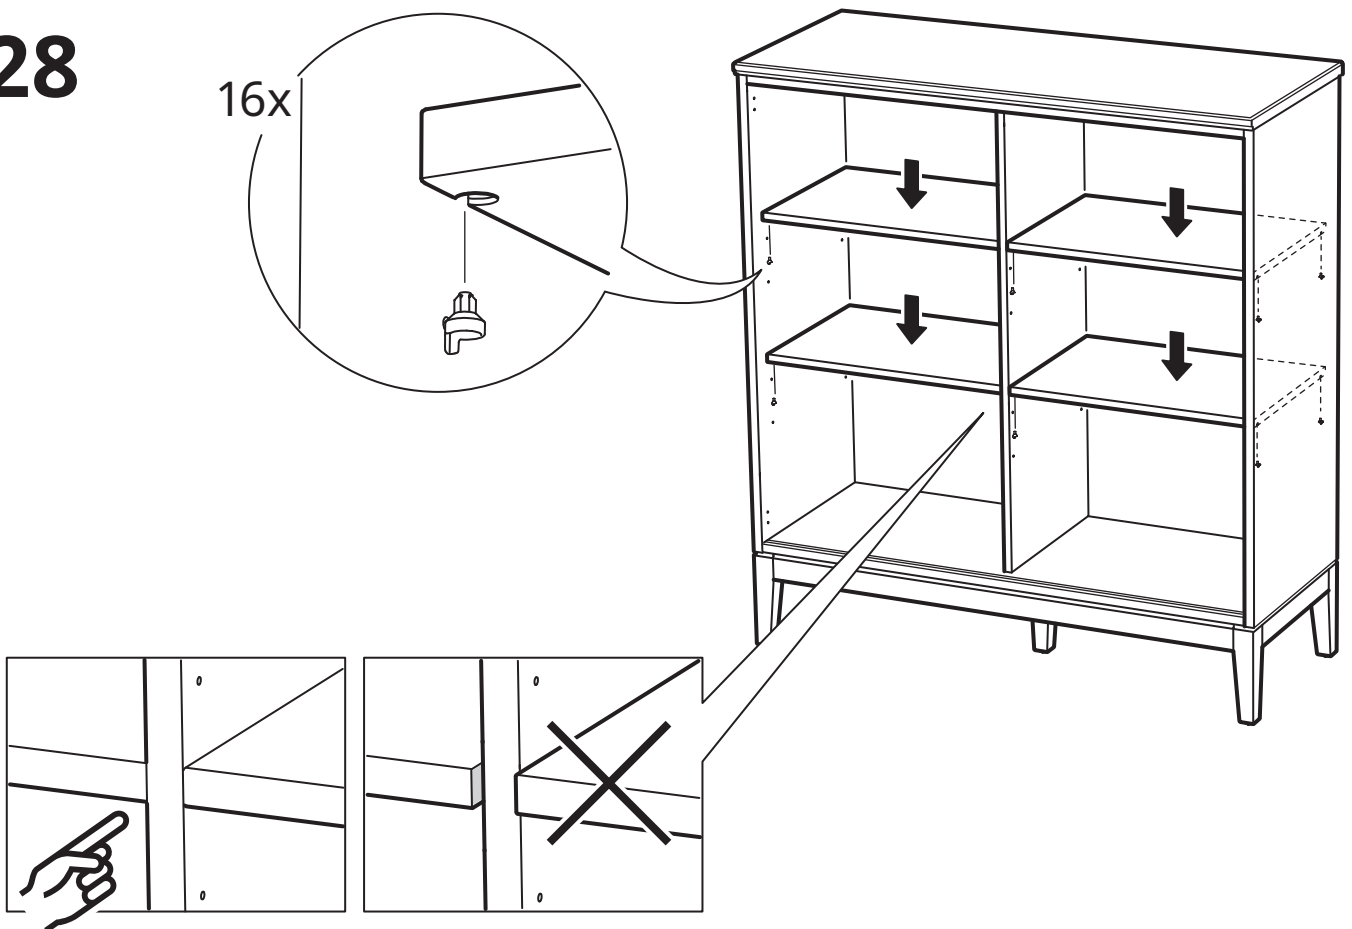 


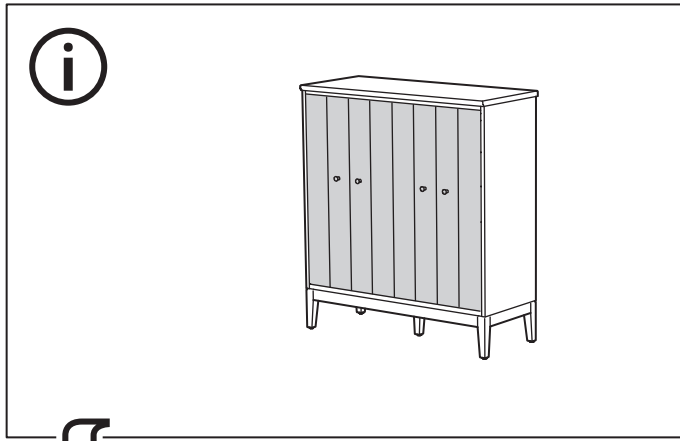 


29

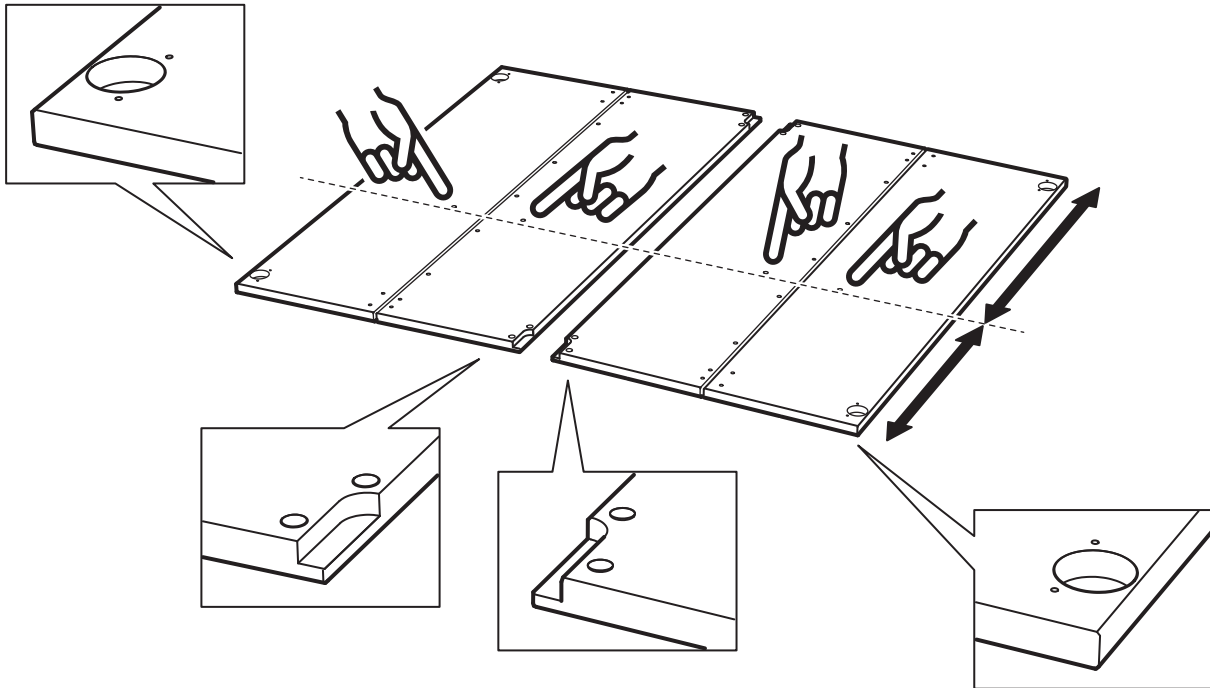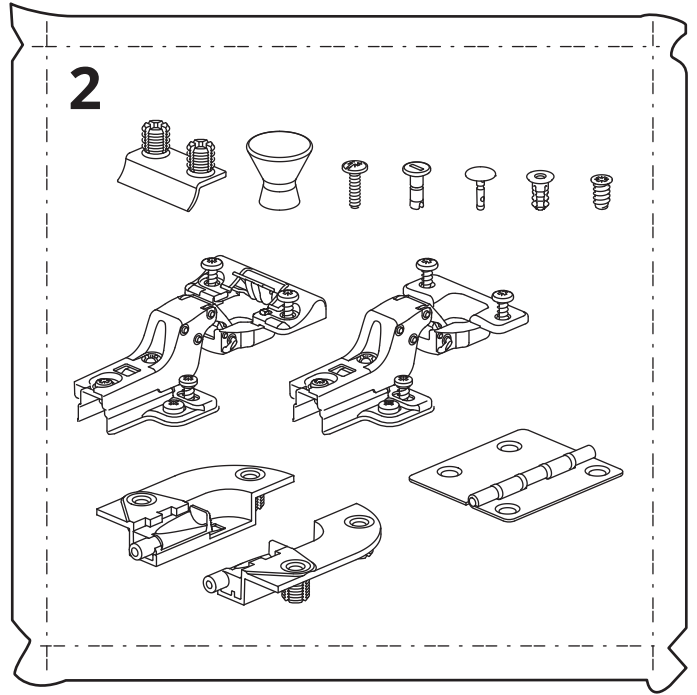  


30

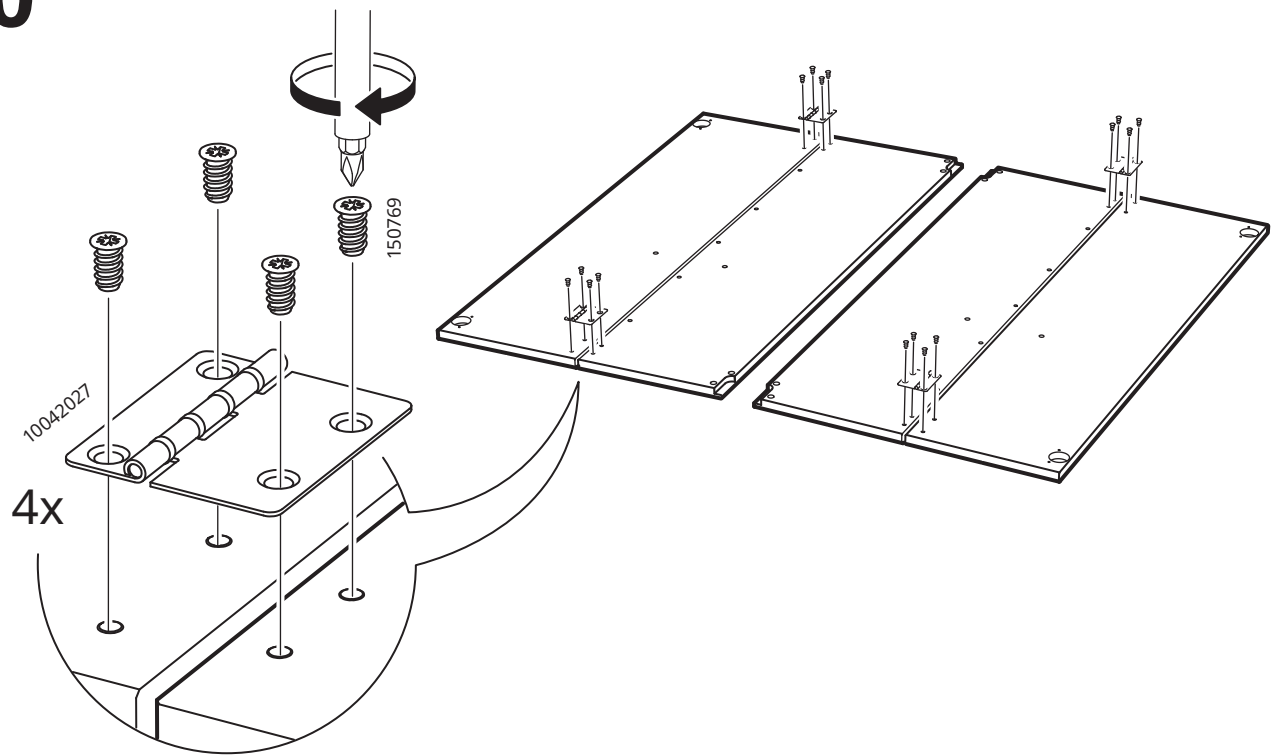 


31

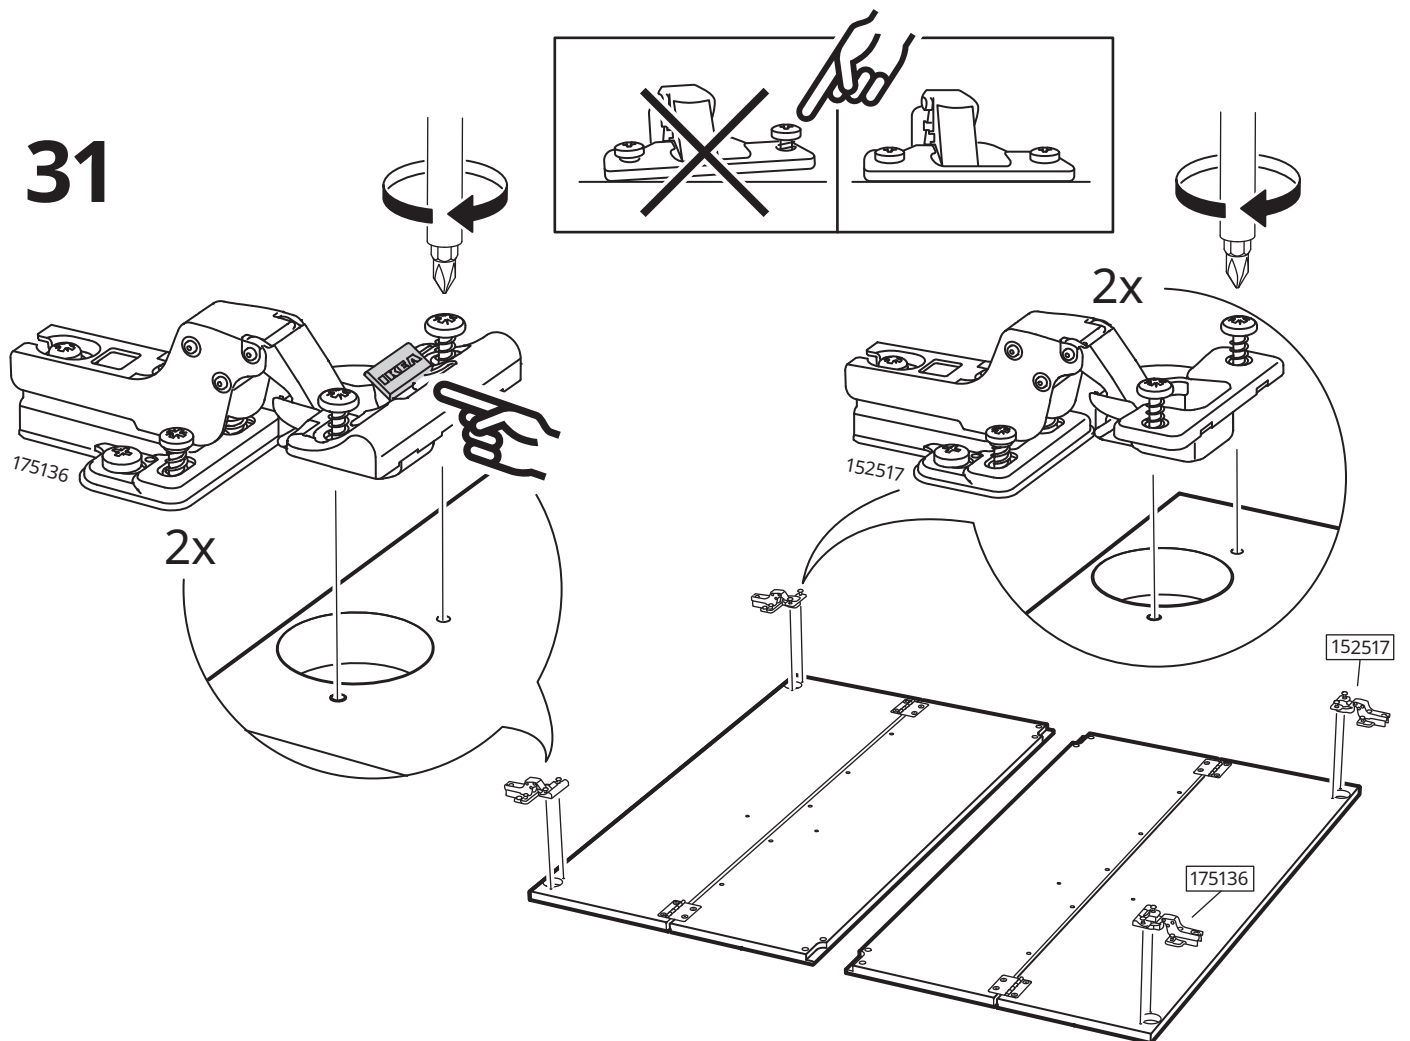 


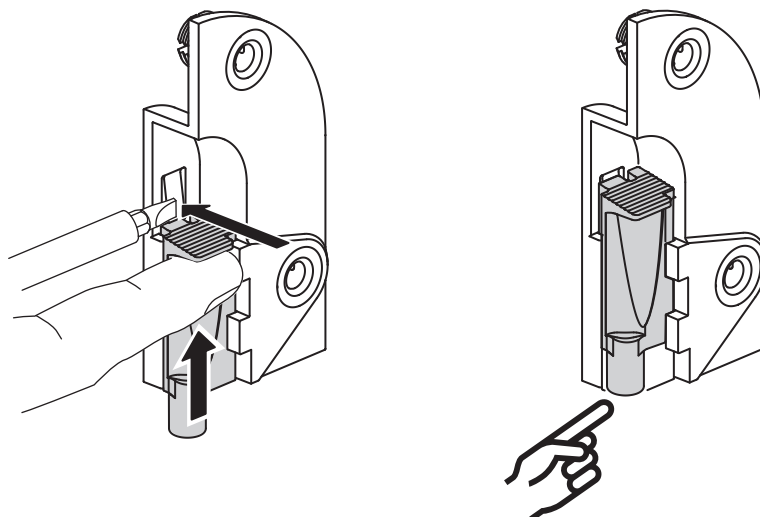 


32

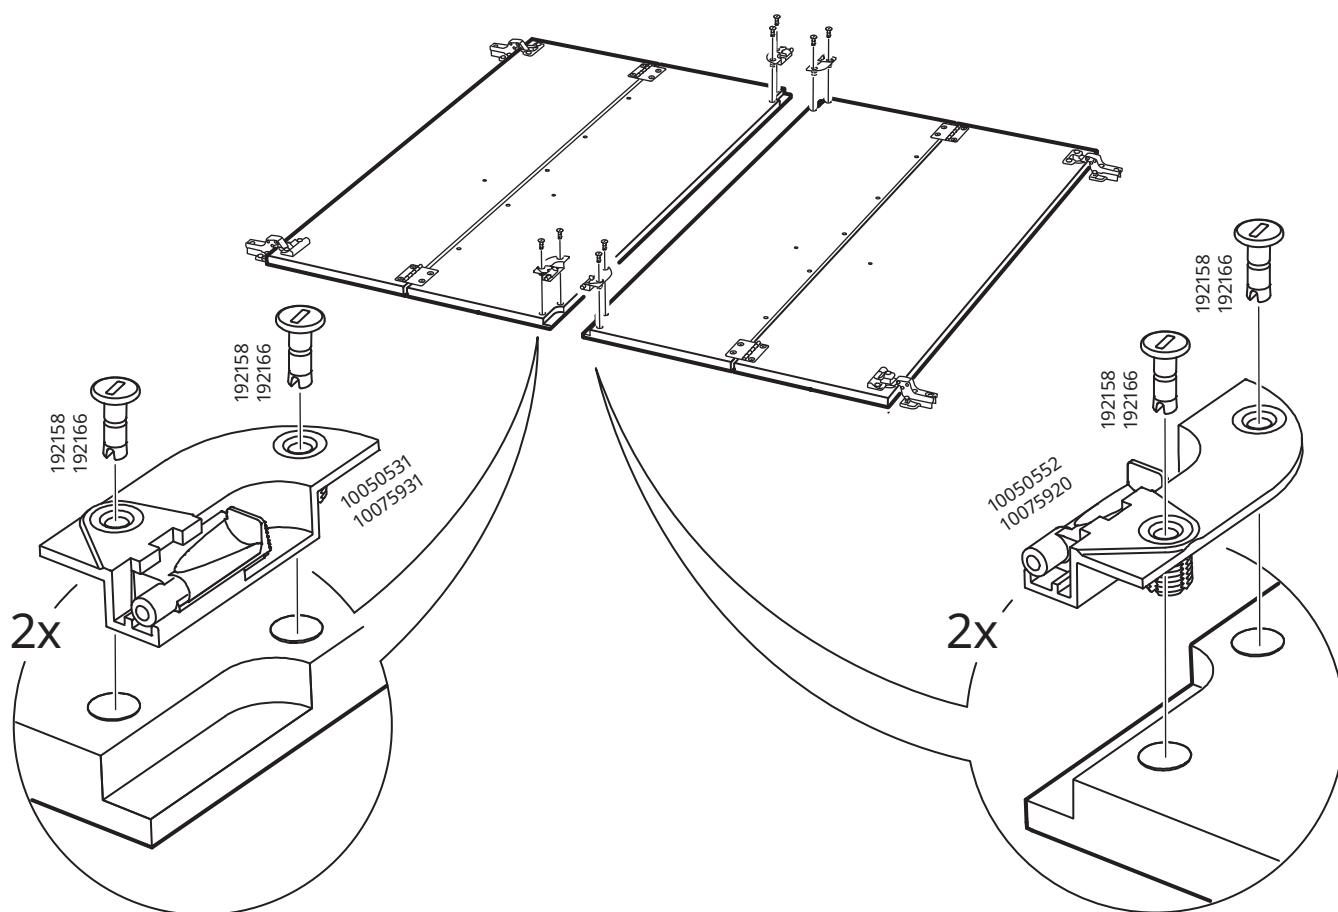 


33

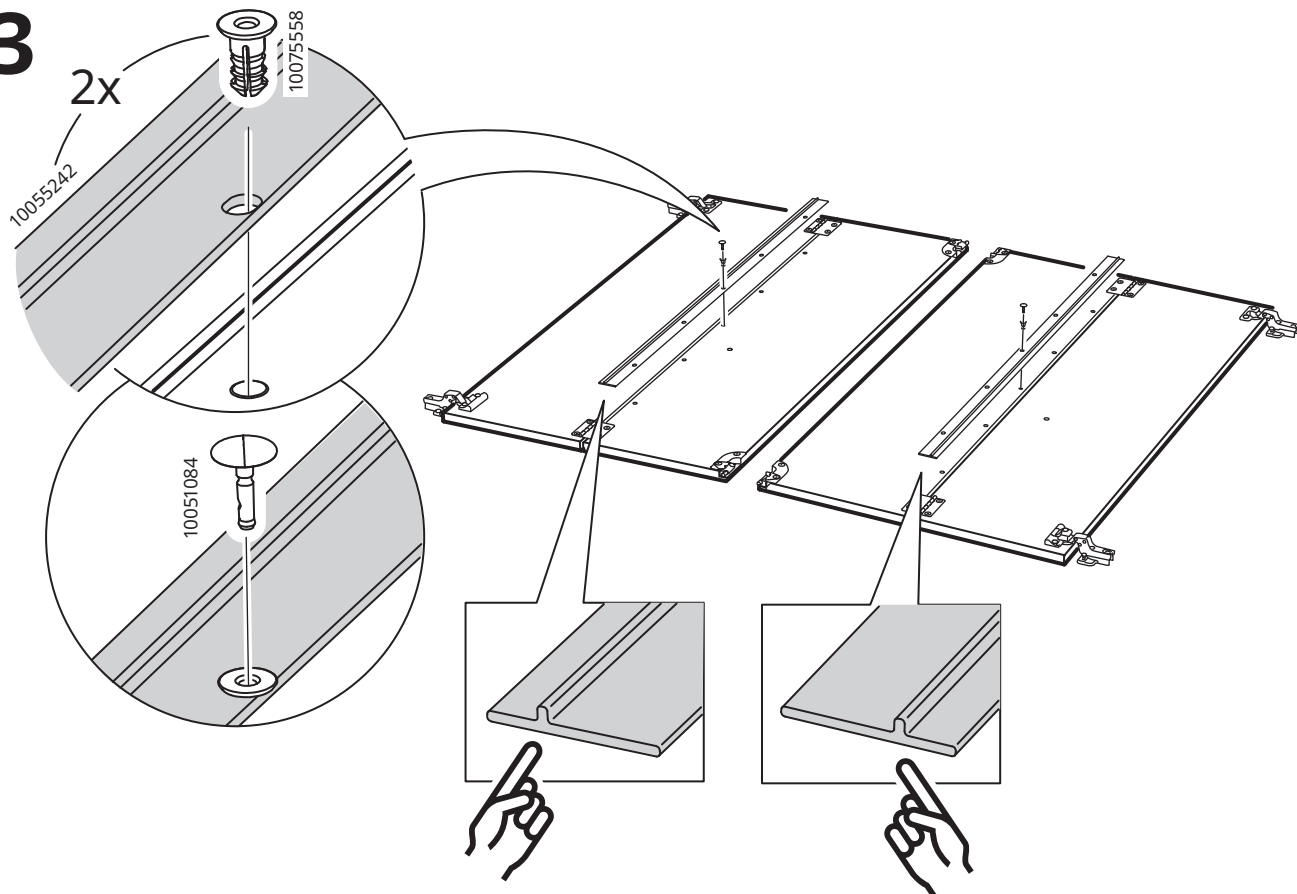 


34

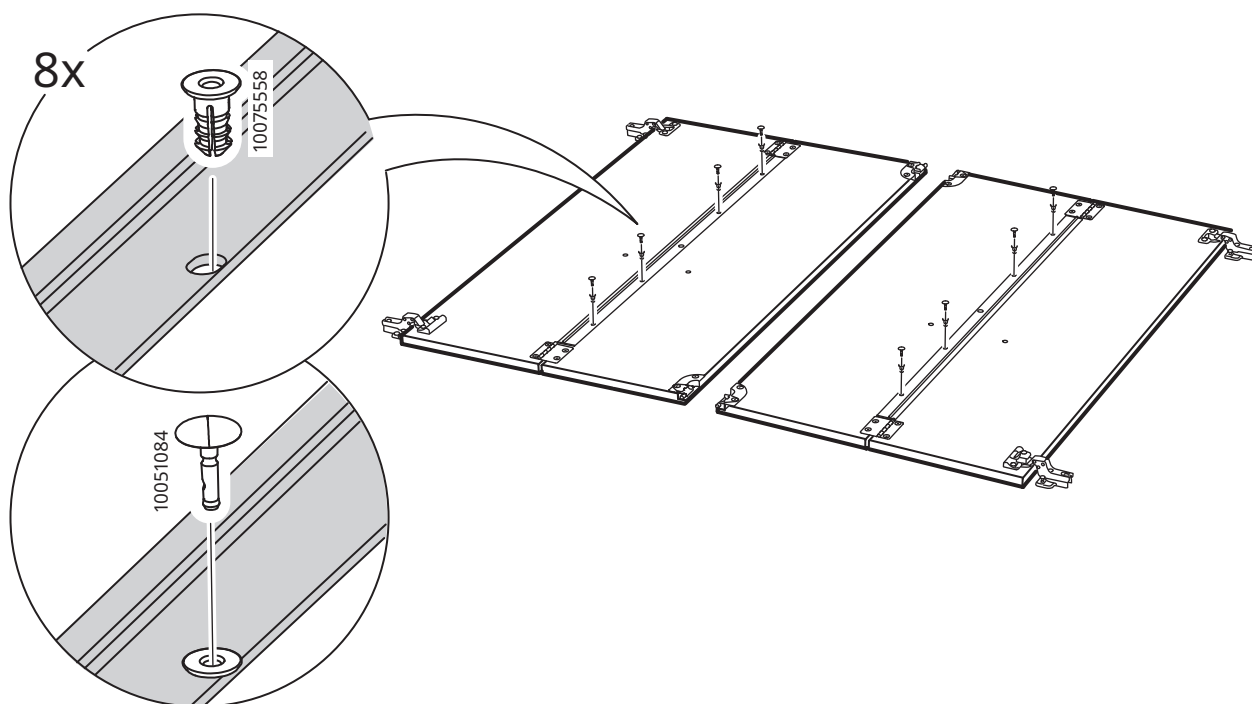 

35

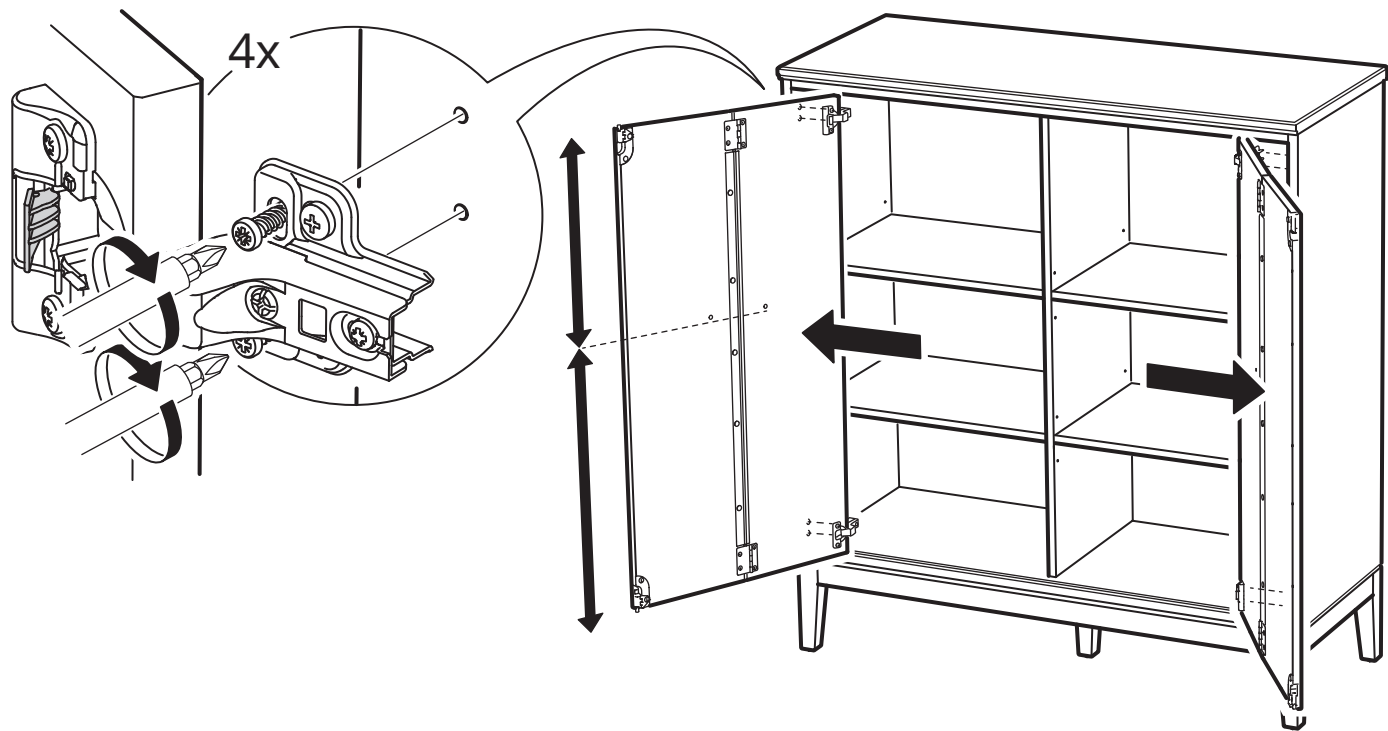 

36

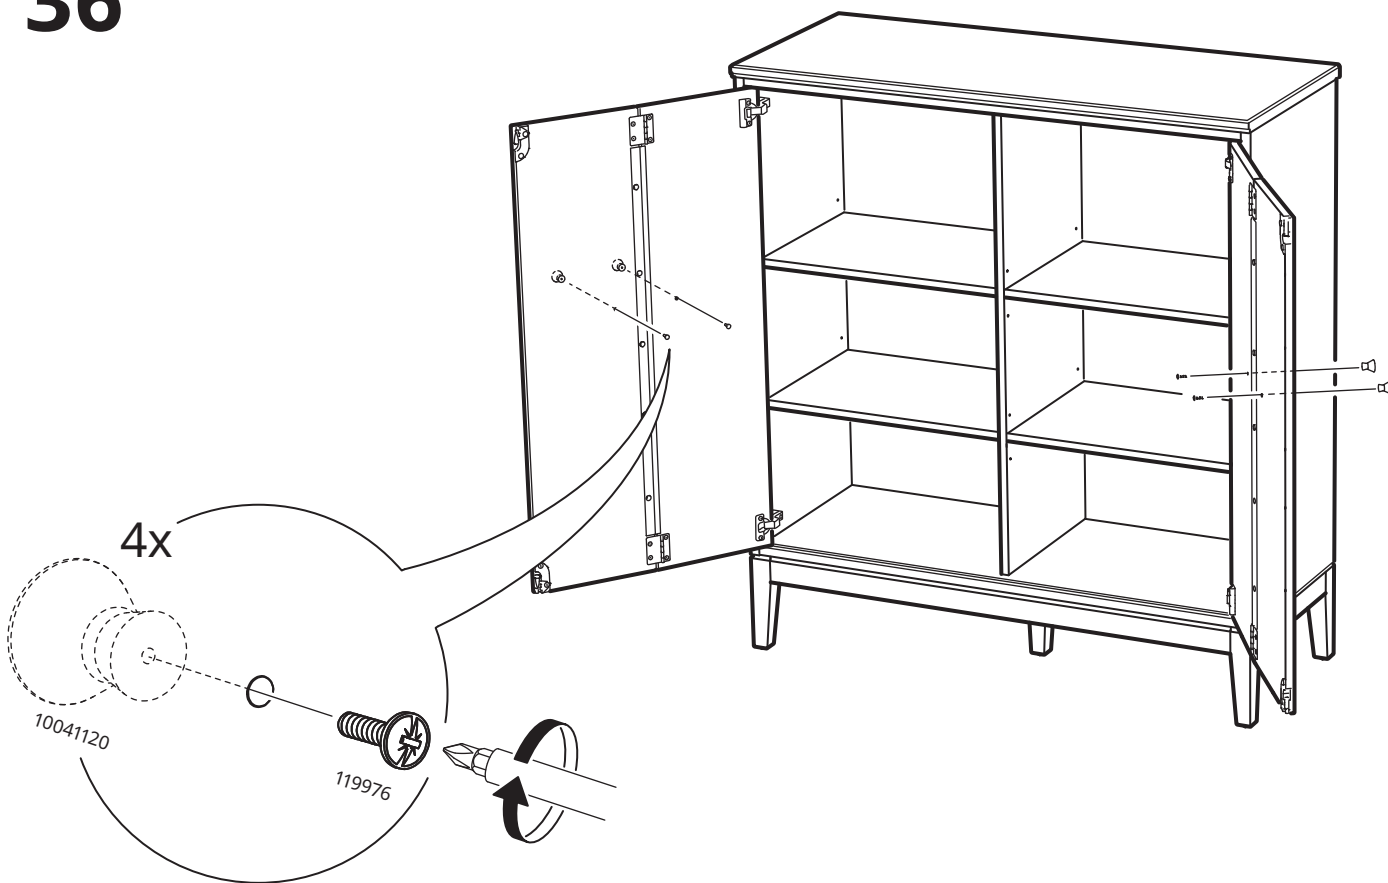 

37

