 


IDANÄS

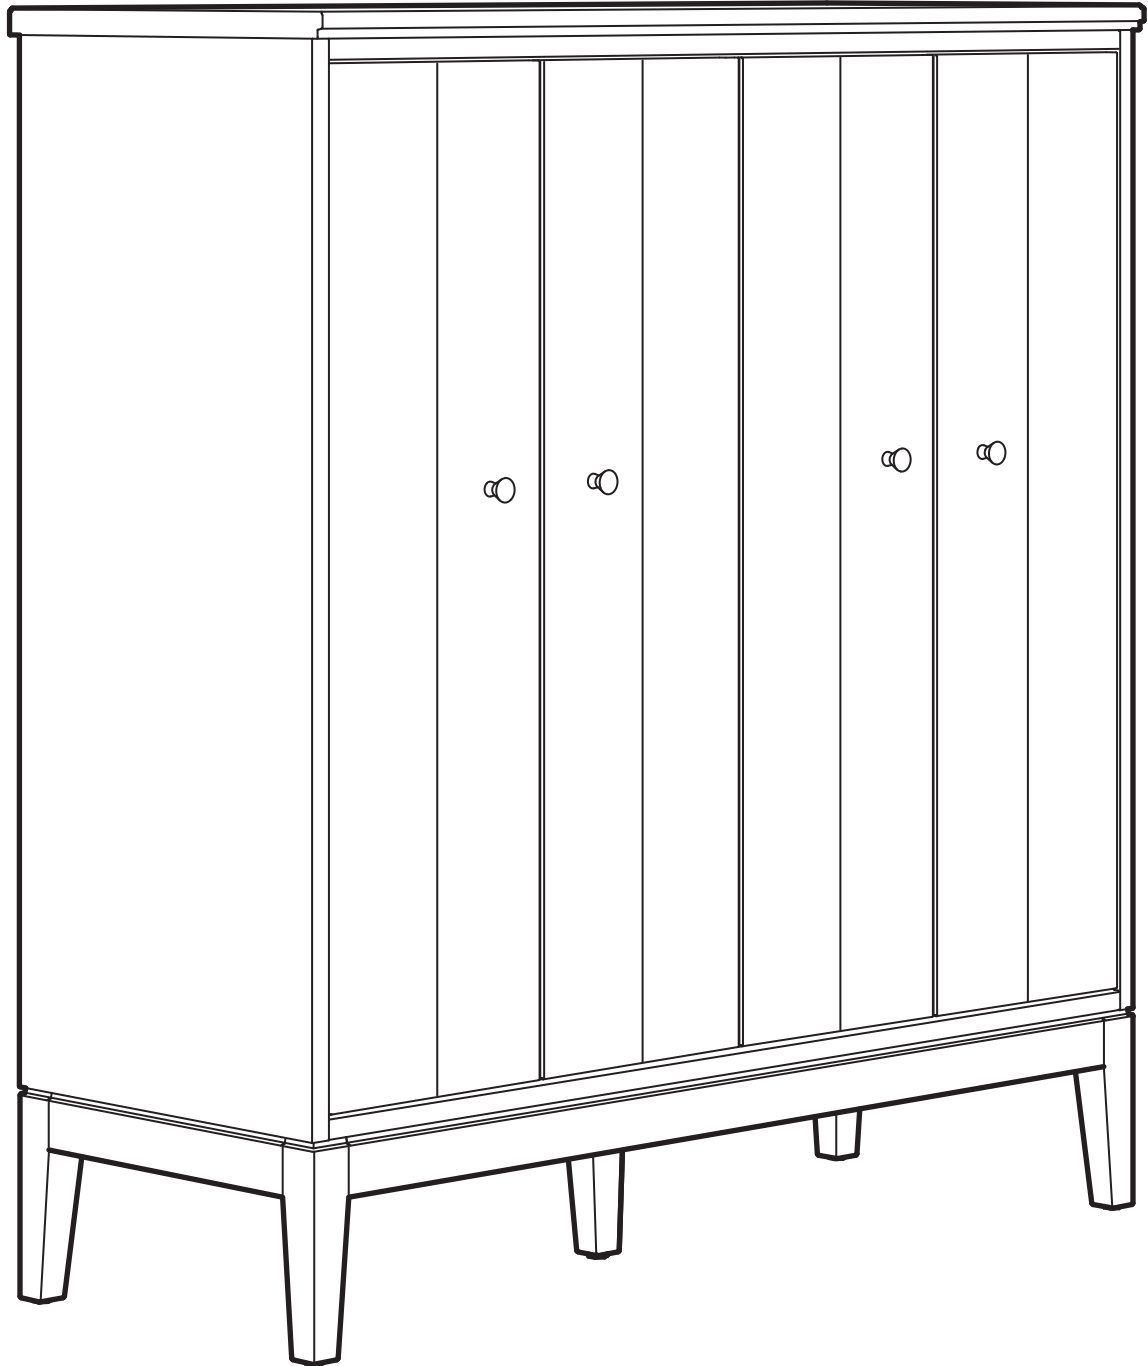

Design and Quality
IKEA of Sweden



English

WARNING!

Serious or fatal crushing injuries can occur from furniture tip-over. To reduce the risk of furniture tip-over:

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

Place heaviest items in the lower drawer.

Do not set TVs or other heavy objects on top of this product.

Never let children climb or hang on drawers, doors, or shelves.

Read and follow each step of the instruction carefully.

עברית

אזהרה!

נפילת הרהיט עלולה לגרום לפגיעה גופנית חמורה או קטלנית. על מנת להפחית את הסיכון של נפילת רהיטים:

יש להקפיד ולקבע את הריהוט לקיר באמצעות אביזרי קיבוע.

על-מנת למזער את סכנת הפגיעה הגופנית או המוות מנפילת רהיטים:

 
 
 
 
הניחו את הפריטים הכבדים ביותר במגירה התחתונה. הימנעו מלהניח טלוויזיות או פריטים כבדים אחרים על מוצר זה.

 
 
 
 
אין לאפשר לילדים לטפס על המגירות, הדלתות או המדפים. קראו ופעלו בהירות לפי כל שלב בהוראות.








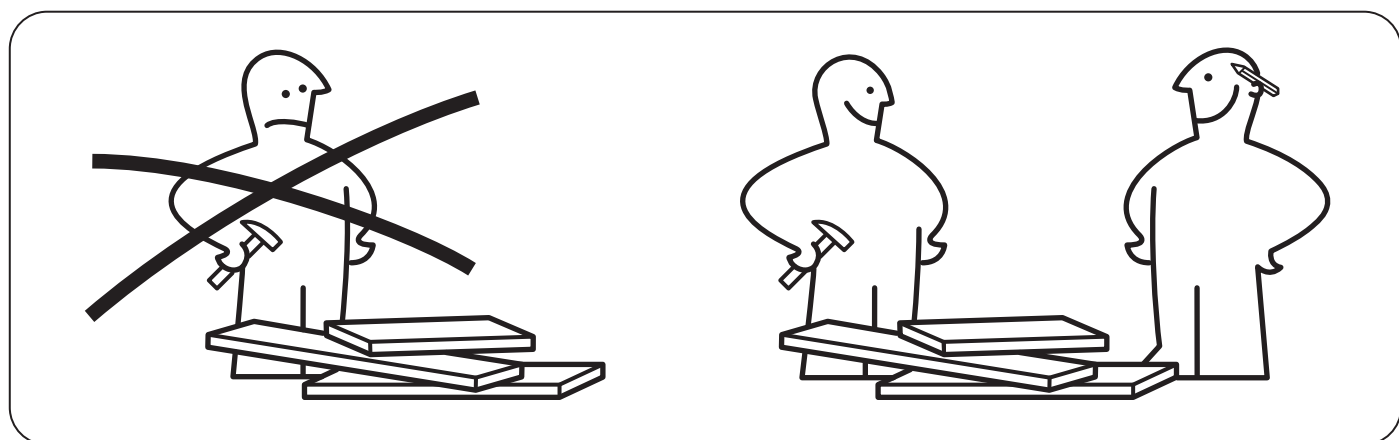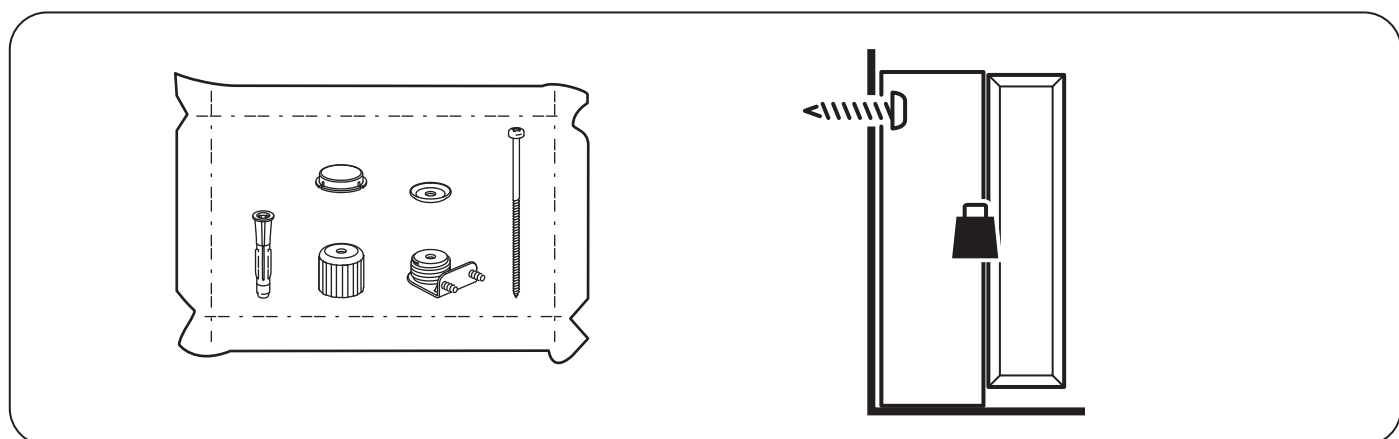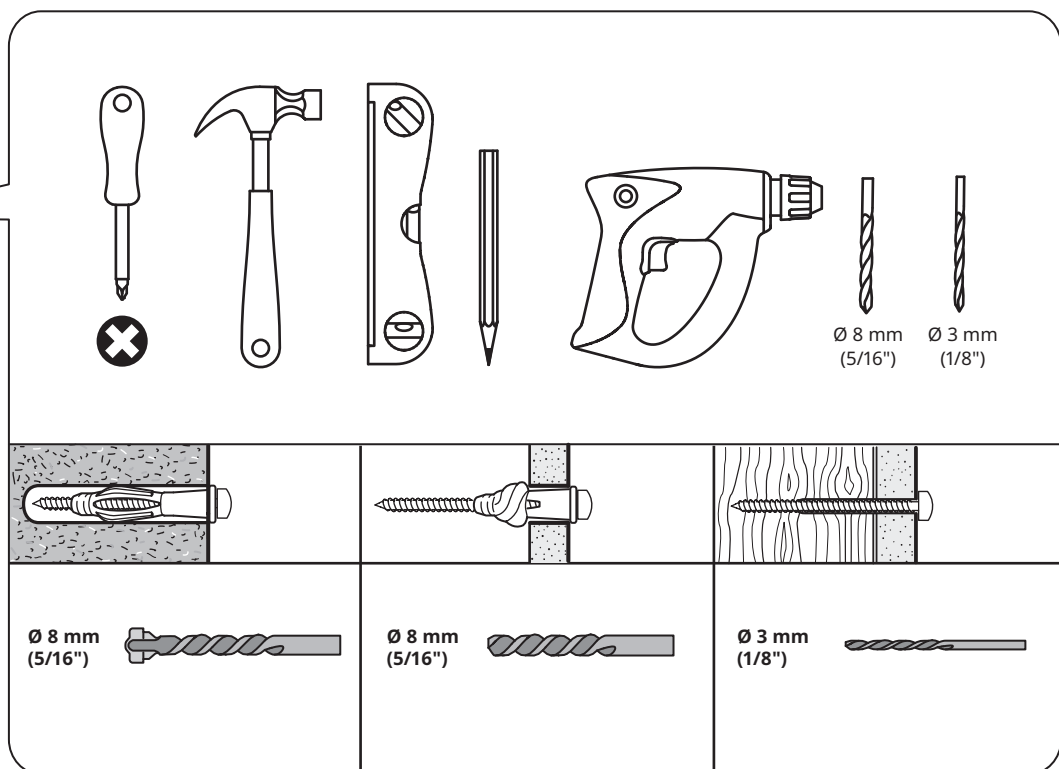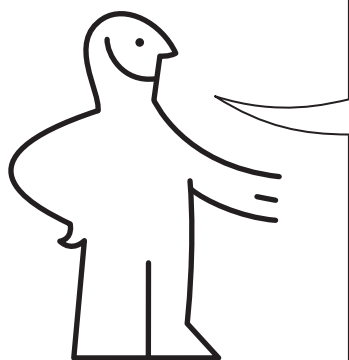

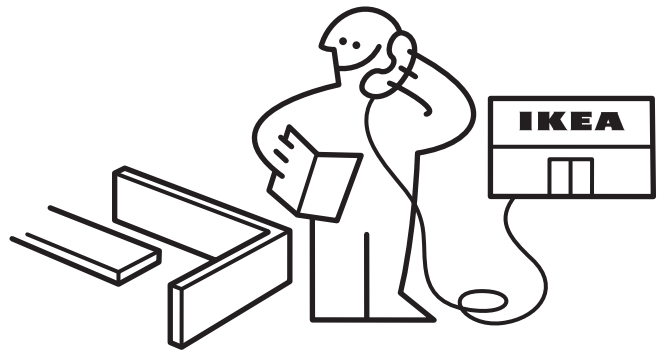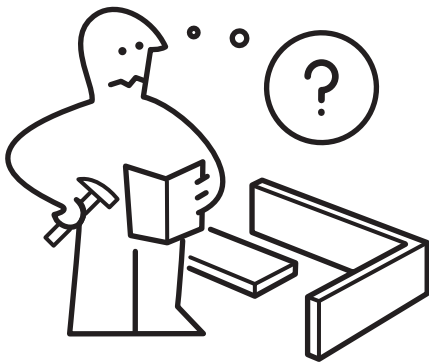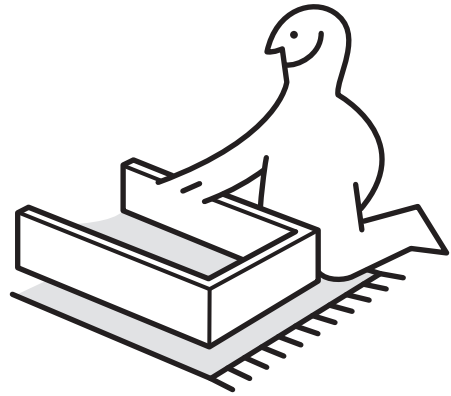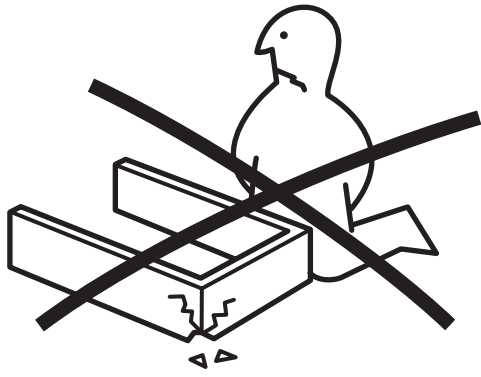

1

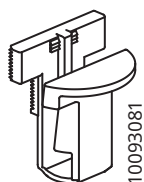 


10093081

8x




10093082

 8x




151706

 8x




151705

 8x




100217

 1x




100214

 1x



10093458

 4x




131372

16x




100347

 4x

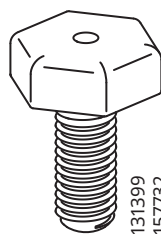


131399
157732

 5x

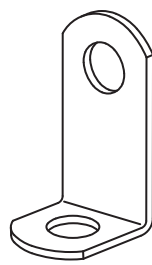


102553

 2x

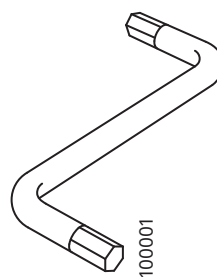

100001

 1x




101352

9x



13

 2

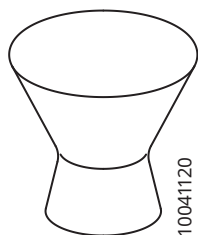

10041120

4x



119976

4x



192158

12x



10051084

10x



 
10075558

10x



150769


16x

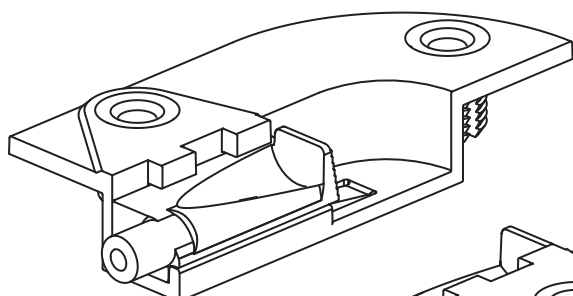

10050531

10075931

 
2x

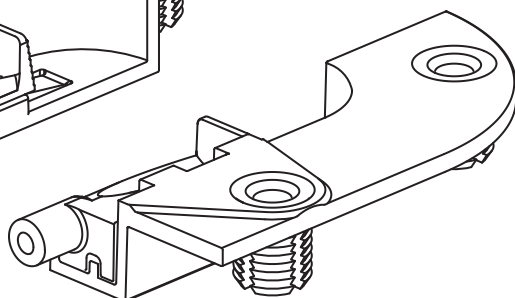

10050552

10075920

 
2x

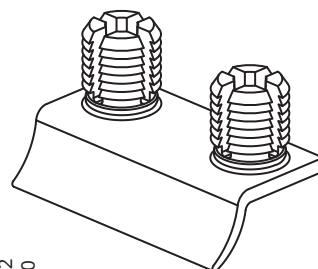

10050549


10075918

 2x

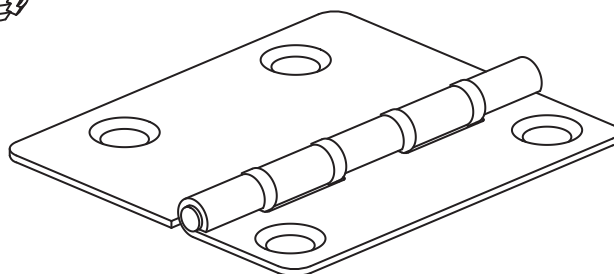


10042027

 4x

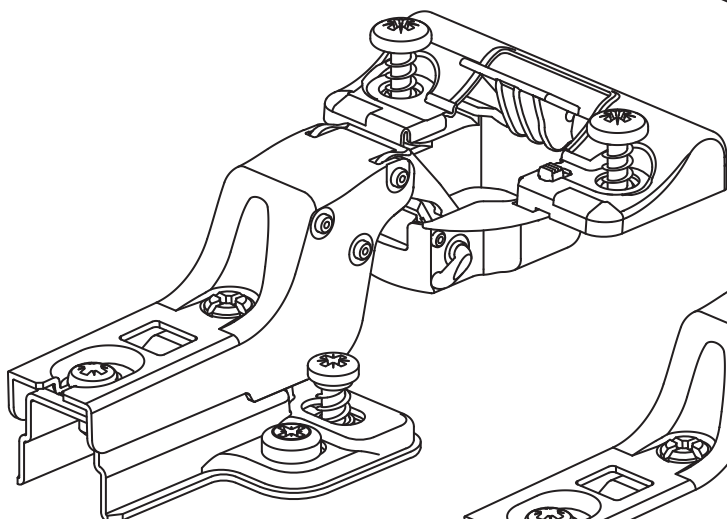

175136

 2x

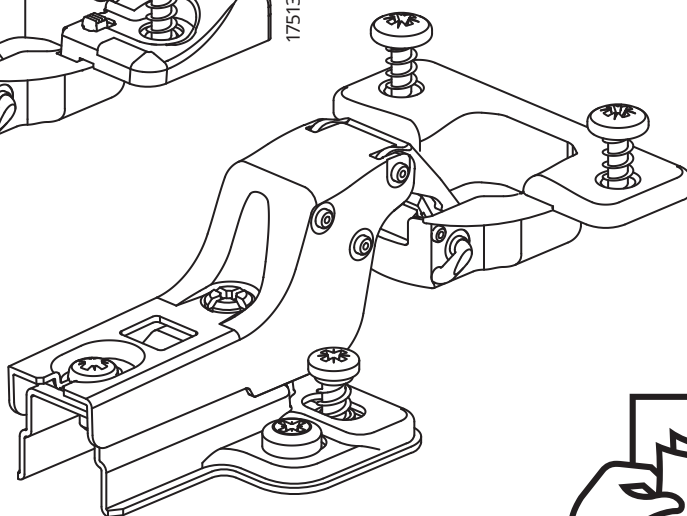


152517


2x



 
31

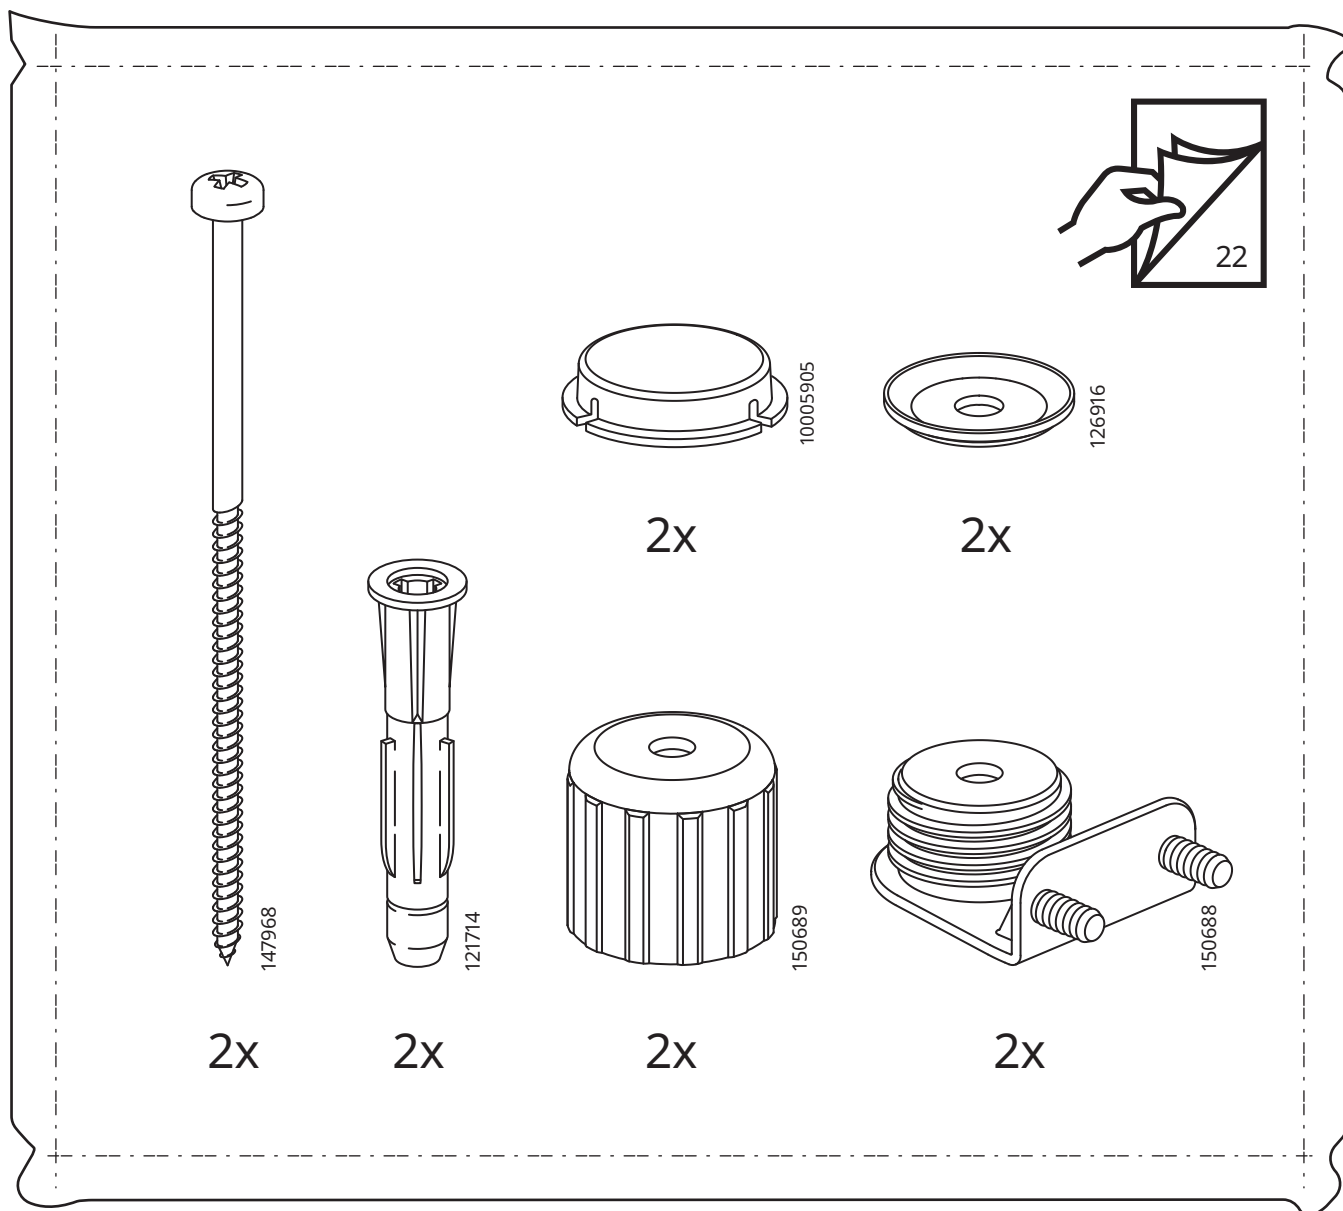


363576

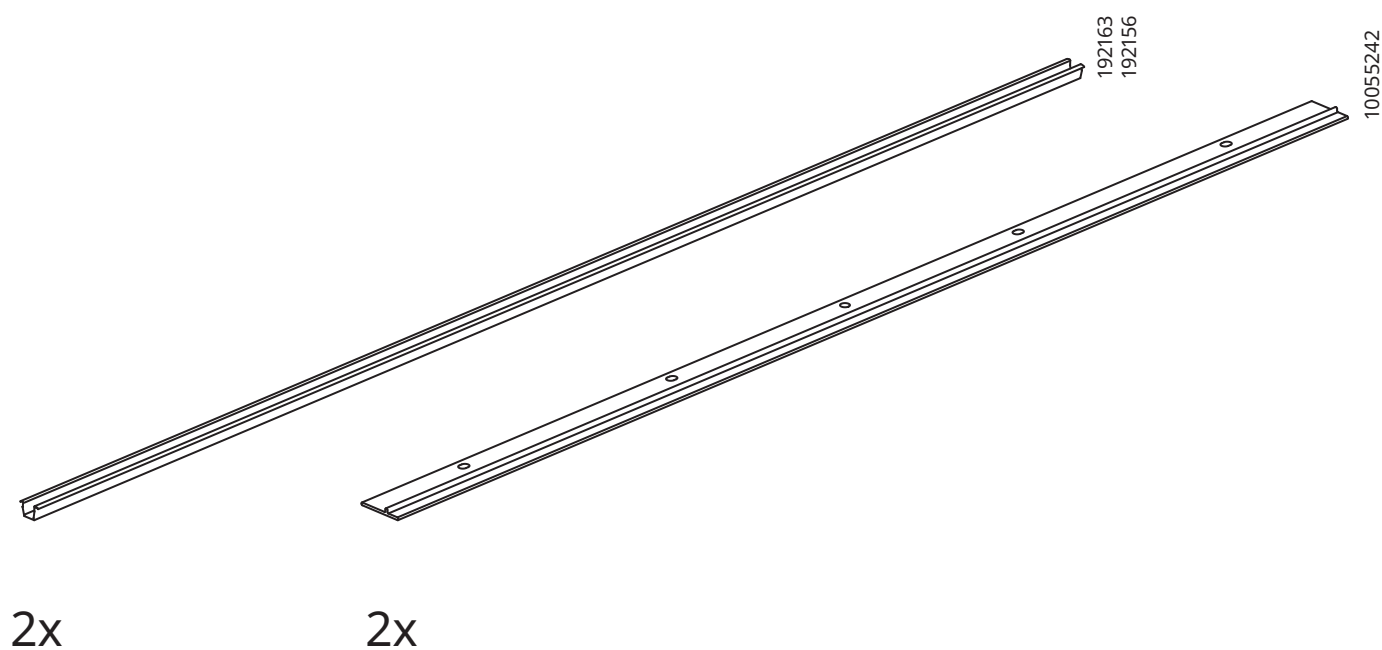 


1

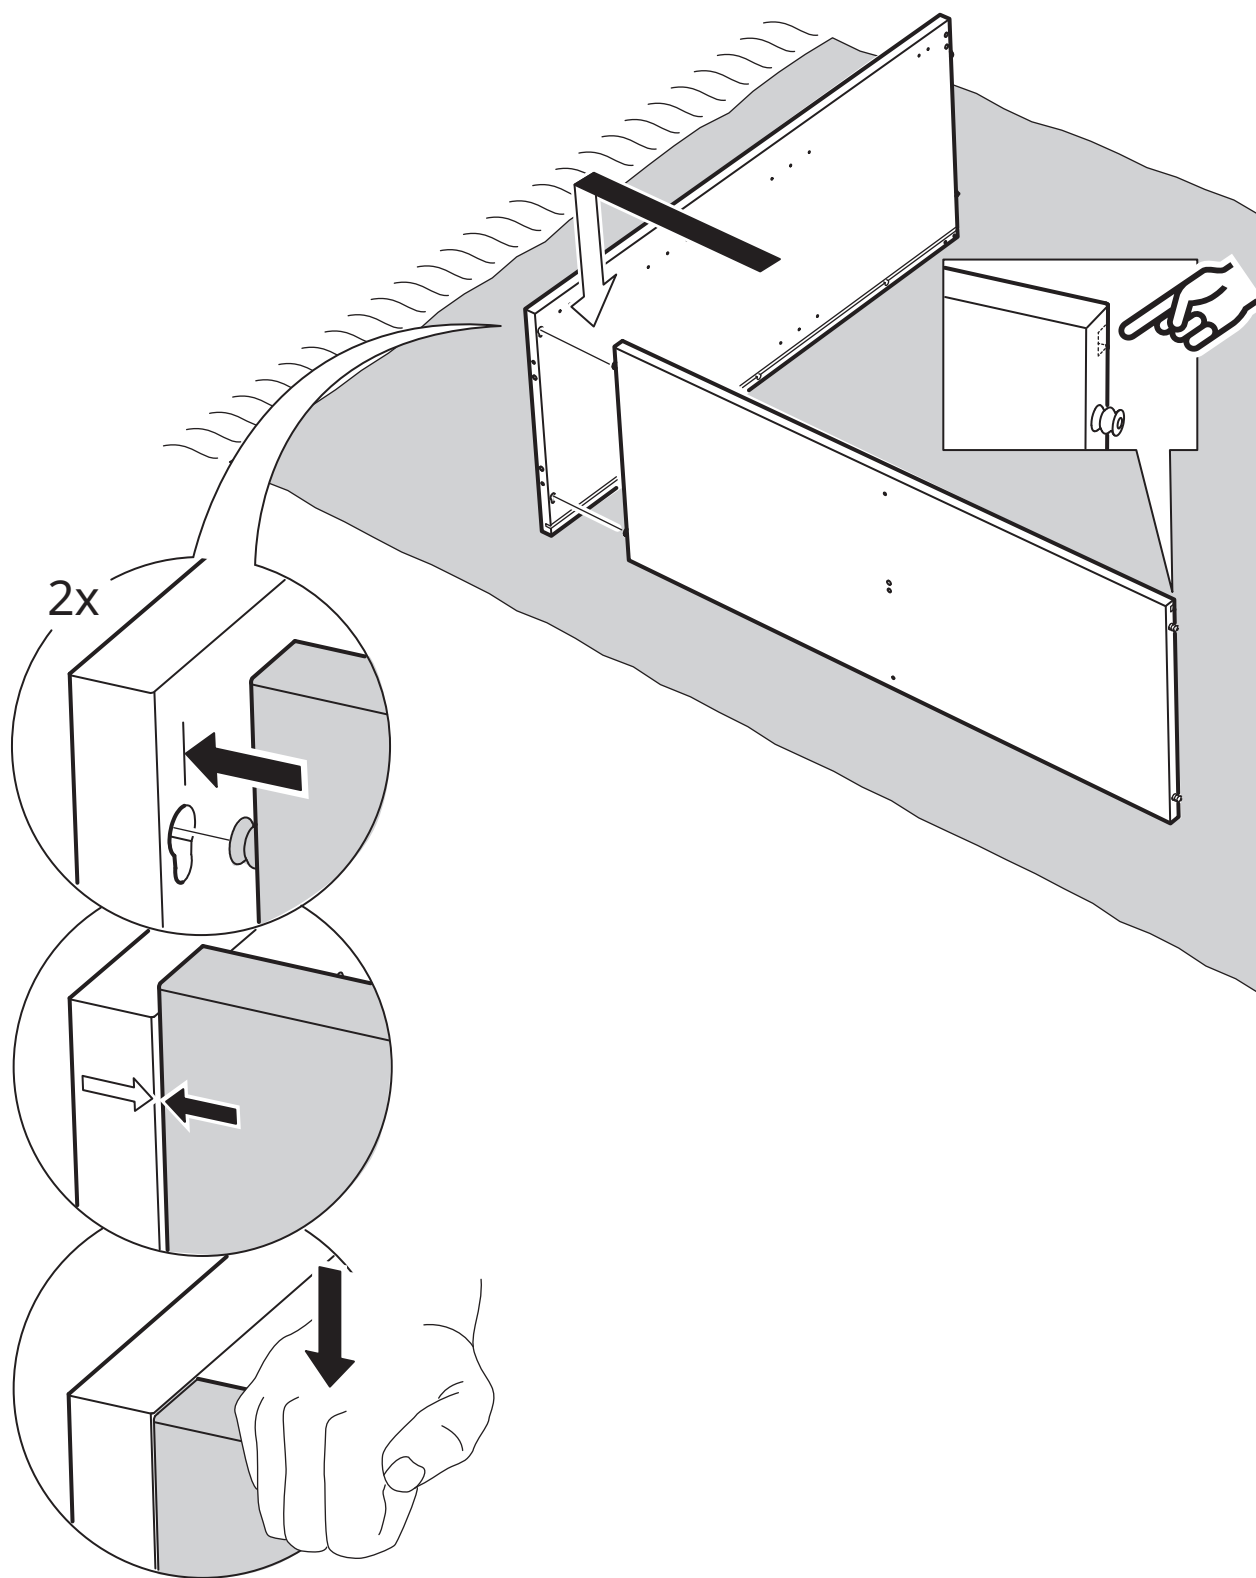 


2

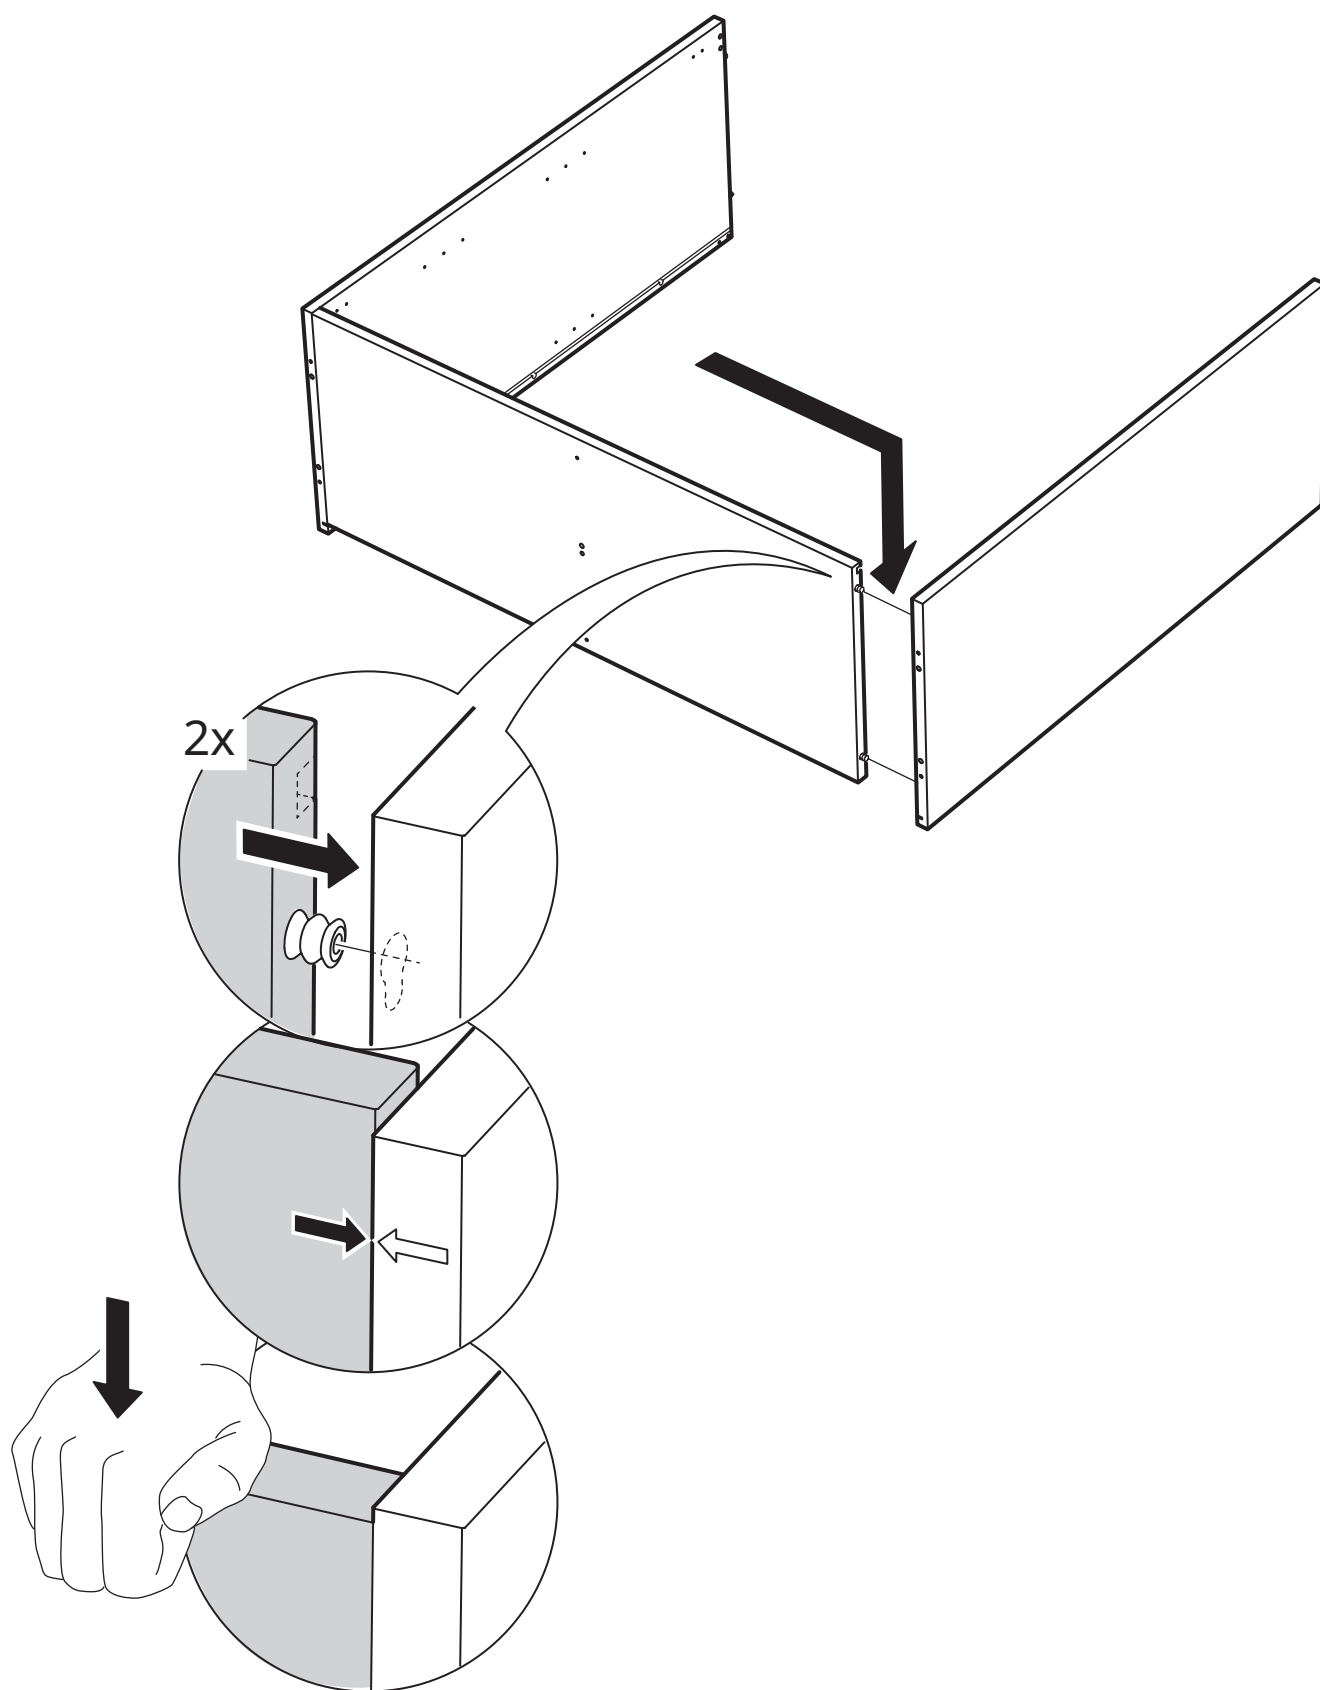 


3

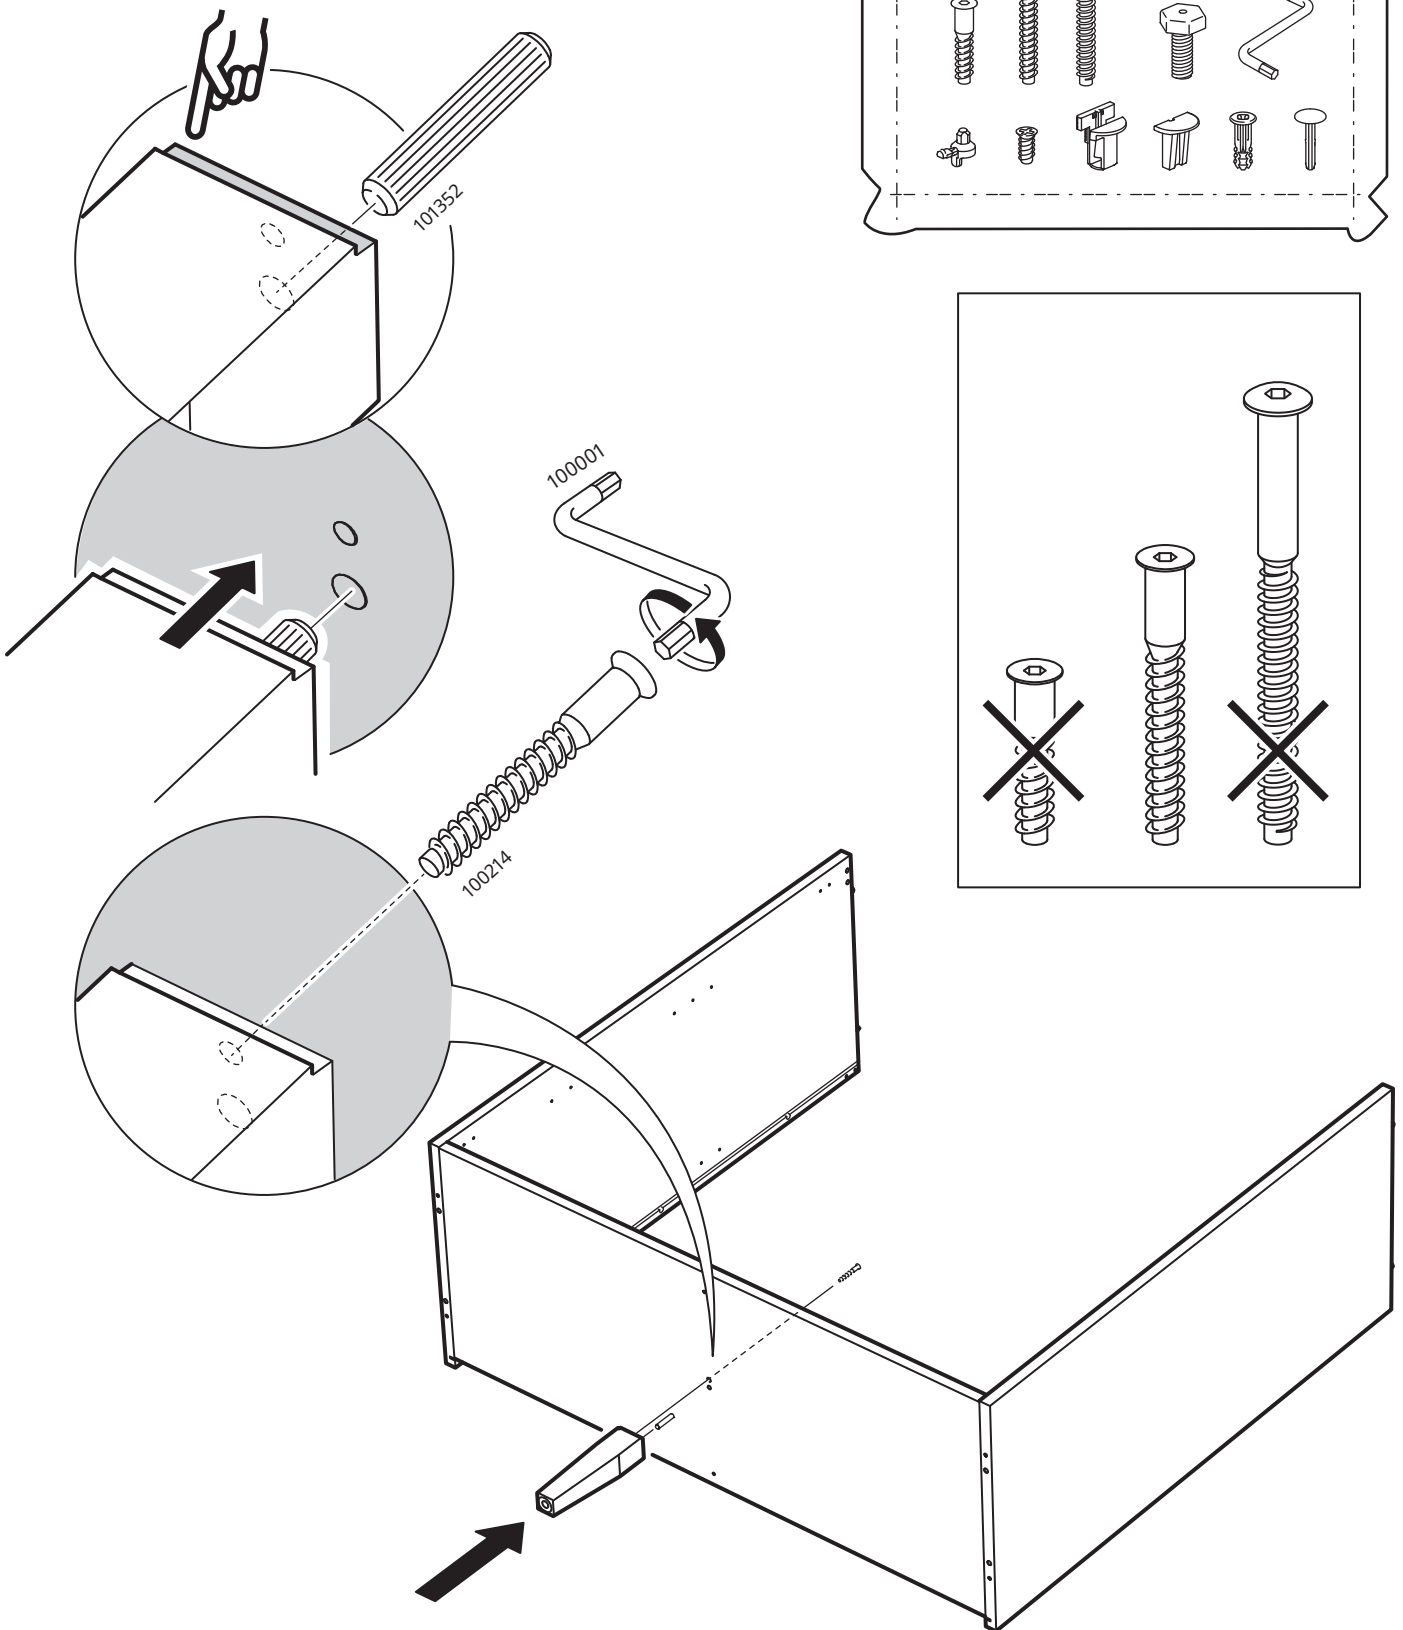 


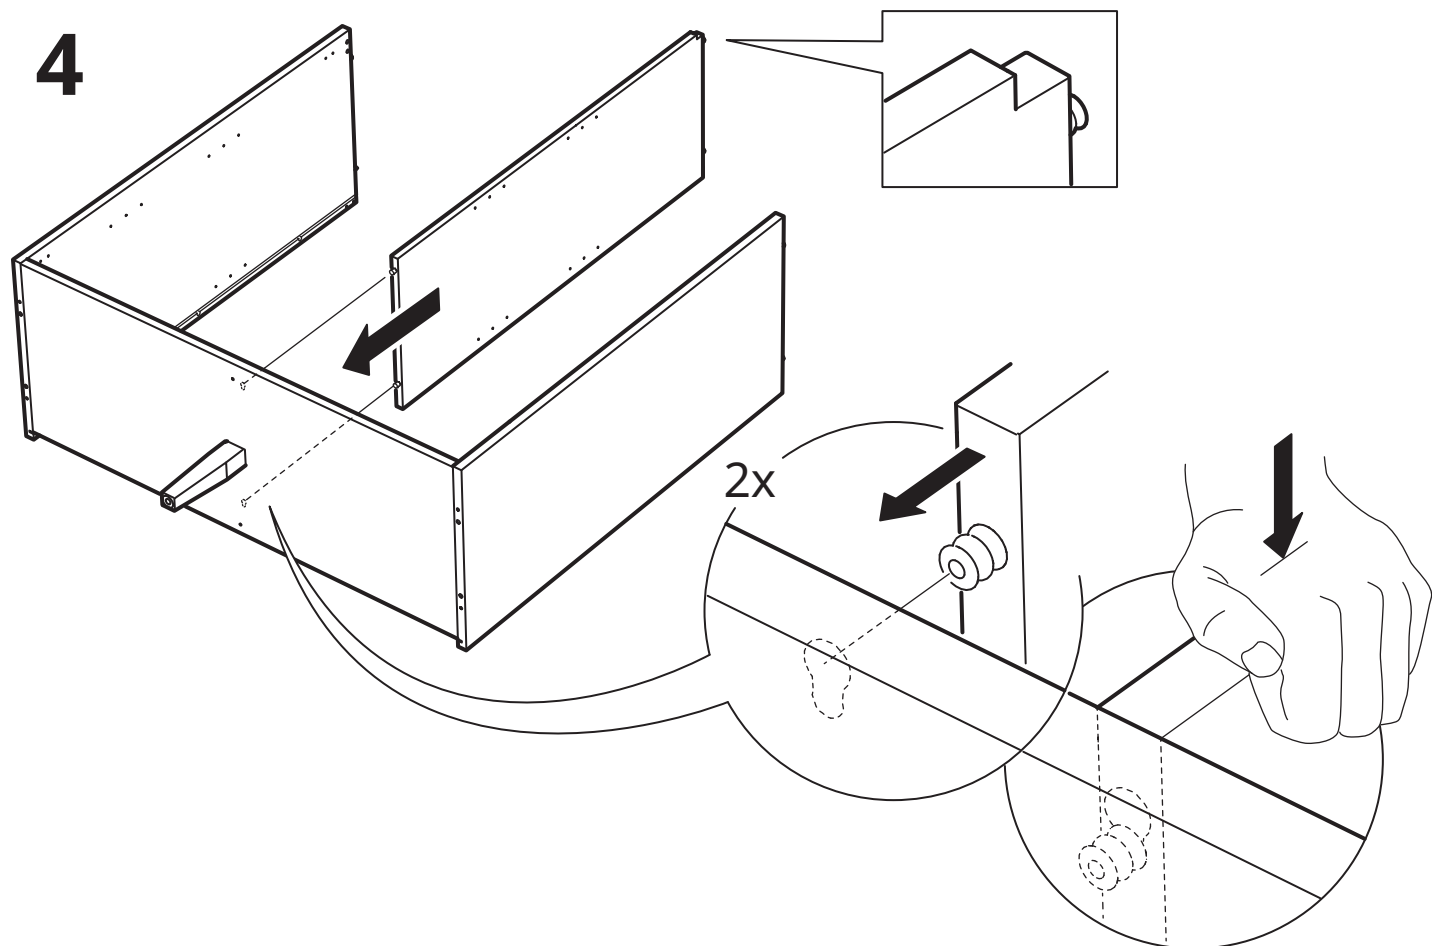 


5


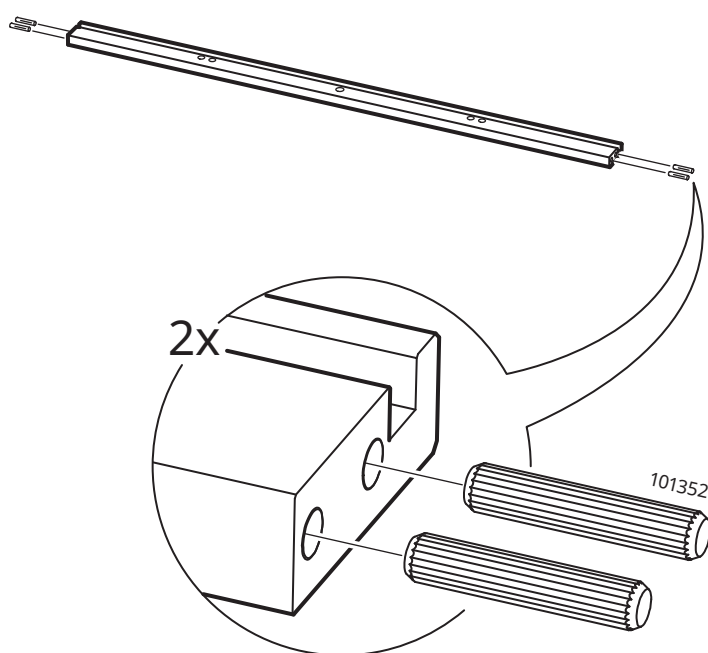 


6

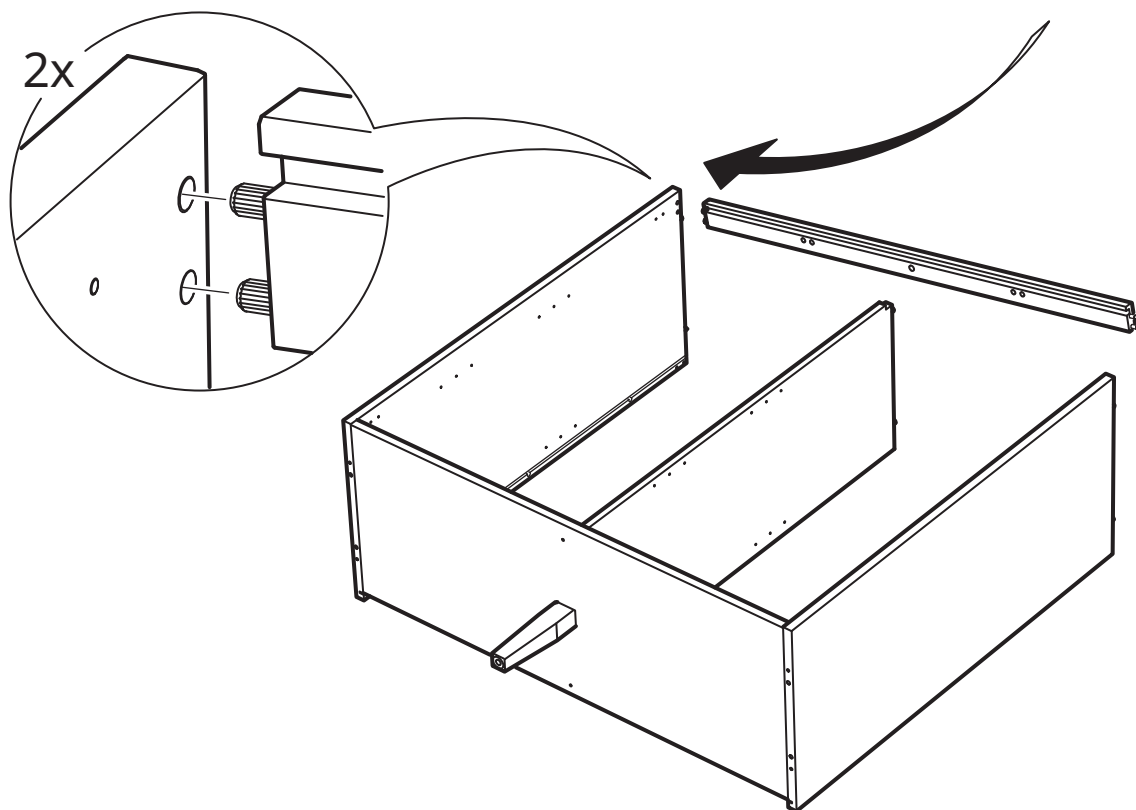 


7

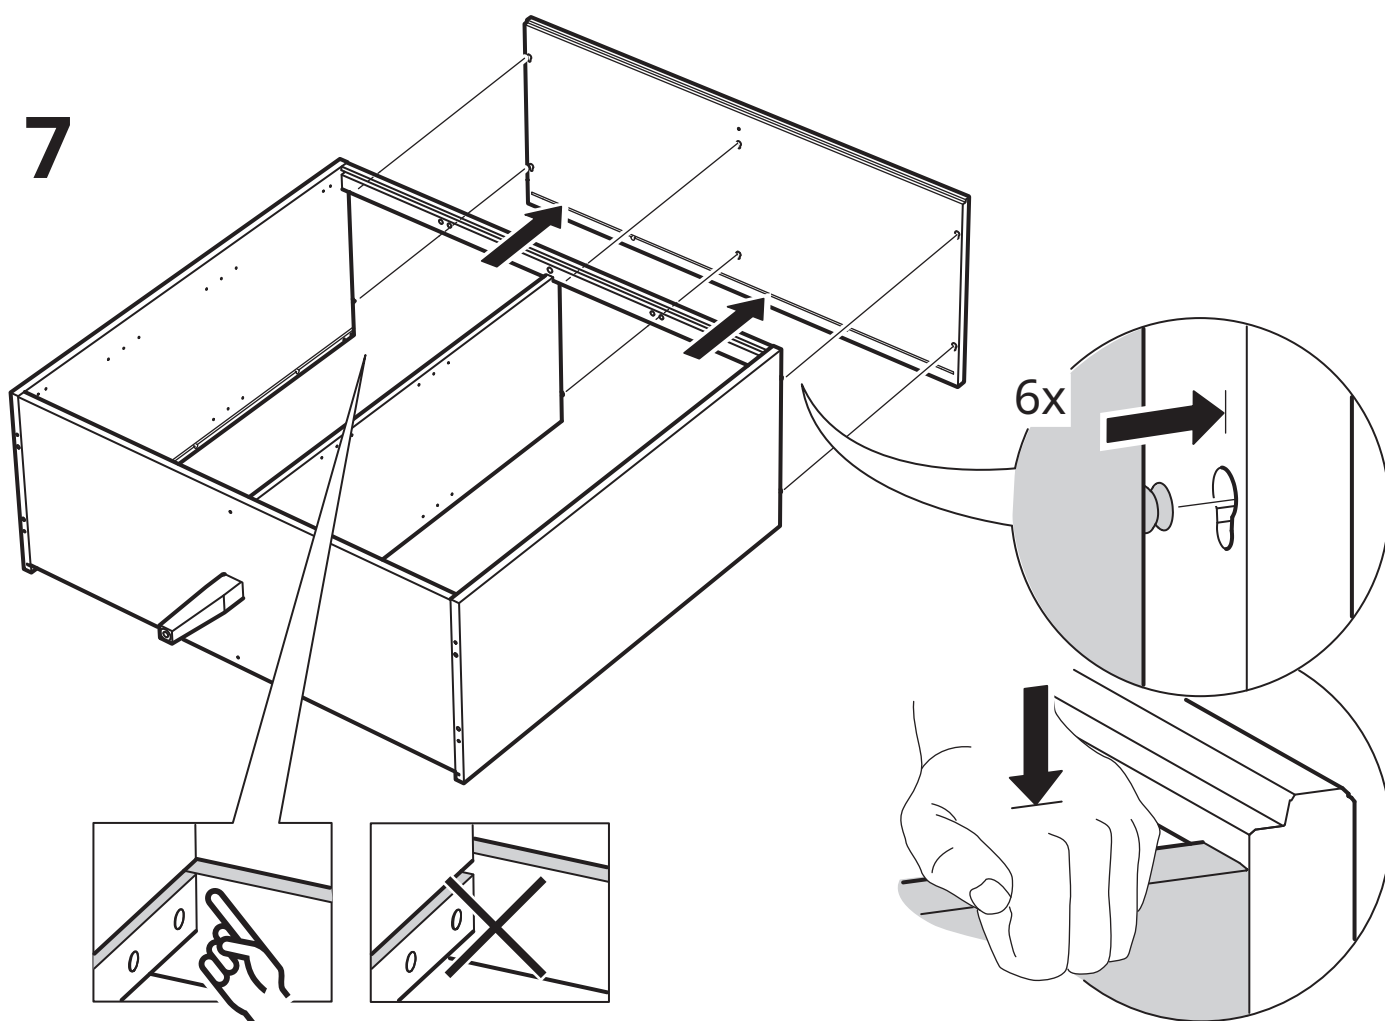 


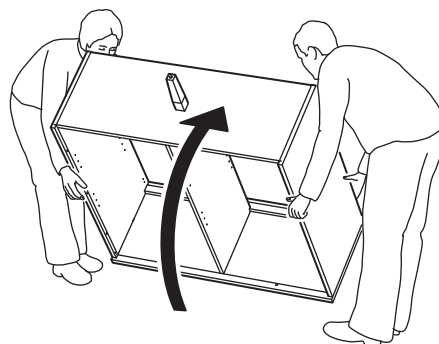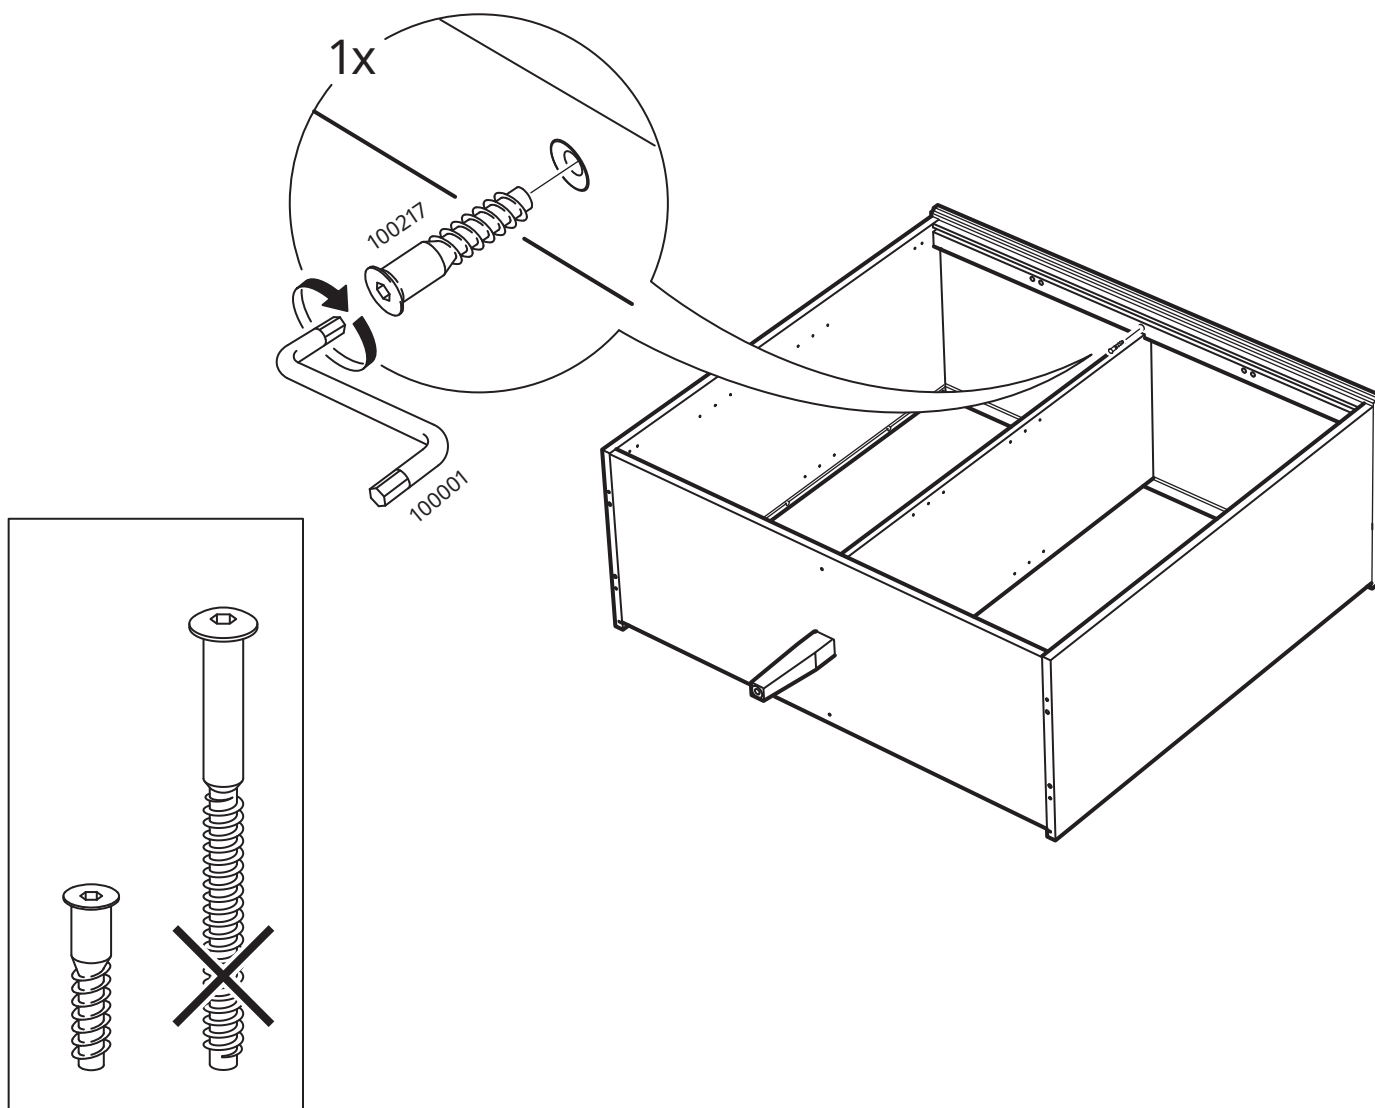  


9

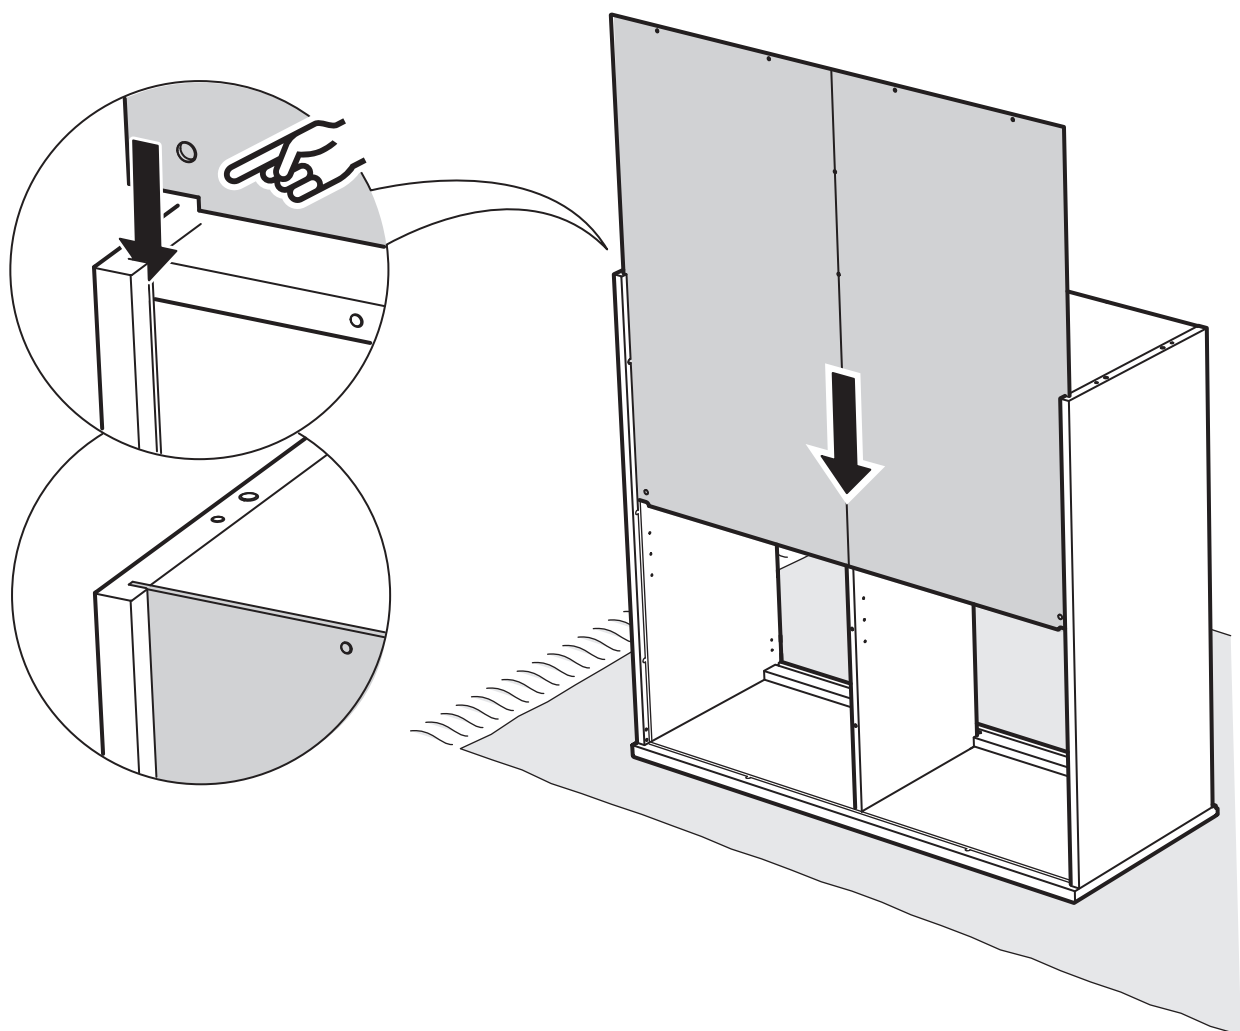 


10

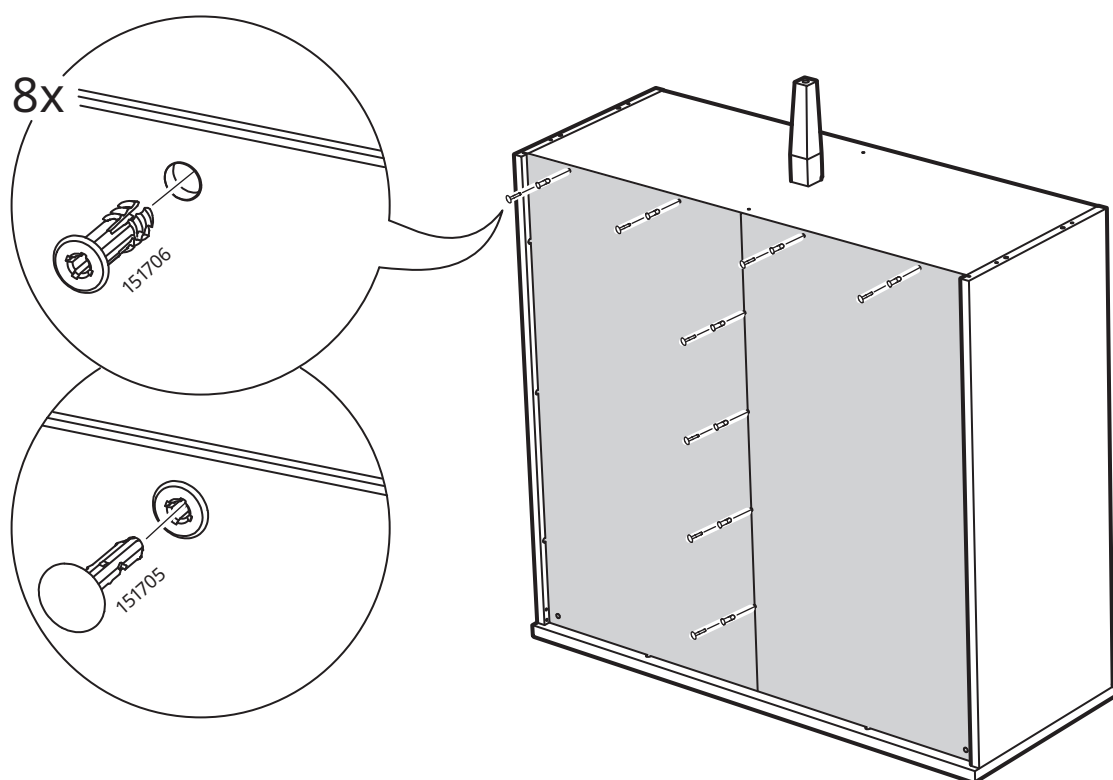 


11

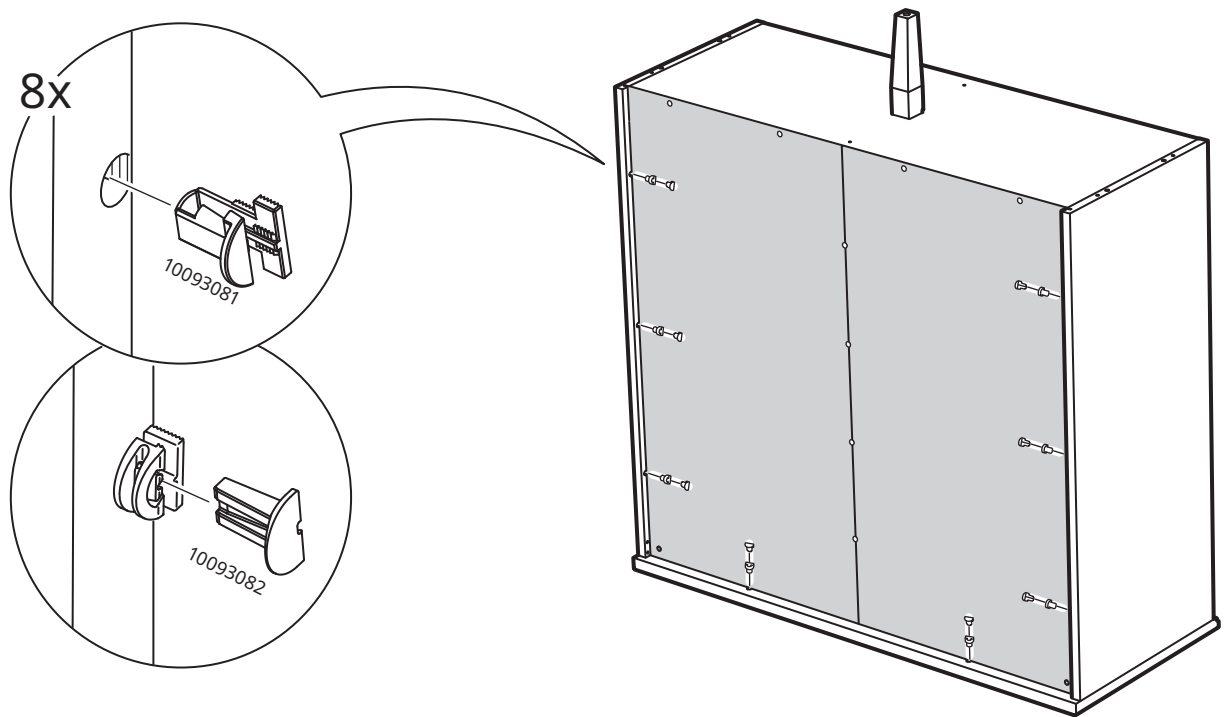 


12

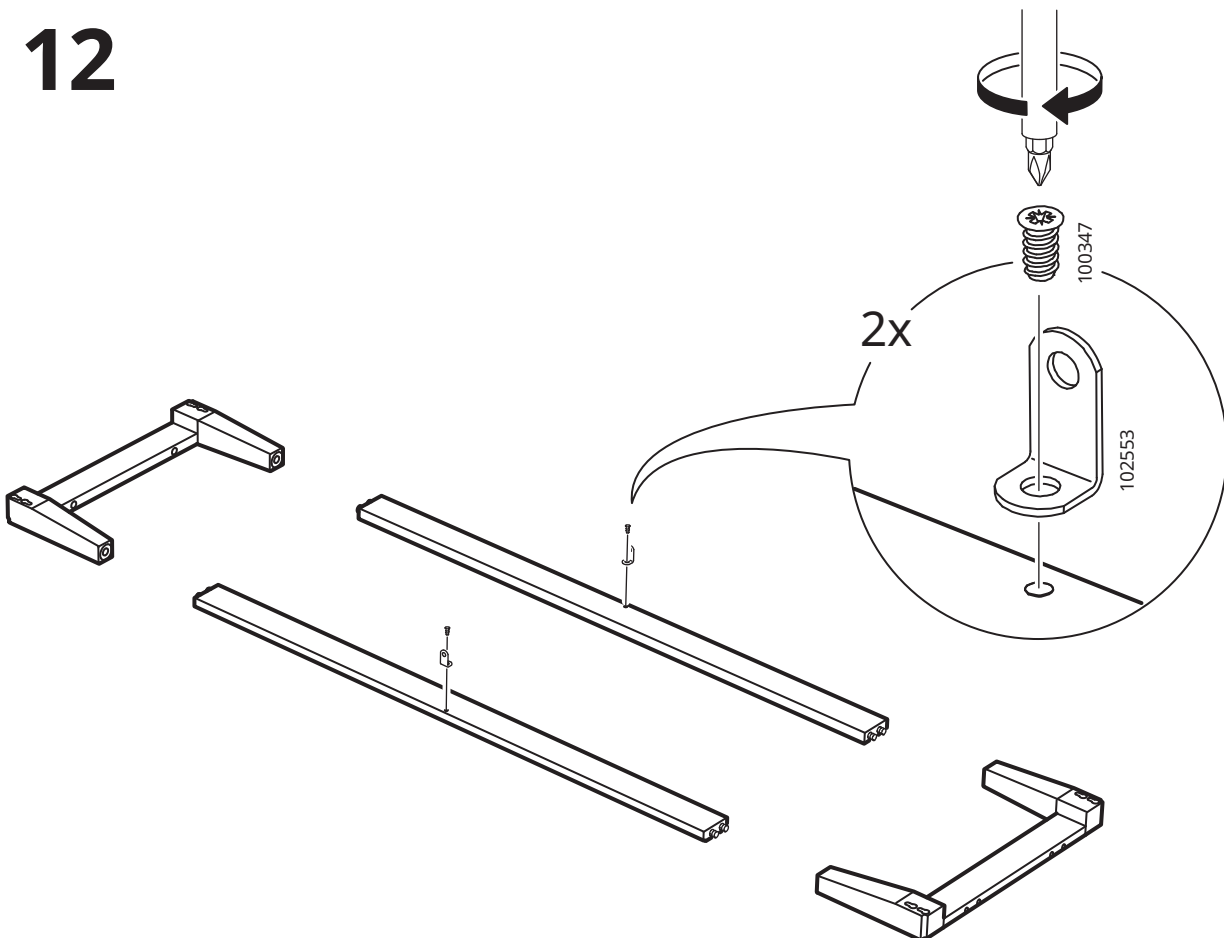 


13

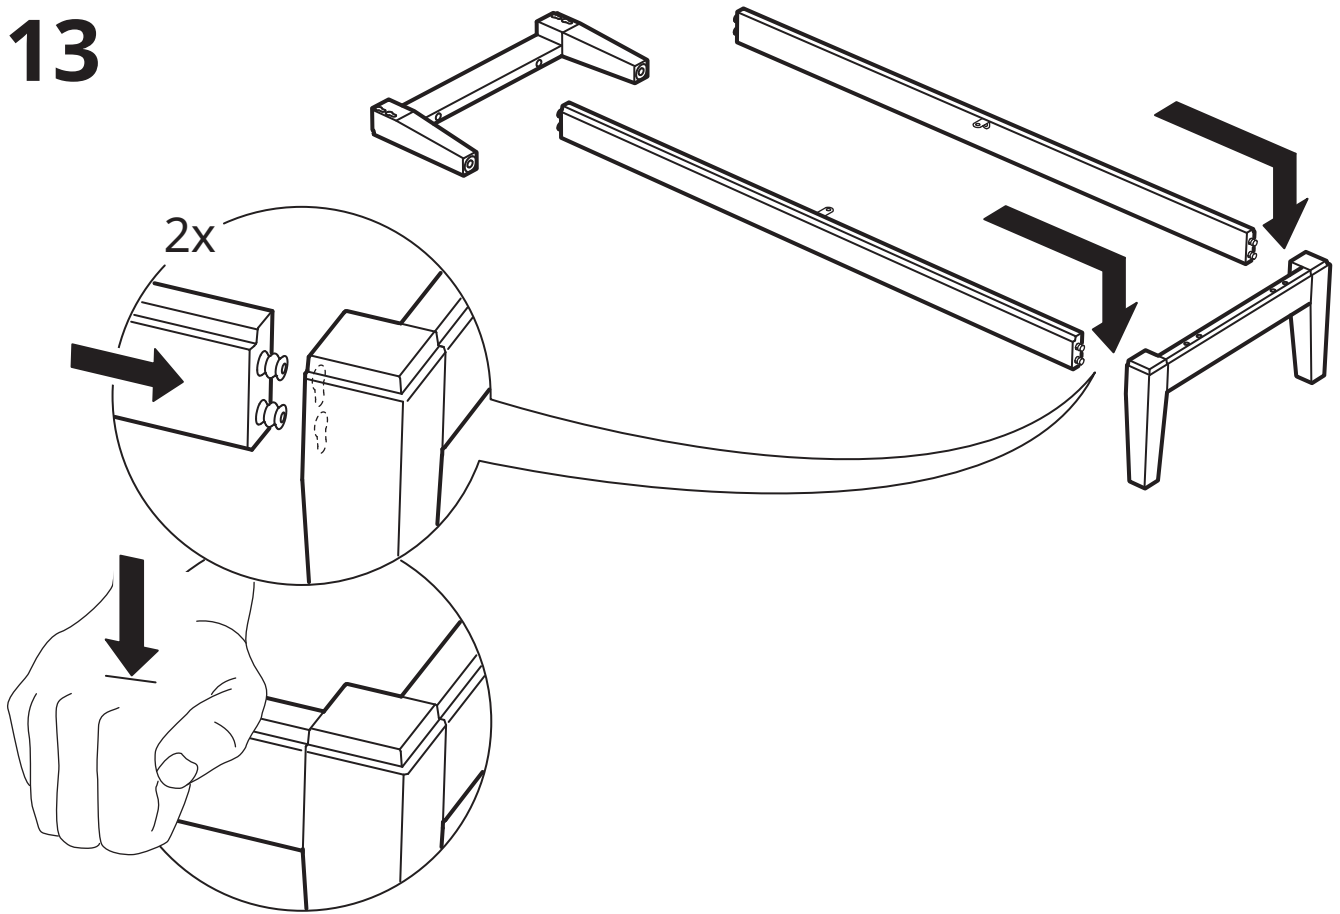 


14

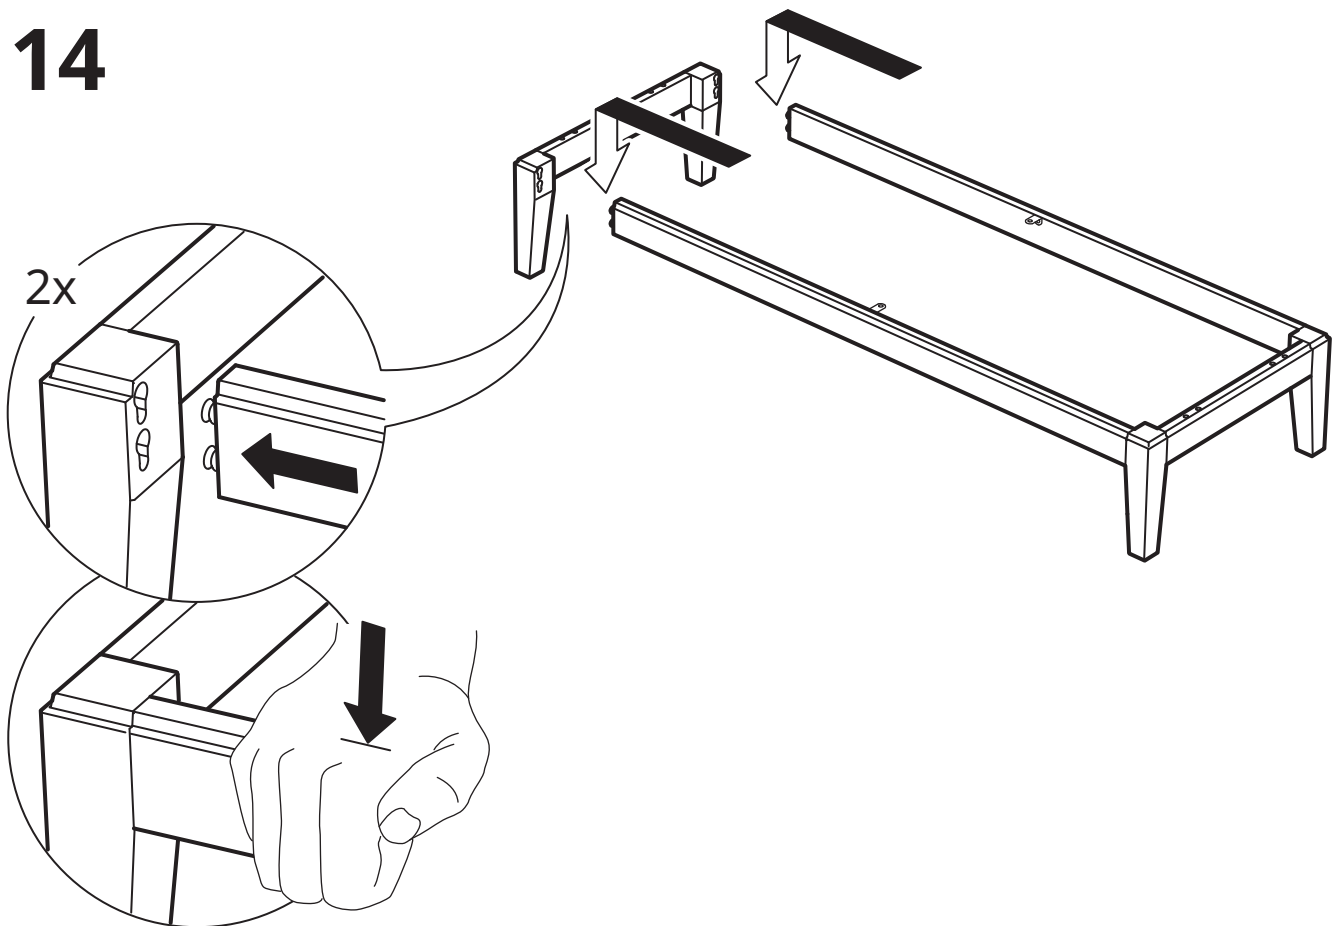 


15

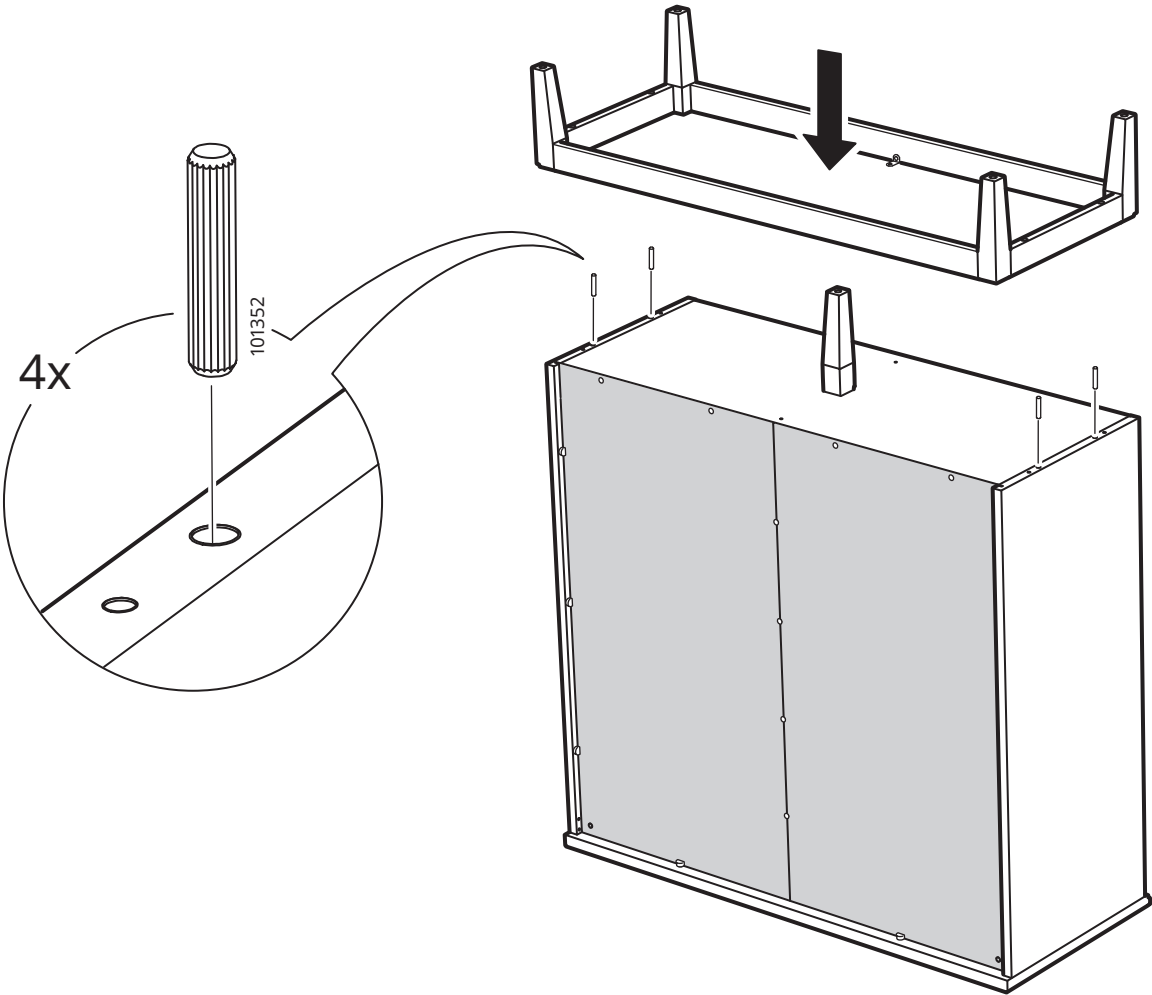 


16

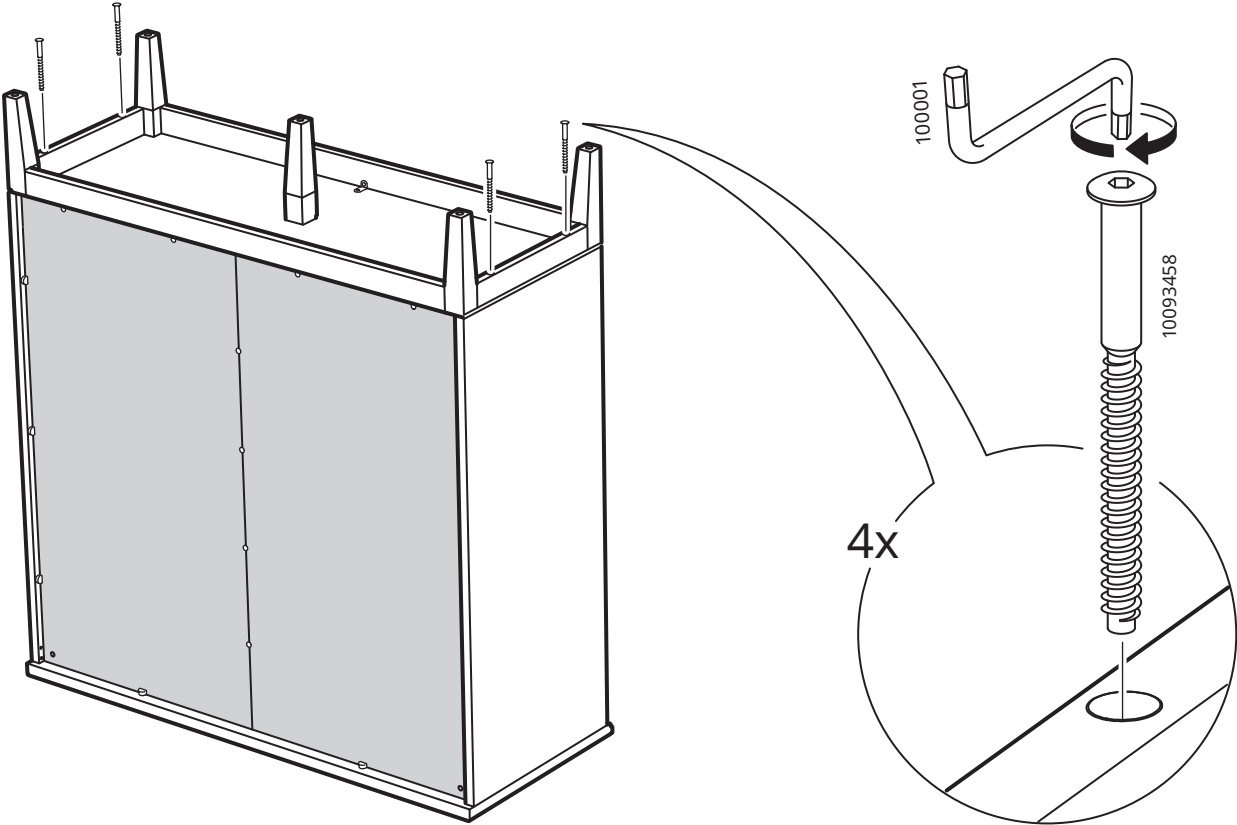 





17

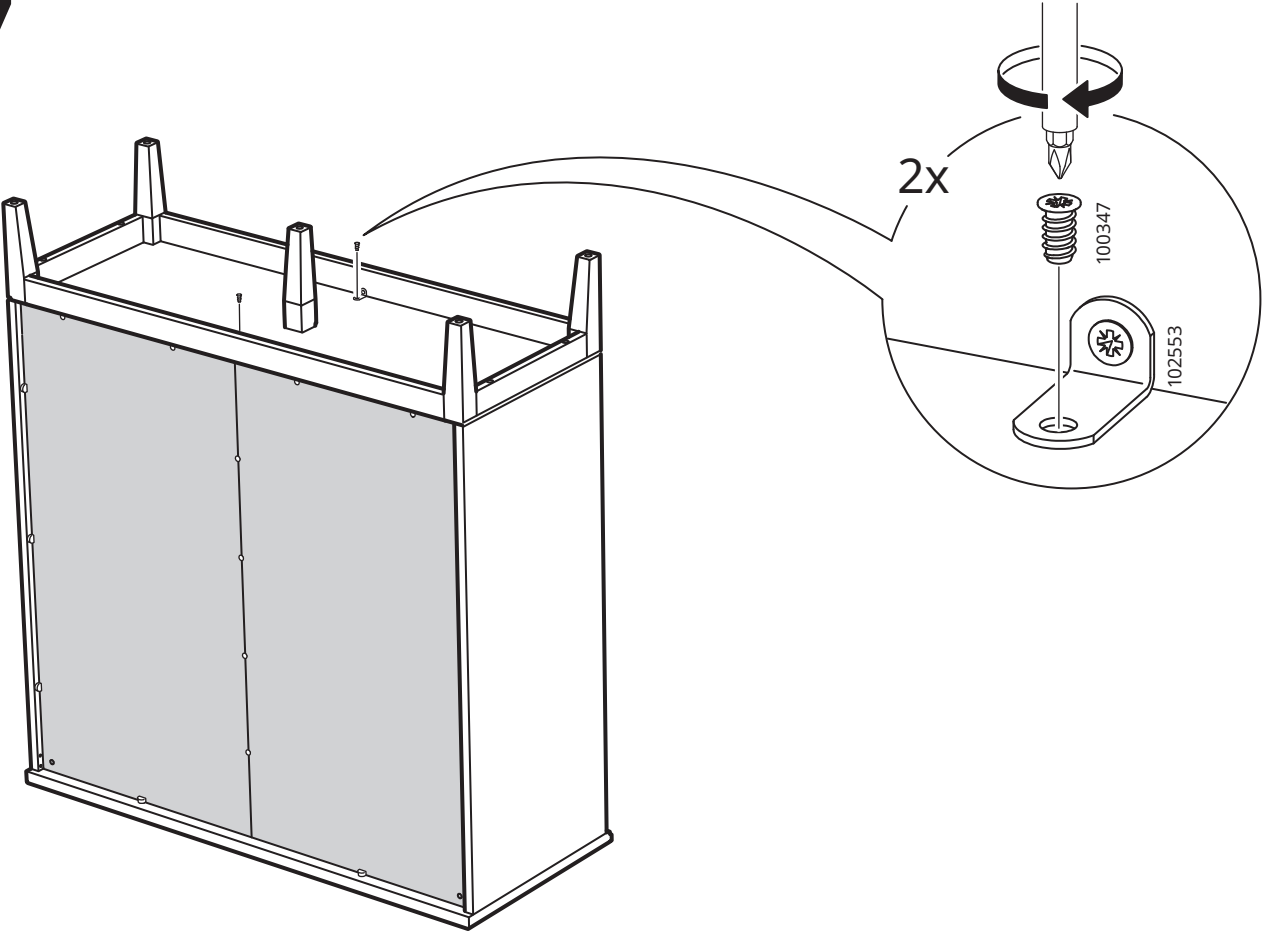 



18

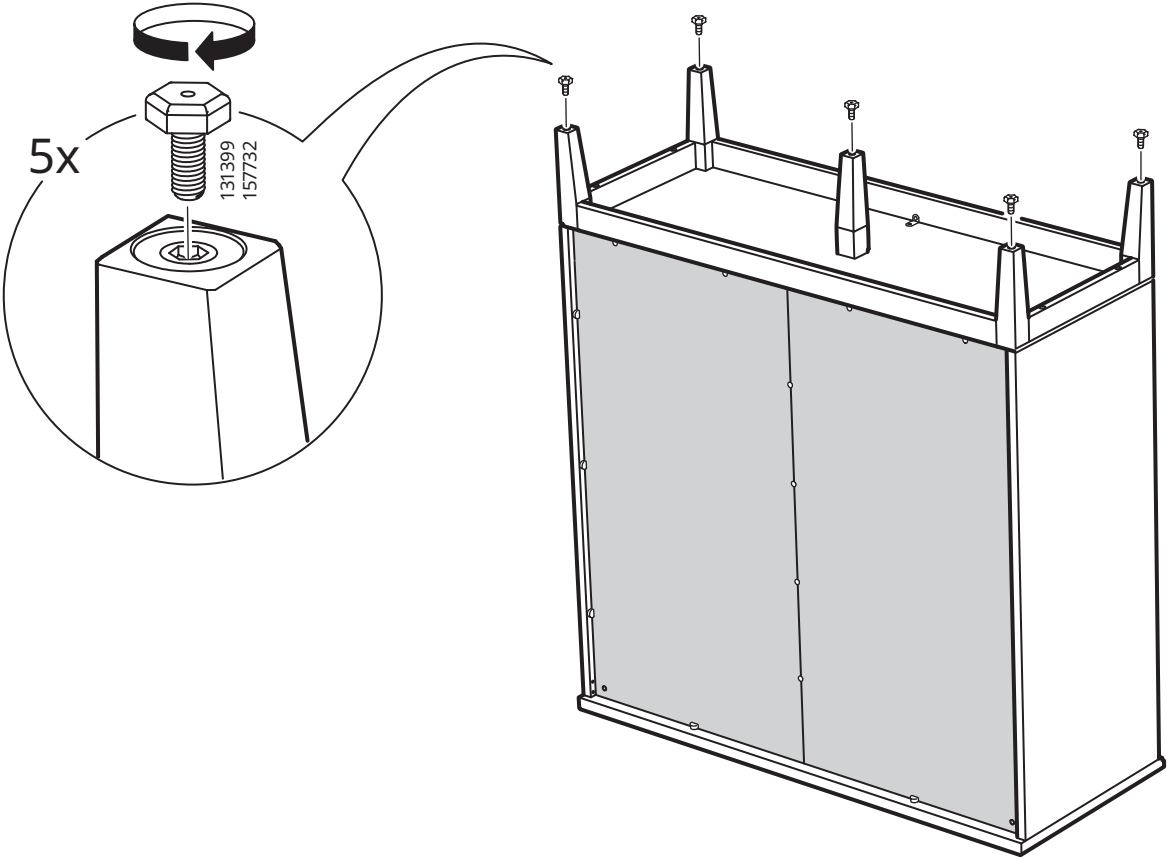 



19

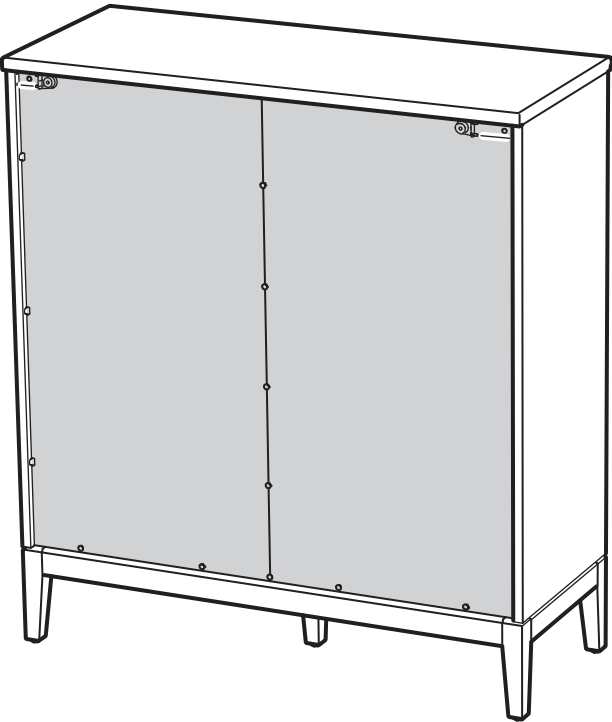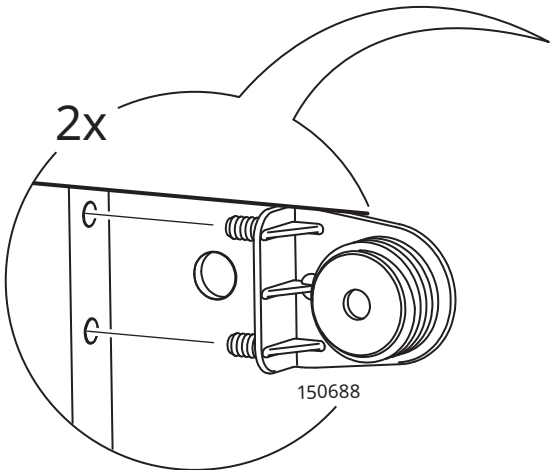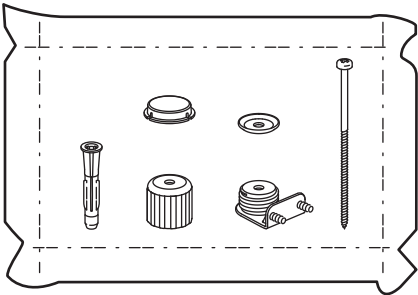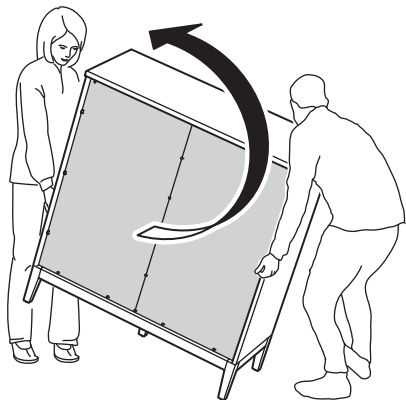    


20

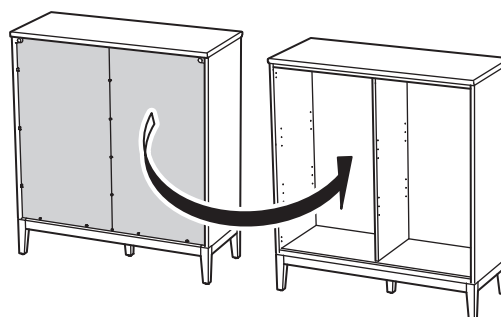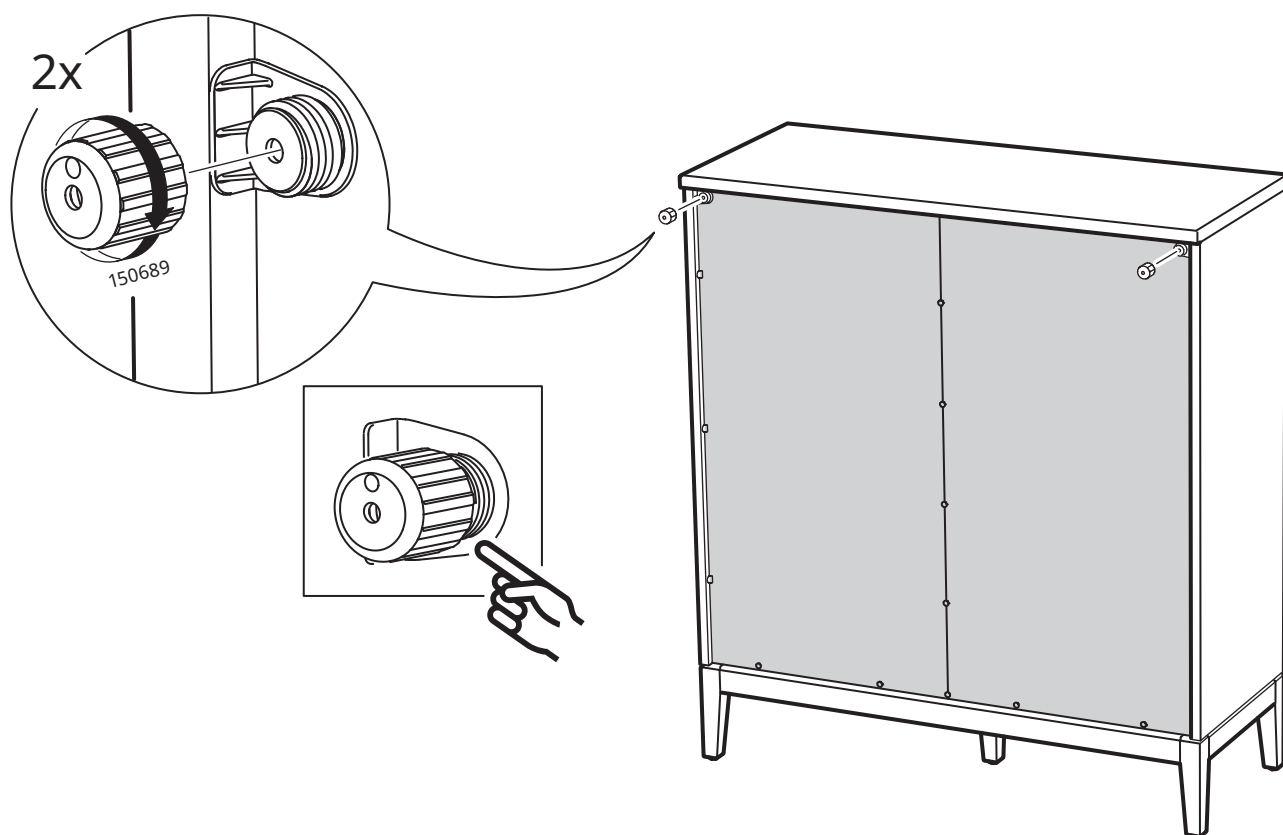  

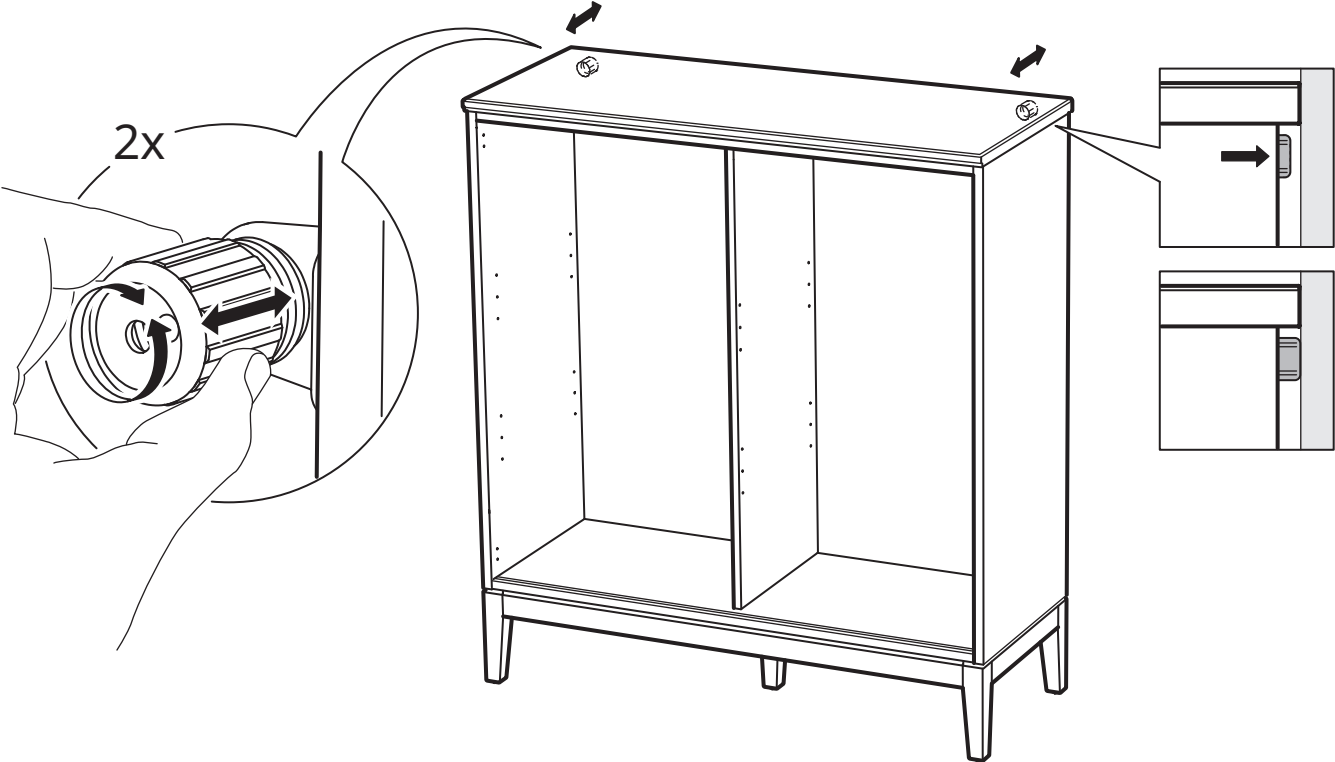 


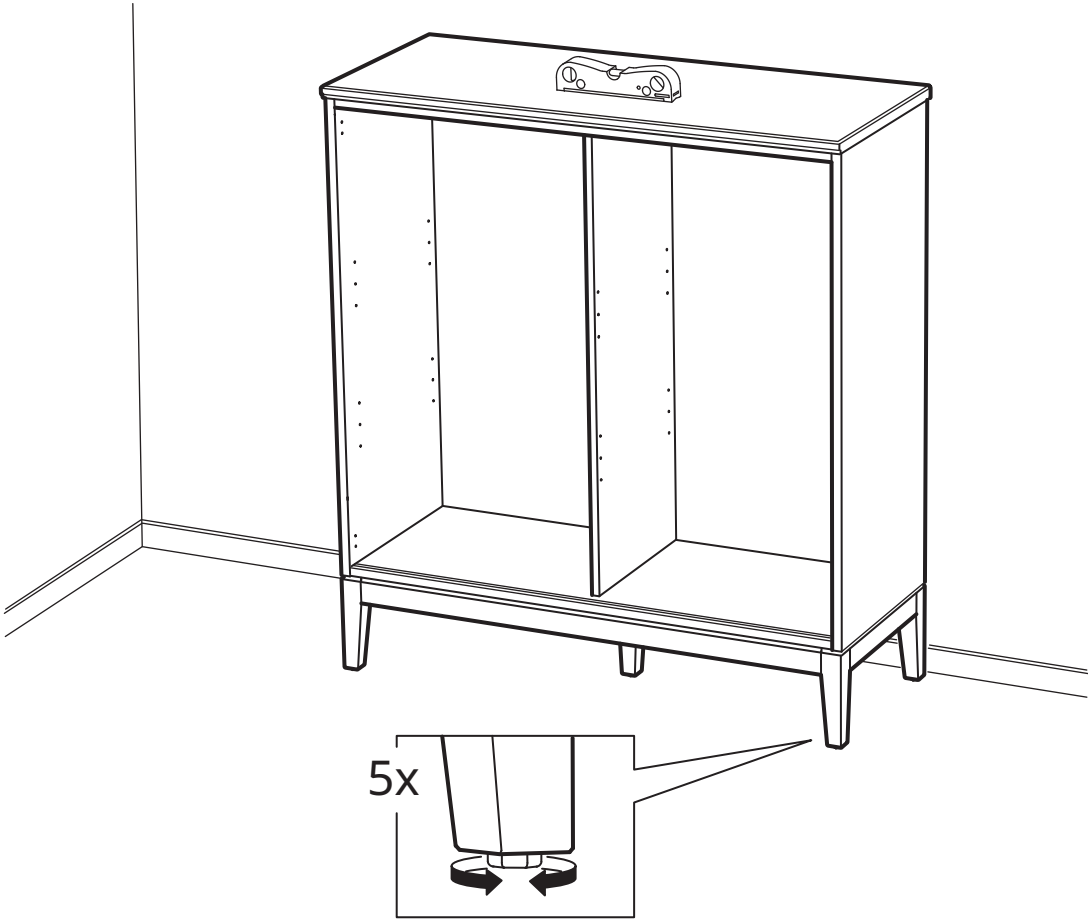 

23

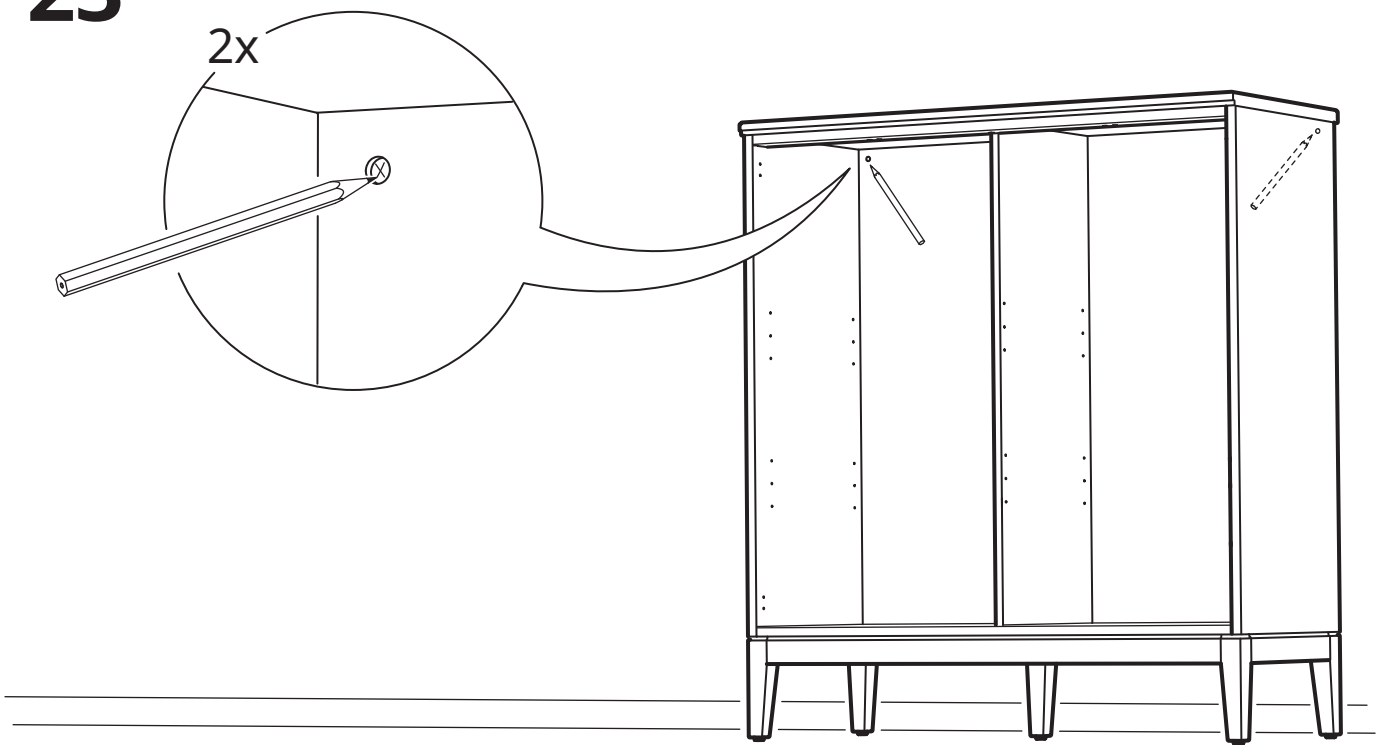 

24

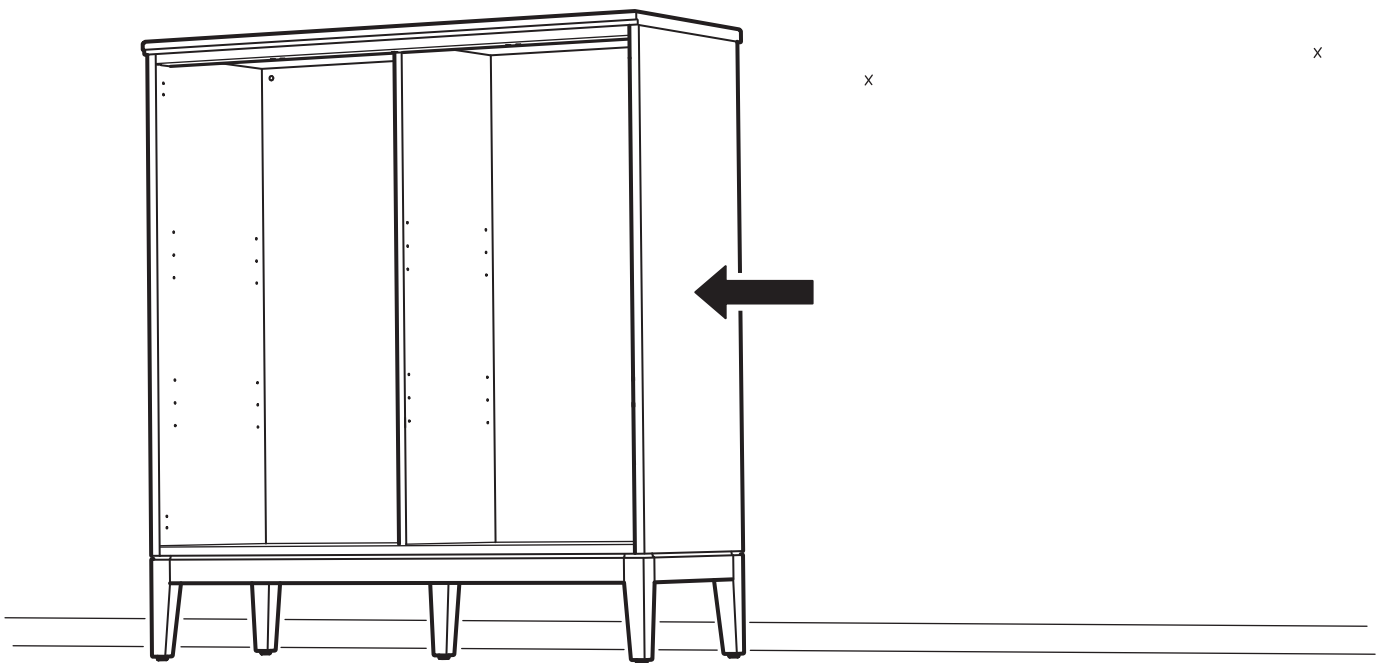 




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

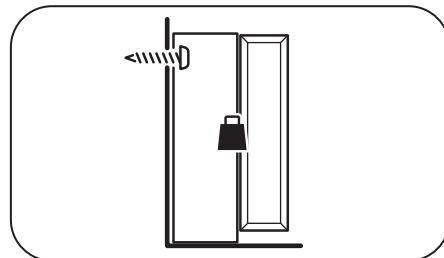


English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.


עברית


הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.

 
A

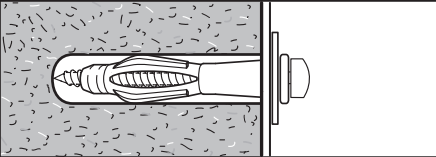


**Ø 8 mm
(5/16")** 

 1 

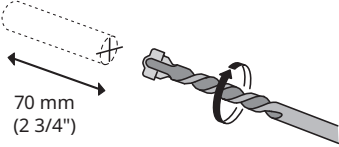 
2  70 mm
(2 3/4")

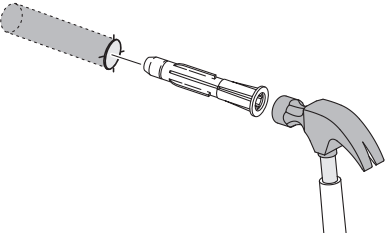 
3 

 
B

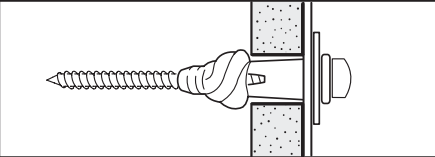


**Ø 8 mm
(5/16")** 

 1 

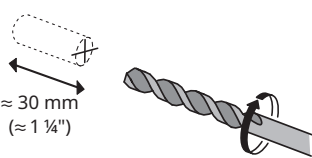 
2  ≈ 30 mm
(≈ 1 1/4")

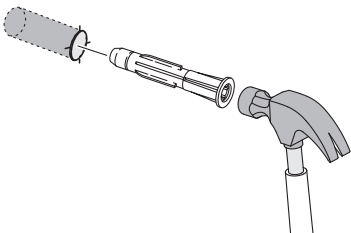 
3 

 C

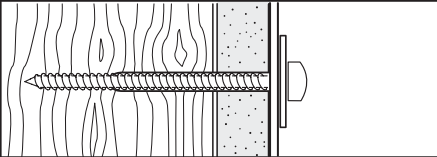


**Ø 3 mm
(1/8")** 

 1 

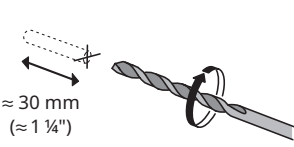 
2  ≈ 30 mm
(≈ 1 1/4")

3 

 
25

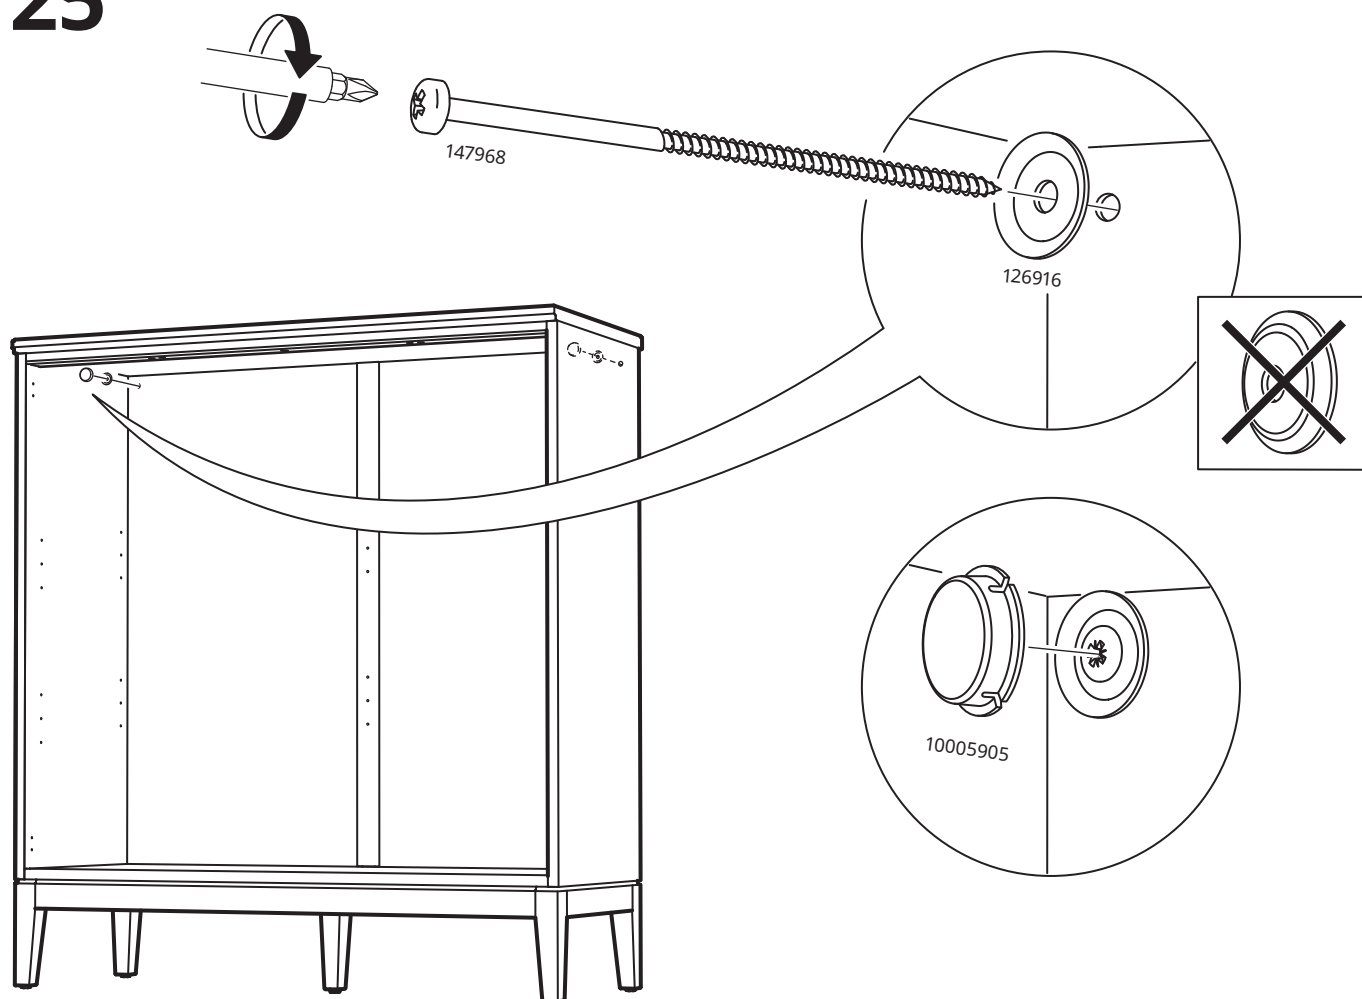


26

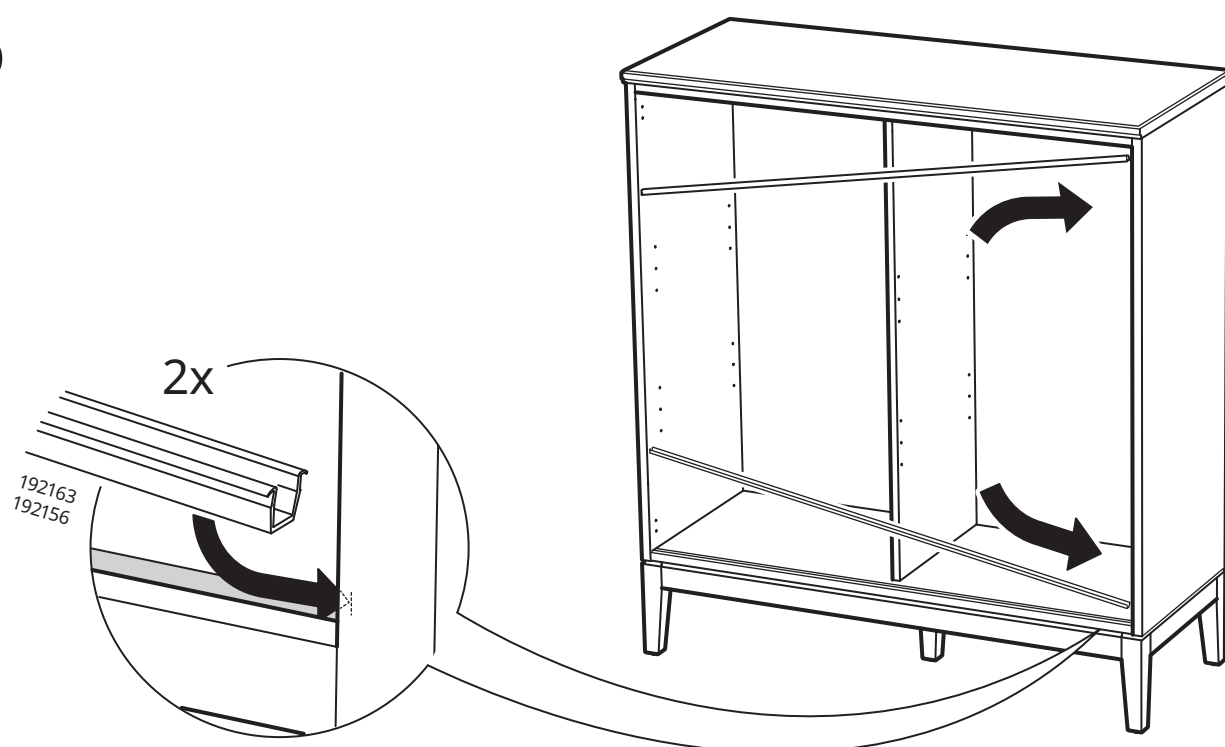 


27


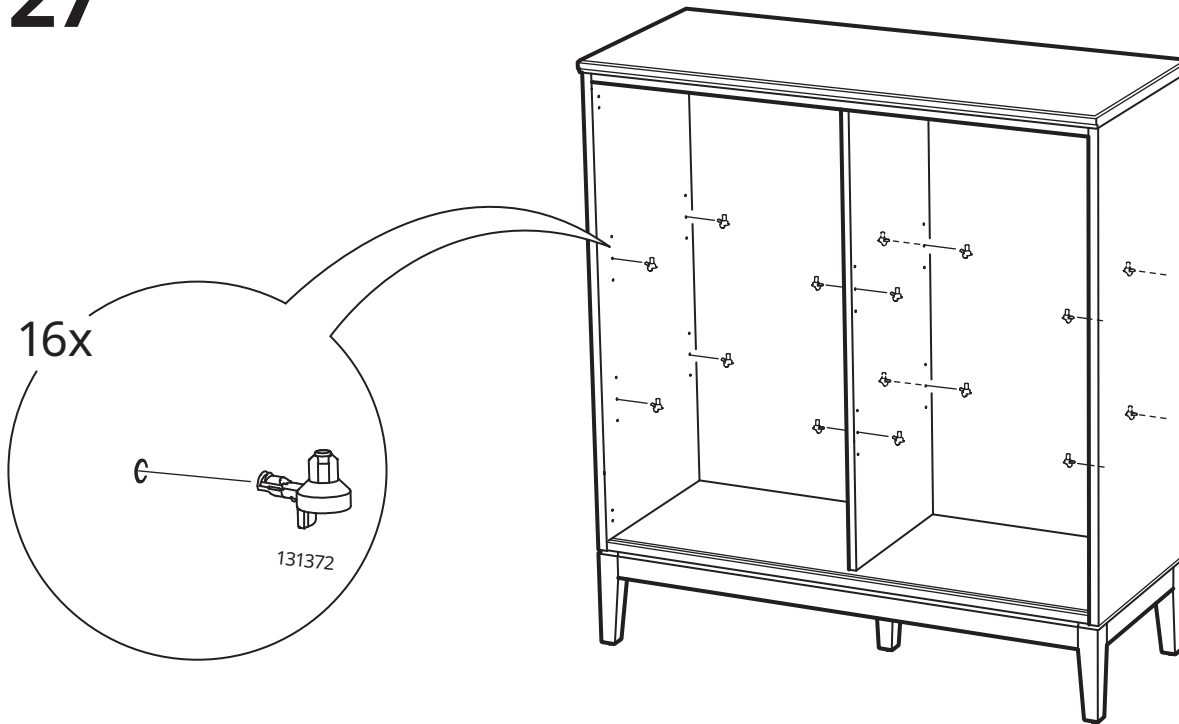 


28

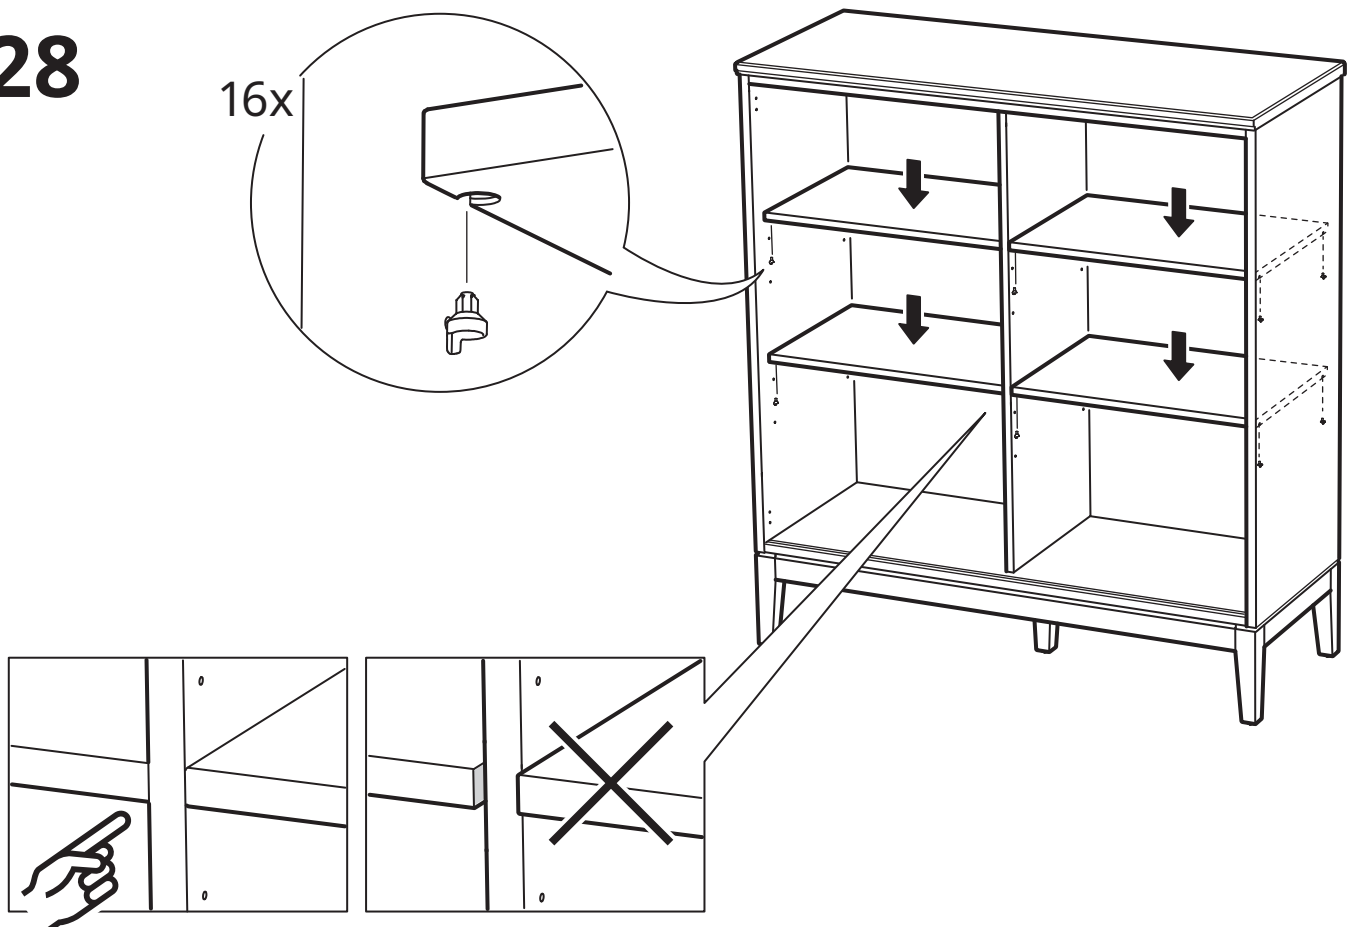 


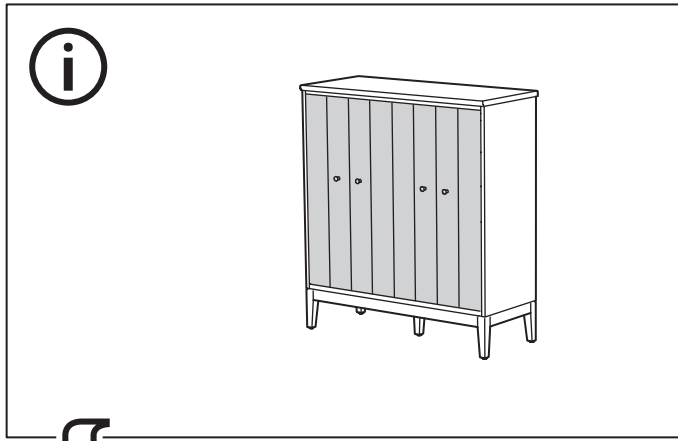 


29

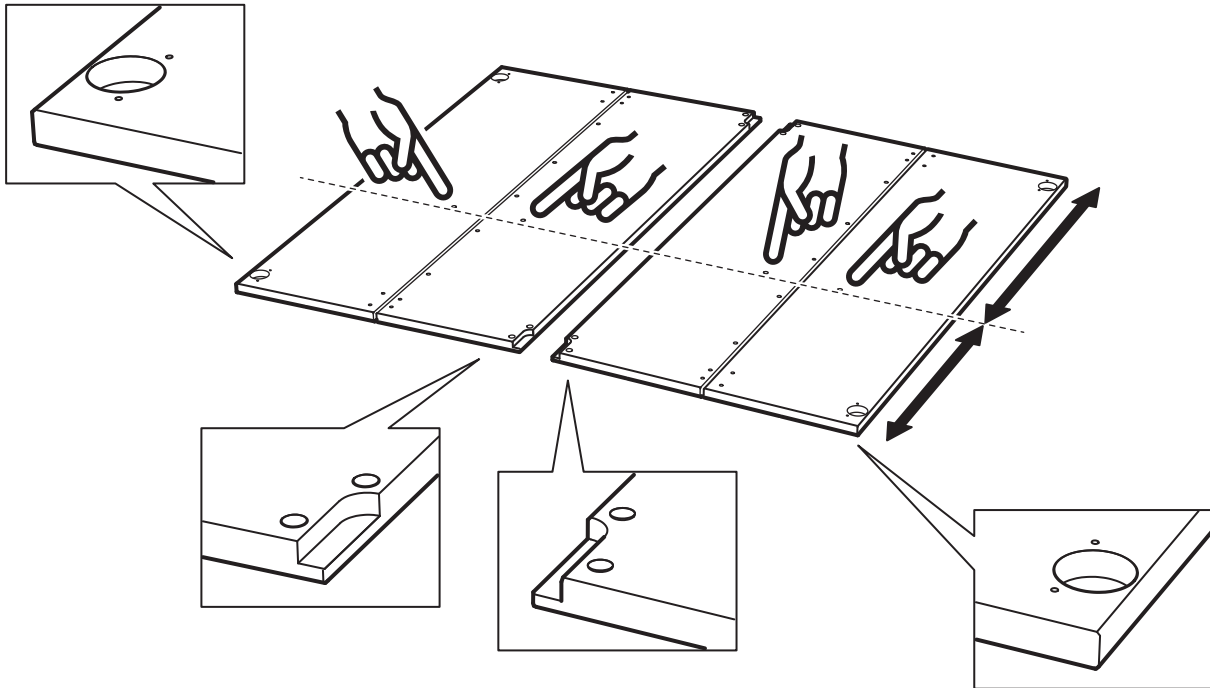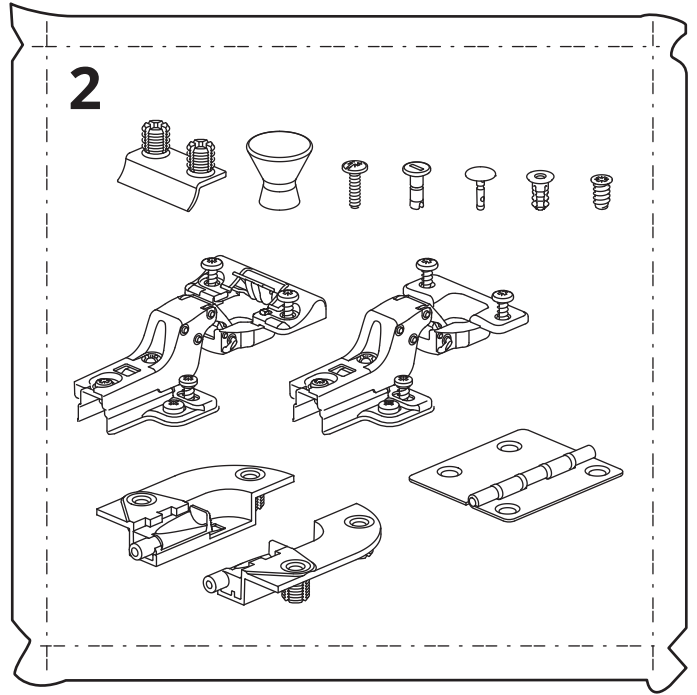  


30

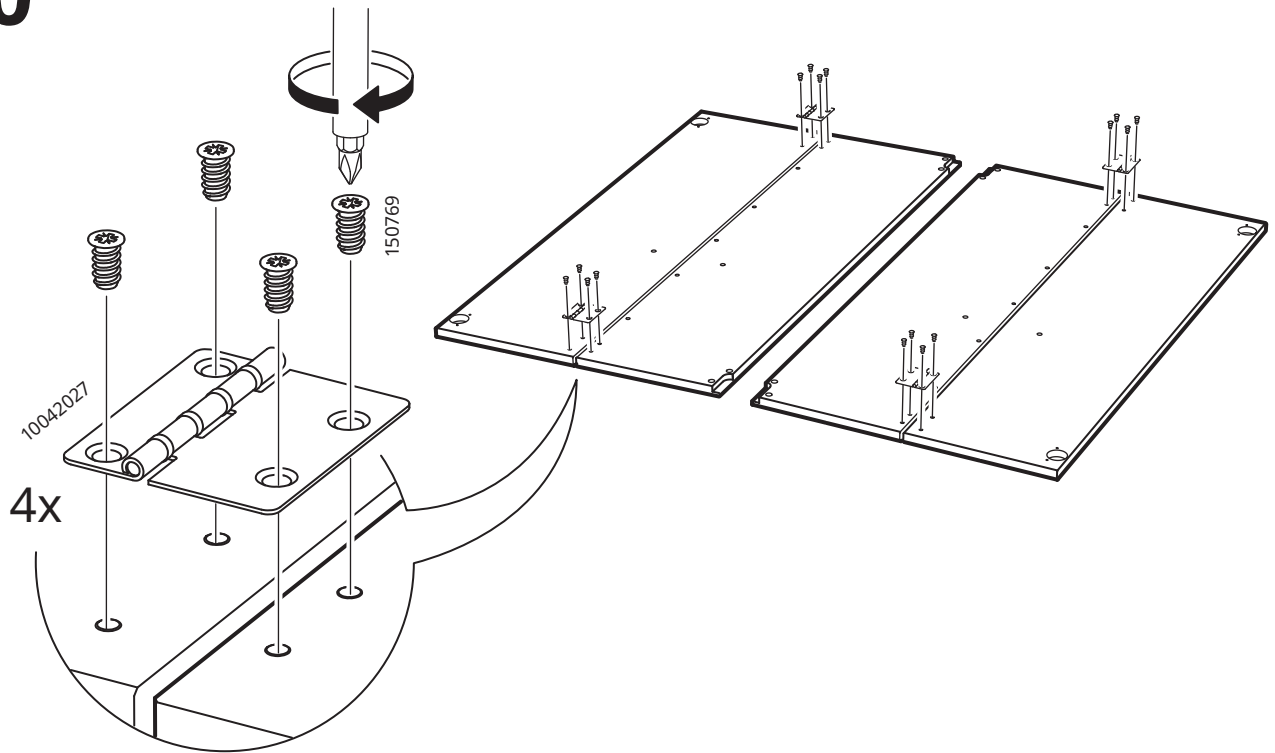 


31

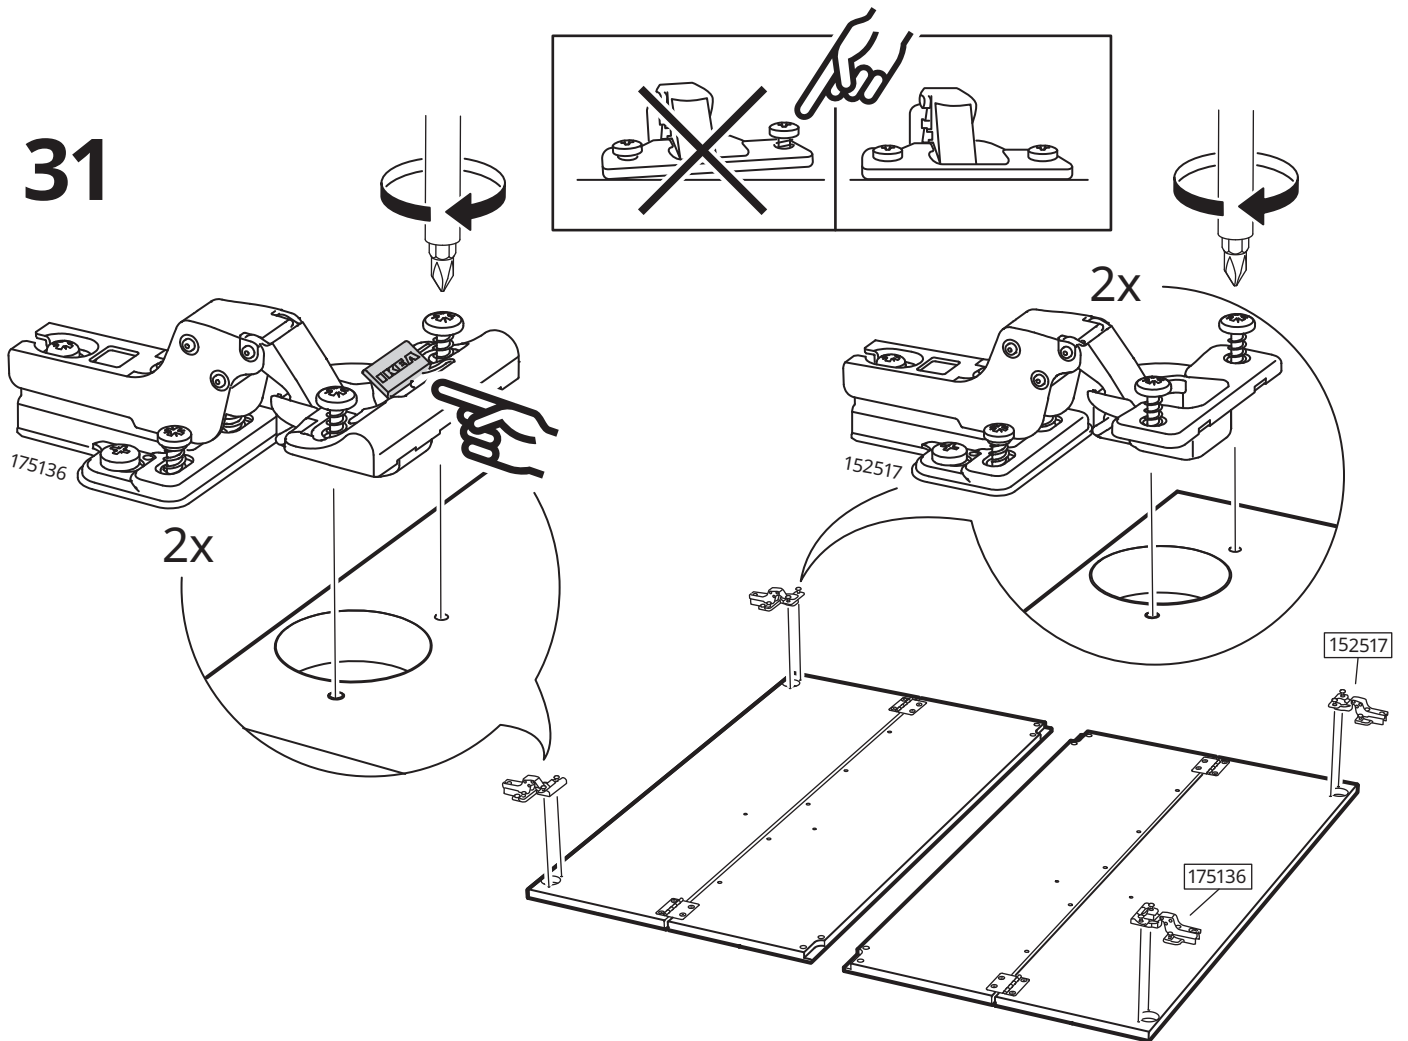 


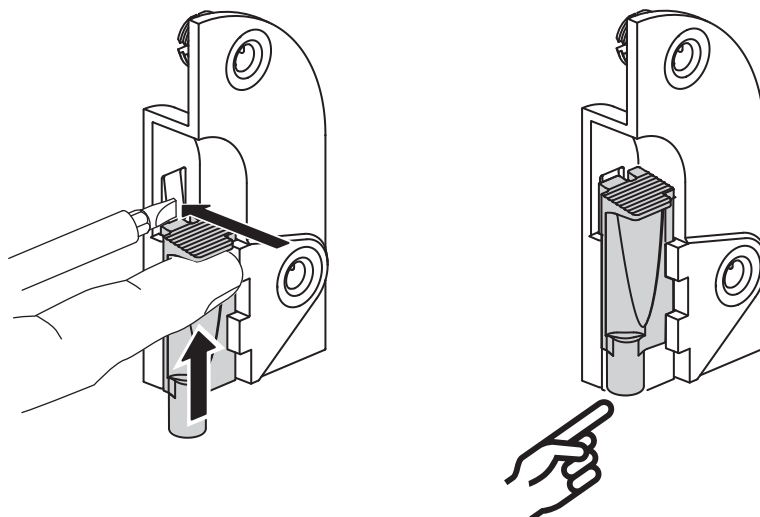 


32

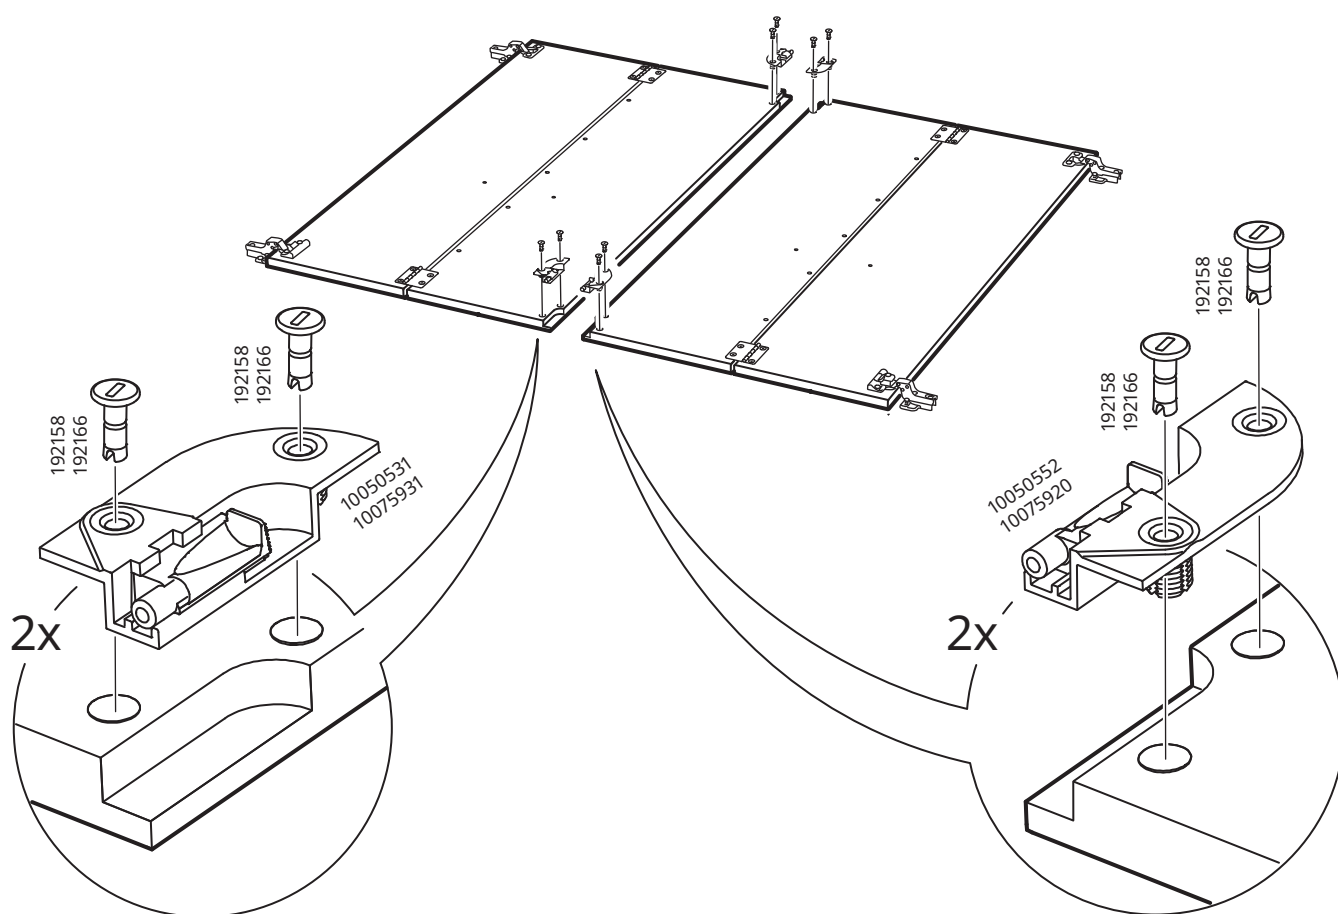 


33

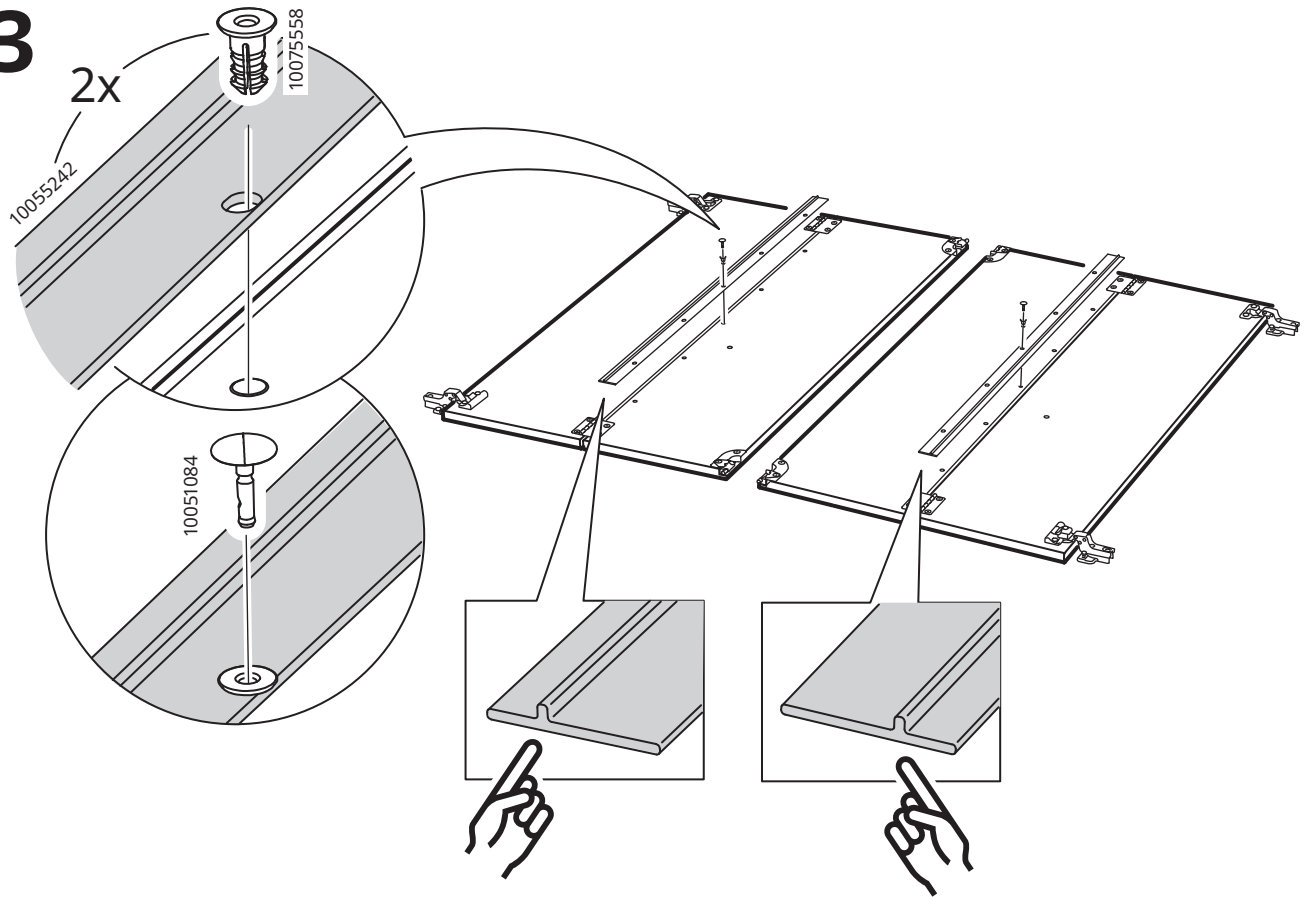 


34

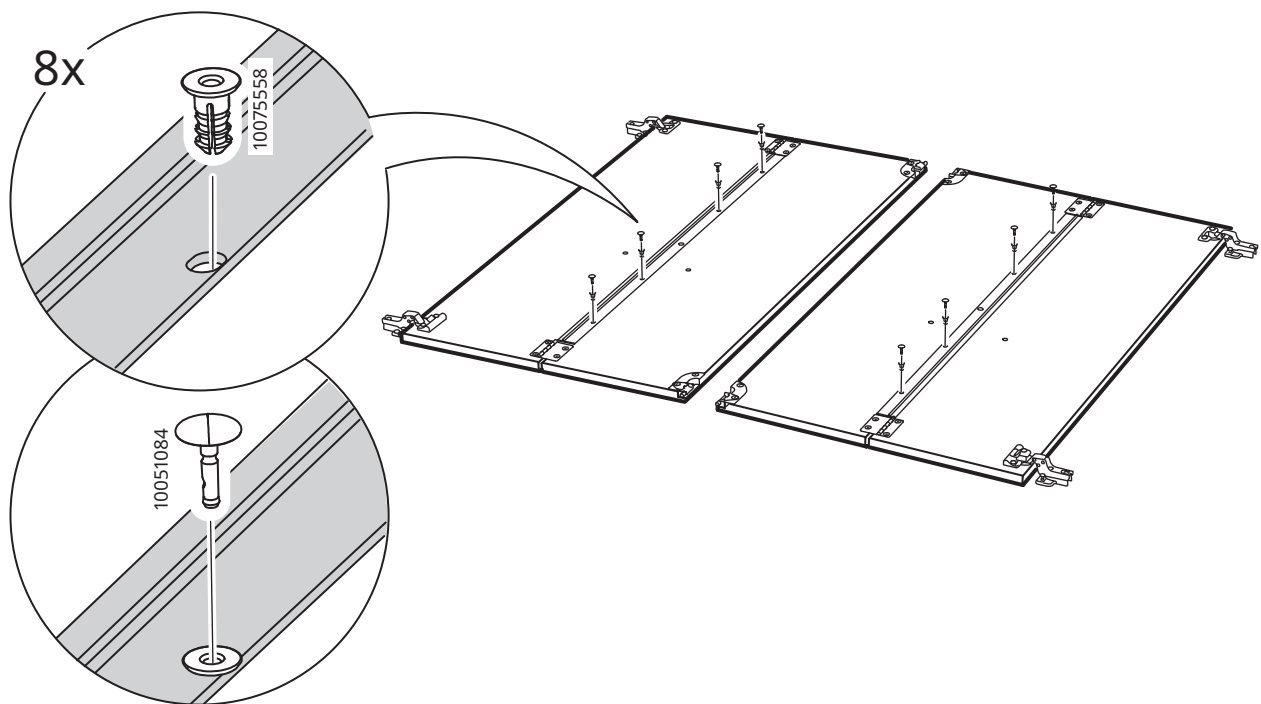 

35

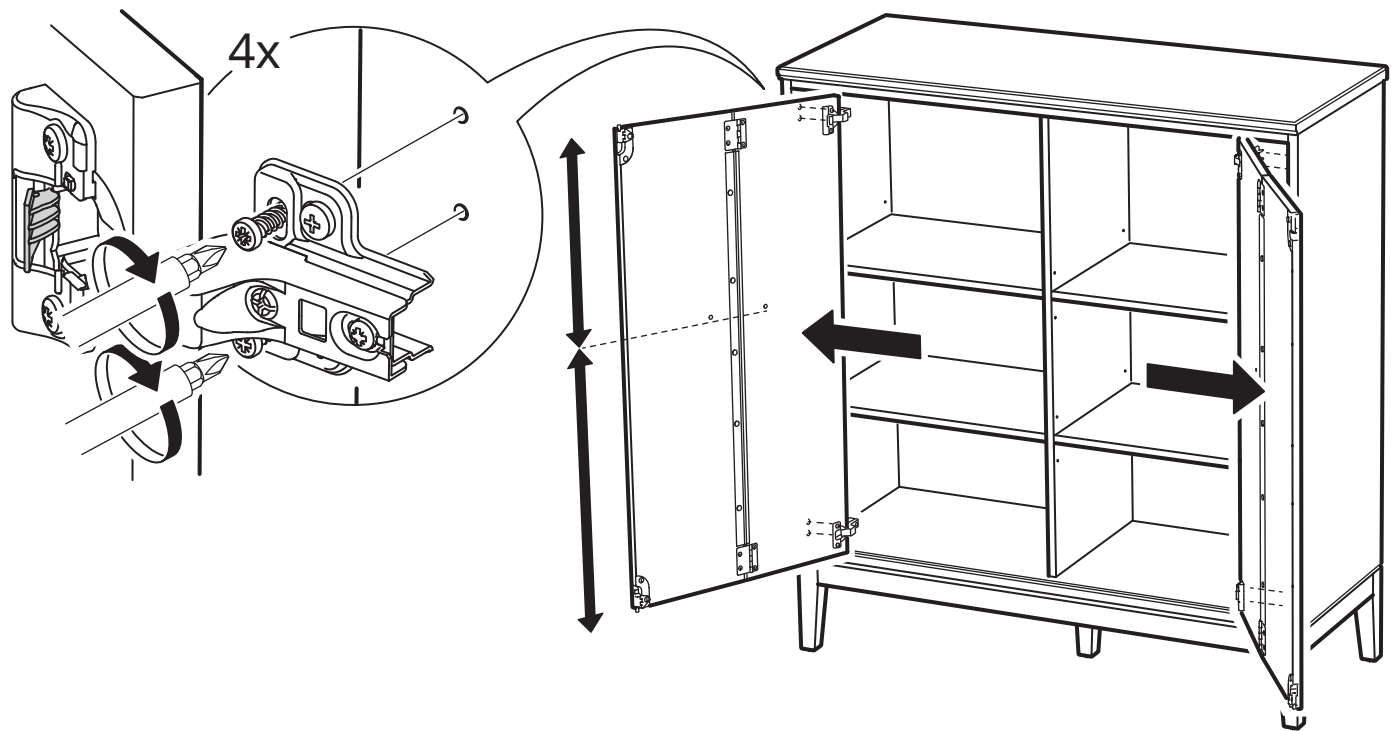 

36

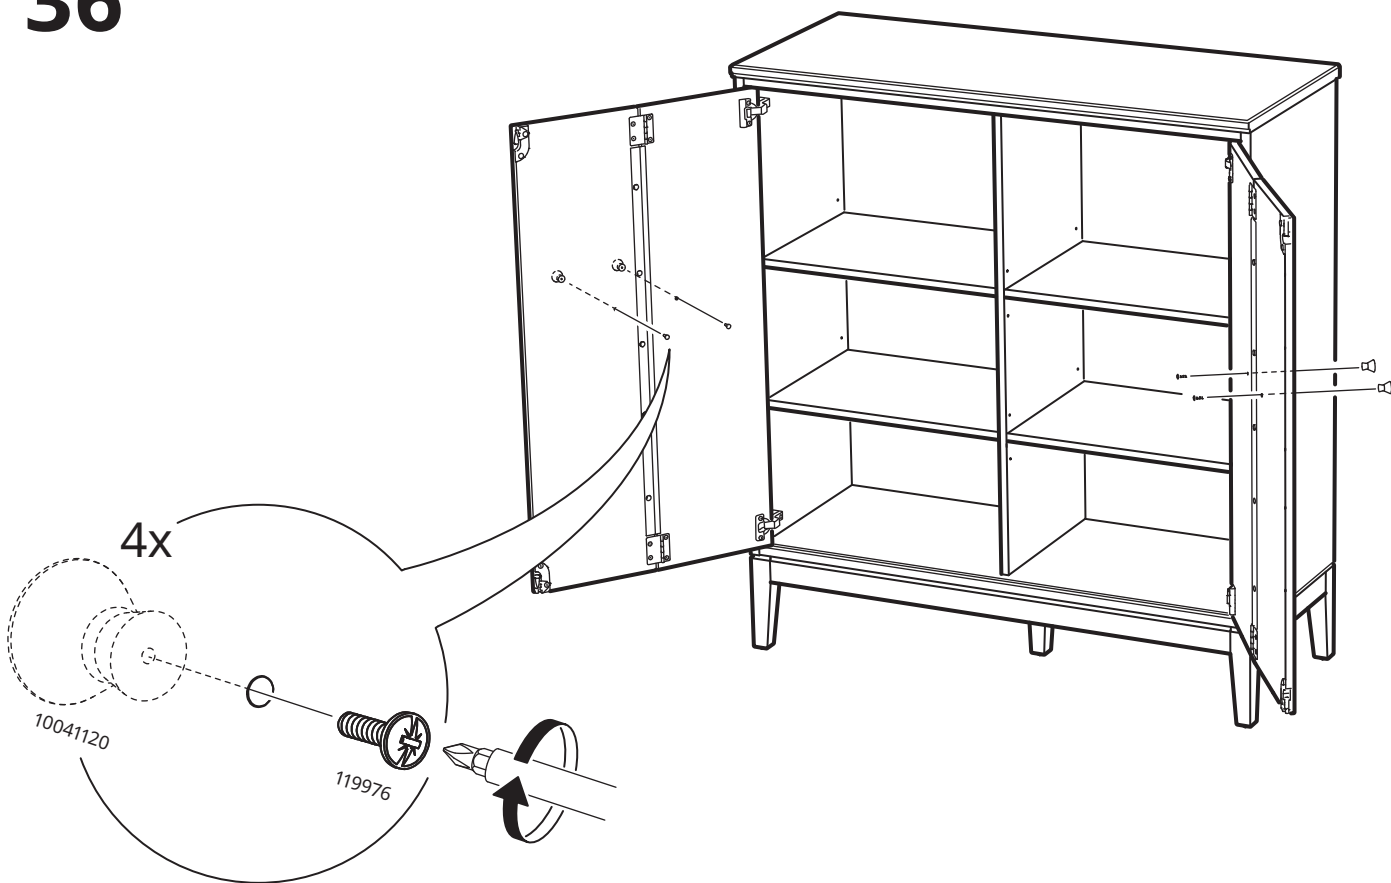 

37

