 


# IDANÄS



Design and Quality  
IKEA of Sweden

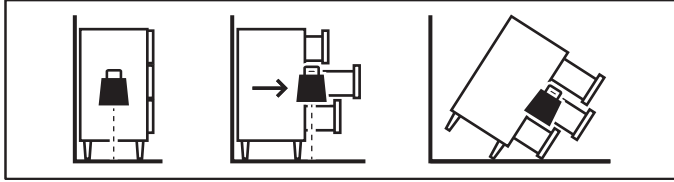

English

## WARNING

**Serious or fatal crushing injuries can occur from furniture tip-over.**

**ALWAYS secure this furniture to the wall using tip-over restraints.**

**To further reduce the risk of serious injury and death from tip-overs:**

- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, or shelves.

עברית

## אזהרה

**נפילת הרהיט עלולה לגרום לפגיעה גופנית חמורה או קטלנית.**

 
**יש לקבע את הרהיט לקיר באמצעות אבזרי הקיבוע המצורפים.**

 
**על-מנת למזער את סכנת הפגיעה הגופנית או המוות מנפילת רהיטים:**

 
מקמו את הפריטים הכבדים ביותר במגירה התחתונה.

 
 
 
 
הימנעו מלהניח טלוויזיות או פריטים כבדים אחרים על מוצר זה.

 
 
 
 
אין לאפשר לילדים לטפס על המגירות, הדלתות או המדפים.

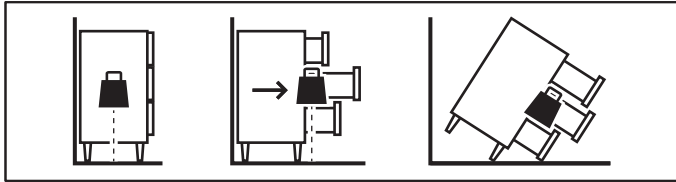

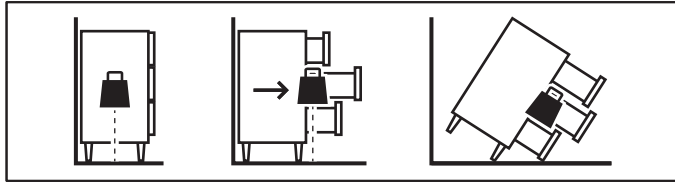

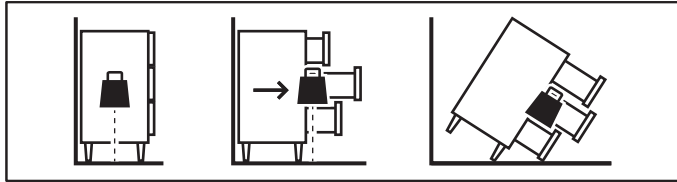

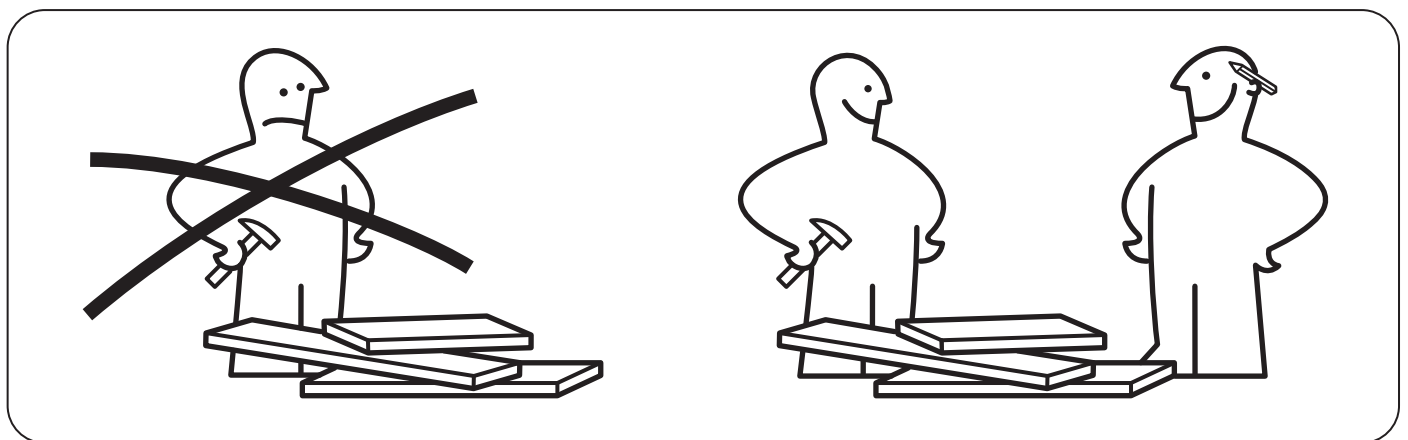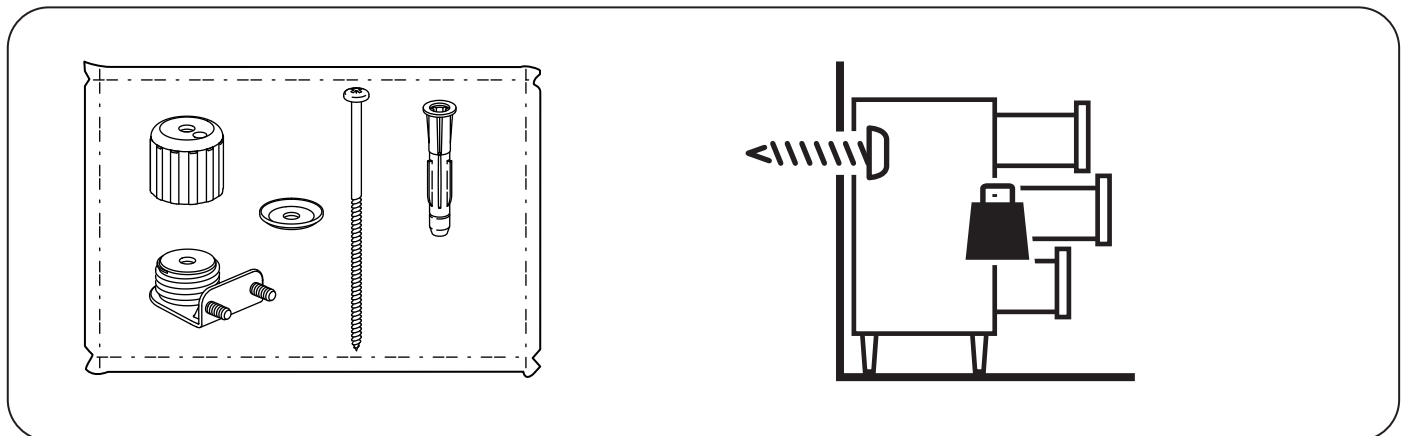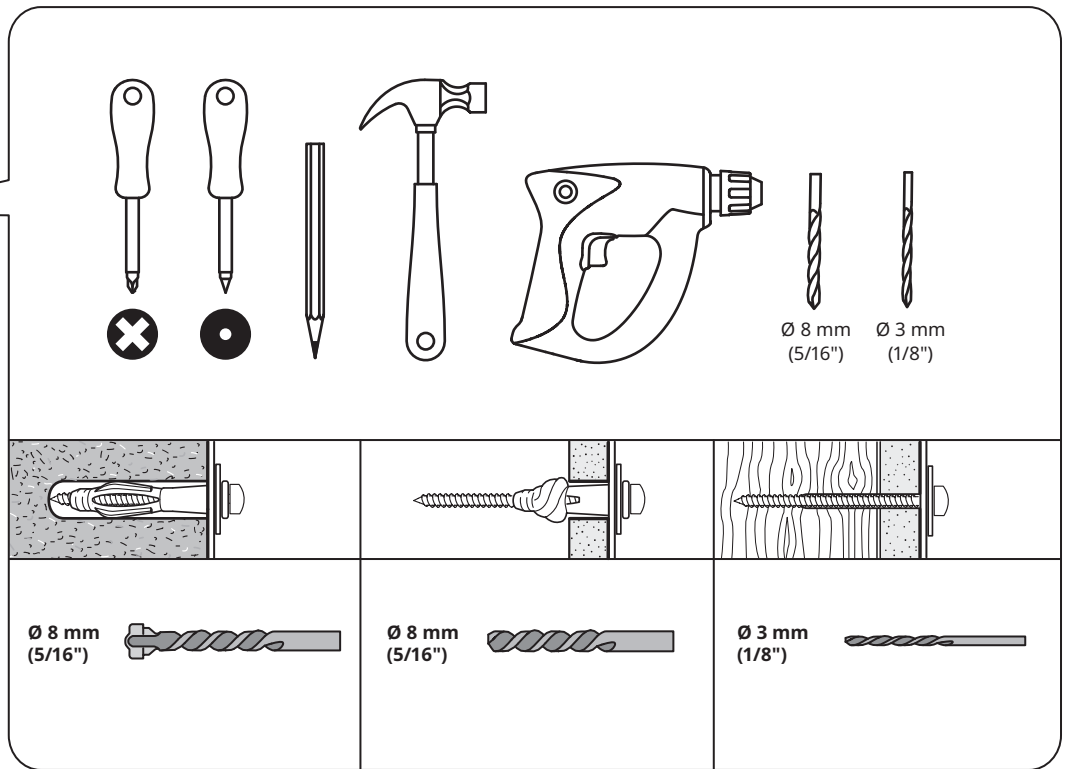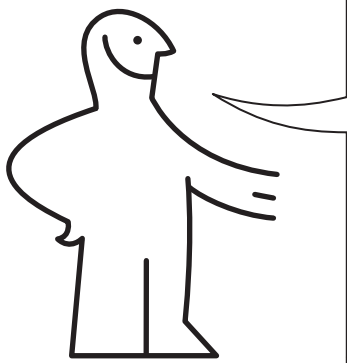

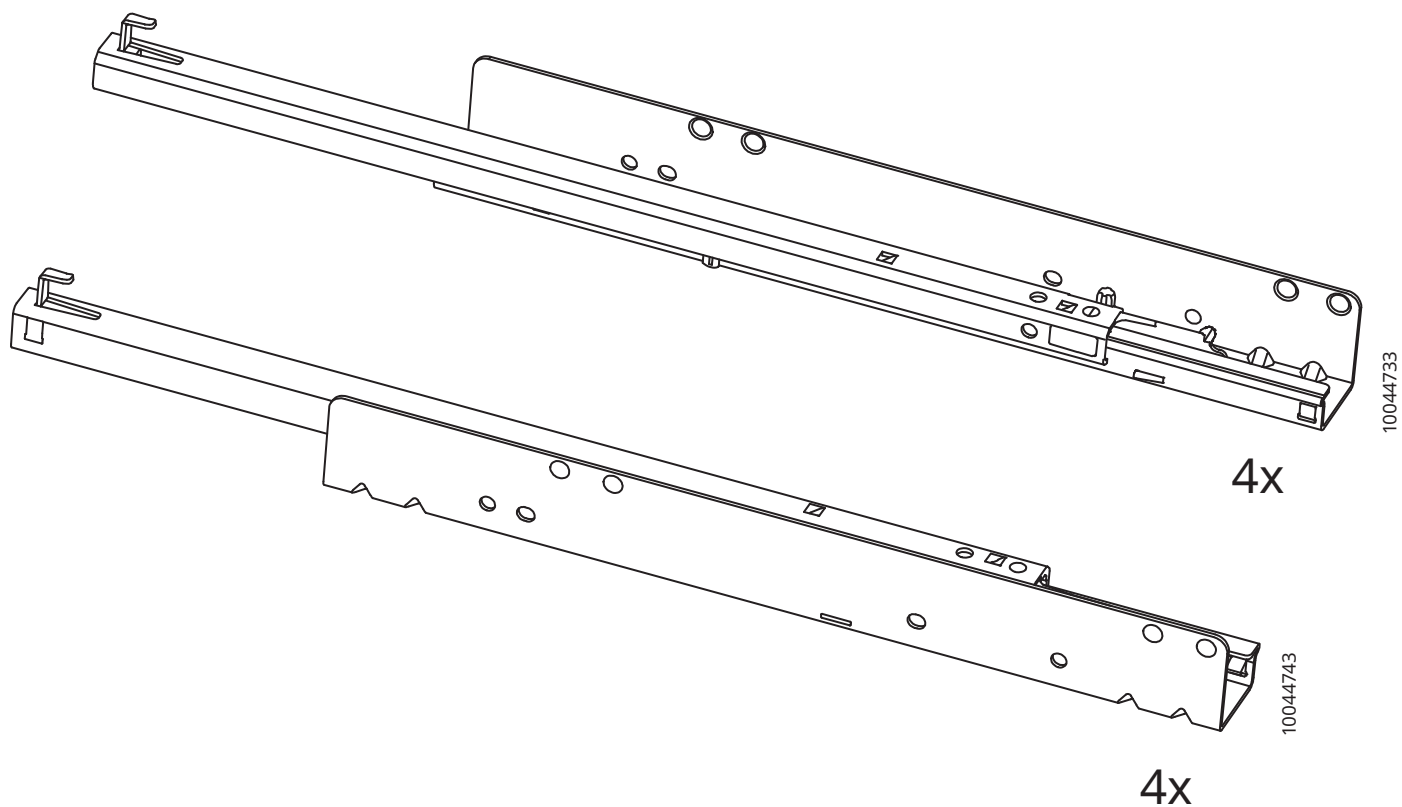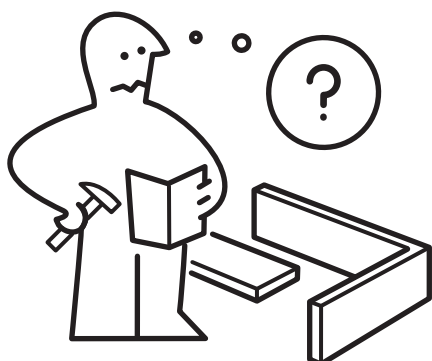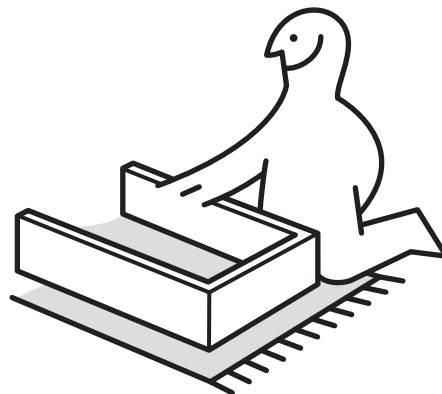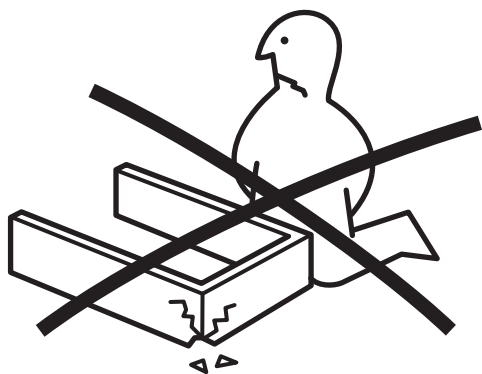

# 1



100347

16x



101345

12x



118331  
112996

12x



 
119253  
118137

12x



10

# 2

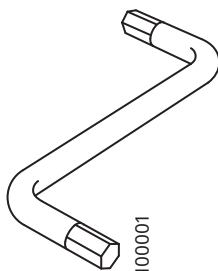

100001

1x



 
100347

4x




101352

4x

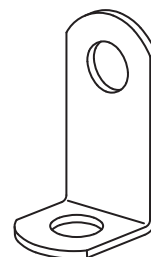


102553

 2x

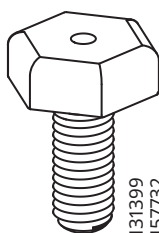

131399  
157732

 4x

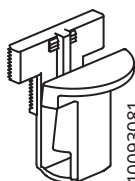


10093081

8x




10093082

 8x




10093458

 4x



151706

 4x



151705

4x




17

# 3



 
10041120

8x

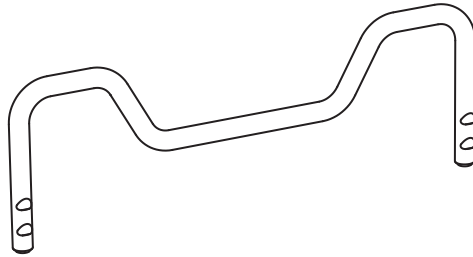


10047244

 12x







119976

 8x

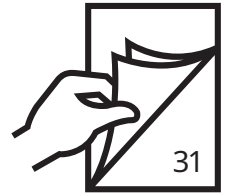


31

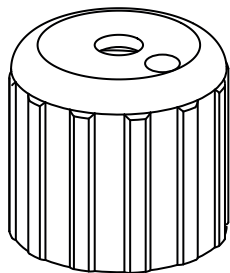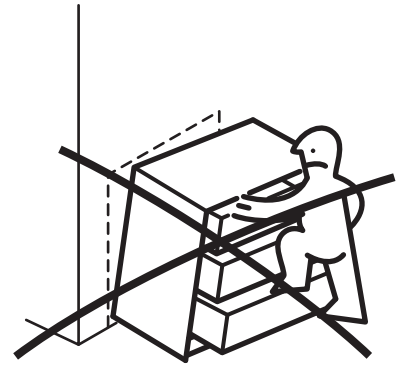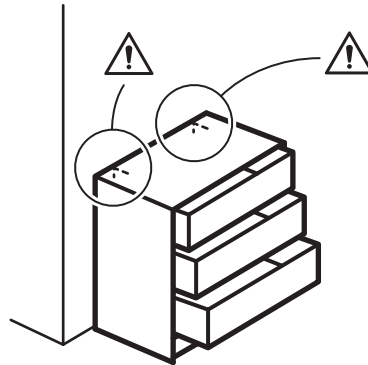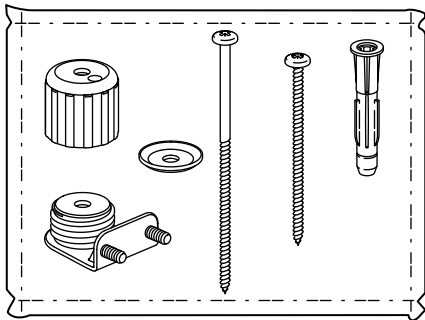    


150689

 2x




126916

 2x

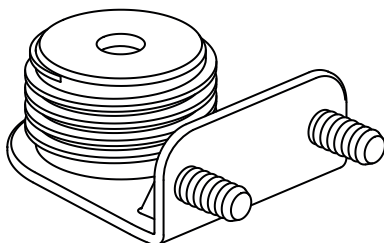


150688

 2x




147968

 2x



121714


 
2x

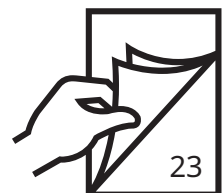


23

363577


 
 
1

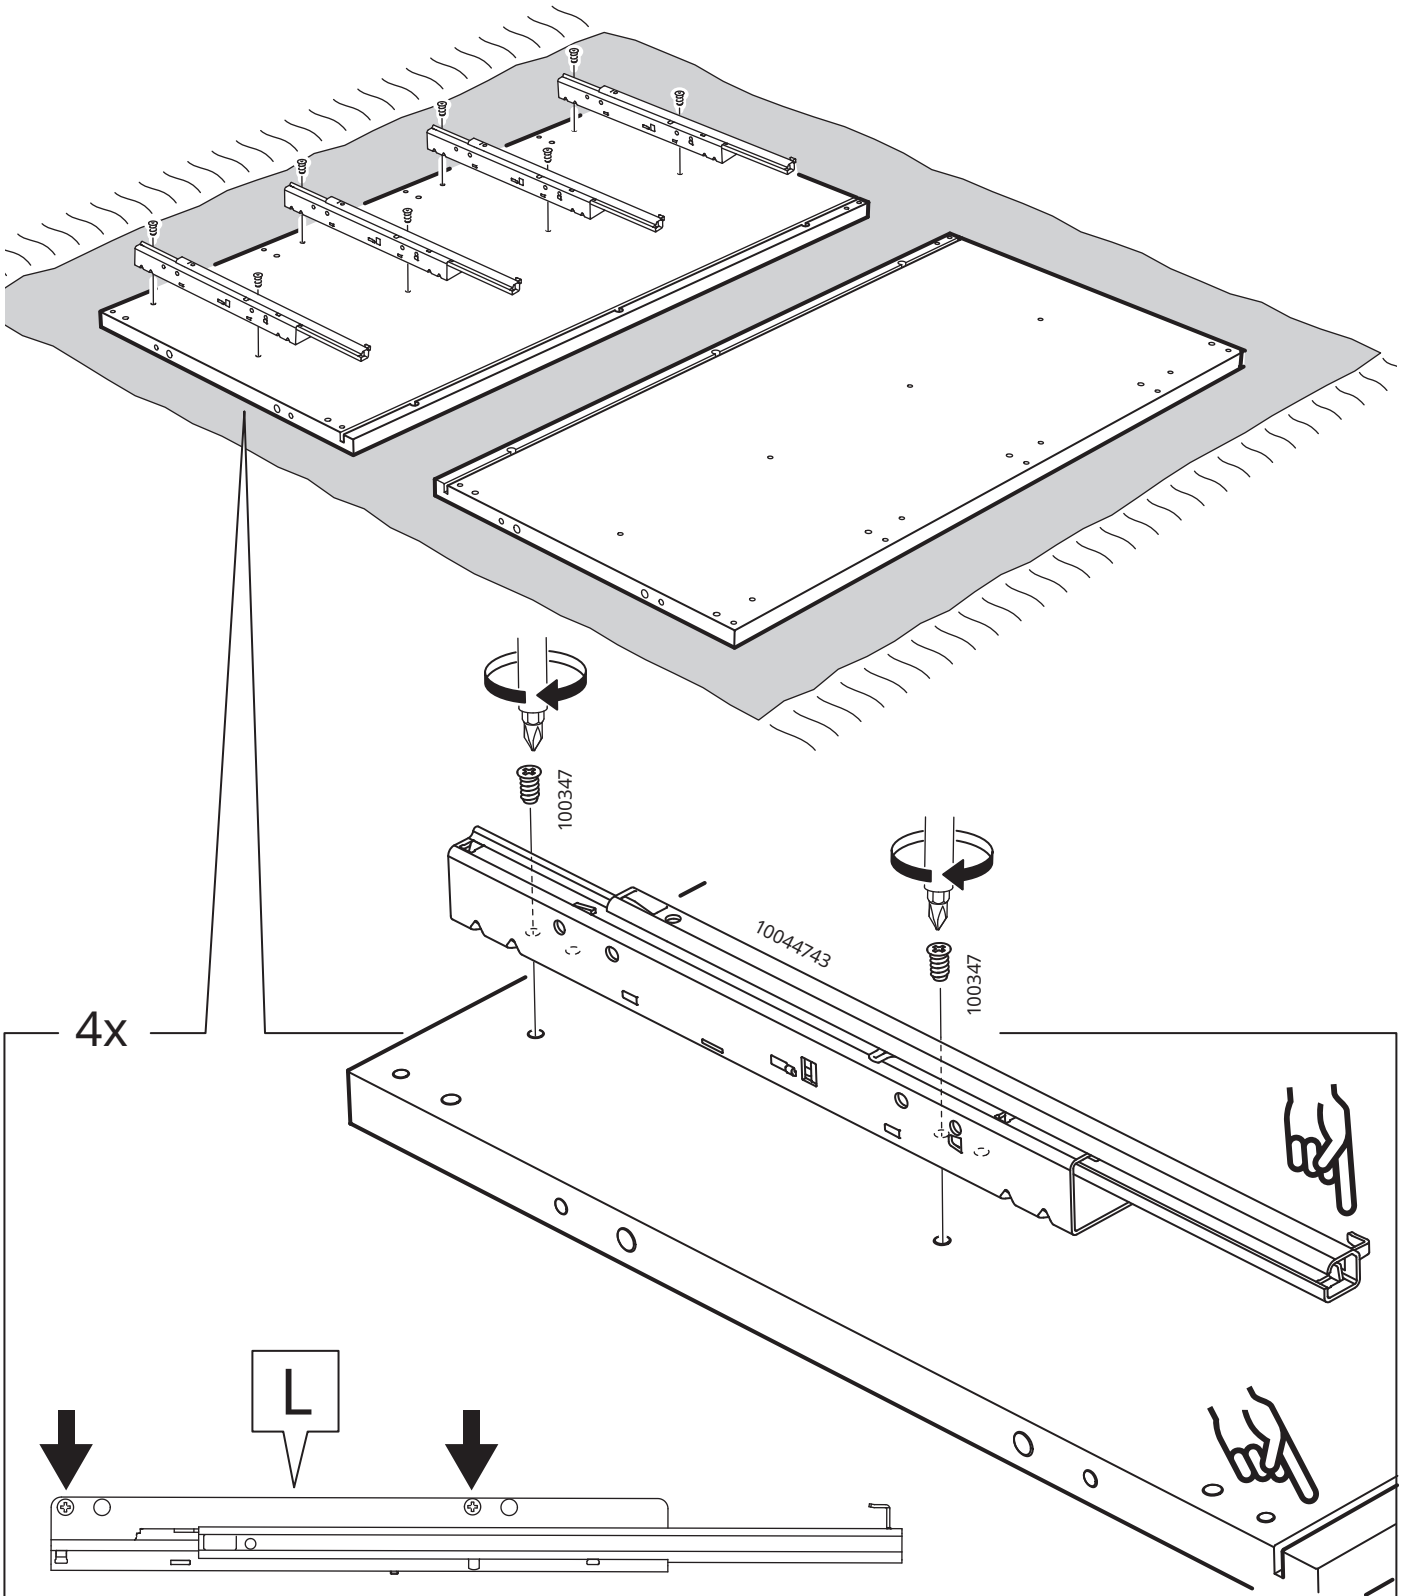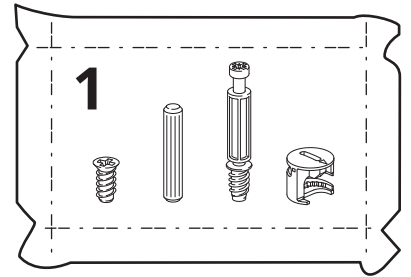

# 2

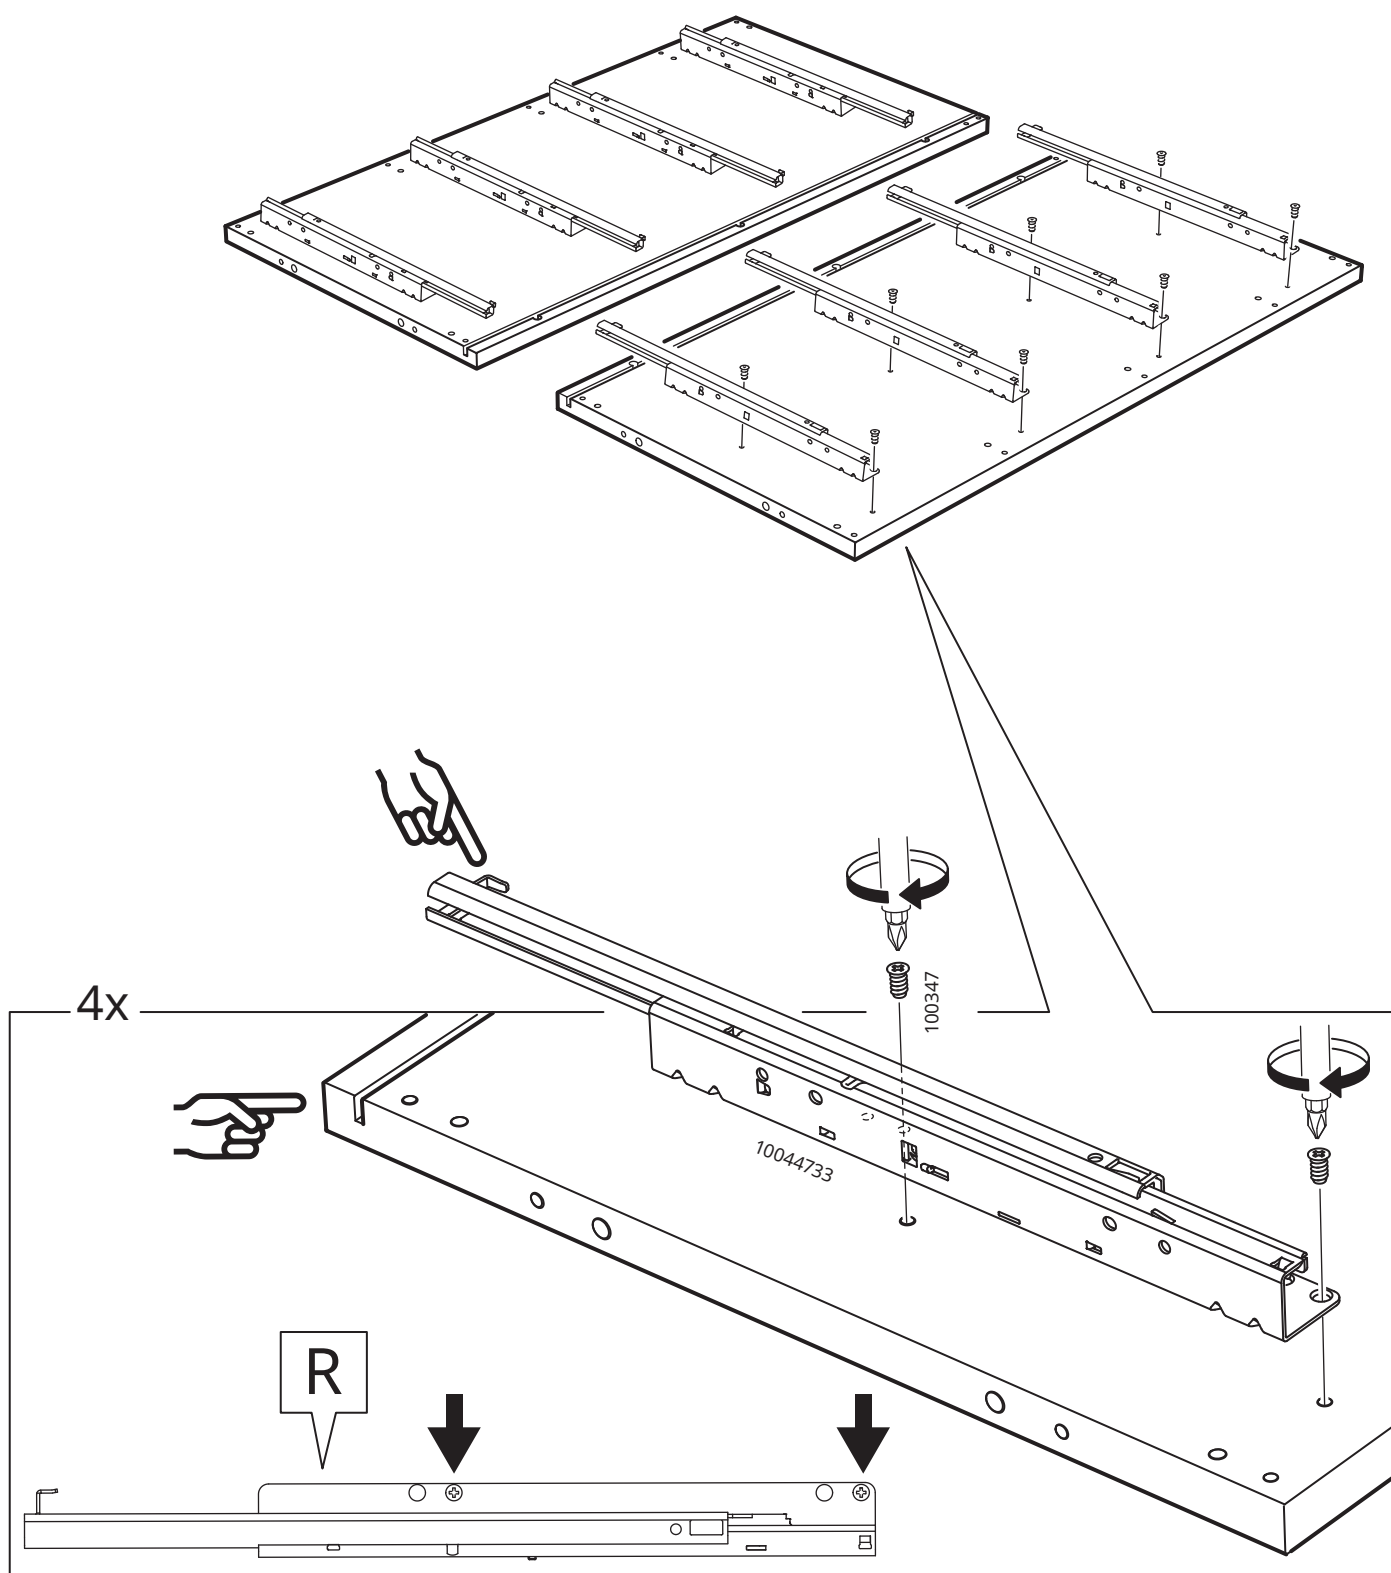 


# 3

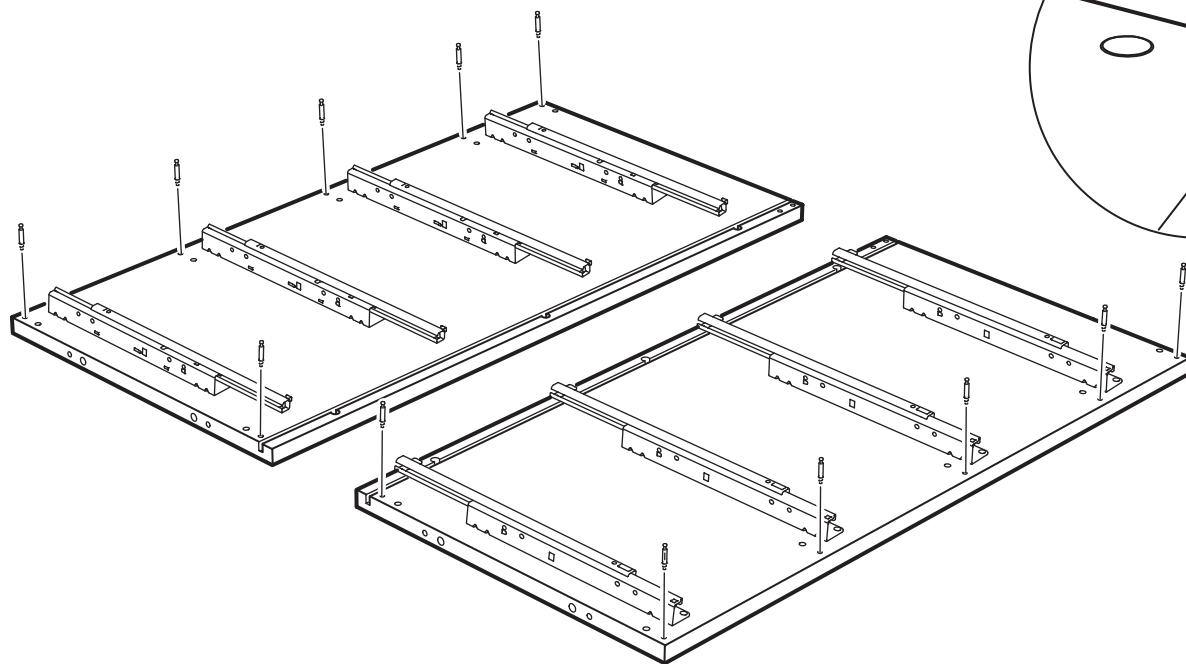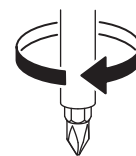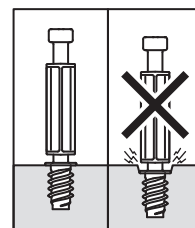   

12x



118331  
112996

# 4

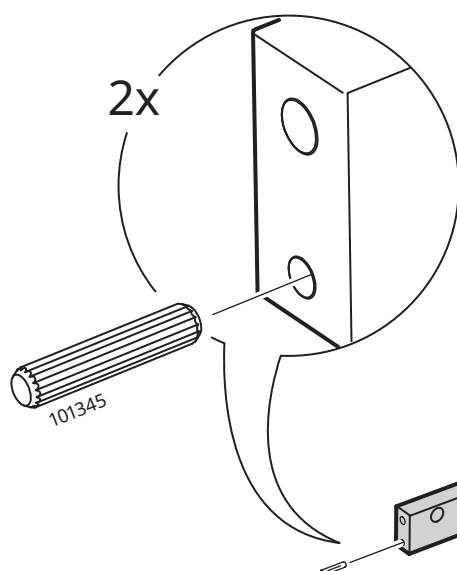 


2x

  
101345

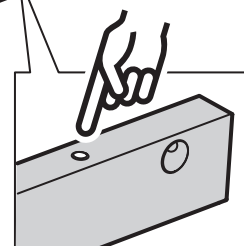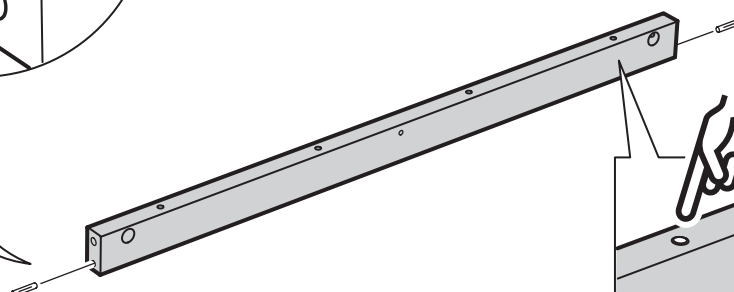


5

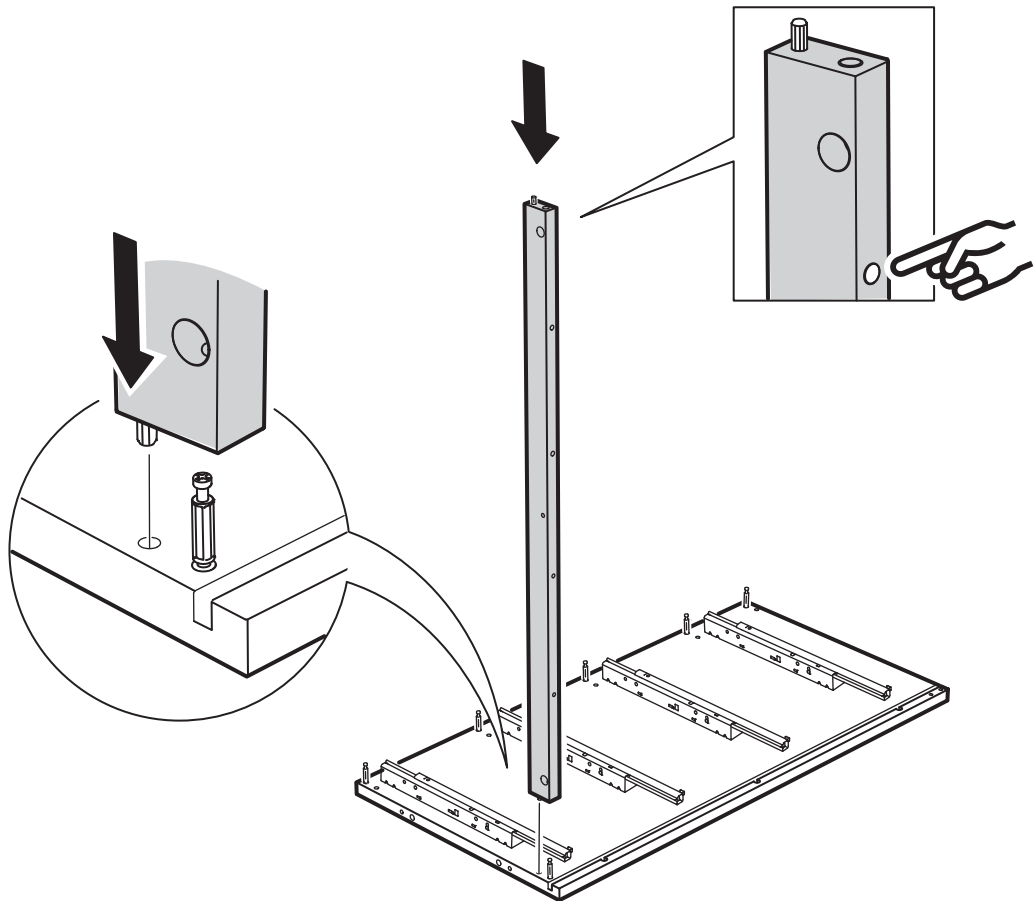 


6

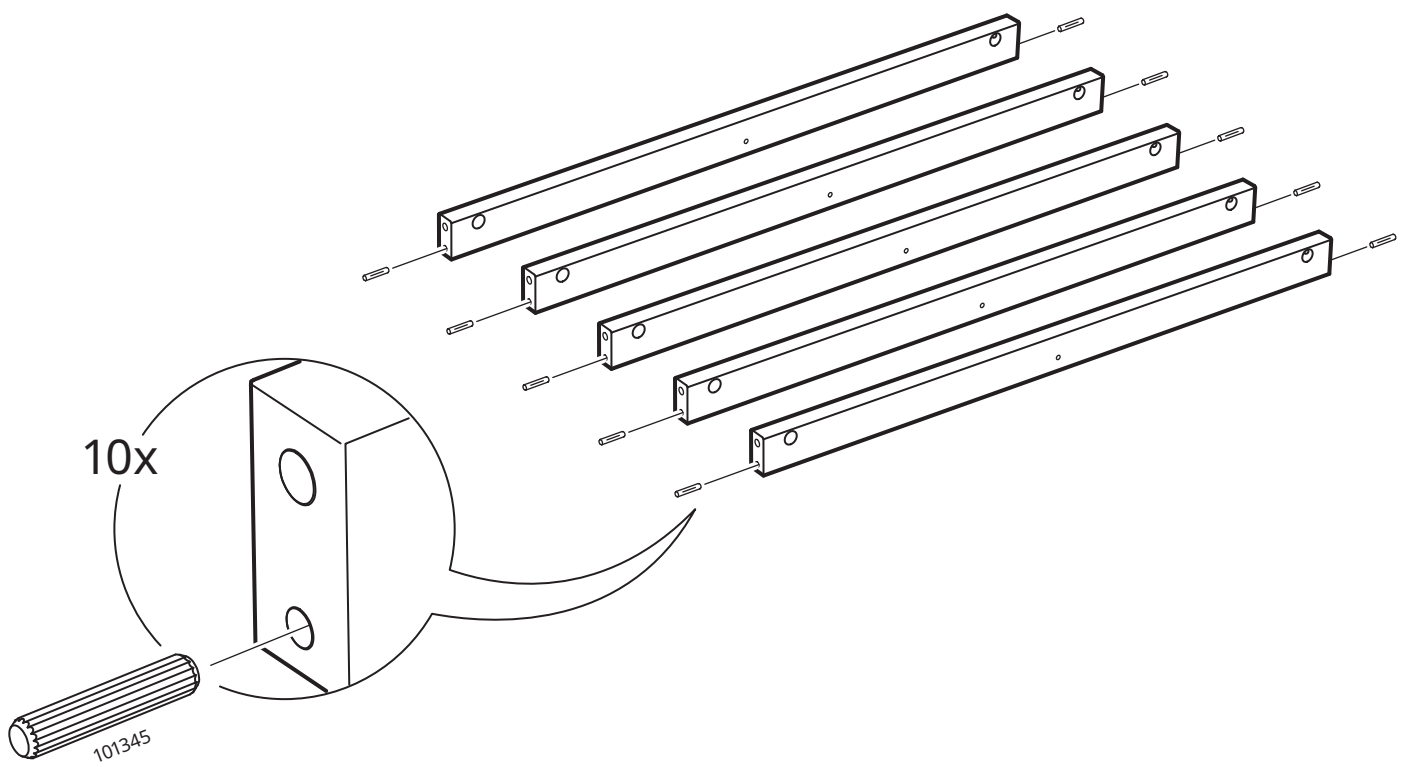 


7

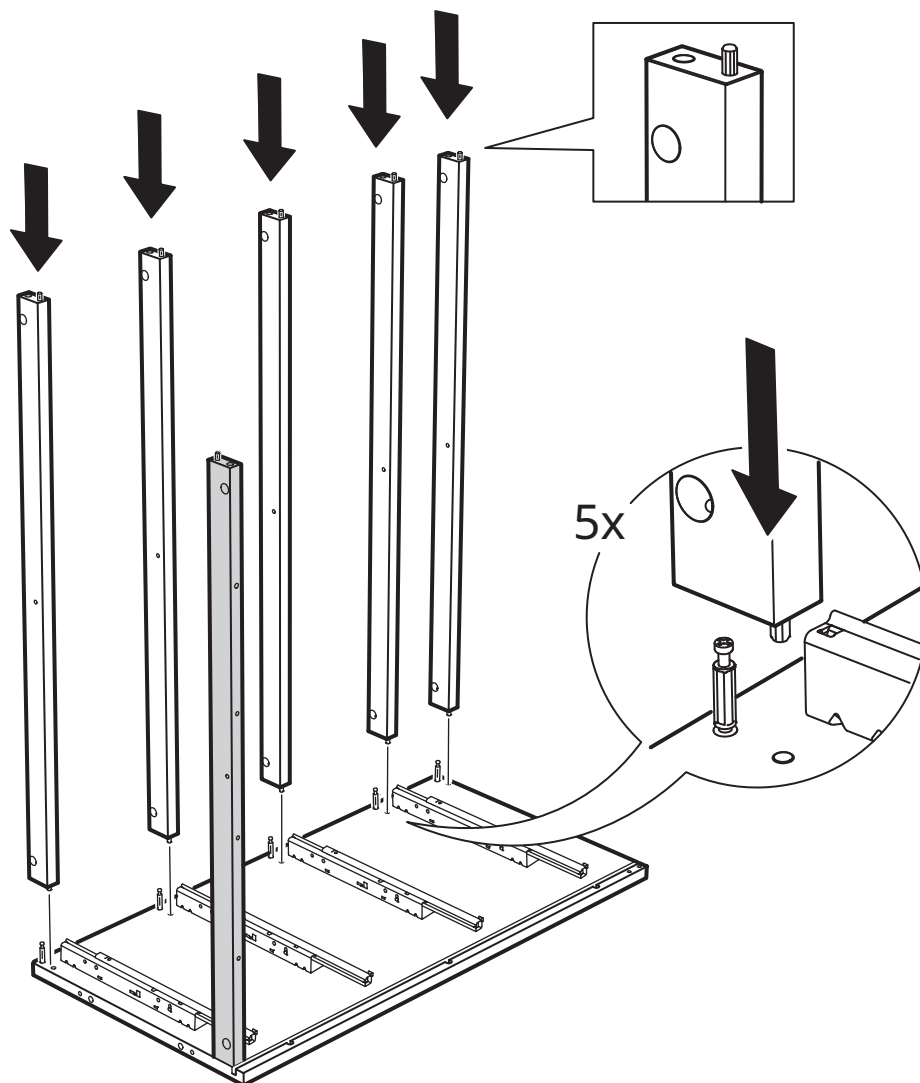 


8

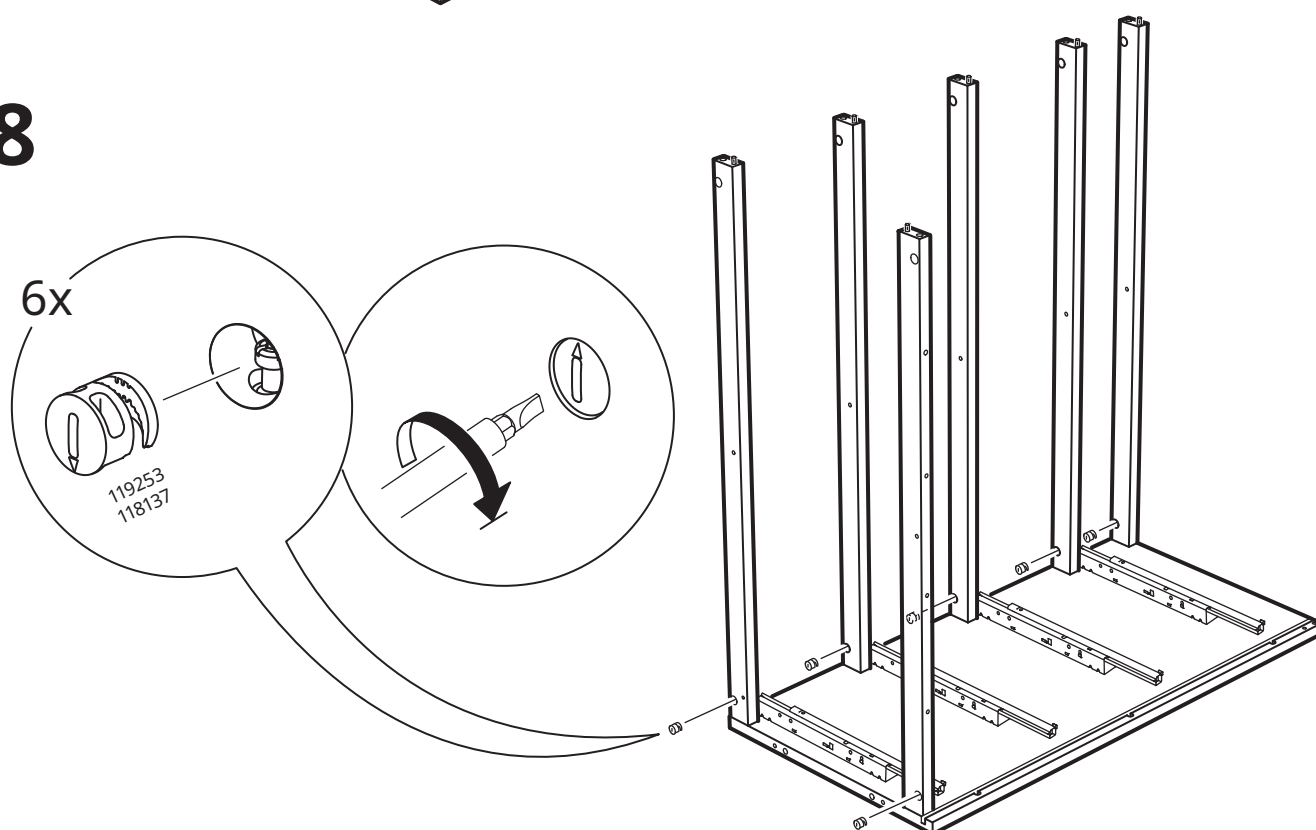 


9

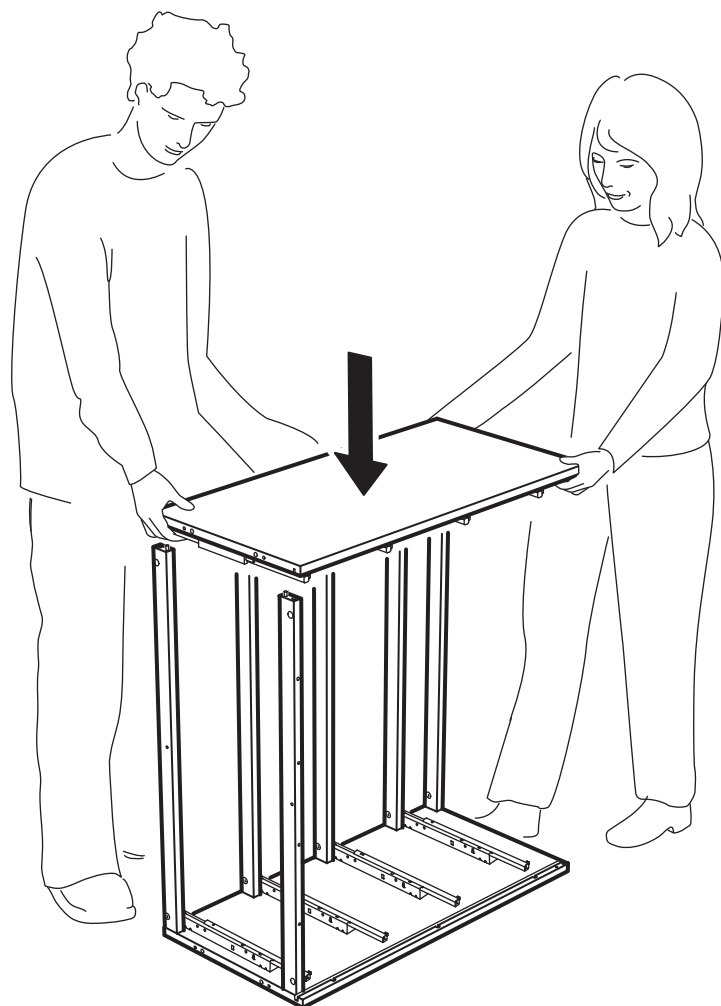 


10

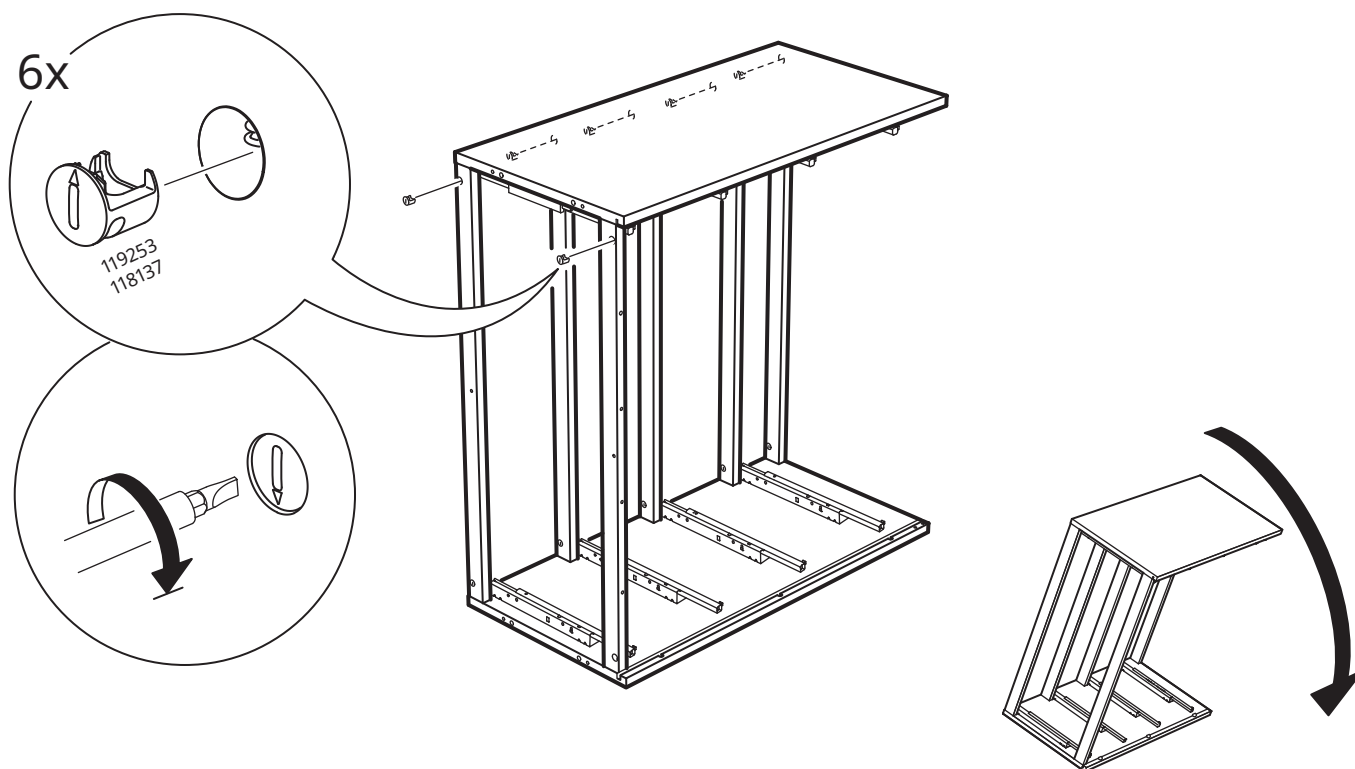 



# 11

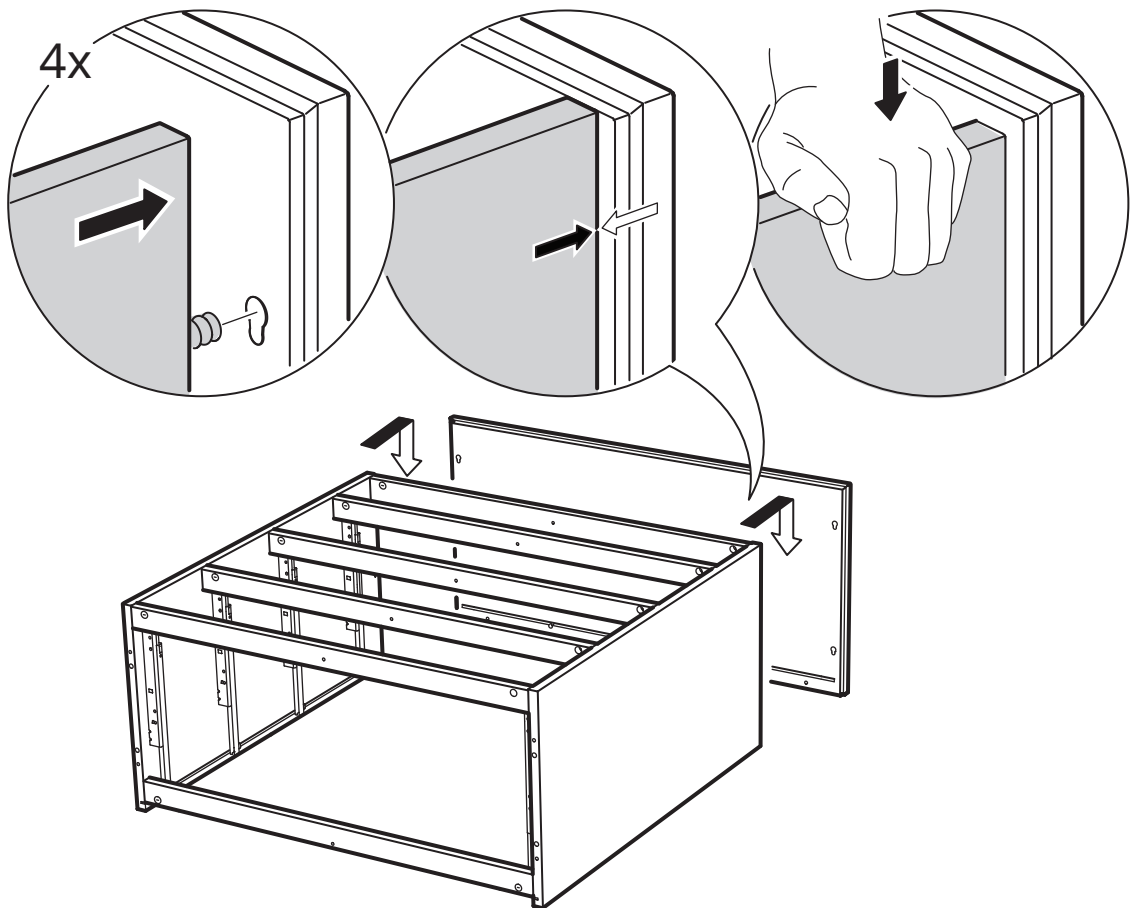 


# 12

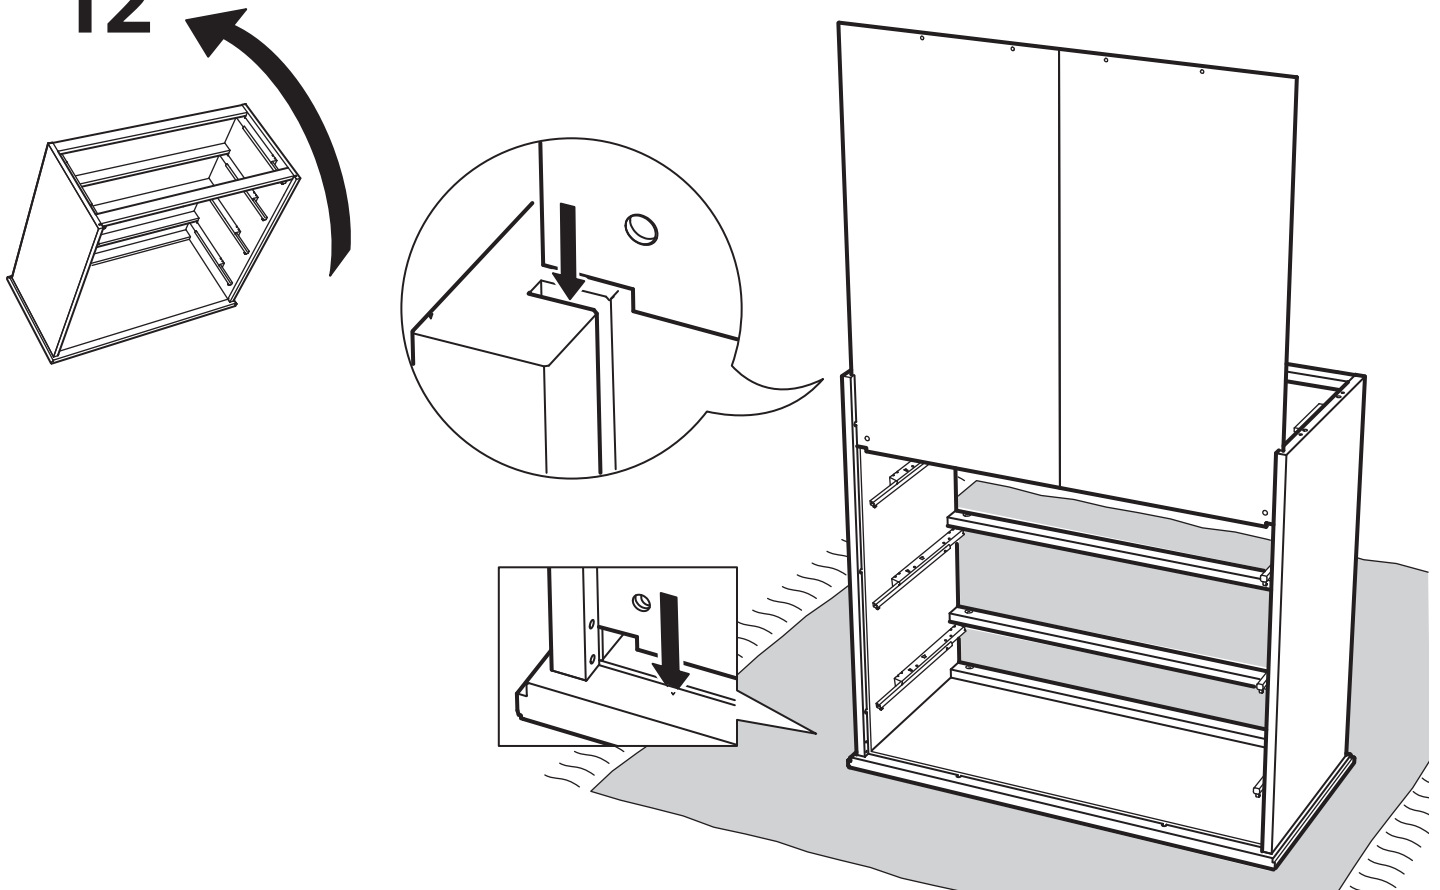 


13

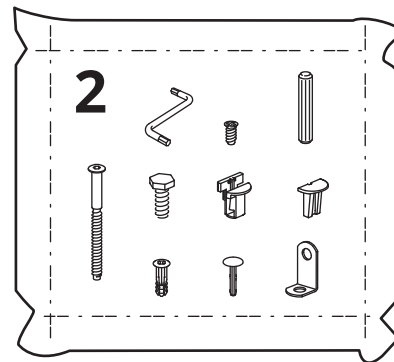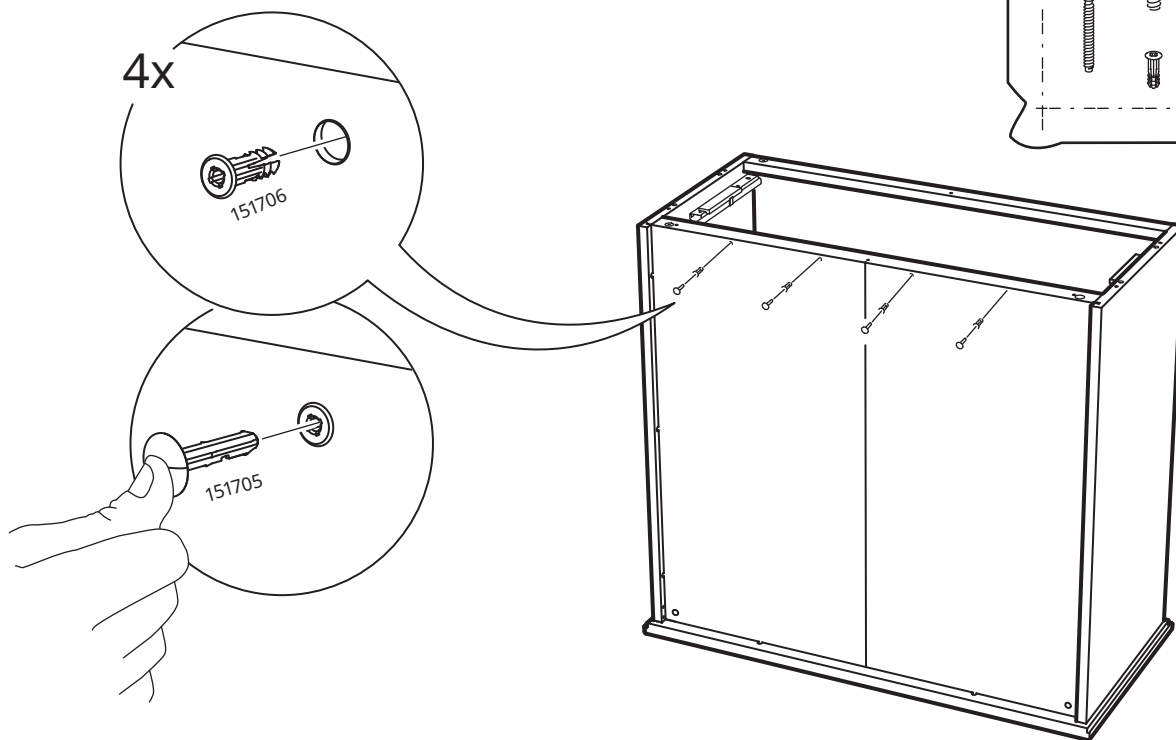  


14

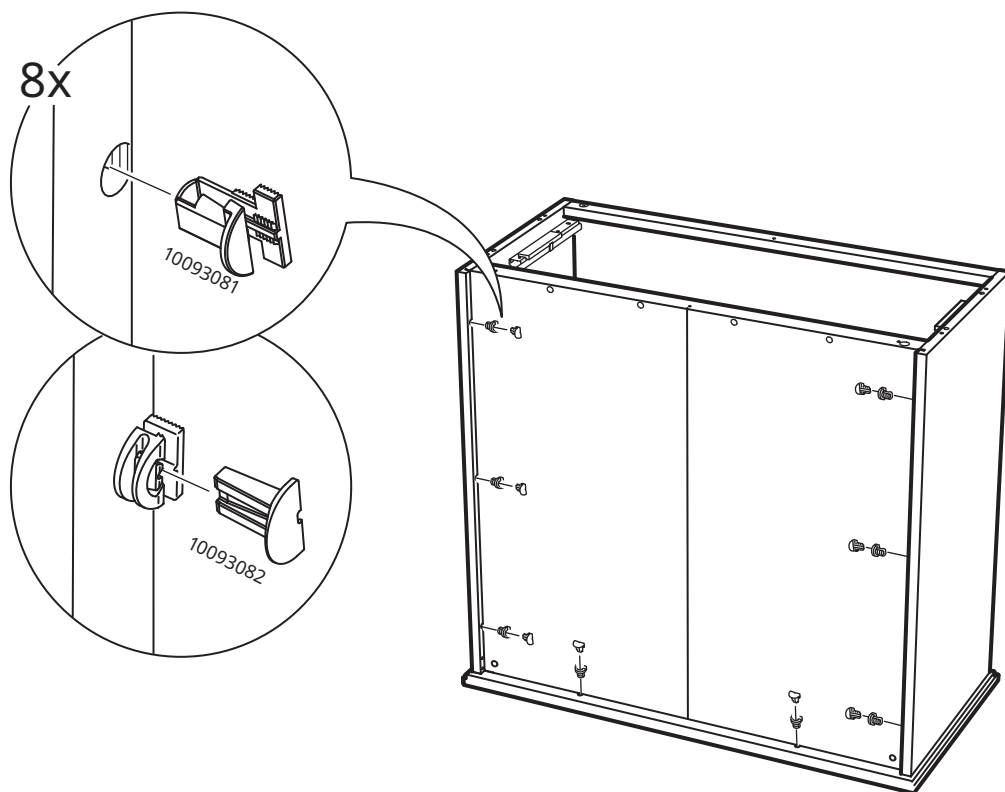 


# 15

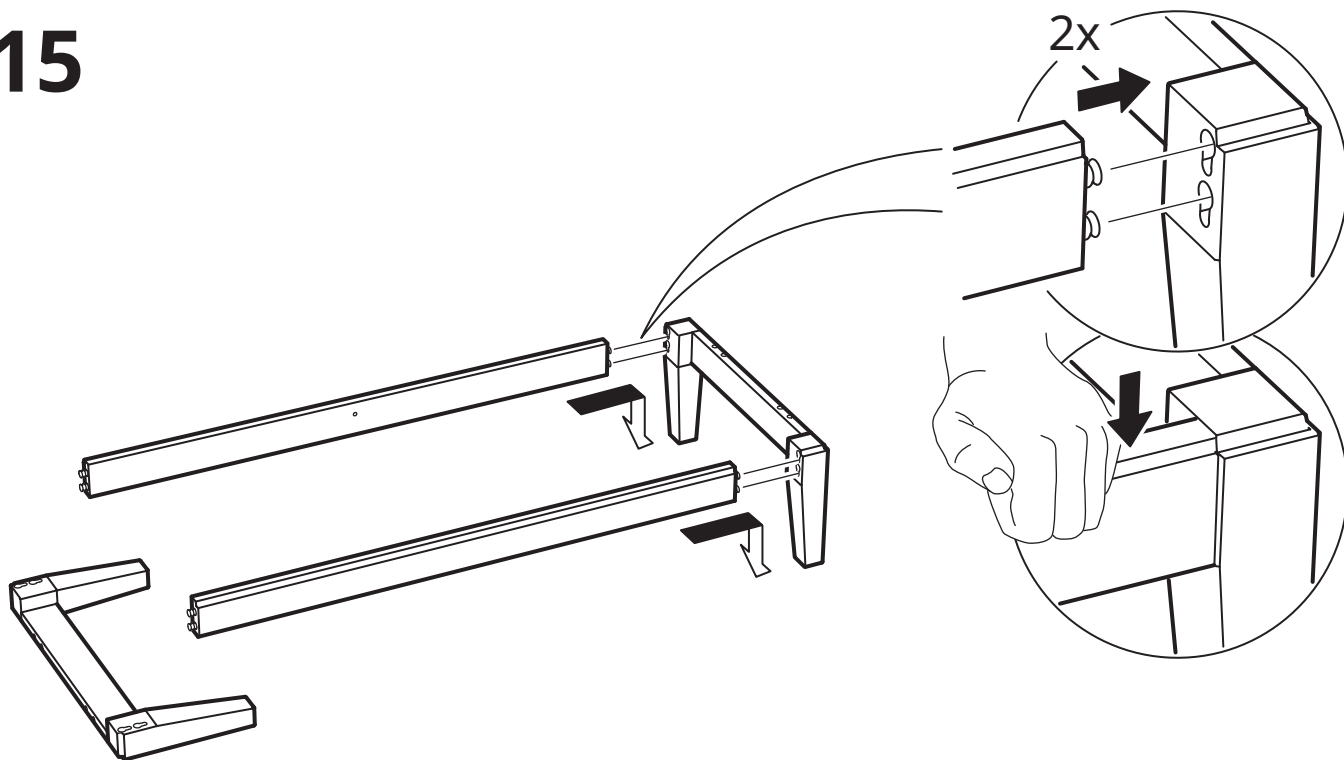 


# 16

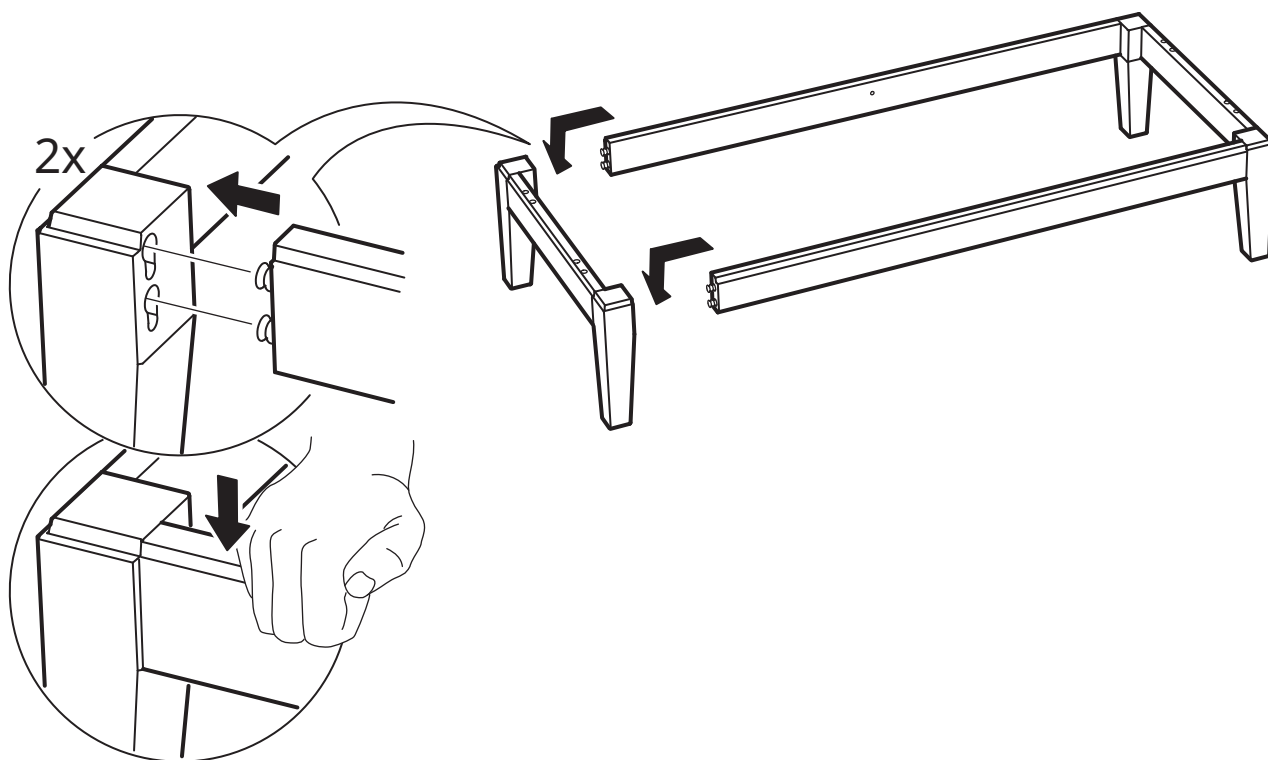 


17

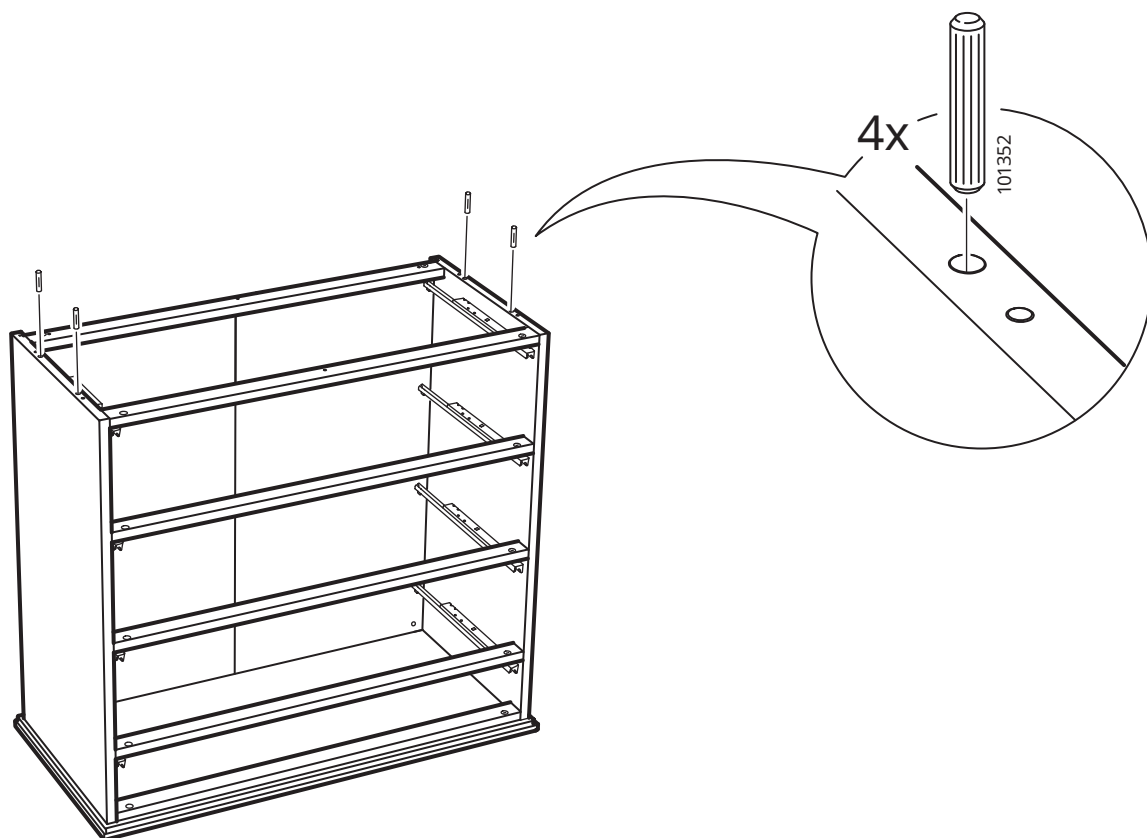 


18

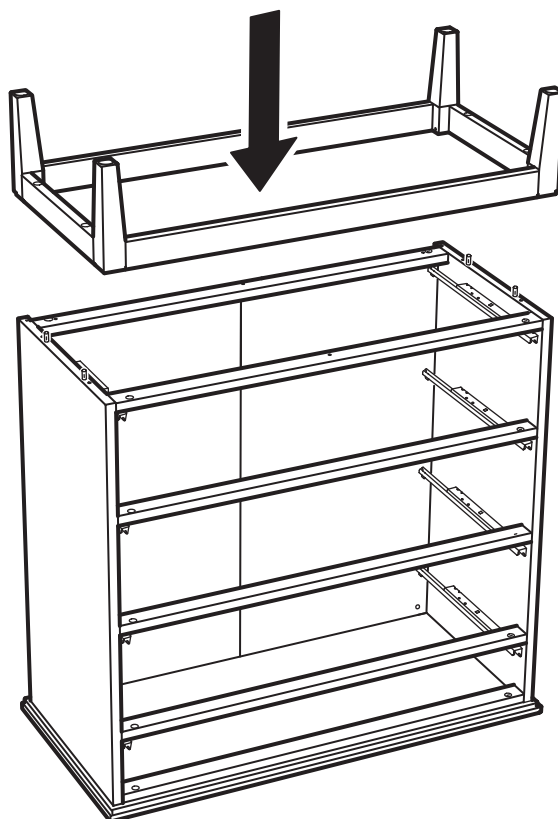 




19


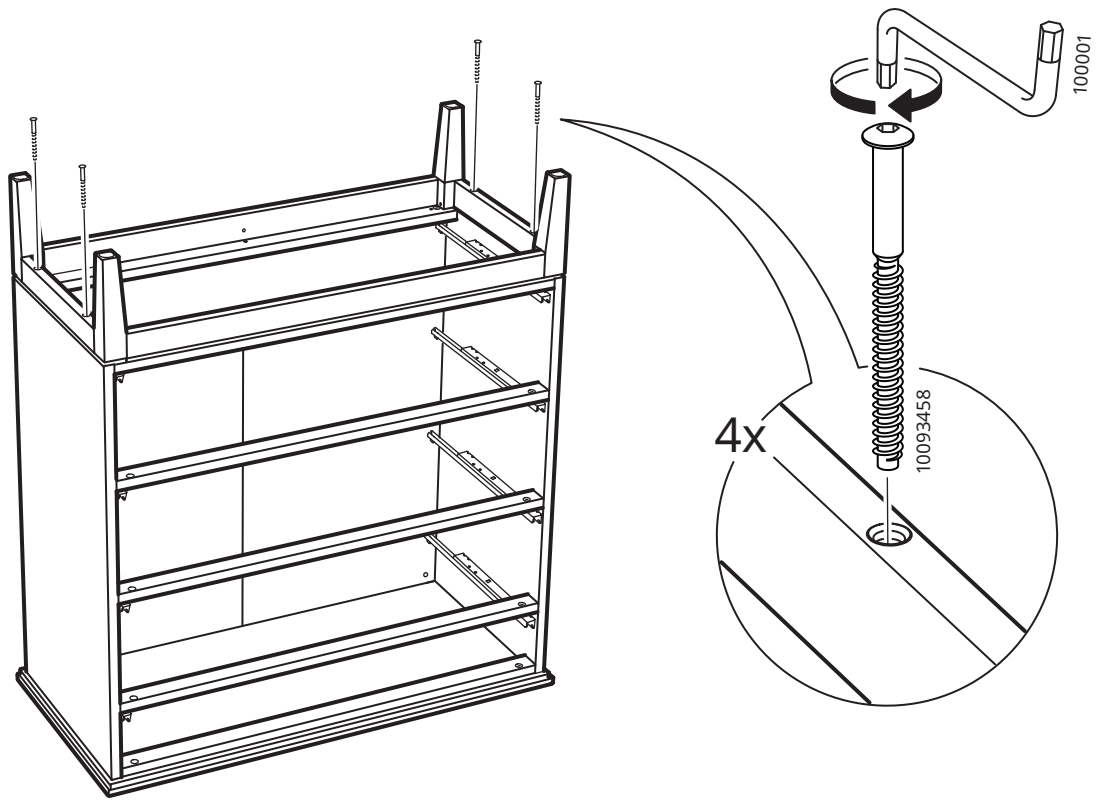 


20

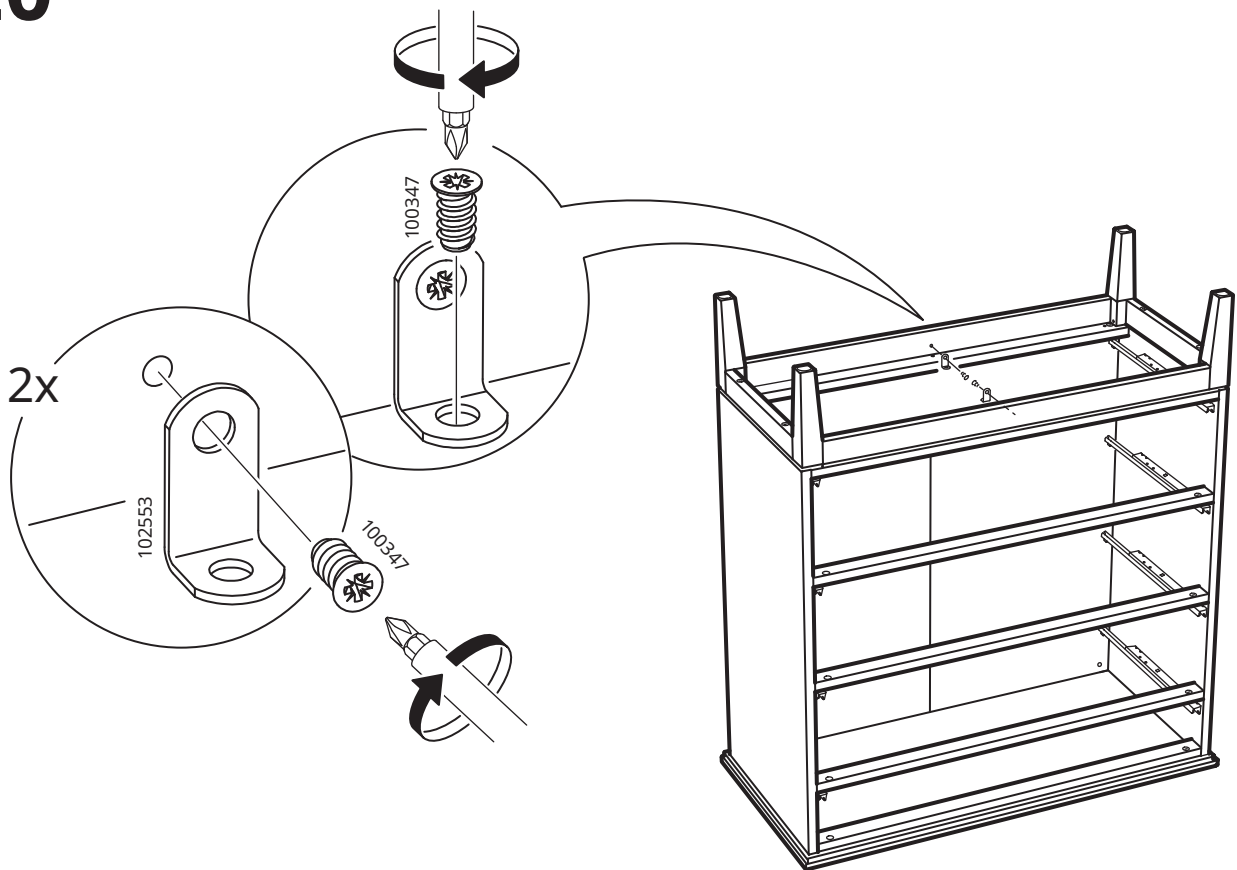 


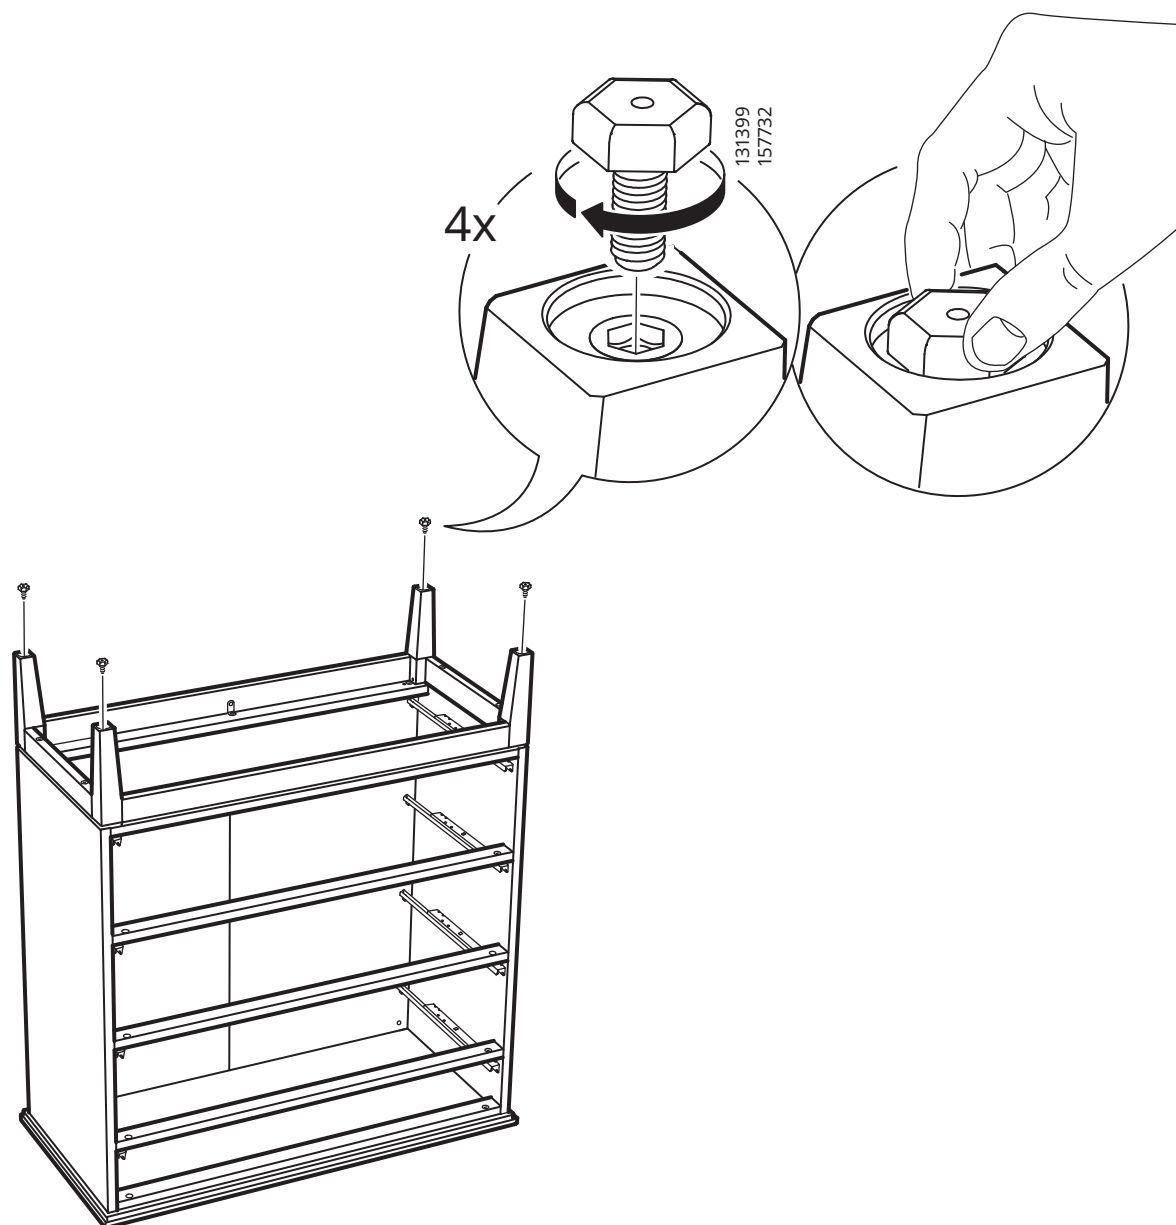 

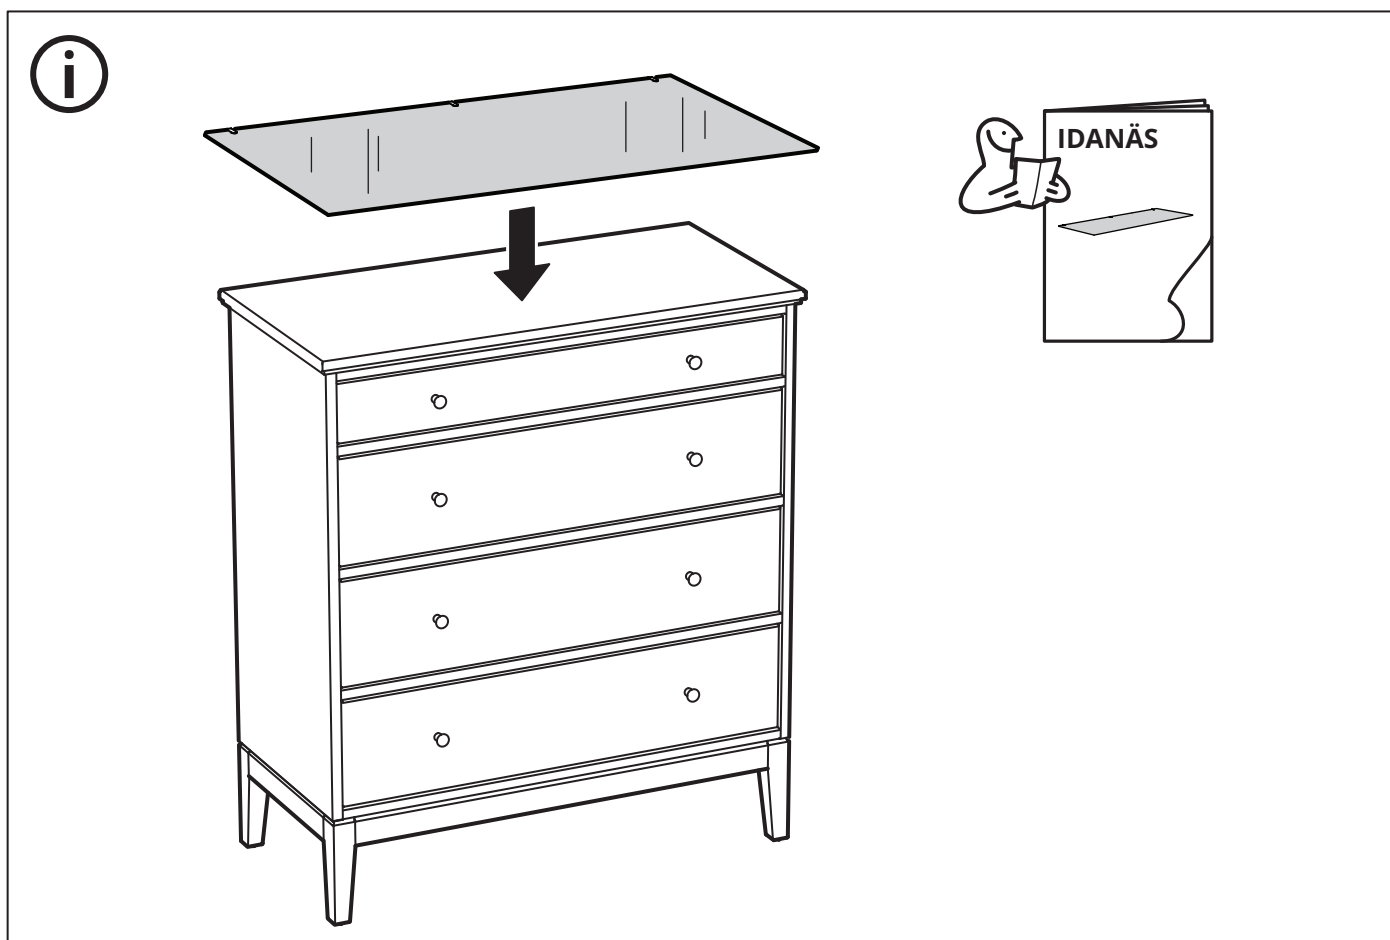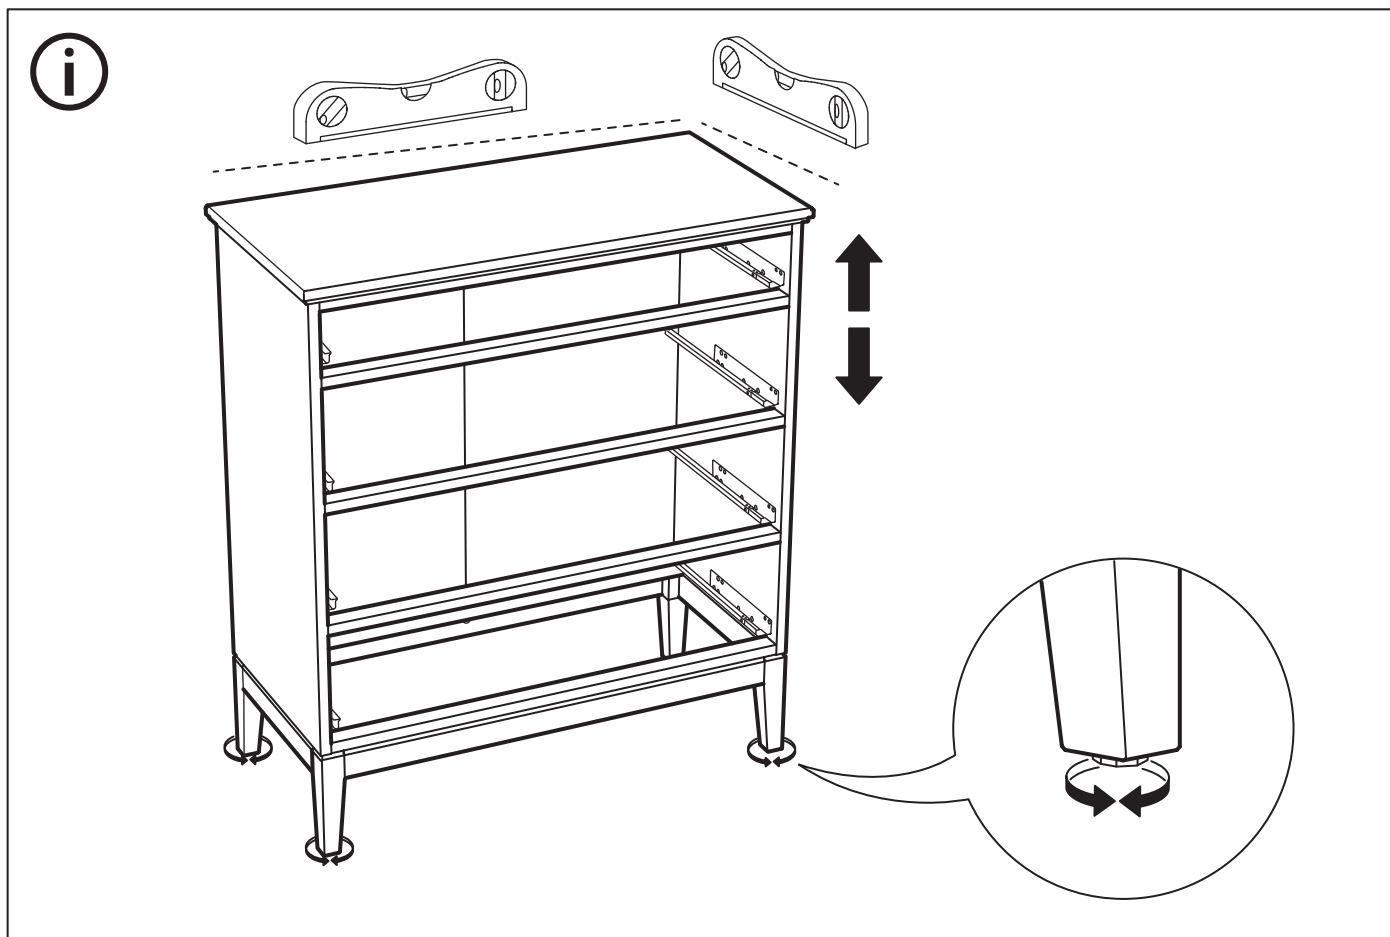  


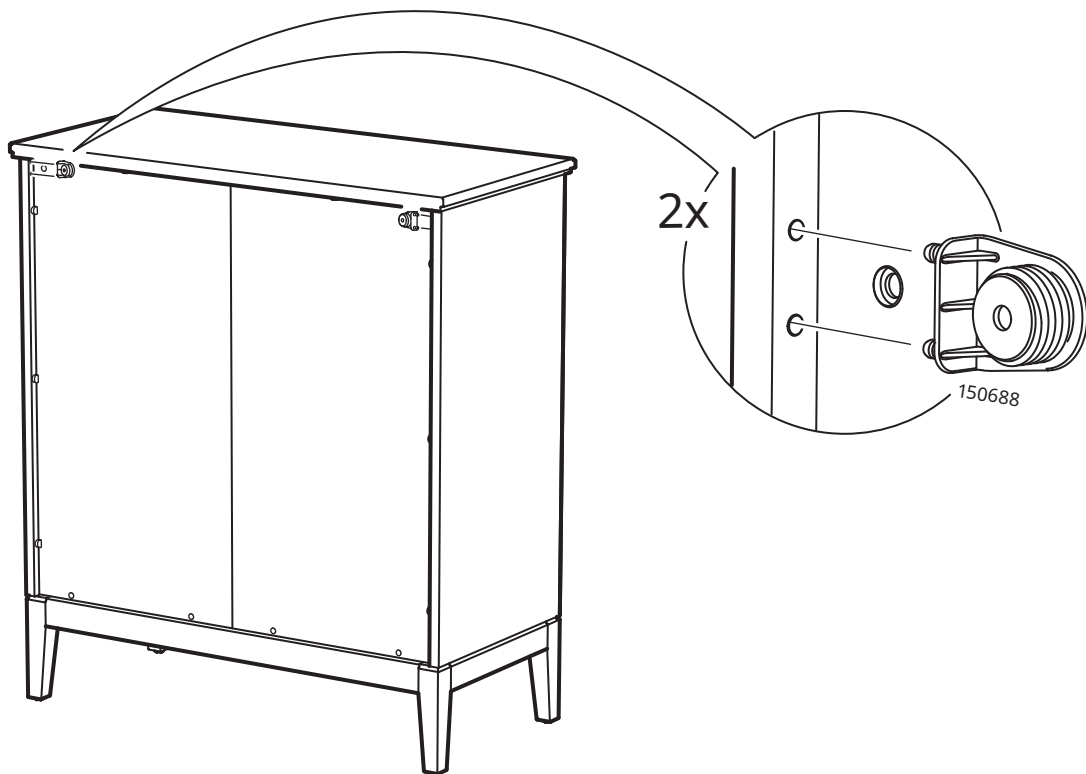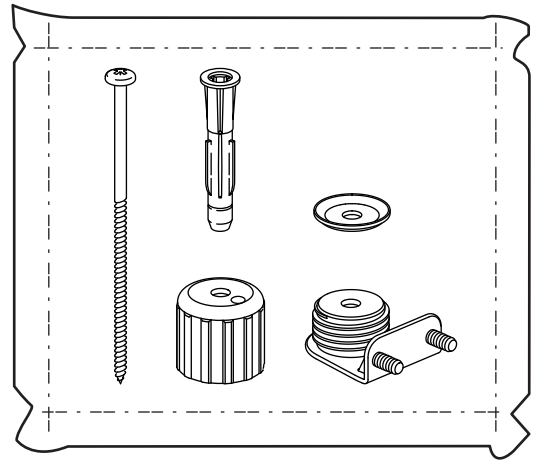  


# 23

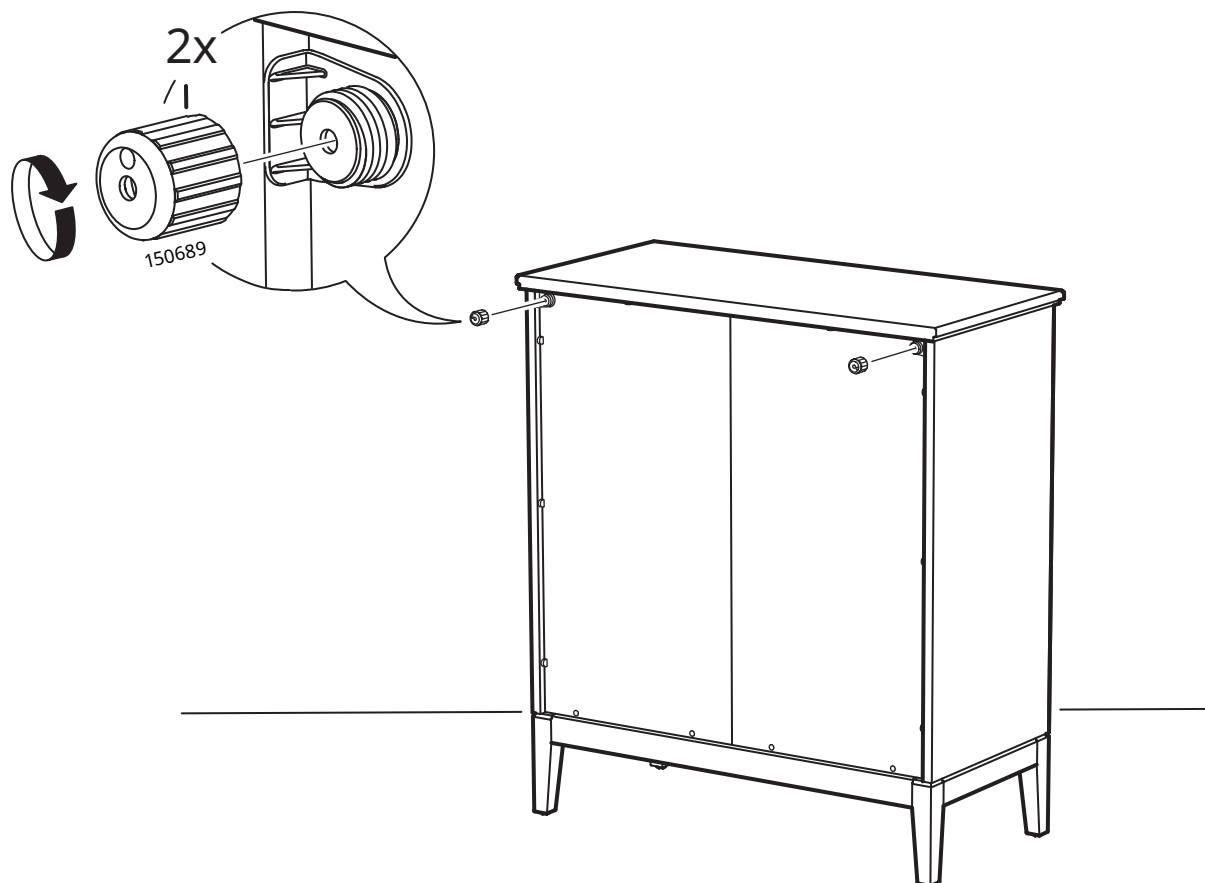 


# 24

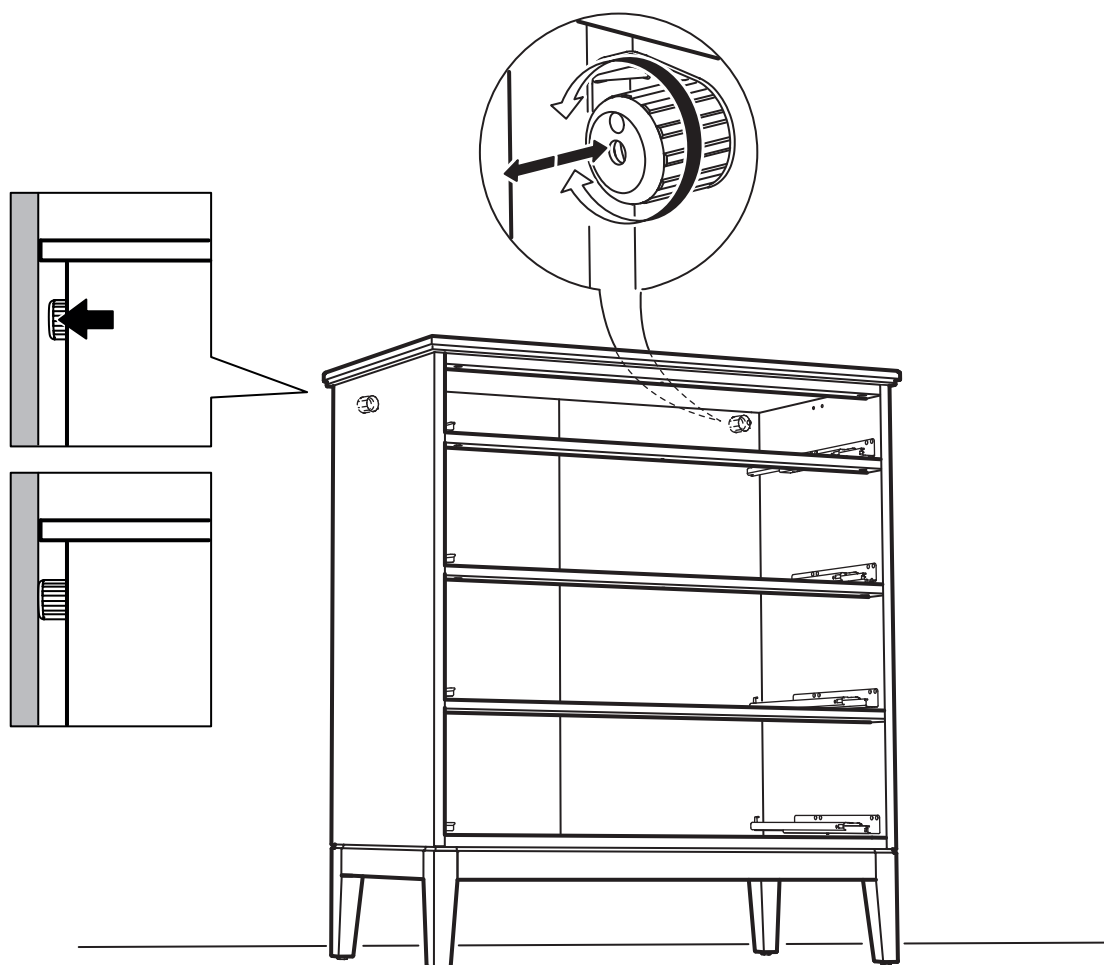 

25

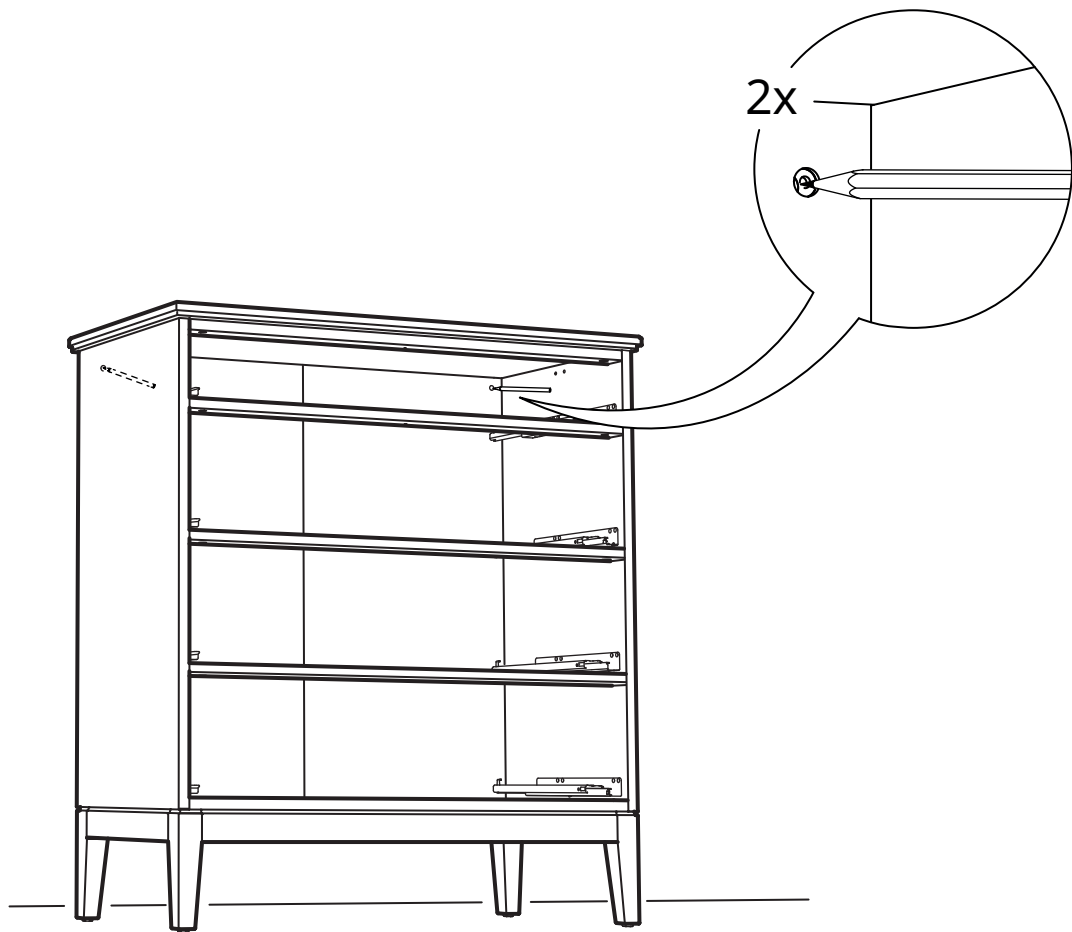 

26

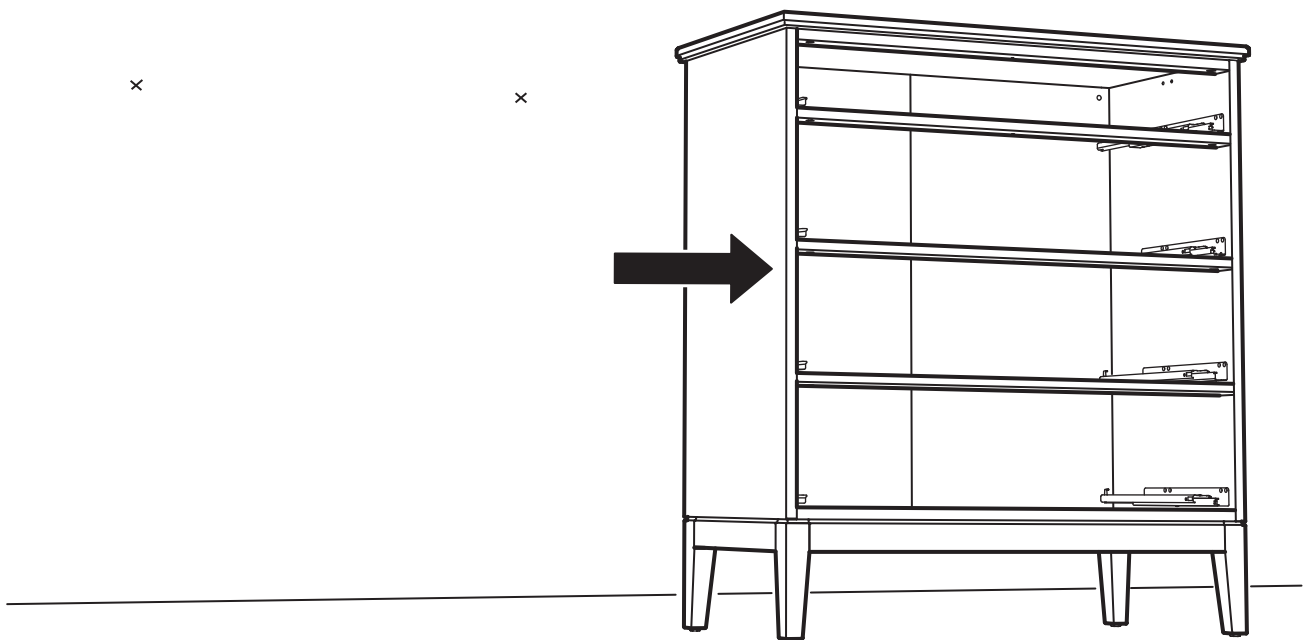 




[www.IKEA.com/secure-it](http://www.IKEA.com/secure-it)



 [www.IKEA.cn/secure-it](http://www.IKEA.cn/secure-it)

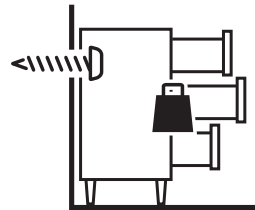

### English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

### עברית

הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.

**A**

**Ø 8 mm**  
(5/16")

**1**

**2**

70 mm  
(2 3/4")

**3**

**B**

**Ø 8 mm**  
(5/16")

**1**

**2**

≈ 30 mm  
(≈ 1 1/4")

**3**

**C**

 
**Ø 3 mm**  
(1/8")

 
**1**

**2**


≈ 30 mm  
(≈ 1 1/4")

**3**

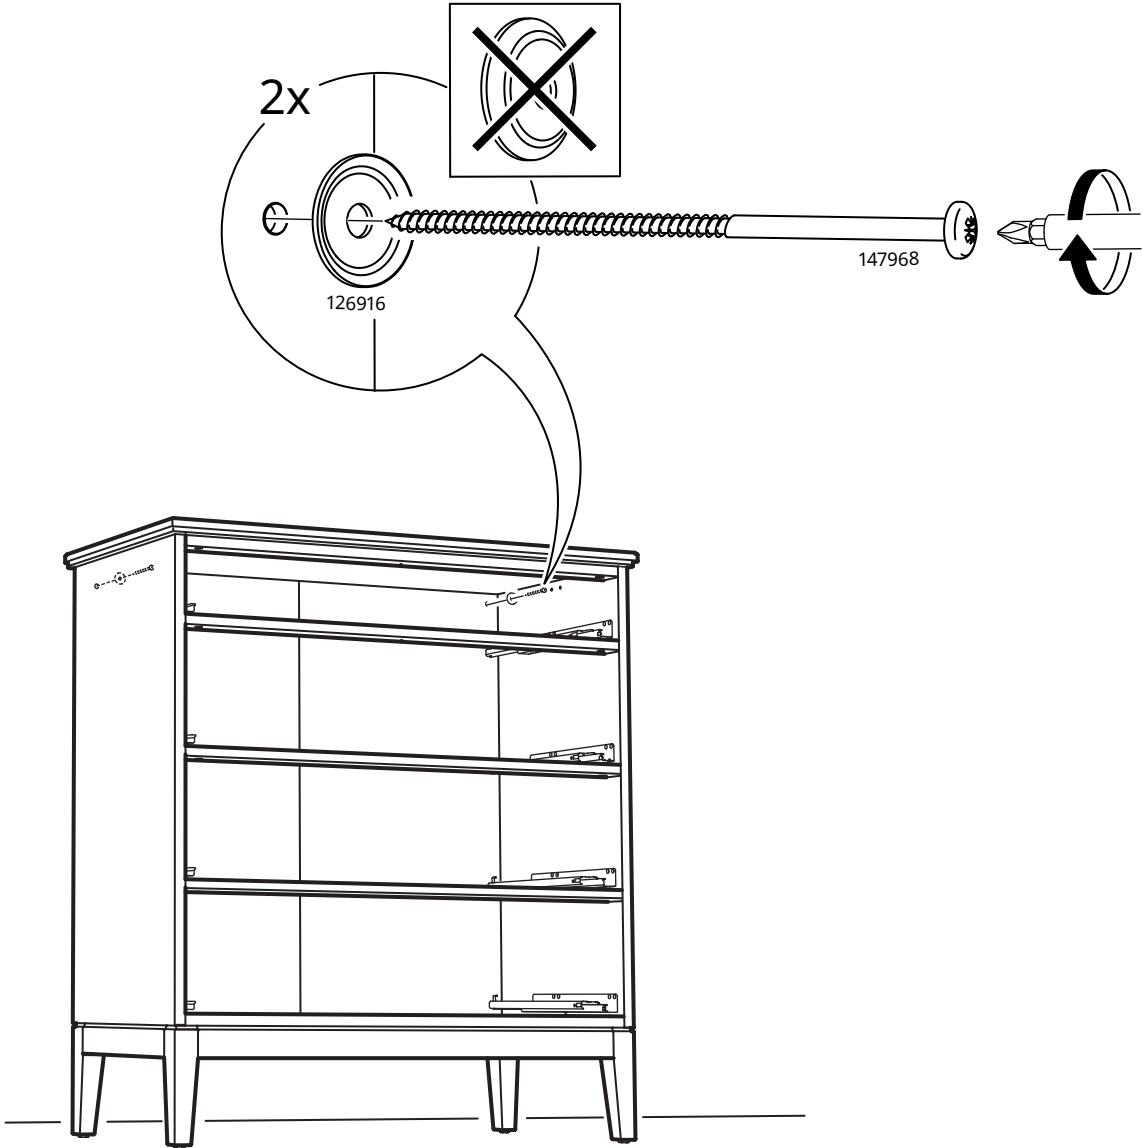


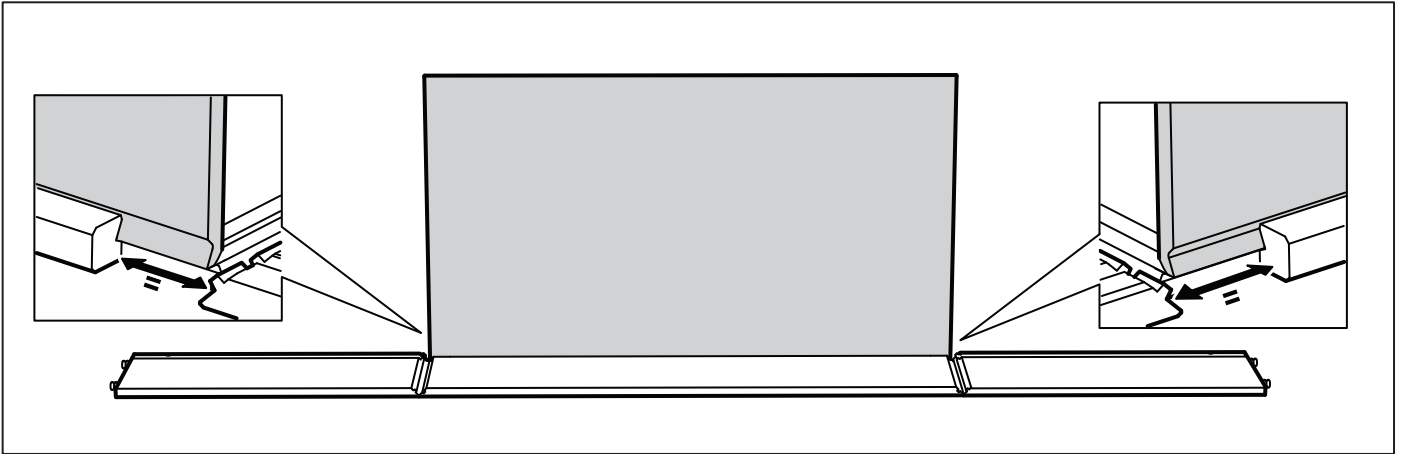


28

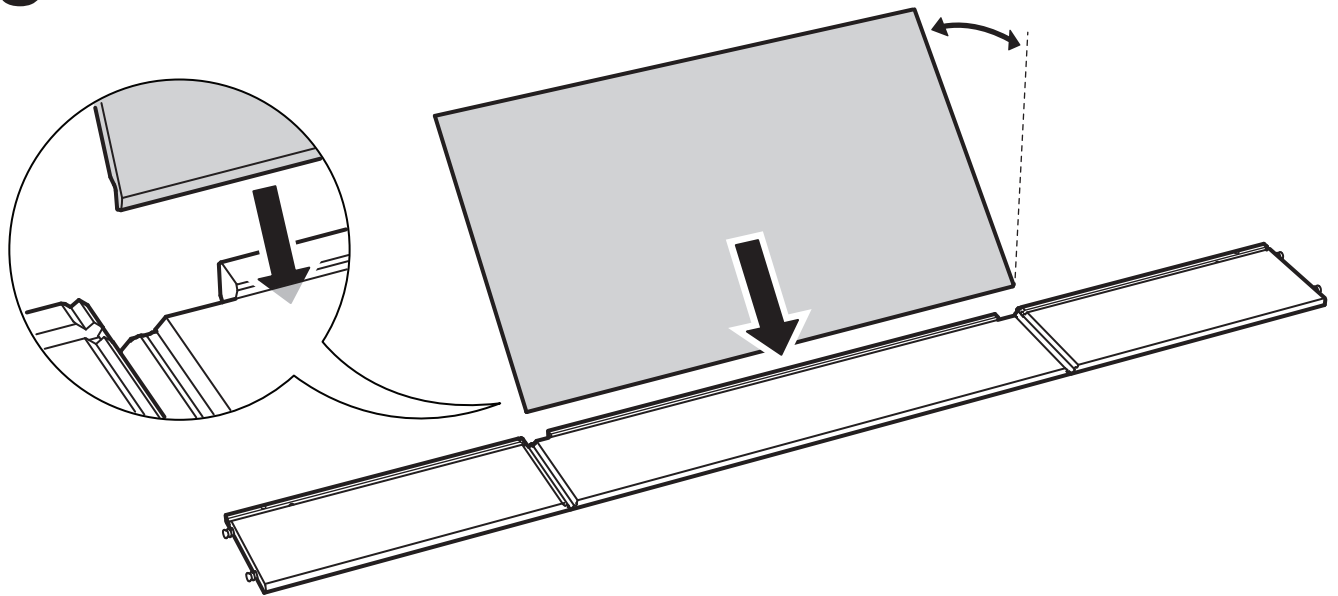 


29



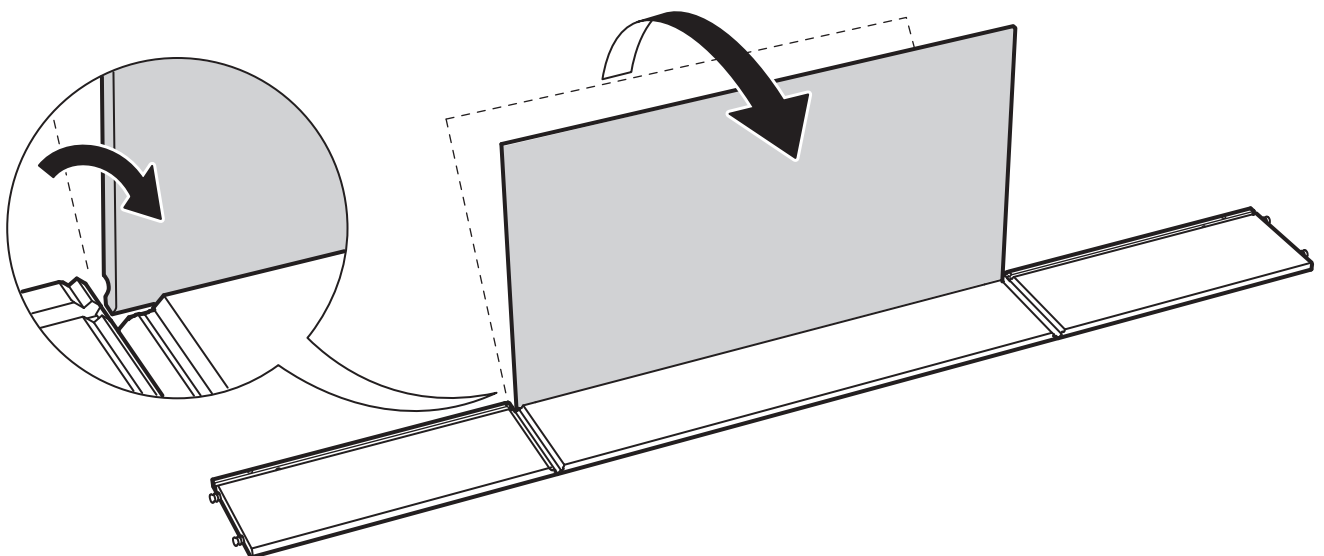 


30

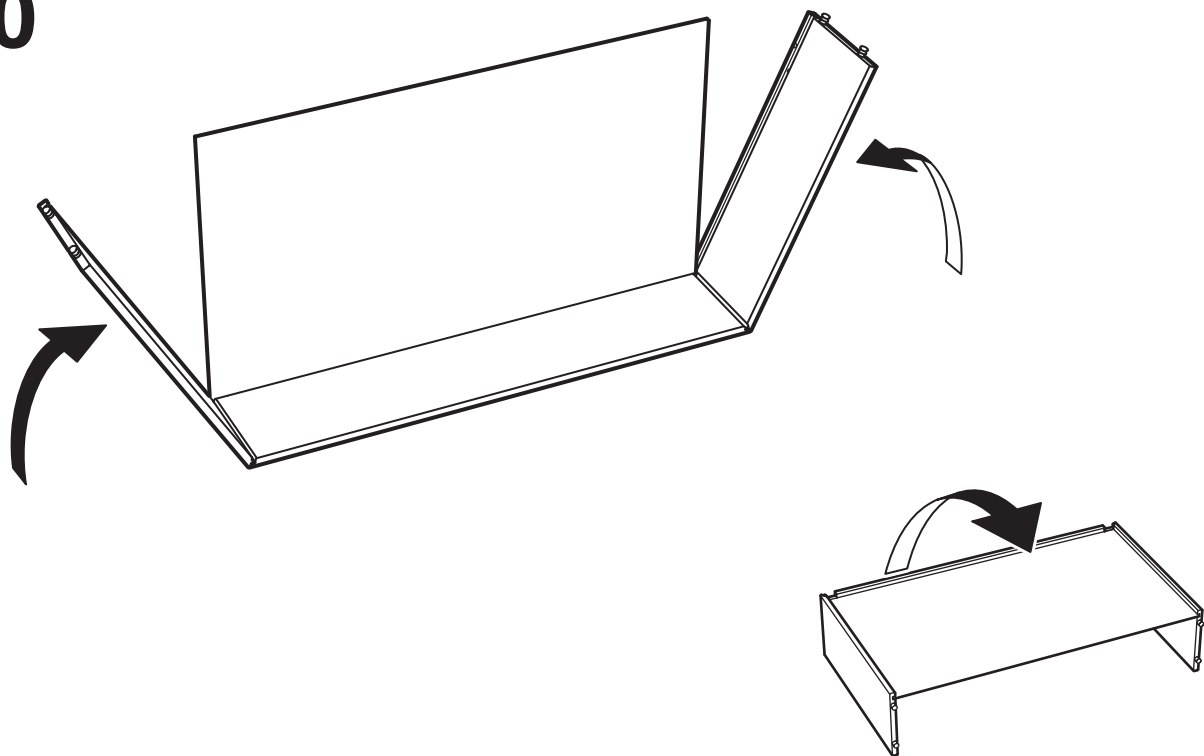 


31

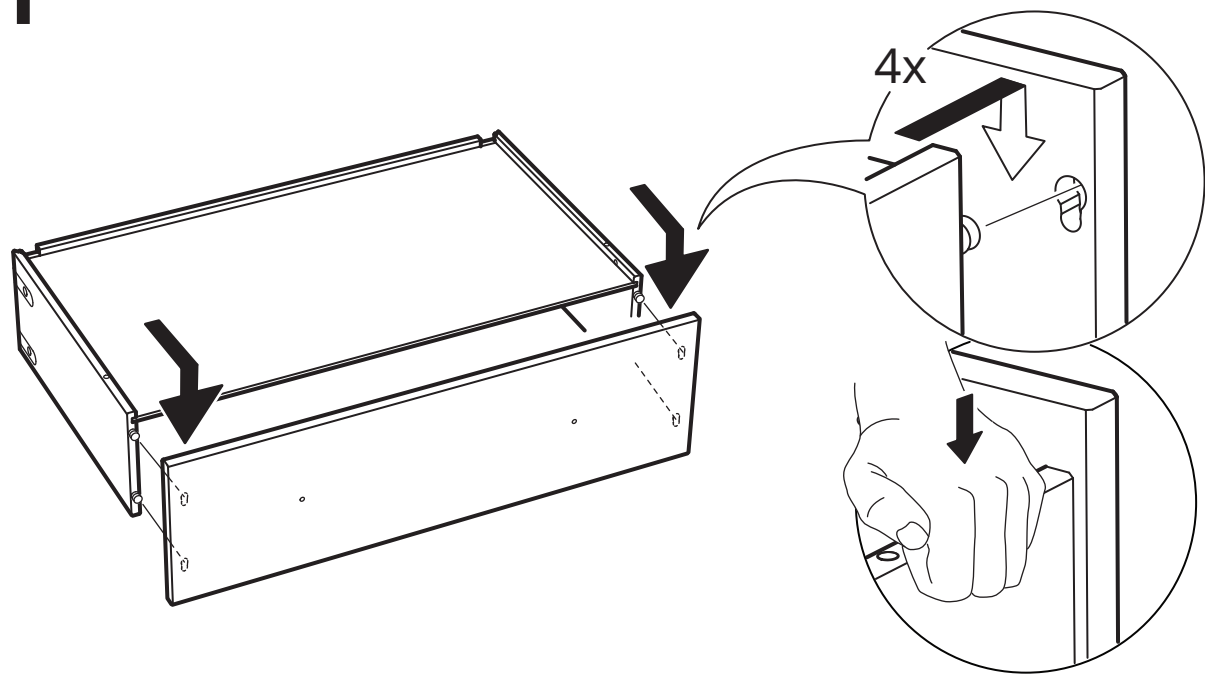 

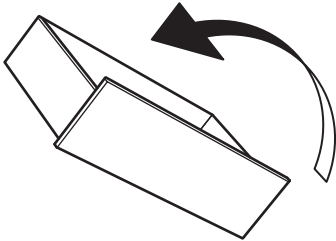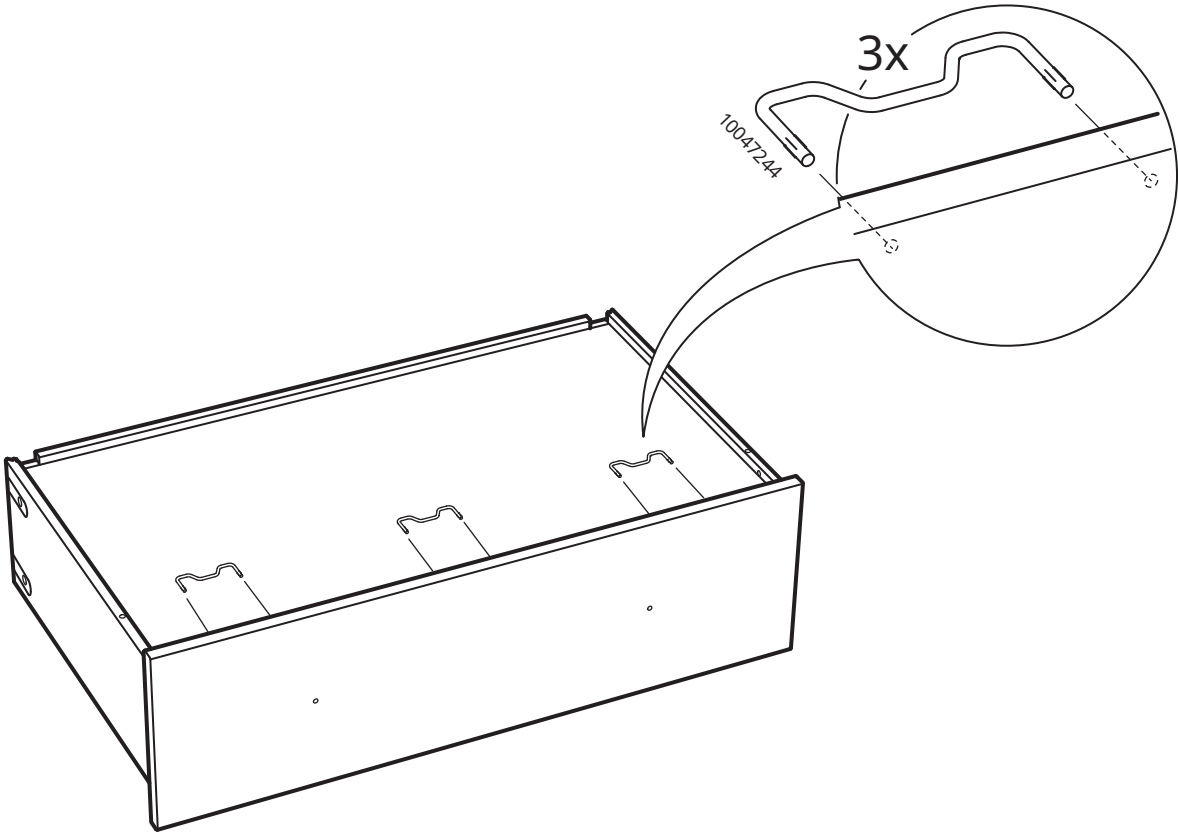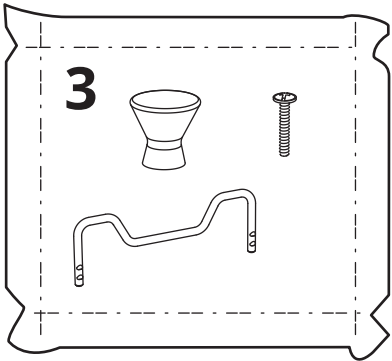   

33

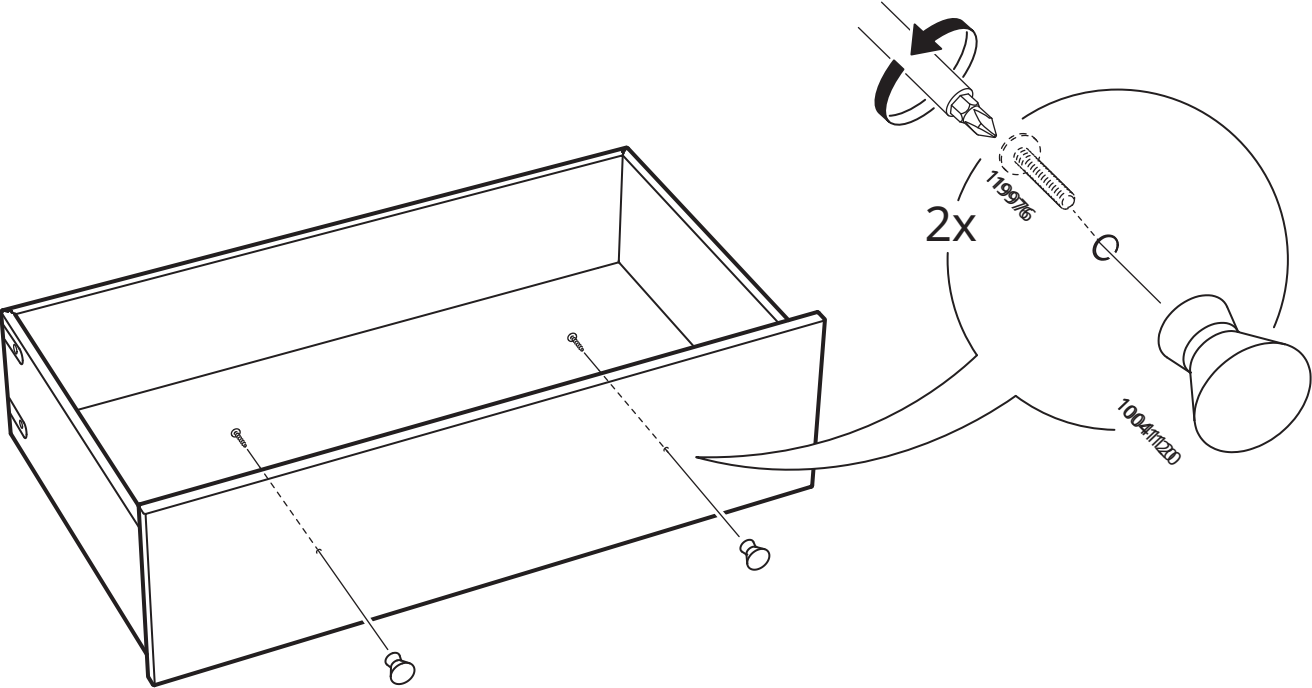 

34

