 


IDANÄS



Design and Quality
IKEA of Sweden

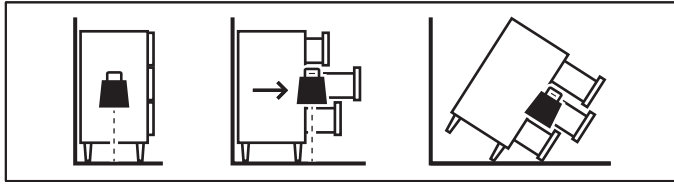

English

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, or shelves.

עברית

אזהרה

נפילת הרהיט עלולה לגרום לפגיעה גופנית חמורה או קטלנית.

 
יש לקבע את הרהיט לקיר באמצעות אבזרי הקיבוע המצורפים.

 
על-מנת למזער את סכנת הפגיעה הגופנית או המוות מנפילת רהיטים:

 
מקמו את הפריטים הכבדים ביותר במגירה התחתונה.

 
 
 
הימנעו מלהניח טלוויזיות או פריטים כבדים אחרים על מוצר זה.

 
 
 
 
אין לאפשר לילדים לטפס על המגירות, הדלתות או המדפים.

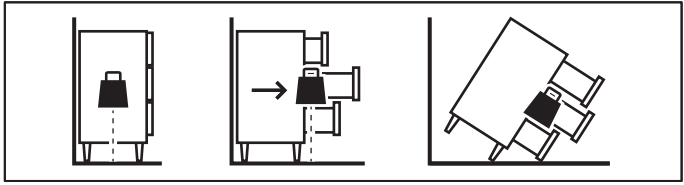

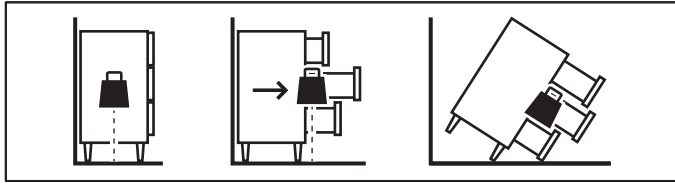

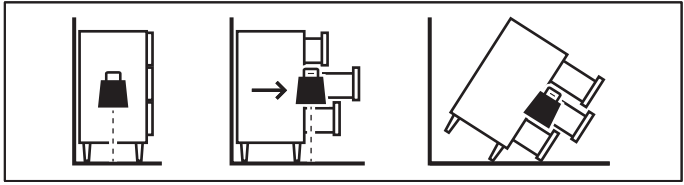

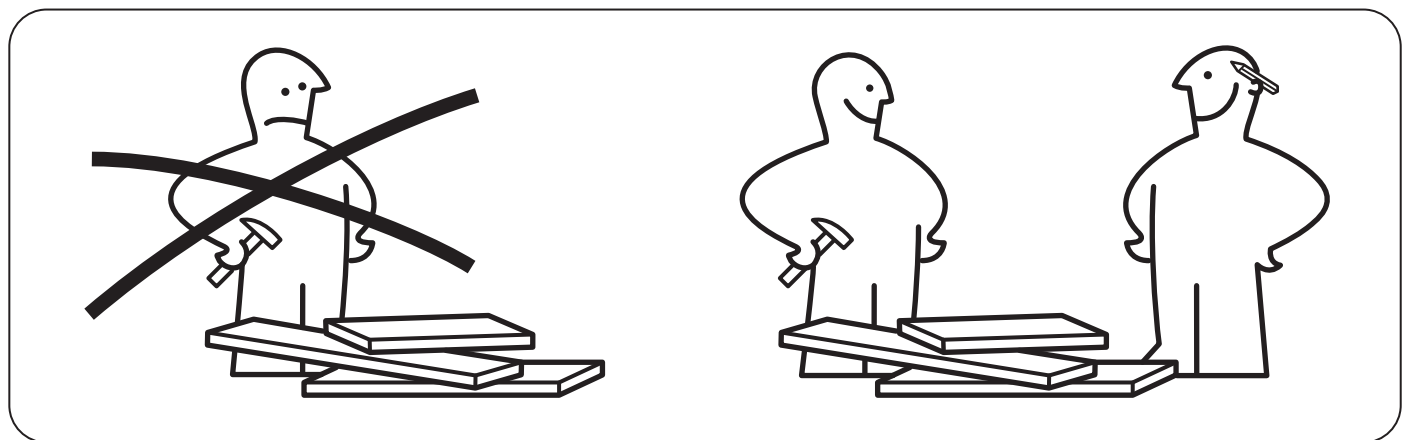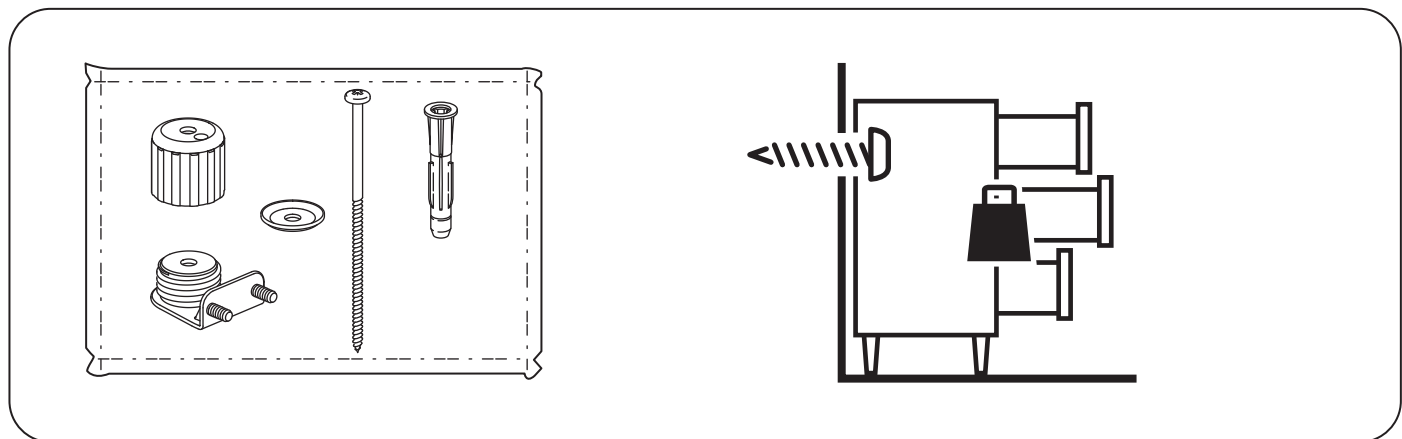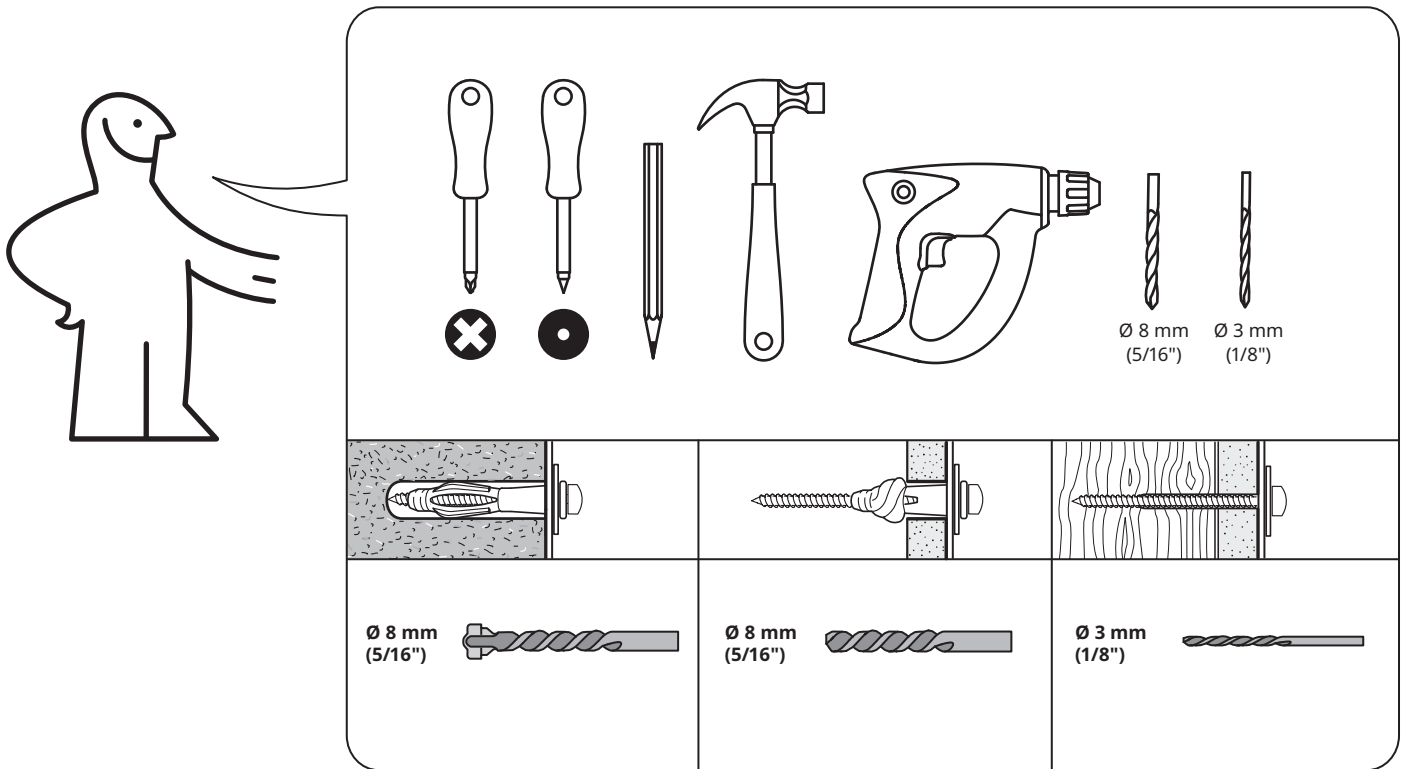

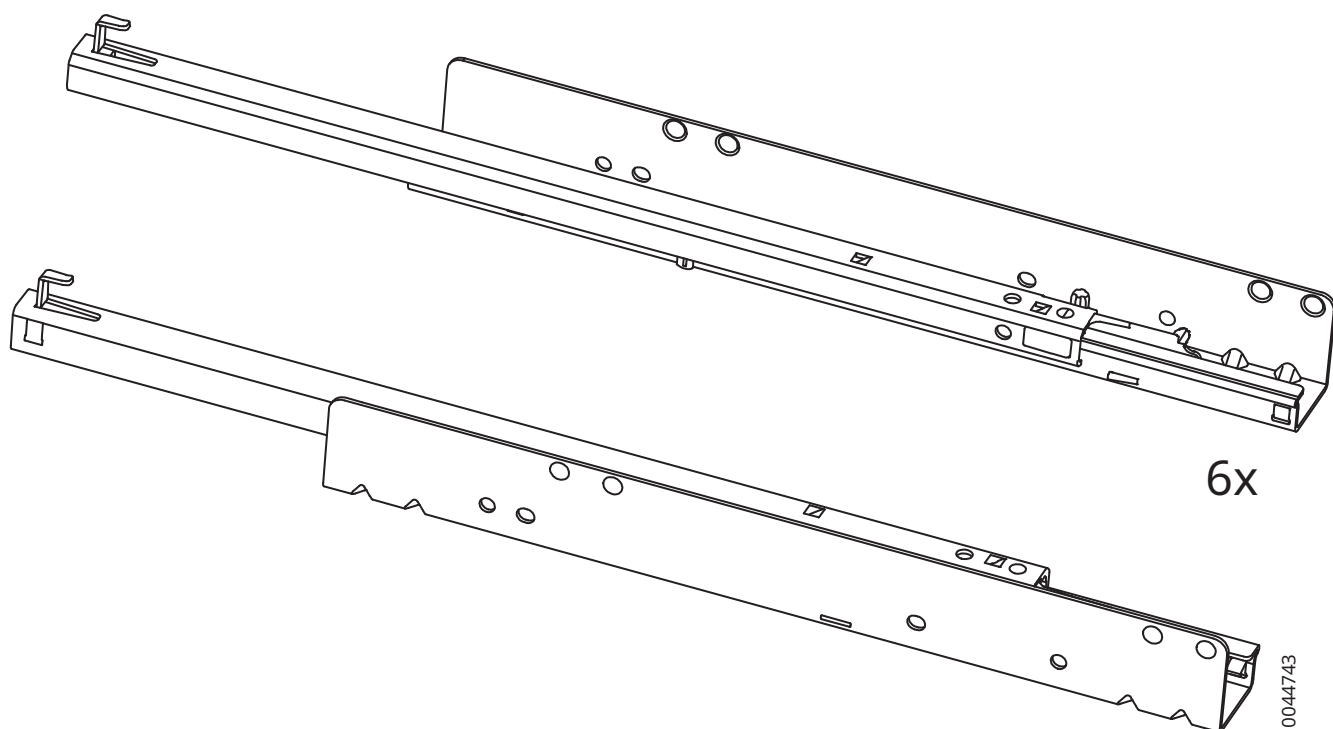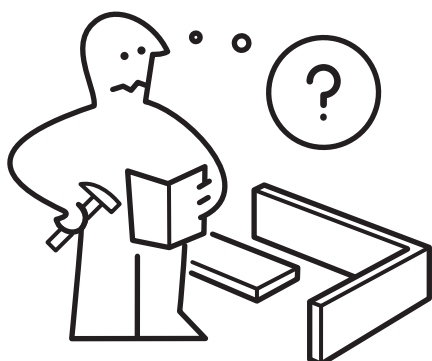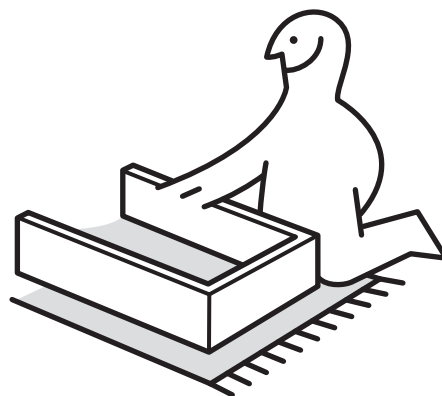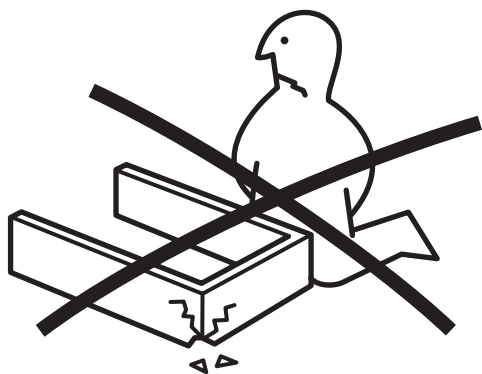


10044733

6x

10044743


6x

 1

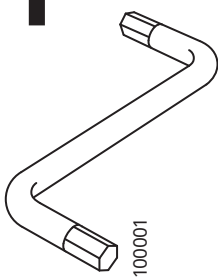

100001

 1x



100211

2x



 
100347

24x



101345

14x



118331

14x

112996



119253

118137

14x



 
10

2




100347

4x




101352

 4x

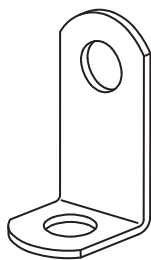

102553

 
2x

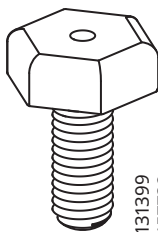

131399

157732

 4x

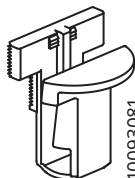


10093081

8x




10093082

 8x




10093458

 4x



151706

 4x



151705

4x



 
21

3




10041120

10x

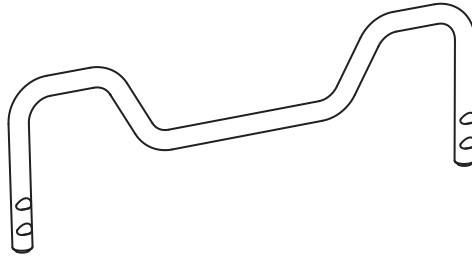


10047244

 16x







119976

 10x

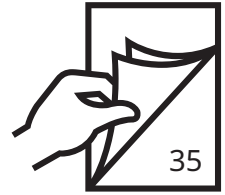


35

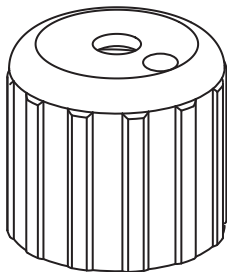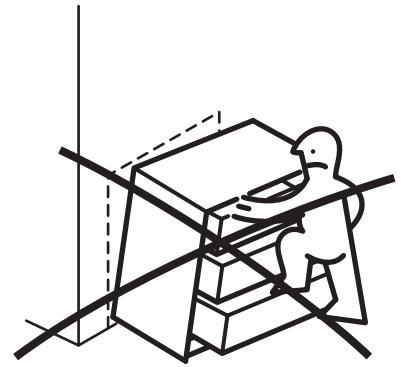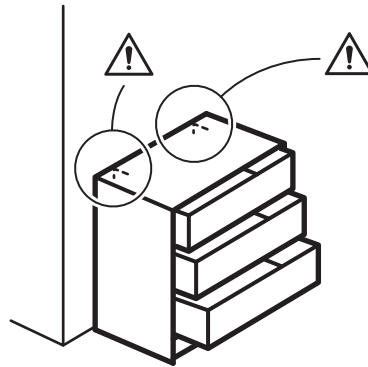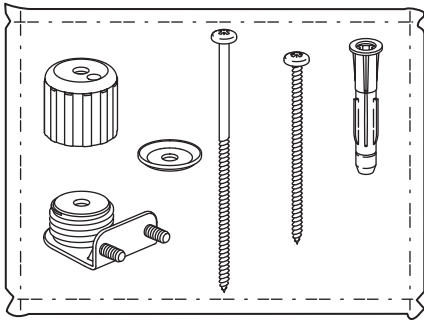    


150689

 2x



126916

 2x

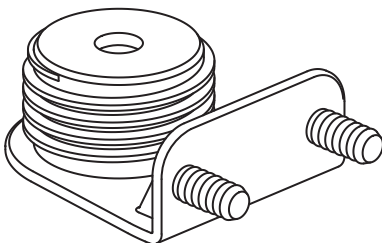


150688

2x



147968

 2x



121714

 
 
2x




27

363577


1

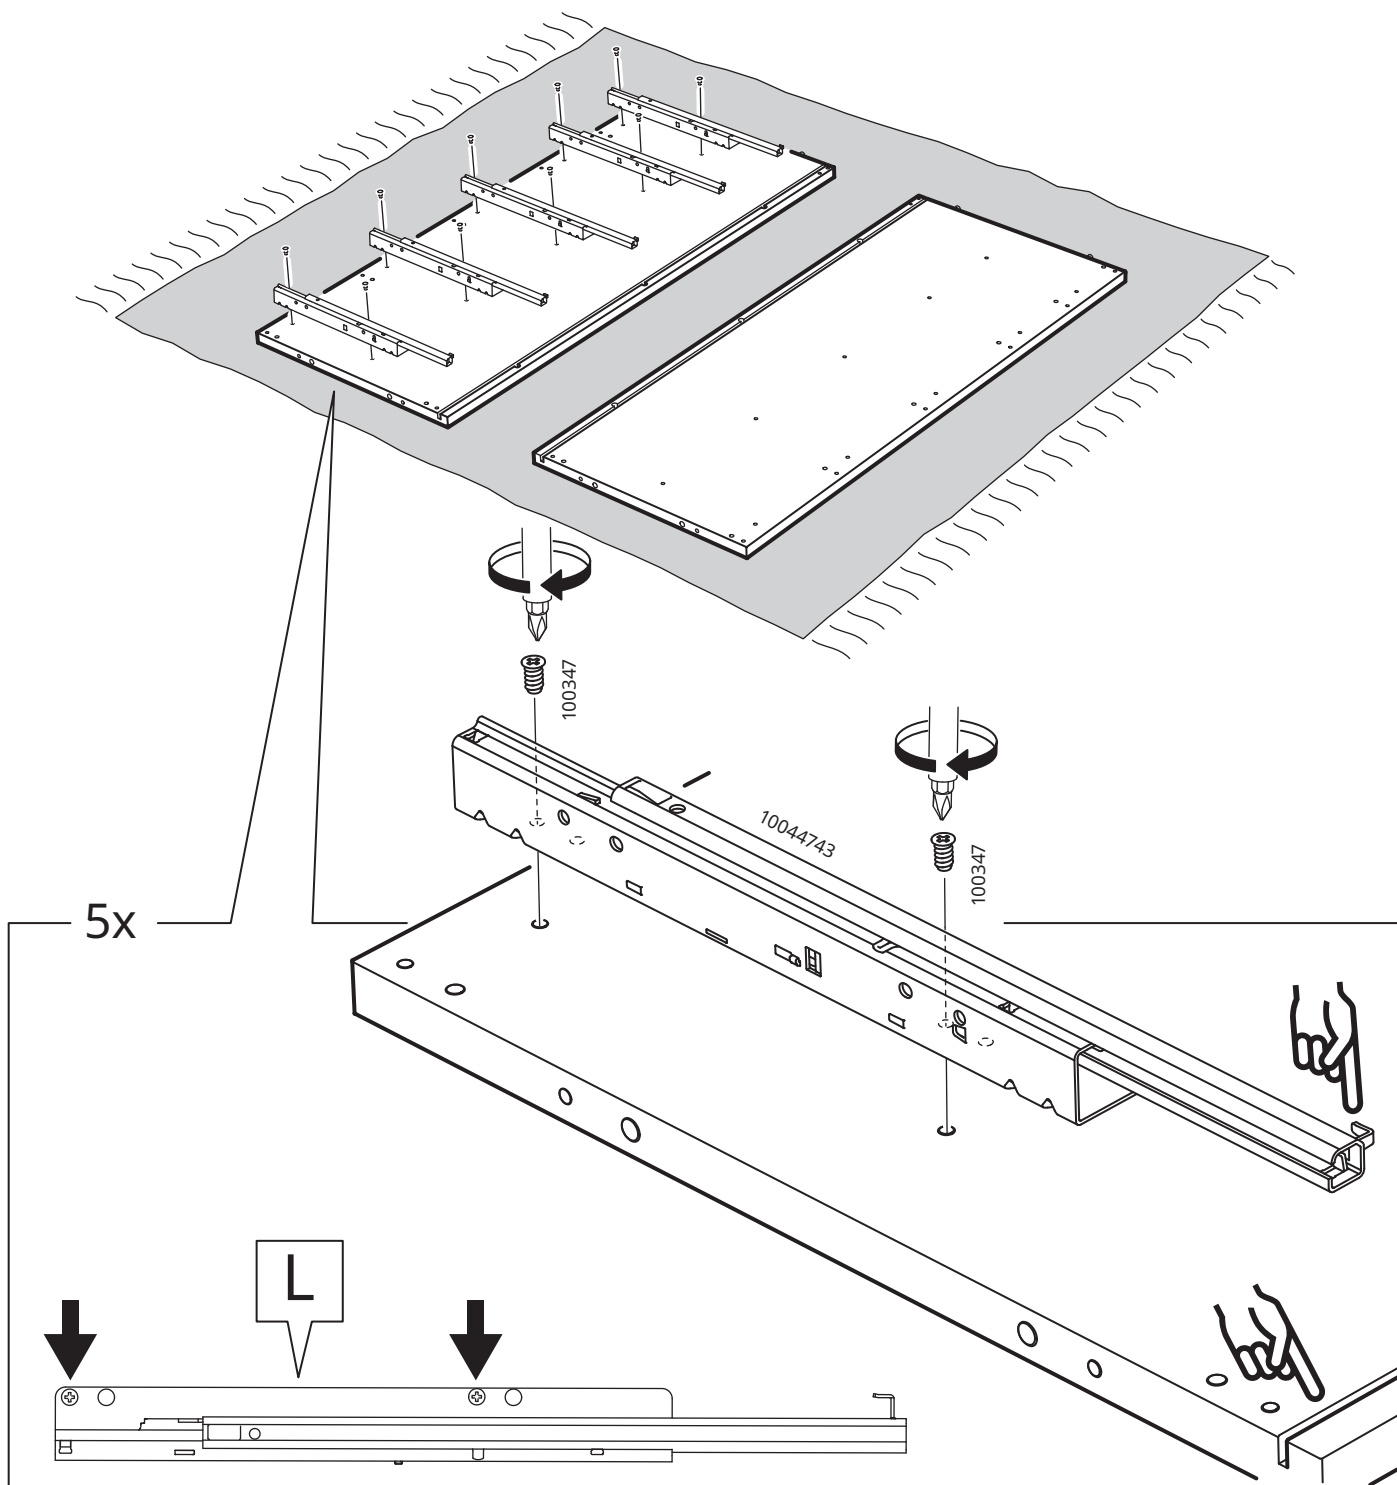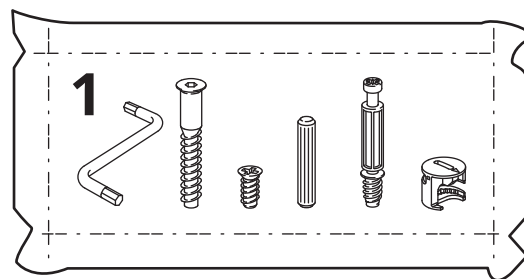


2

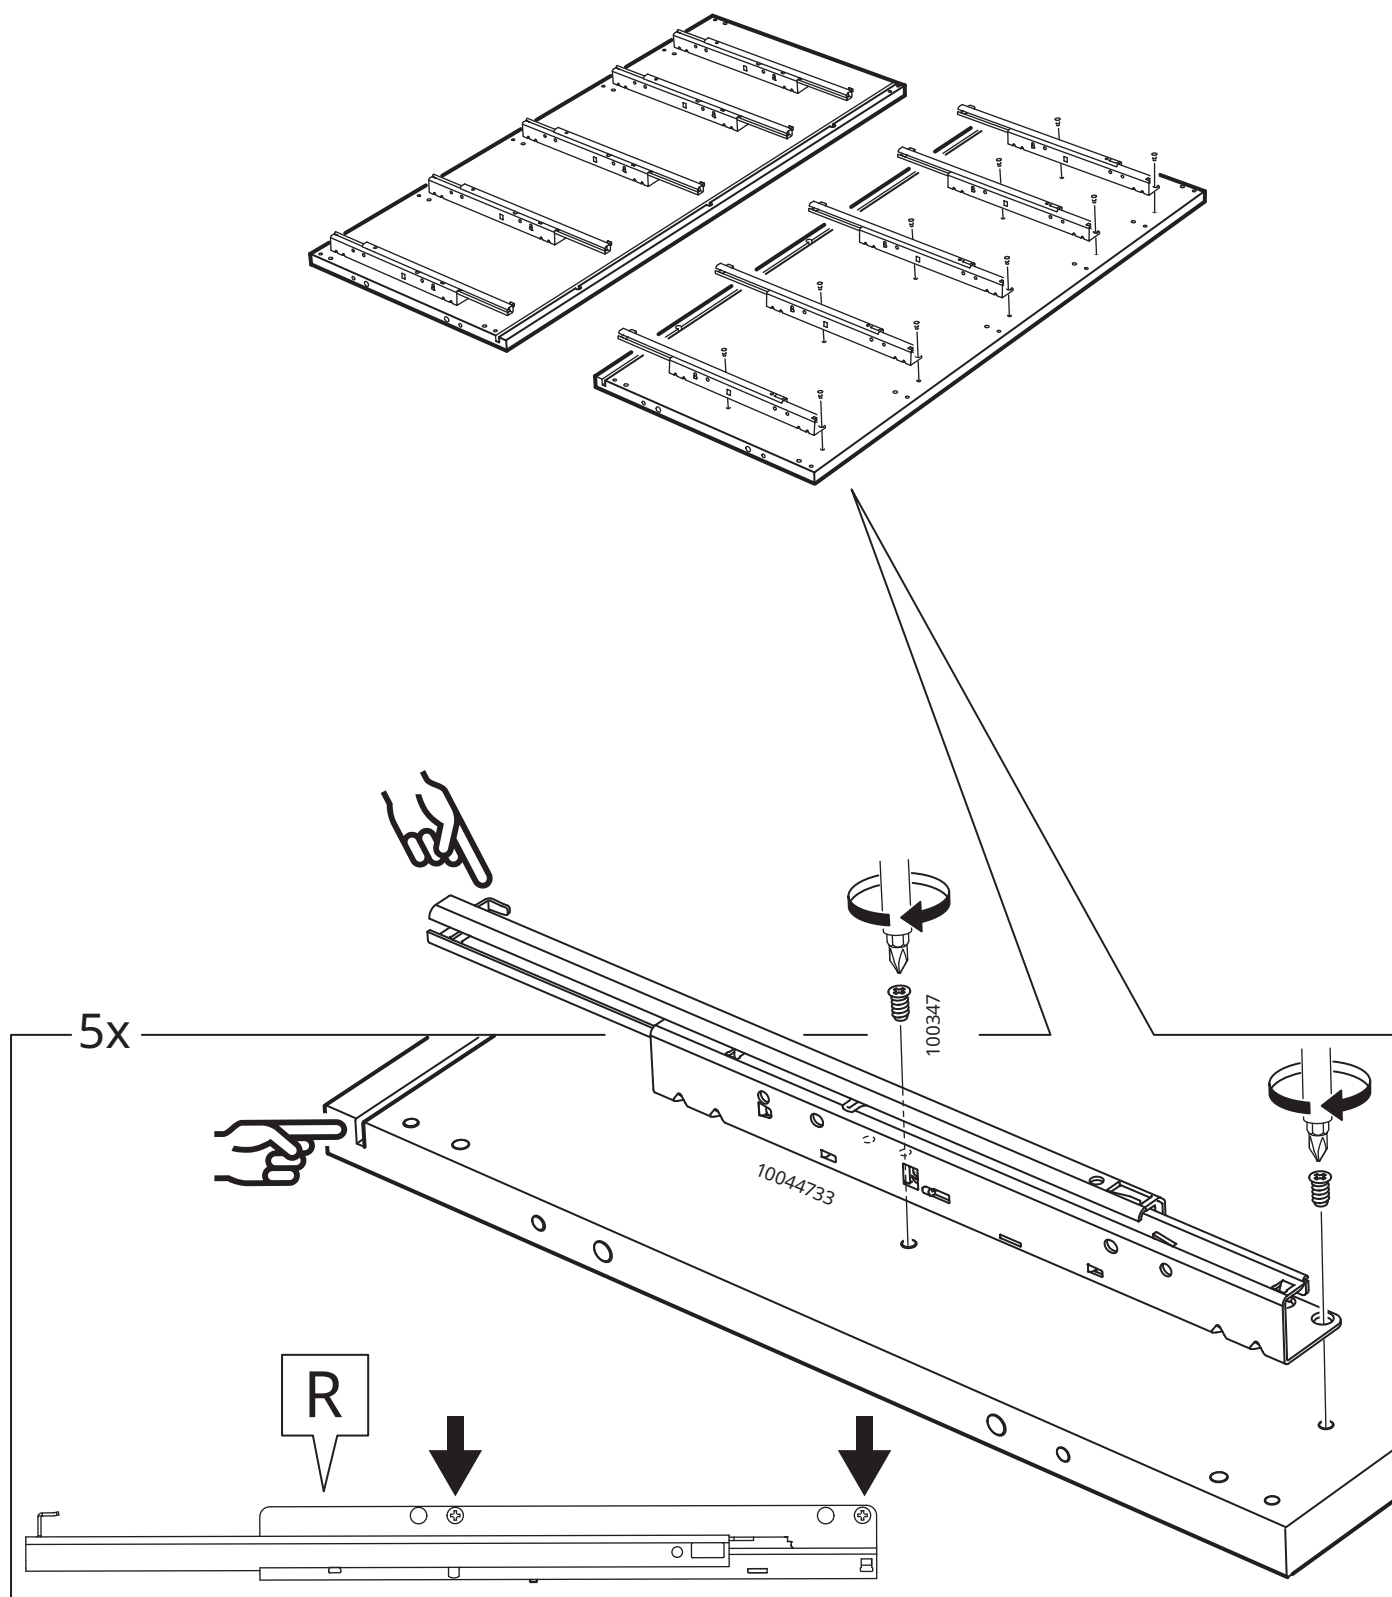 




3

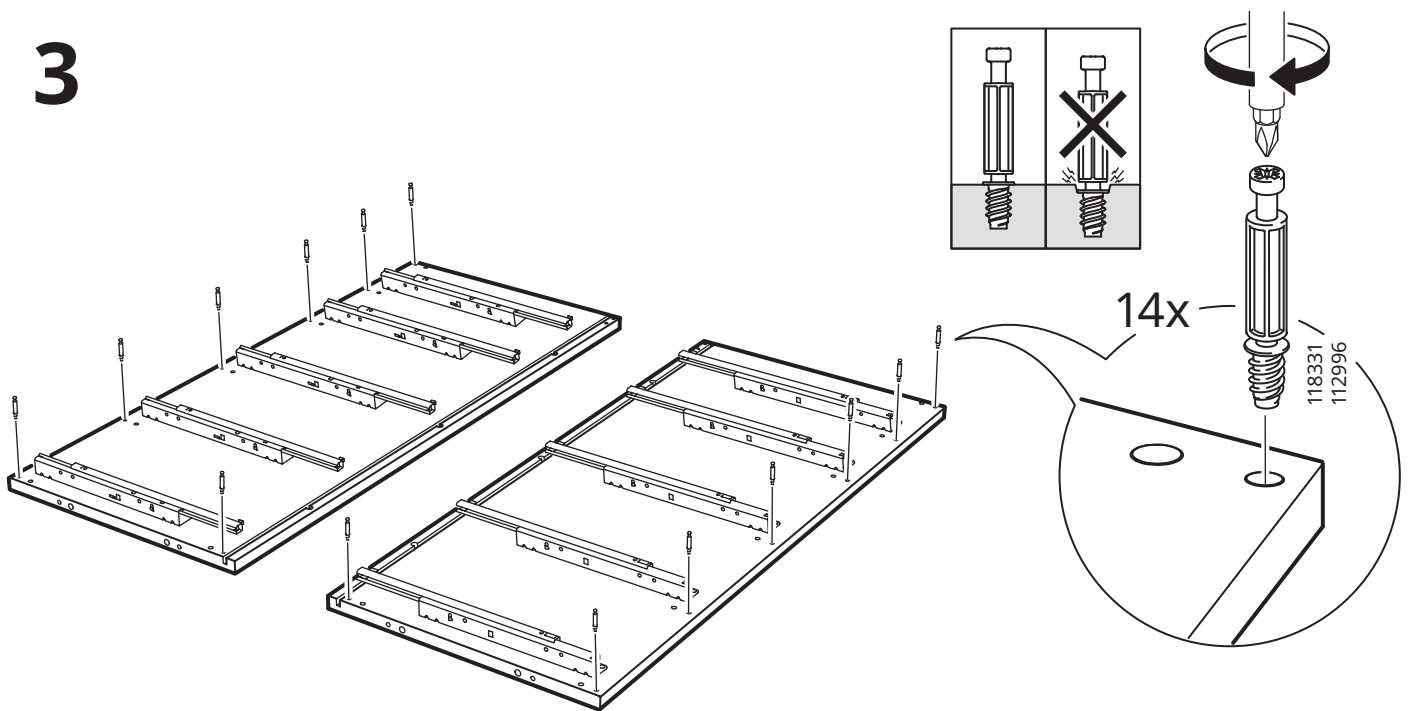 




4

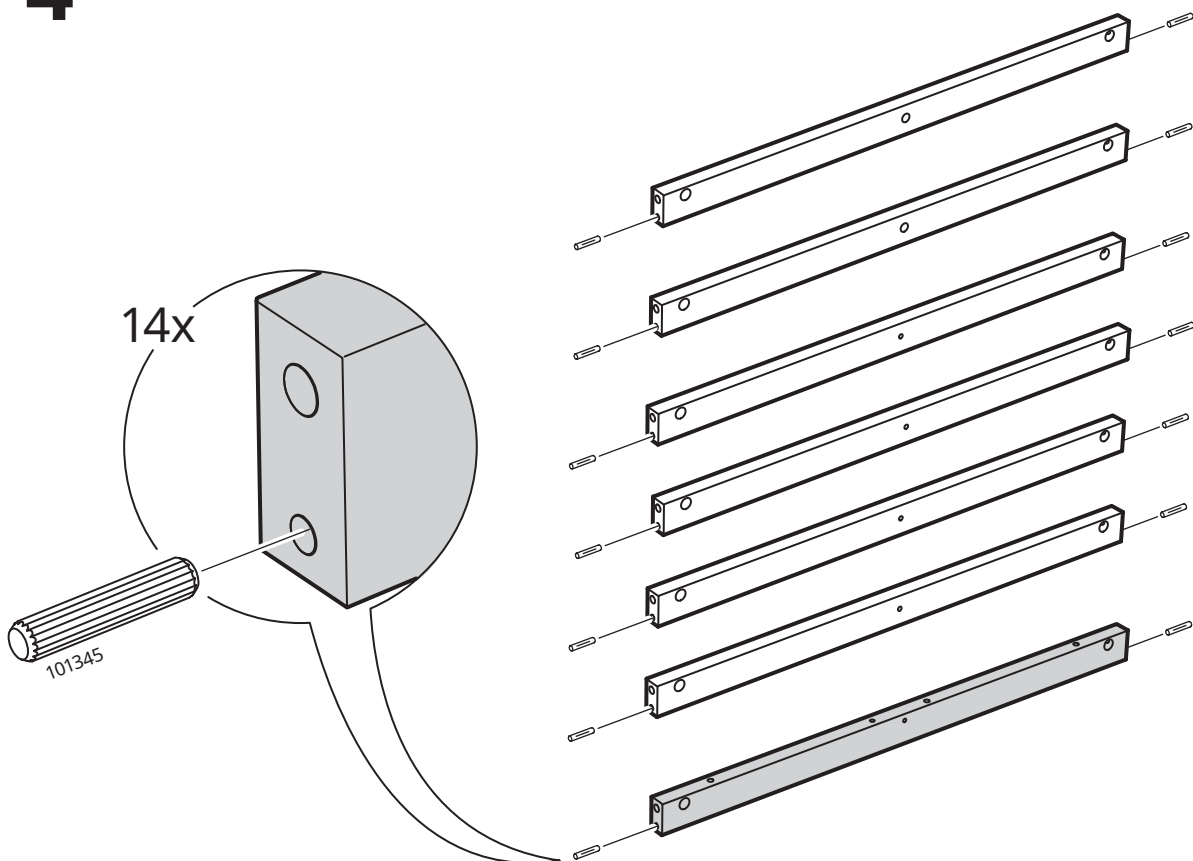 






5

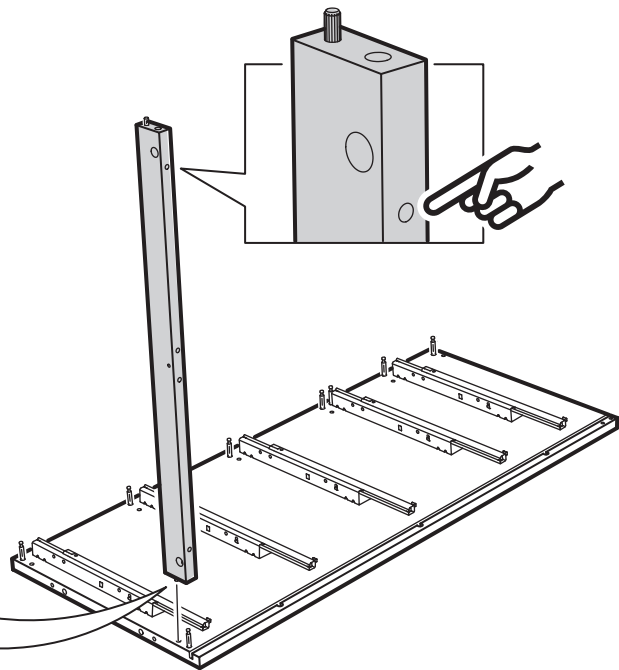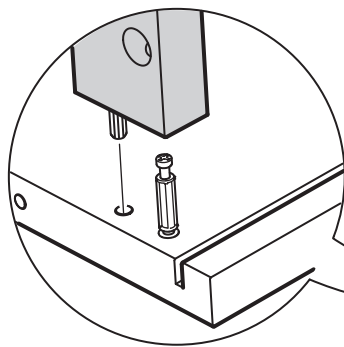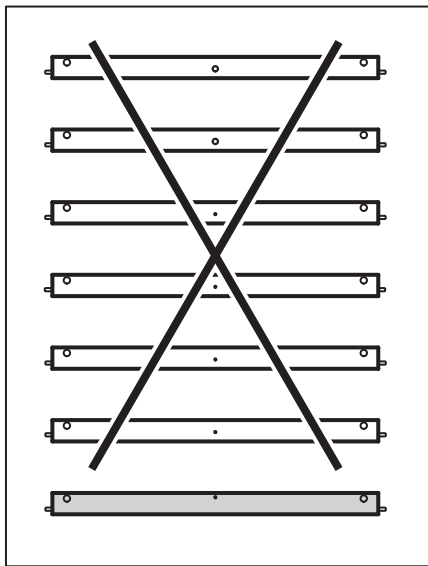   


6

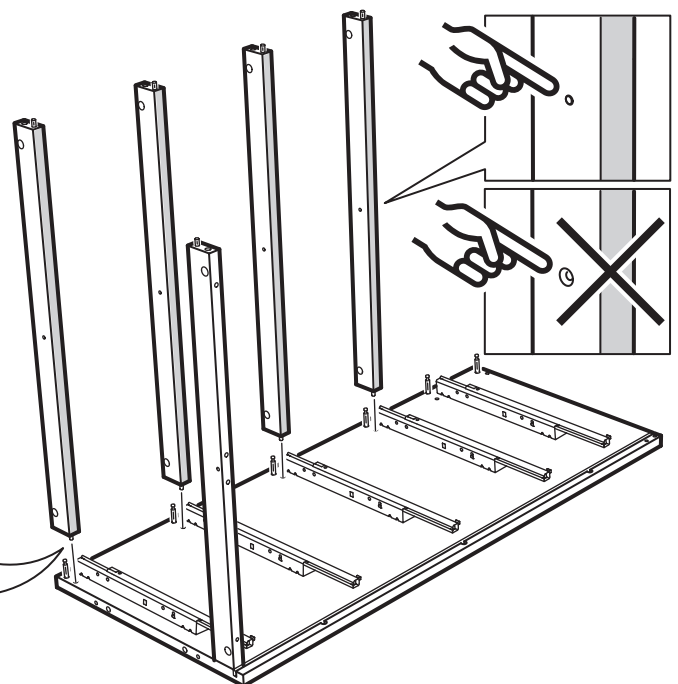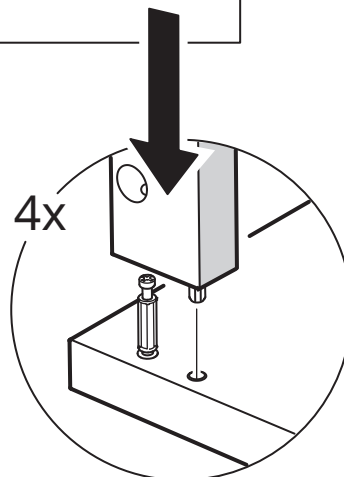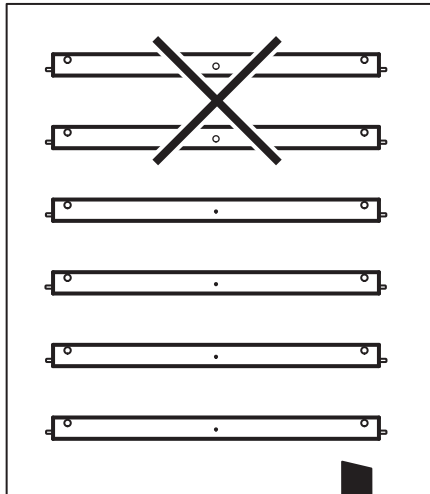   


7

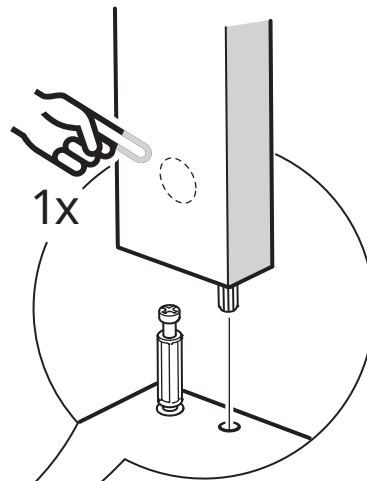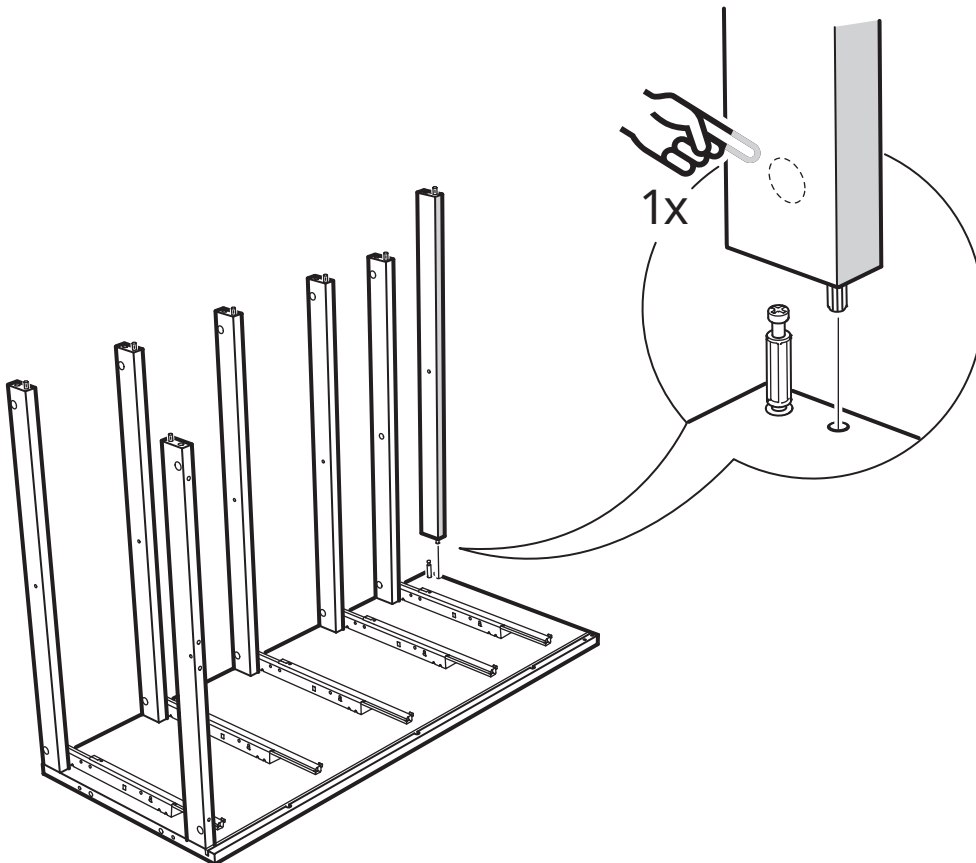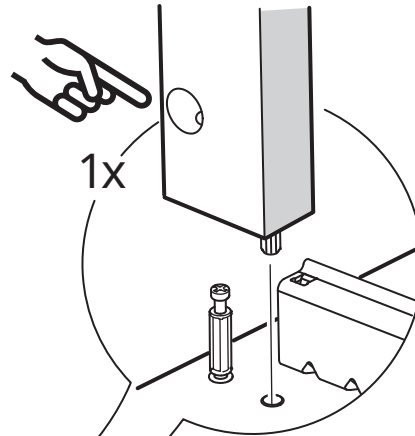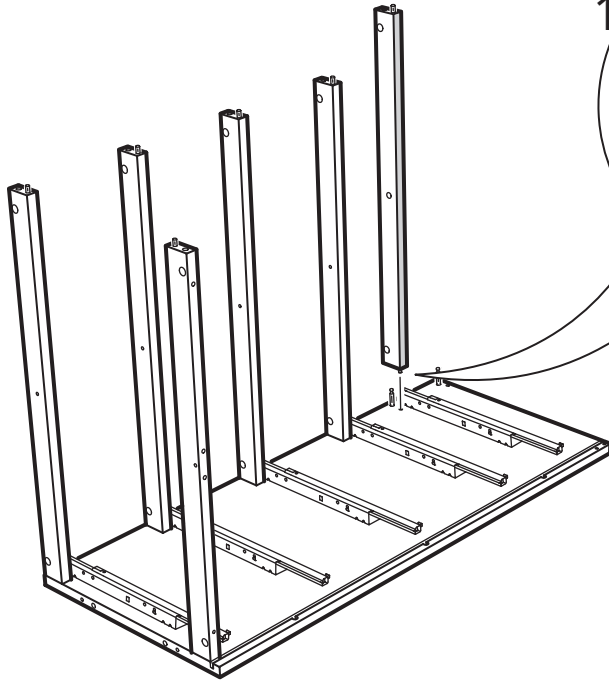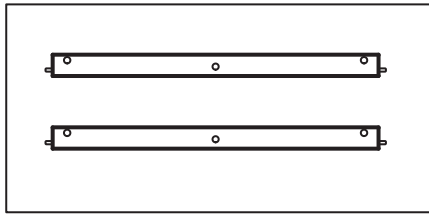     


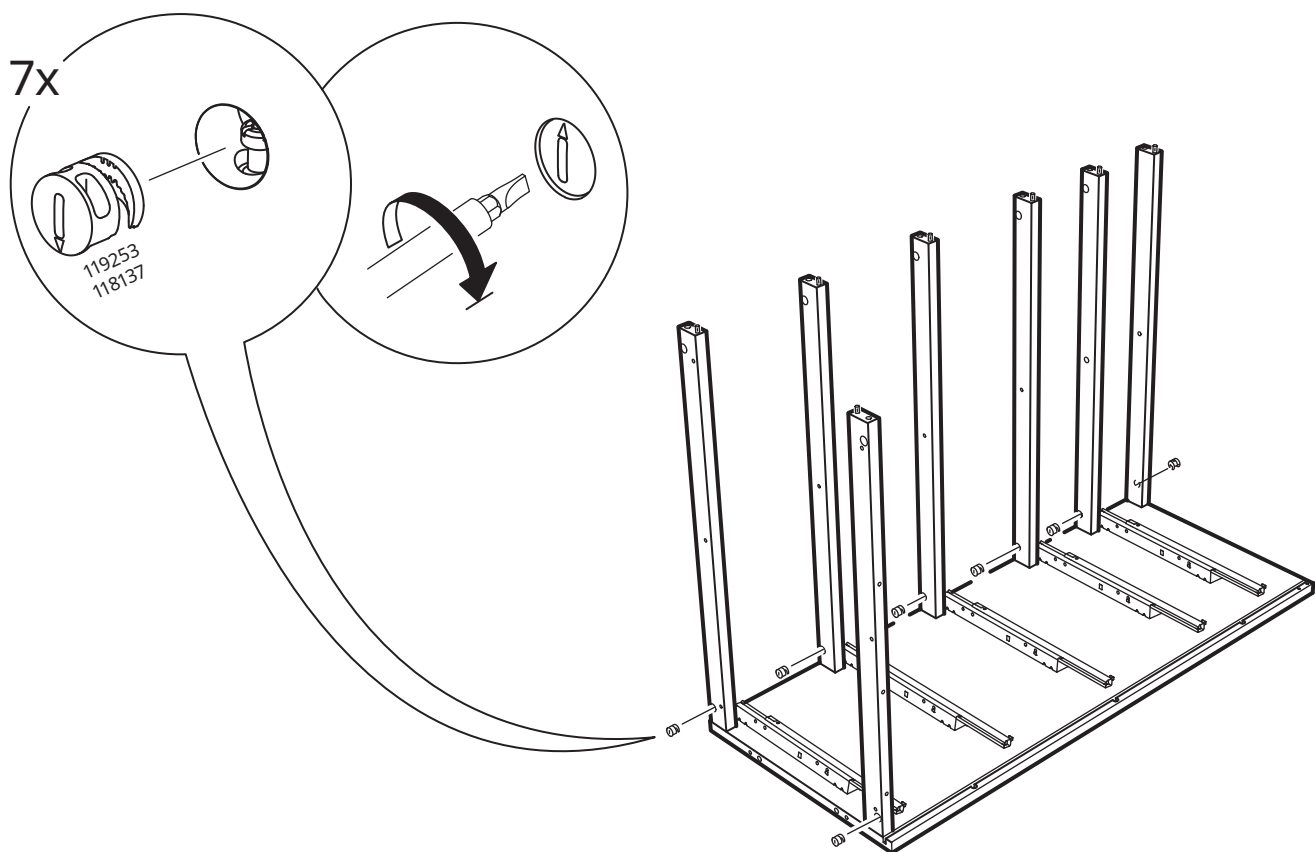 


9

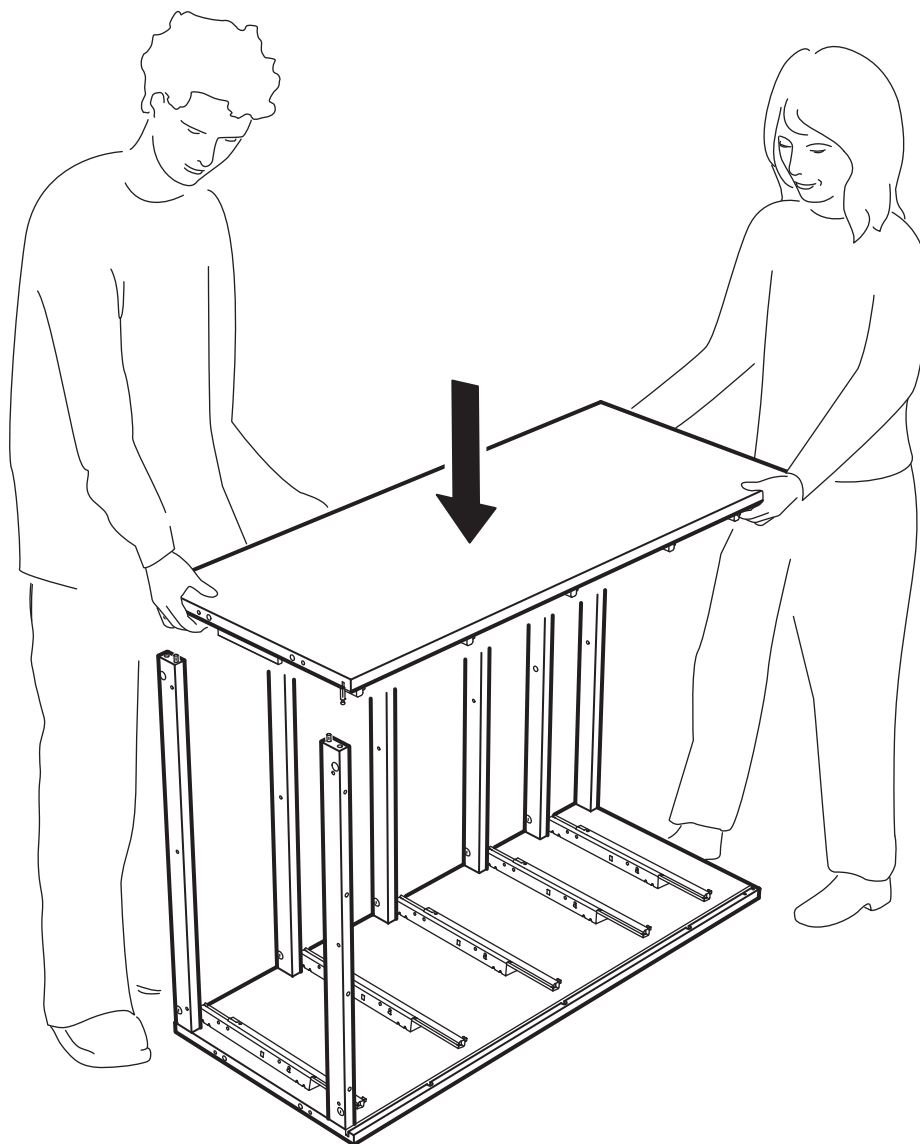 


10

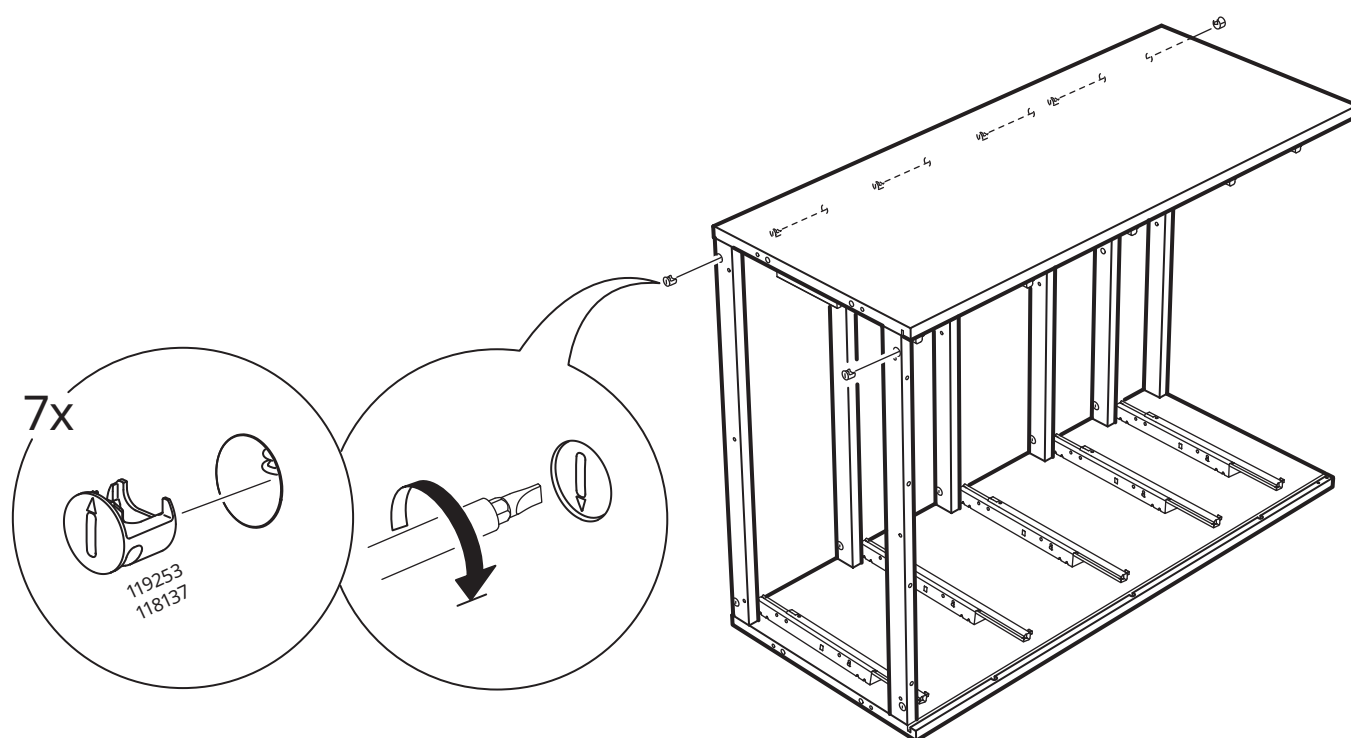 


11

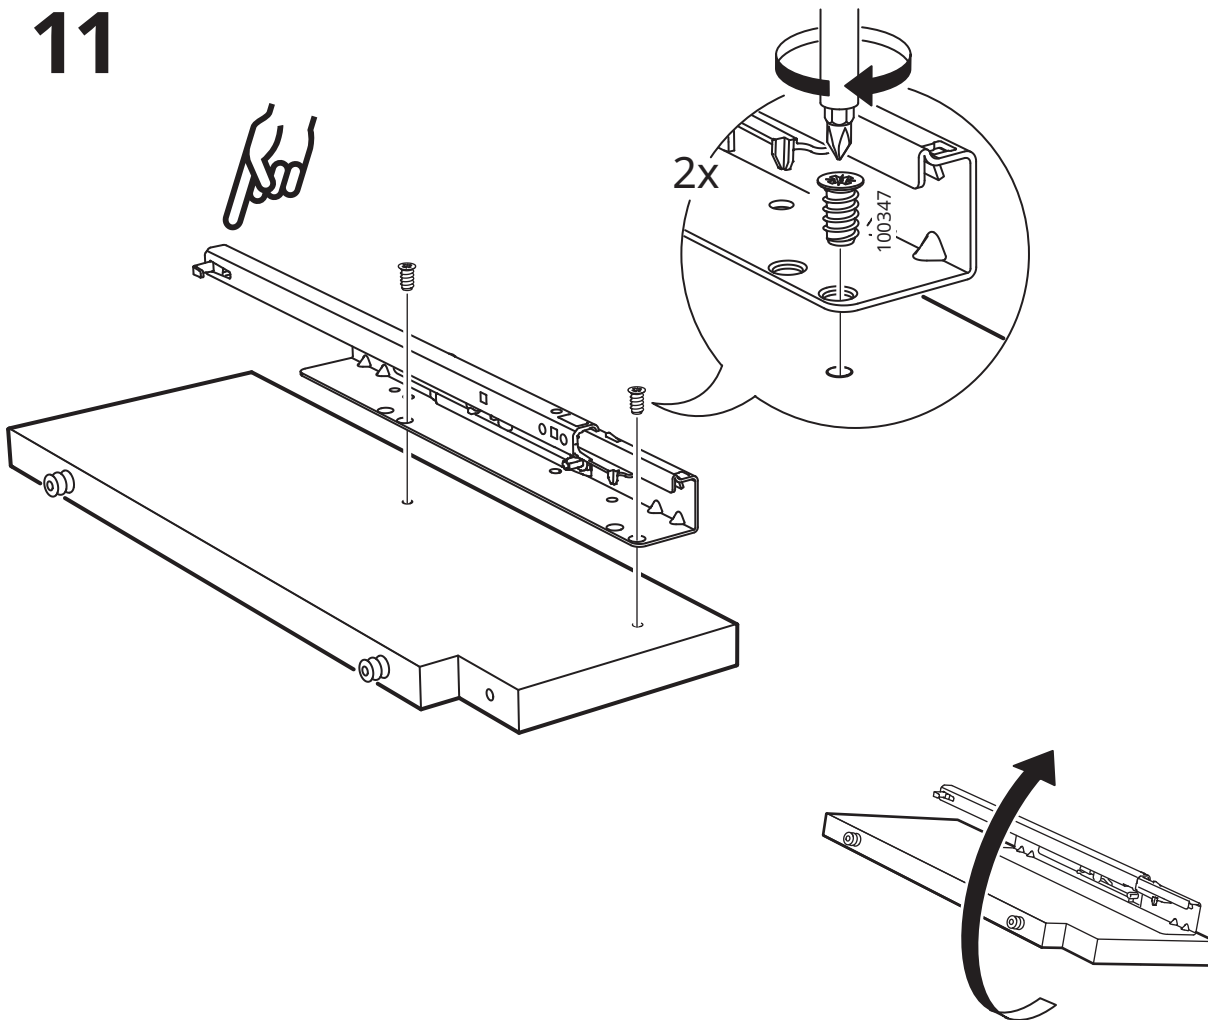 


12

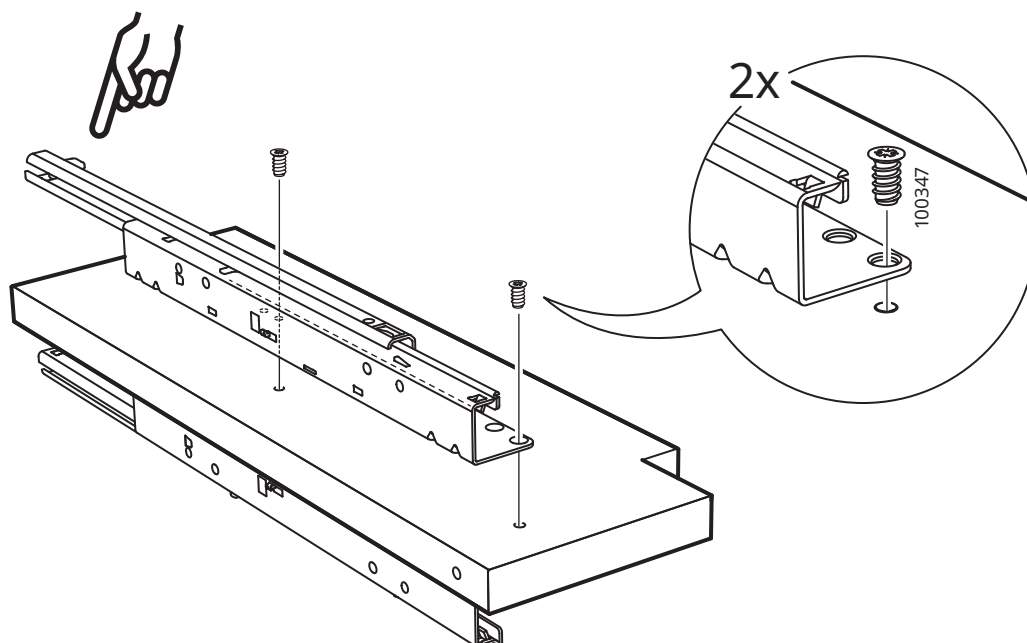 


13


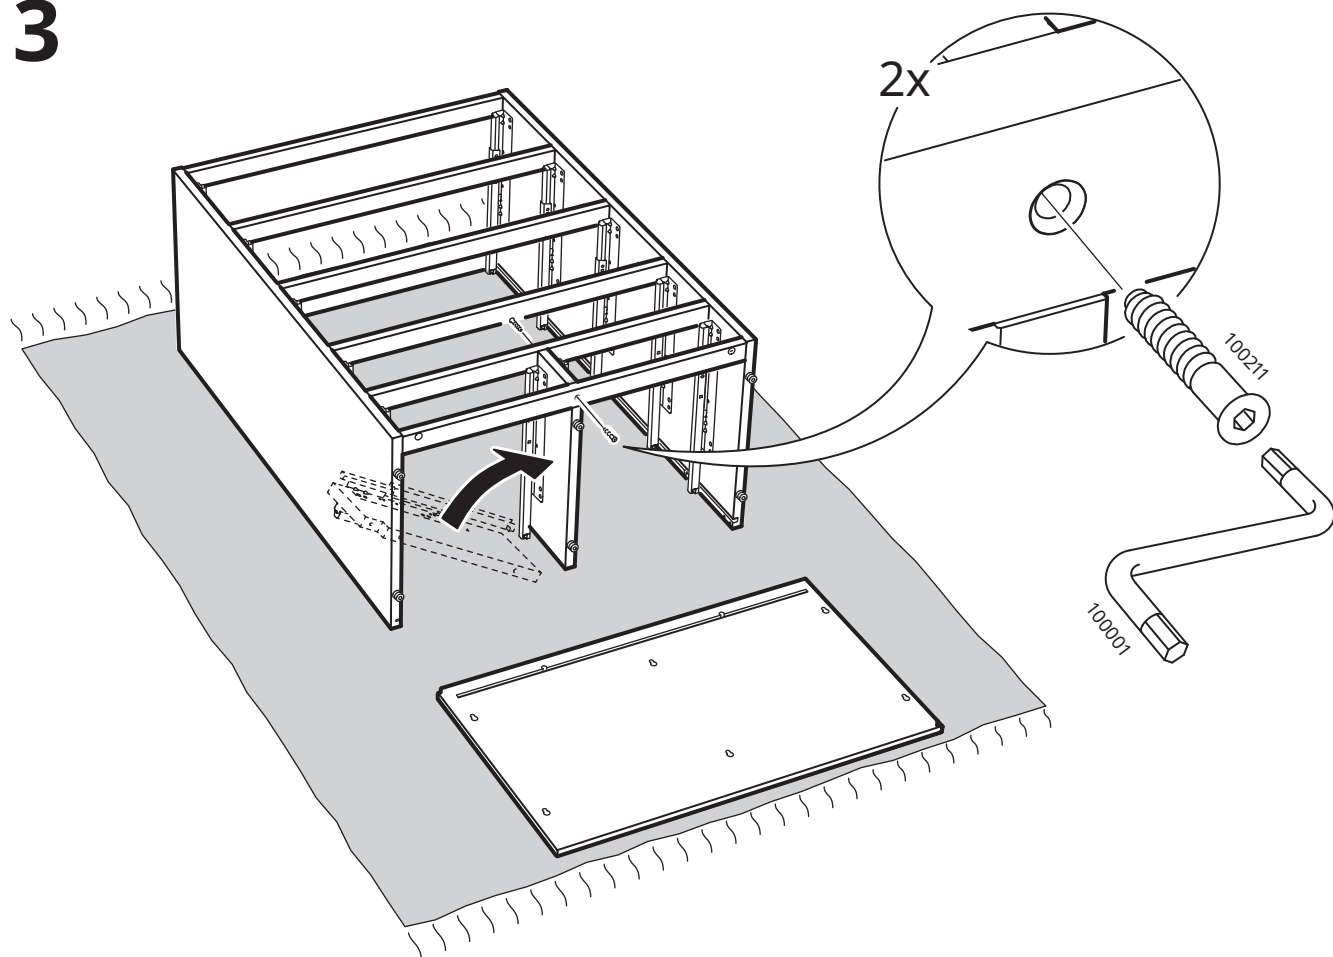 


14

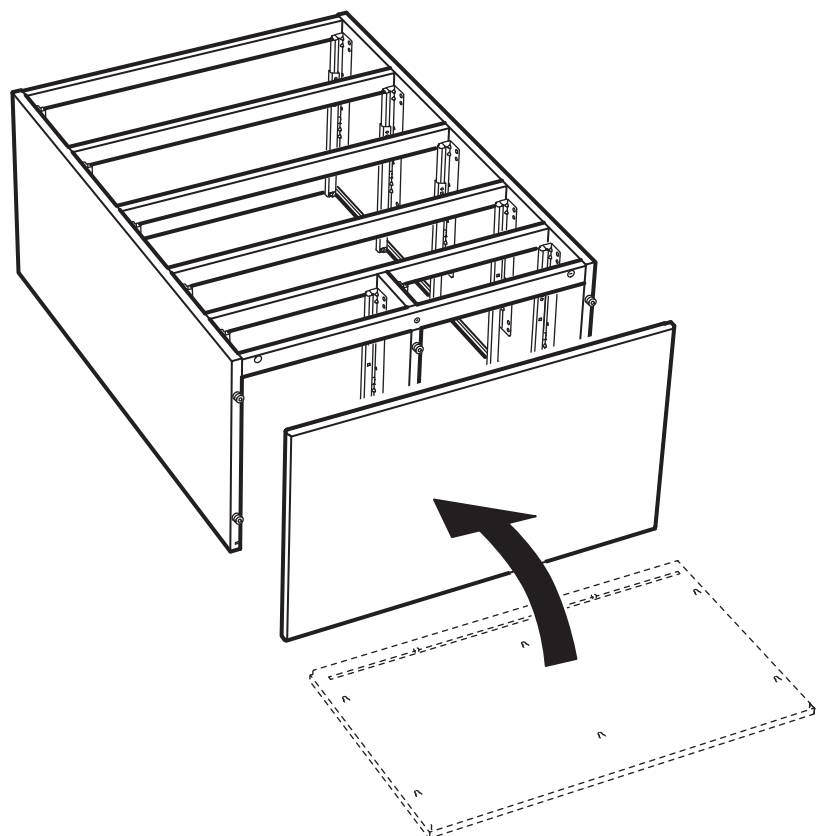 


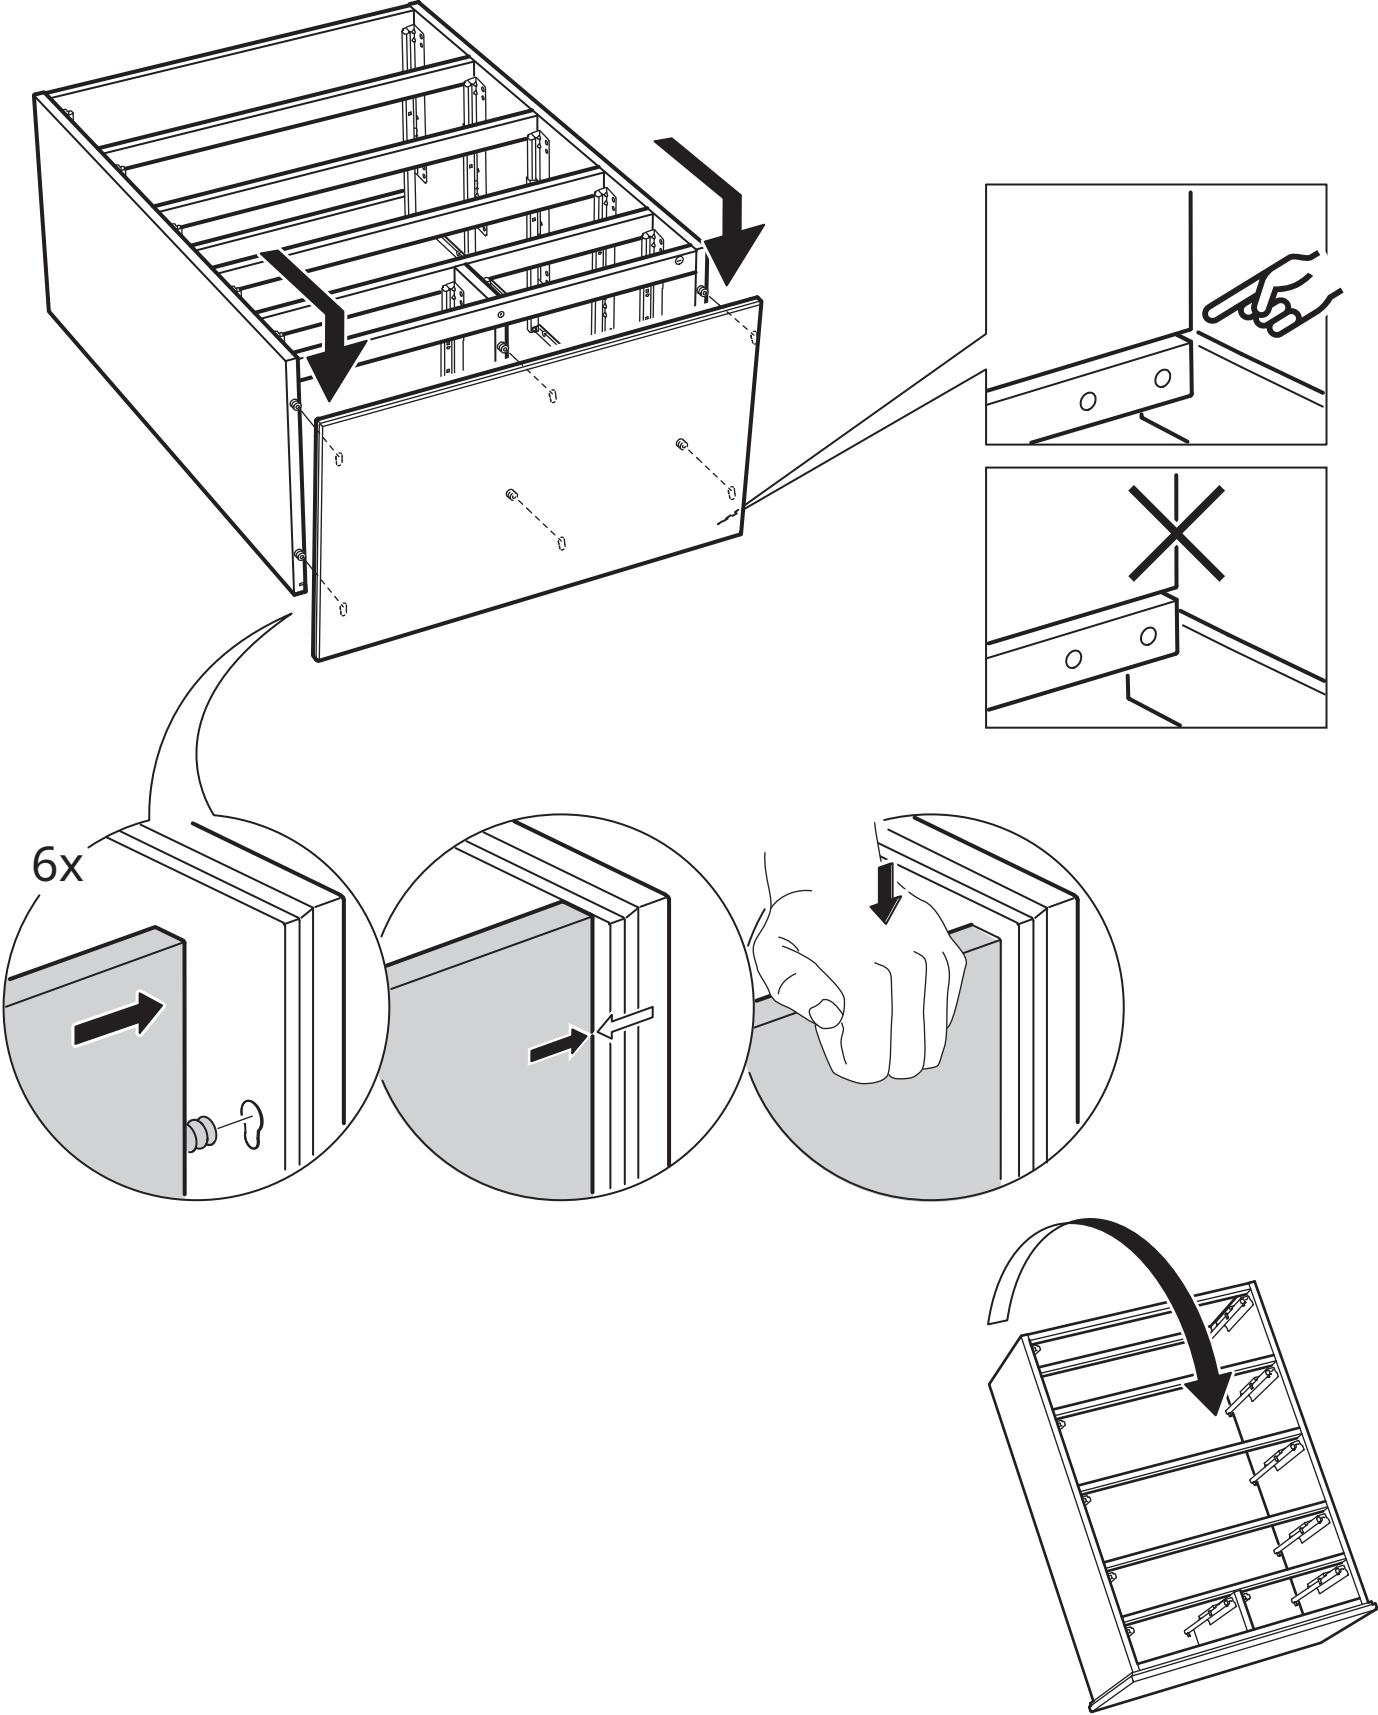 


16

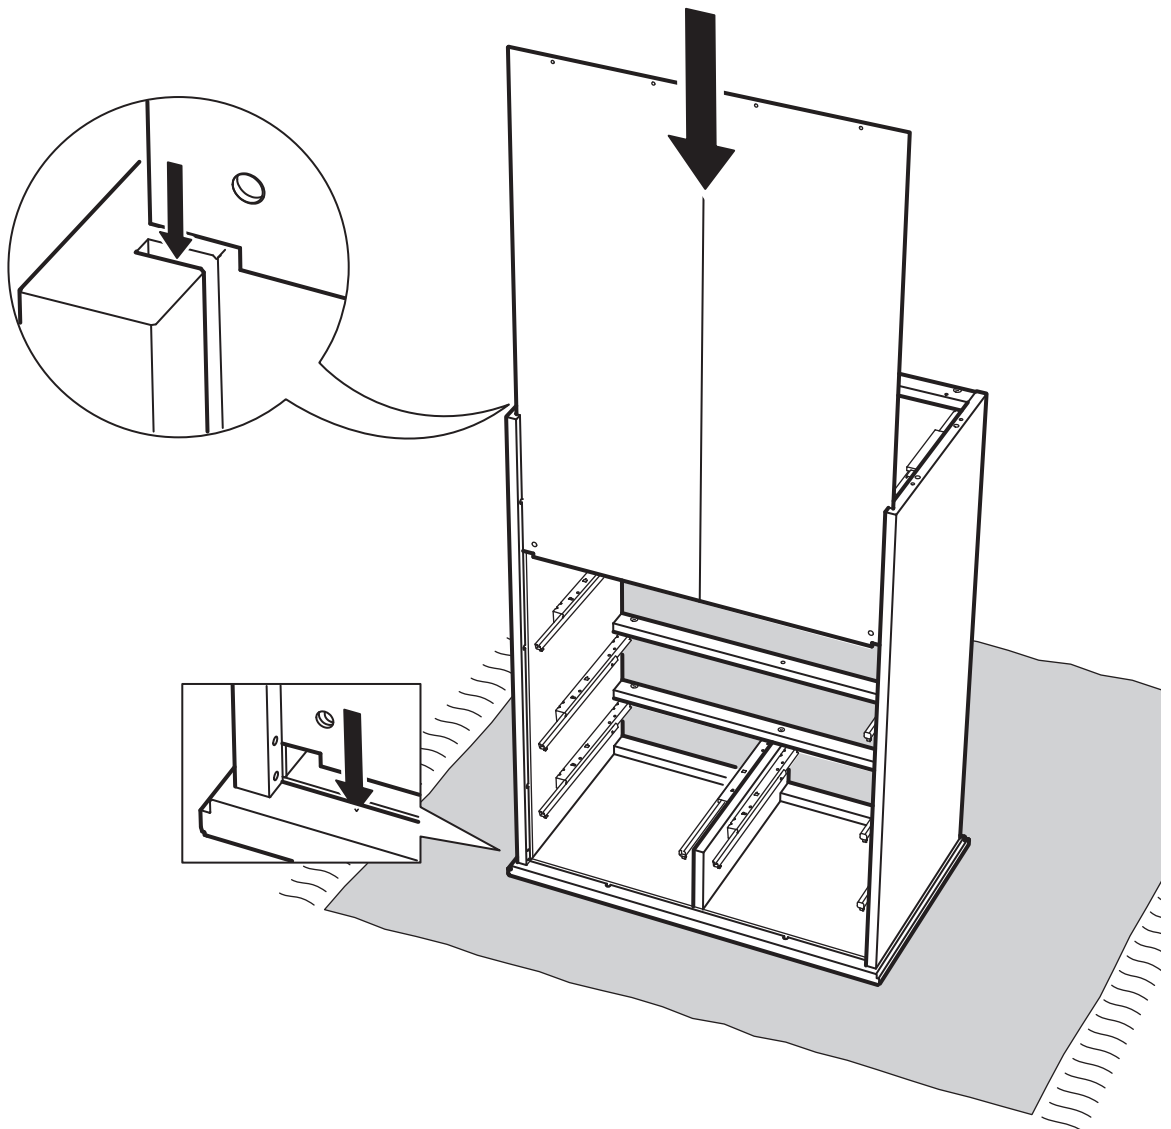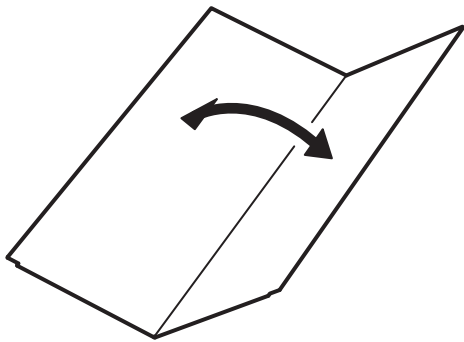  


17

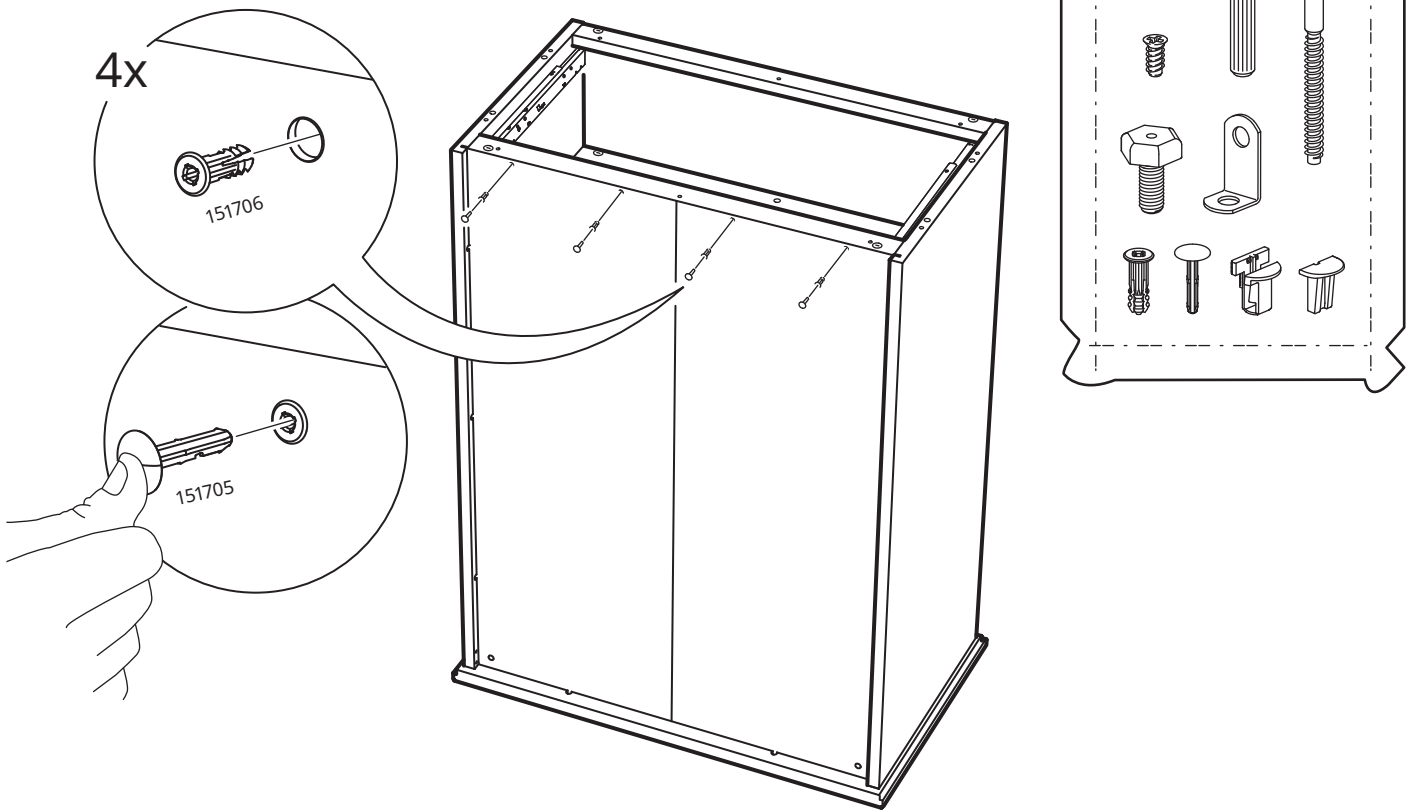 


18

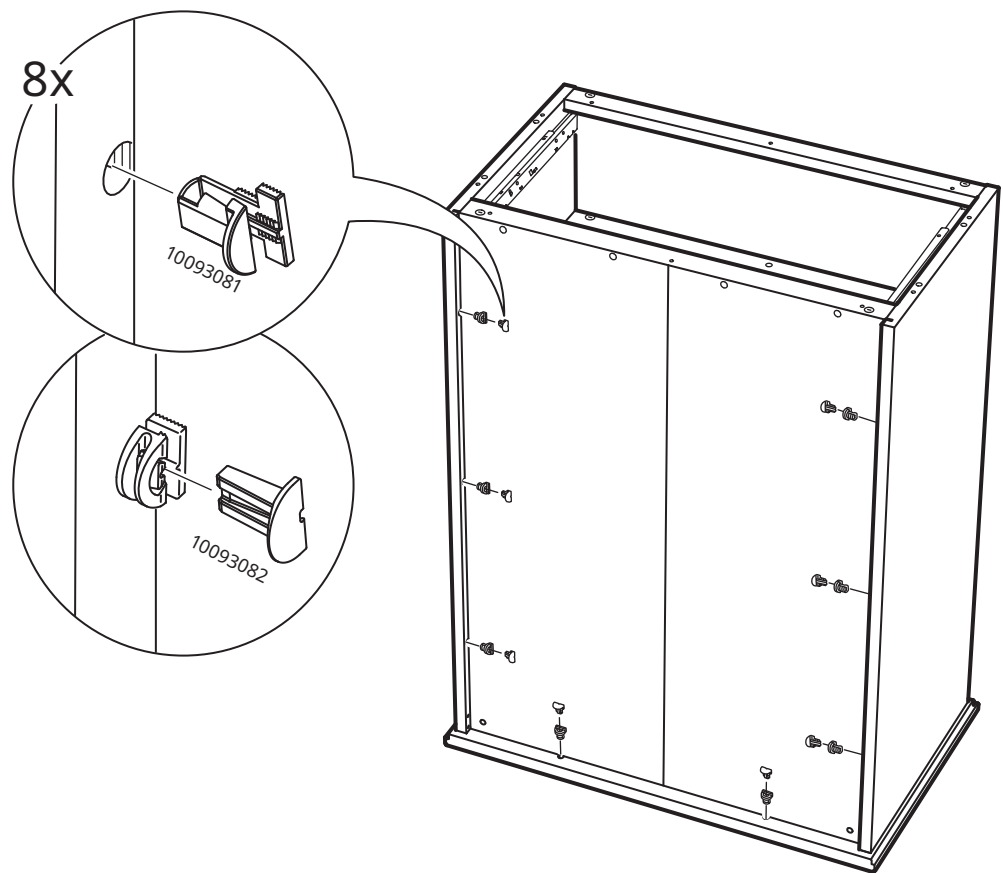 


19

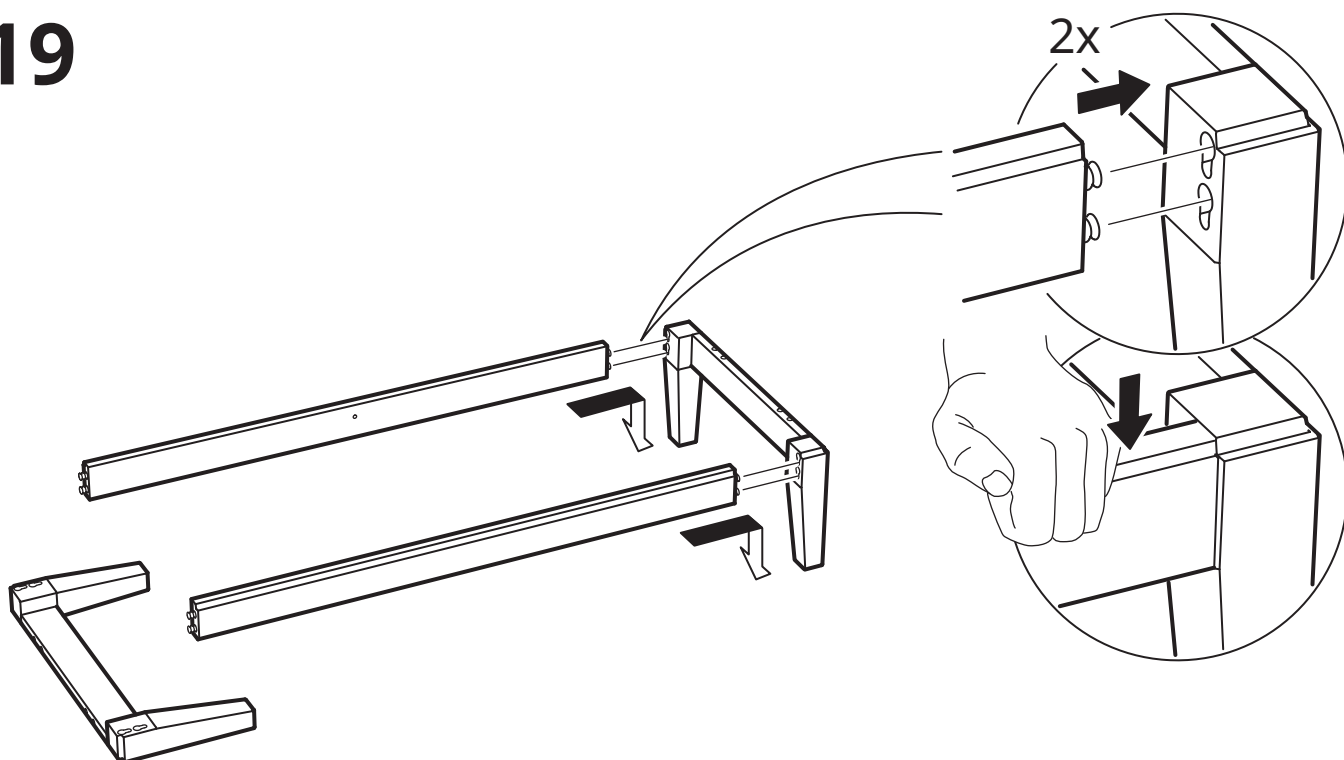 


20

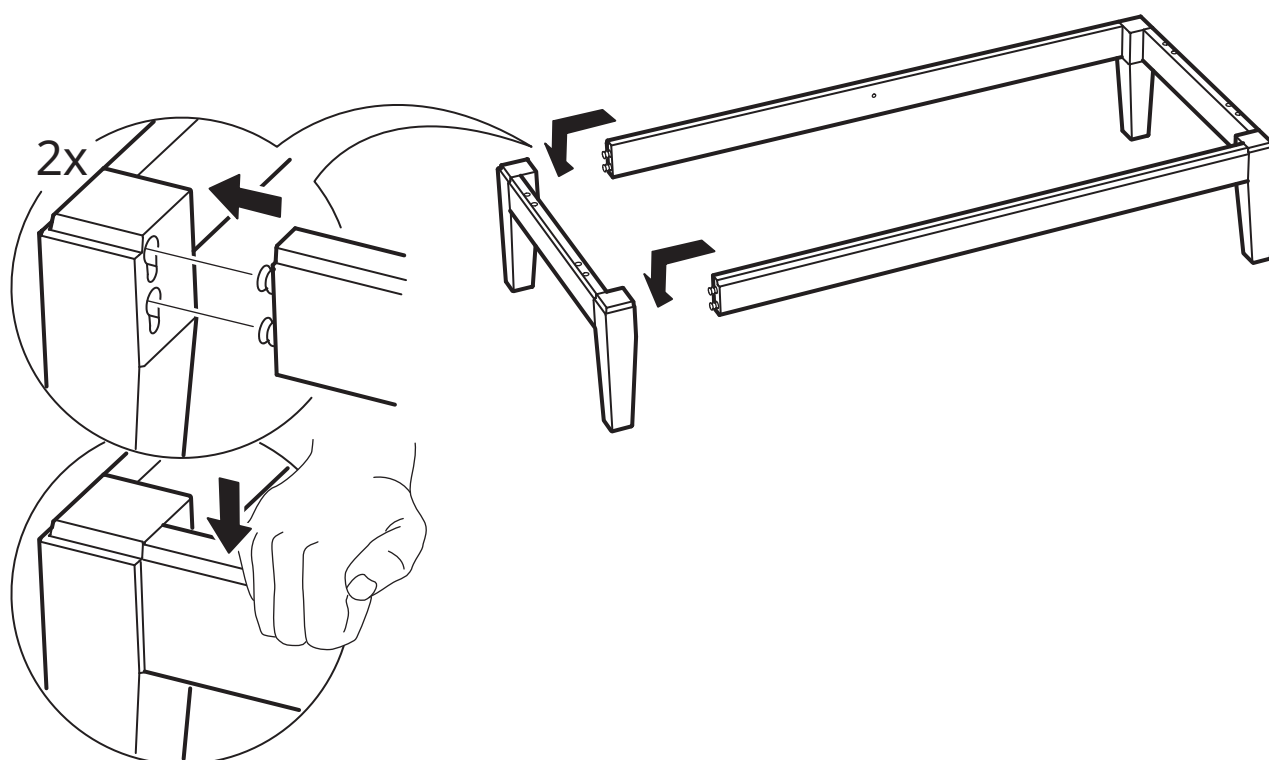 


21

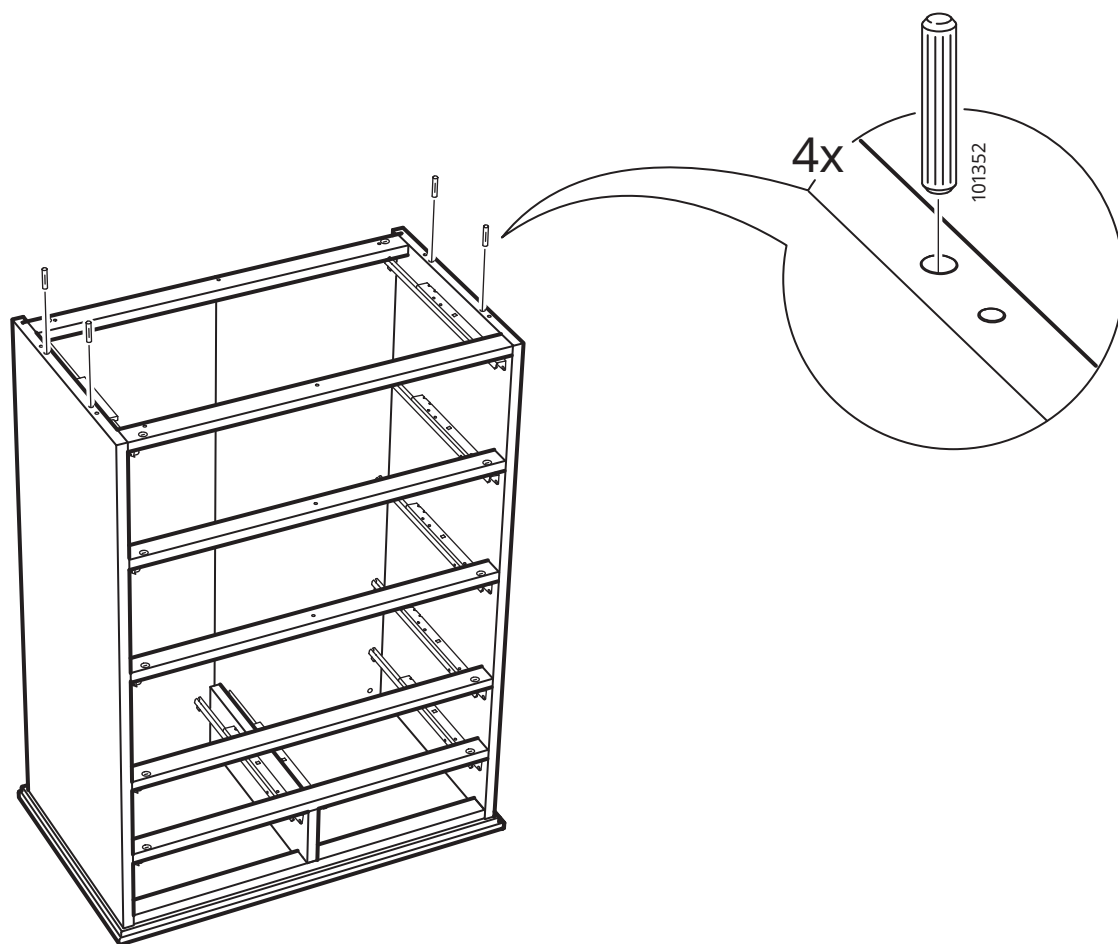 


22

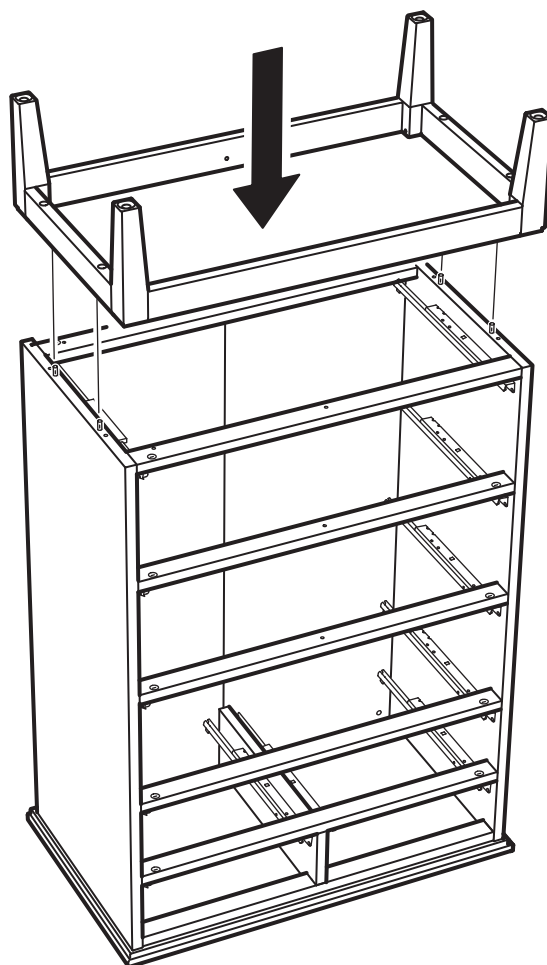 




23


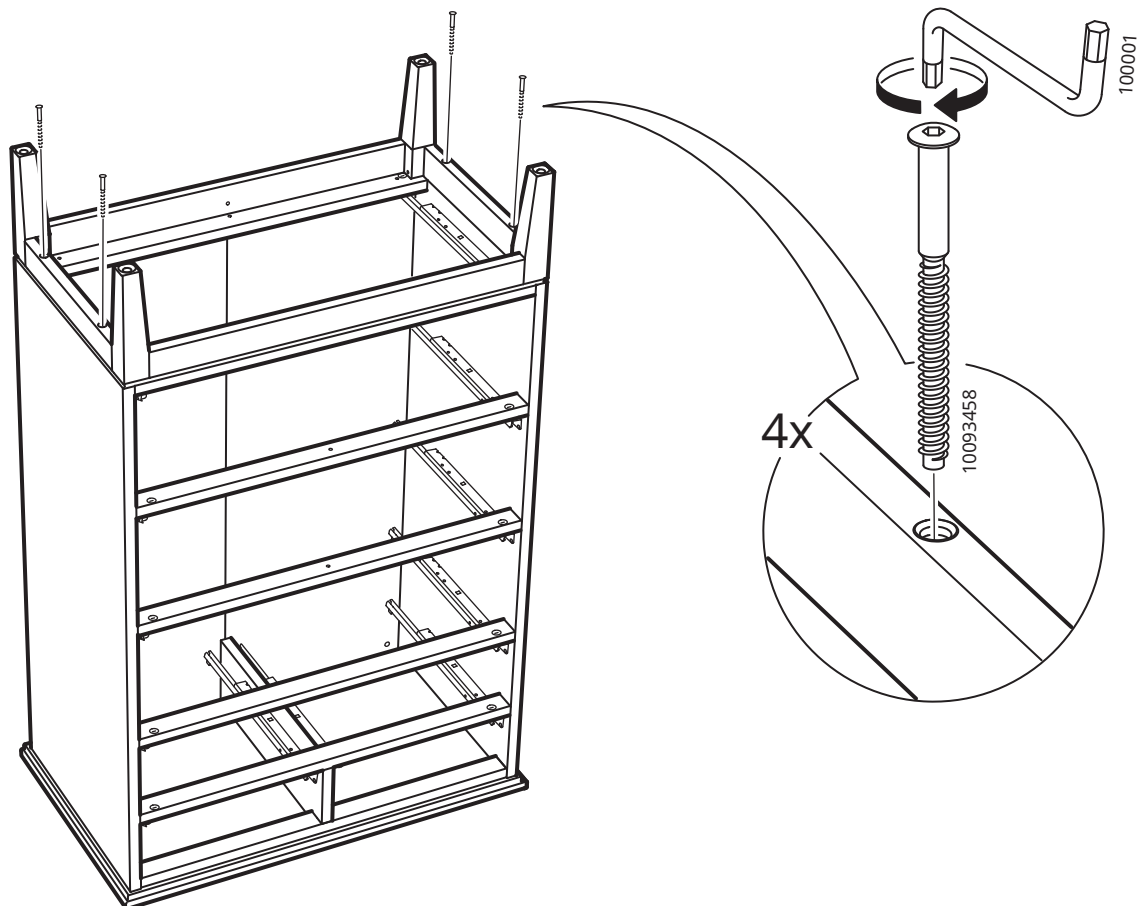 


24

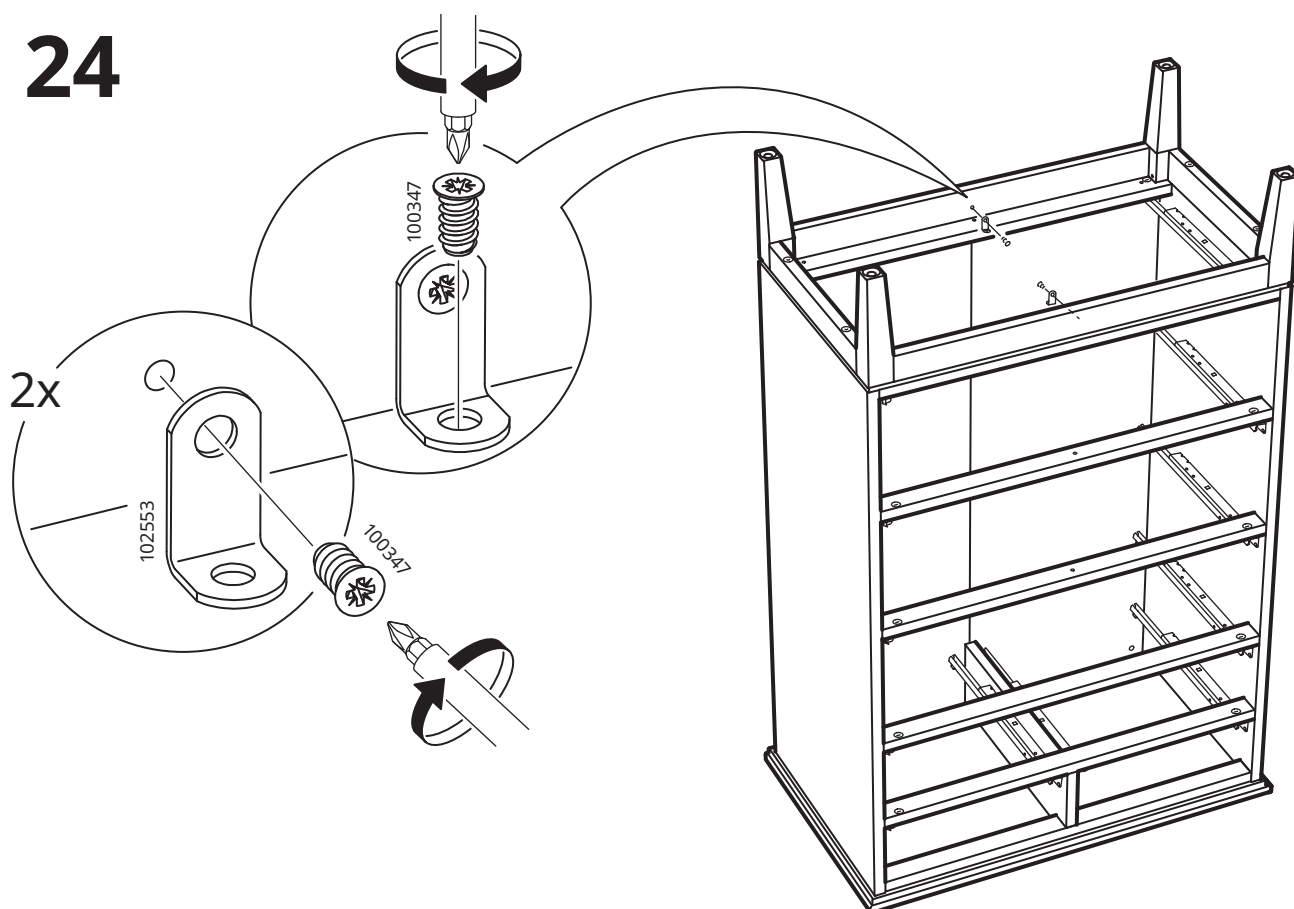 


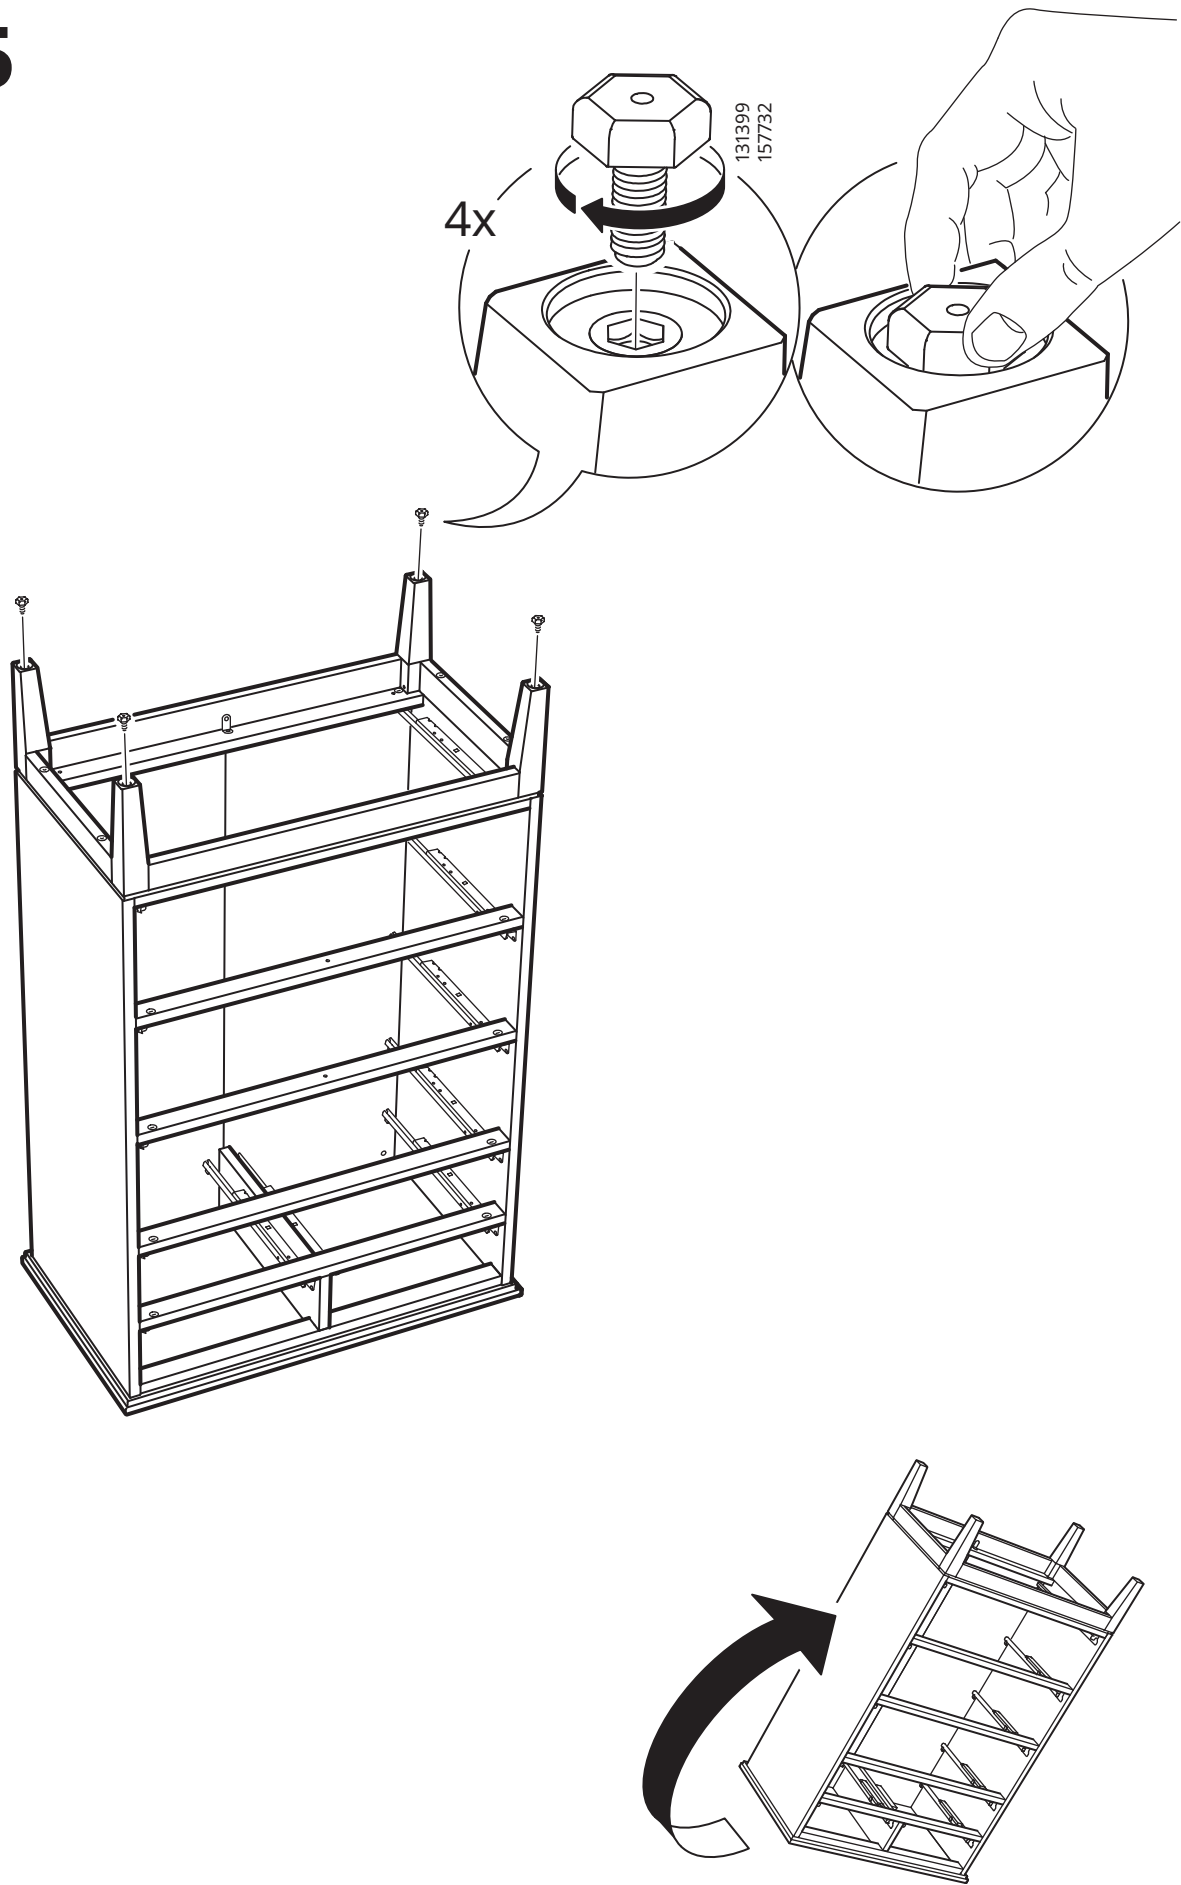 

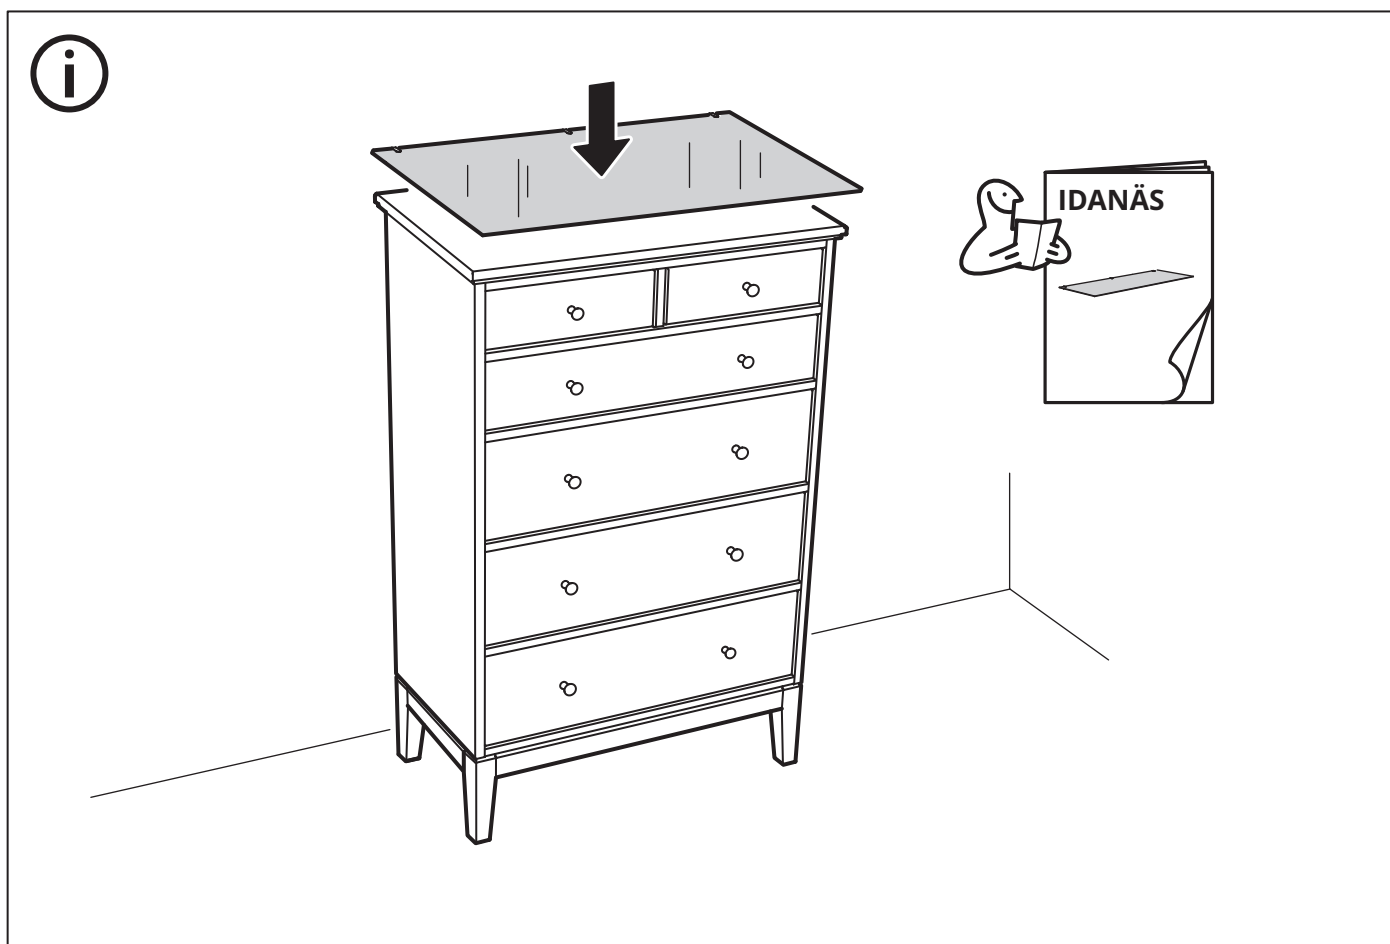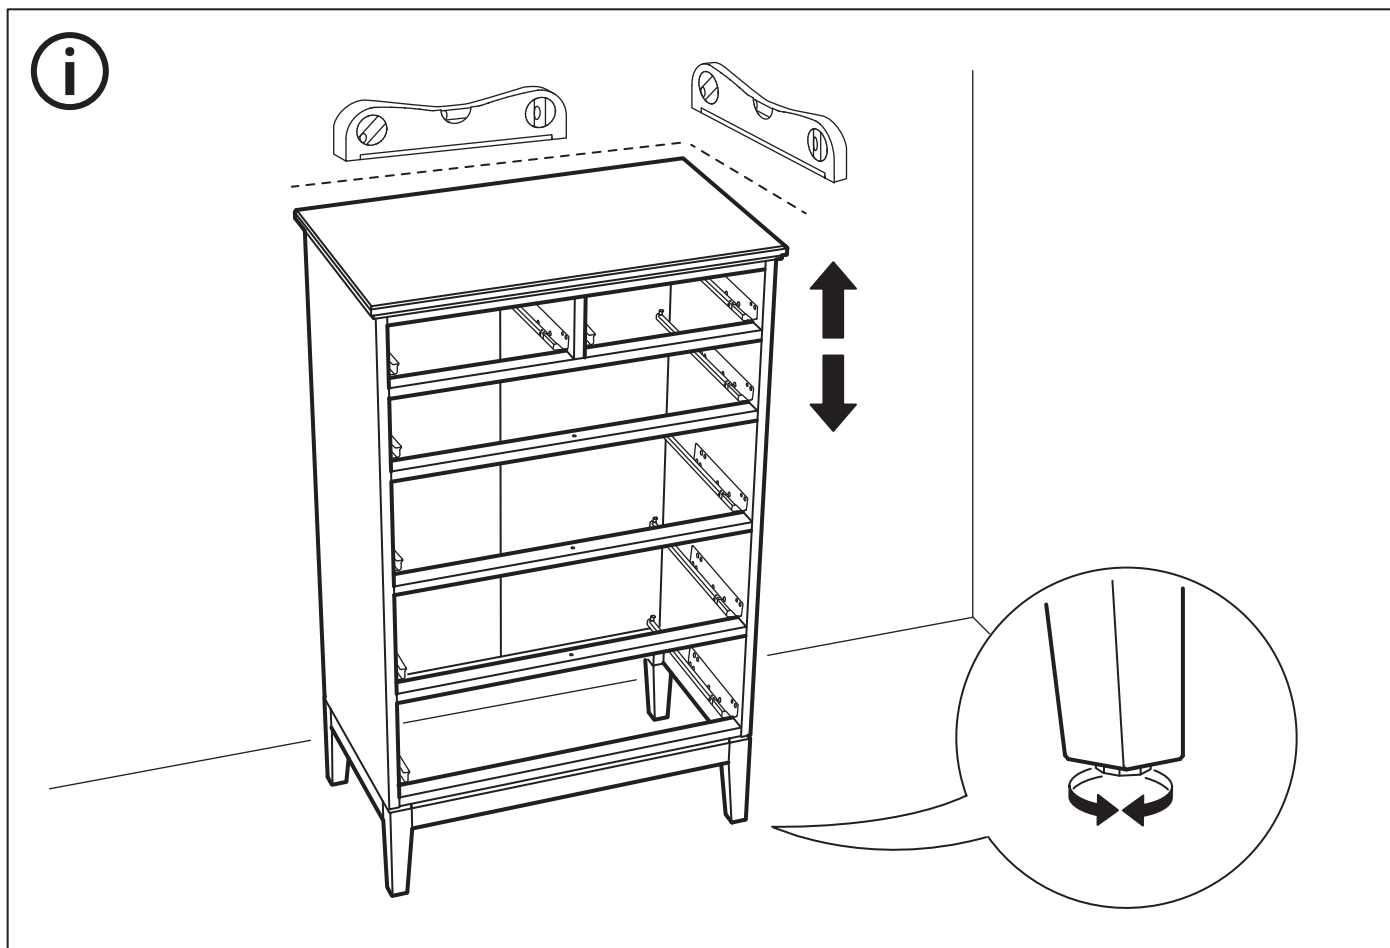  


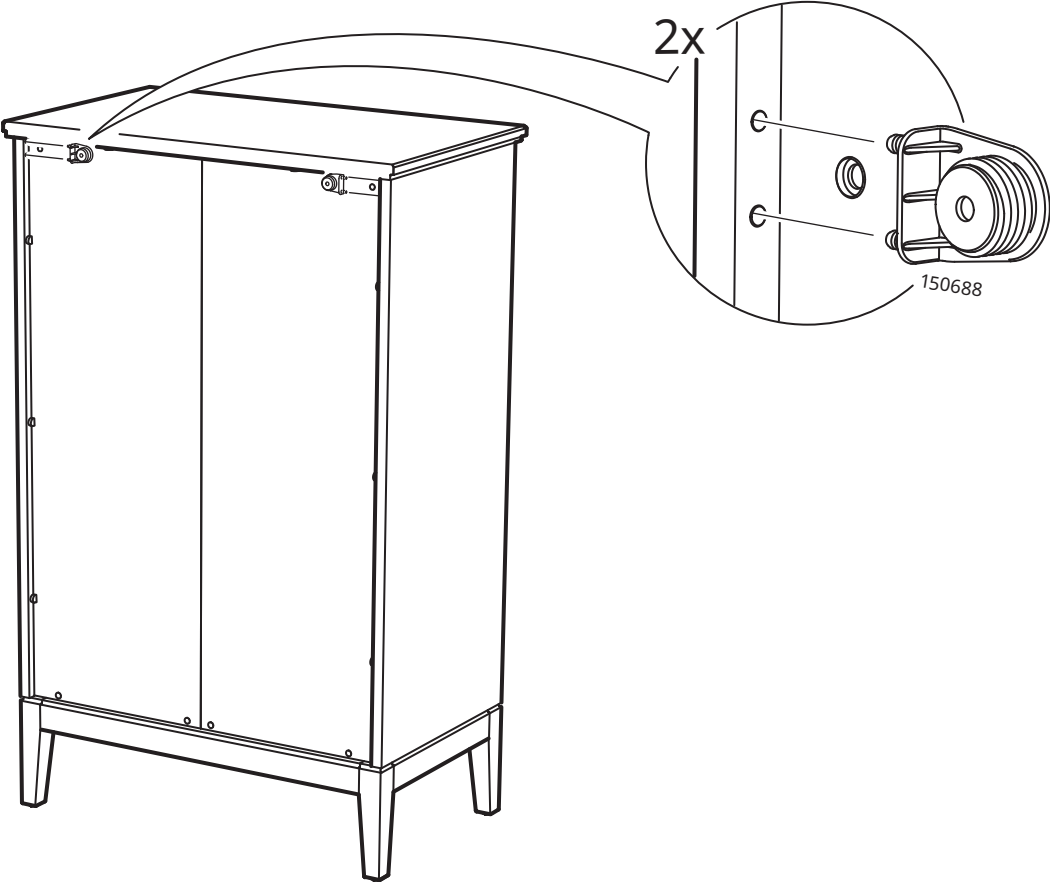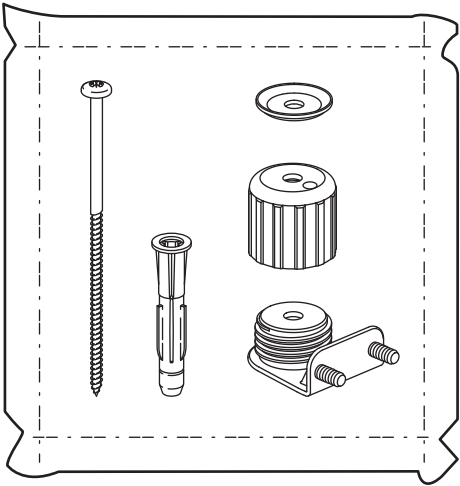  


27

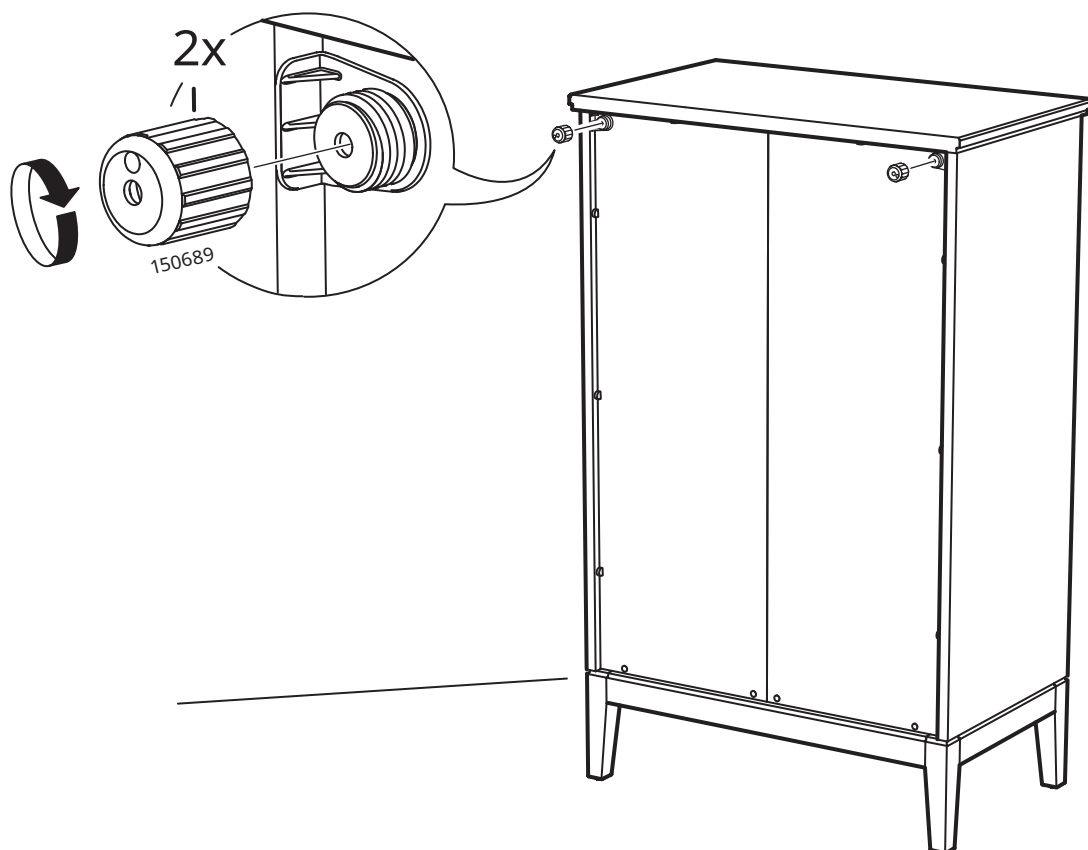 

28

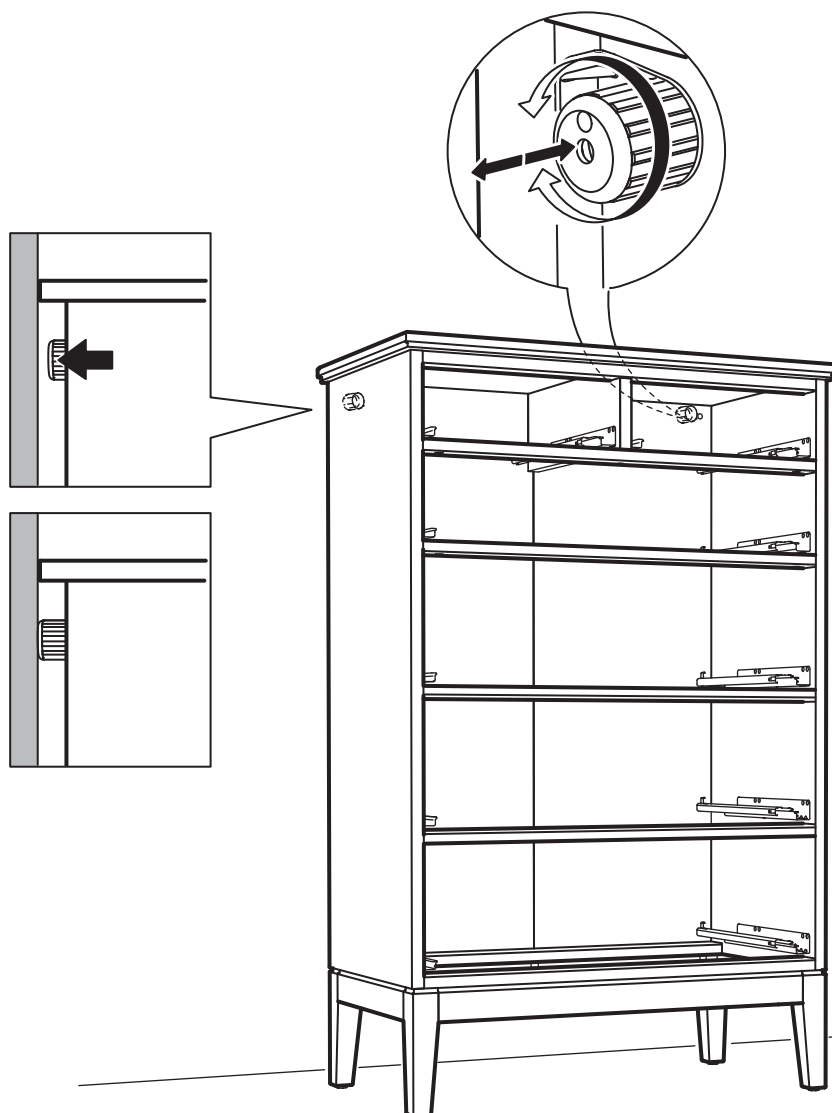 


29

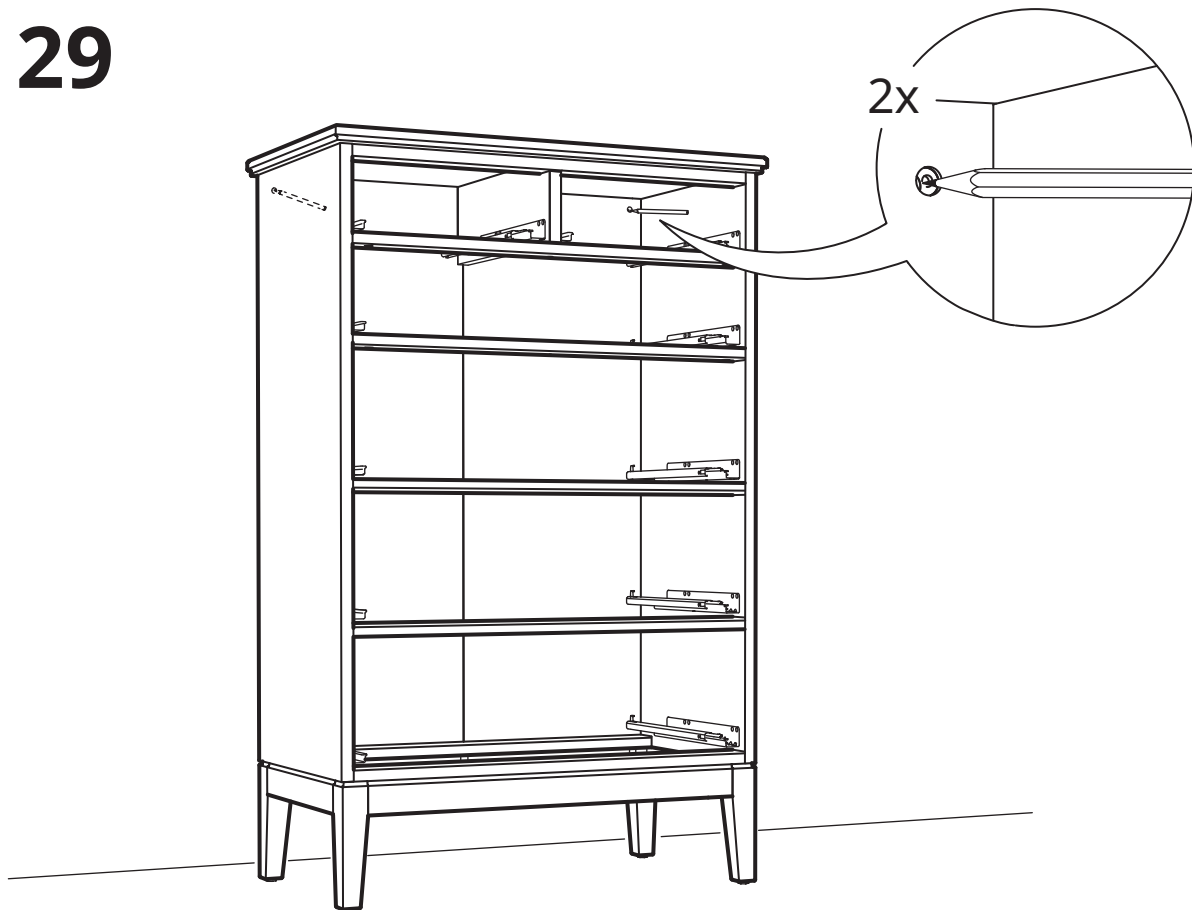 

30

x

 x

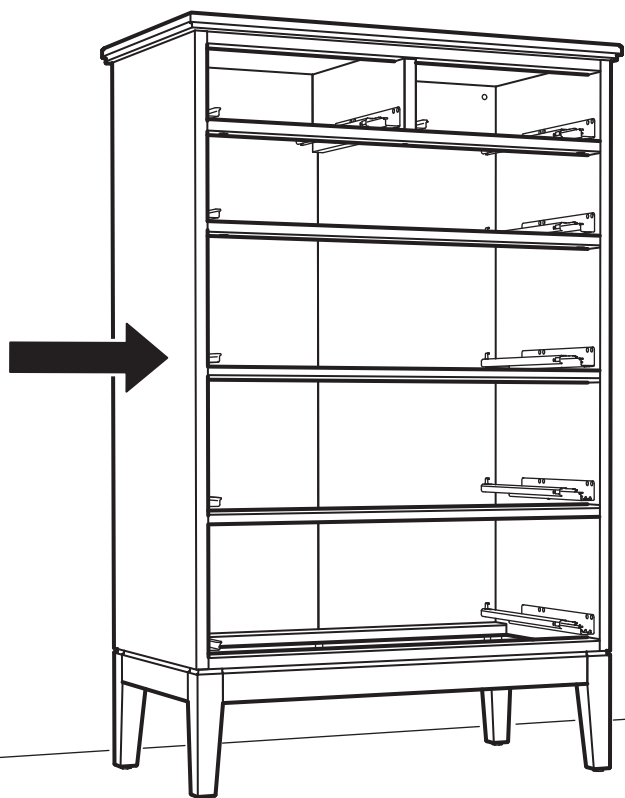




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

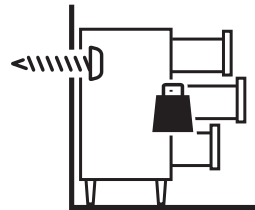


English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

עברית

הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.

 
A

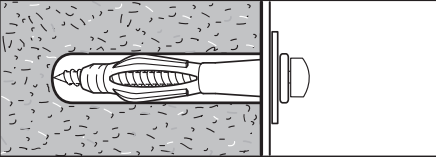


Ø 8 mm
(5/16")



 1




2

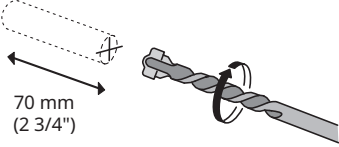 


70 mm
(2 3/4")

 3

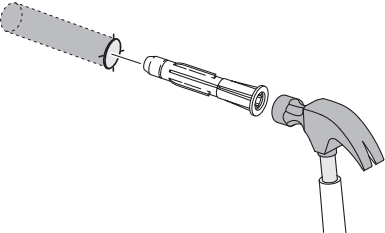


B

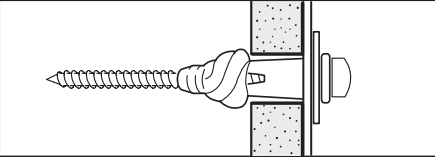 


Ø 8 mm
(5/16")



 1




2

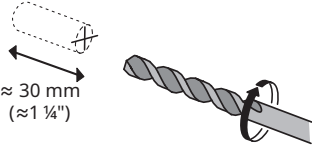 


≈ 30 mm
(≈ 1 1/4")

 3

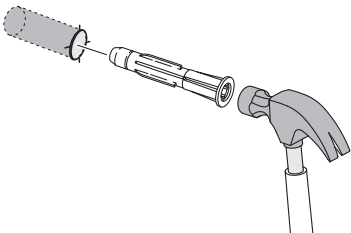


C

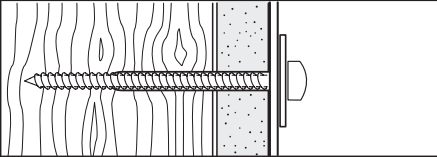 

Ø 3 mm
(1/8")




 
1






2




     ≈ 30 mm
(≈ 1 1/4")

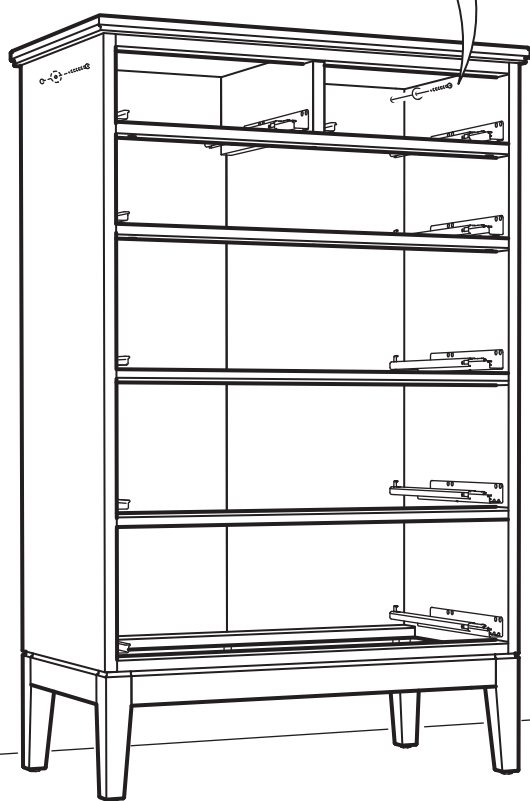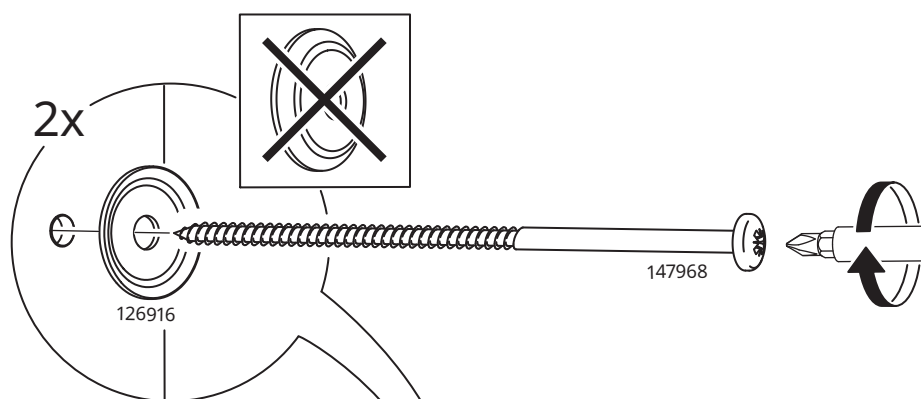


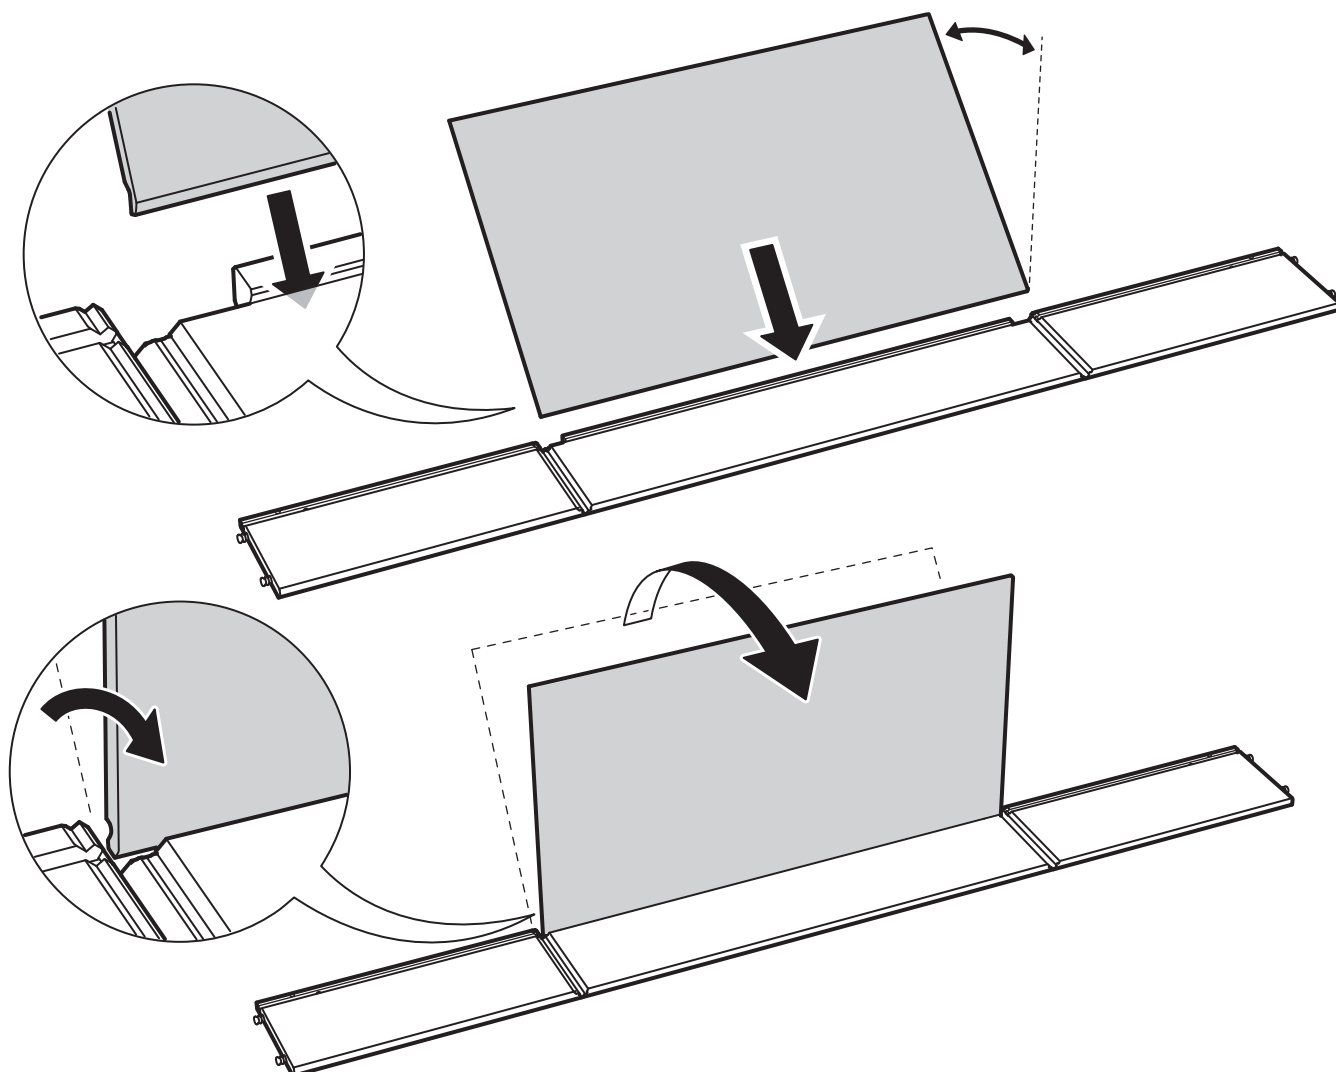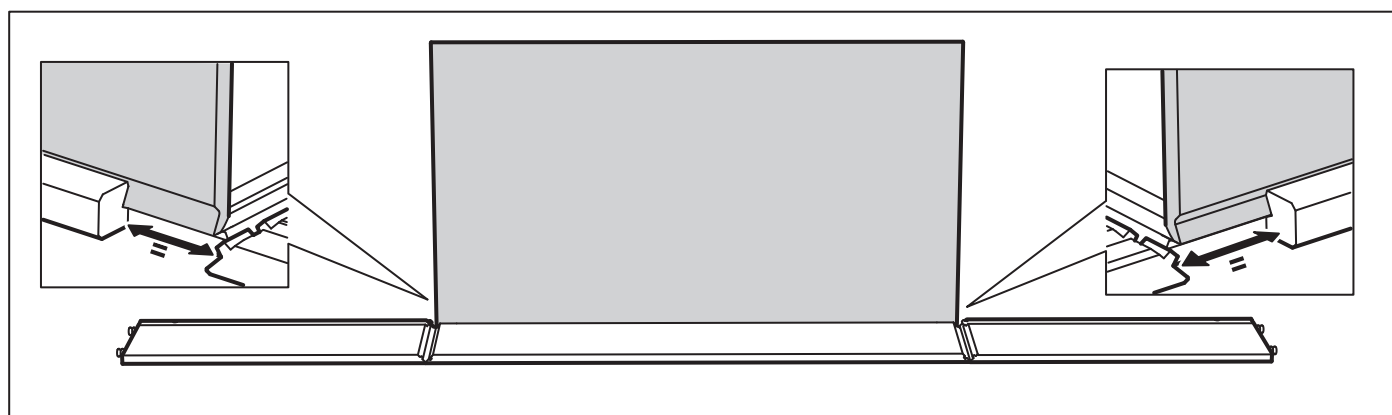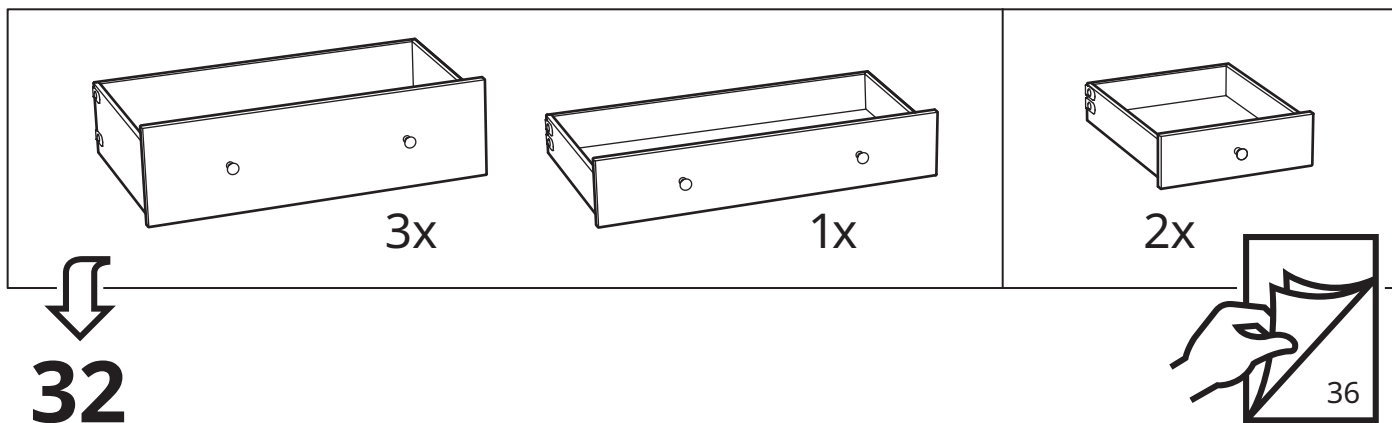


33

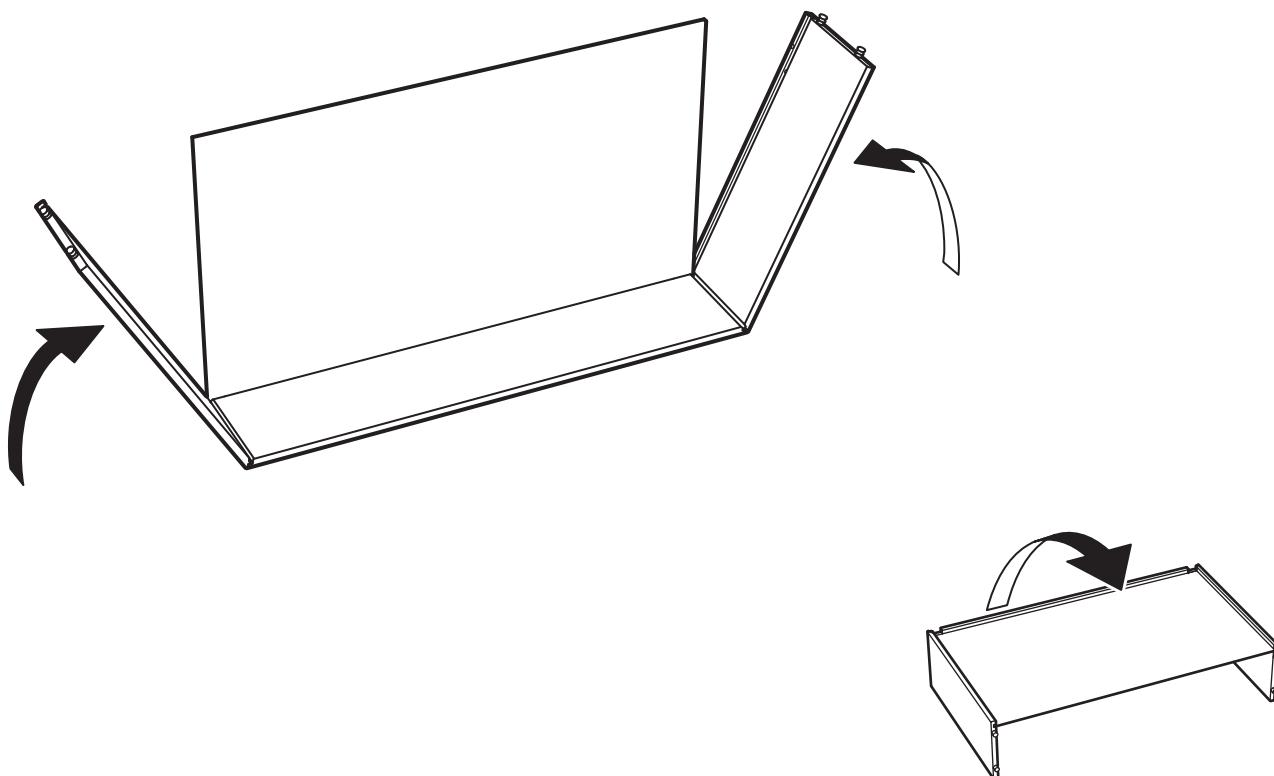 


34

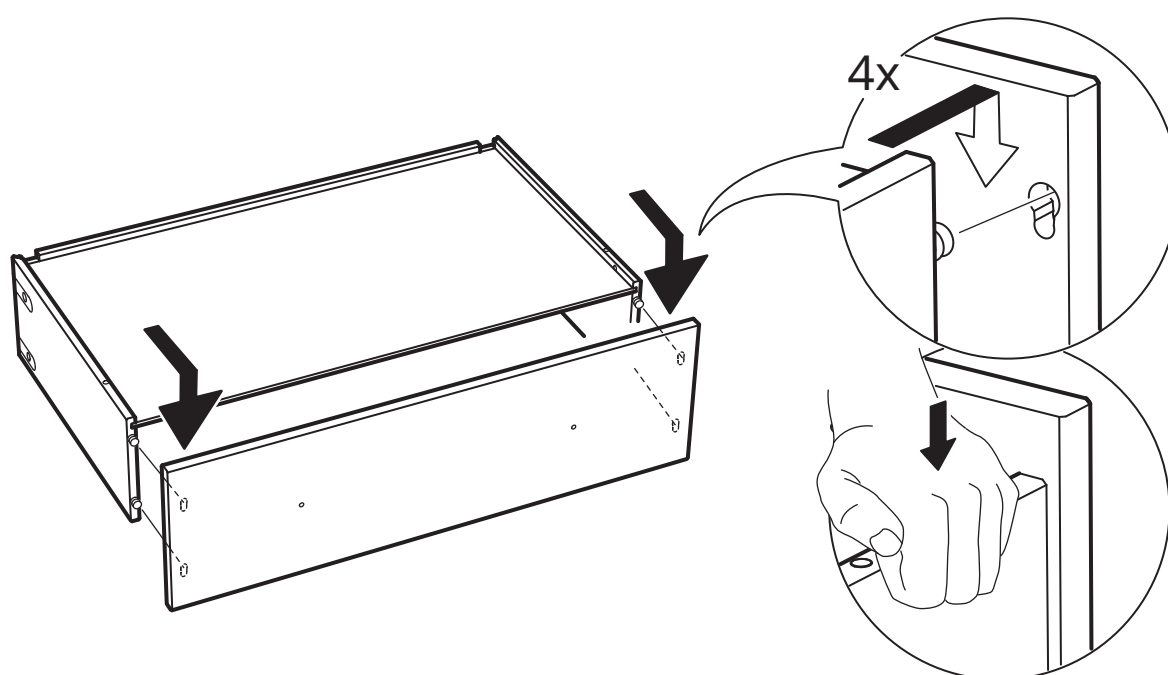 


35

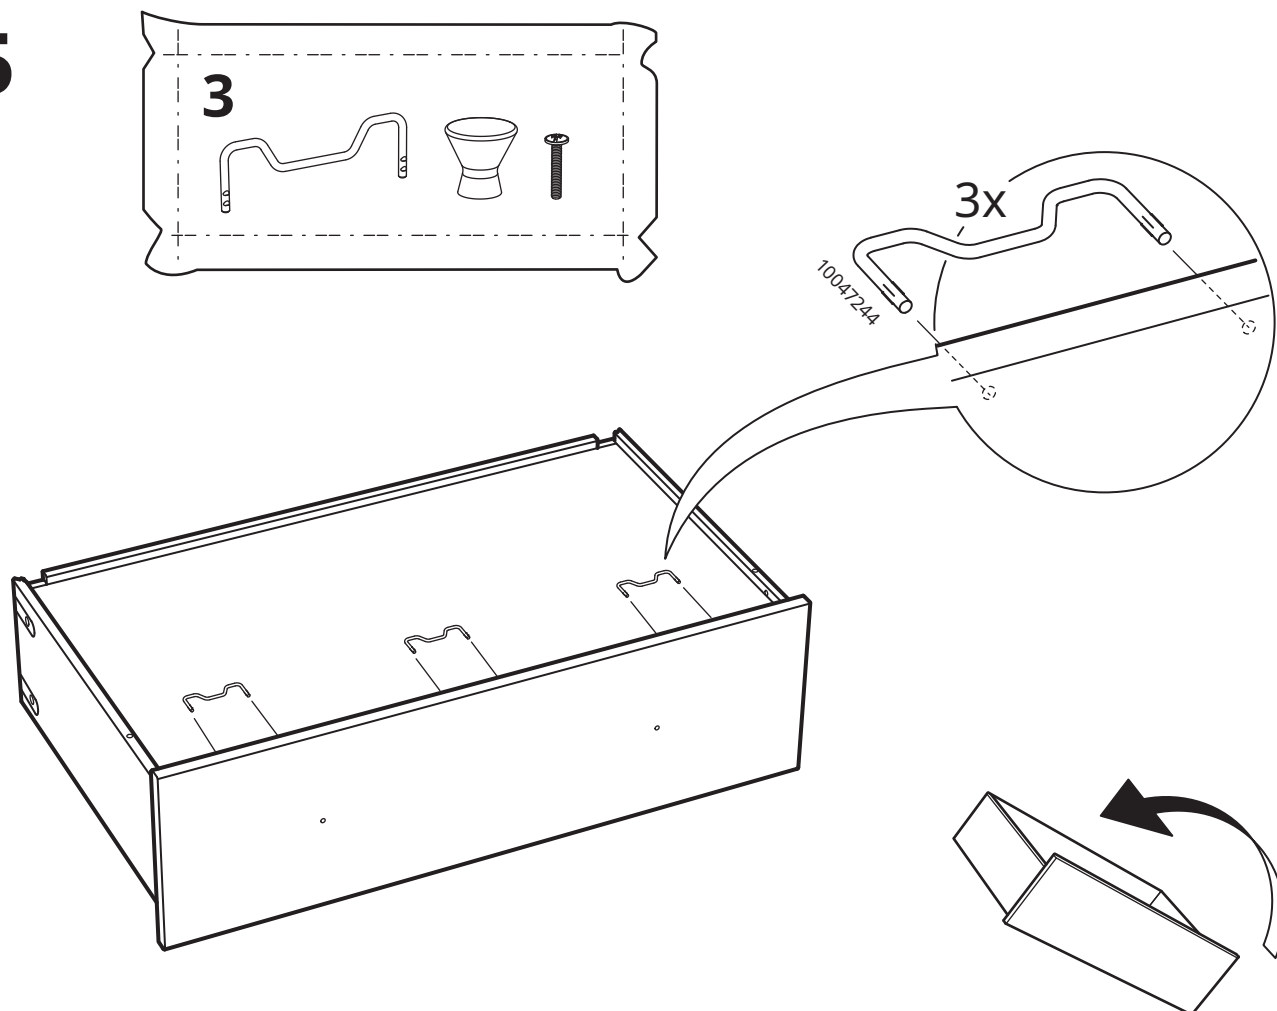 


36

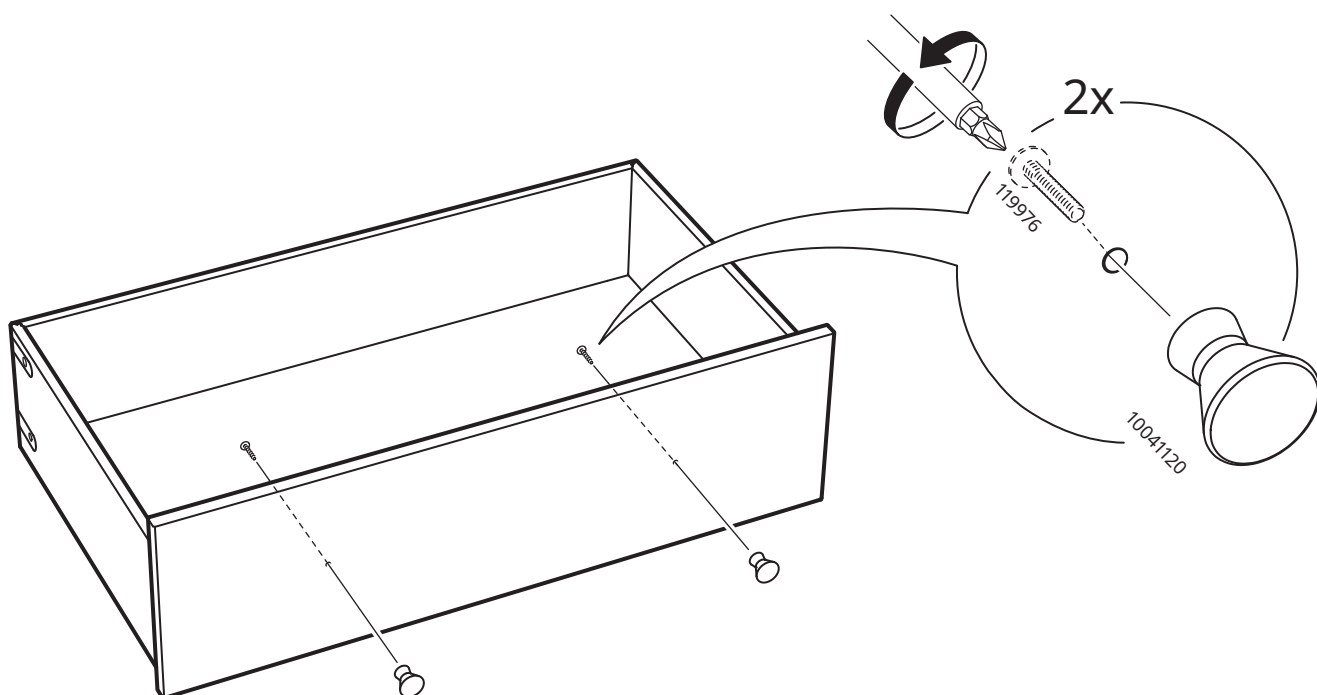 


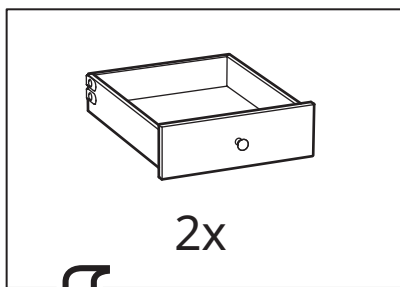 


37

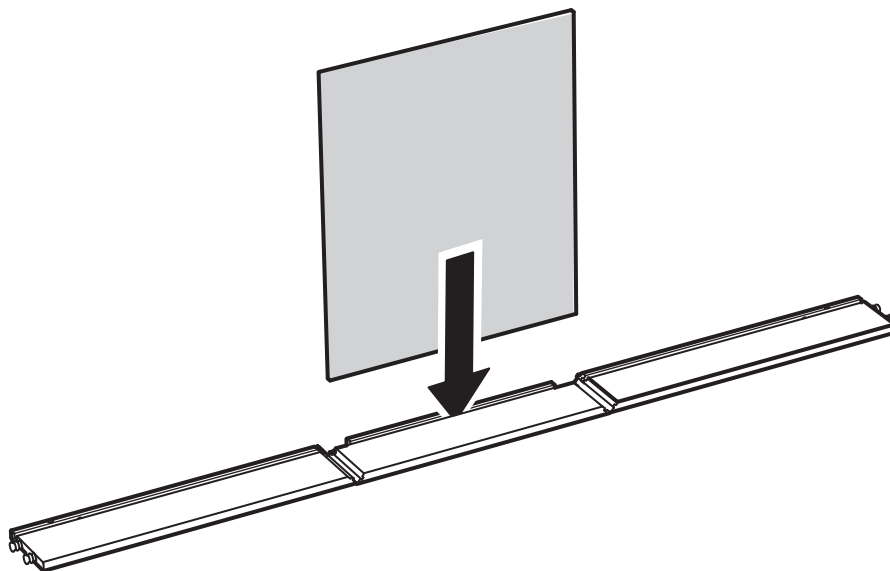 


38

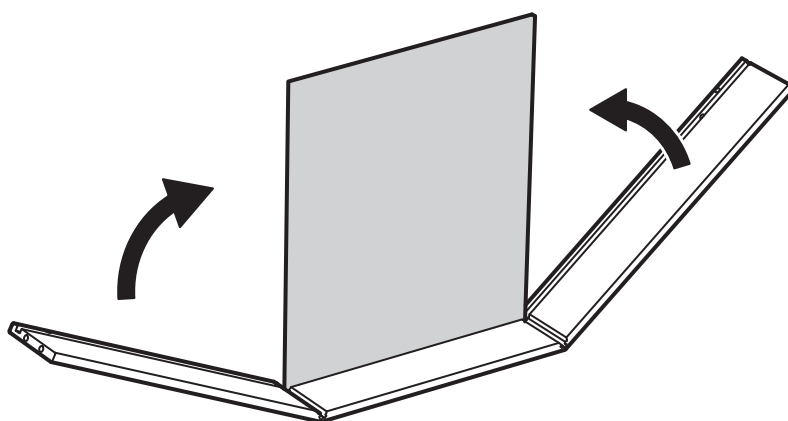 

39

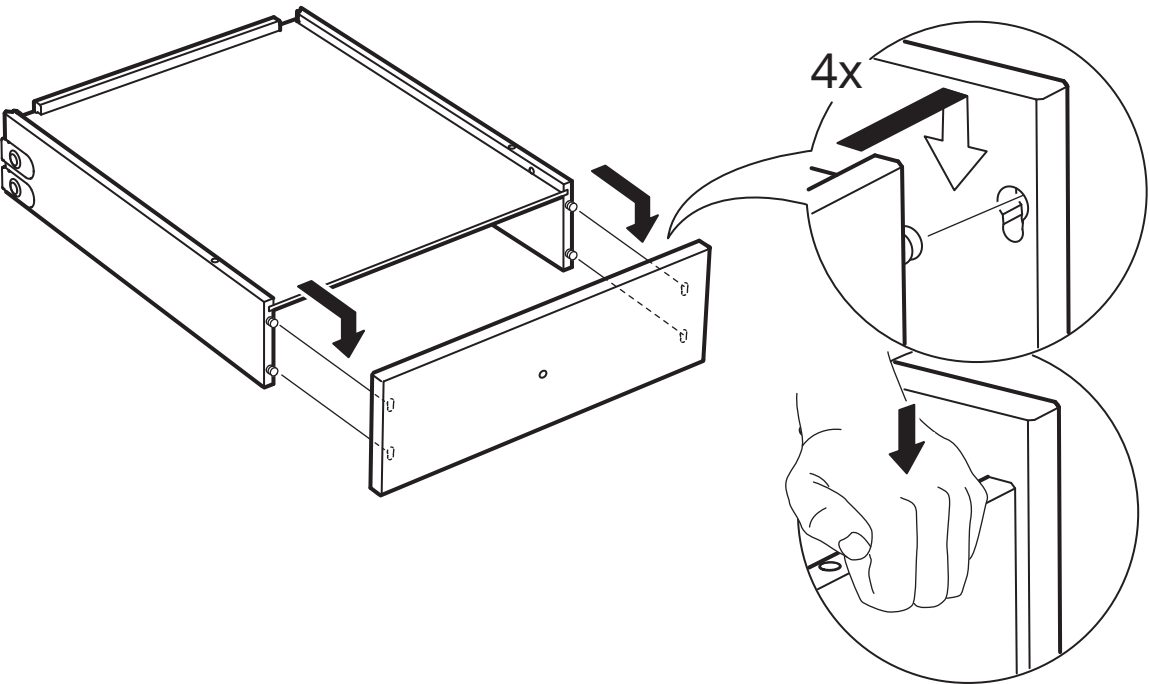 

40

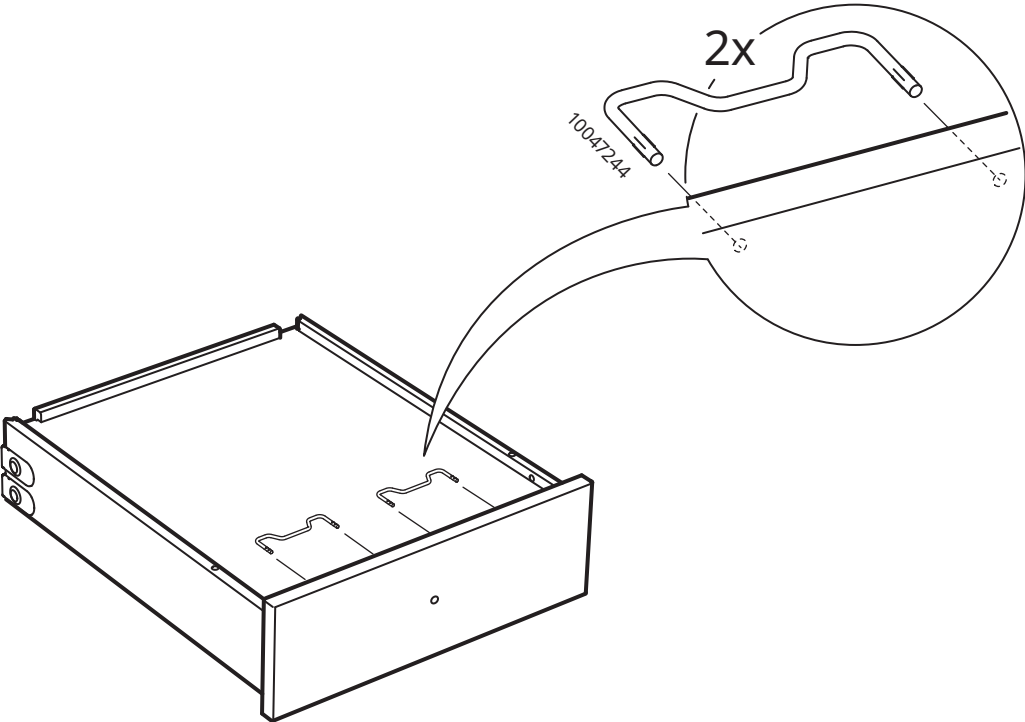 

41

