


LASTARE

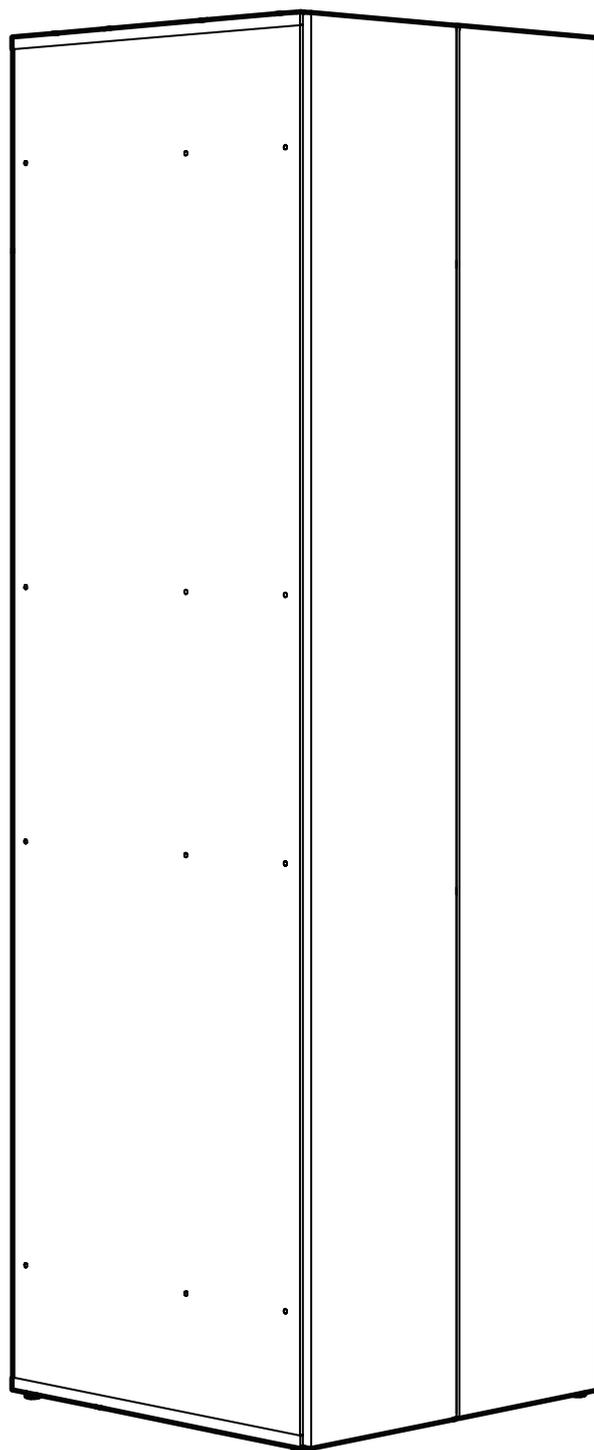

Design and Quality
IKEA of Sweden



English

WARNING!

Children have died from furniture tipover.

To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.

Read and follow each step of the instruction carefully.

עברית

אזהרה!

ילדים נהרגו כתוצאה מנפילת רהיטים.

על מנת להפחית את הסיכון של נפילת רהיטים:

תמיד יש להתקין את אבזר הקיבוע.

לעולם אל תניחו טלוויזיה על מוצר זה.

לעולם אל תאפשרו לילדים לעמוד, לטפס או להיתלות על המגירות, הדלתות או המדפיים.

פתחו אך ורק מגירה אחת בכל פעם.



יש למקם את הפריטים הכבדים ביותר במגירות התחתונות.

 
 
 
קראו ופעלו בזהירות לפי כל שלב בהוראות.











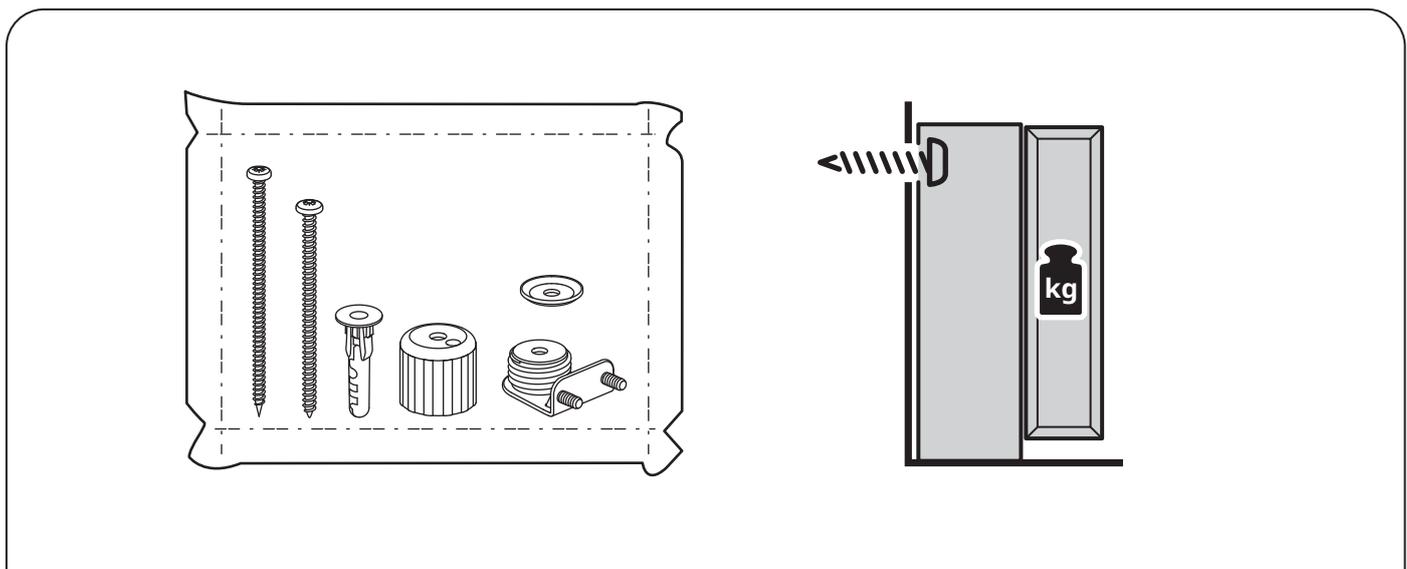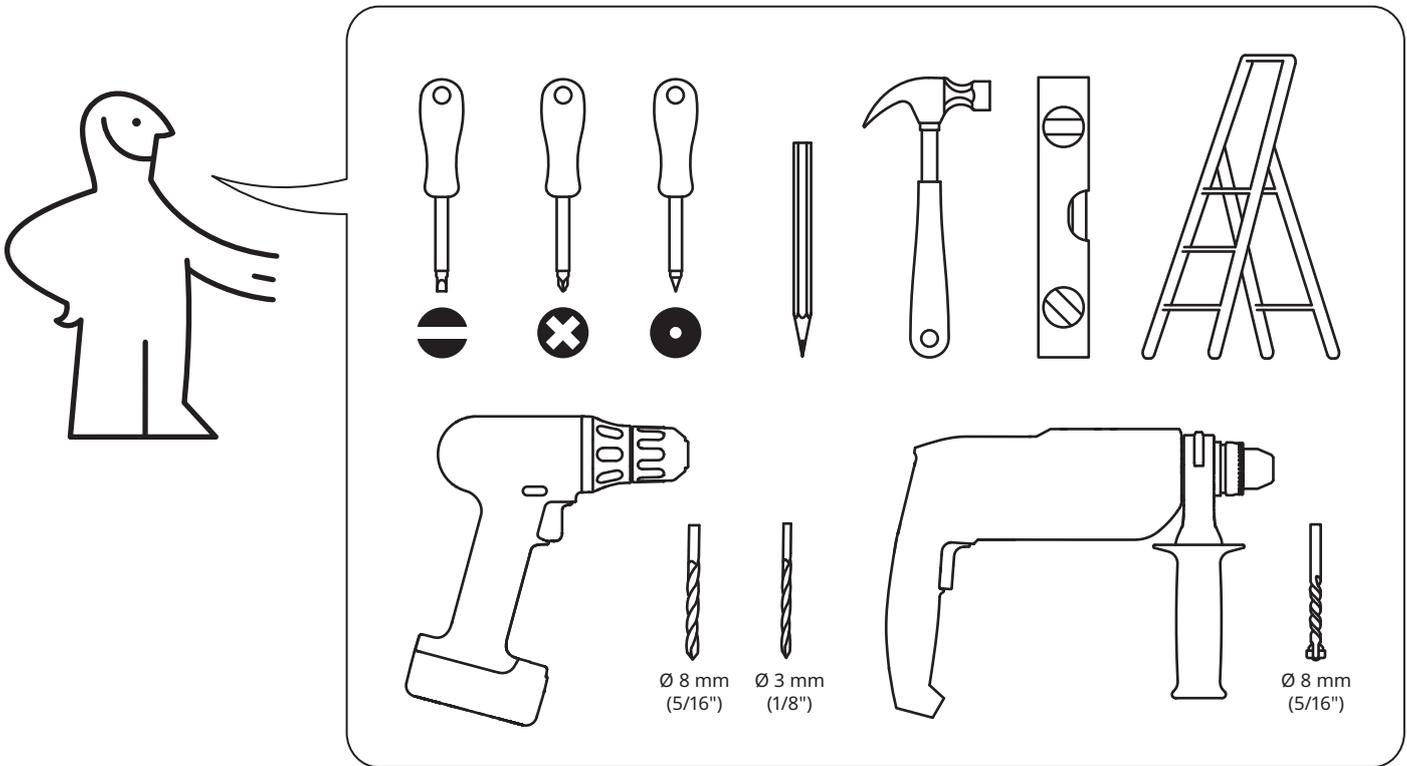


	A	B	C
 www.IKEA.com/secure-it			
	$\text{Ø } 8 \text{ mm}$ (5/16") 	$\text{Ø } 8 \text{ mm}$ (5/16") 	$\text{Ø } 3 \text{ mm}$ (1/8") 

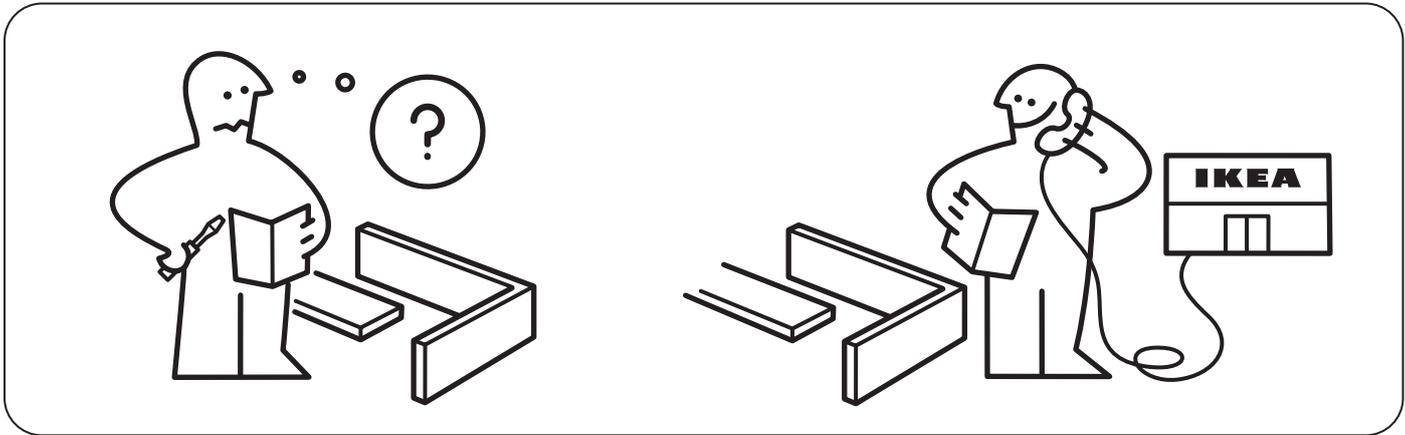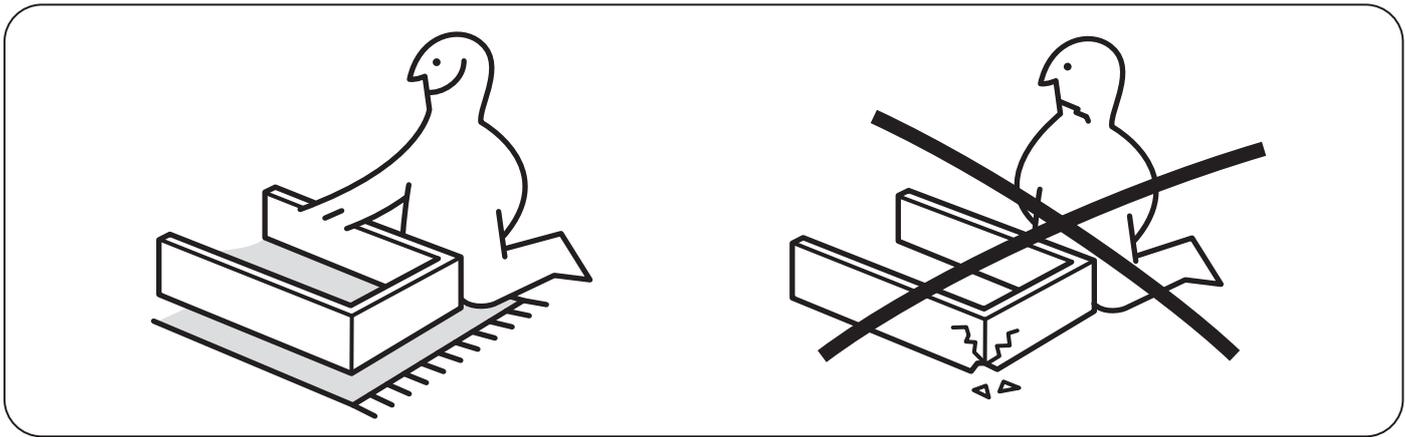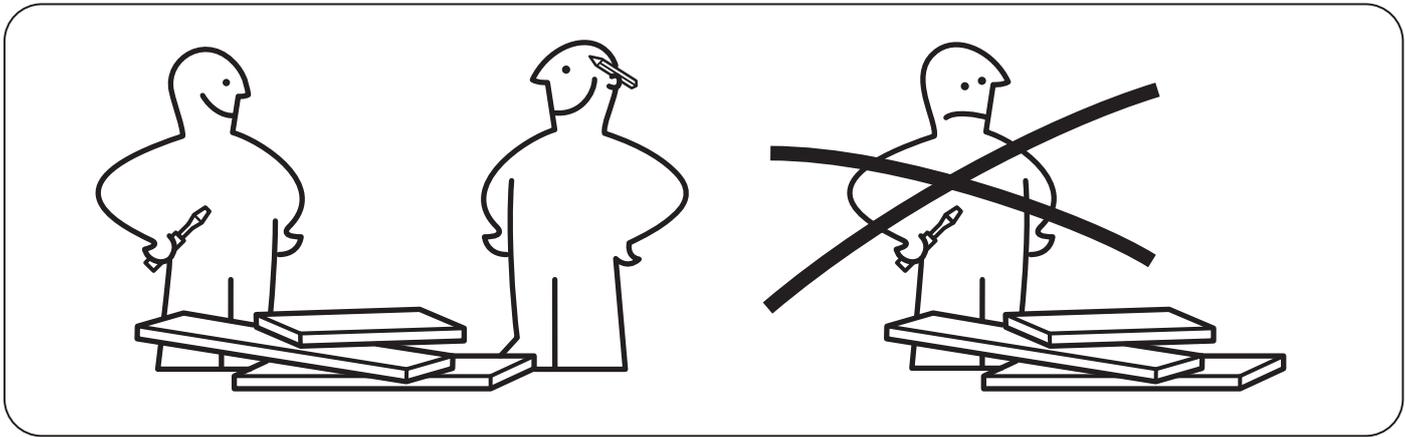


 

12x

 

4x

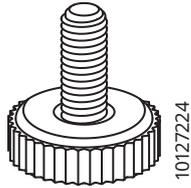


4x



4x




4x

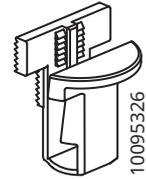

16x




16x

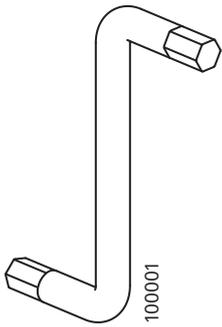


1x




12x

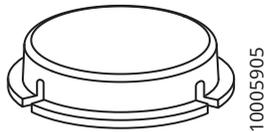


2x

 


4x

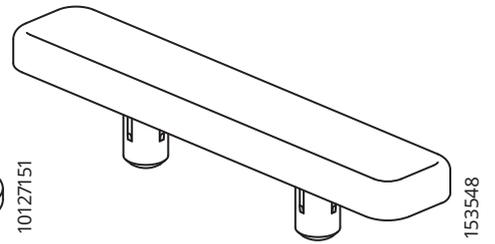

1x

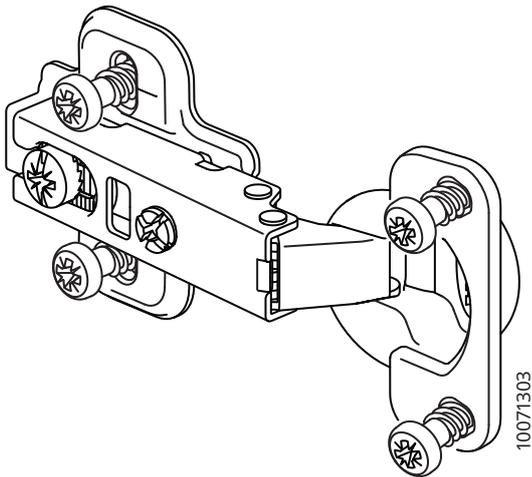

6x

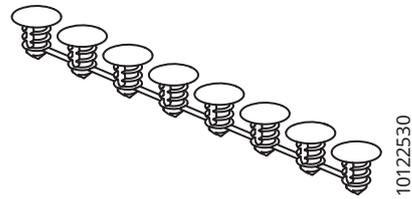


3x




10116098

 2x




10116097

2x

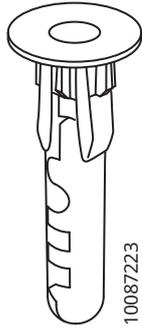


10087223

2x

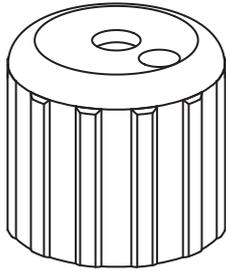


150689

 2x



126916



2x

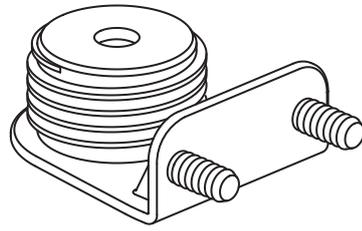


150688

2x


1

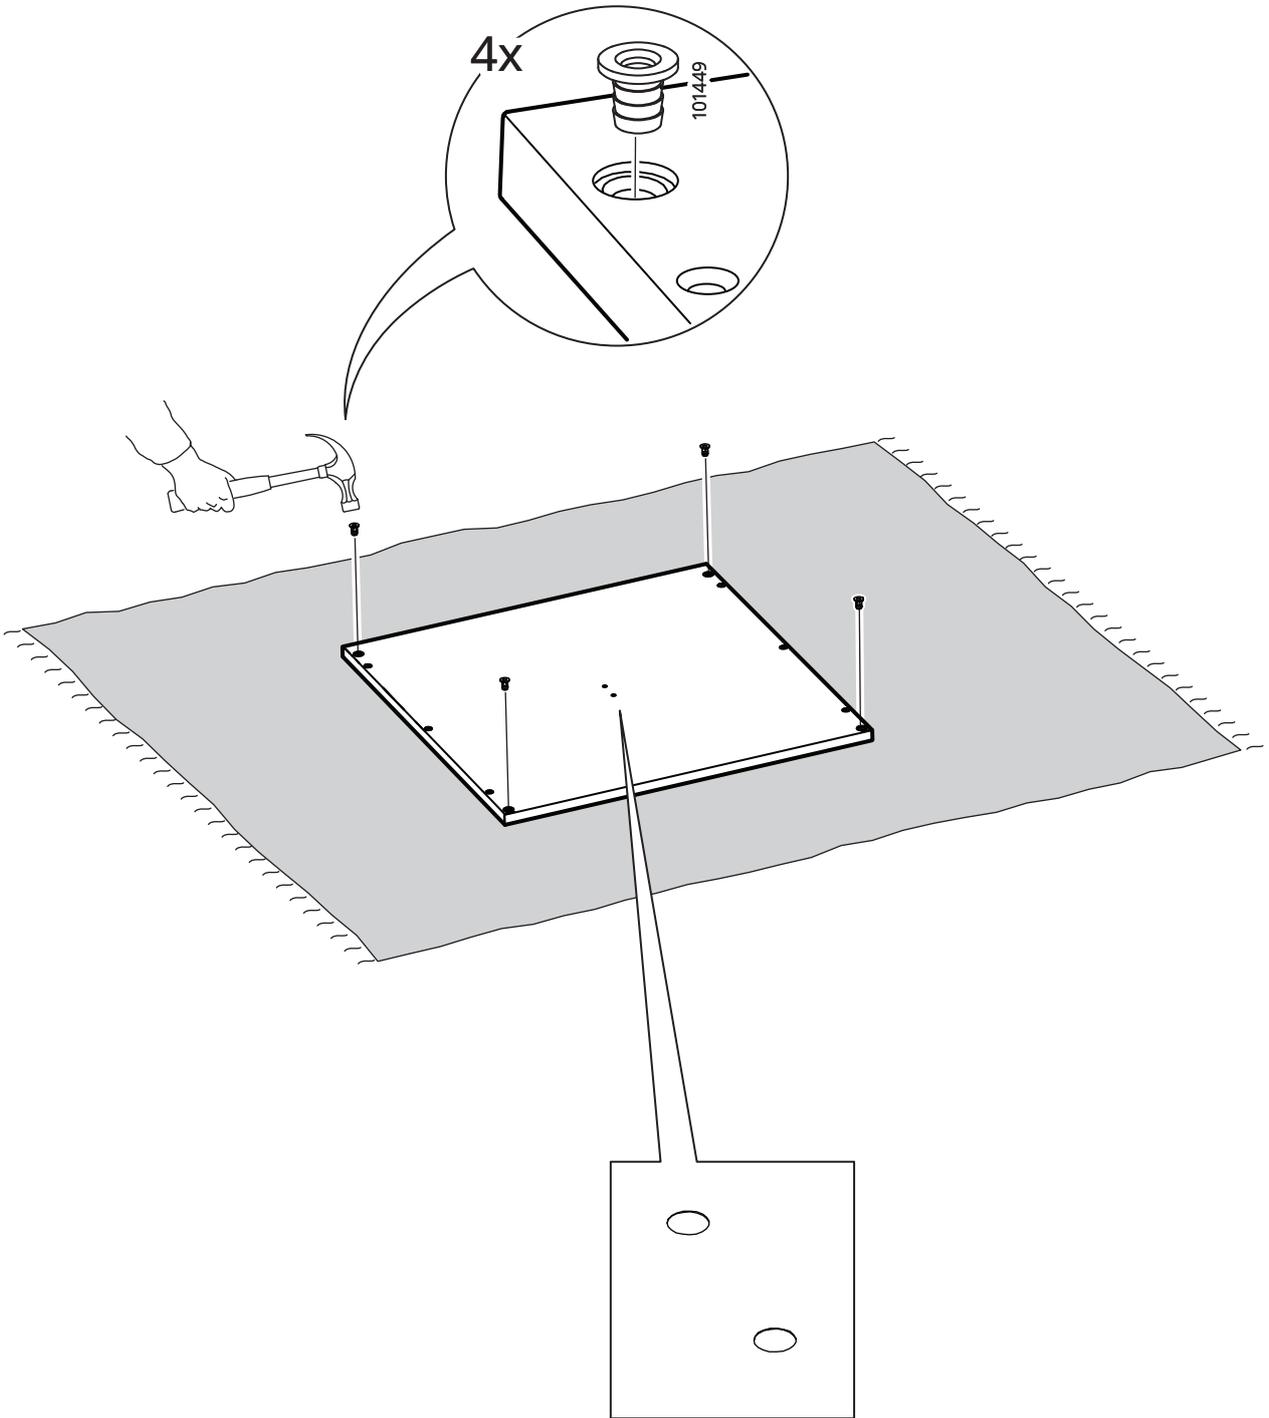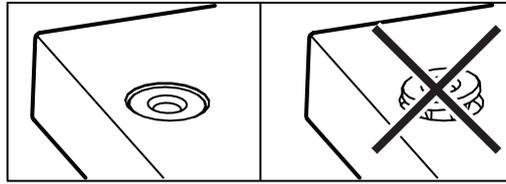



2

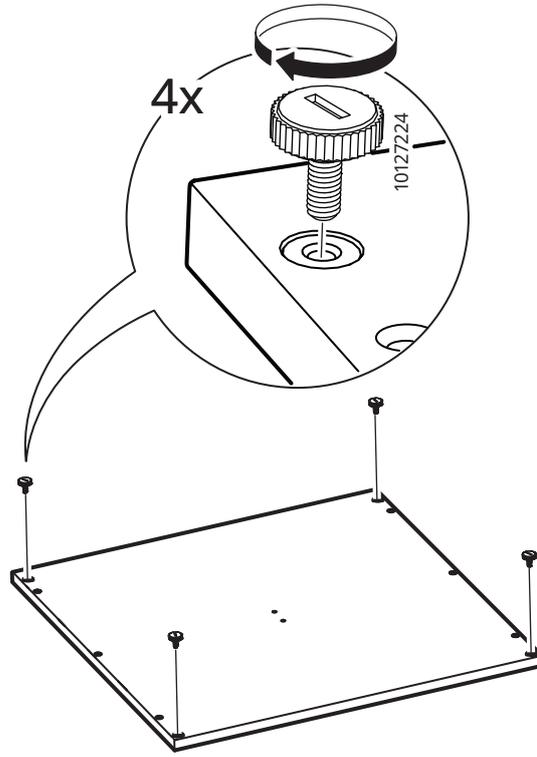


3

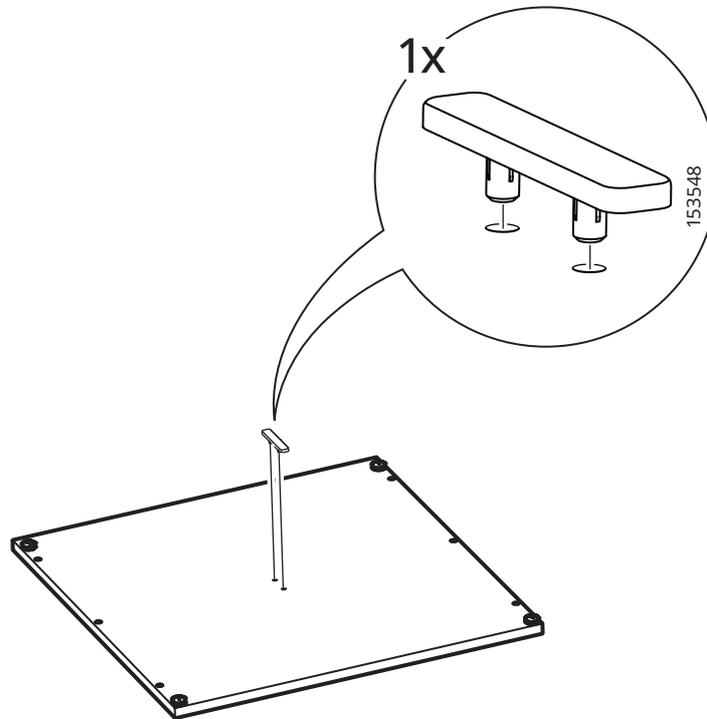


4

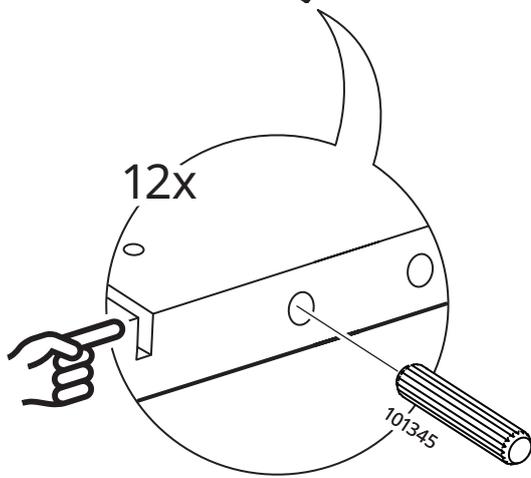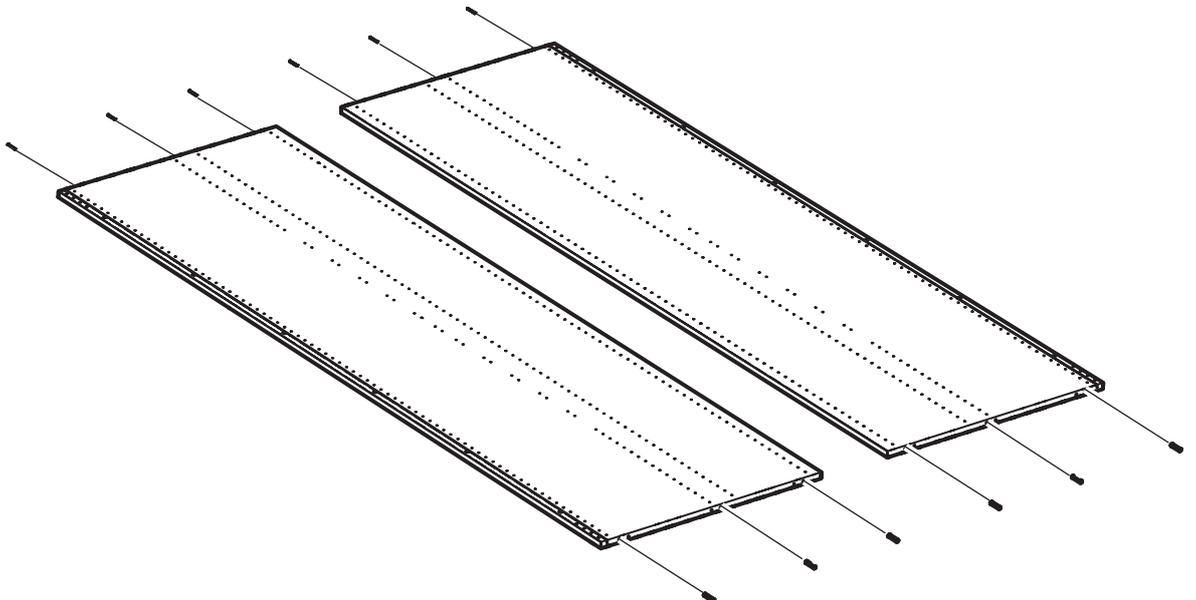


5

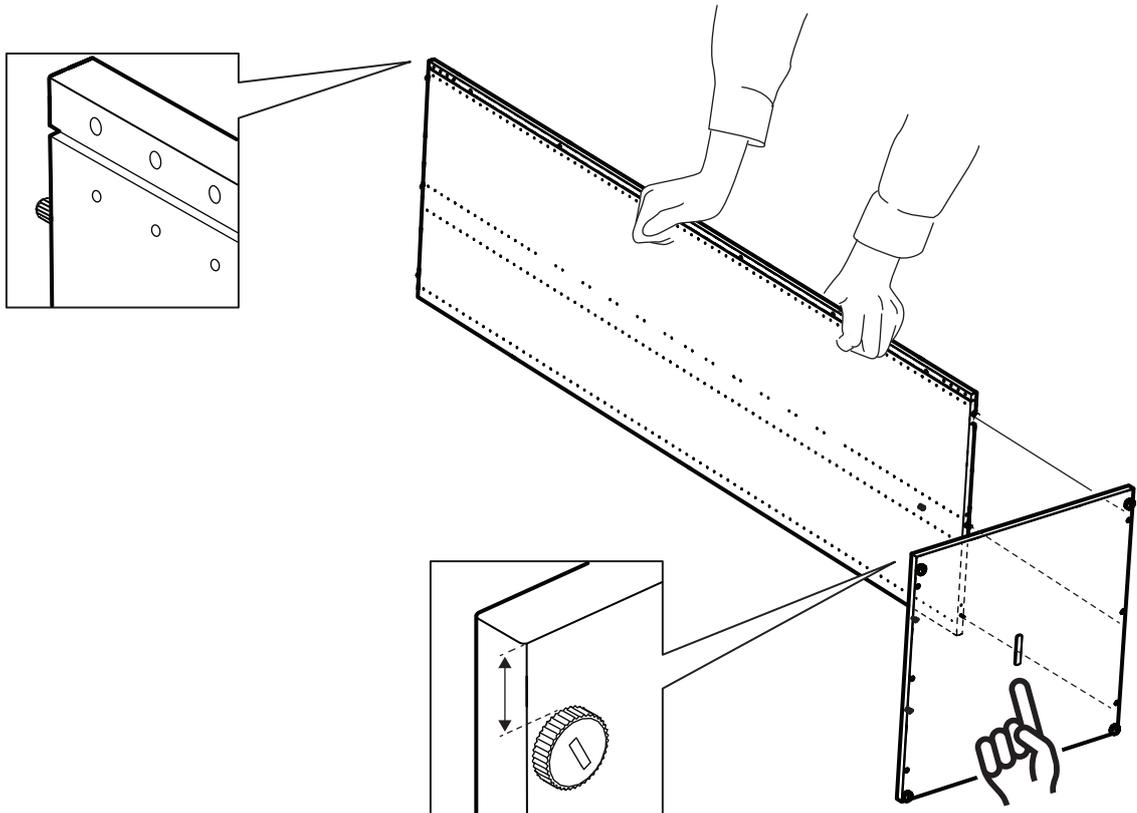





6

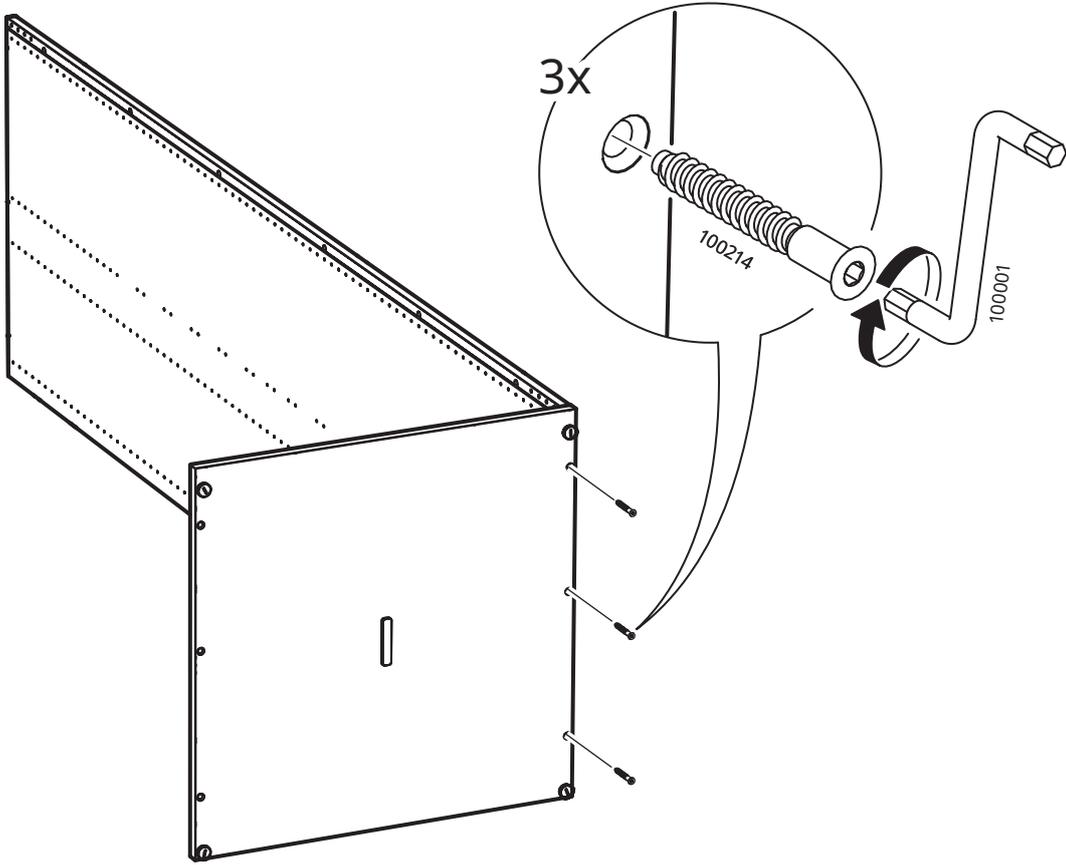


7

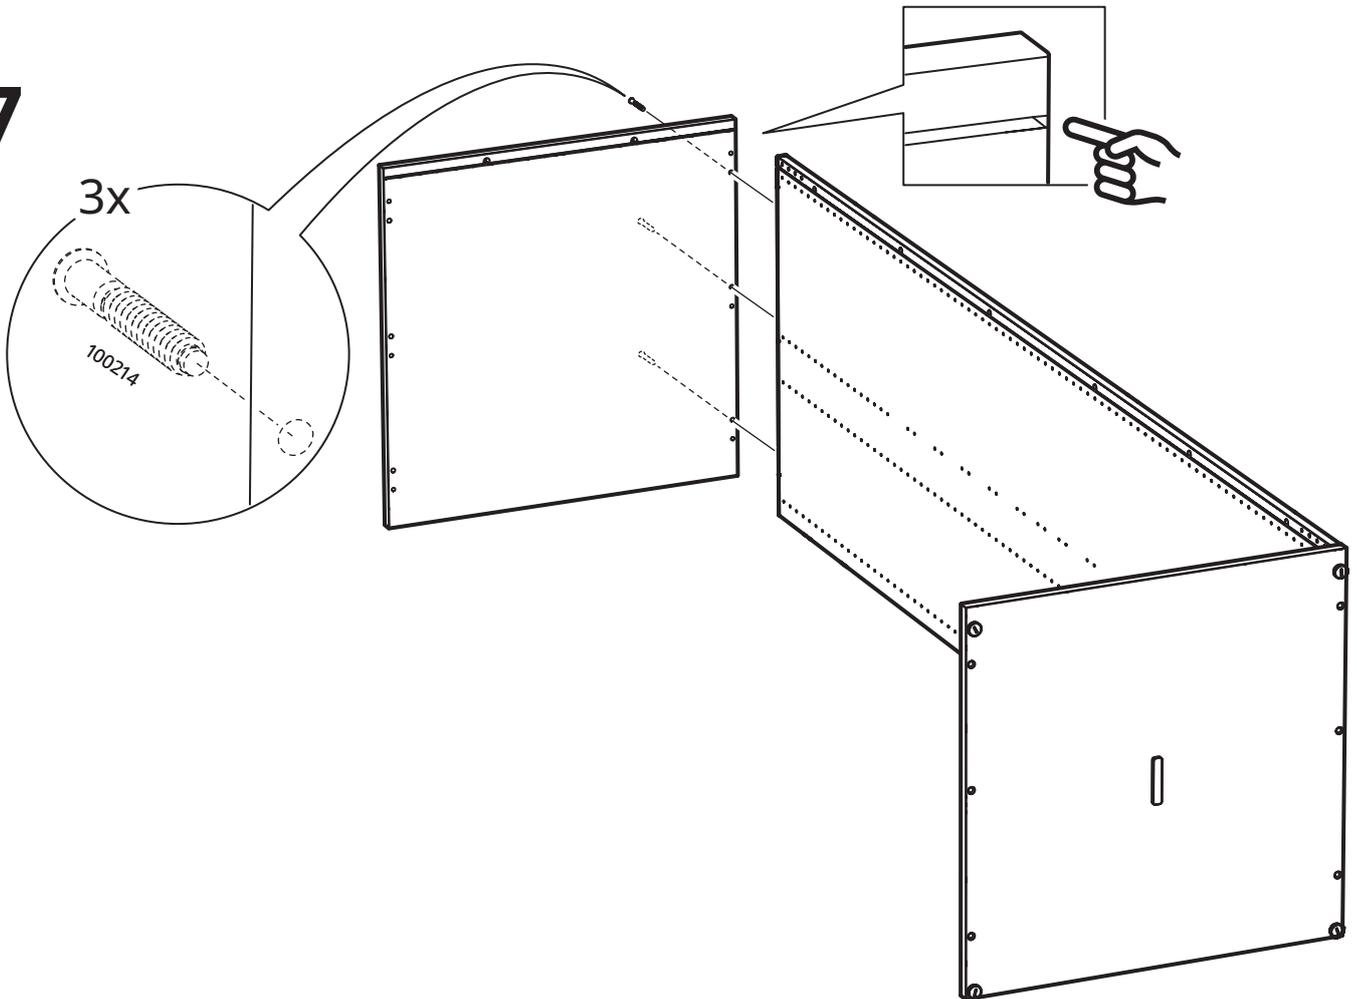


8

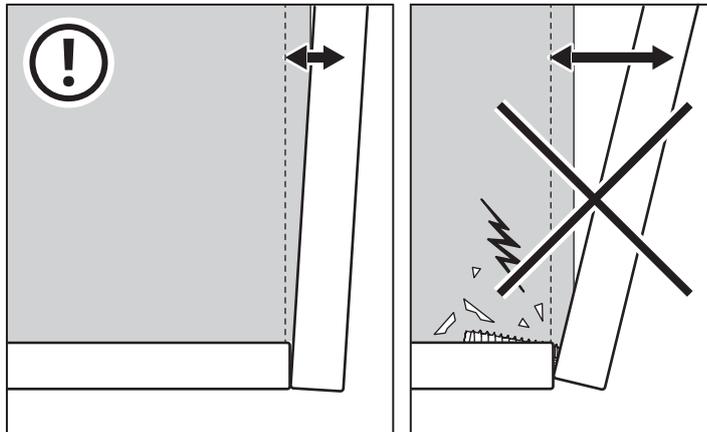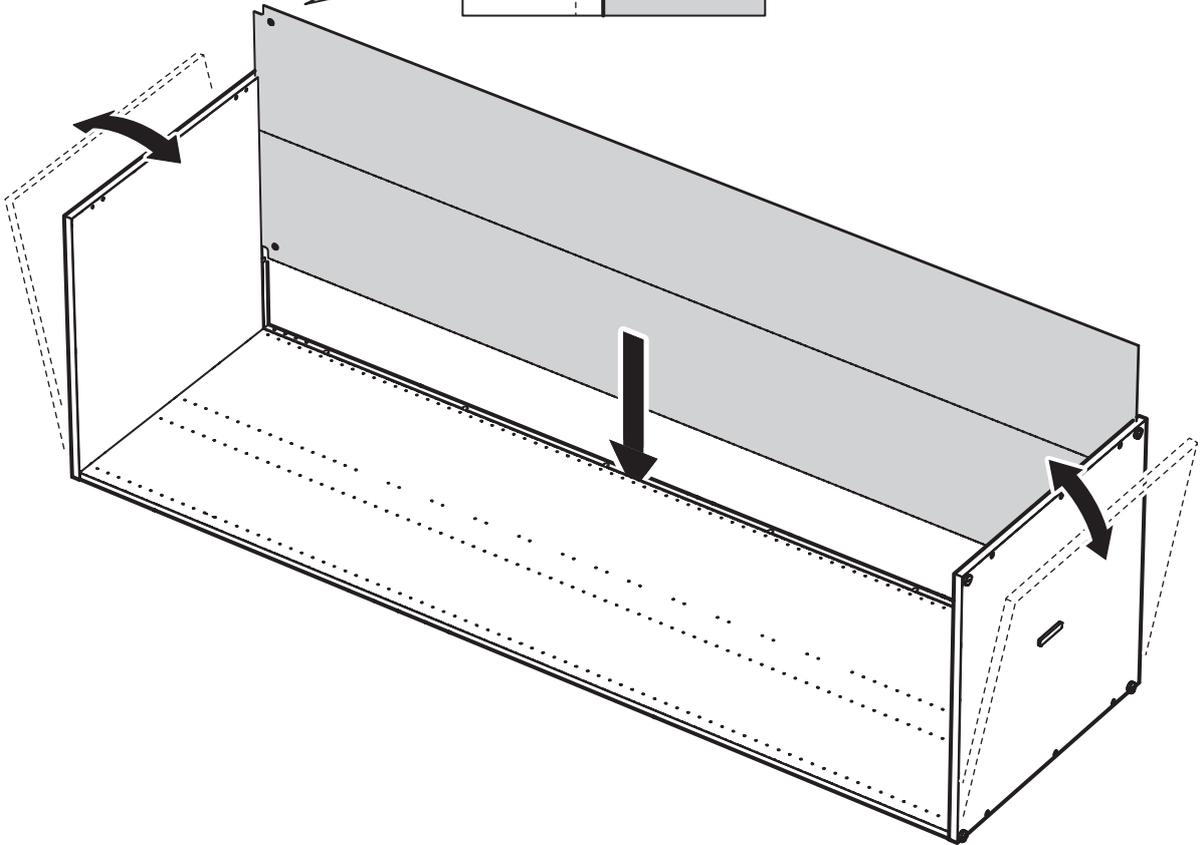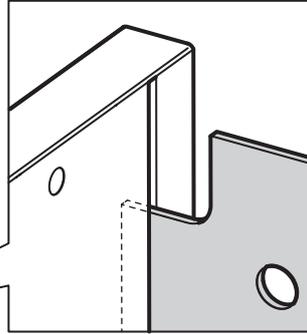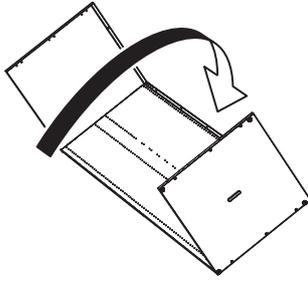


9

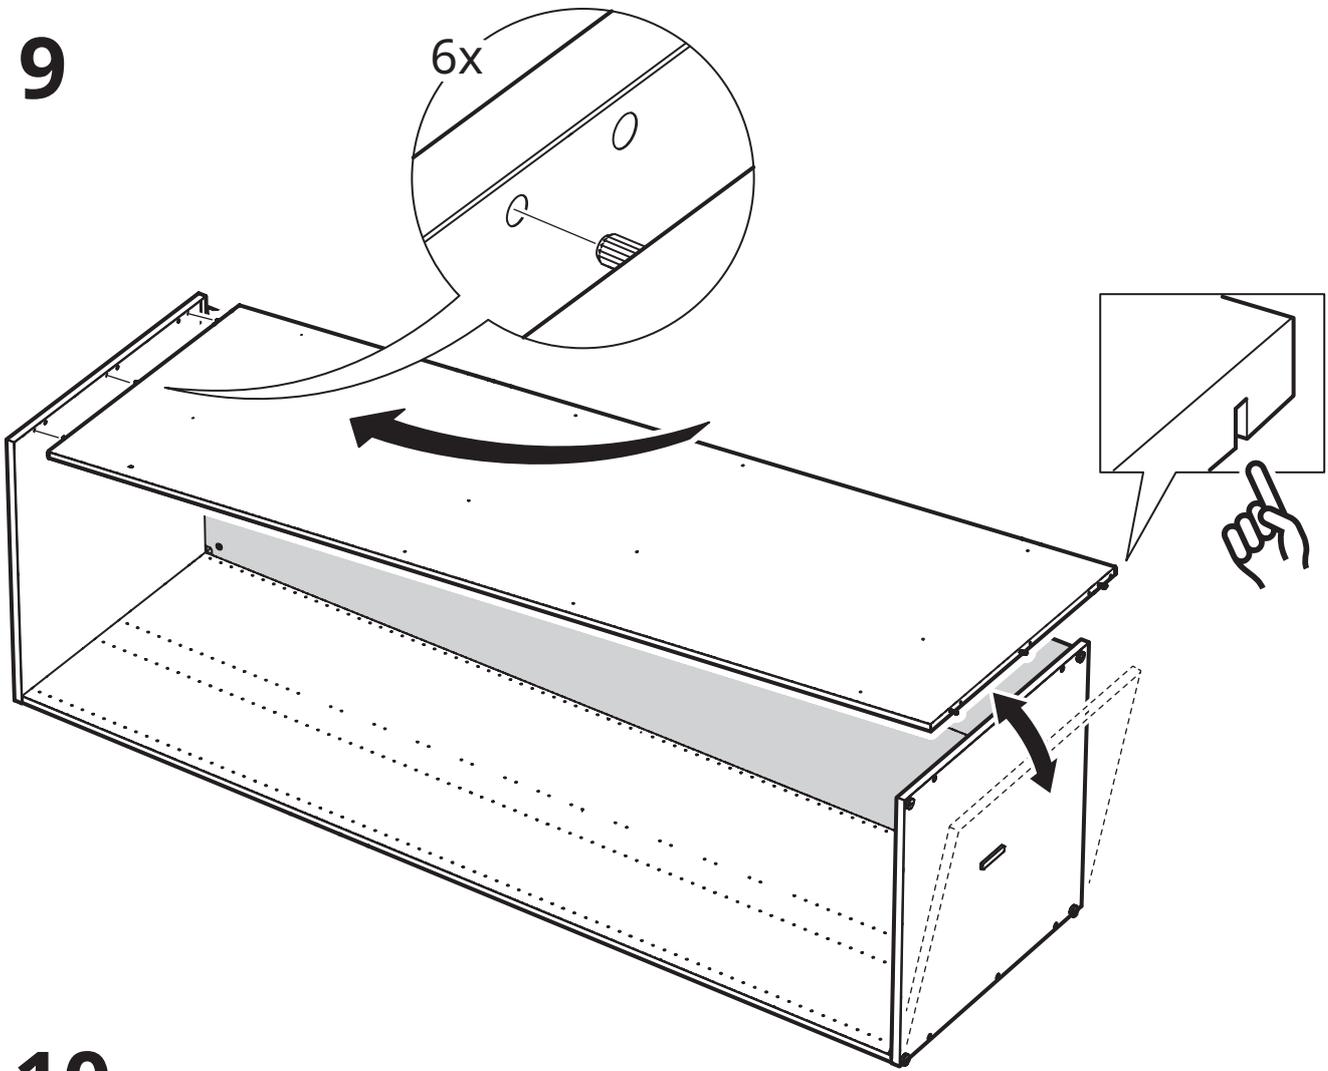


10


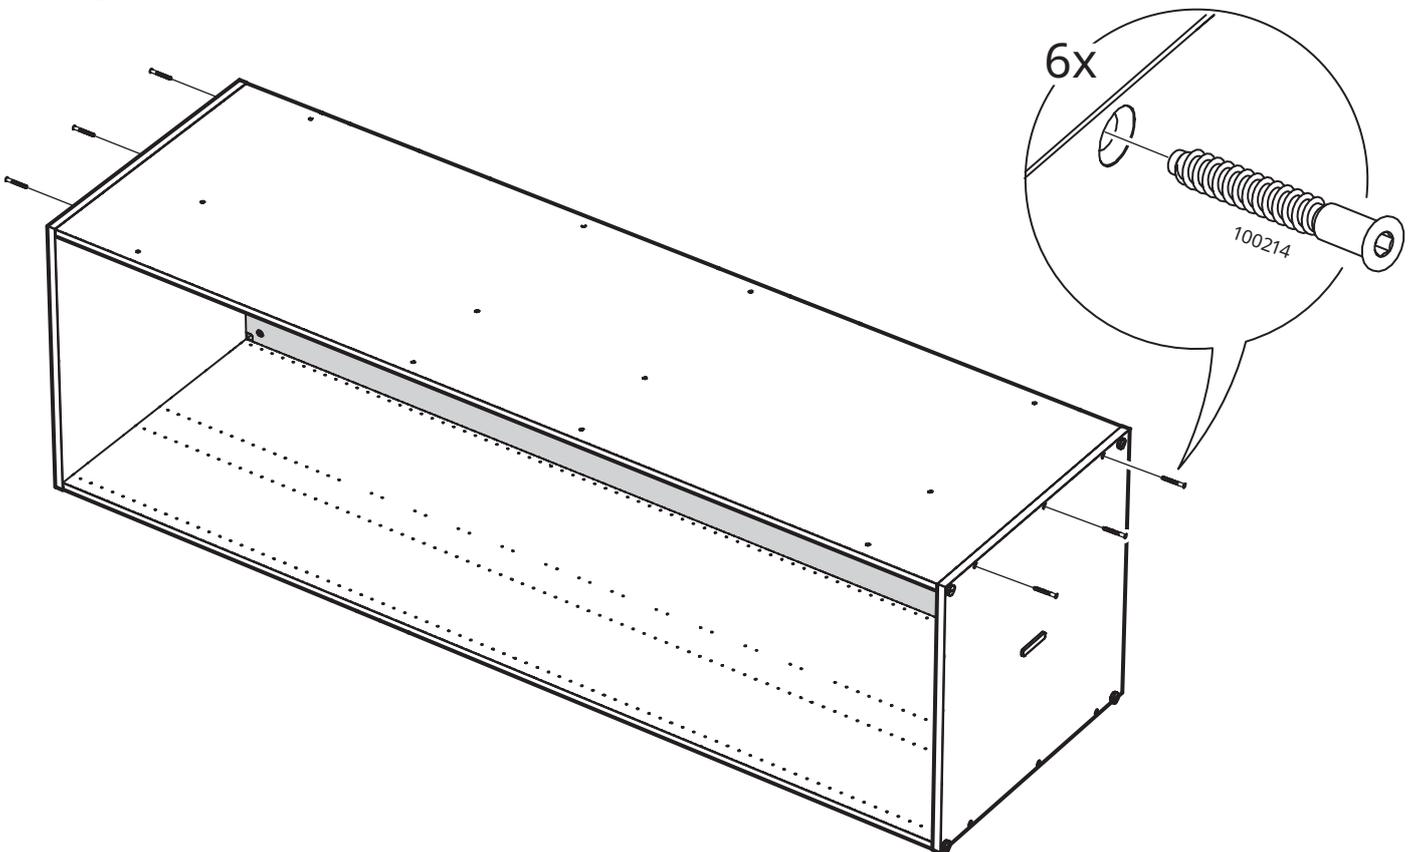


11

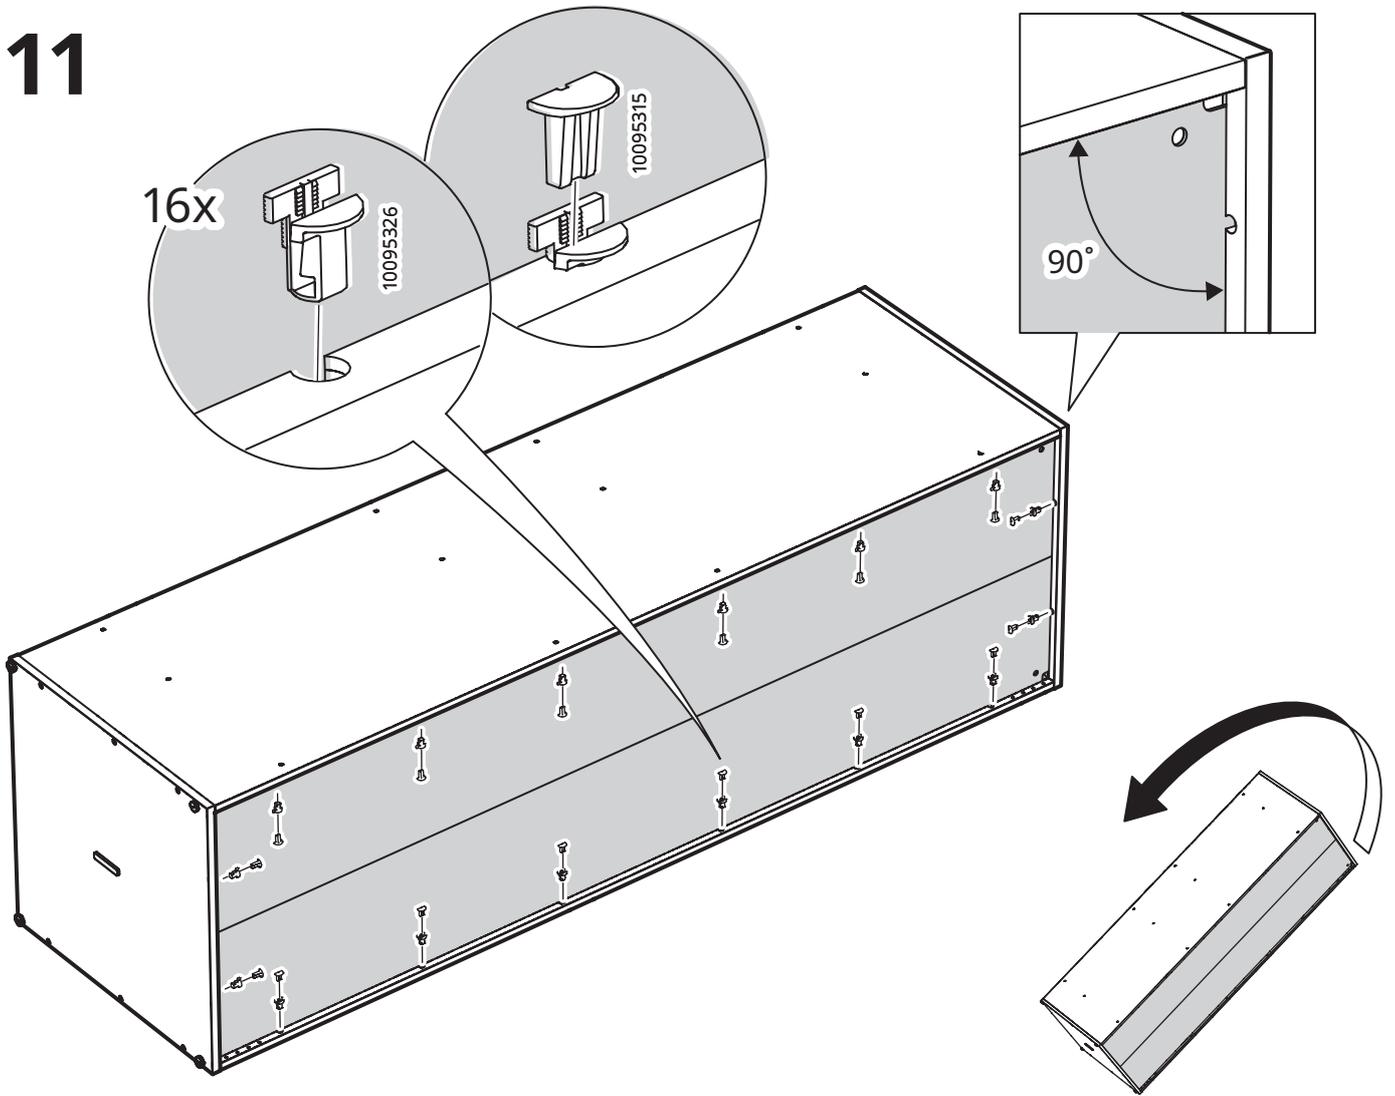


12

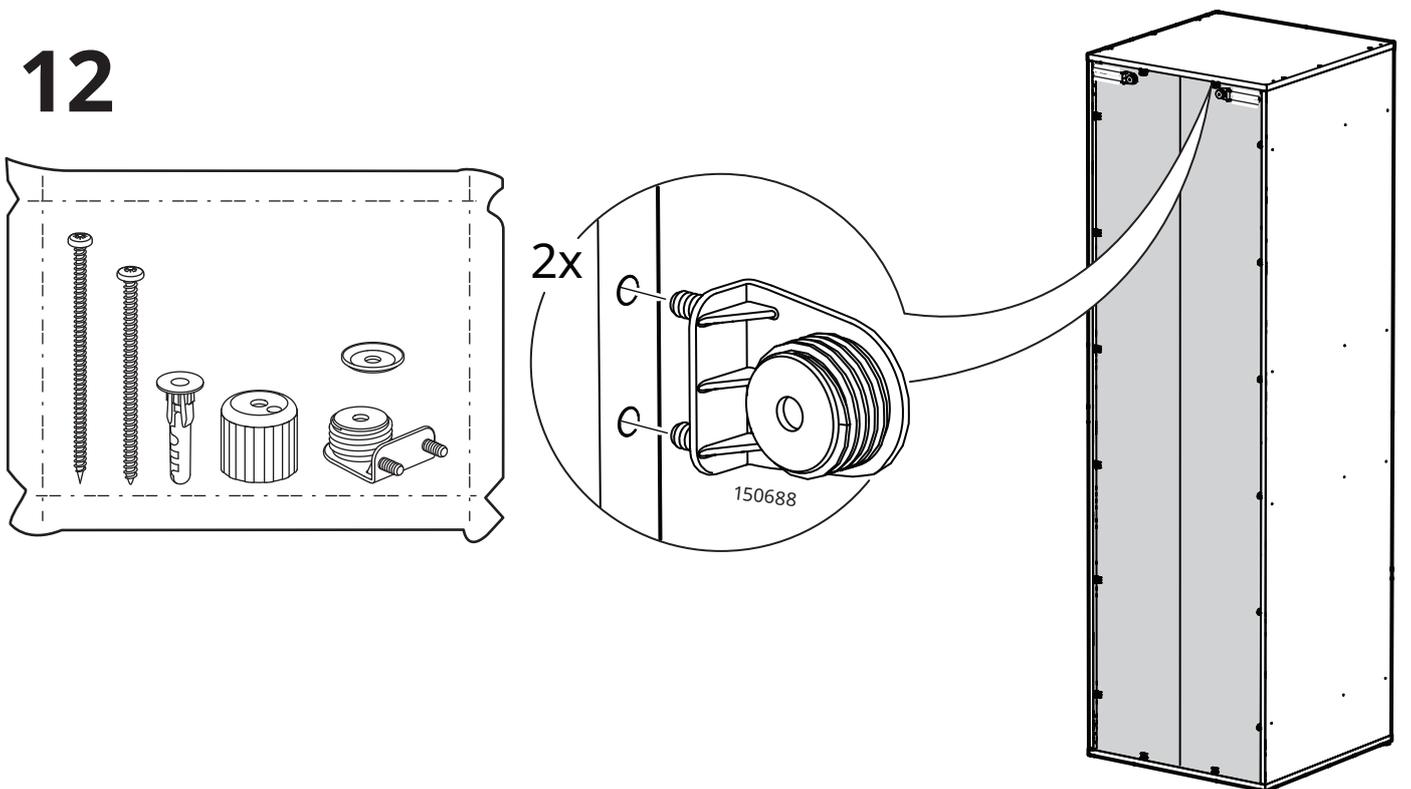


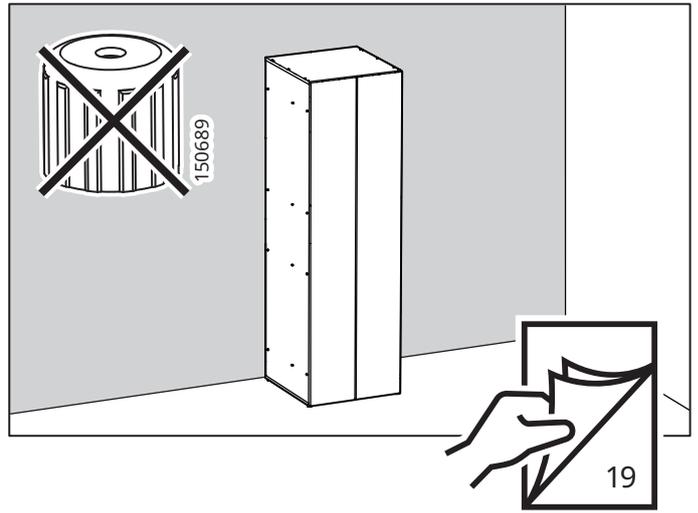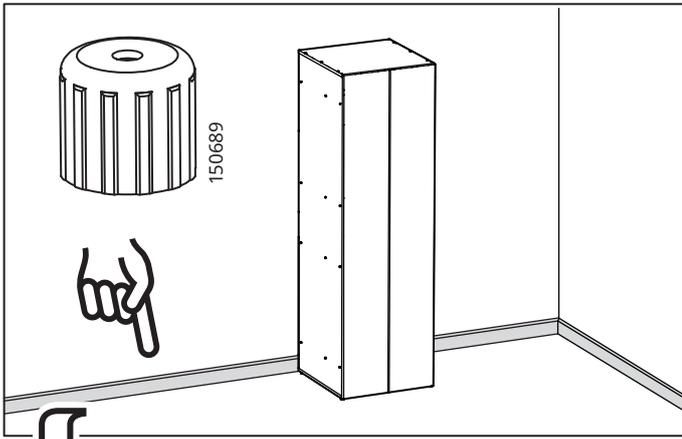


13

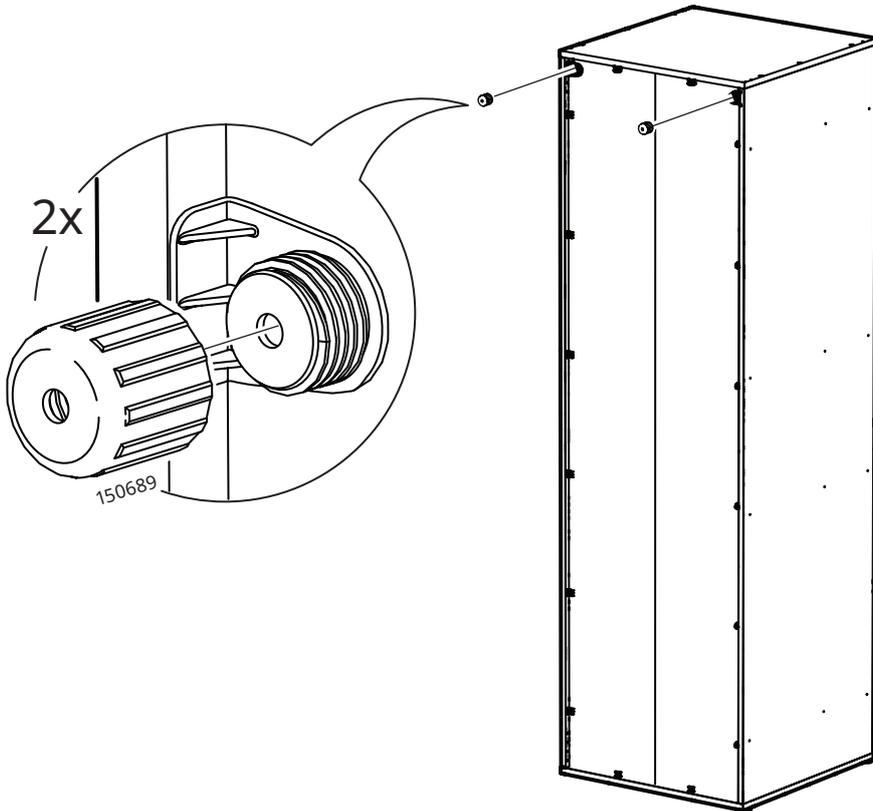


14

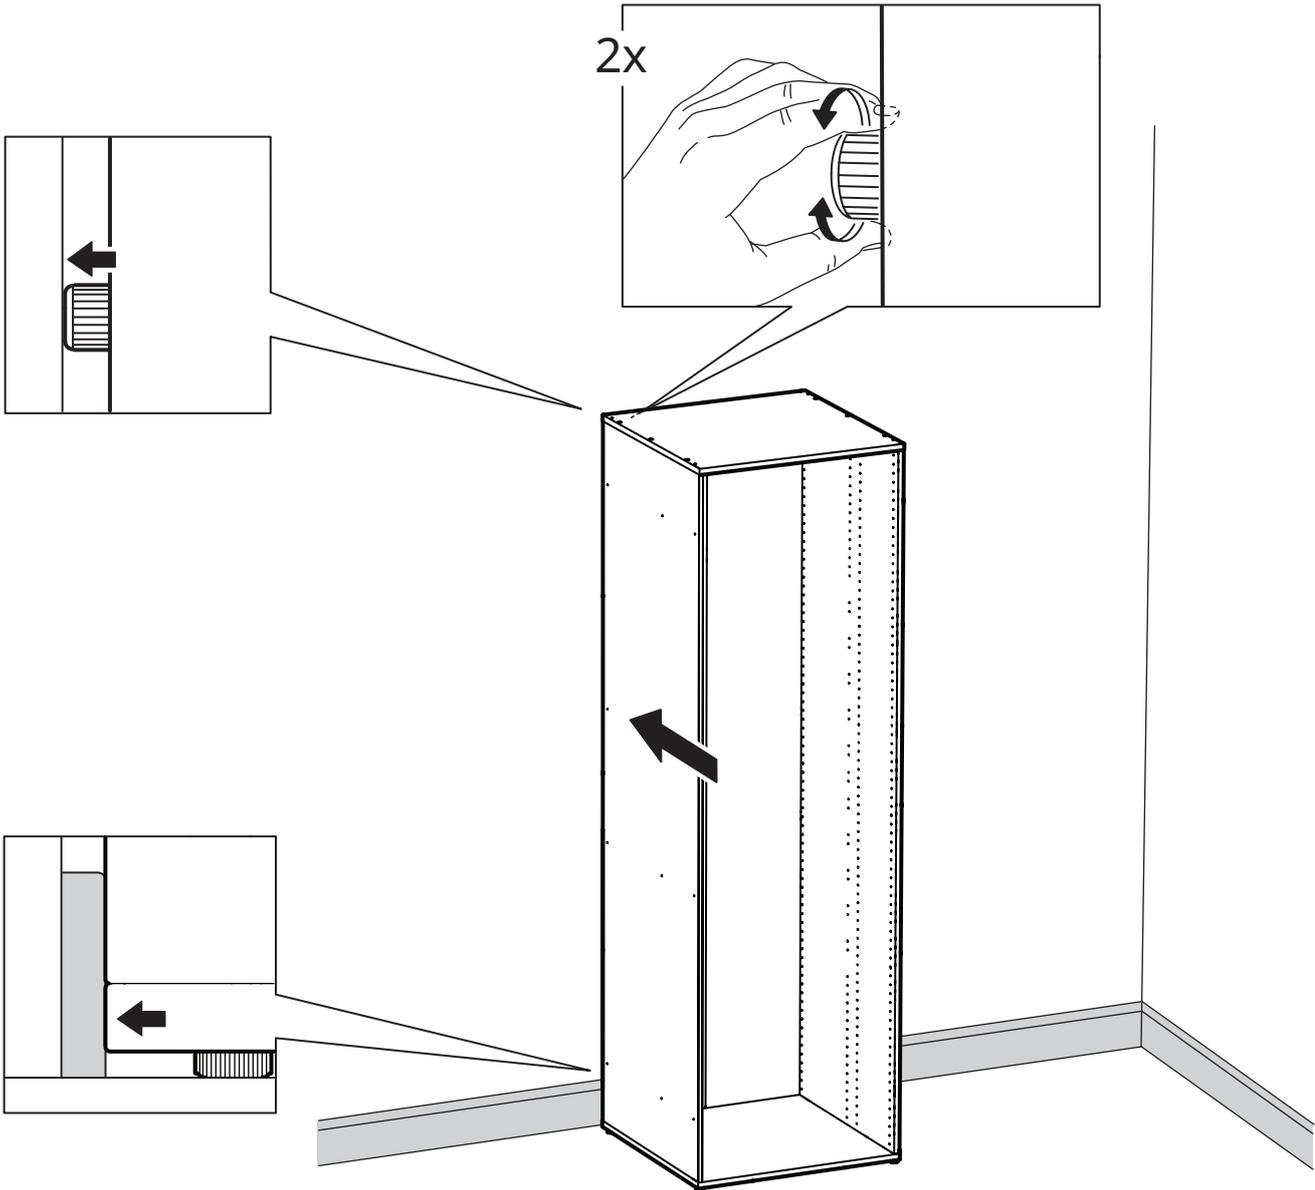


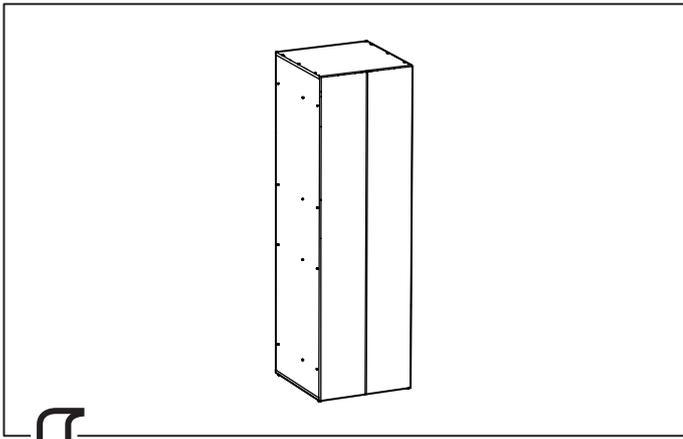


15

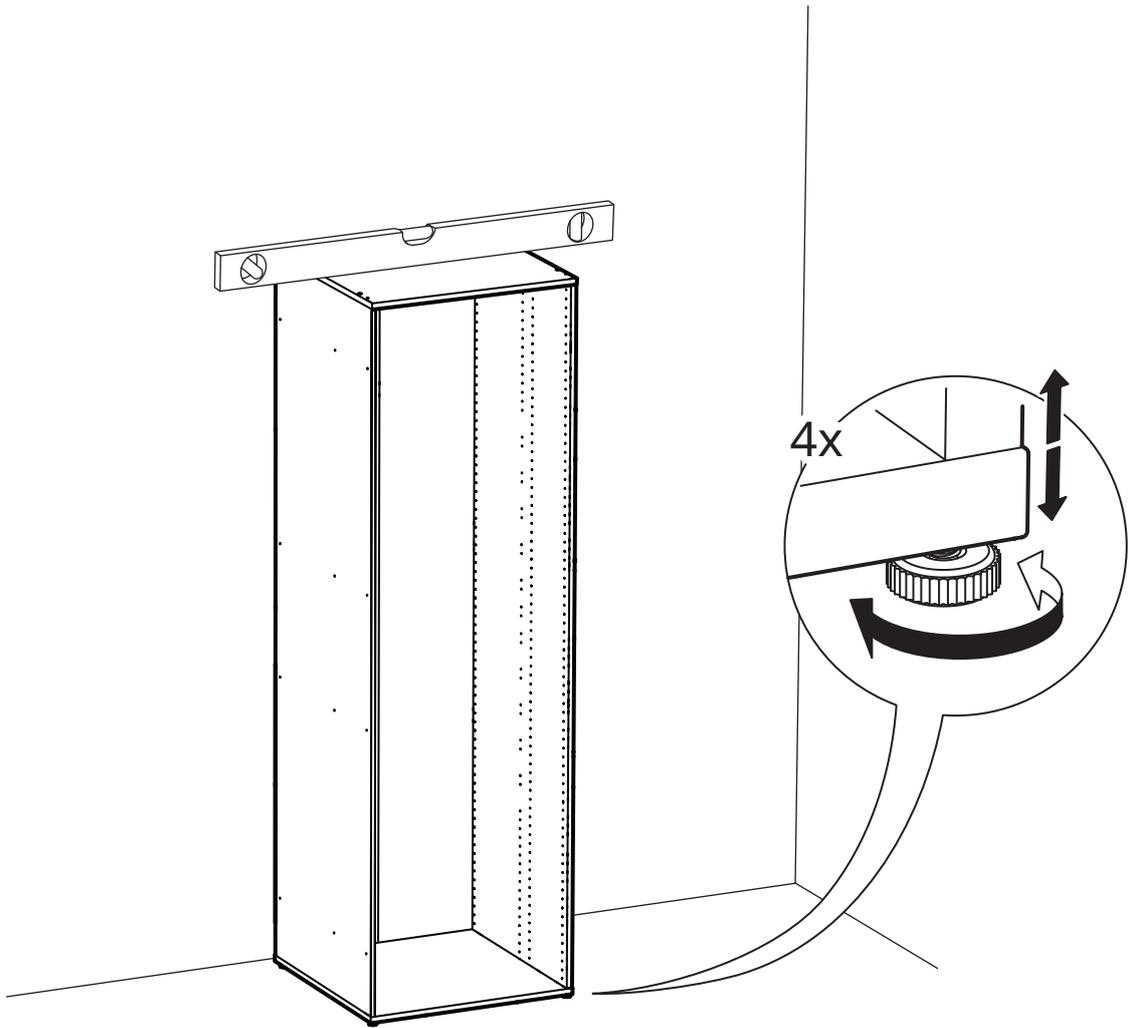

16

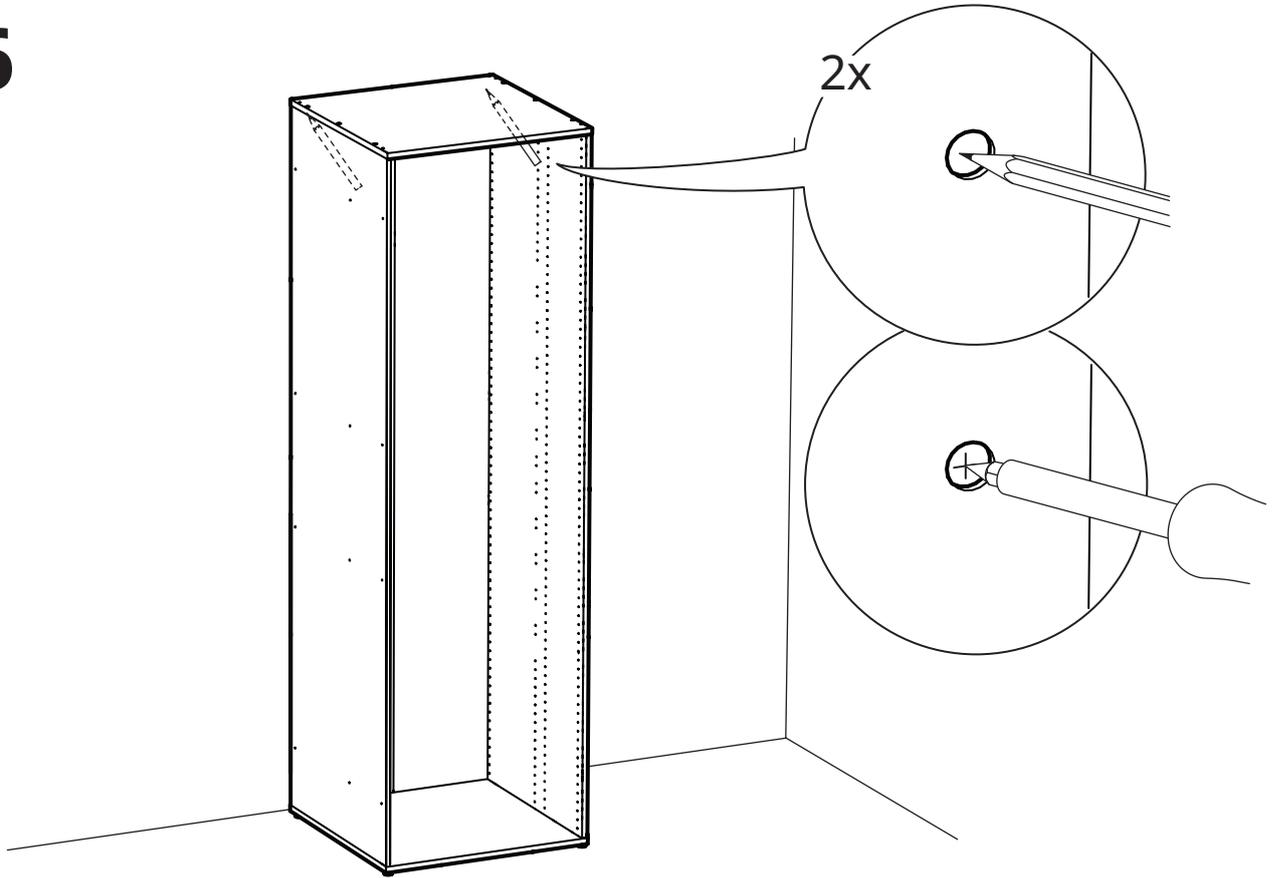

17

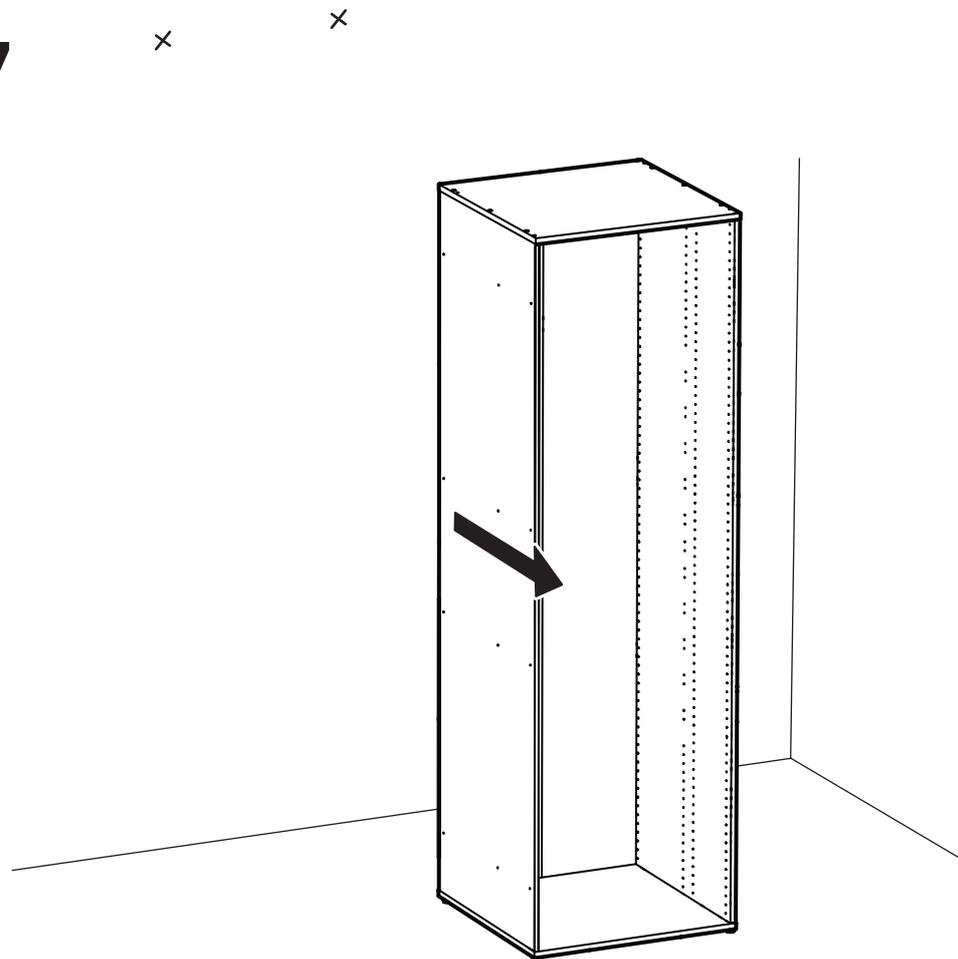




www.IKEA.com/secure-it



www.IKEA.cn/secure-it

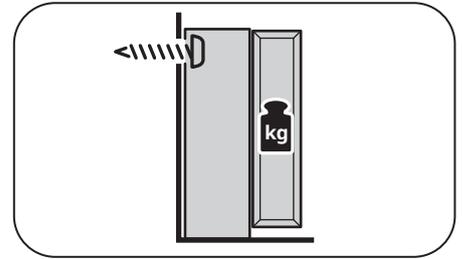

18

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

עברית

הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.

A

Ø 8 mm (5/16")

1

70 mm (2 3/4")

2

23

B

Ø 8 mm (5/16")

1

≈ 30 mm (≈ 1 1/4")

2

24


C

Ø 3 mm (1/8")

1

≈ 30 mm (≈ 1 1/4")

26

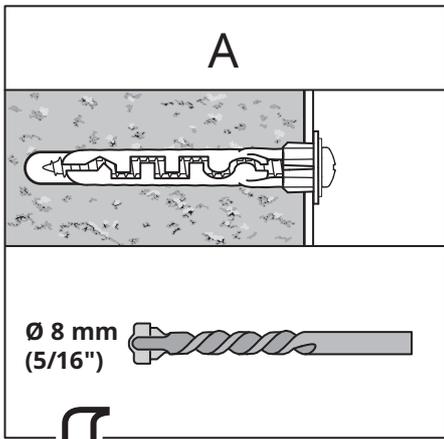


19

x

x


2x


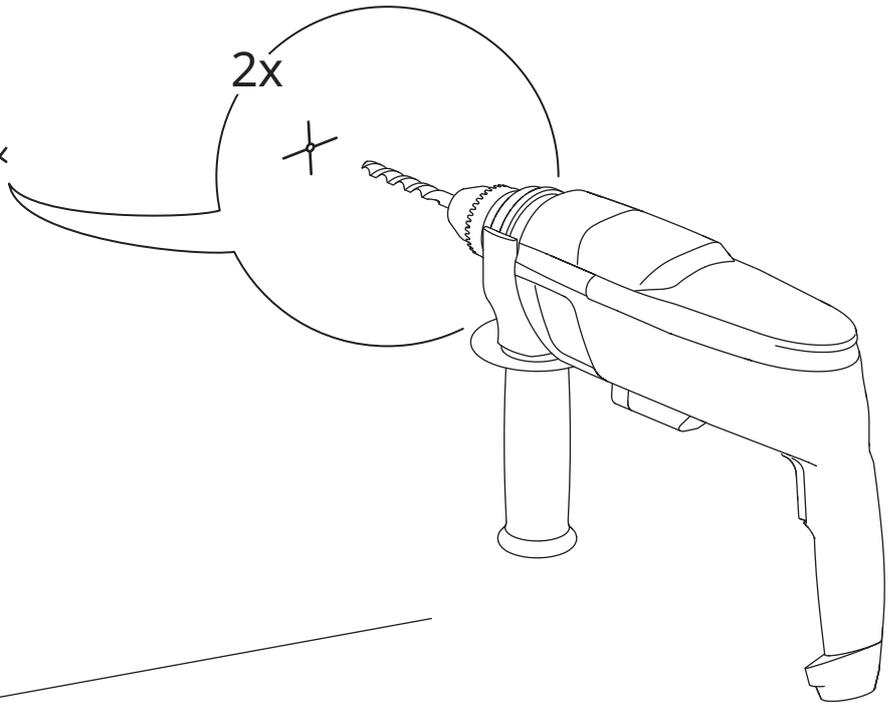


20




2x

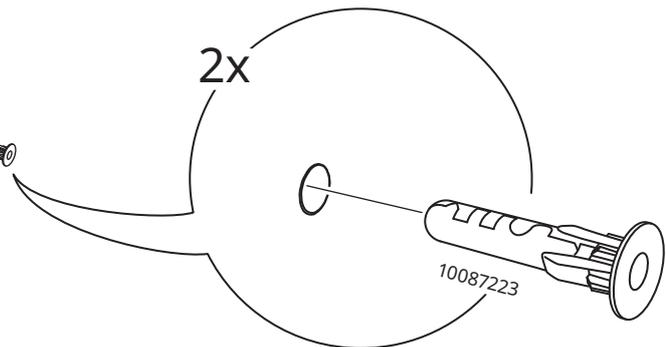


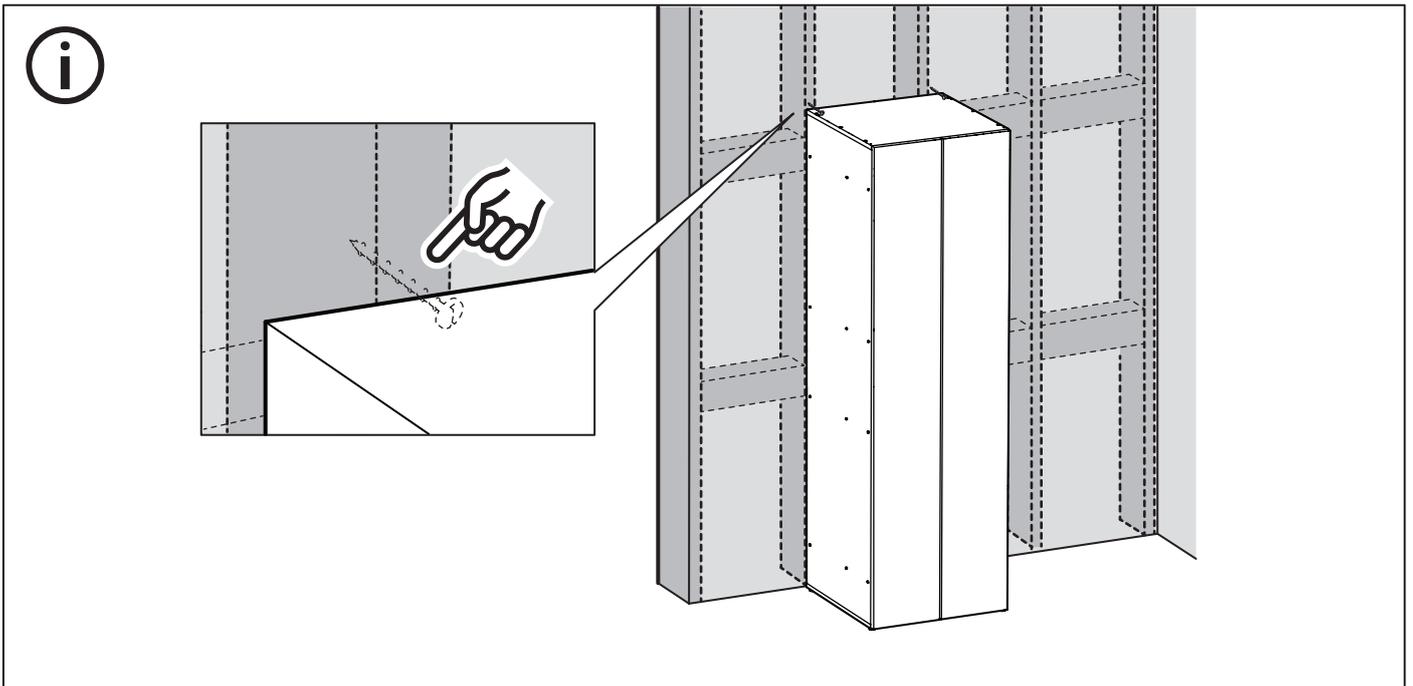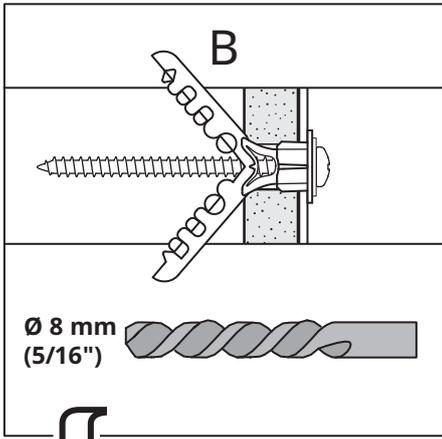


18

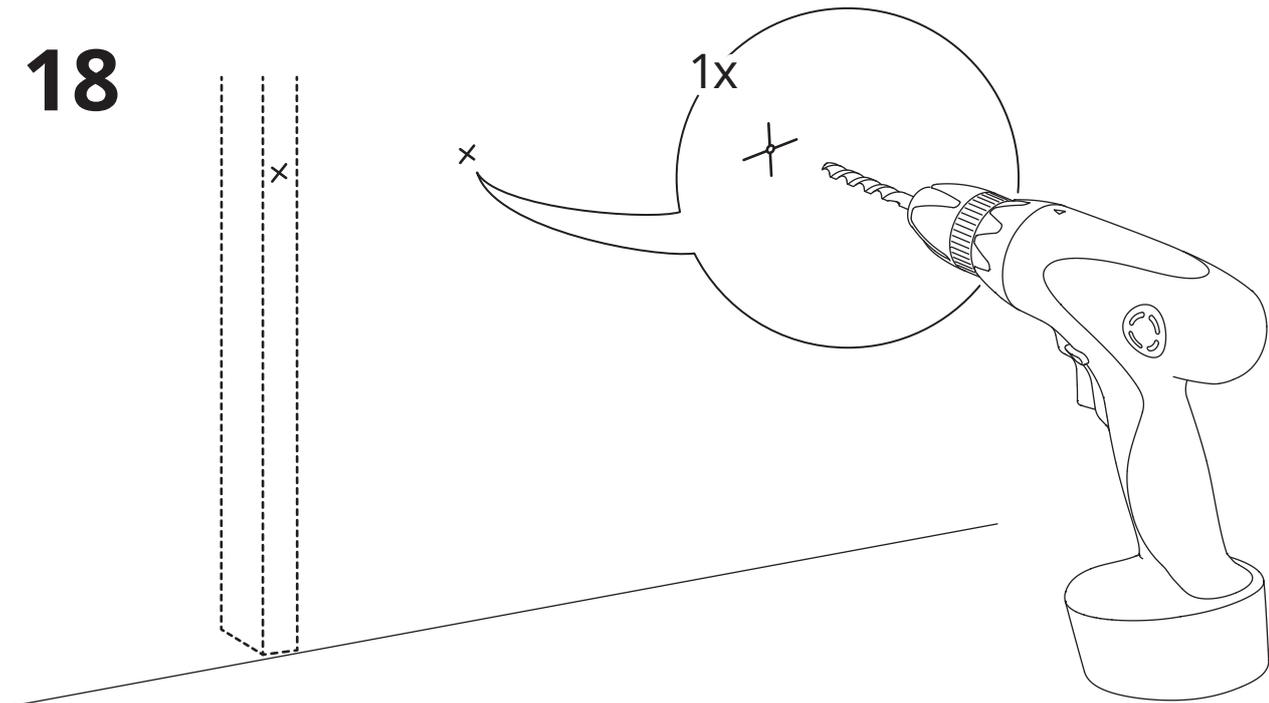




19

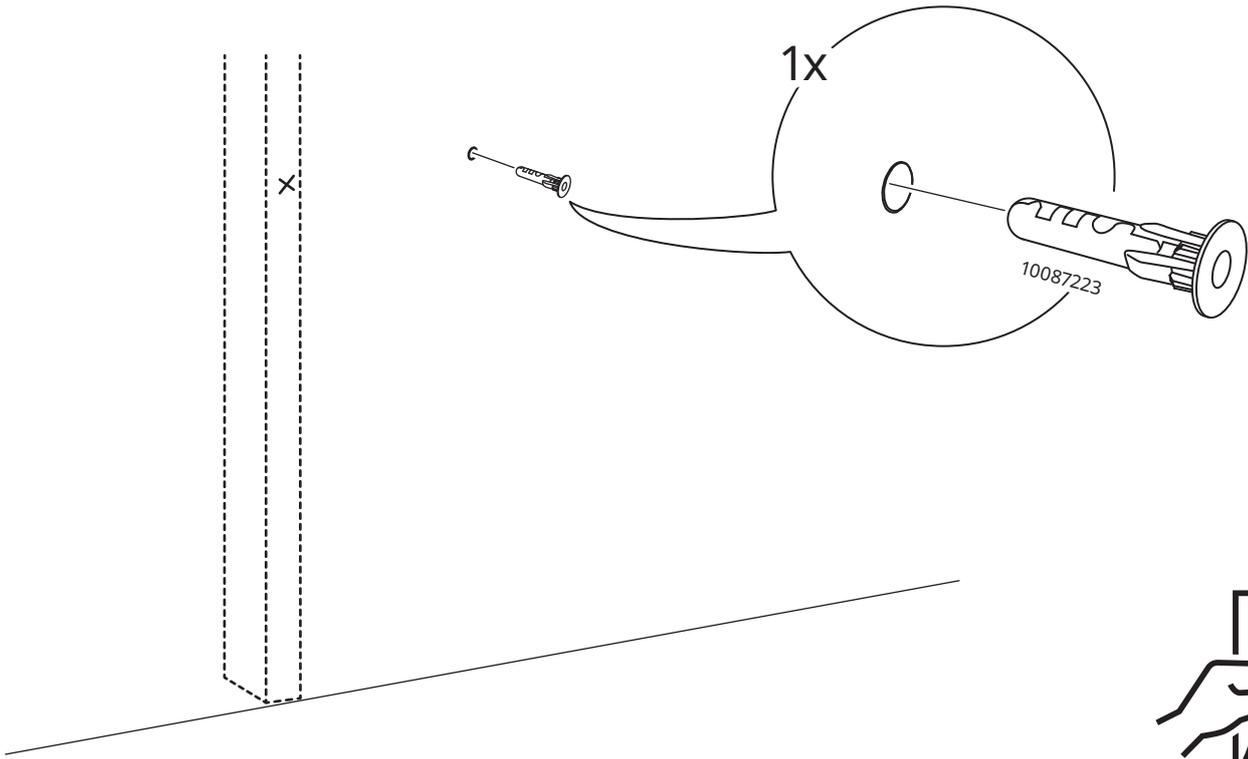




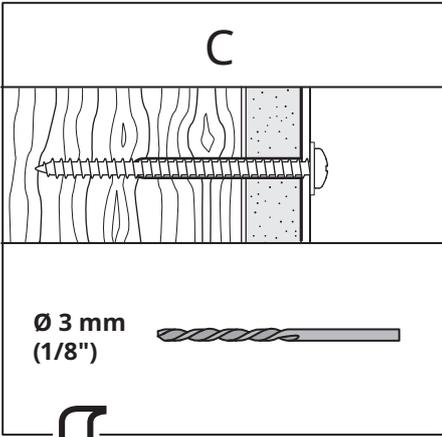



18

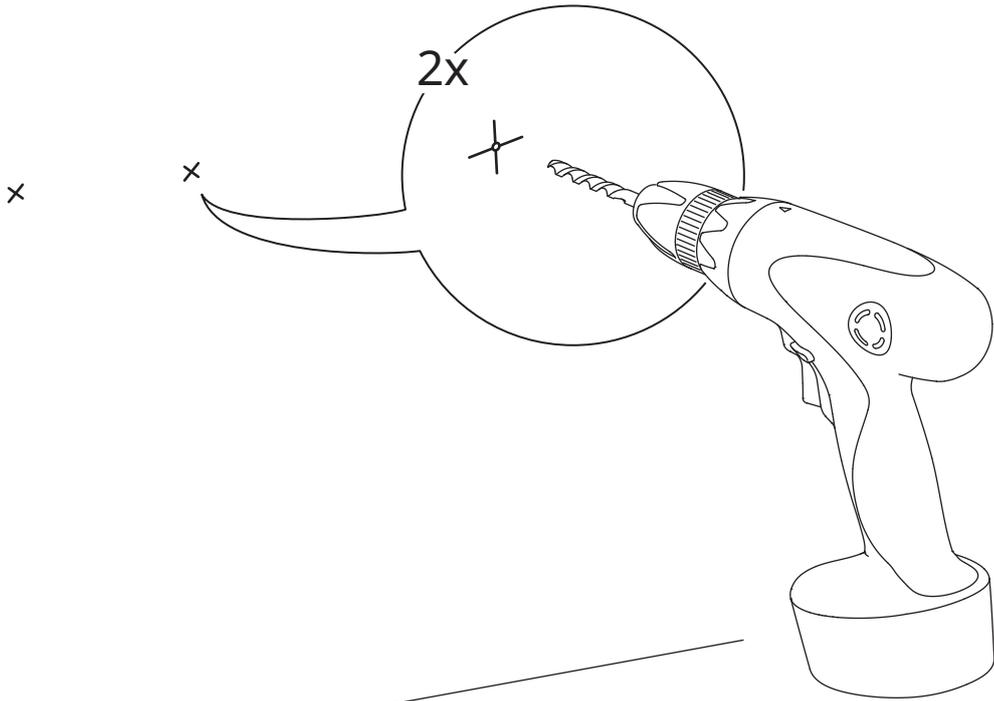




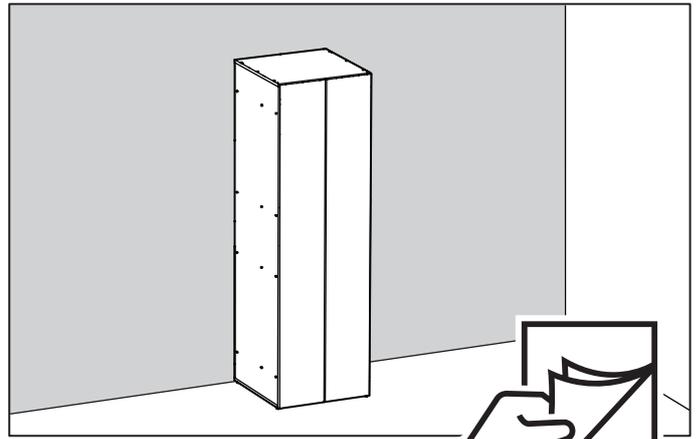
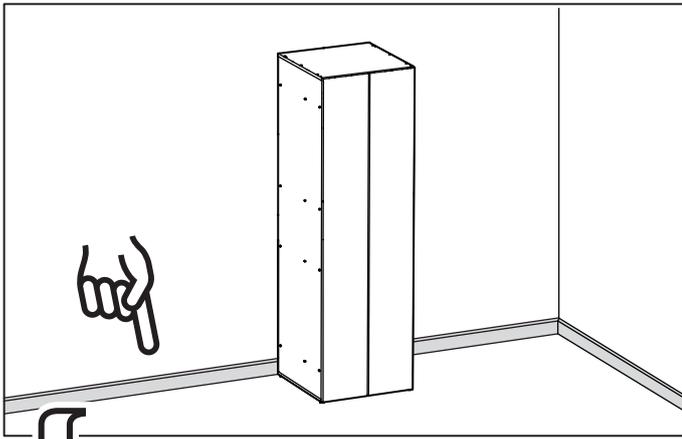



21

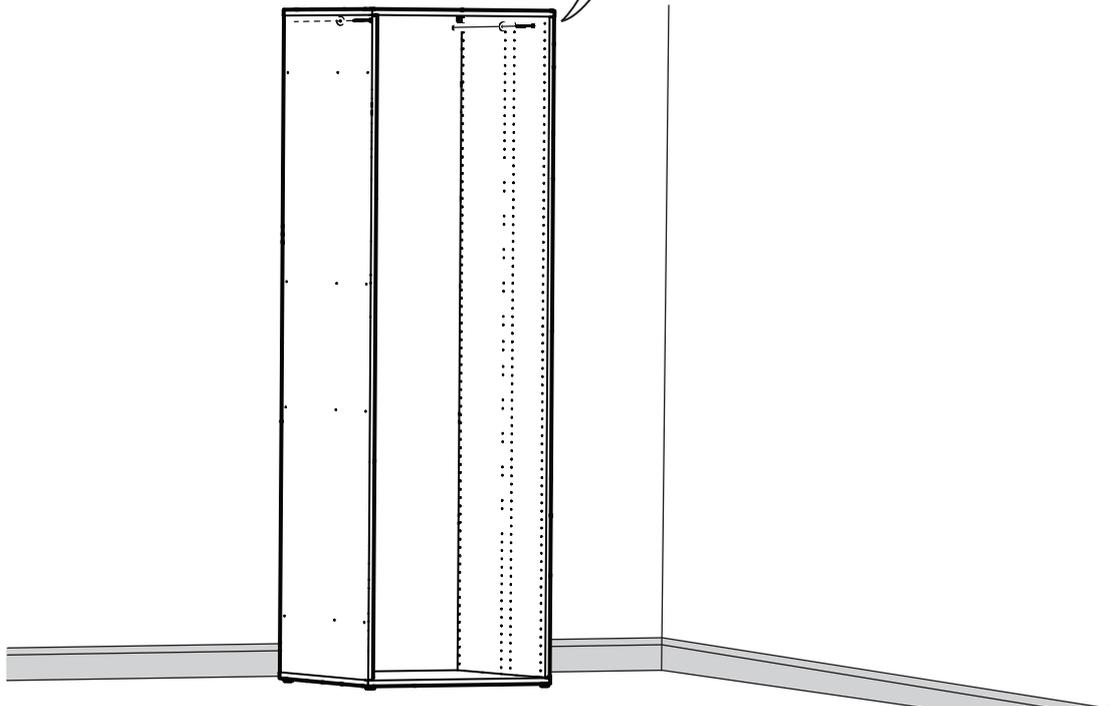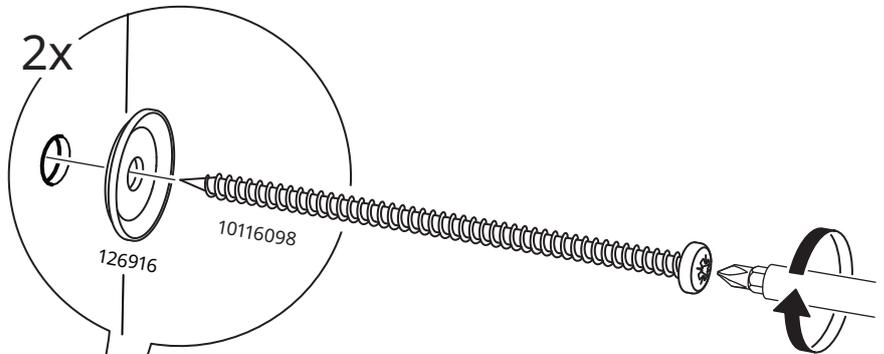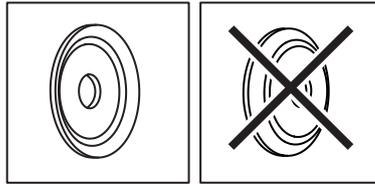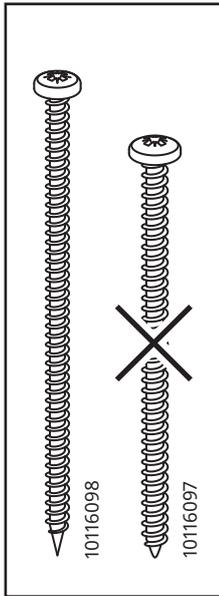

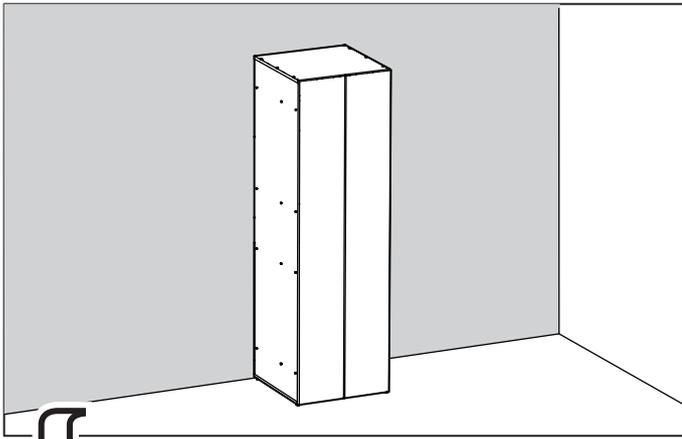




20

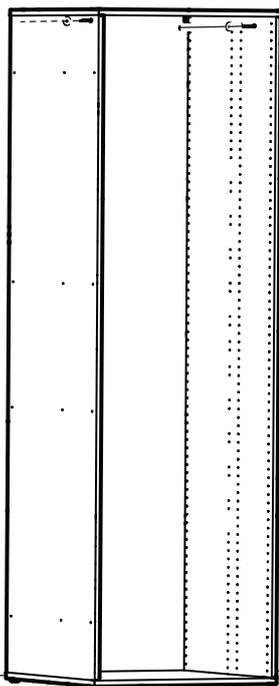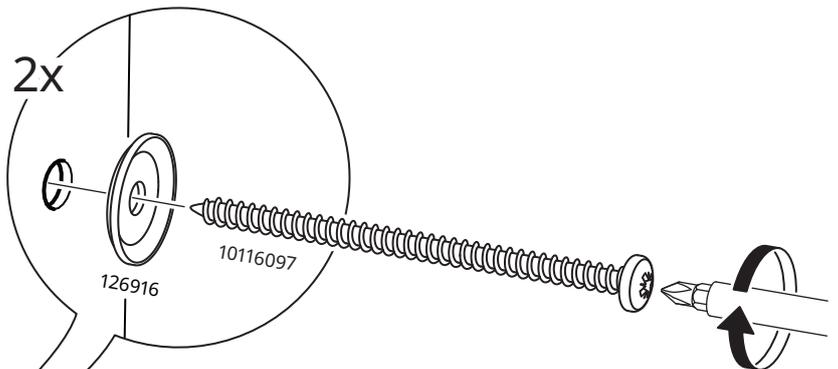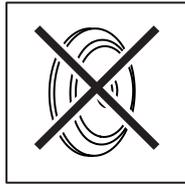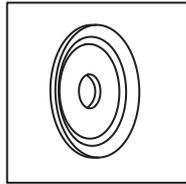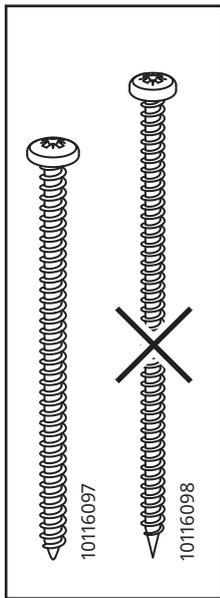



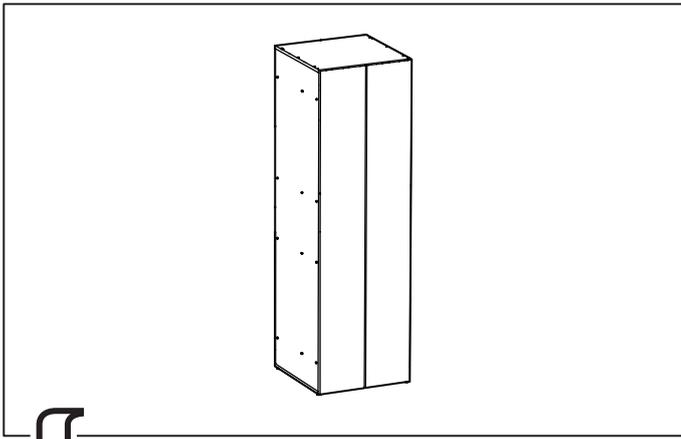


22

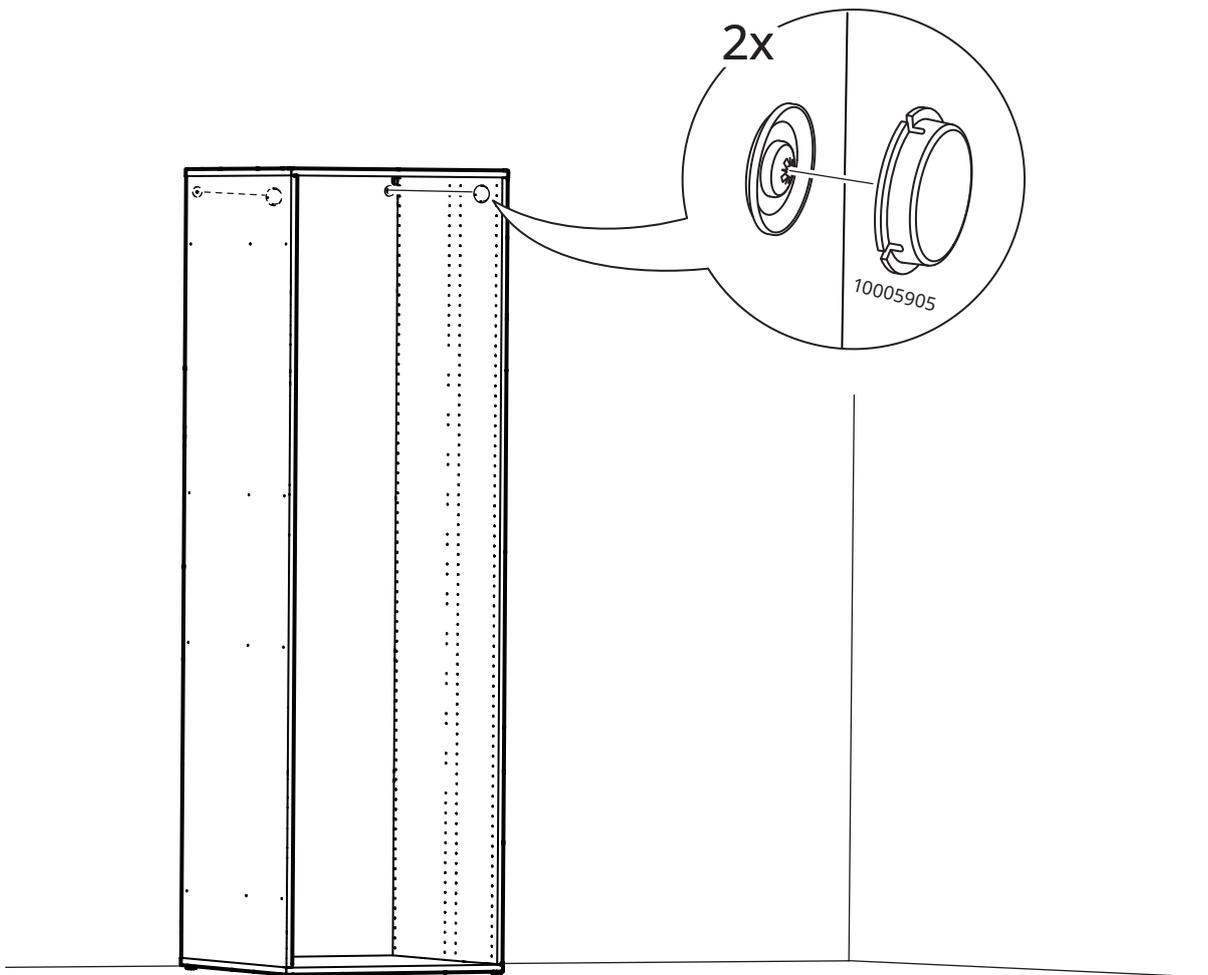


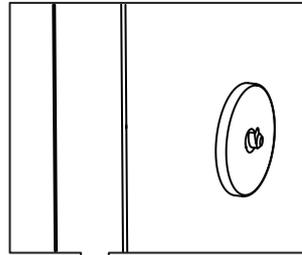
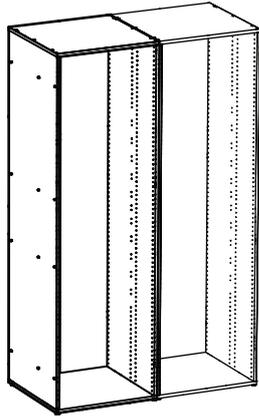


1

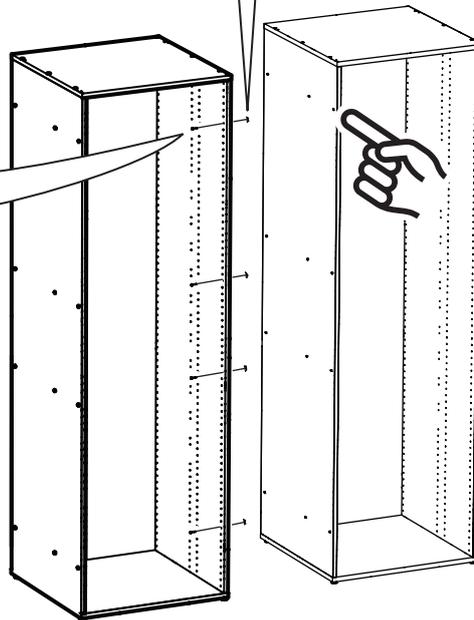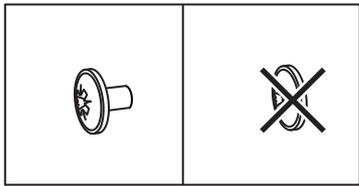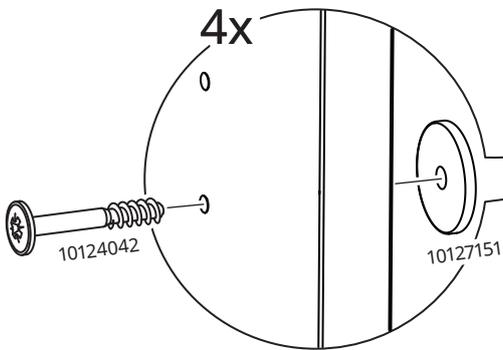


2

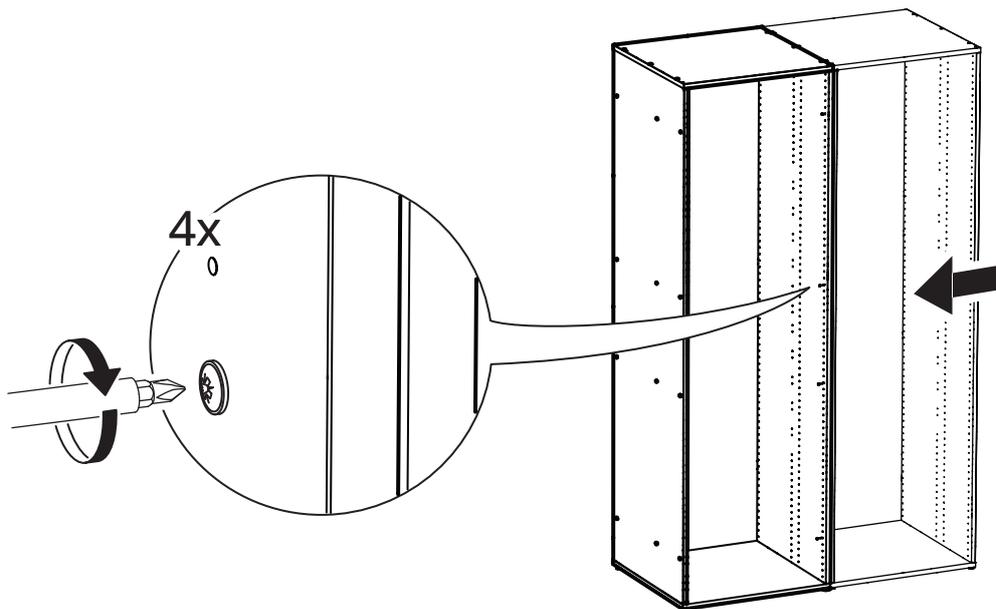


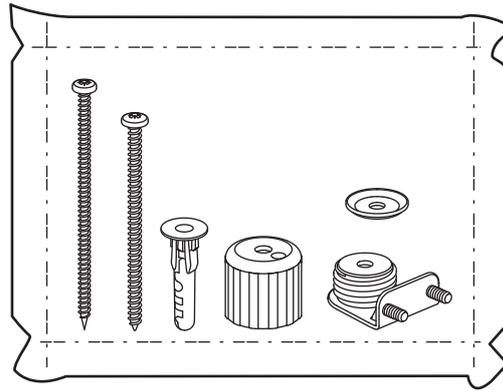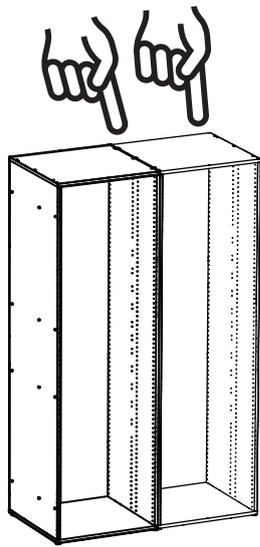



23






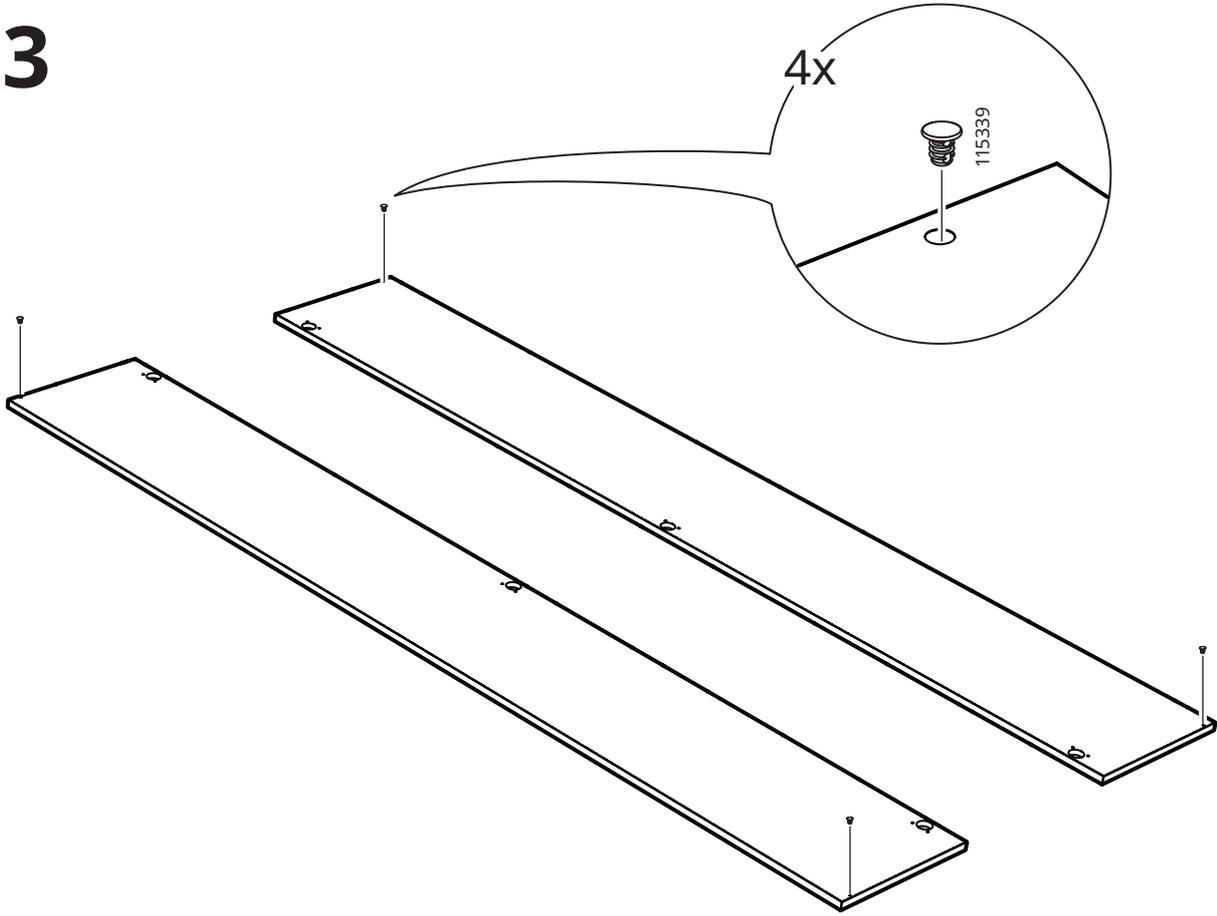


24

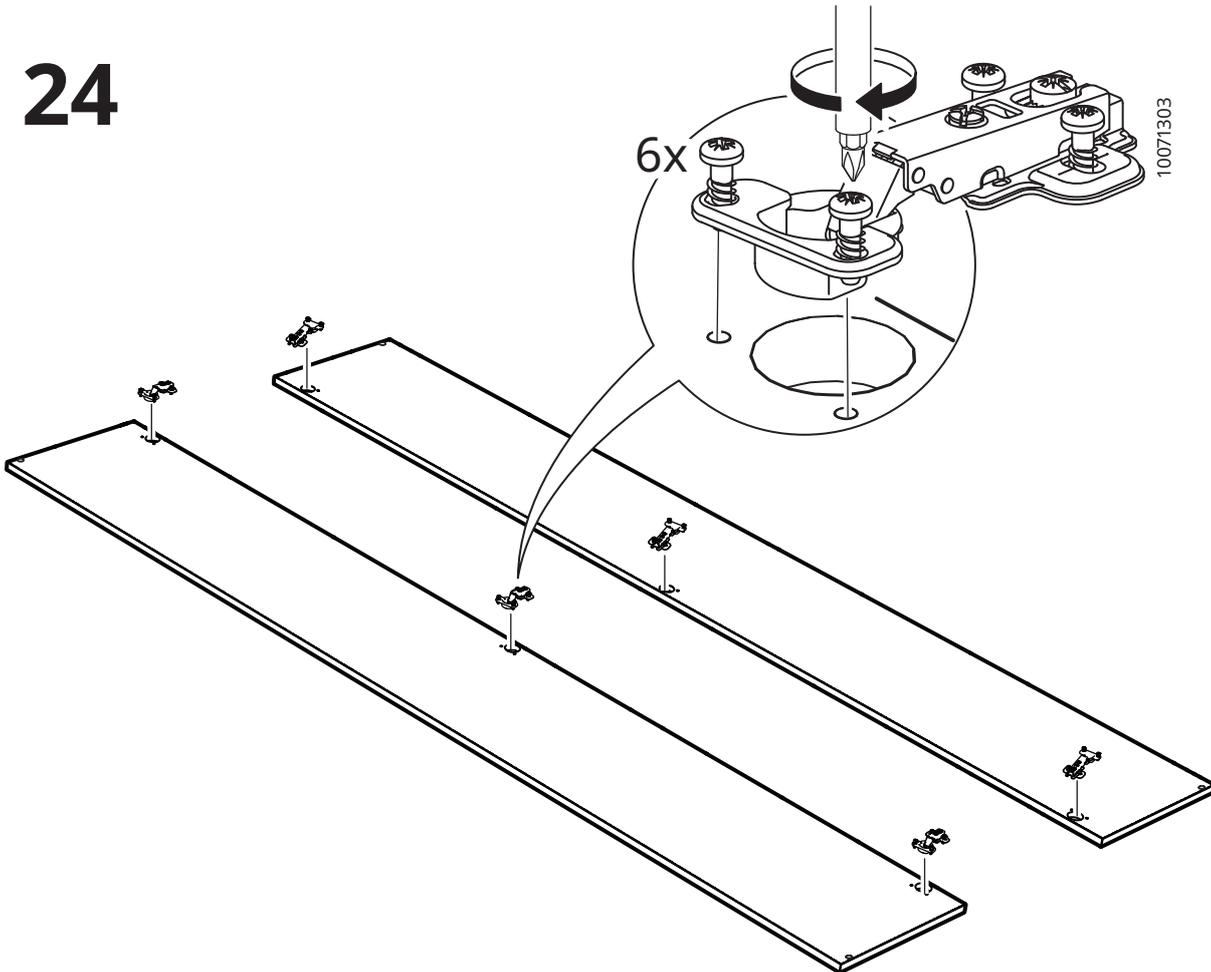


25

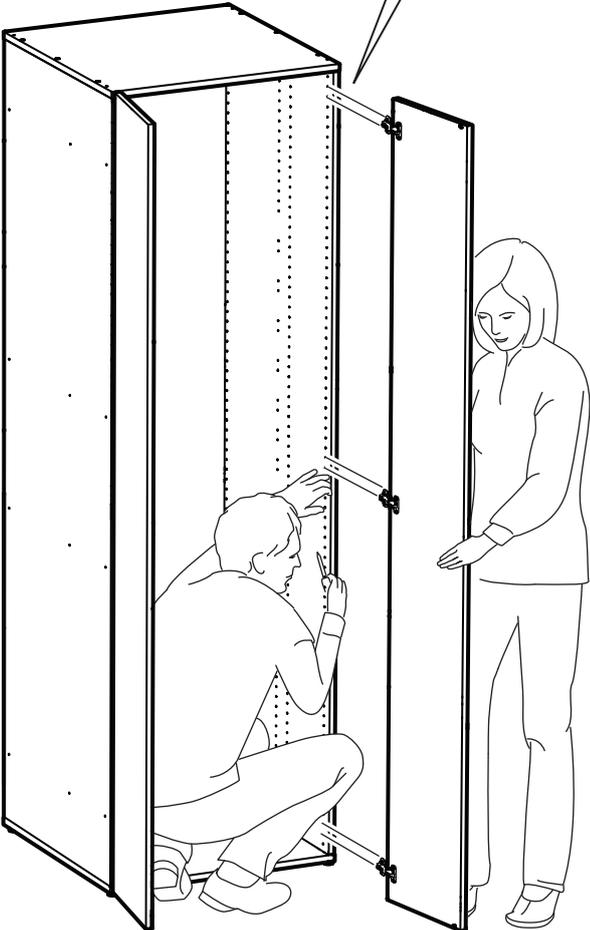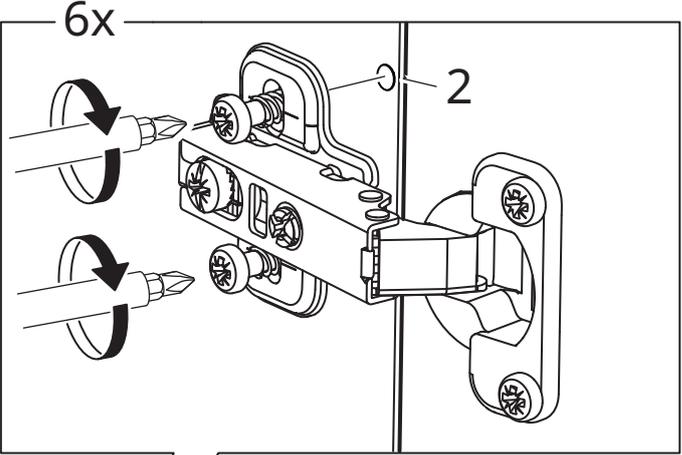

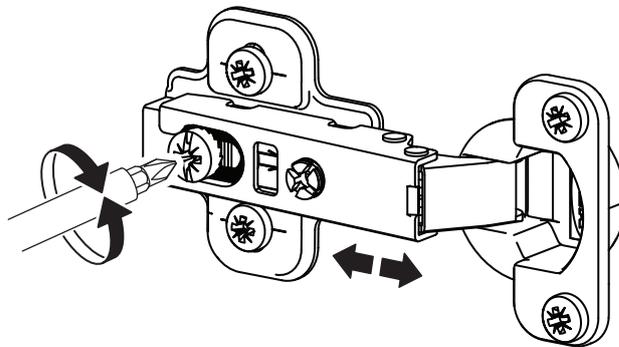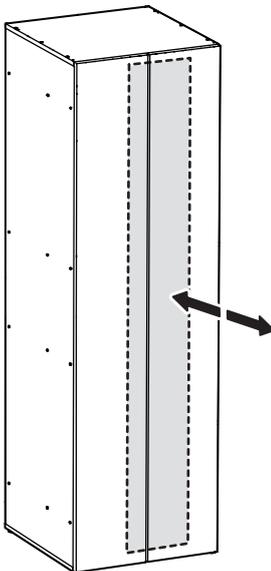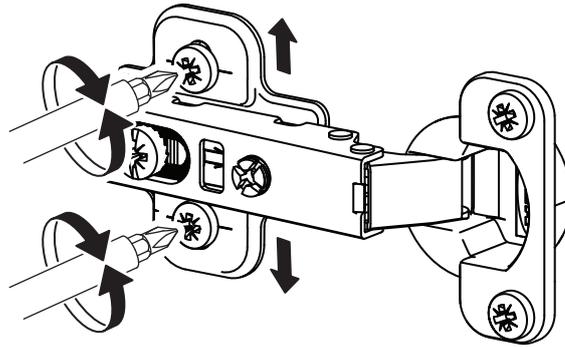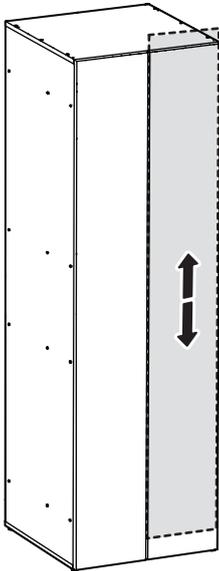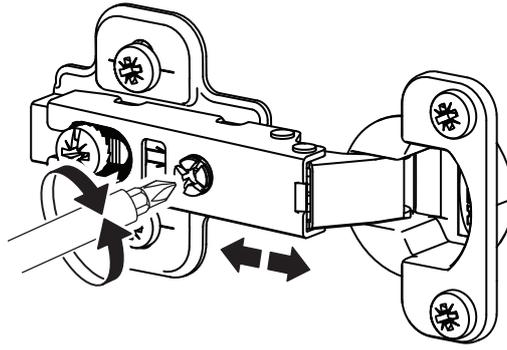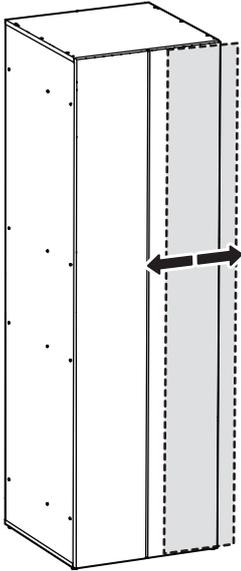

26

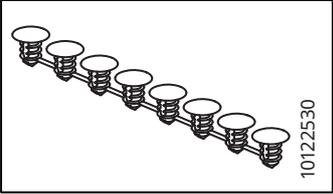

24x

