


# LASTARE

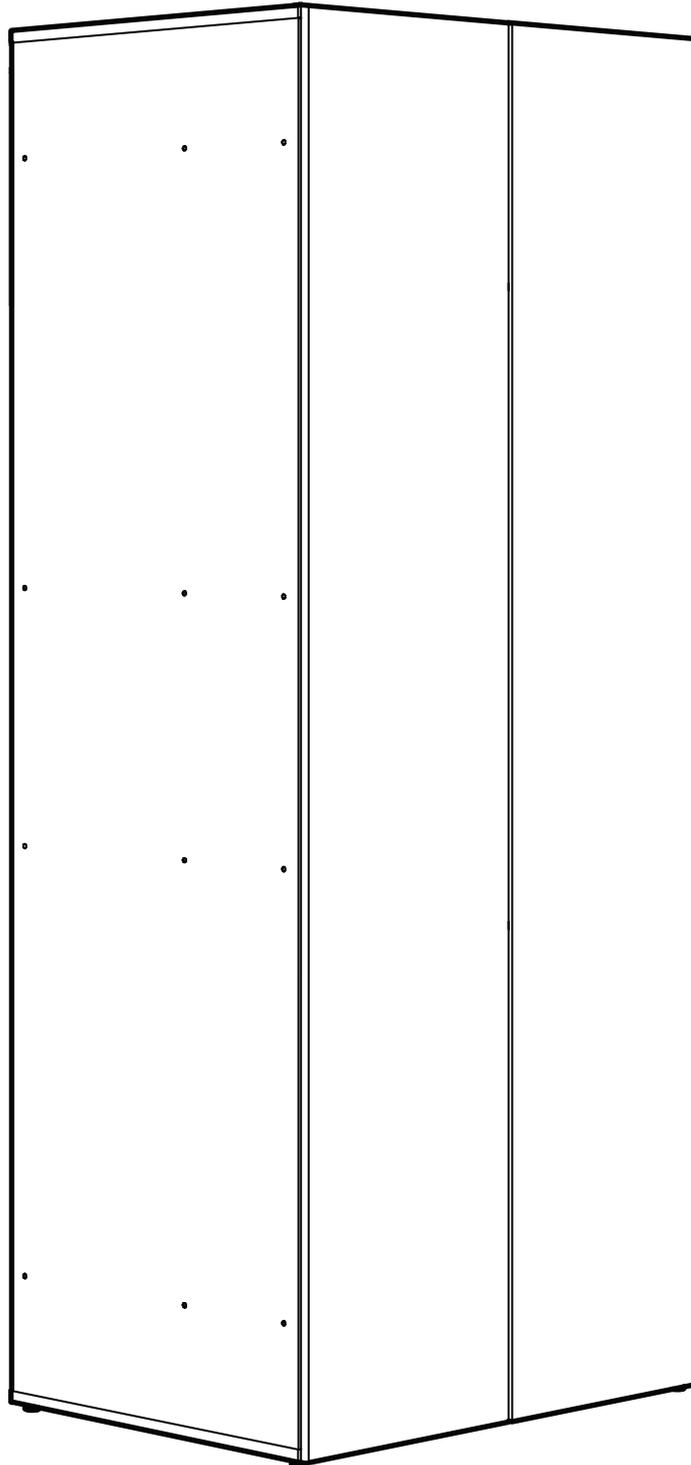

Design and Quality  
IKEA of Sweden



English

## WARNING!

**Children have died from furniture tipover.**

**To reduce the risk of furniture tipover:**

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.

Read and follow each step of the instruction carefully.

עברית

## אזהרה!

**ילדים נהרגו כתוצאה מנפילת רהיטים.**

**על מנת להפחית את הסיכון של נפילת רהיטים:**

תמיד יש להתקין את אבזר הקיבוע.

לעולם אל תניחו טלוויזיה על מוצר זה.

לעולם אל תאפשרו לילדים לעמוד, לטפס או להיתלות על המגירות, הדלתות או המדפיים.

פתחו אך ורק מגירה אחת בכל פעם.



יש למקם את הפריטים הכבדים ביותר במגירות התחתונות.

 

 
קראו ופעלו בזהירות לפי כל שלב בהוראות.











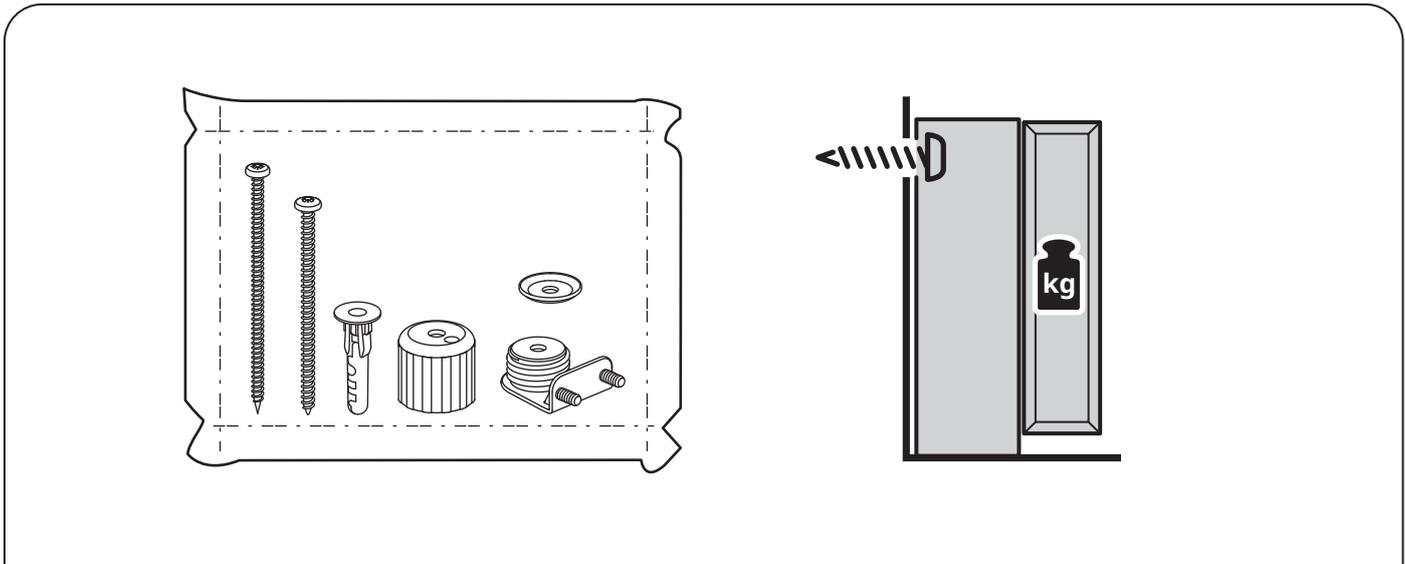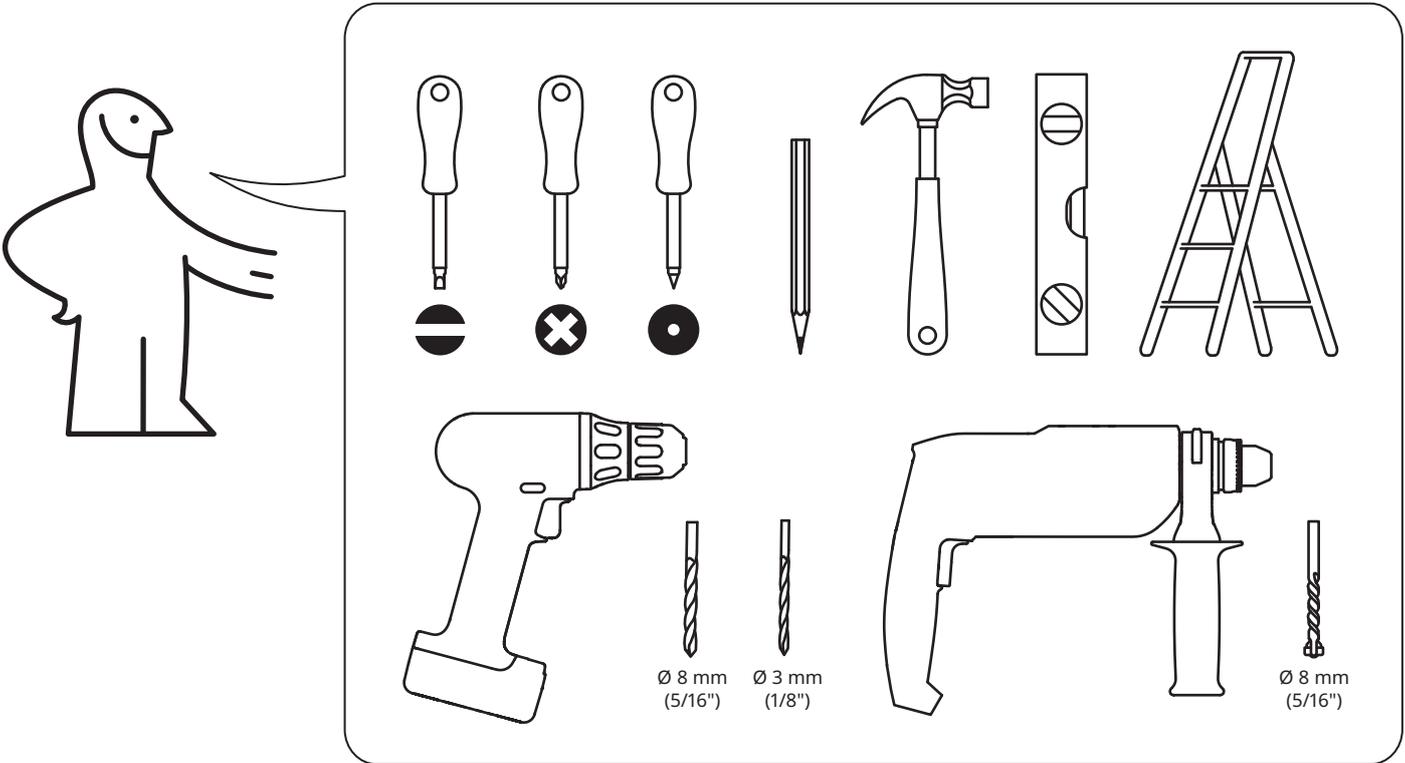

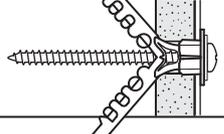
 <p><a href="http://www.IKEA.com/secure-it">www.IKEA.com/secure-it</a></p>	<b>A</b>	<b>B</b>	<b>C</b>
	 <p>Ø 8 mm (5/16") </p>	 <p>Ø 8 mm (5/16") </p>	 <p>Ø 3 mm (1/8") </p>

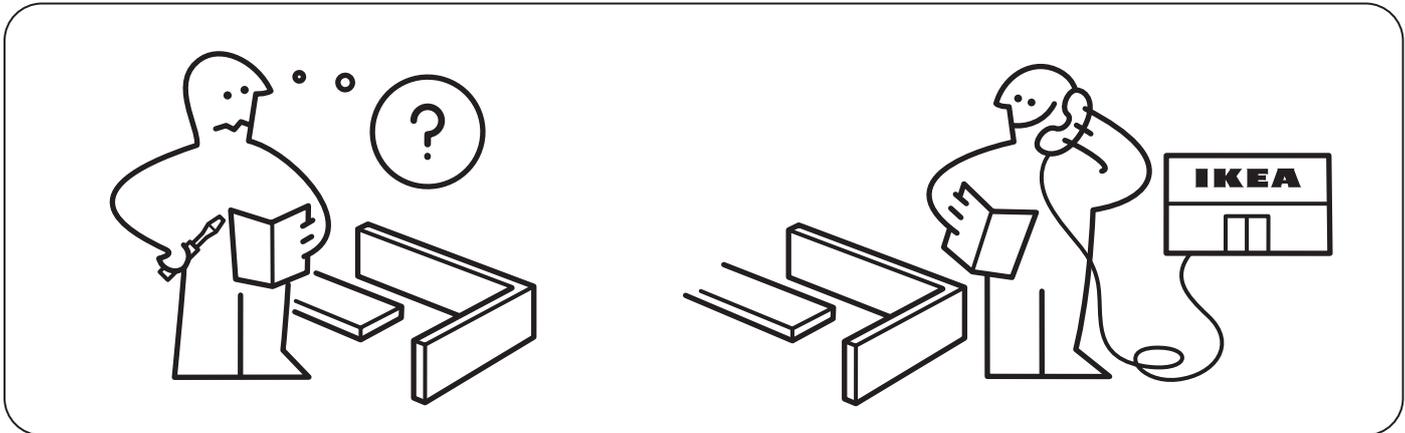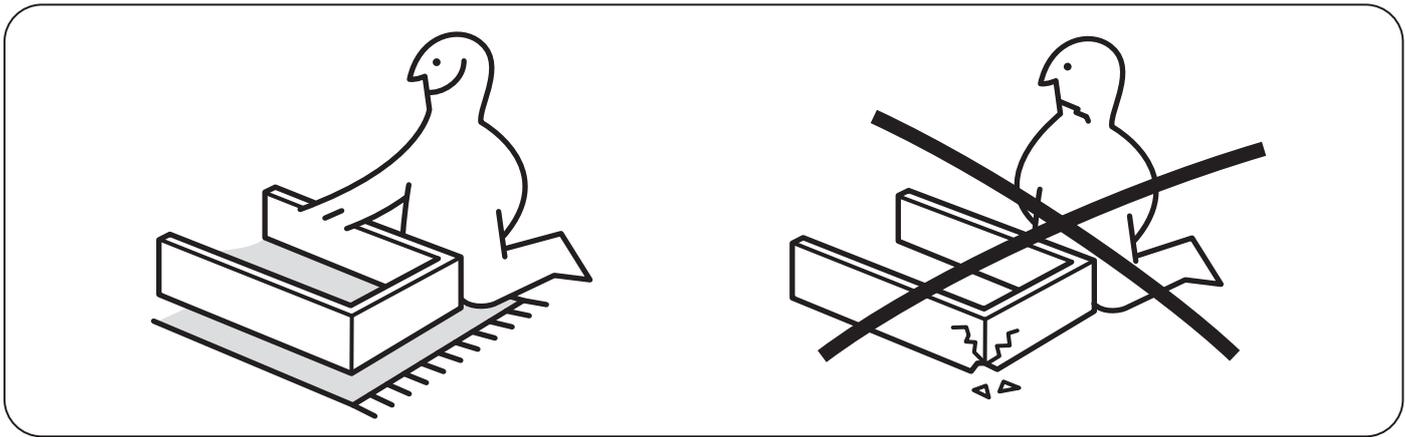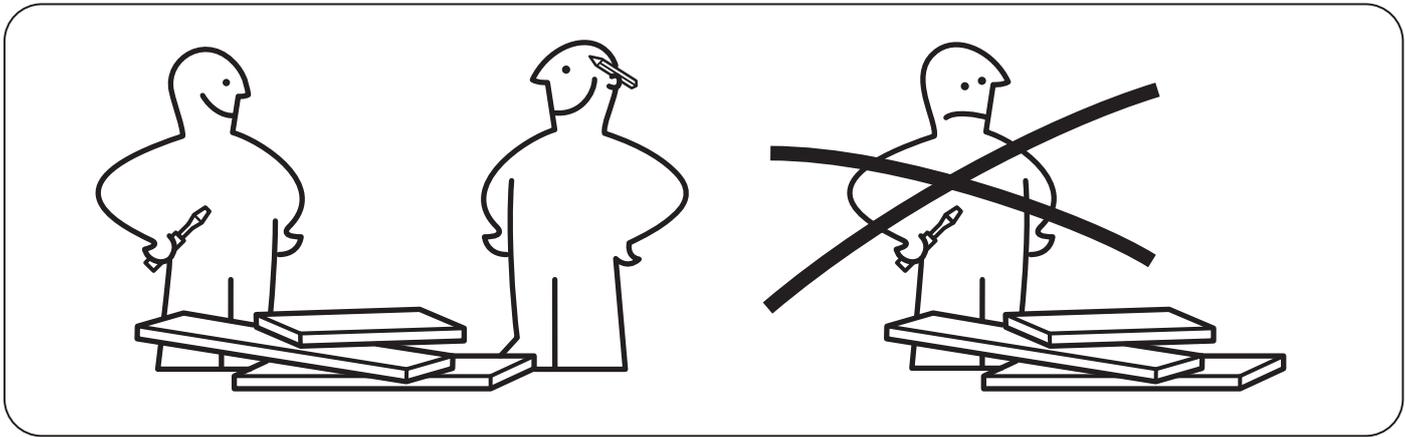

 


100214

 12x



10124042

4x

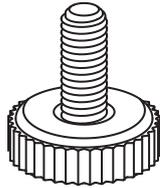

10127224

4x




101449

4x



115339

4x

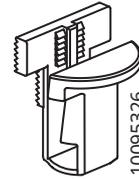


10095326

18x



10095315

18x

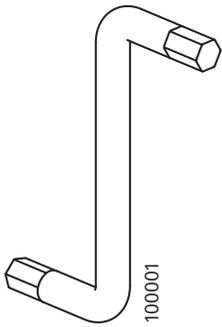


100001

1x



101345

12x

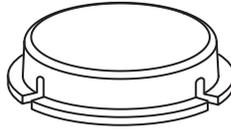


10005905

2x




10127151

4x

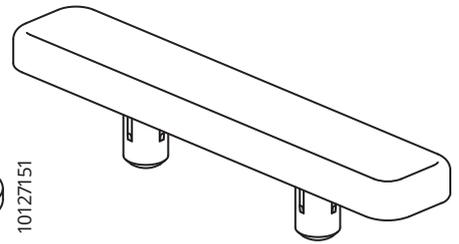


153548

1x

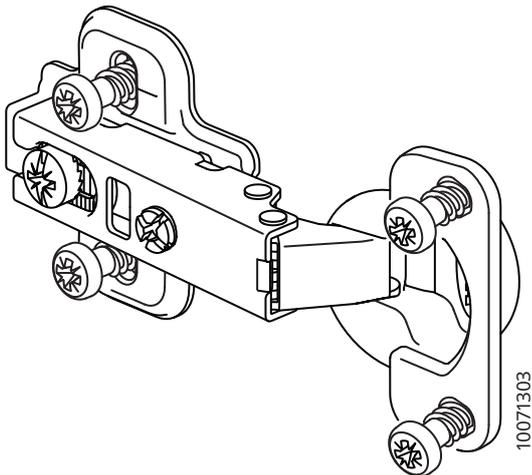


10071303

6x

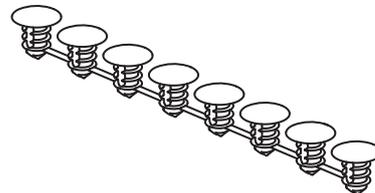


10122530

 
3x




2x

 


2x

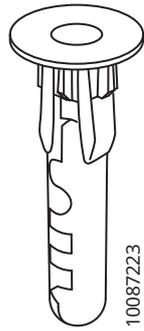


2x

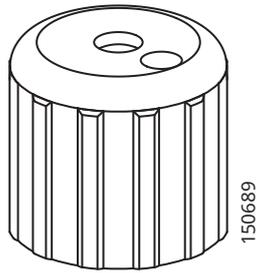

2x




 


2x

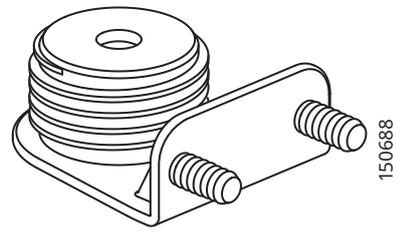


2x


1

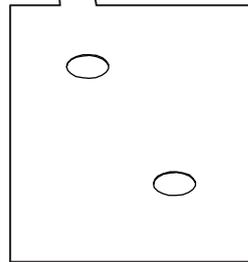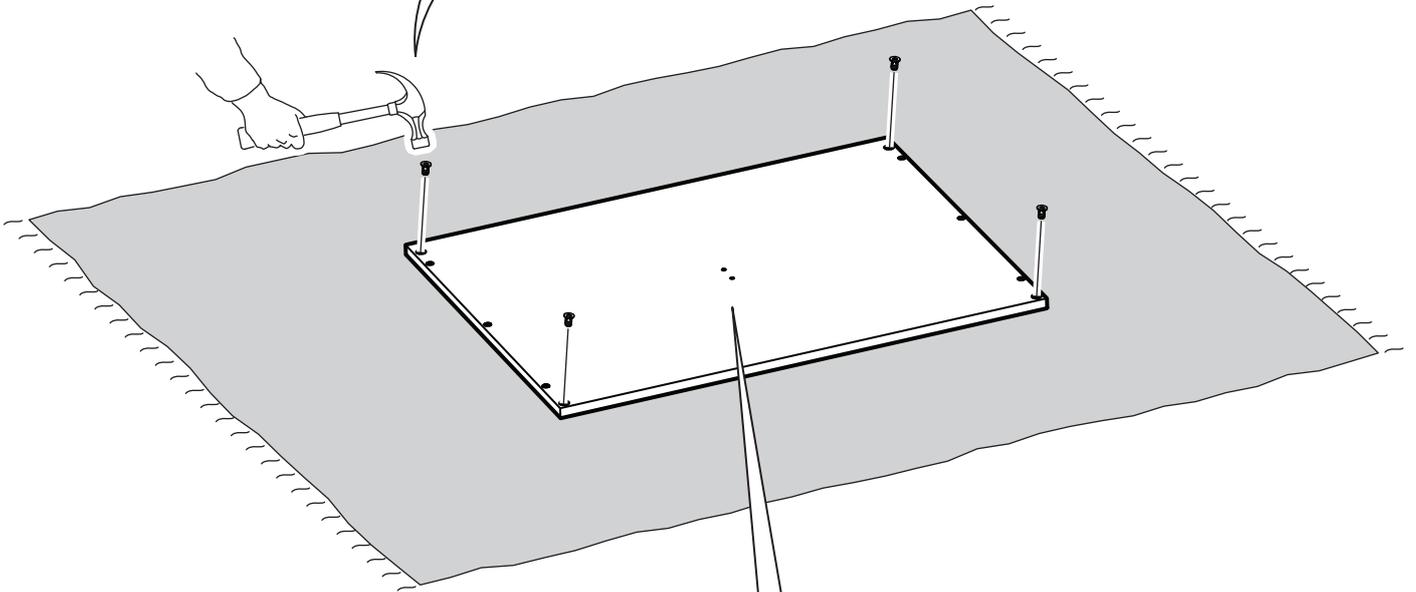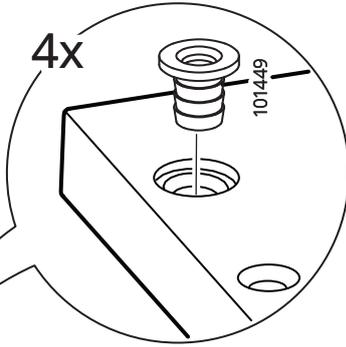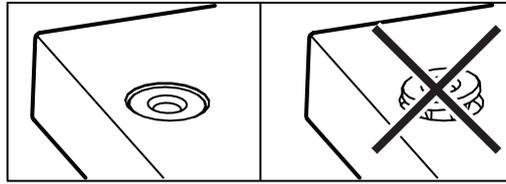



2

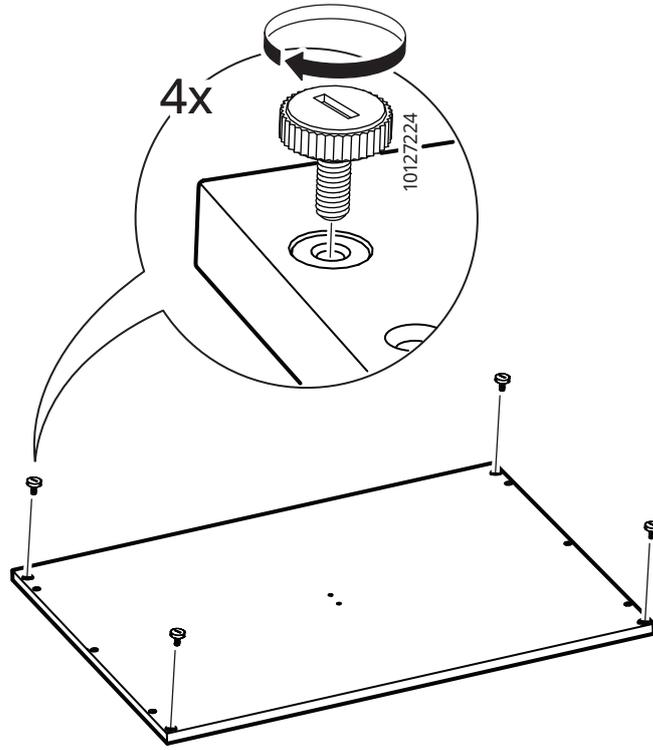


3

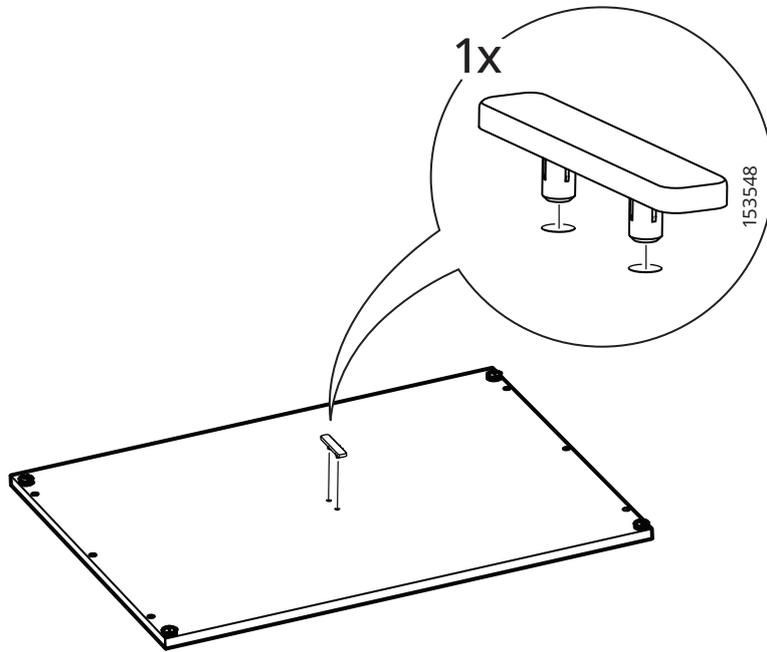


4

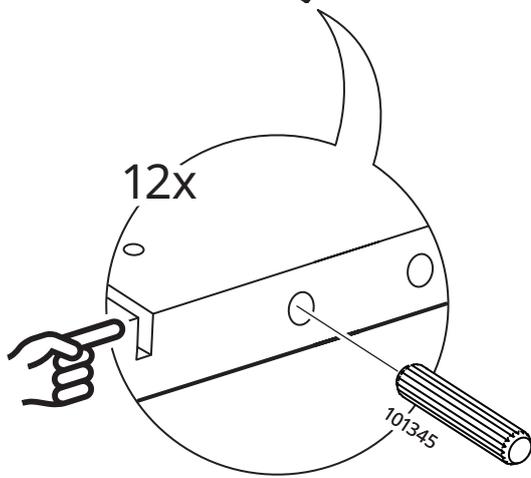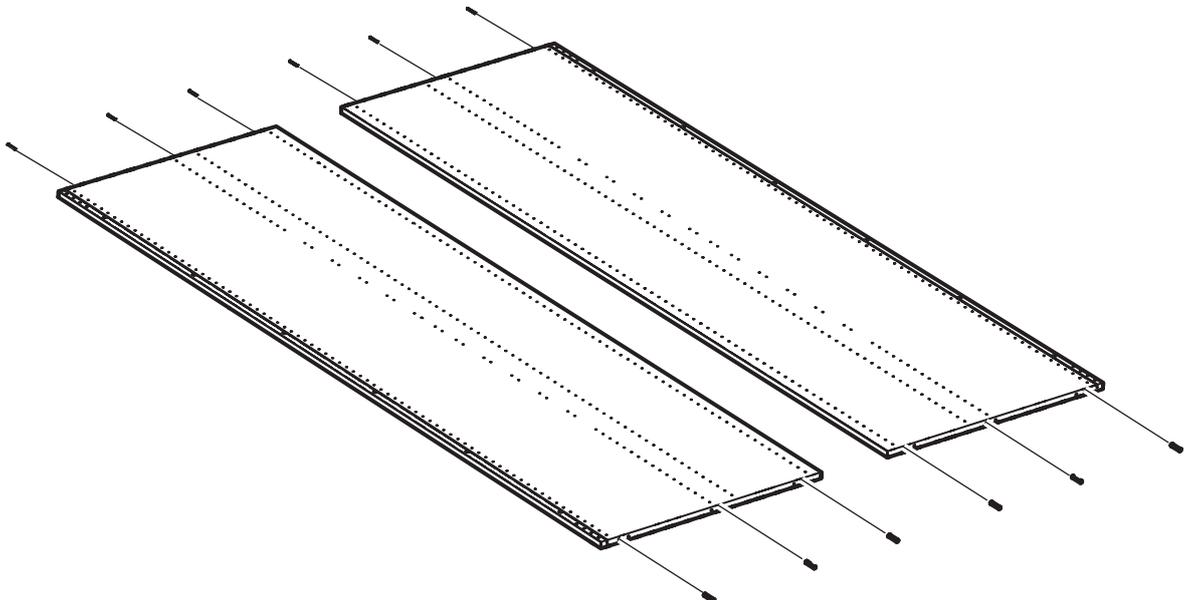


5

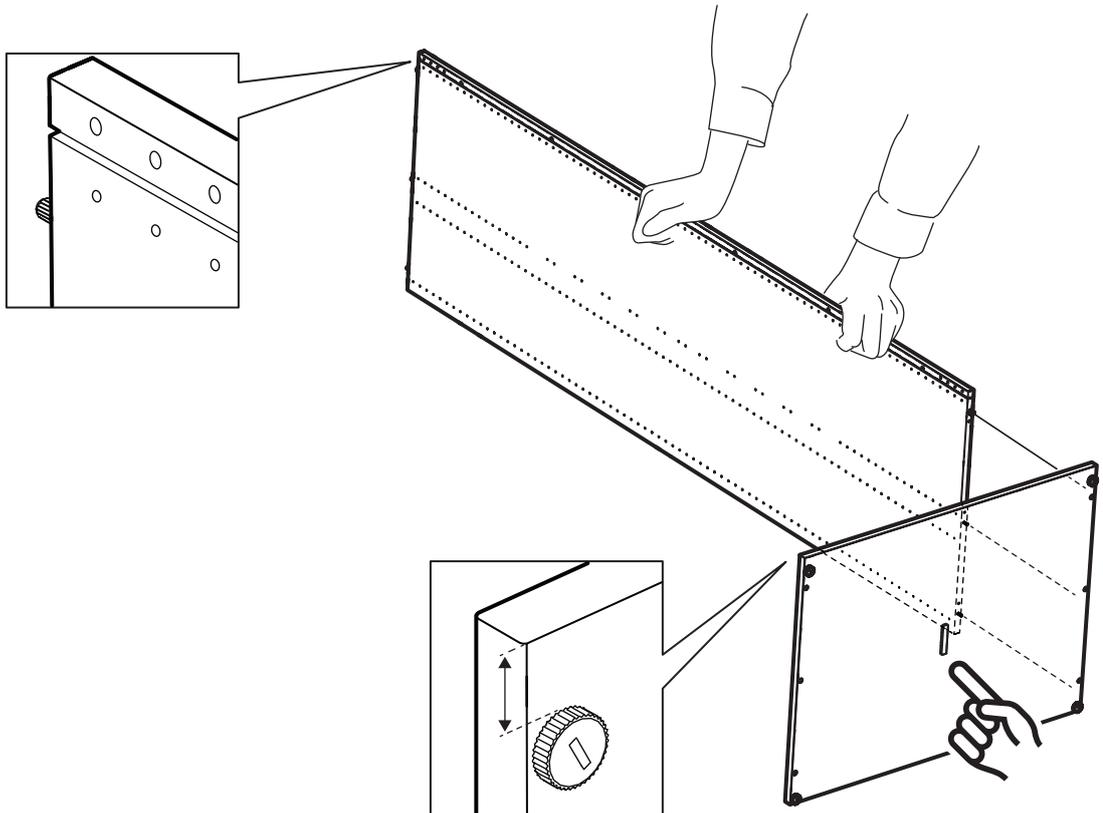





6

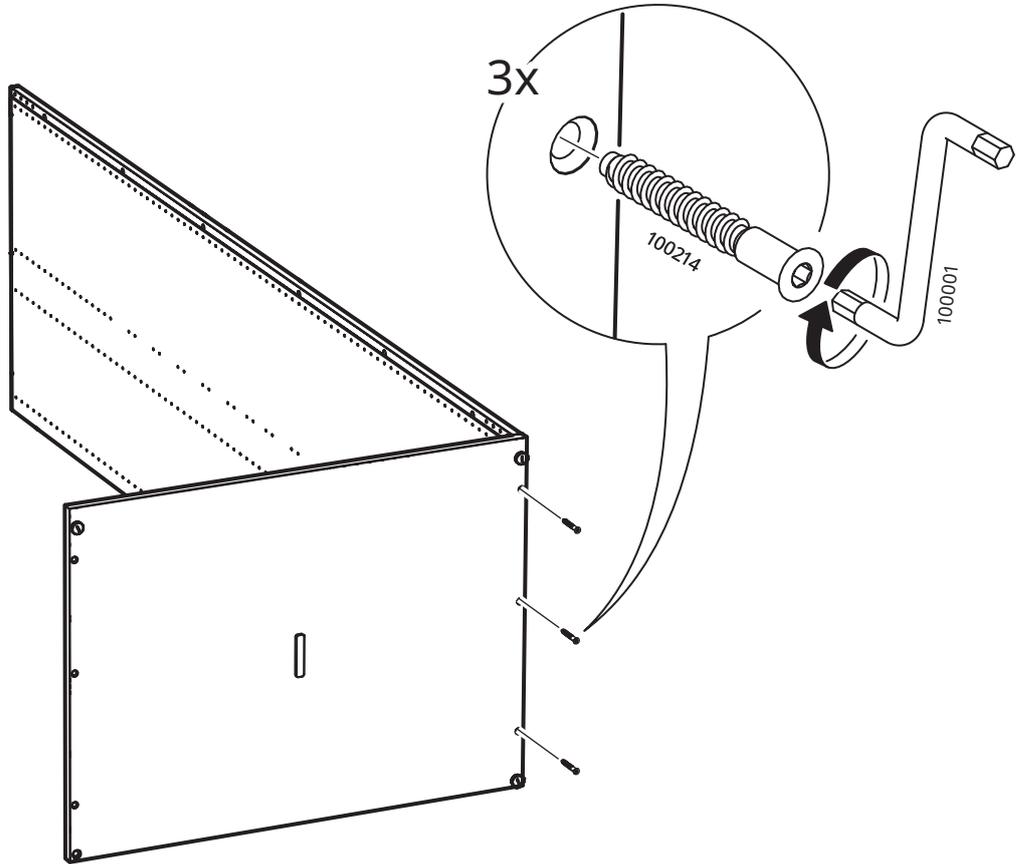


7

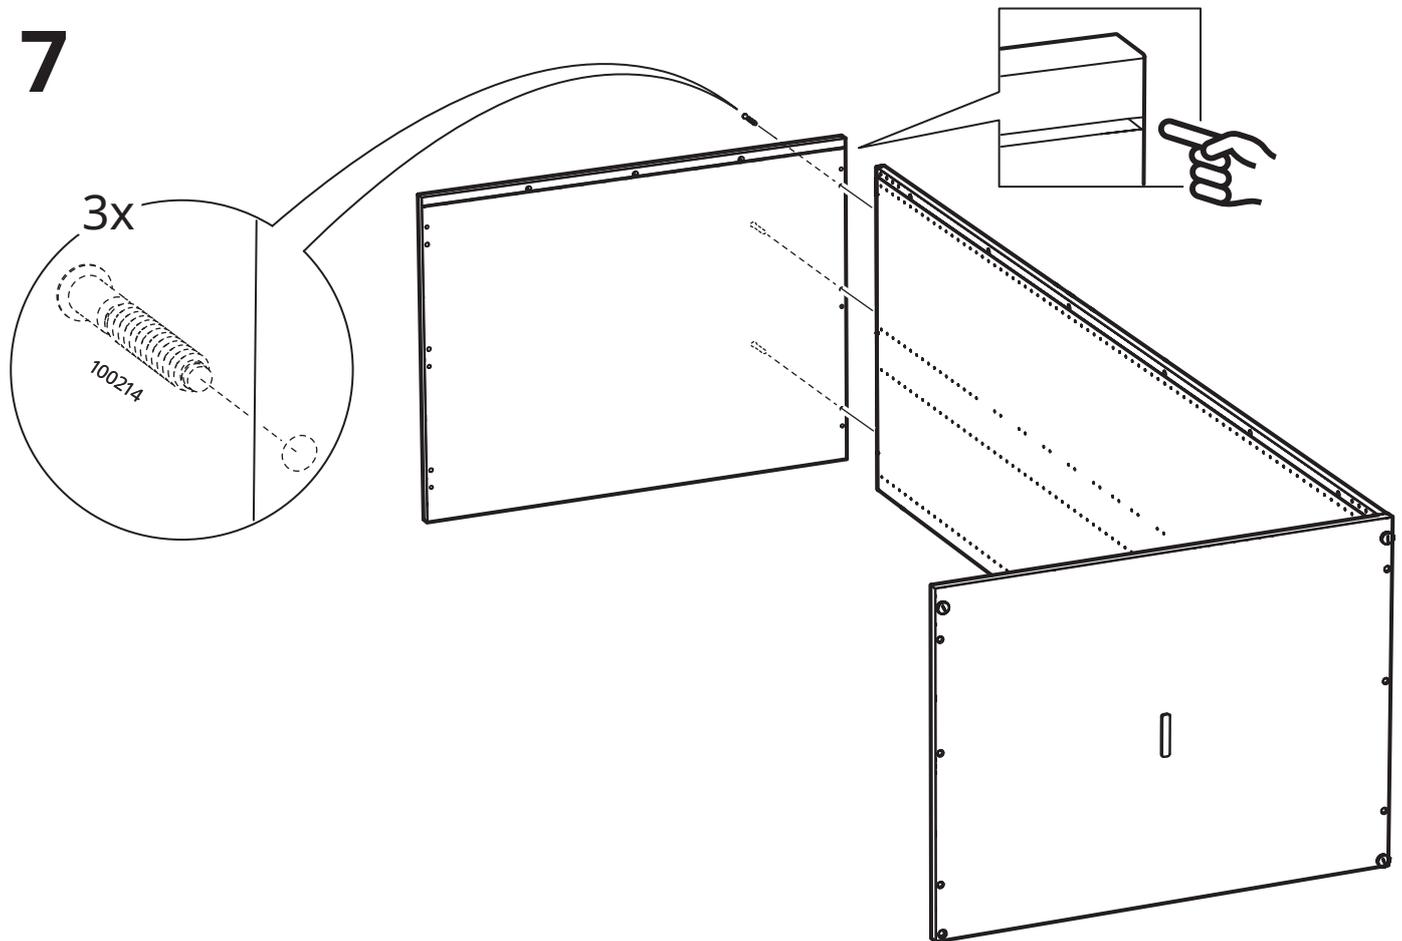


8

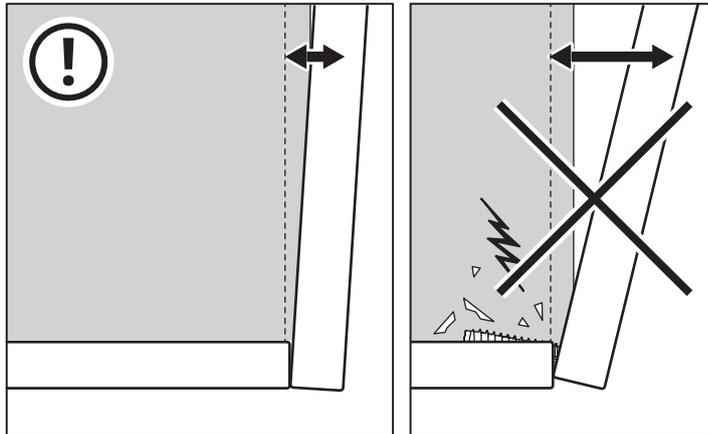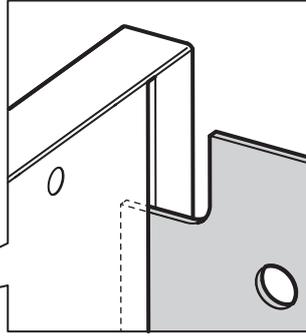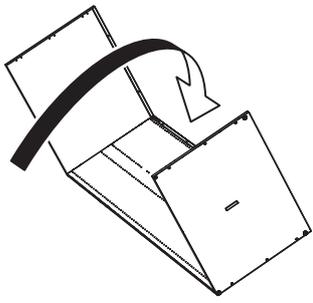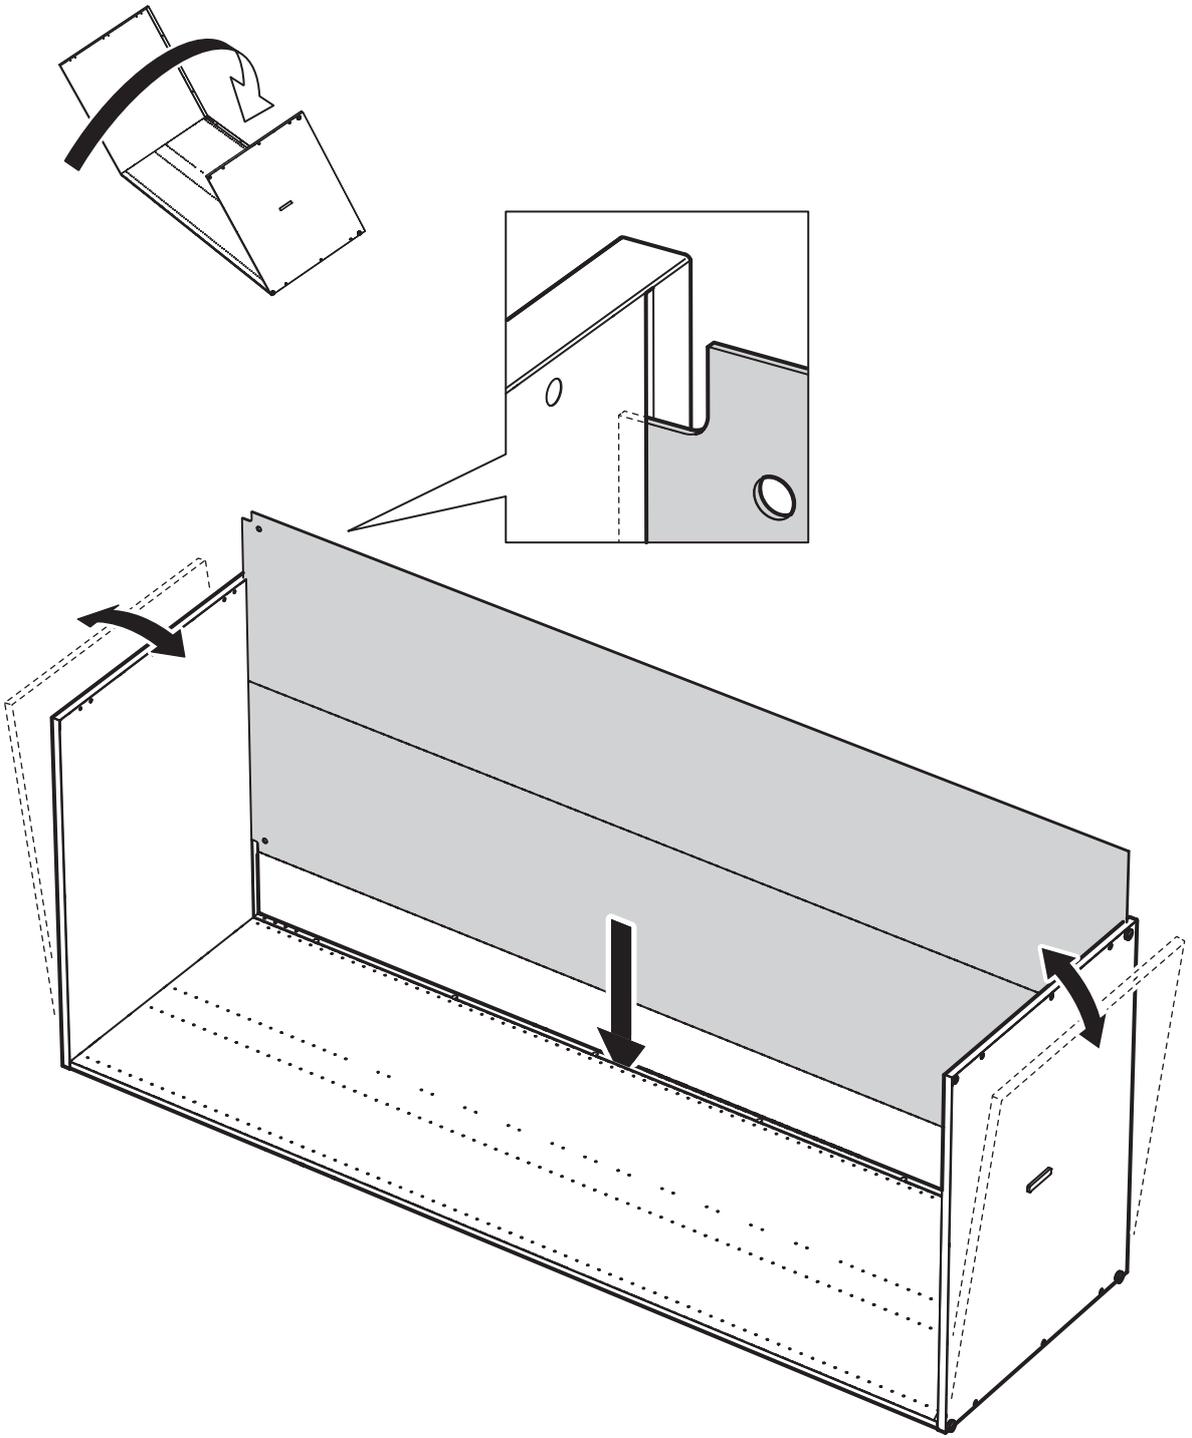


9

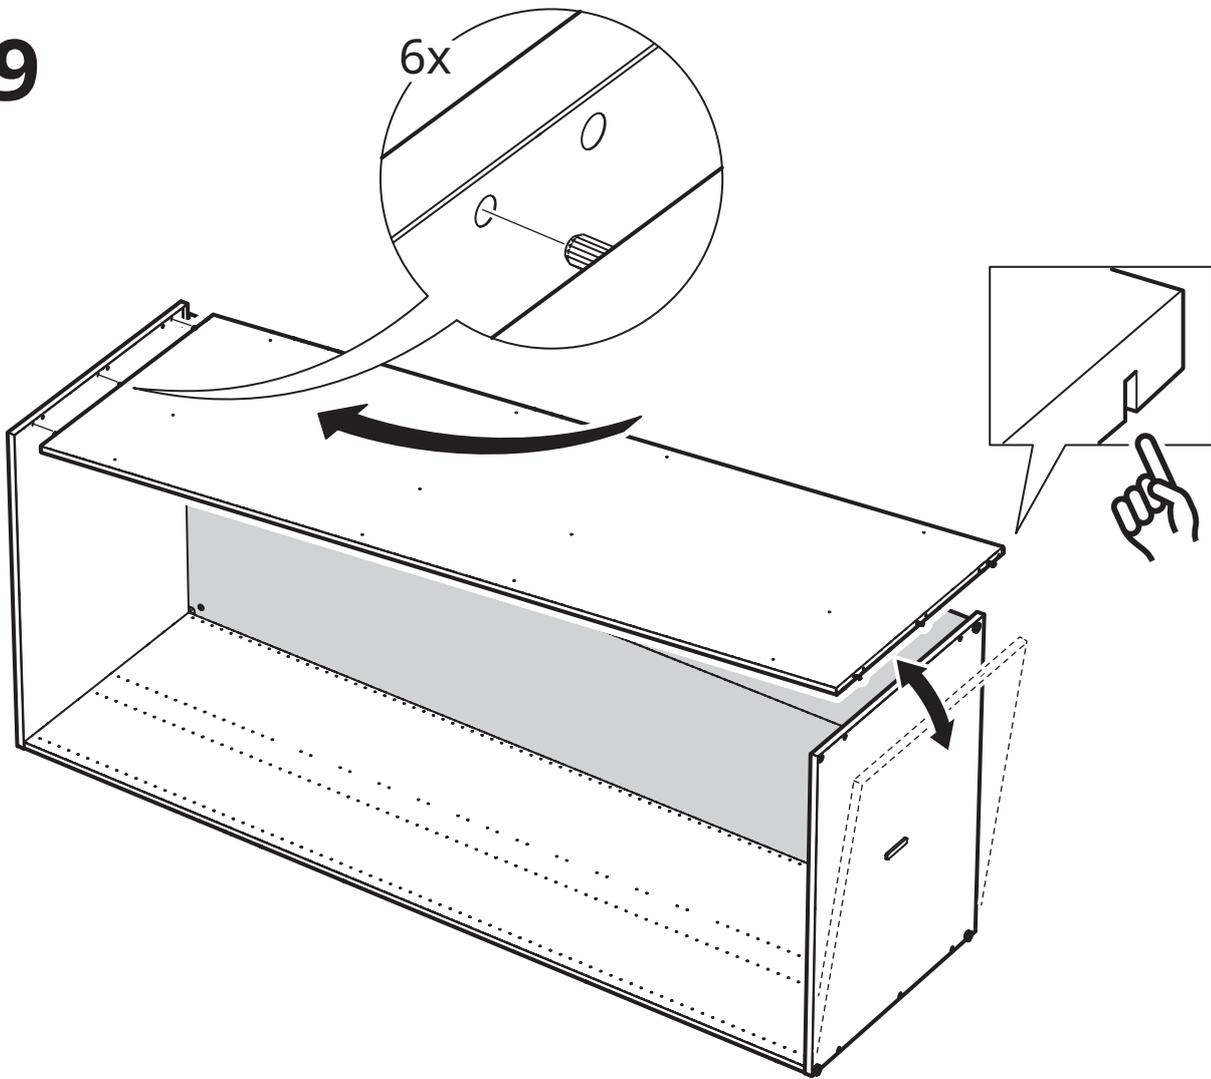


10


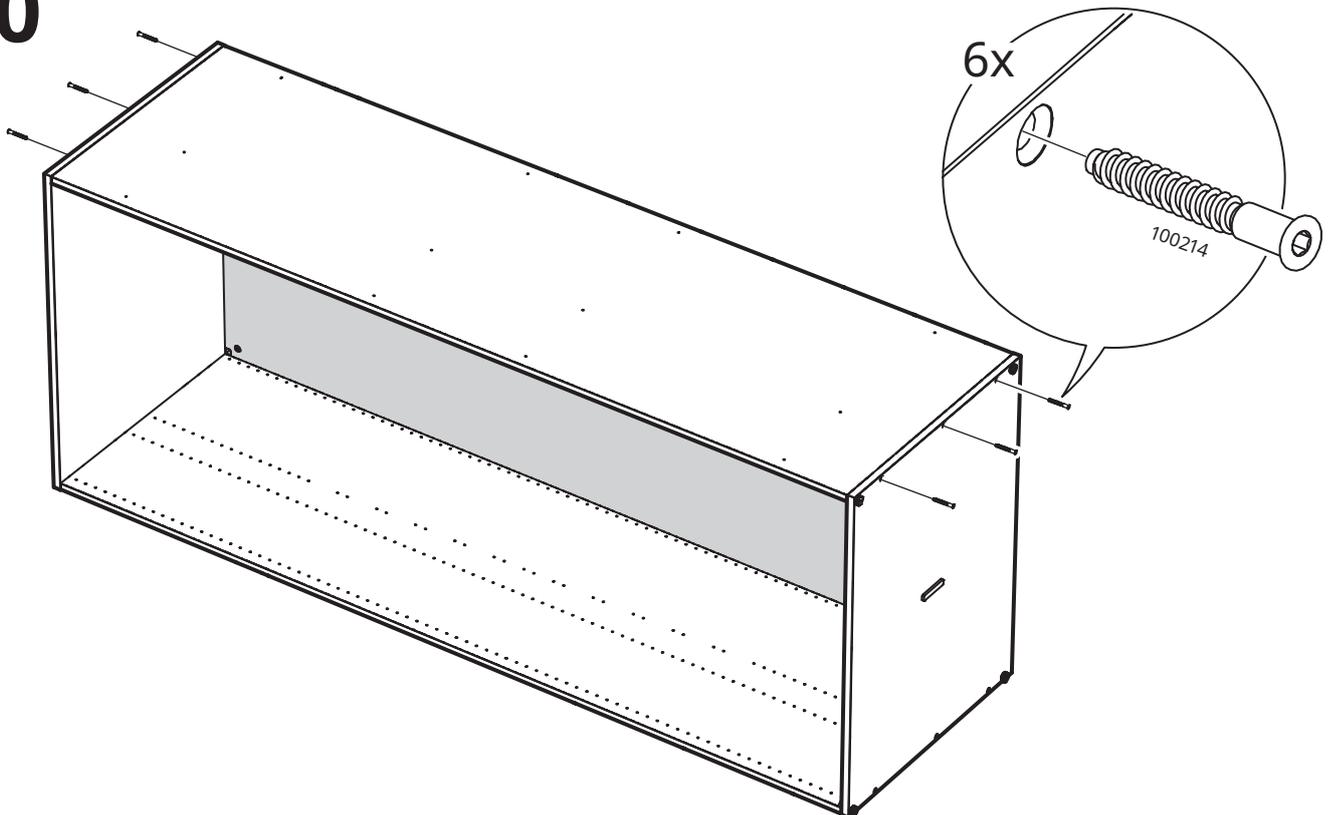


# 11

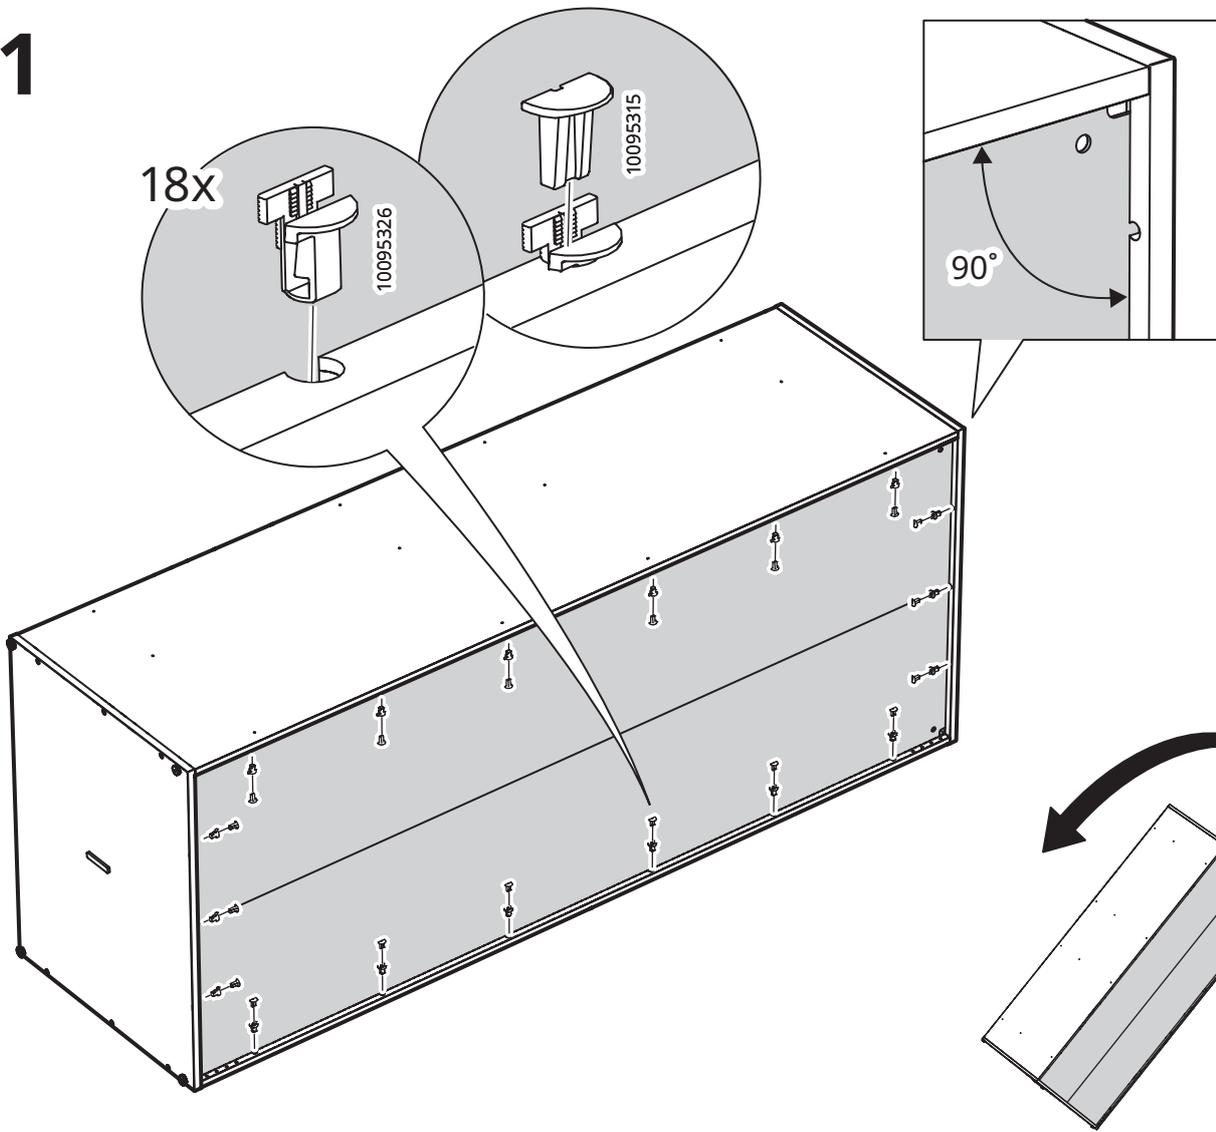


# 12

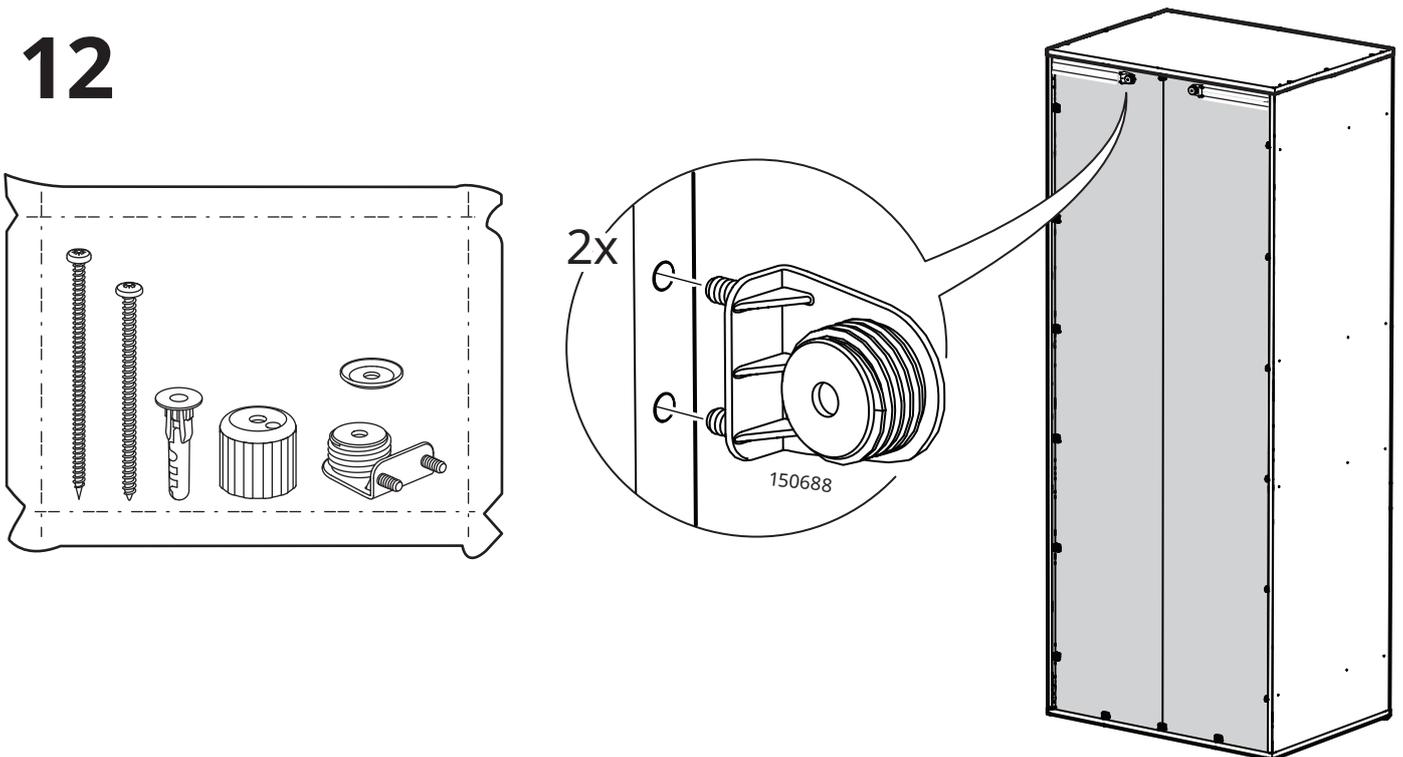


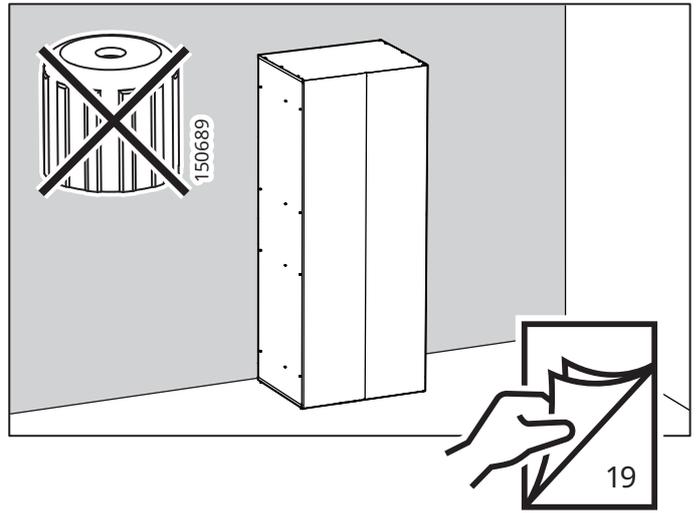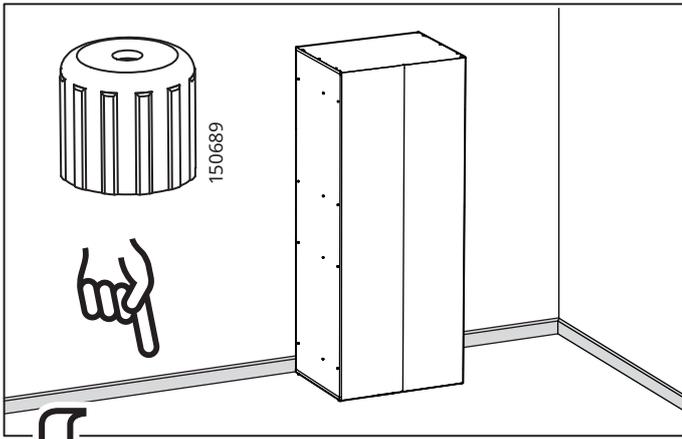


13

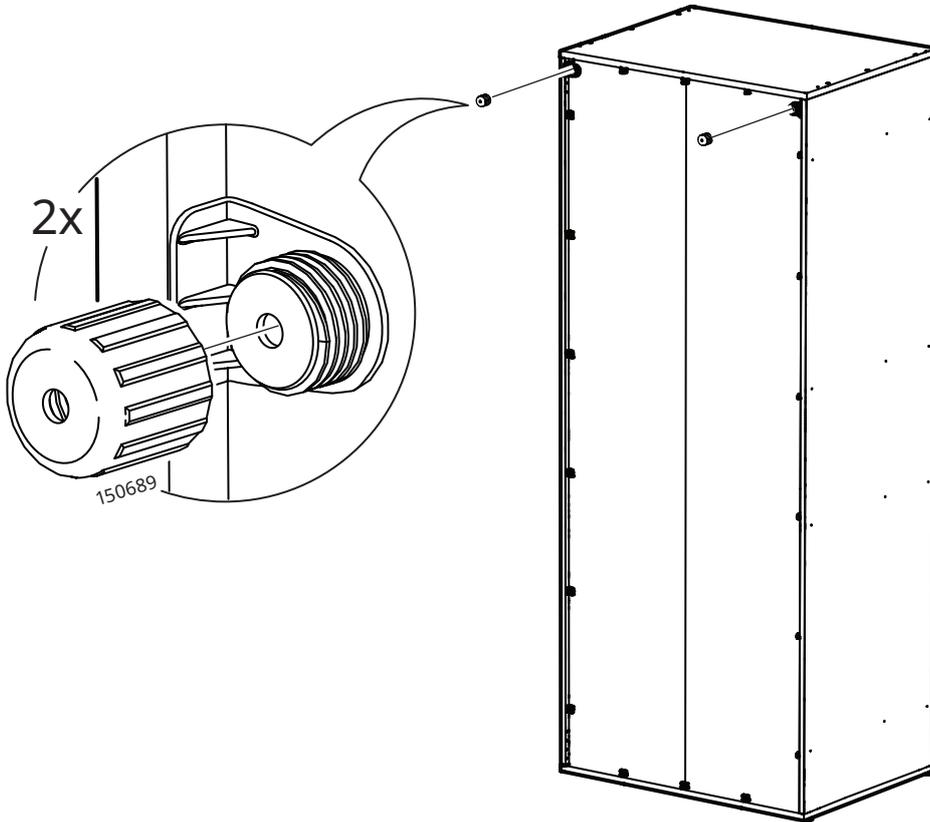


# 14

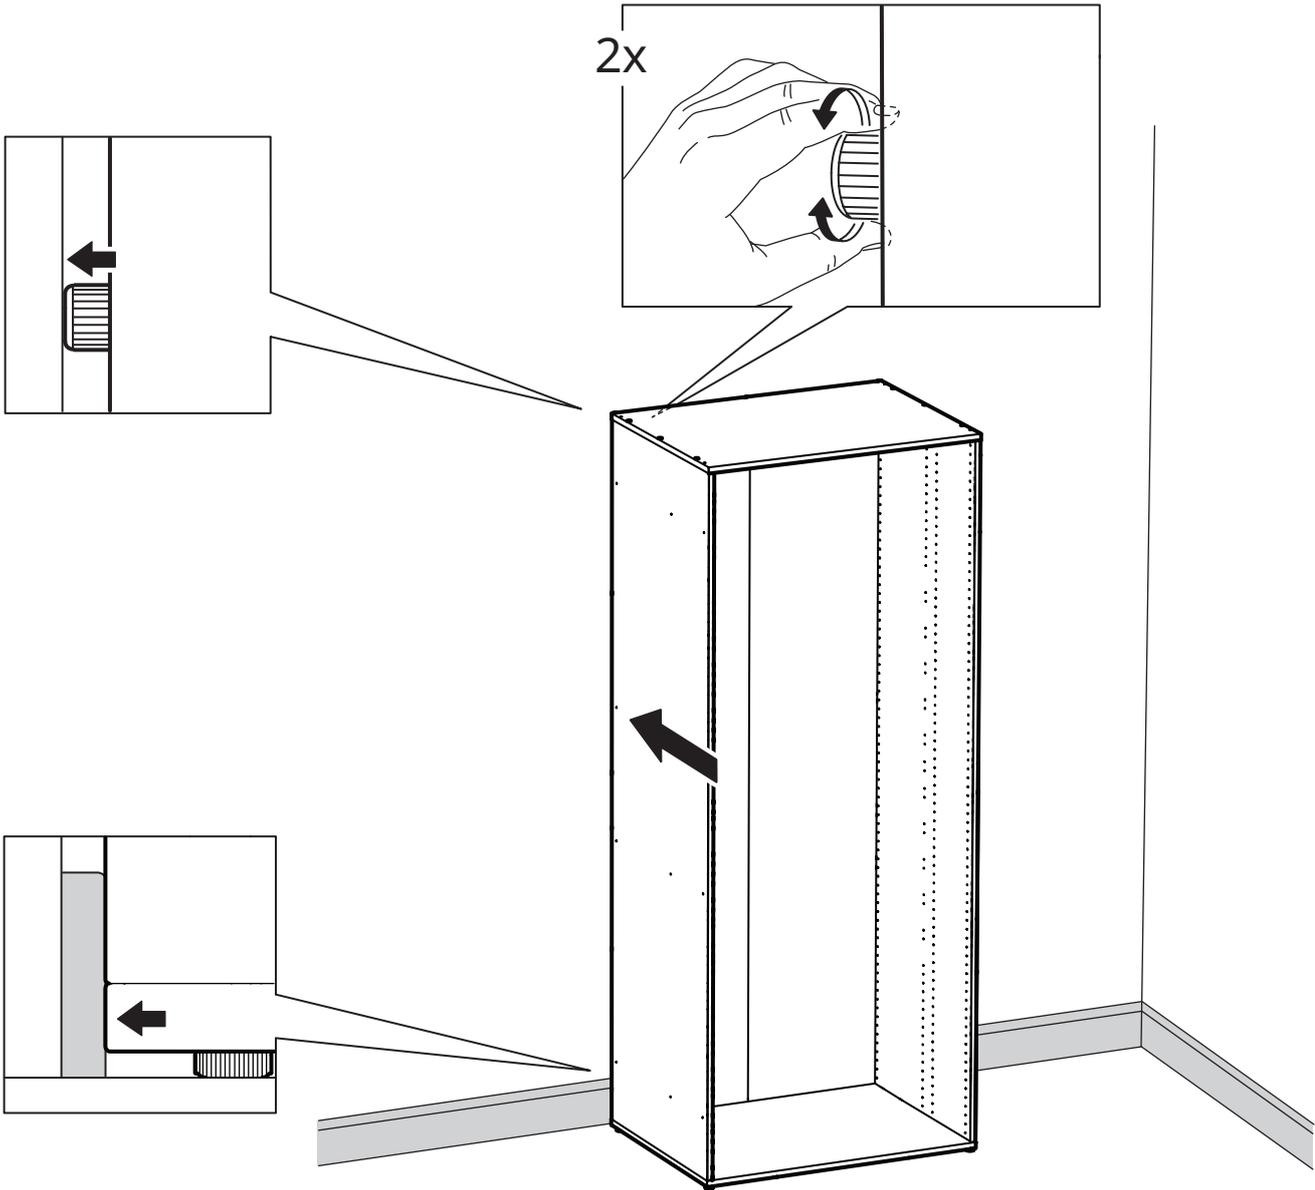


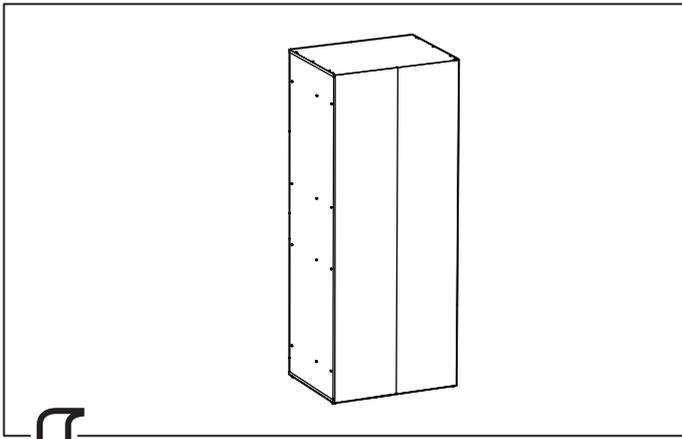


**15**

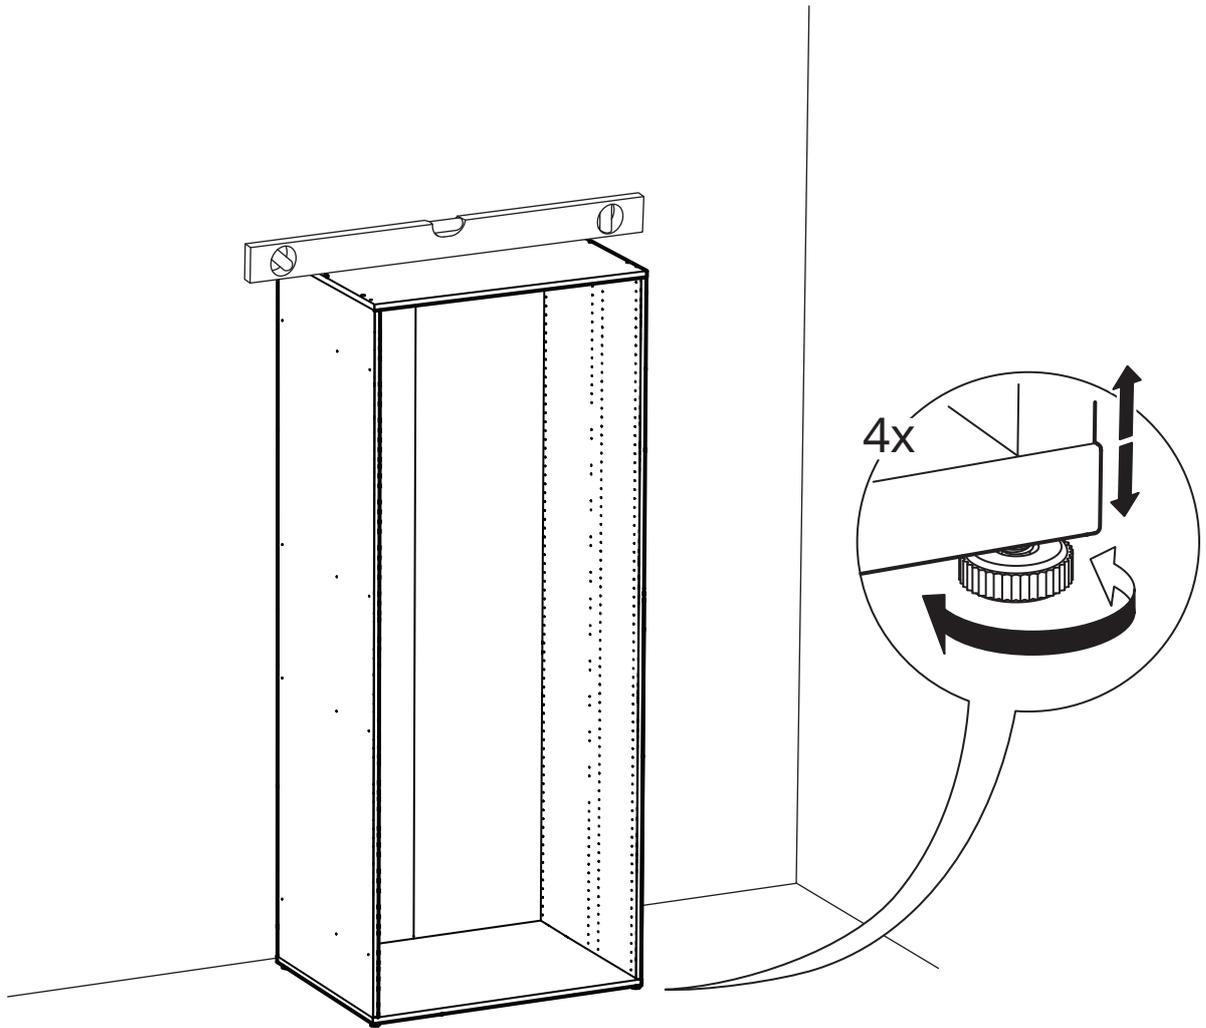

16

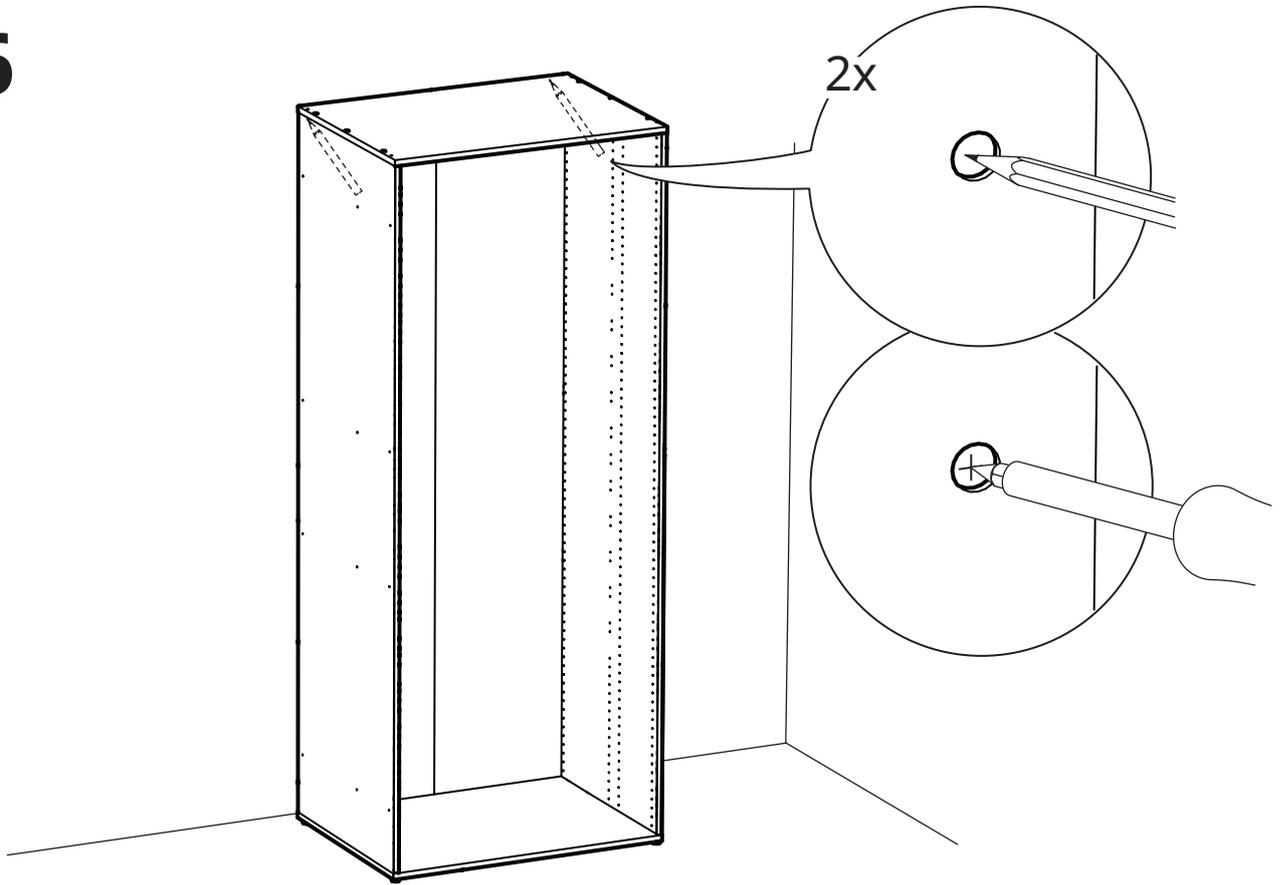

17

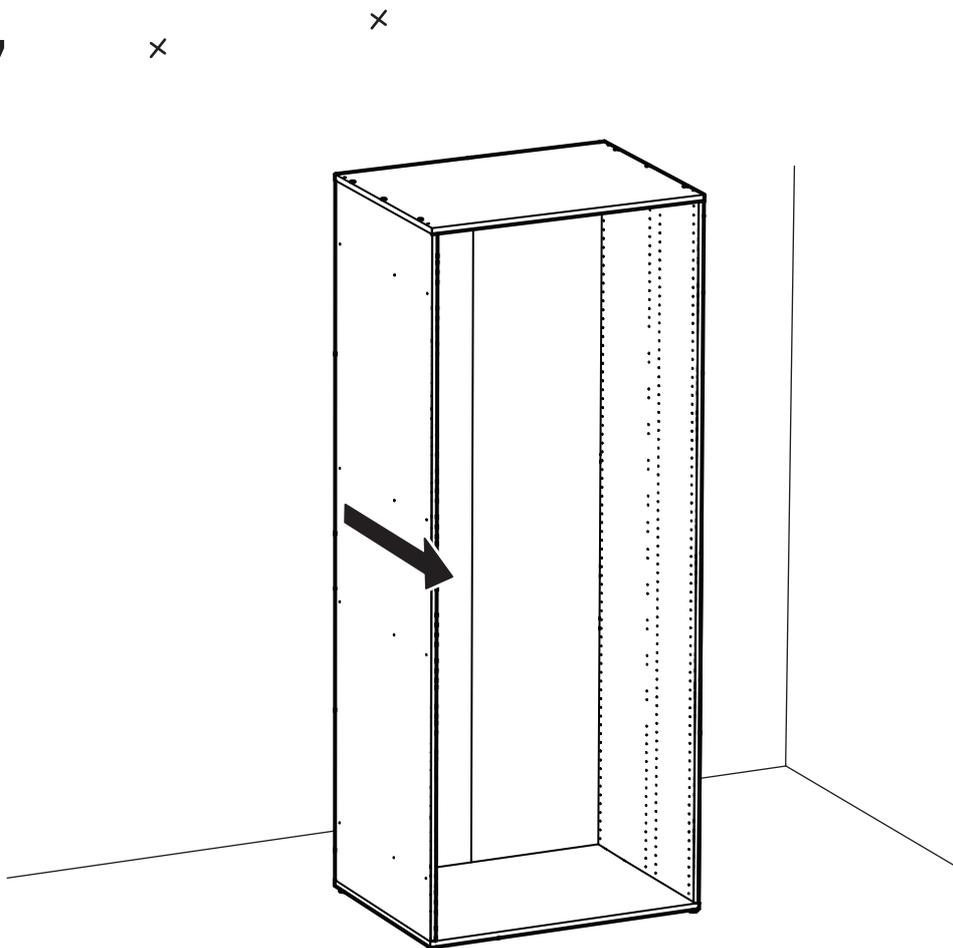




www.IKEA.com/secure-it



www.IKEA.cn/secure-it

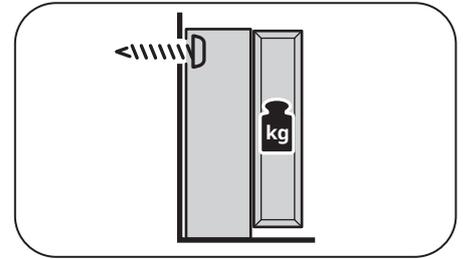

# 18

## English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

## עברית

הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.

**A**

$\varnothing$  8 mm (5/16")

**1**

70 mm (2 3/4")

**2**

23

**B**

$\varnothing$  8 mm (5/16")

**1**

$\approx$  30 mm ( $\approx$ 1 1/4")

**2**

24

**C**


$\varnothing$  3 mm (1/8")

**1**

$\approx$  30 mm ( $\approx$ 1 1/4")


26



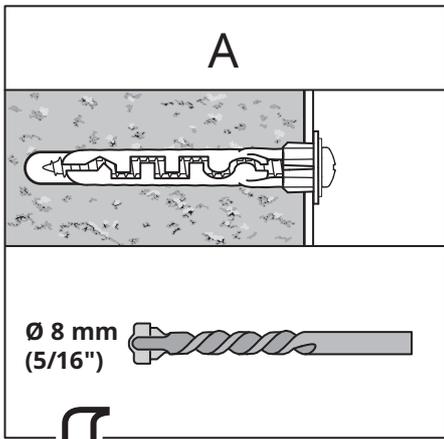

19


x


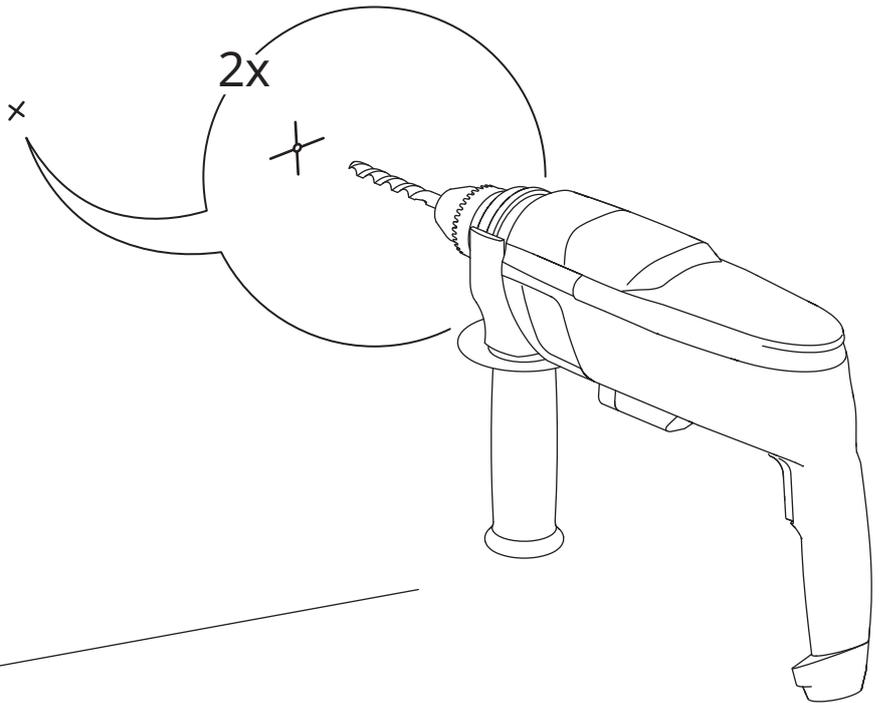


20




2x

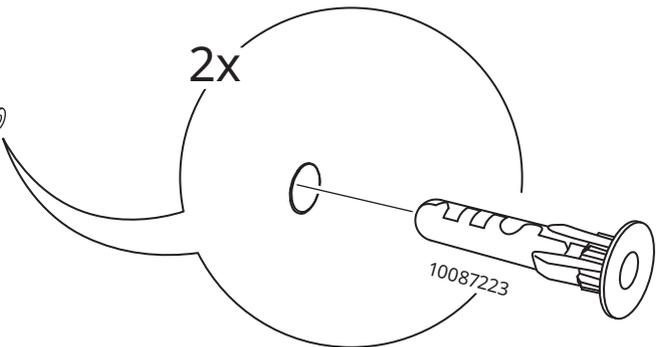


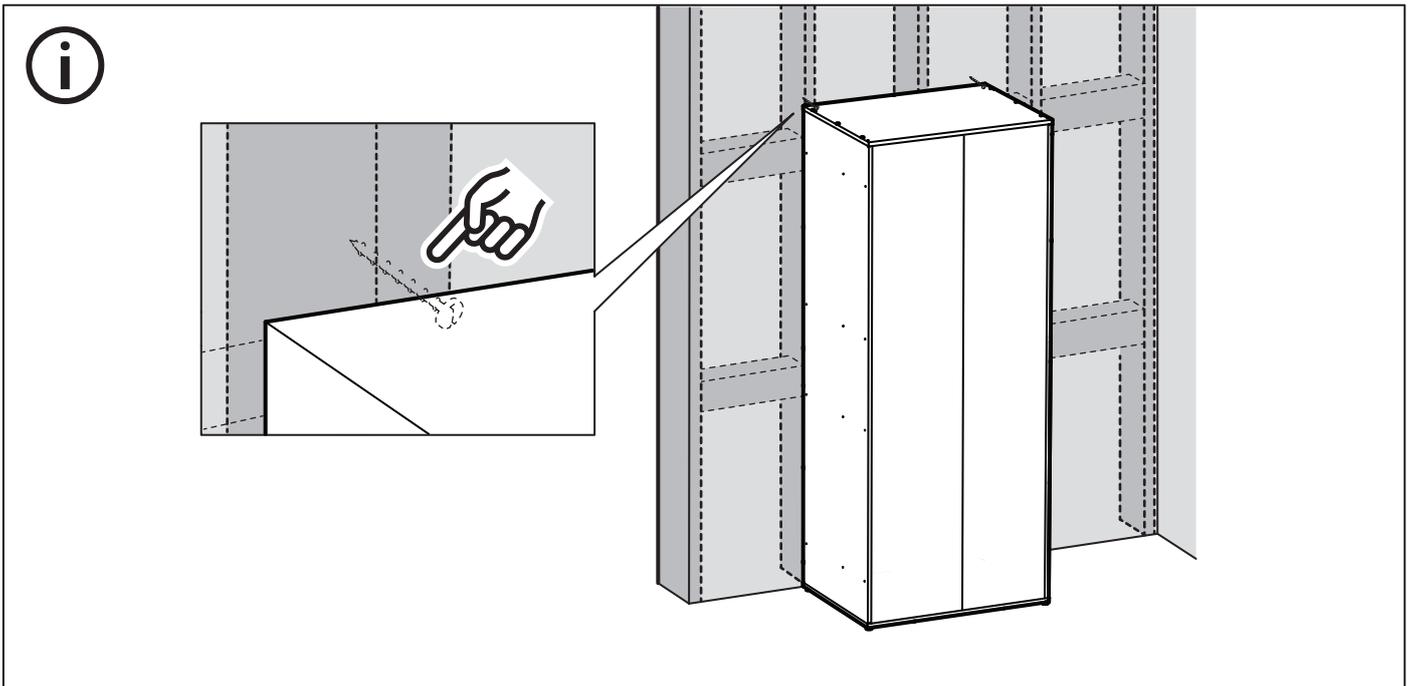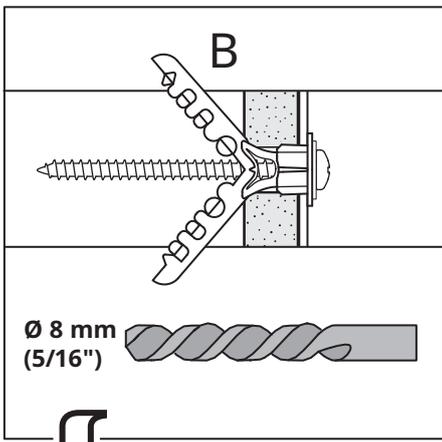


**18**

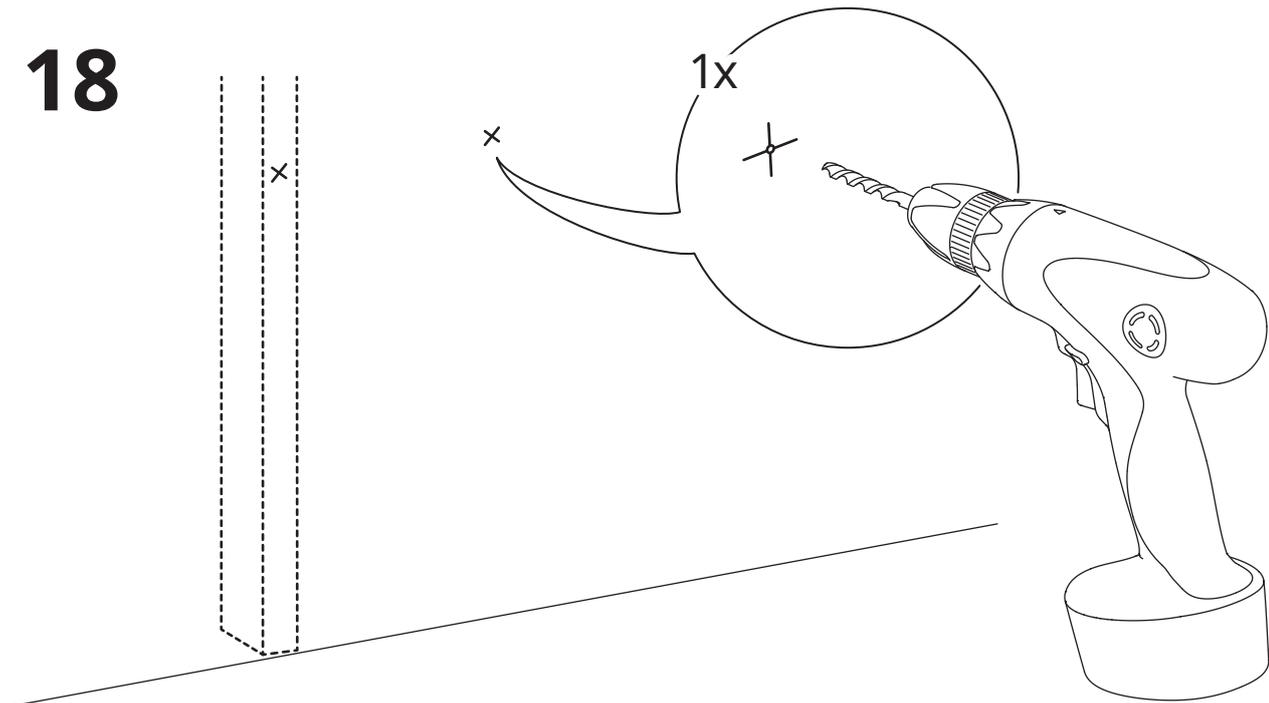




# 19

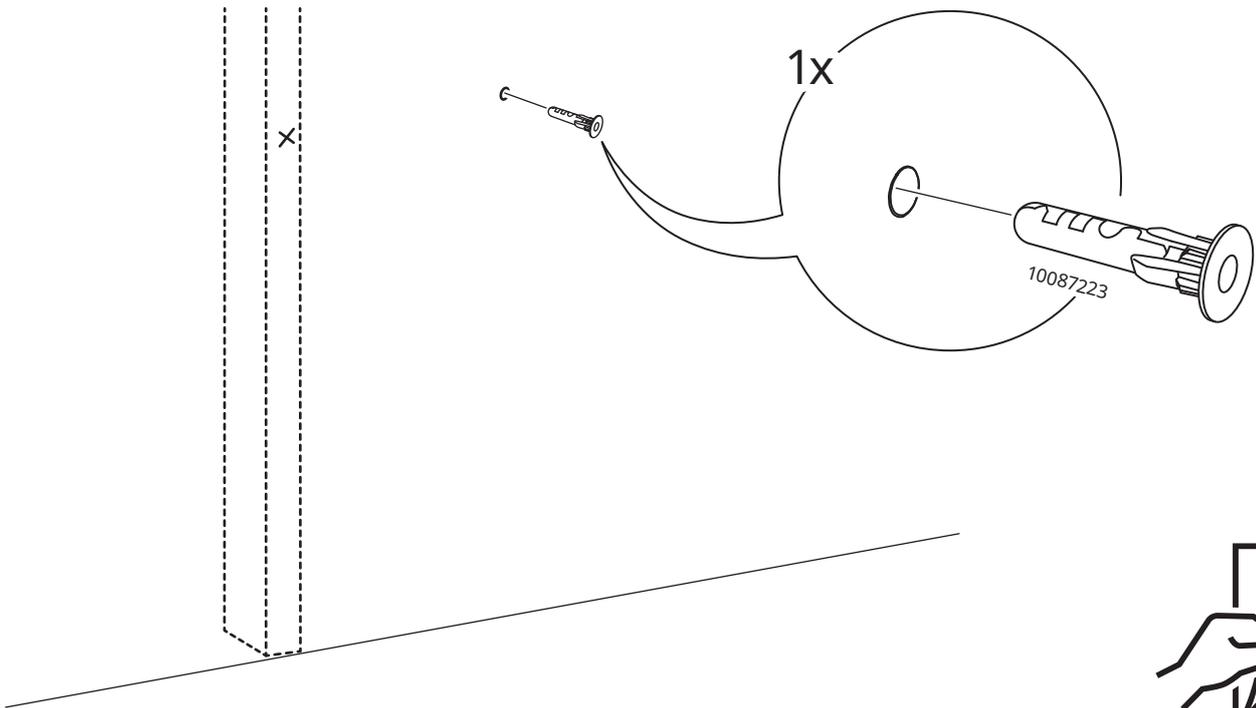





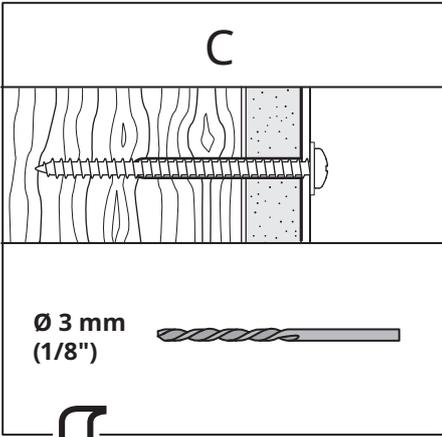



18

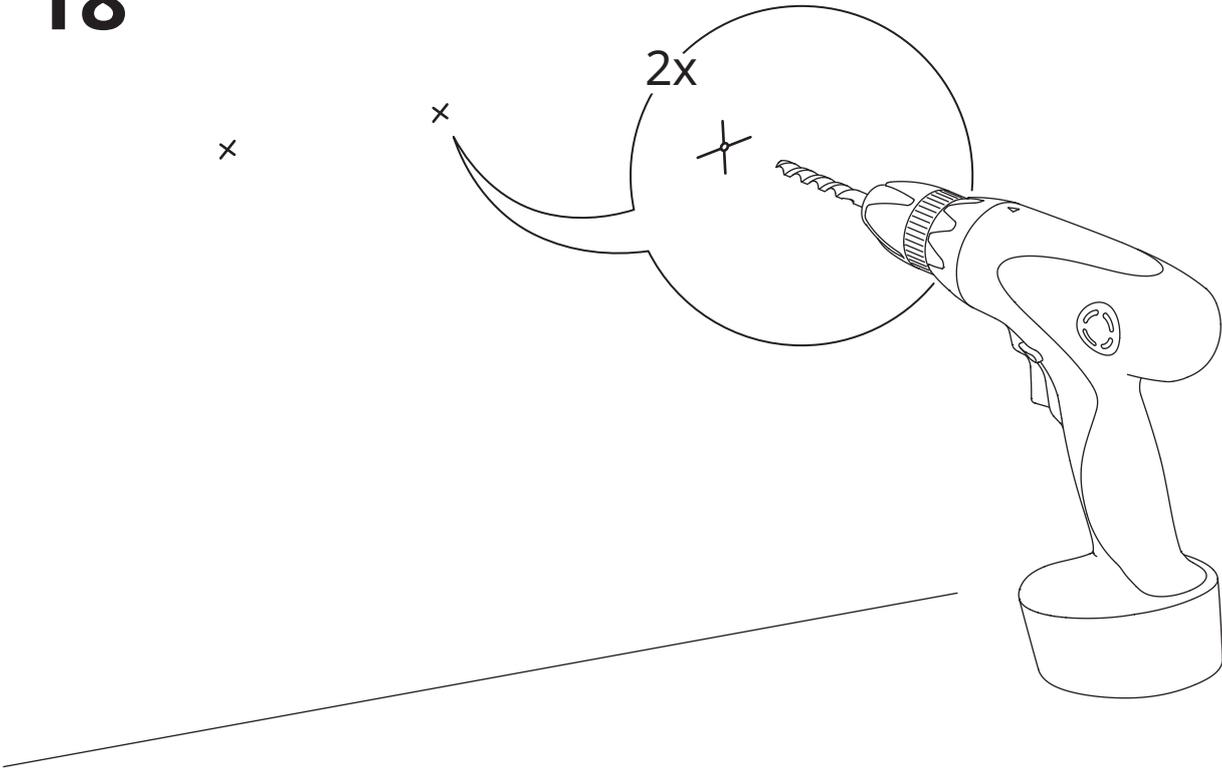




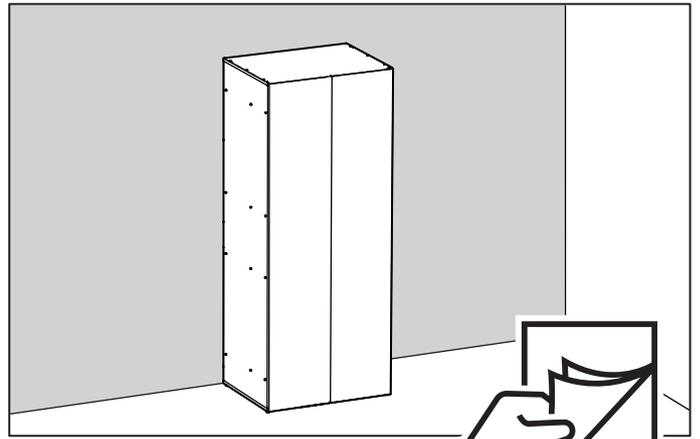
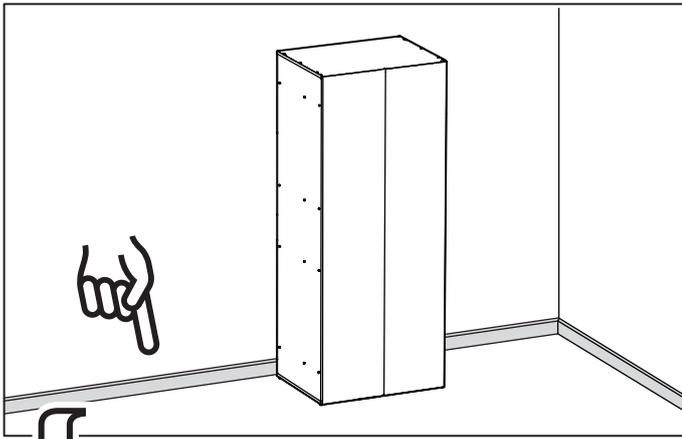



21

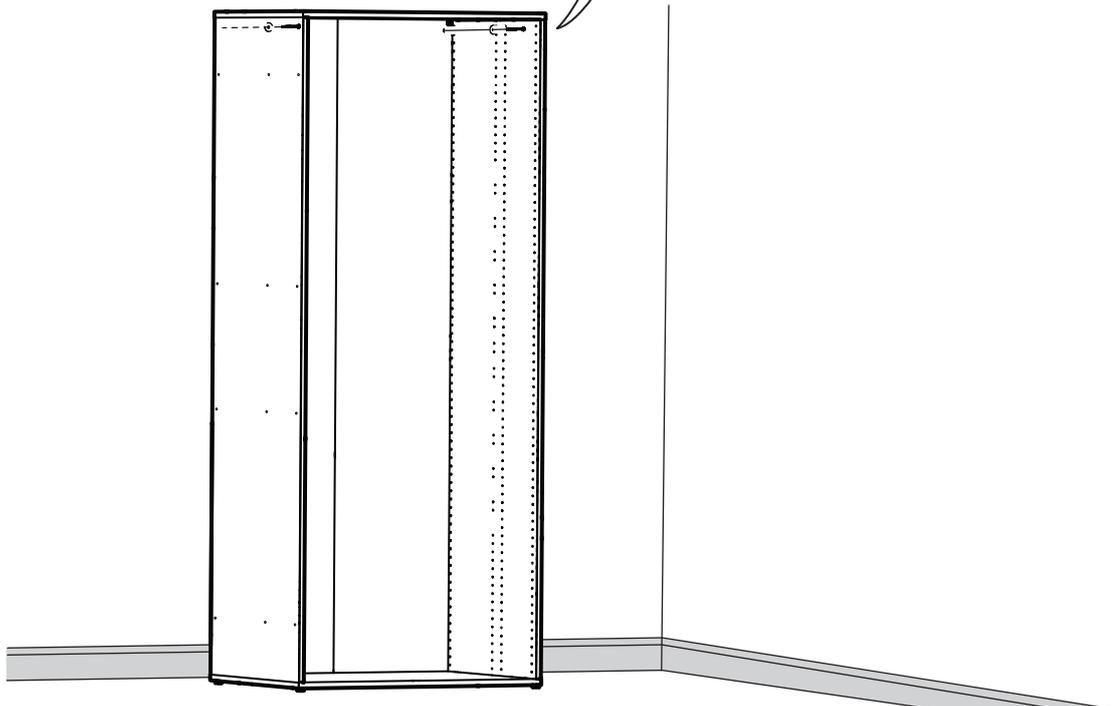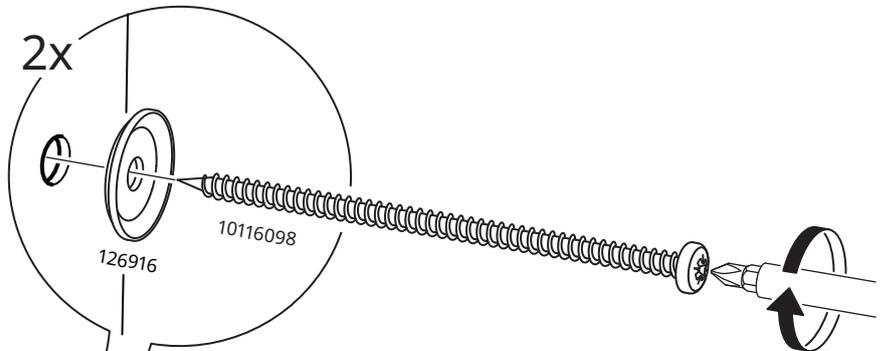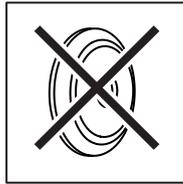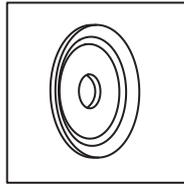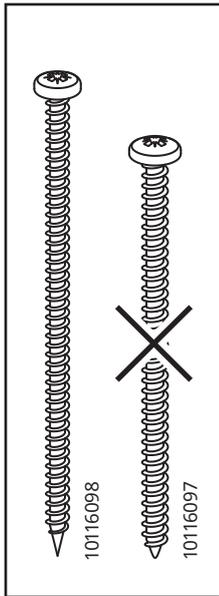

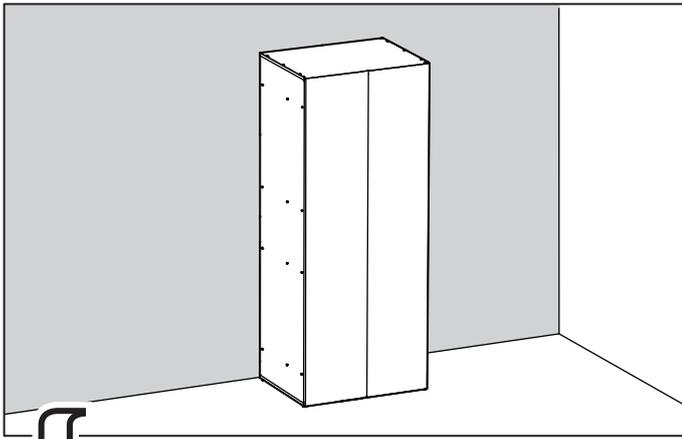




20

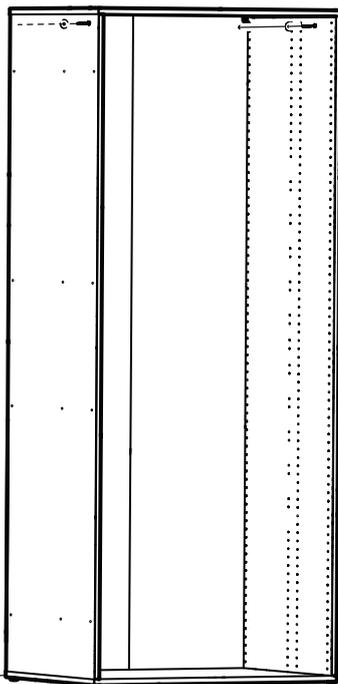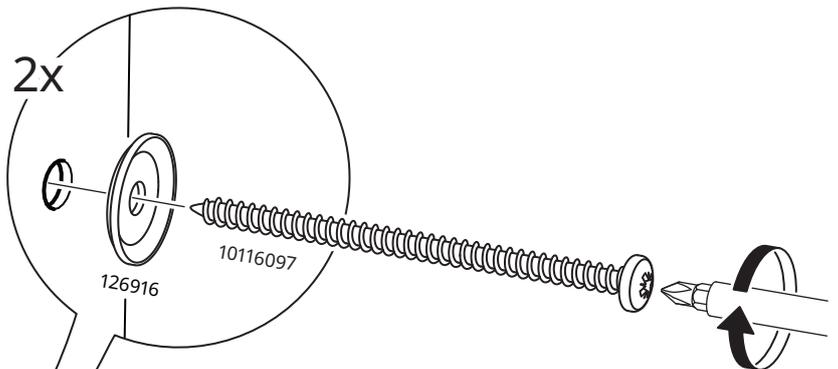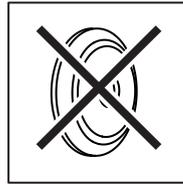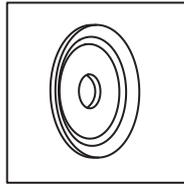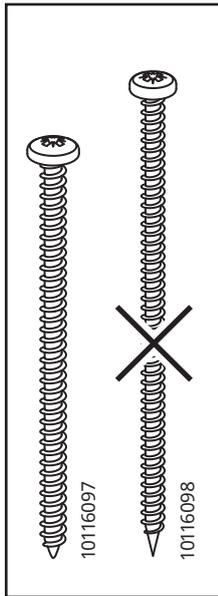

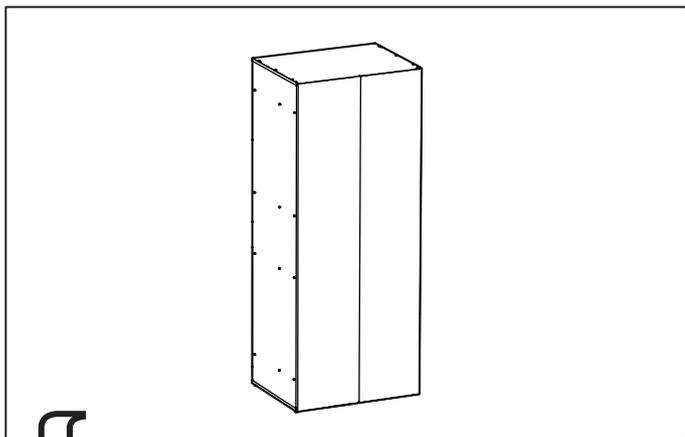


**22**

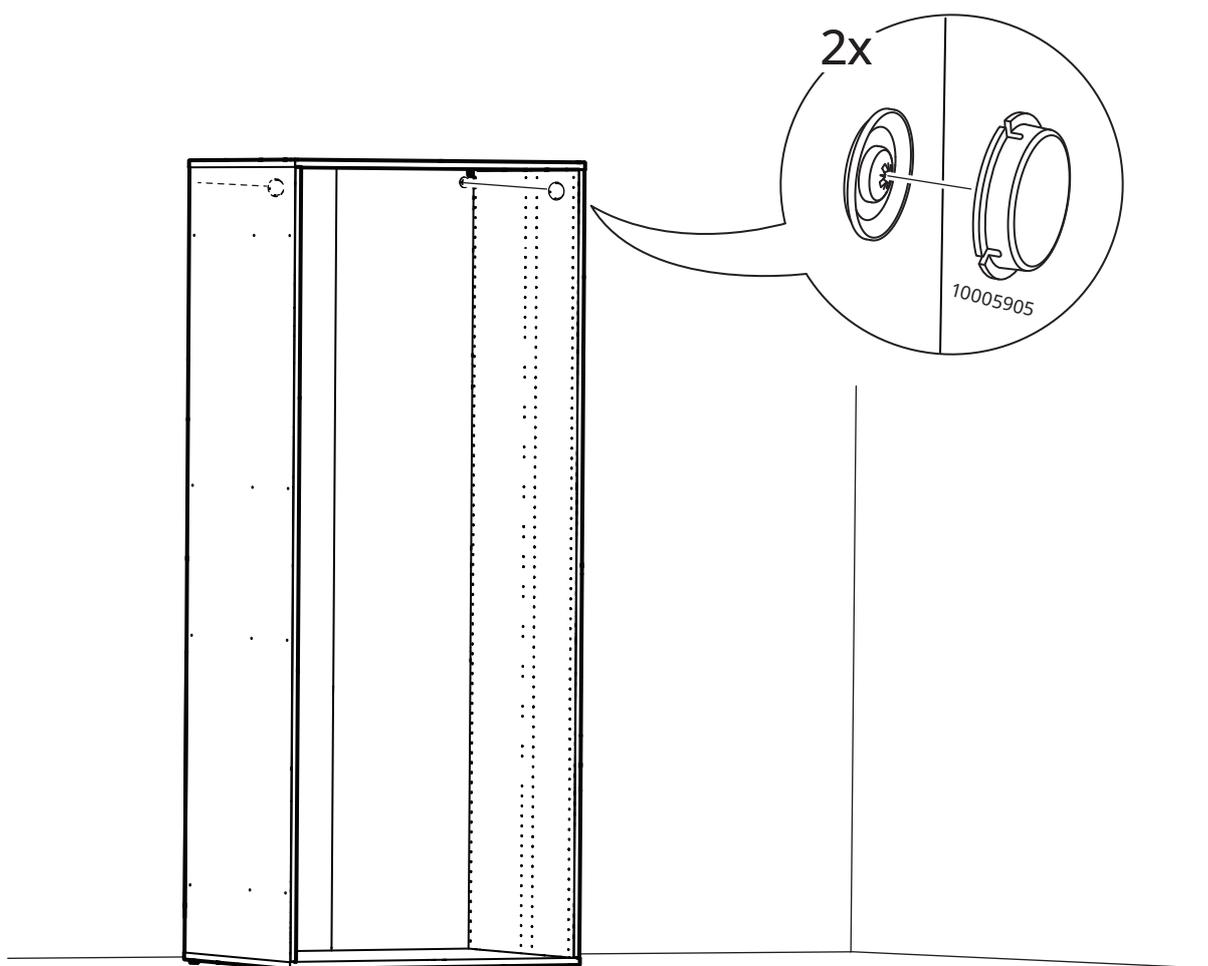



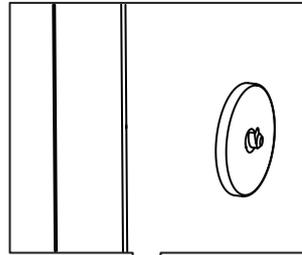
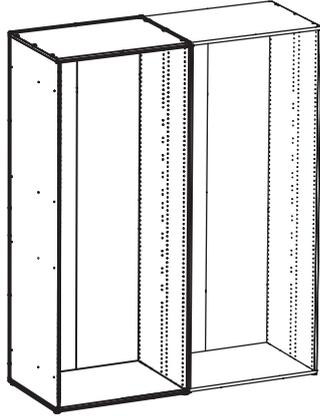


1

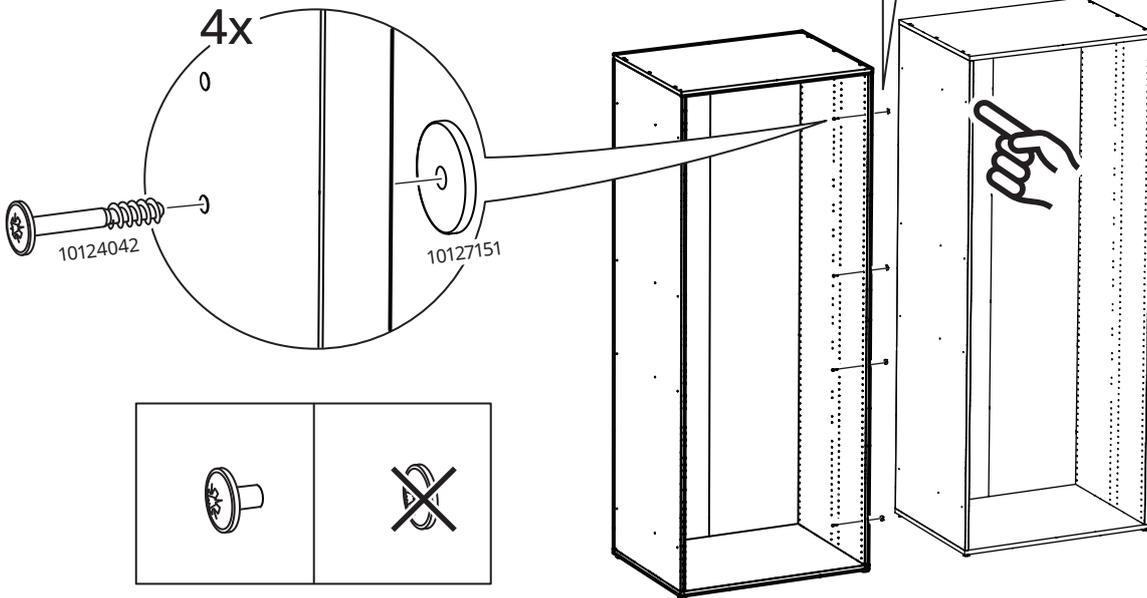


2

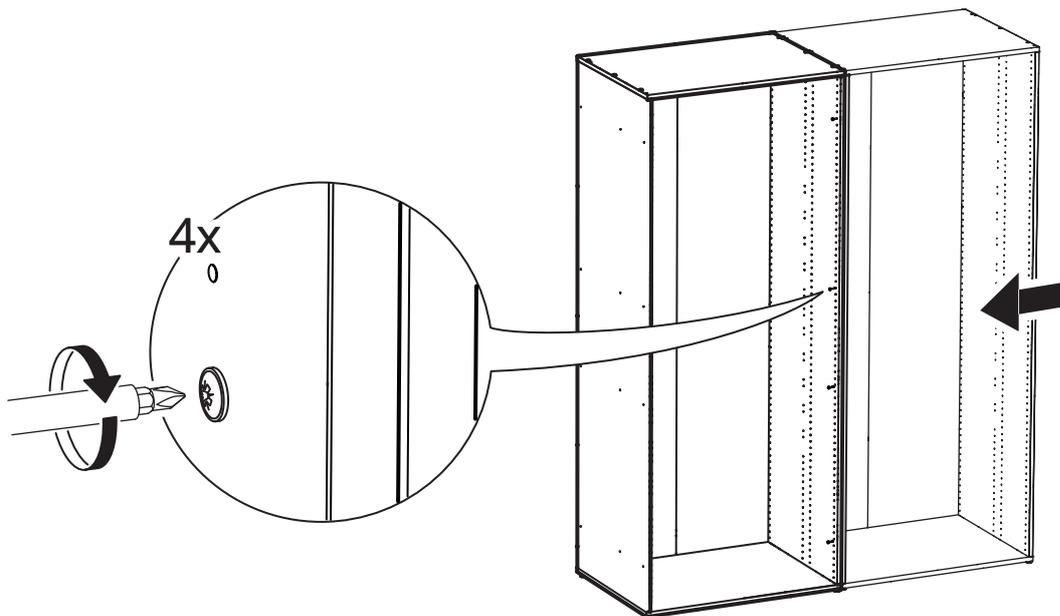


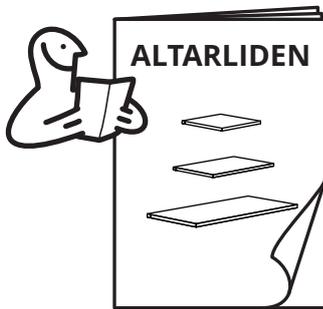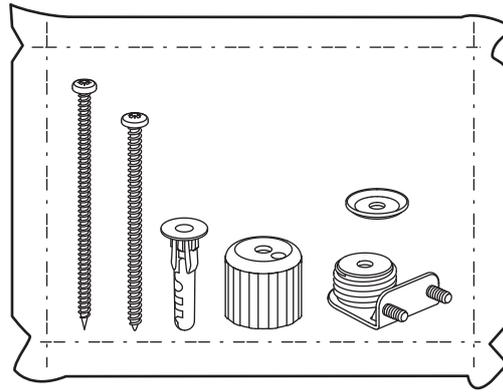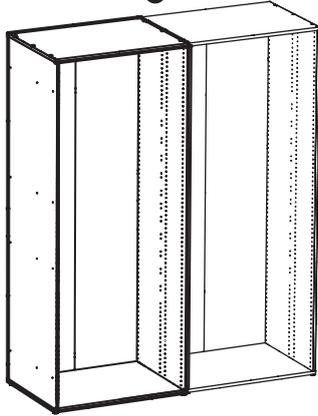



23






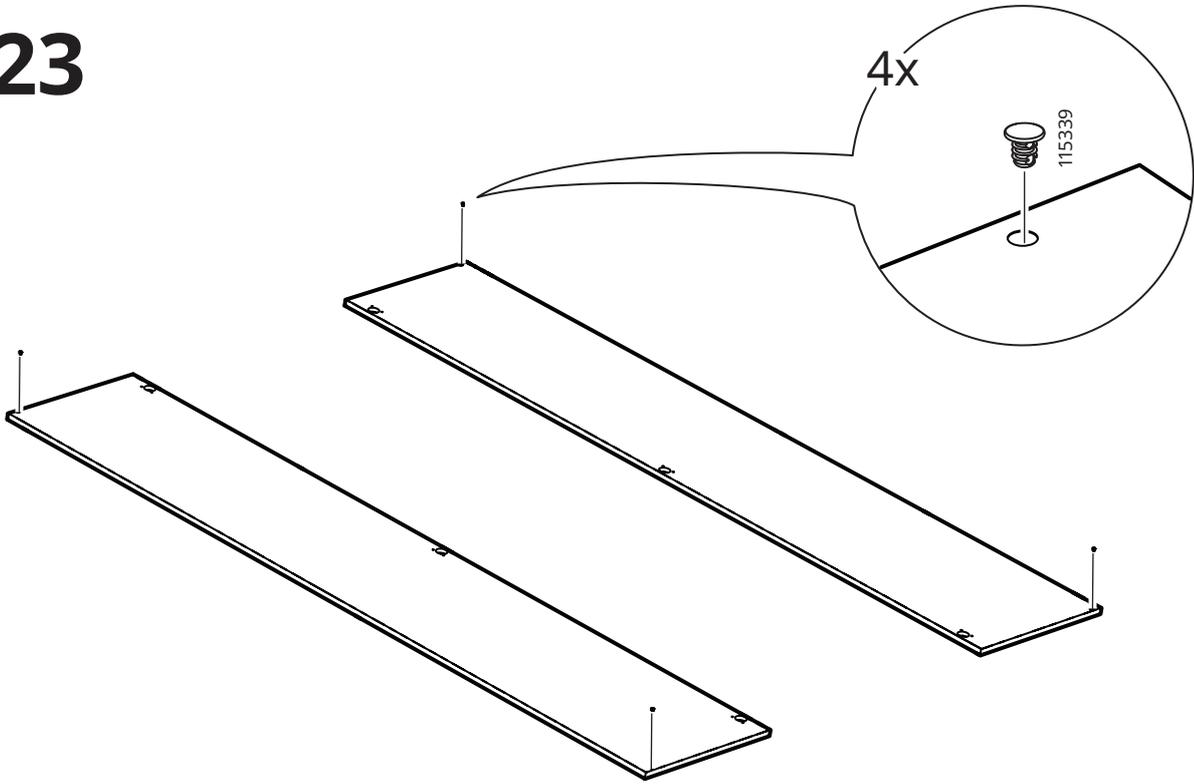


24

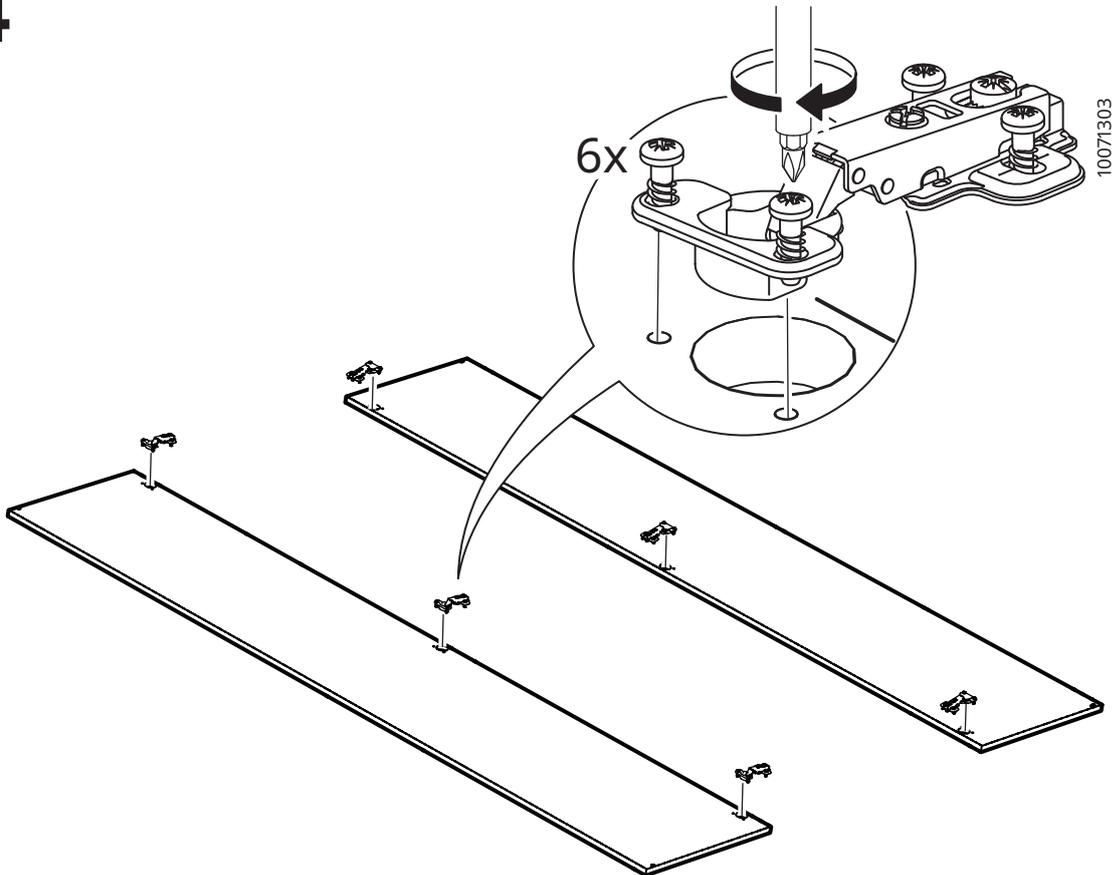


25

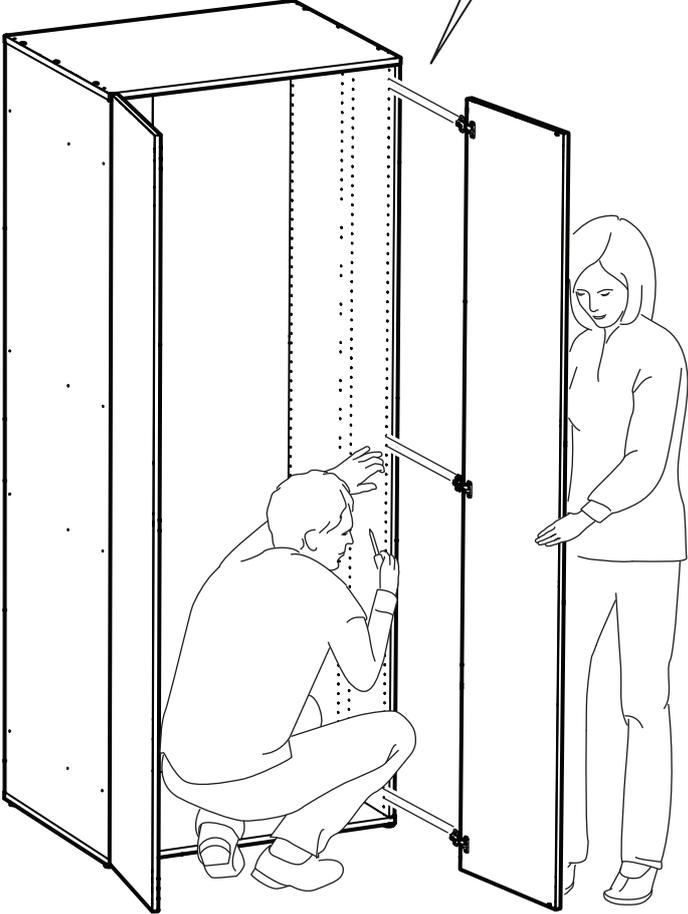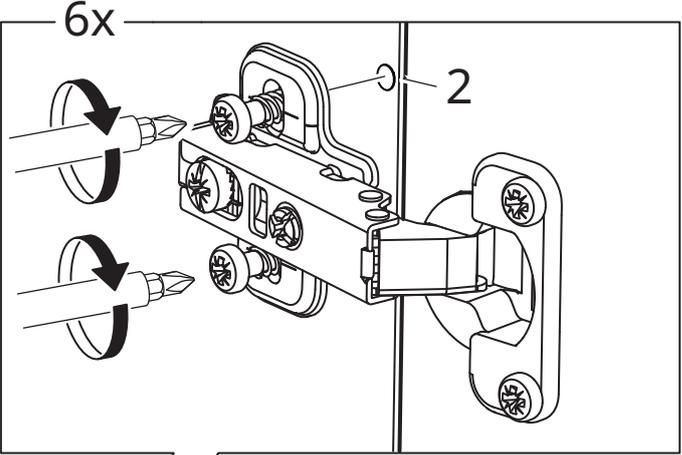

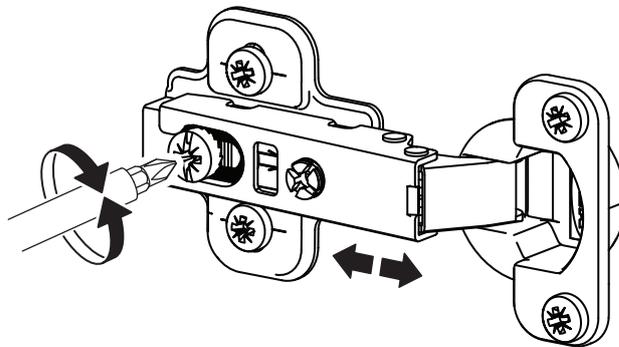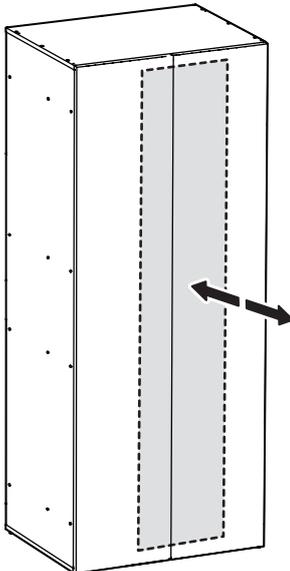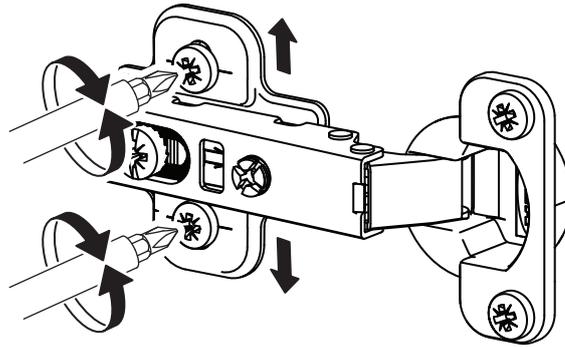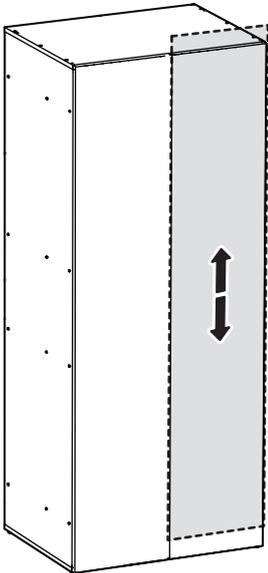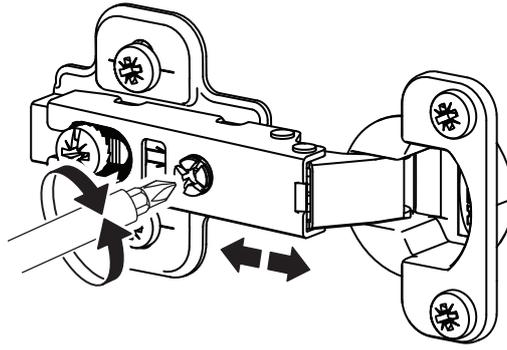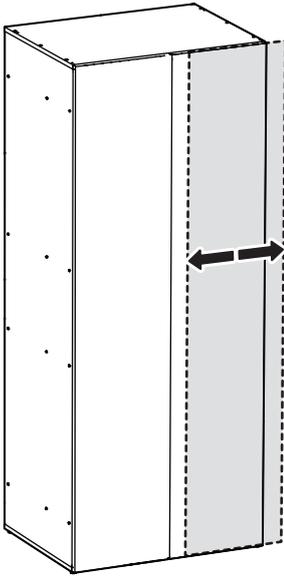

# 26

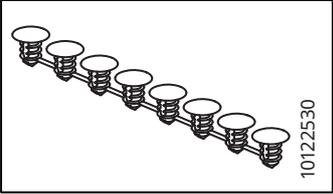

24x

