 


RAKKESTAD

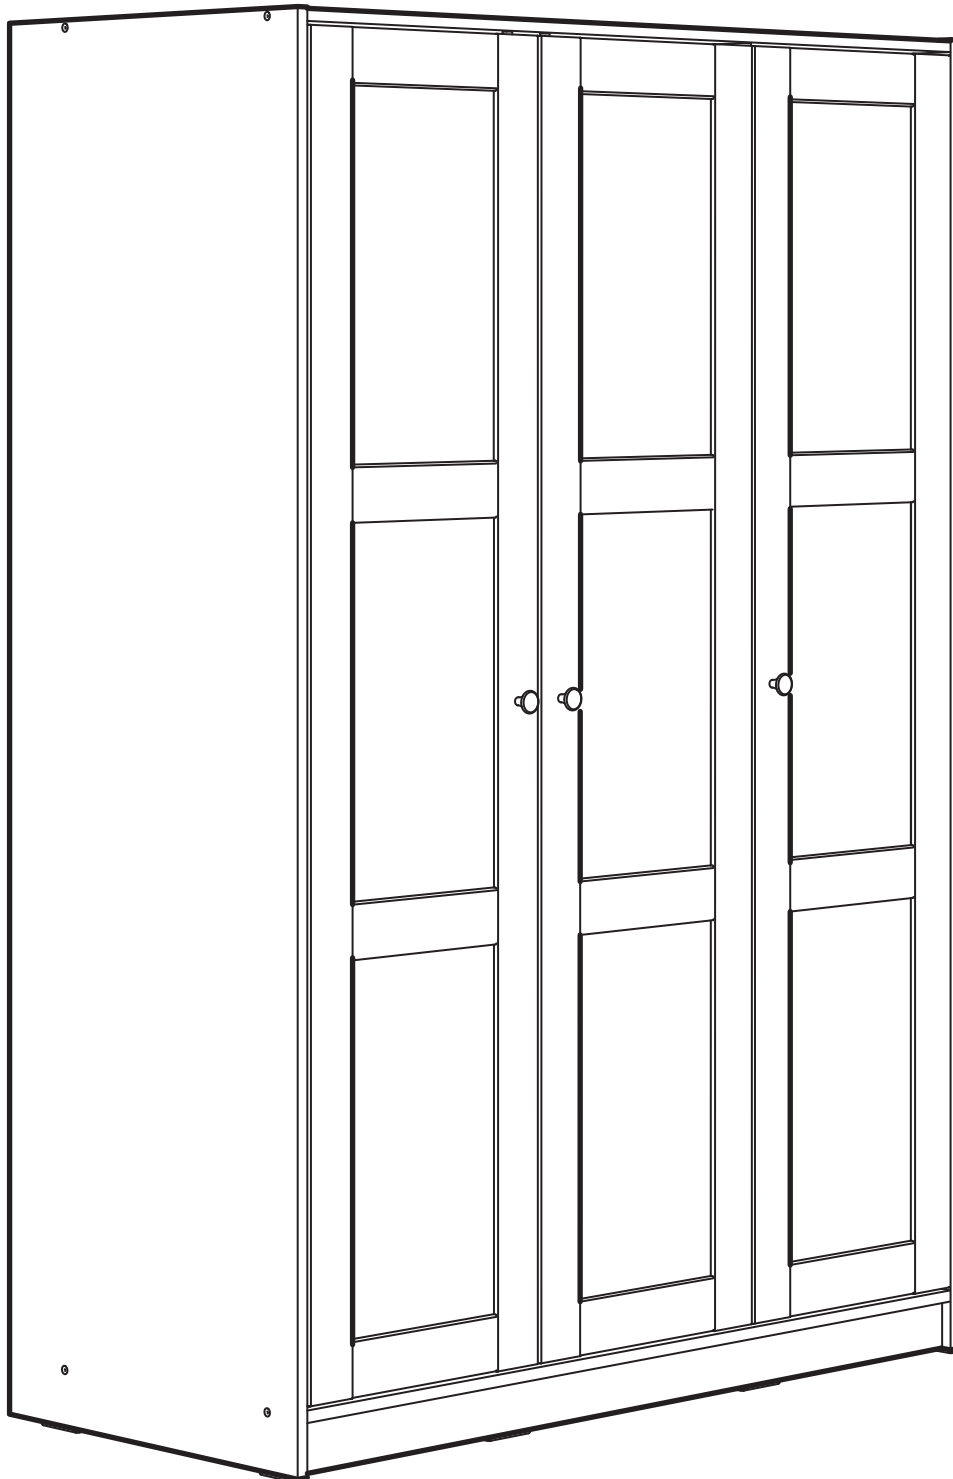

Design and Quality
IKEA of Sweden



English

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, or shelves.

עברית

אזהרה

נפילת הרהיט עלולה לגרום לפגיעה גופנית חמורה או קטלנית.

יש לקבע את הרהיט לקיר באמצעות אבזרי הקיבוע המצורפים.

על-מנת למזער את סכנת הפגיעה הגופנית או המוות מנפילת רהיטים:

מקמו את הפריטים הכבדים ביותר במגירה התחתונה.

 
 
 
הימנעו מלהניח טלוויזיות או פריטים כבדים אחרים על מוצר זה.

 
 
 
 
 
 
 
אין לאפשר לילדים לטפס על המגירות, הדלתות או המדפים.








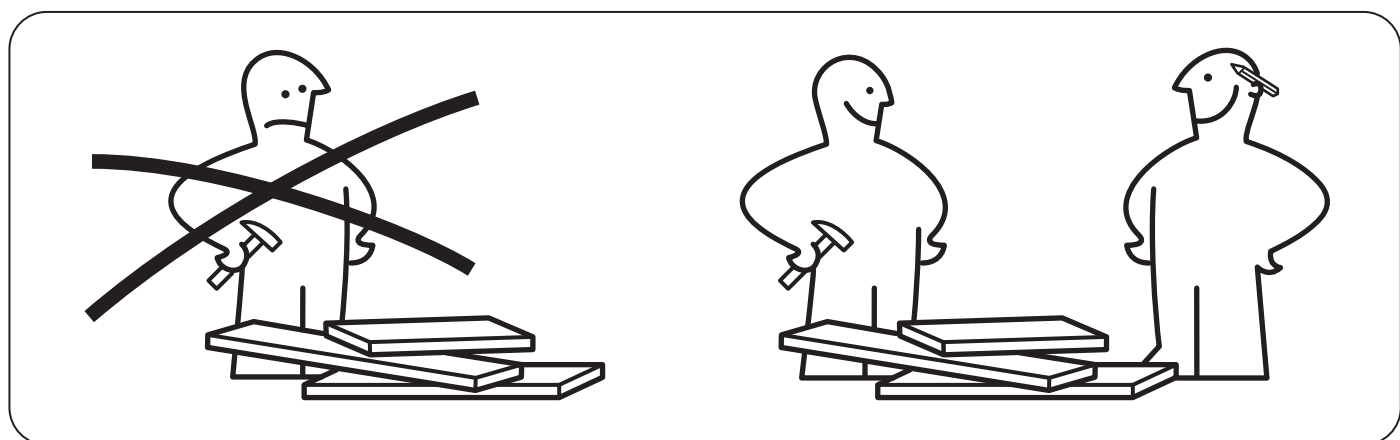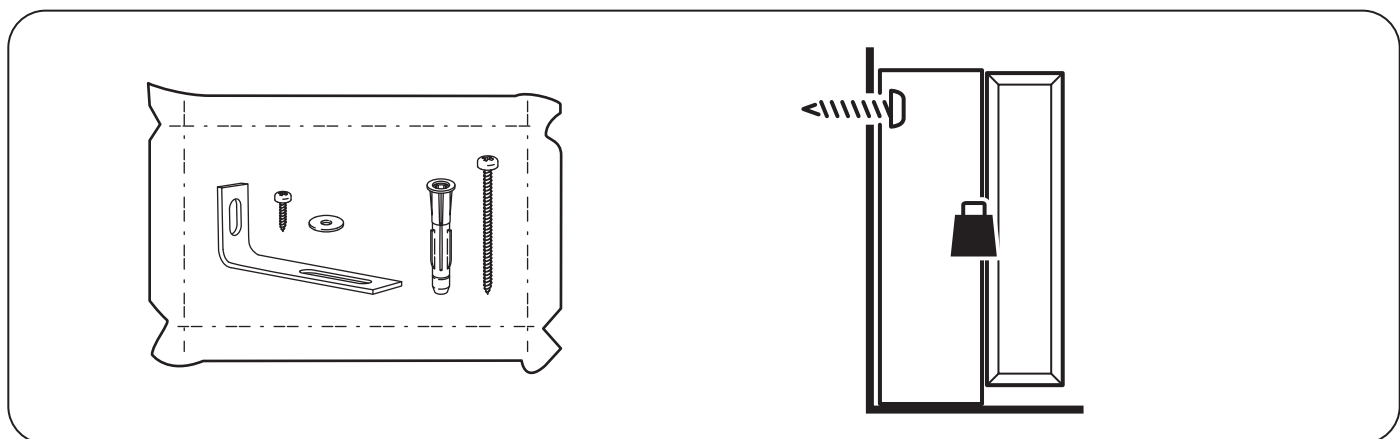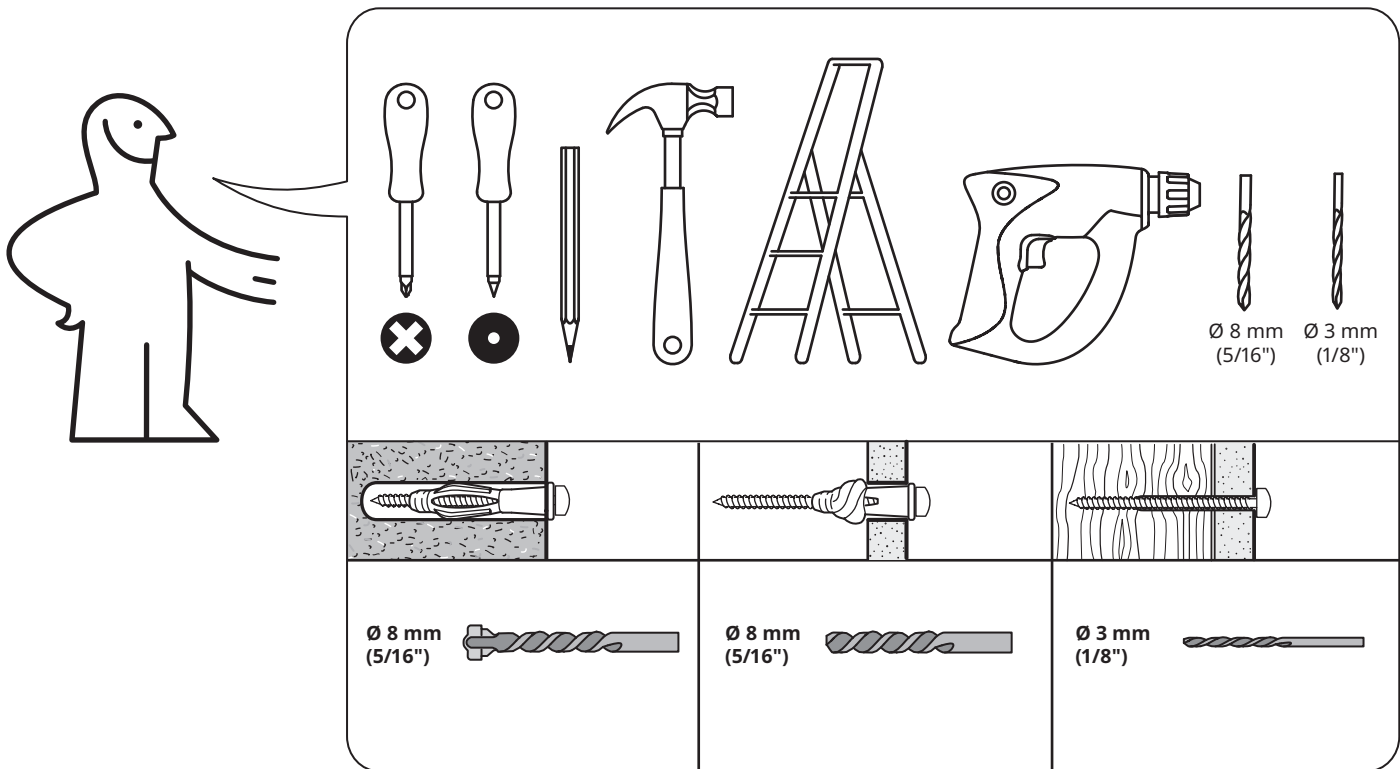

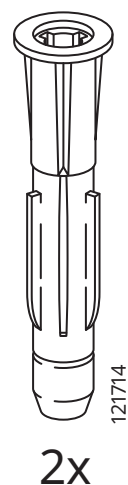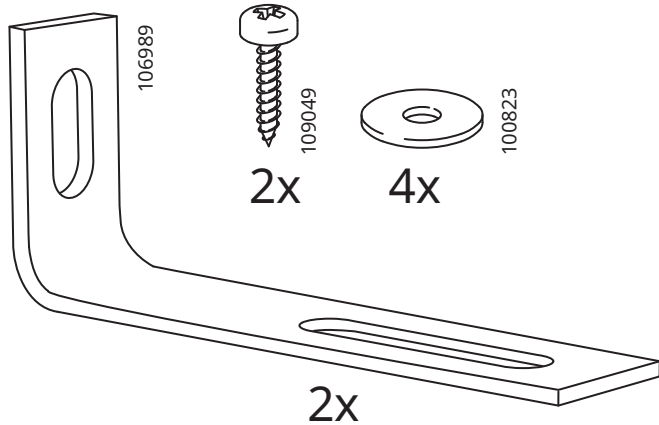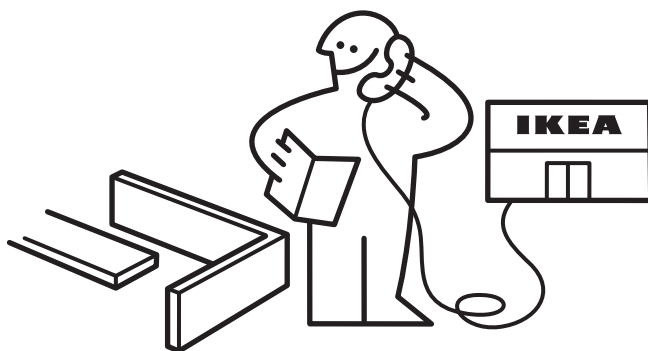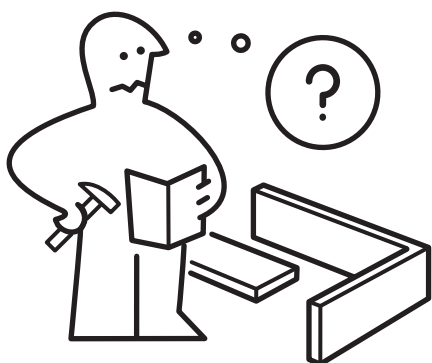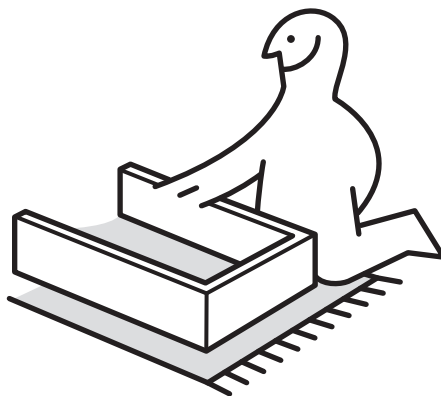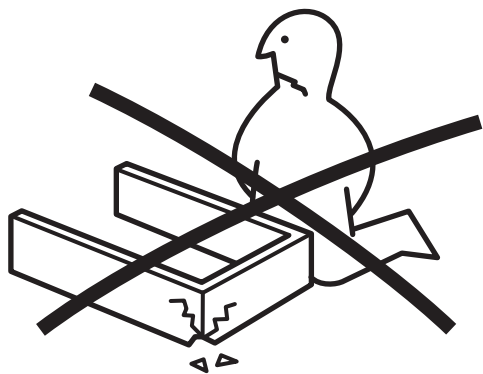


326949

 


100219

 16x




101345

 38x




109567

 3x




105248

 38x




109041

 2x




109837

 4x

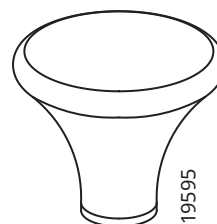


119595

 3x

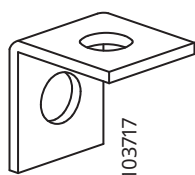


103717

 1x




107091

 1x

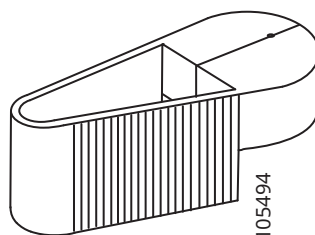


105494

 1x

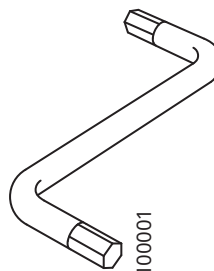


100001

 1x

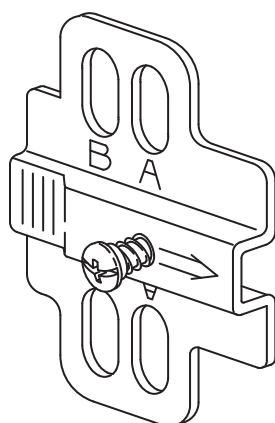


109221

 9x

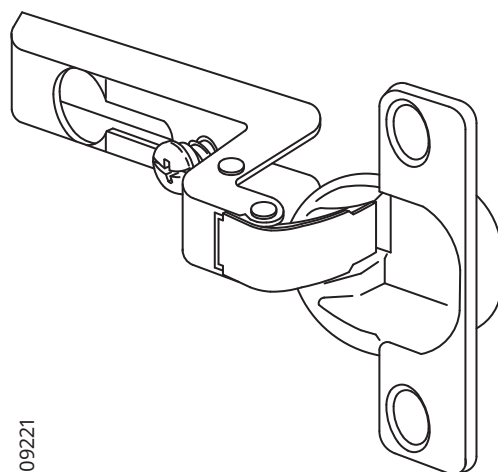


109338

 9x

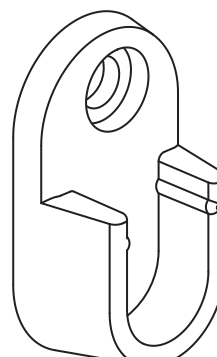


157308

 2x

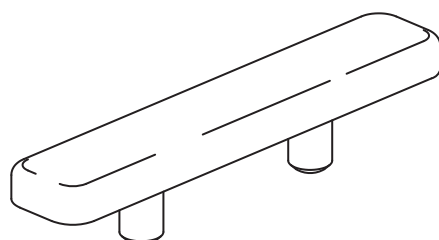

158568

 8x

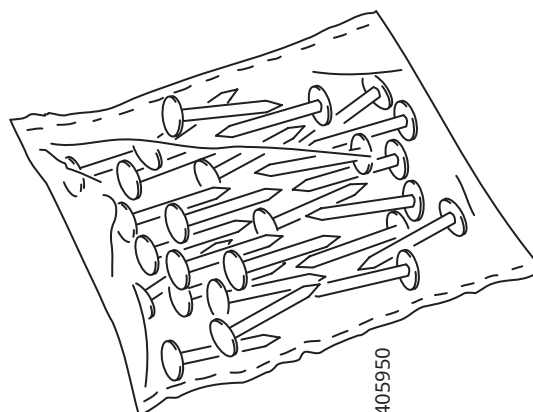





405950

2x




146857

    
1x

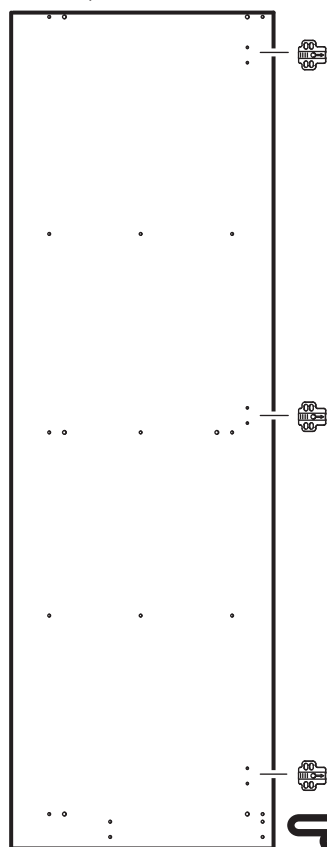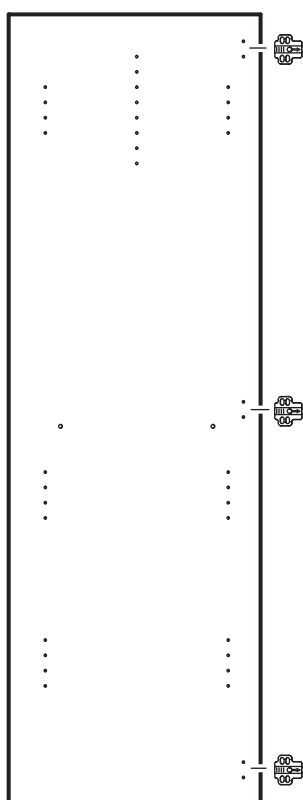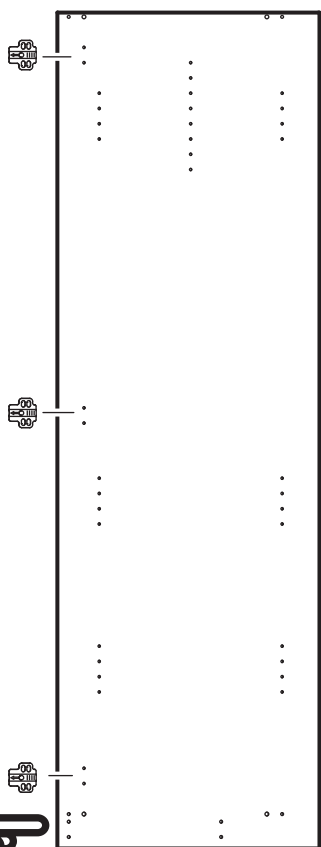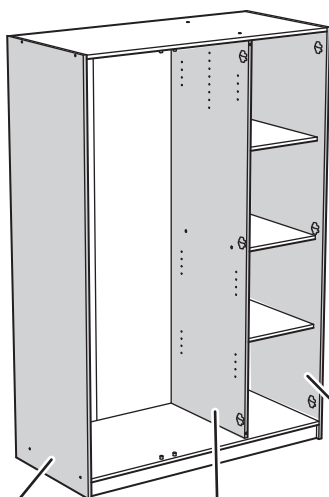






1

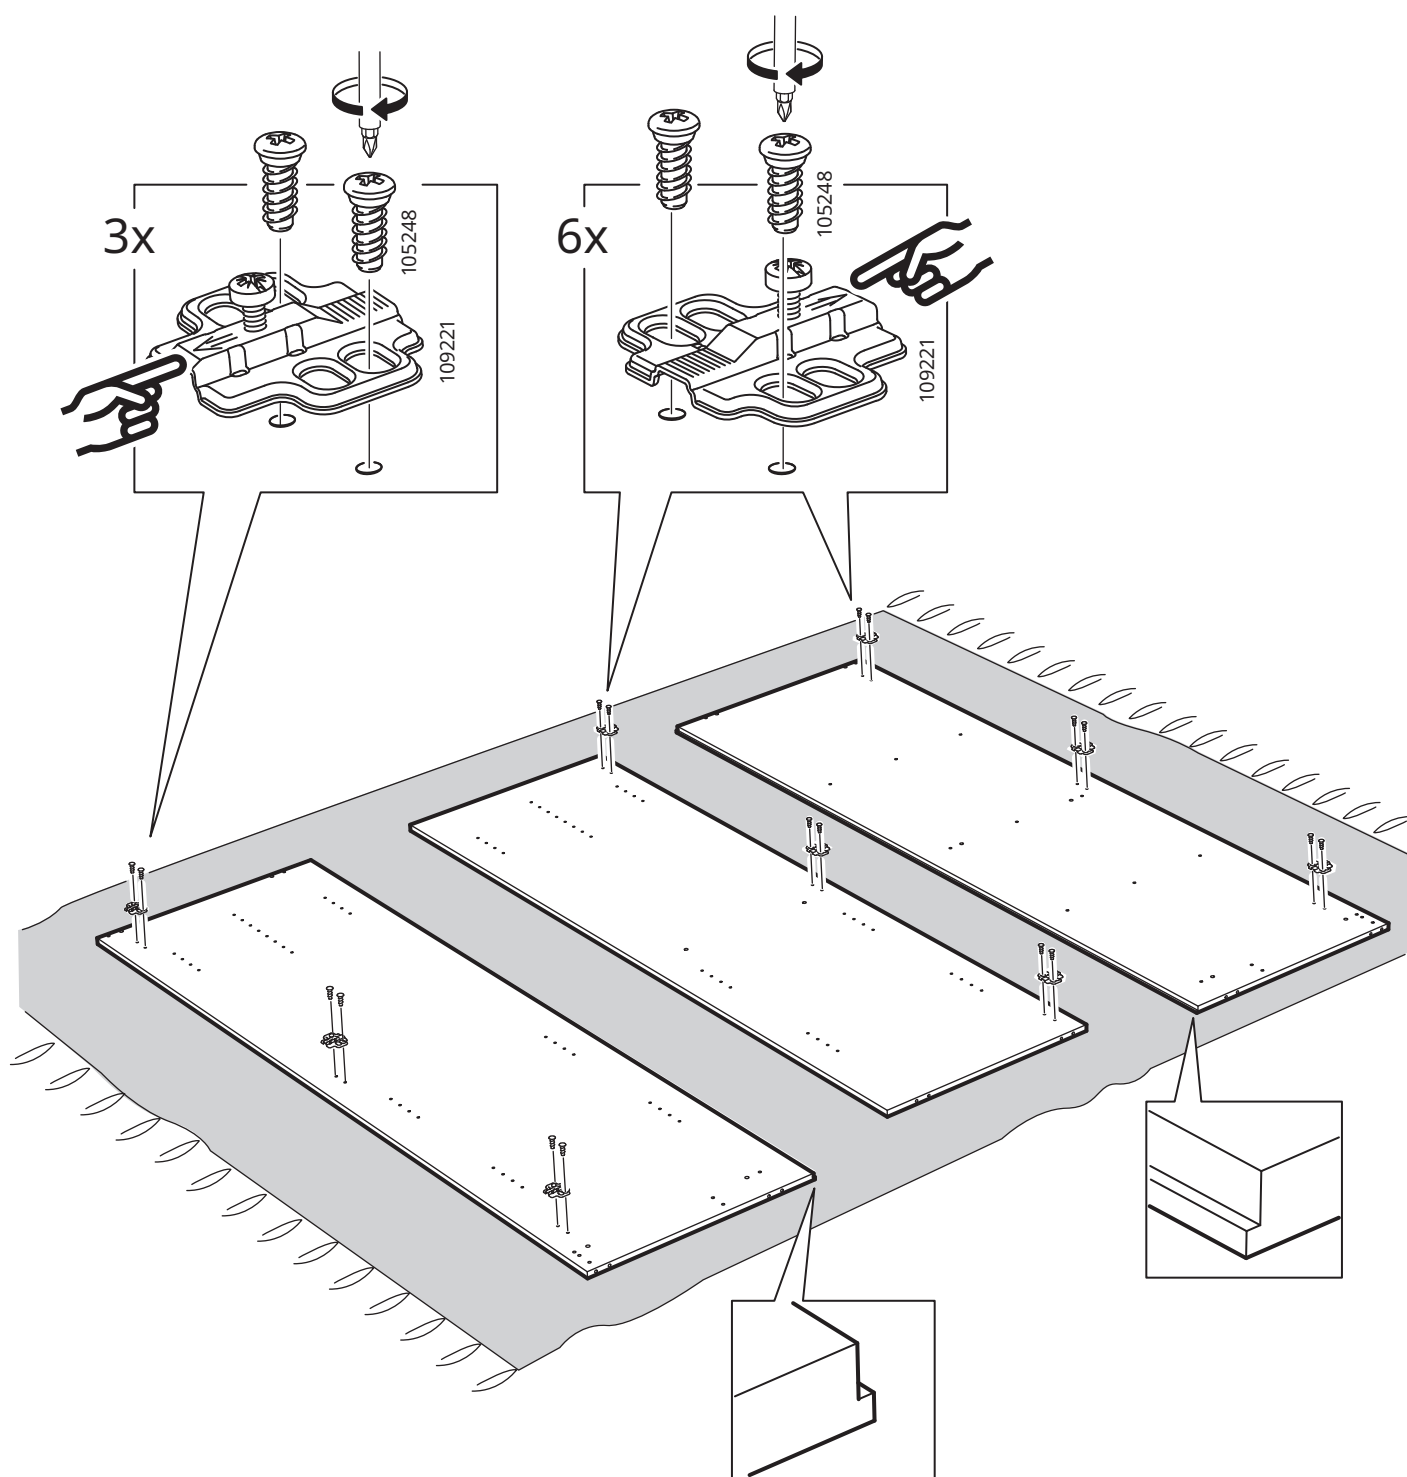 


2

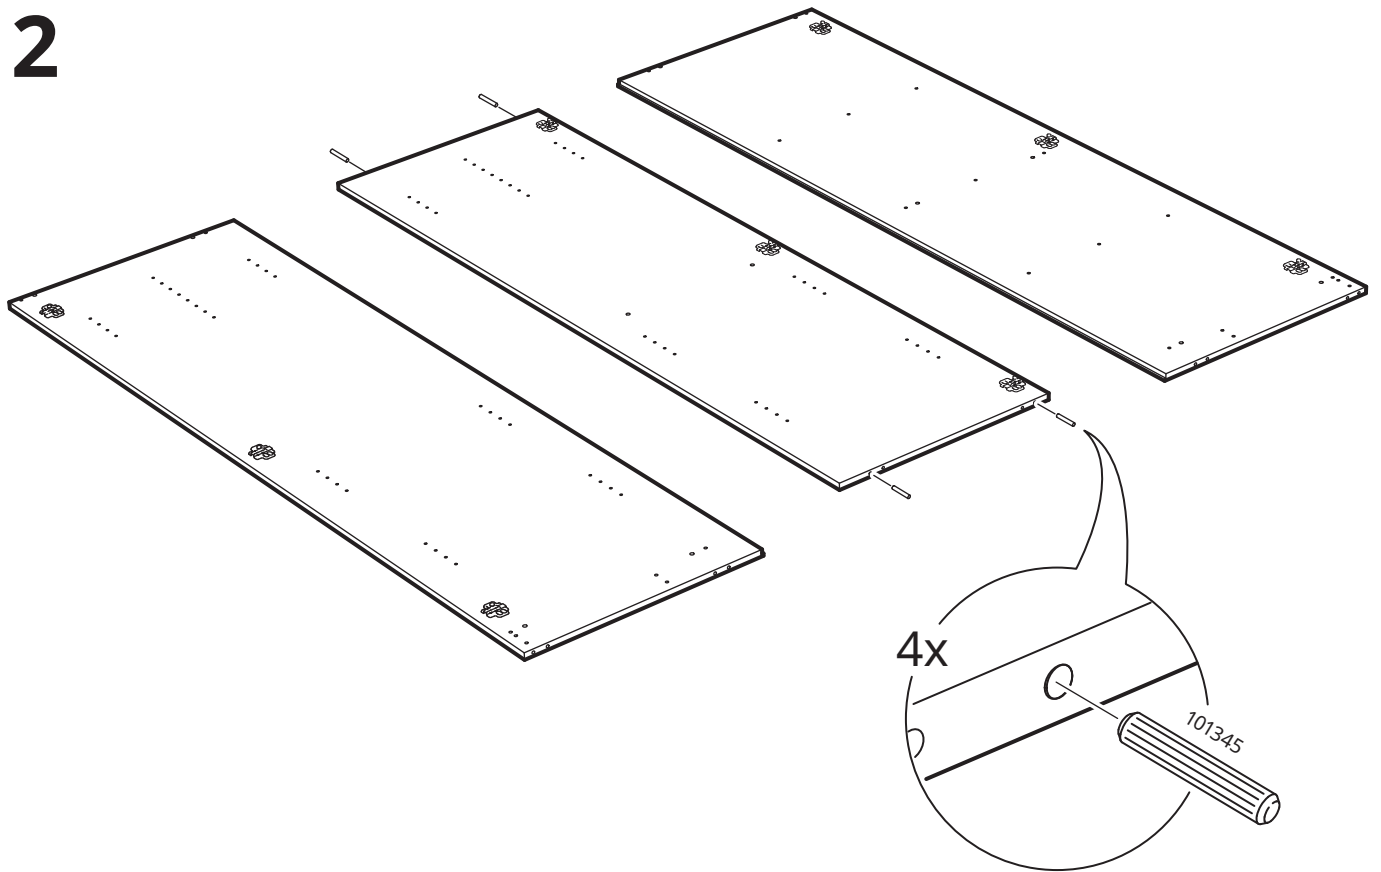 


3

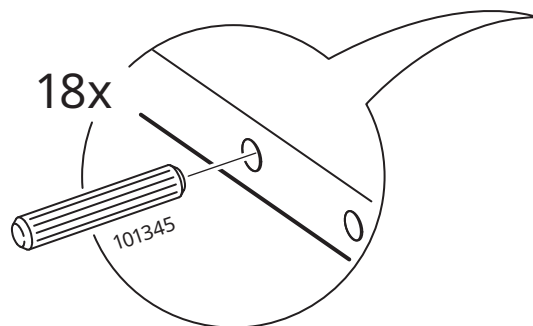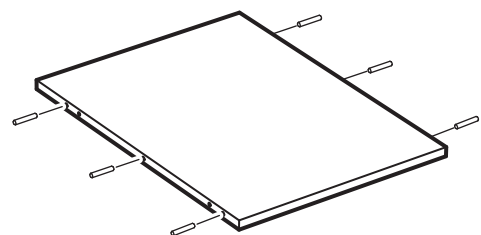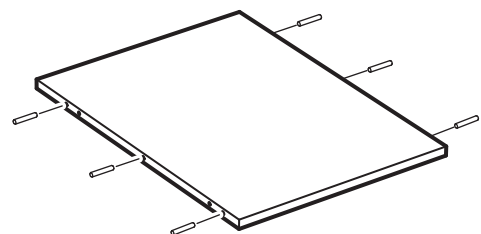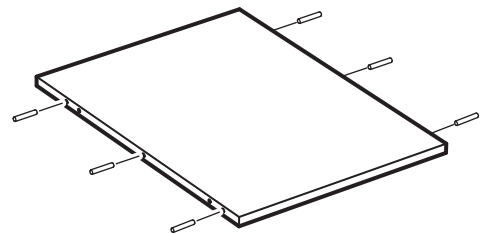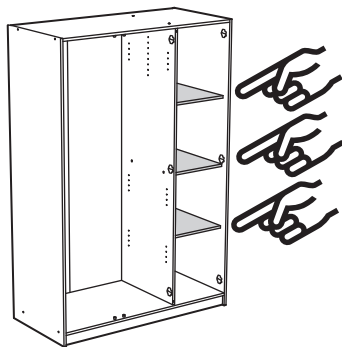     


4

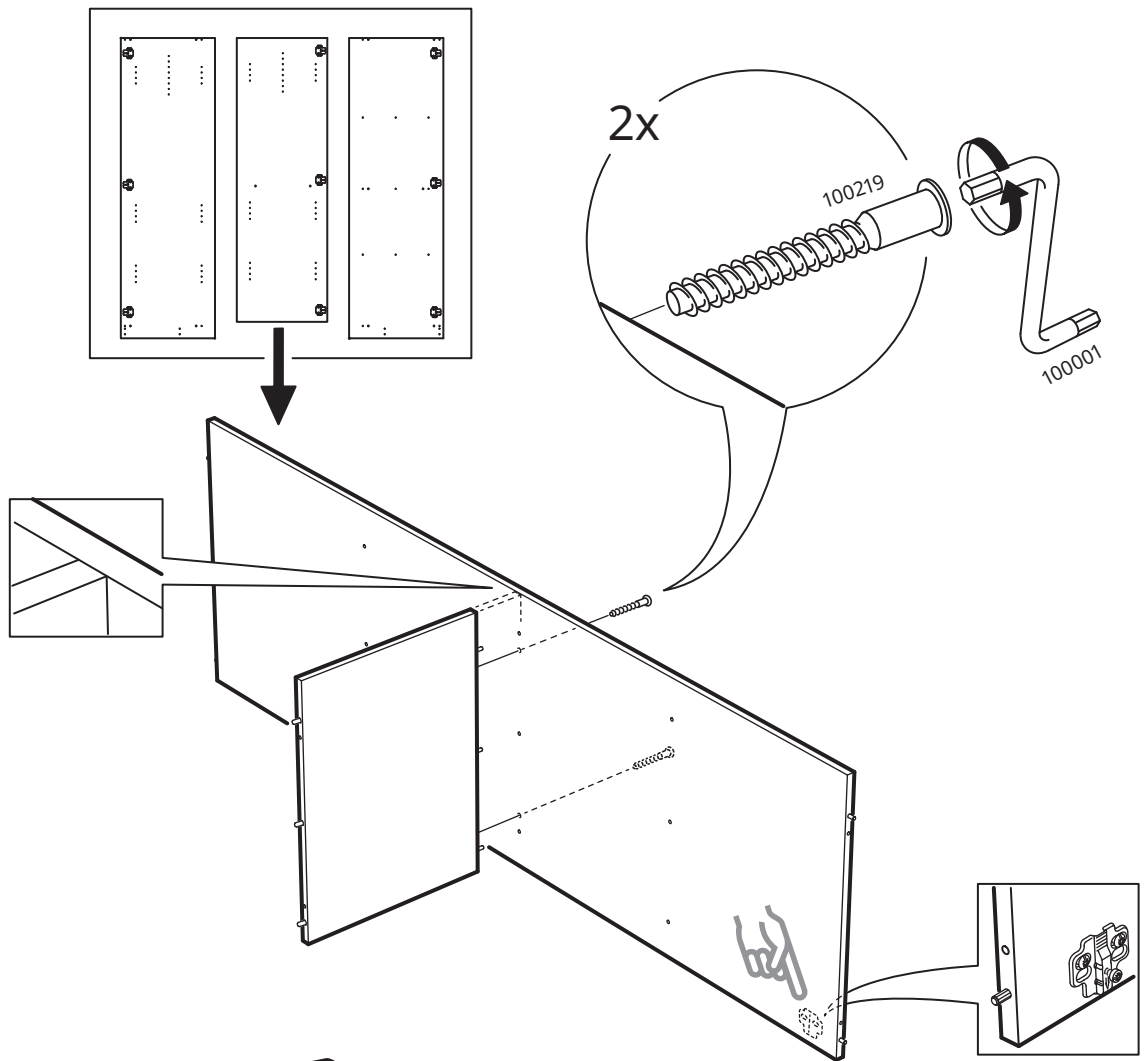 


5

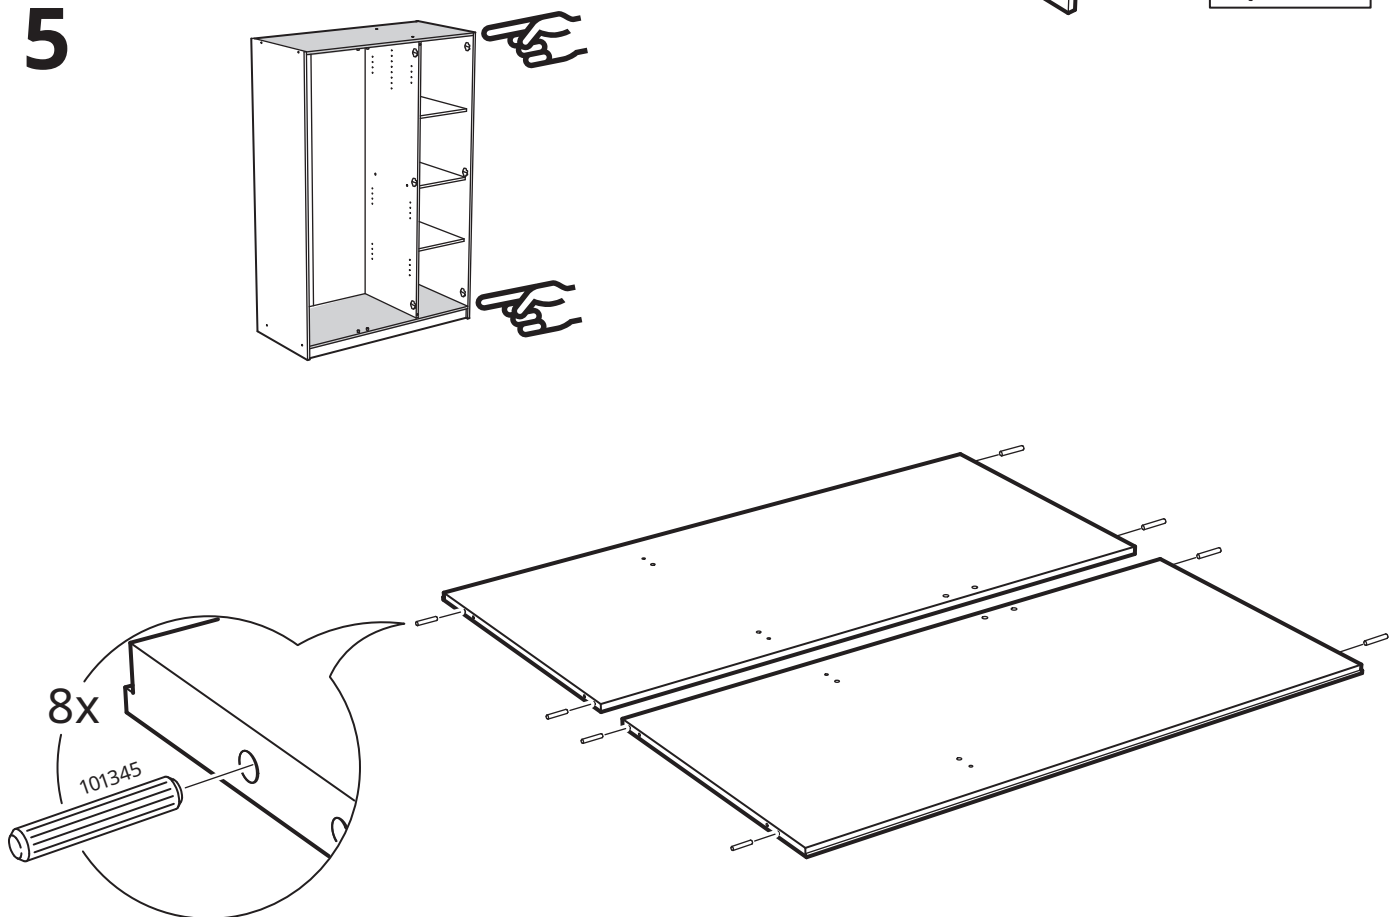 


6

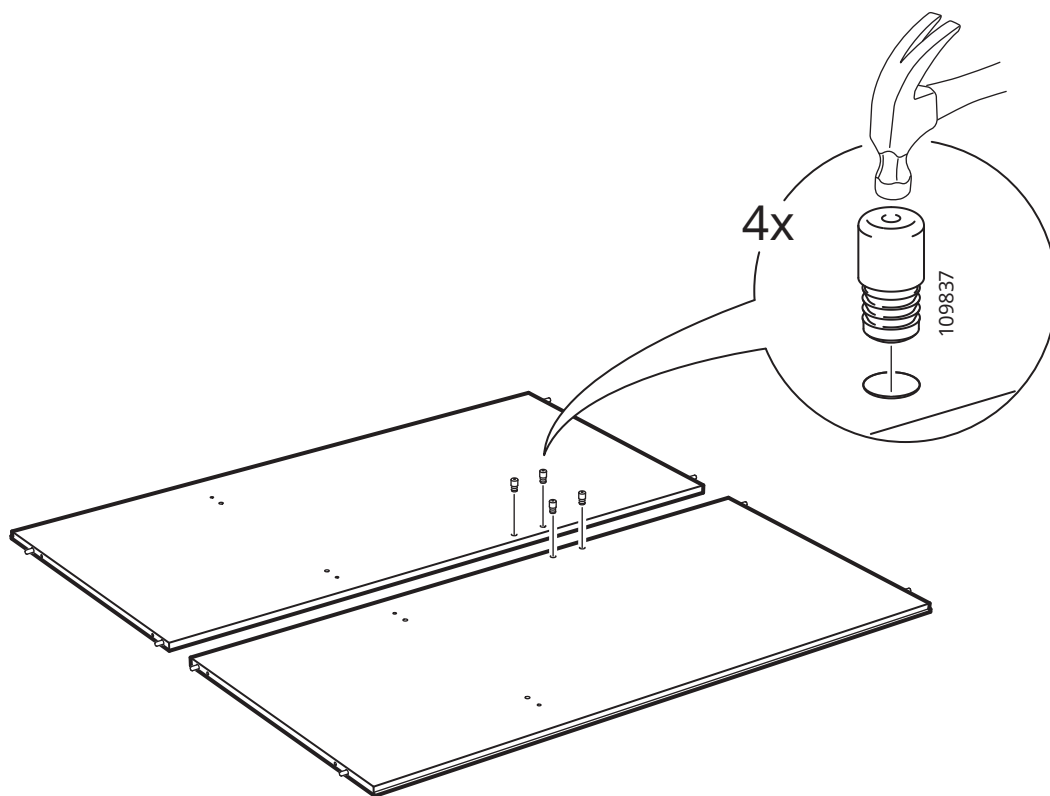 


7

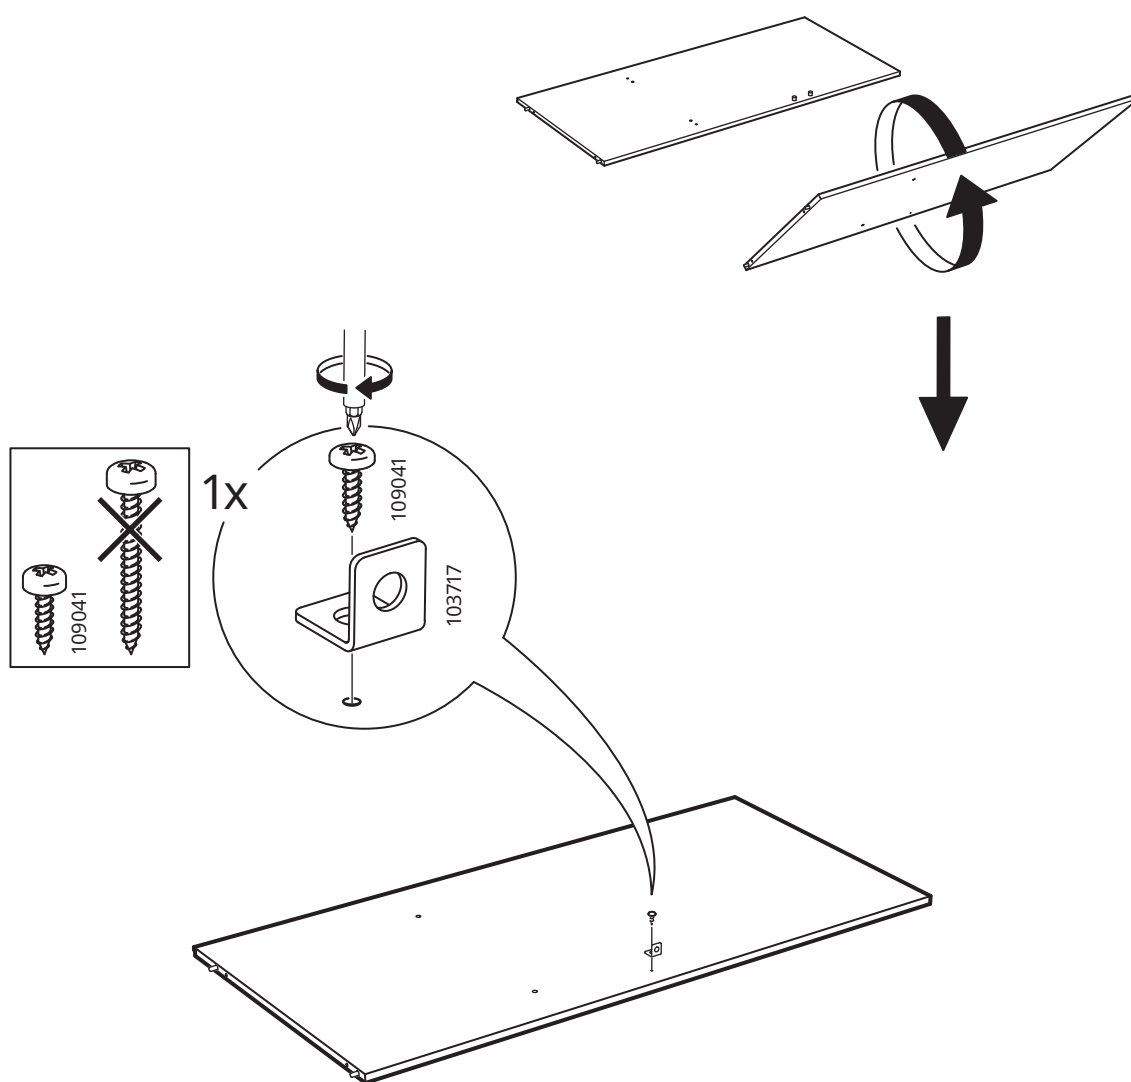 


8

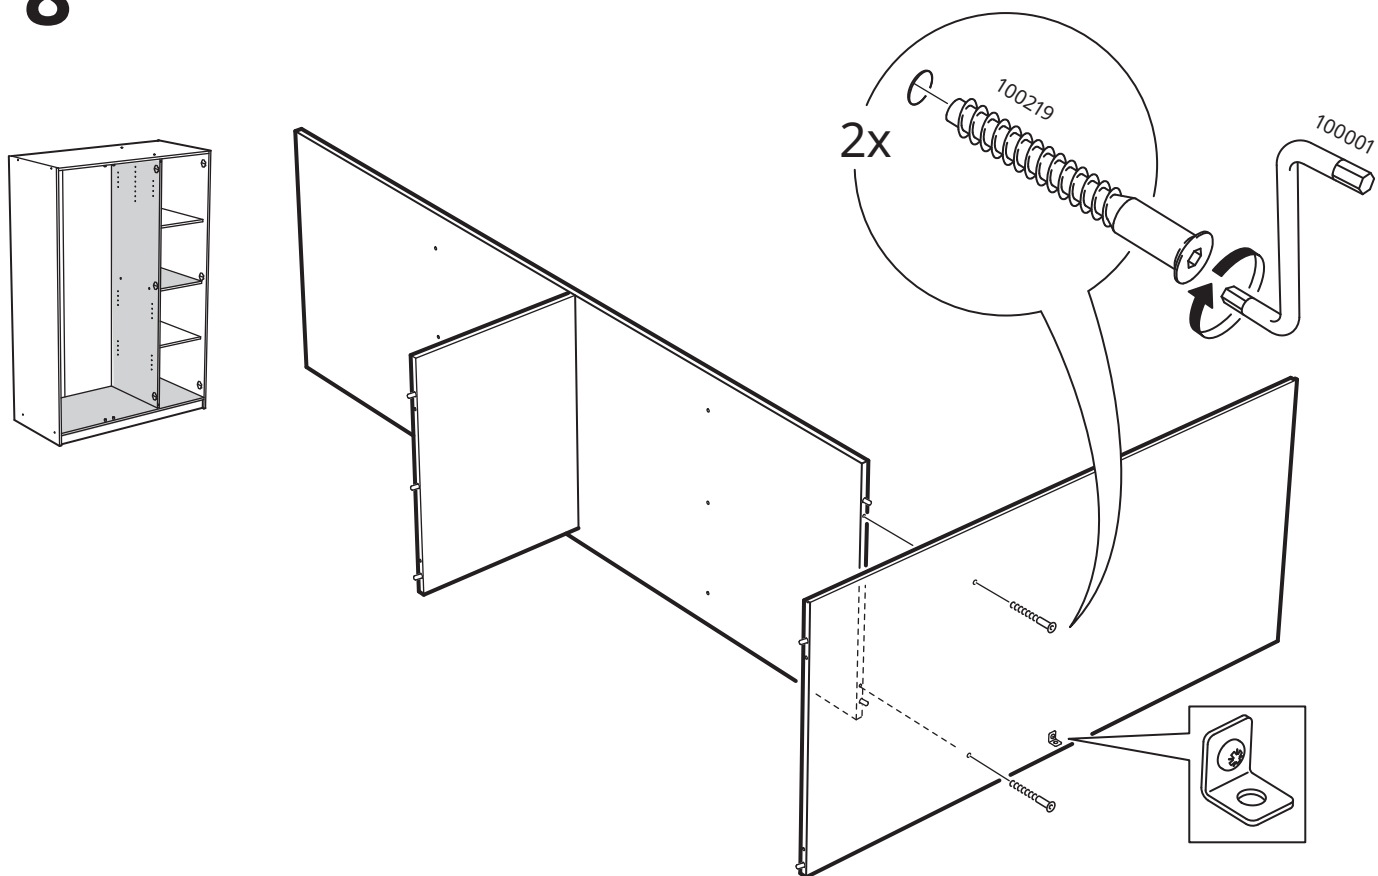 


9

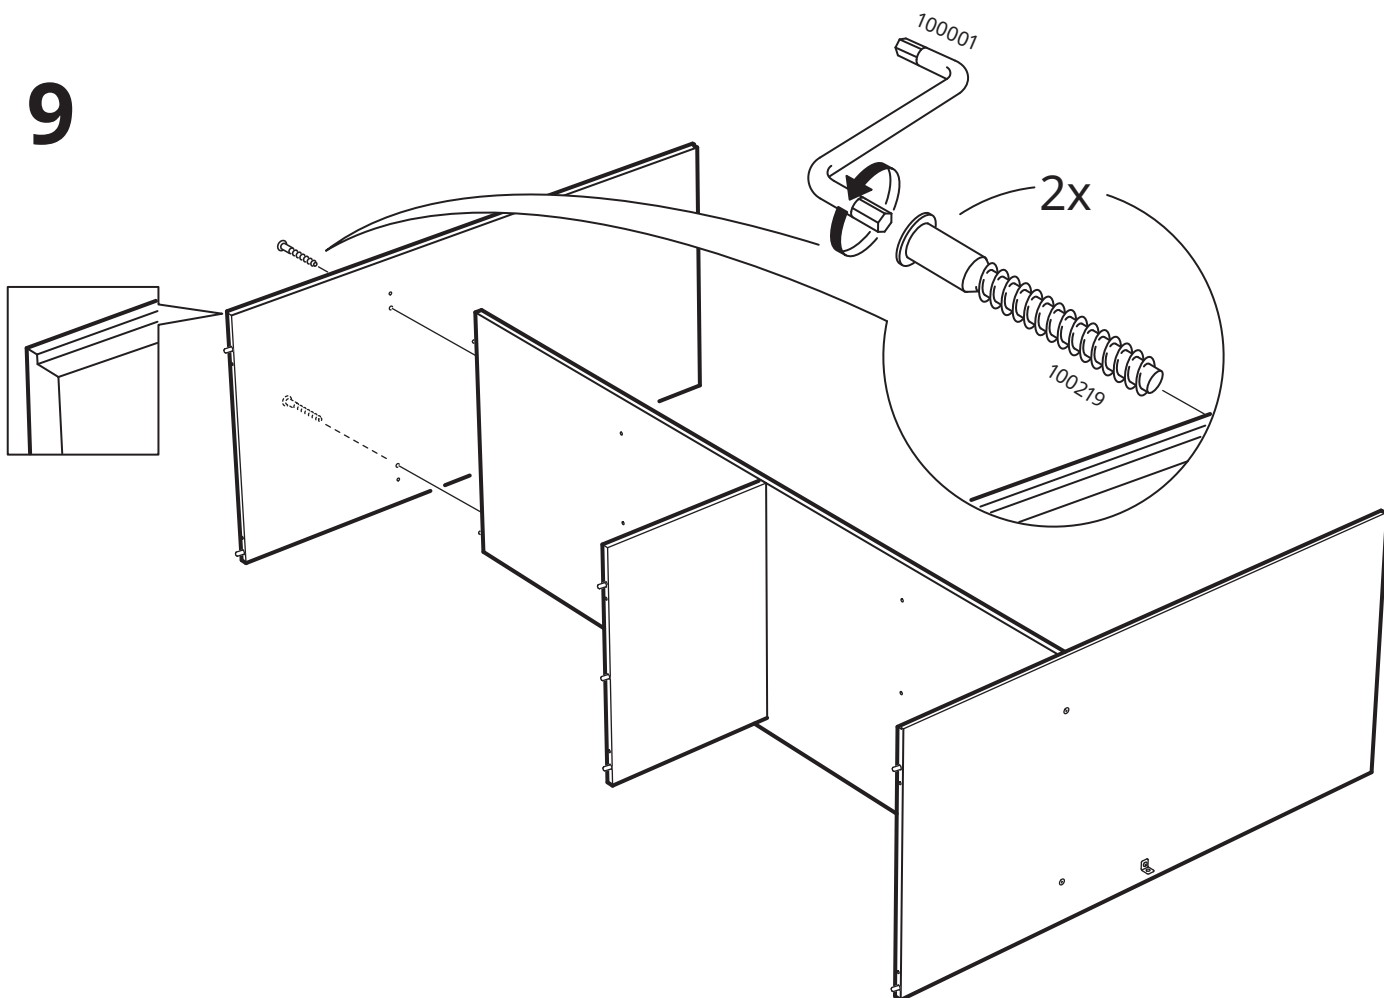 


10

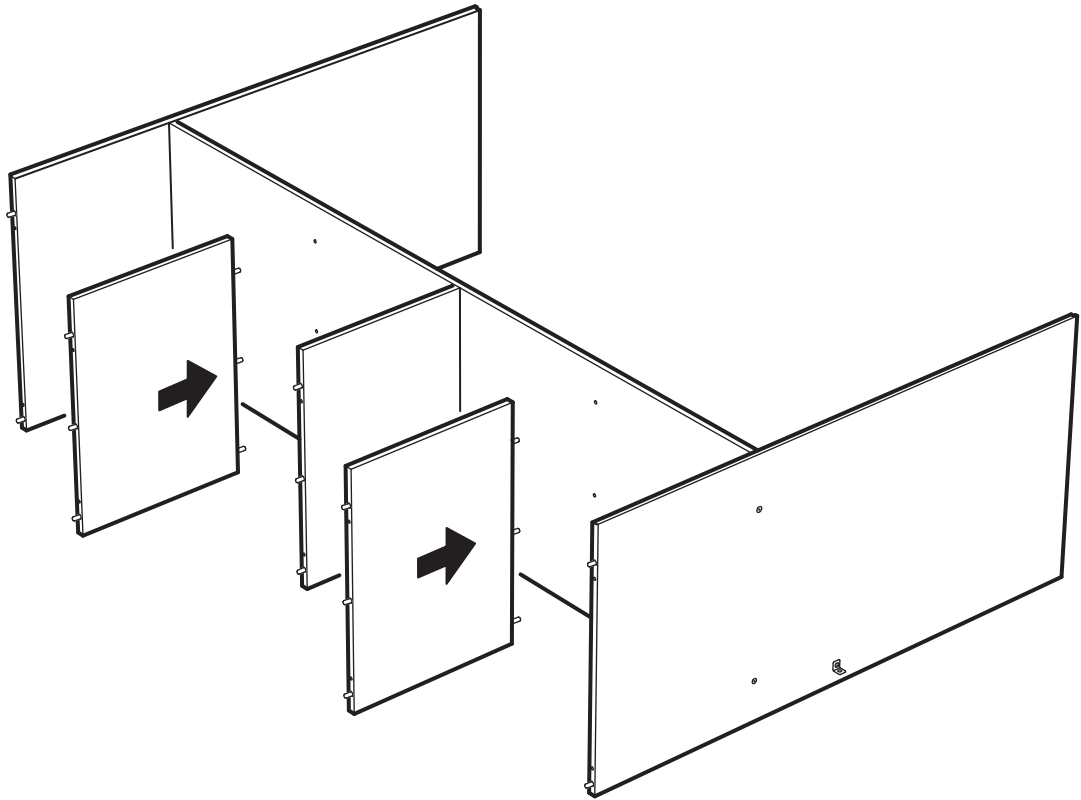 


11

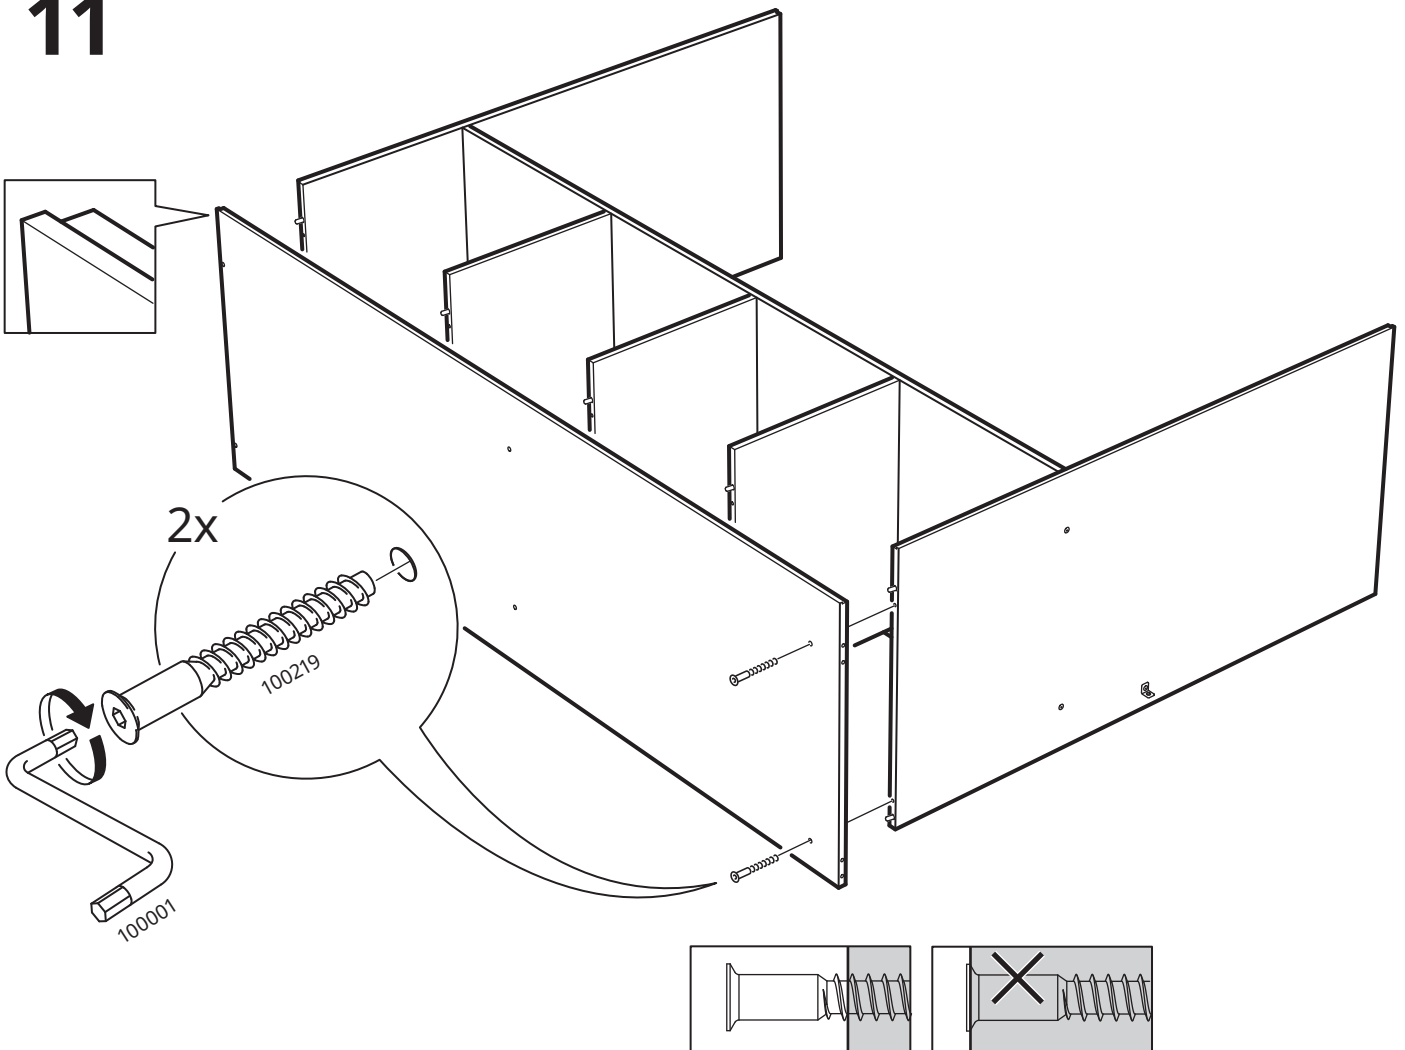 


12

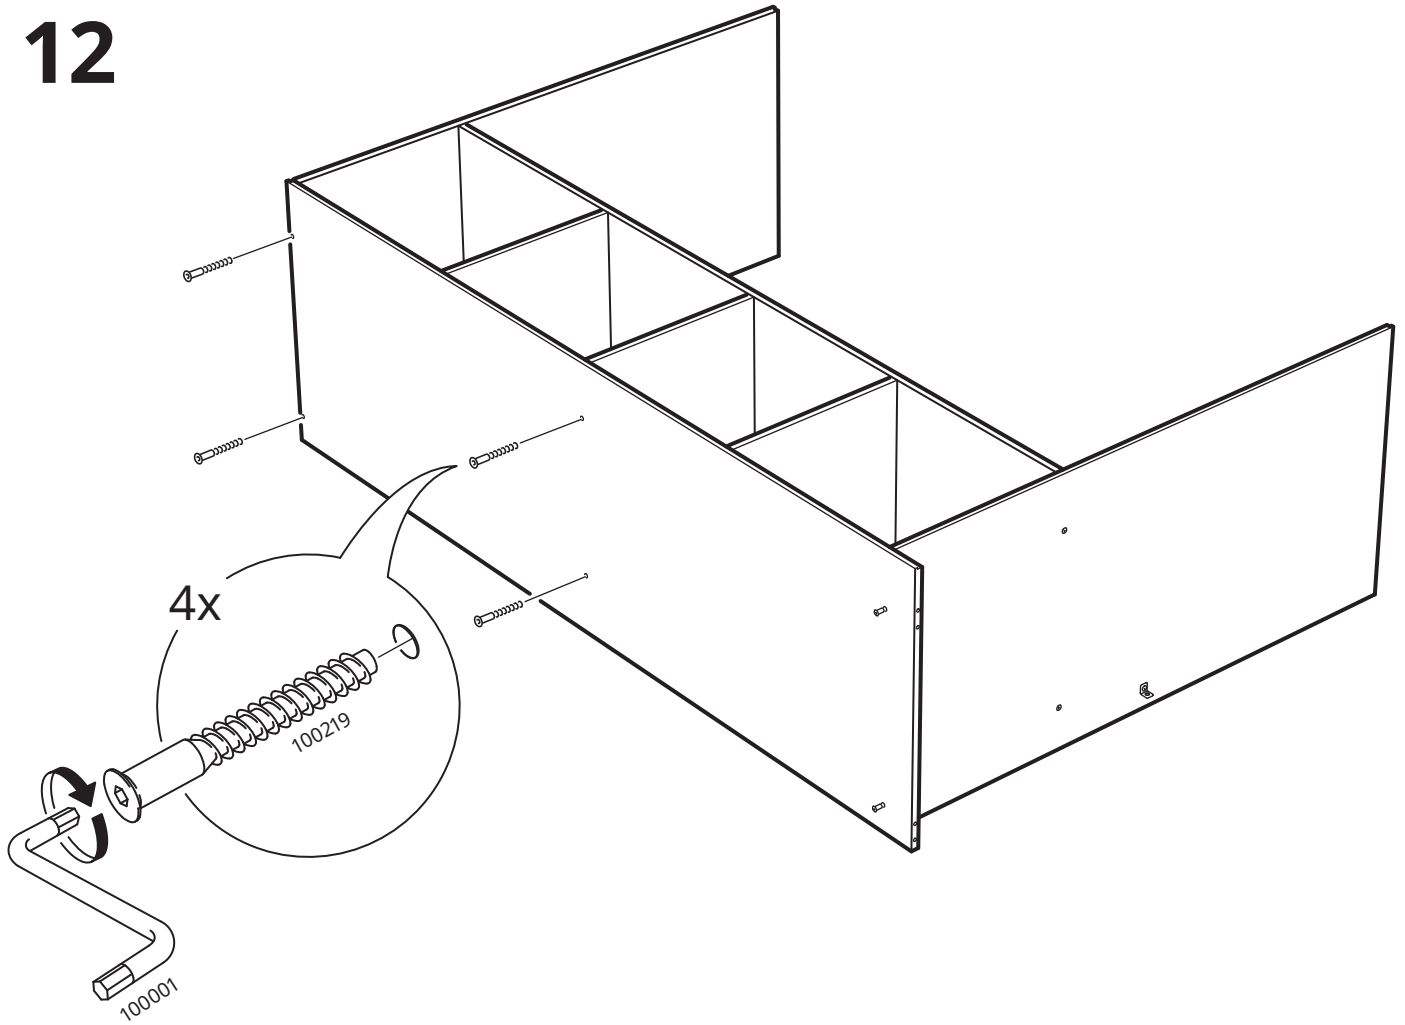 


13

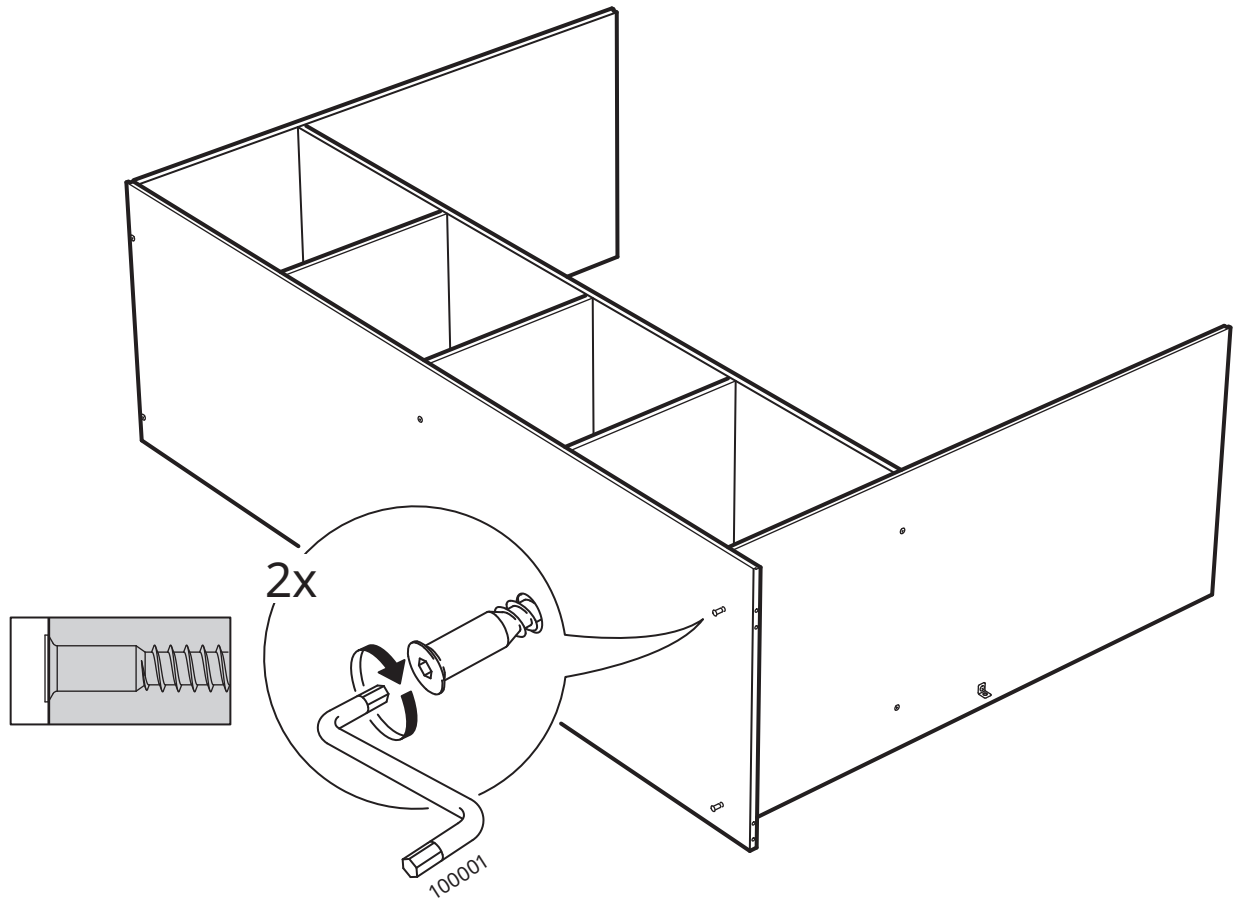 


14

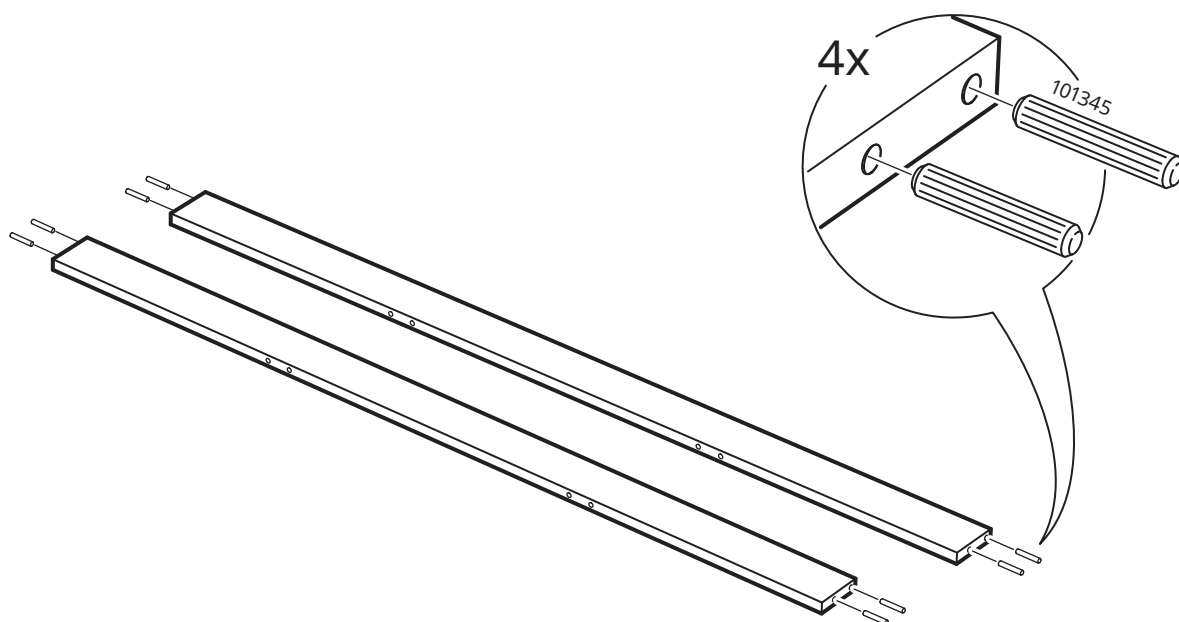 


15

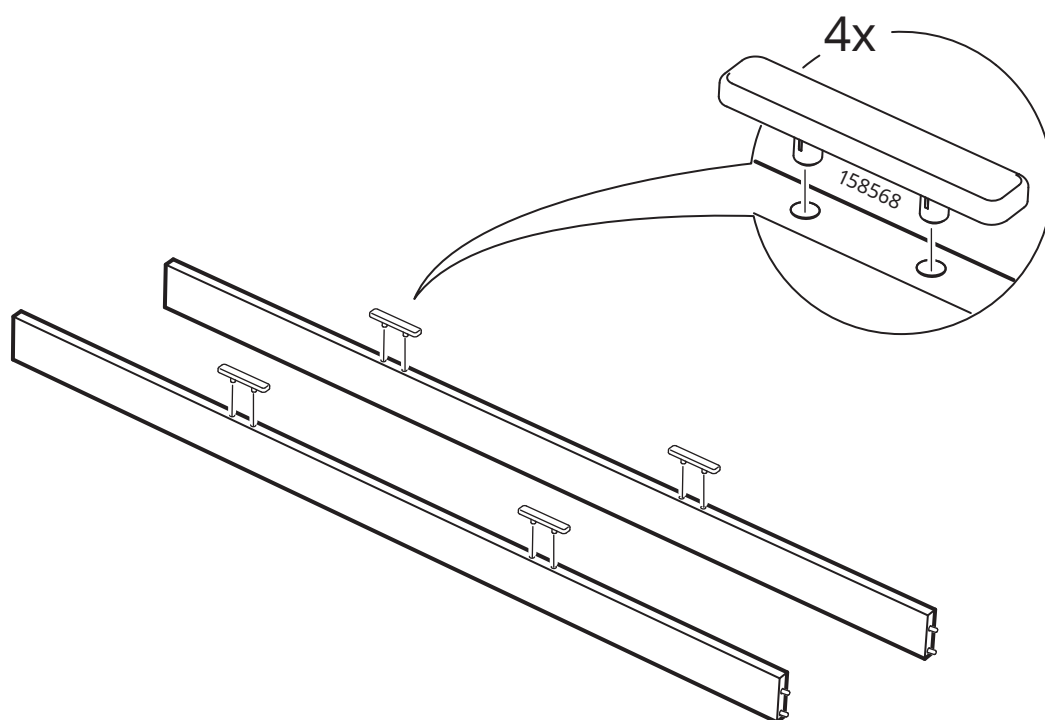 



16

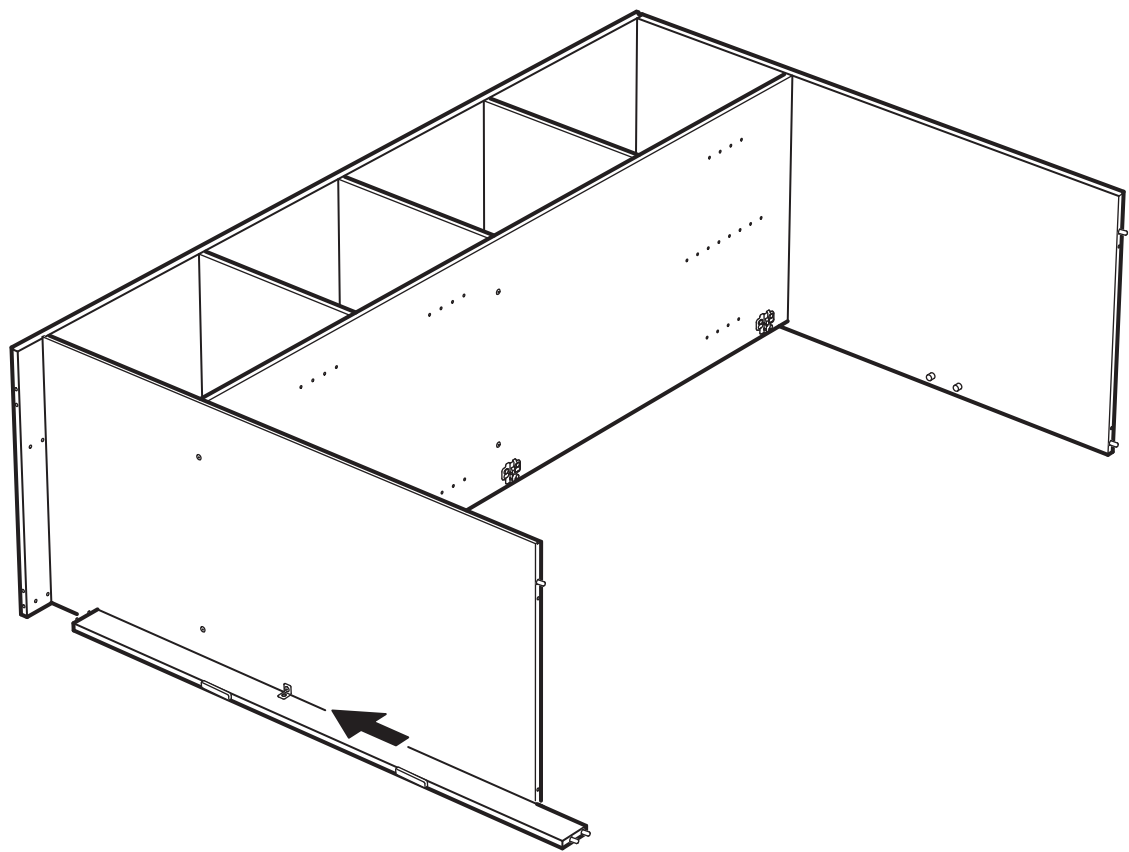 


17

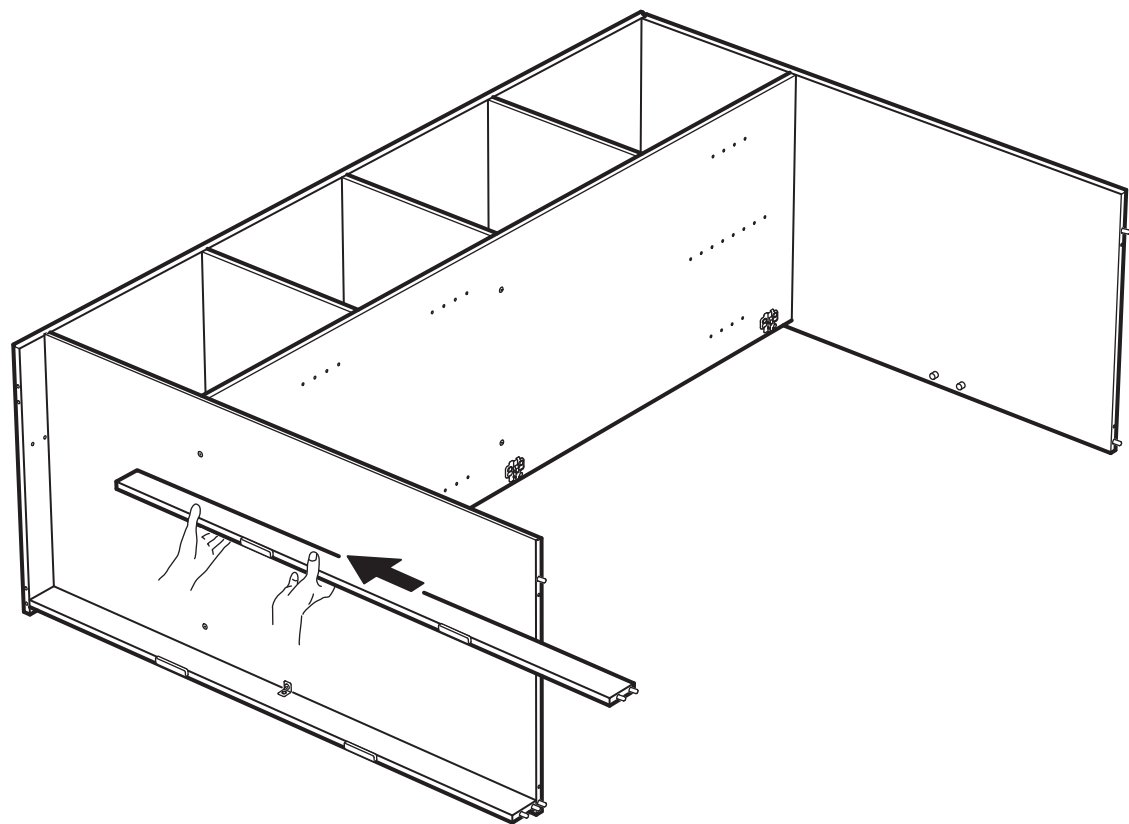 

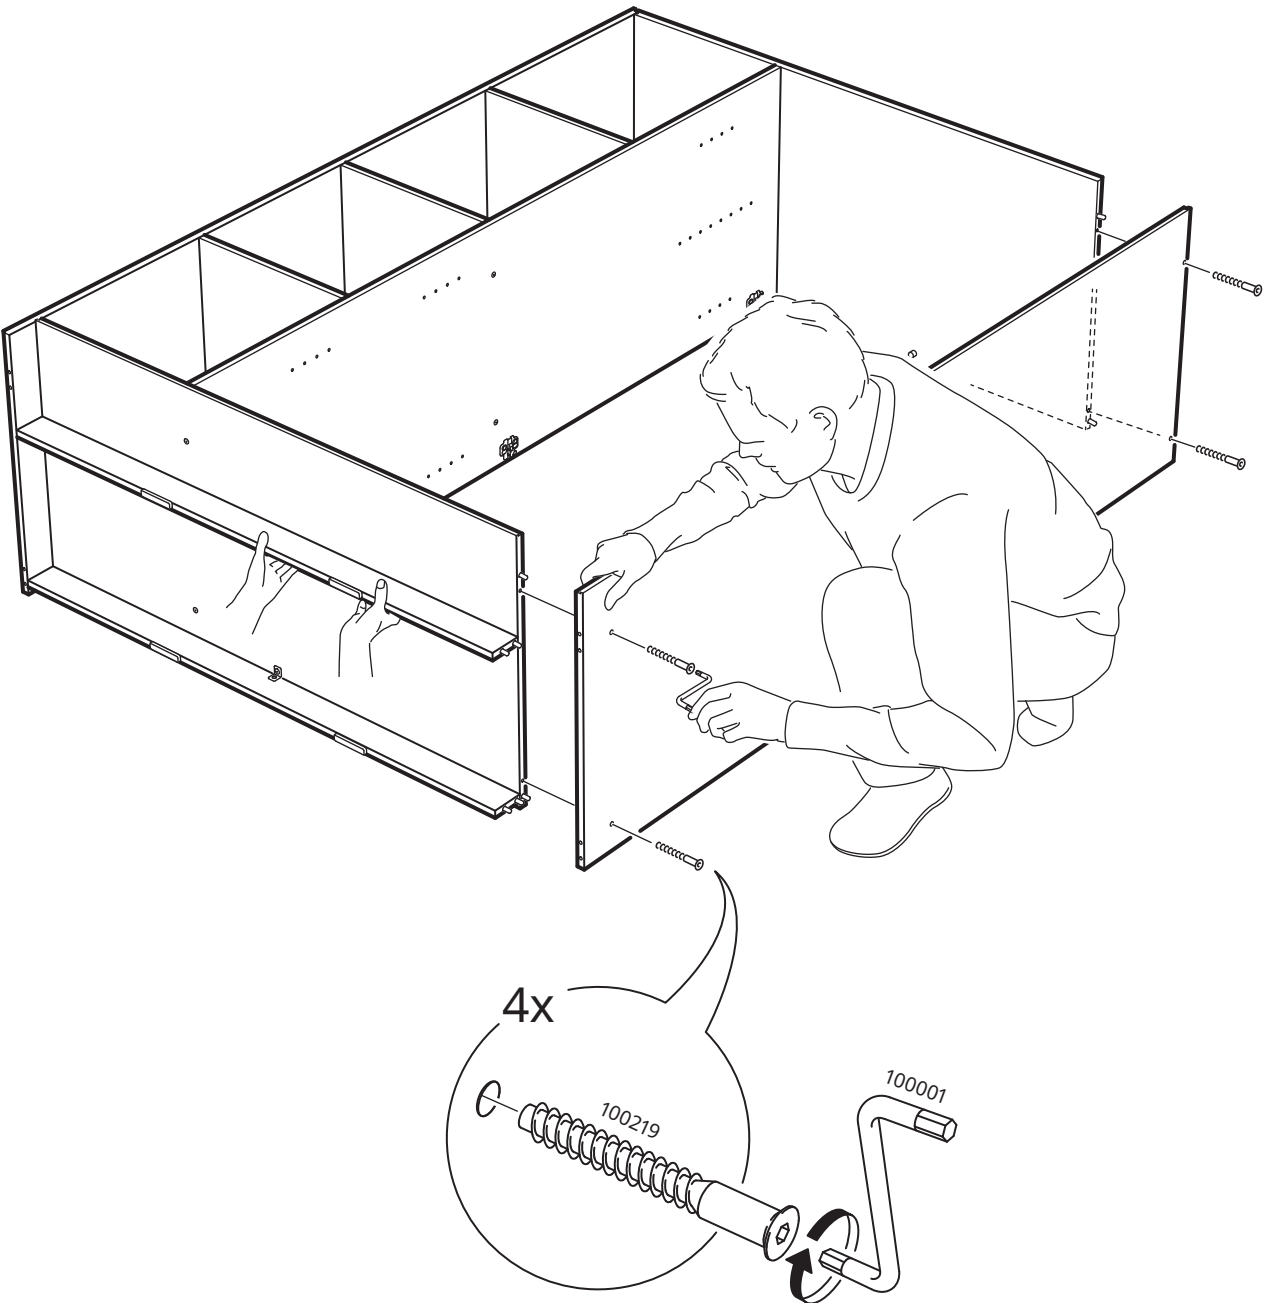 


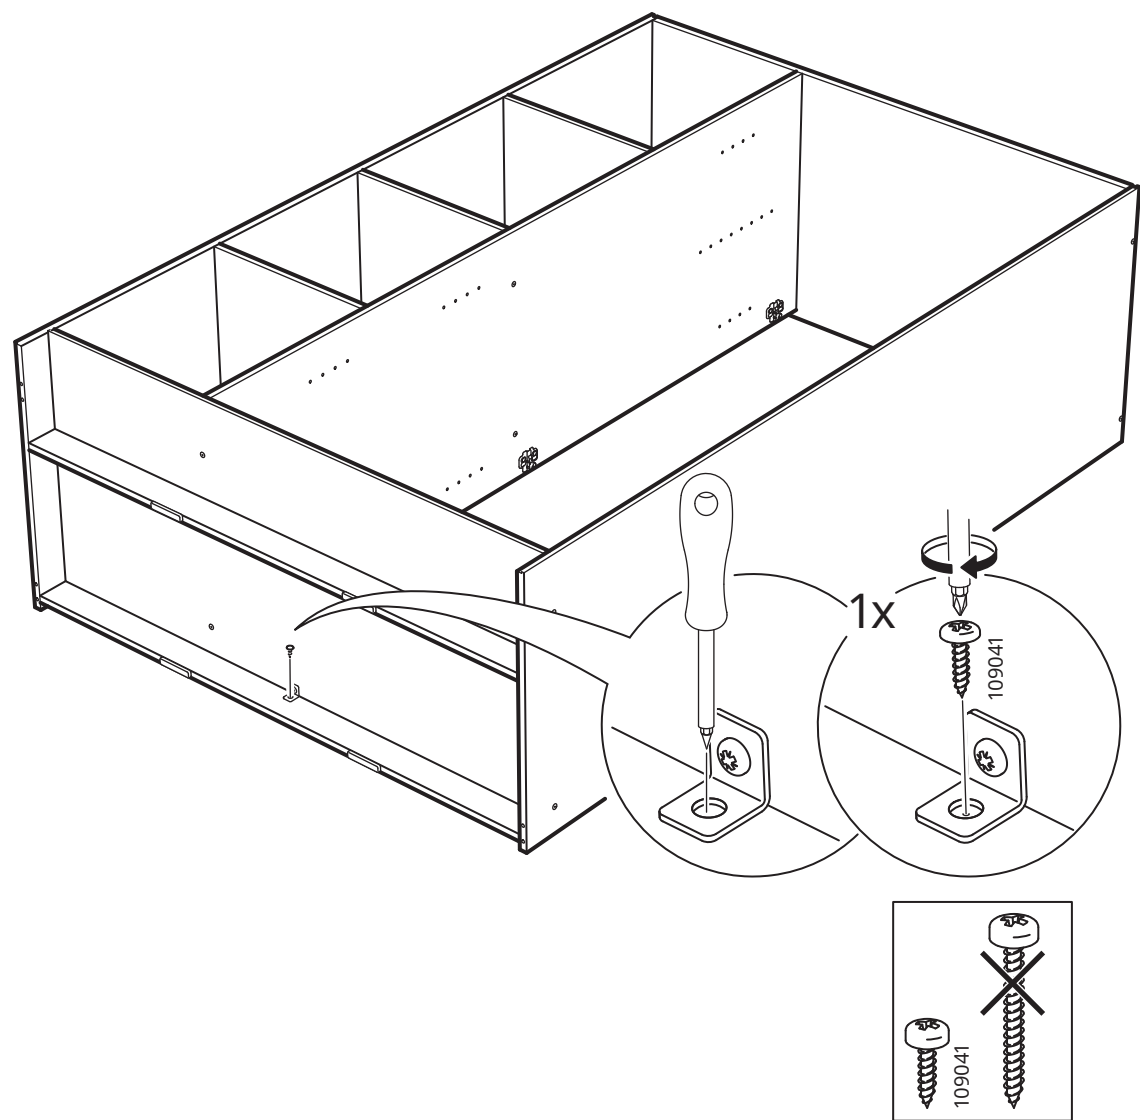 


20

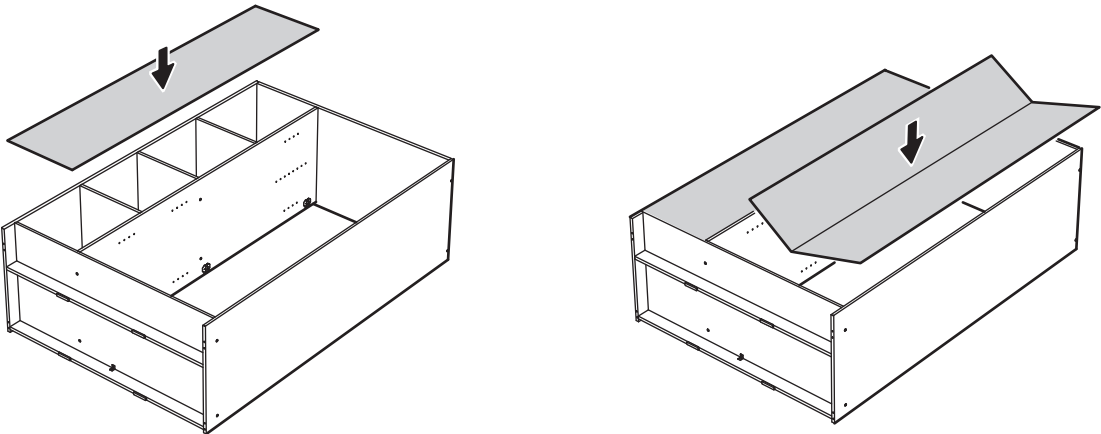 


21

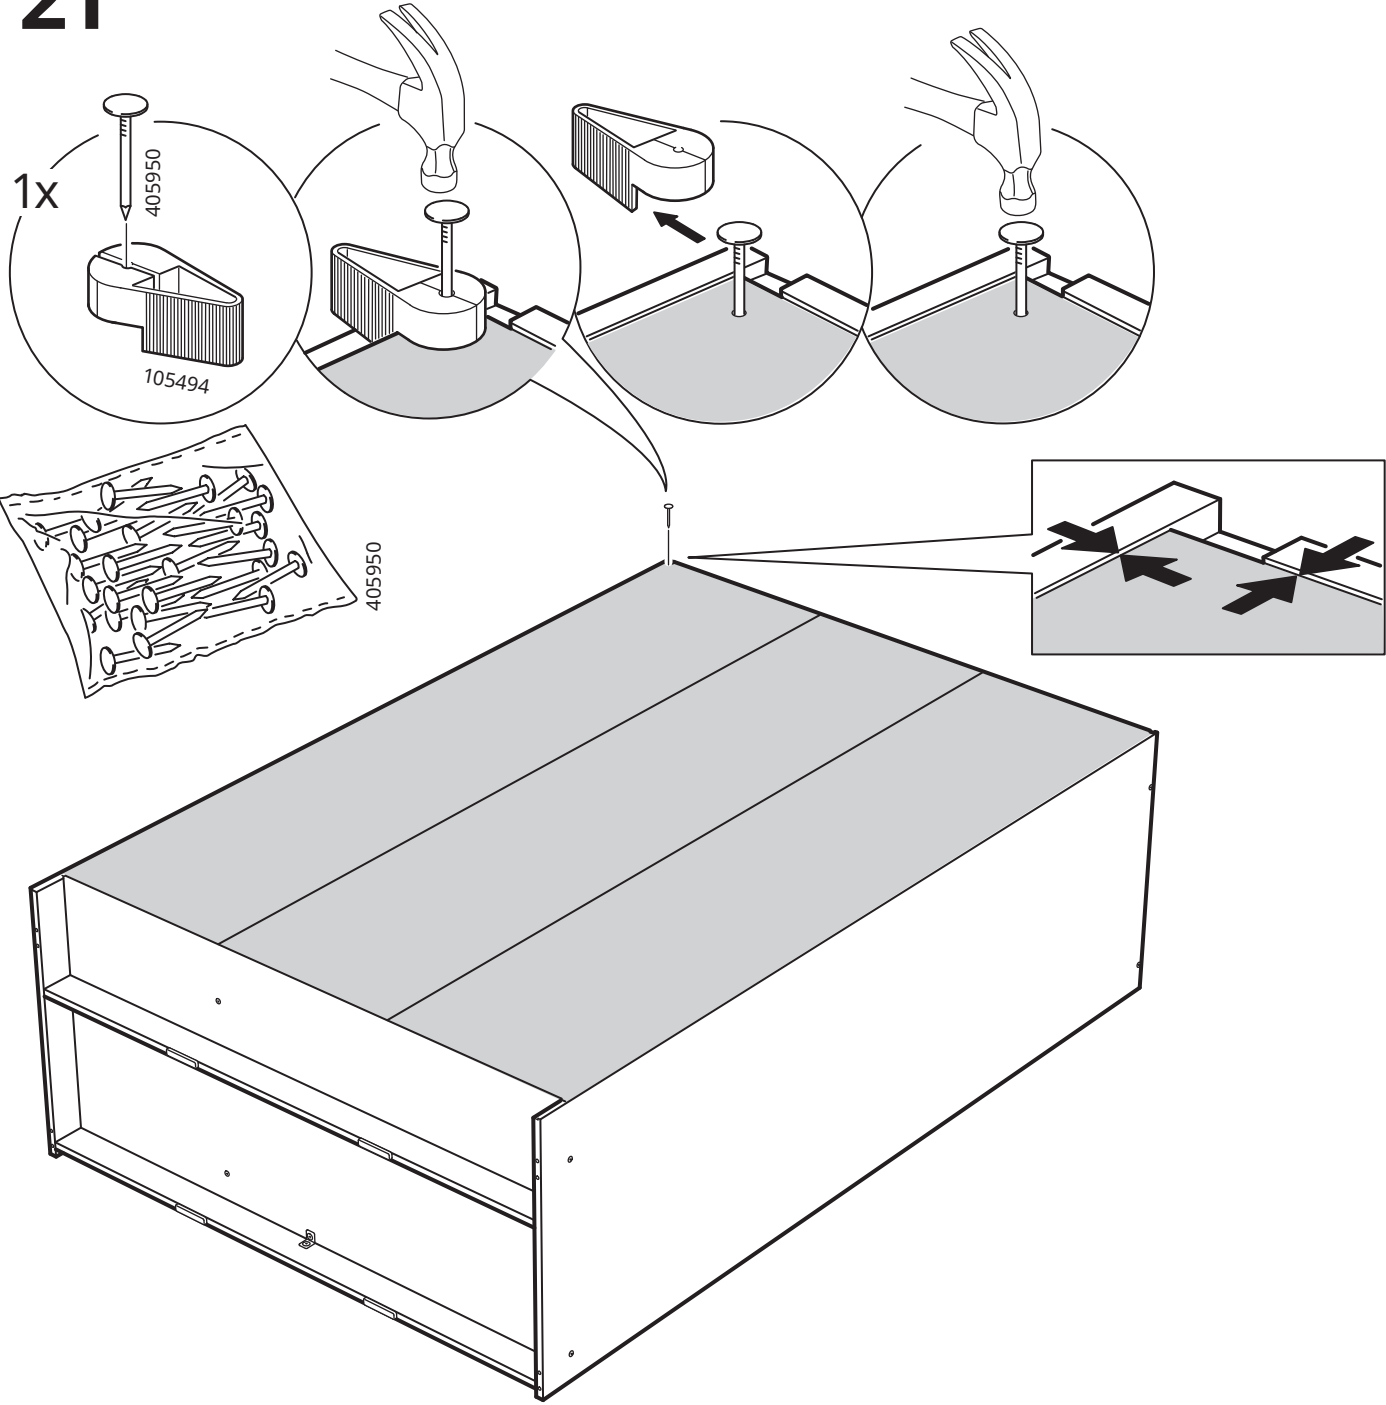 


22


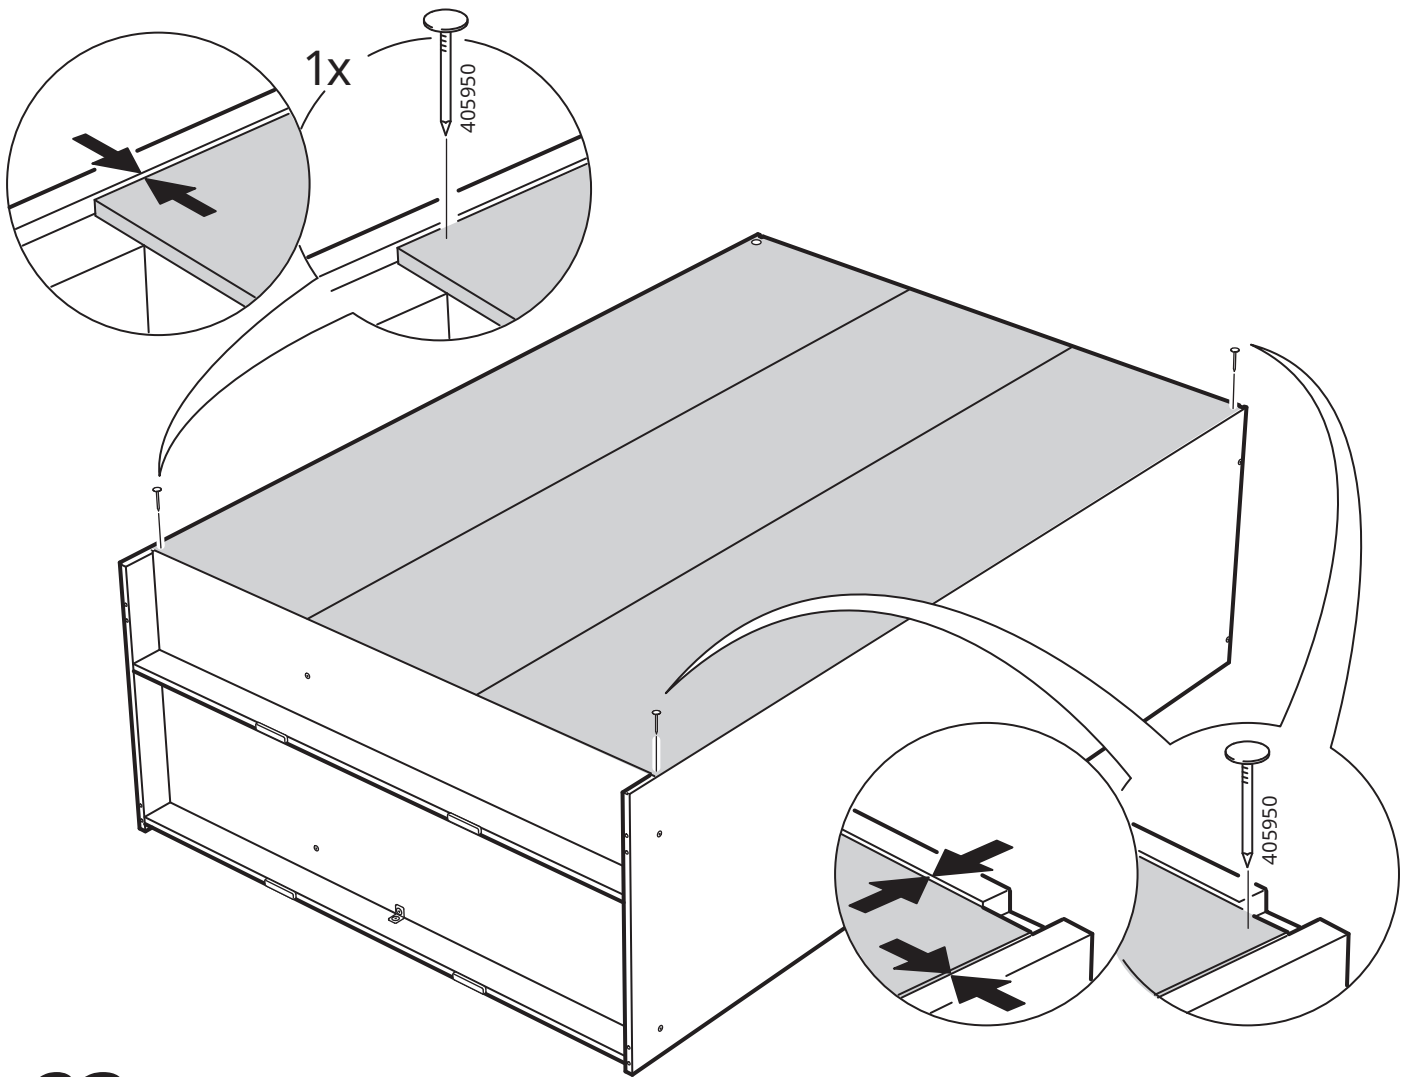 


23

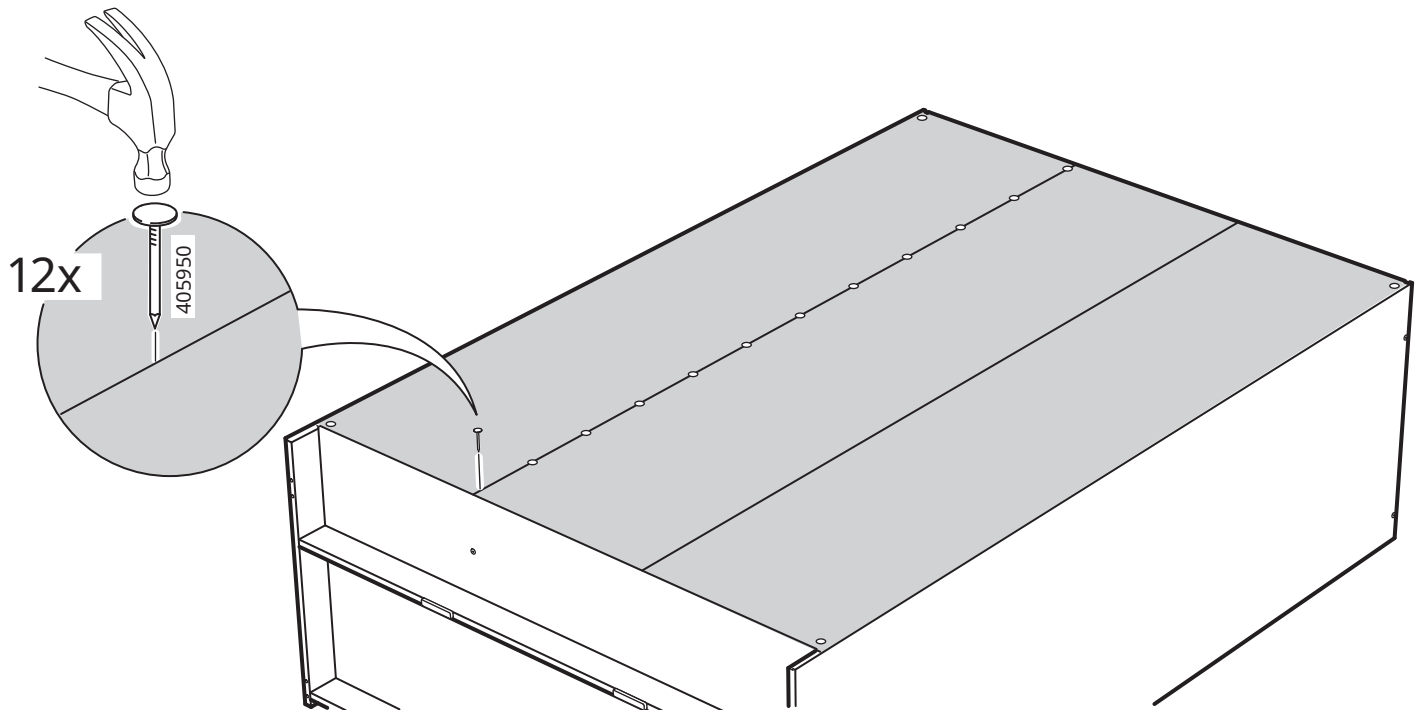 



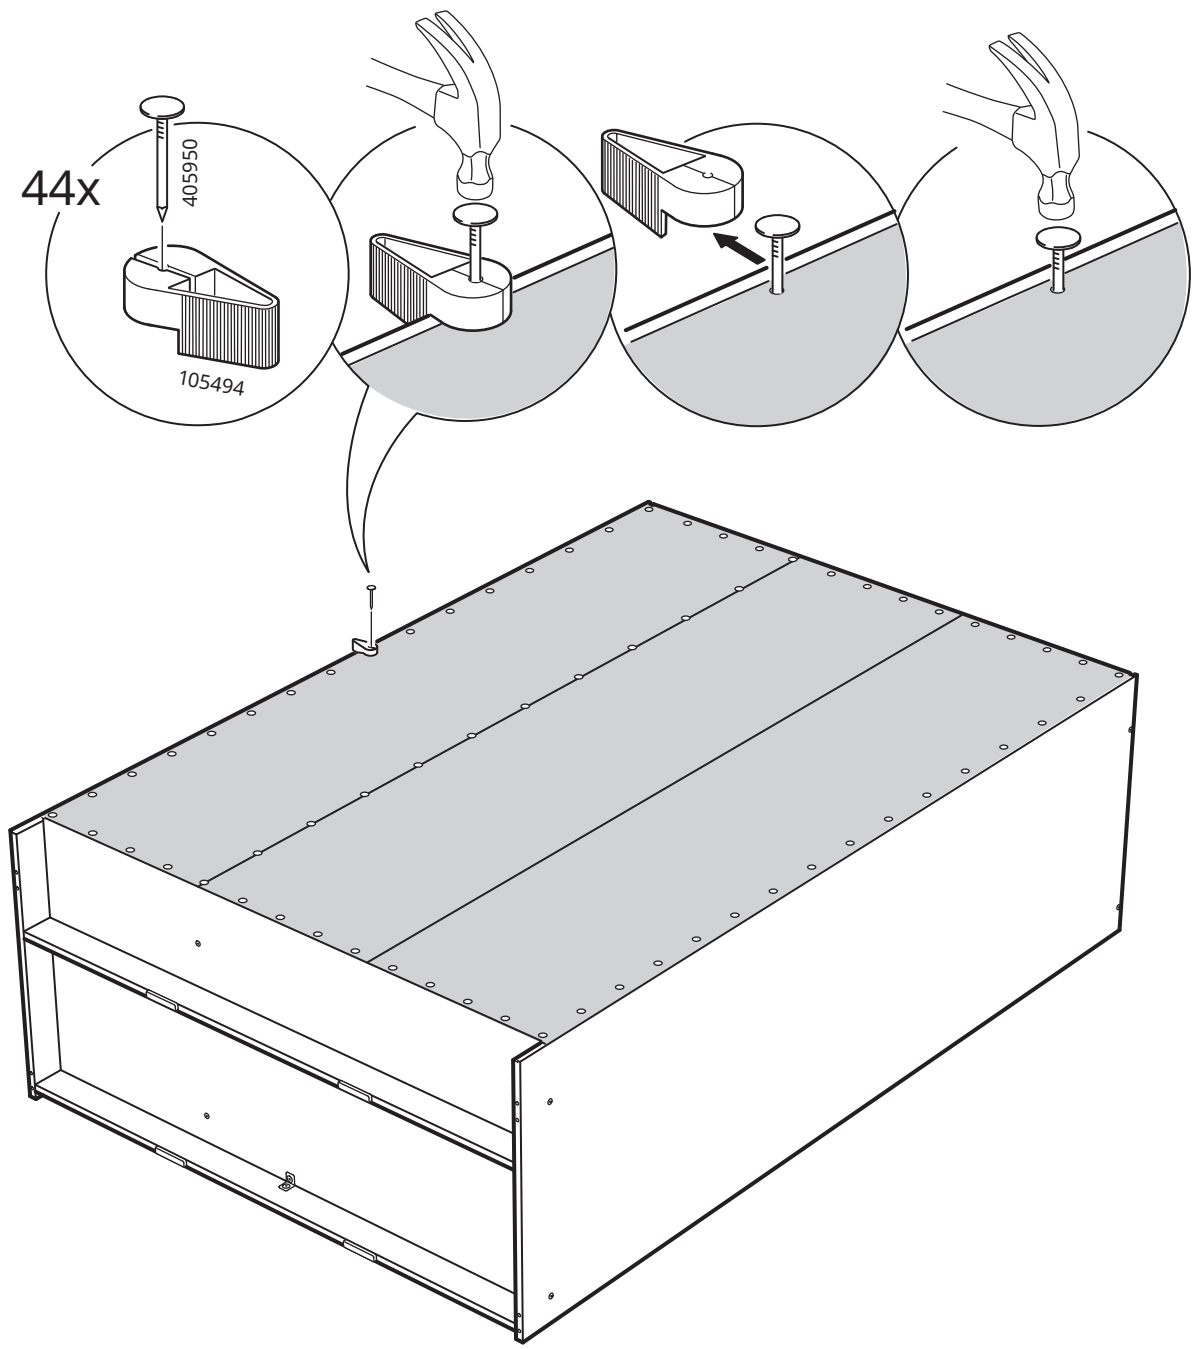 


25

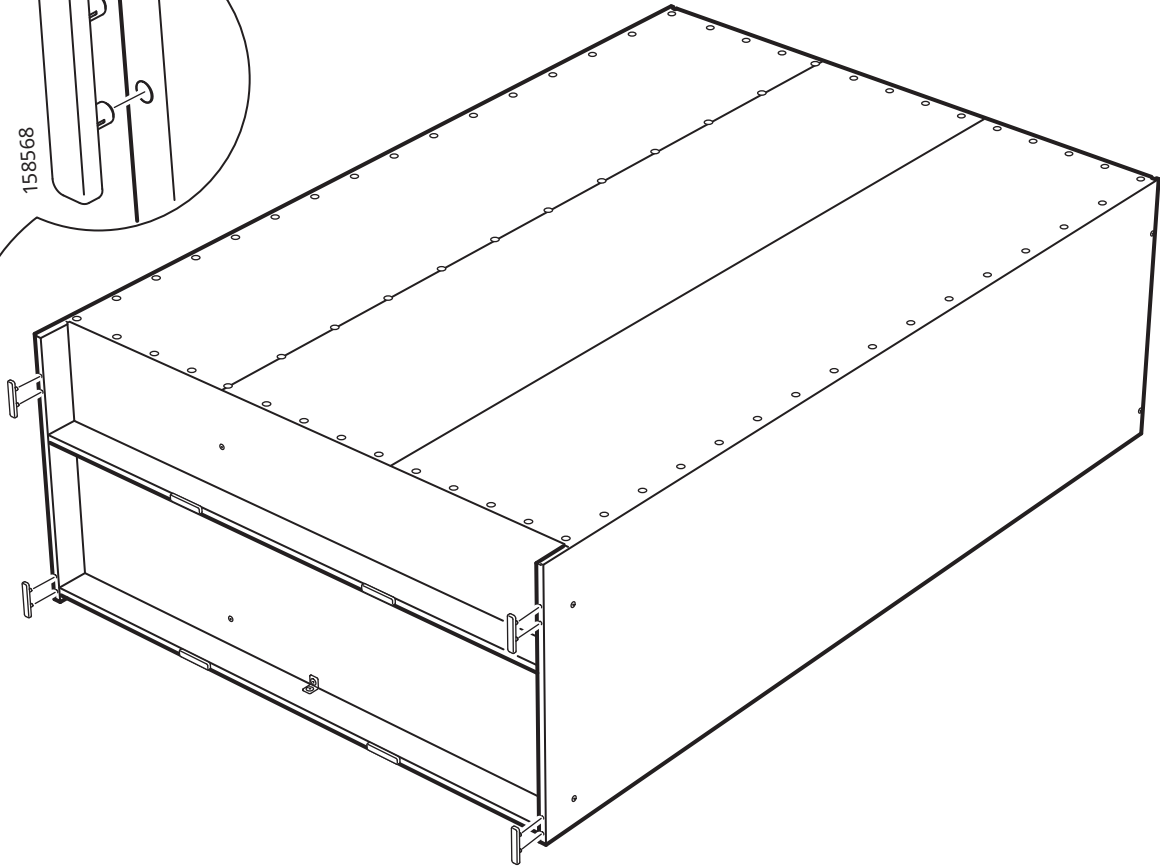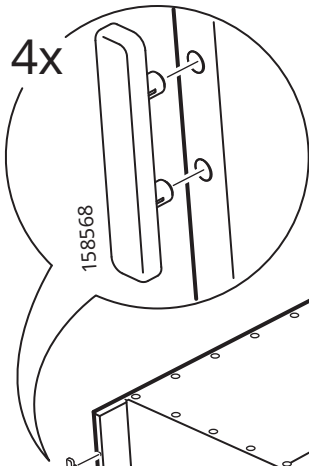  



26

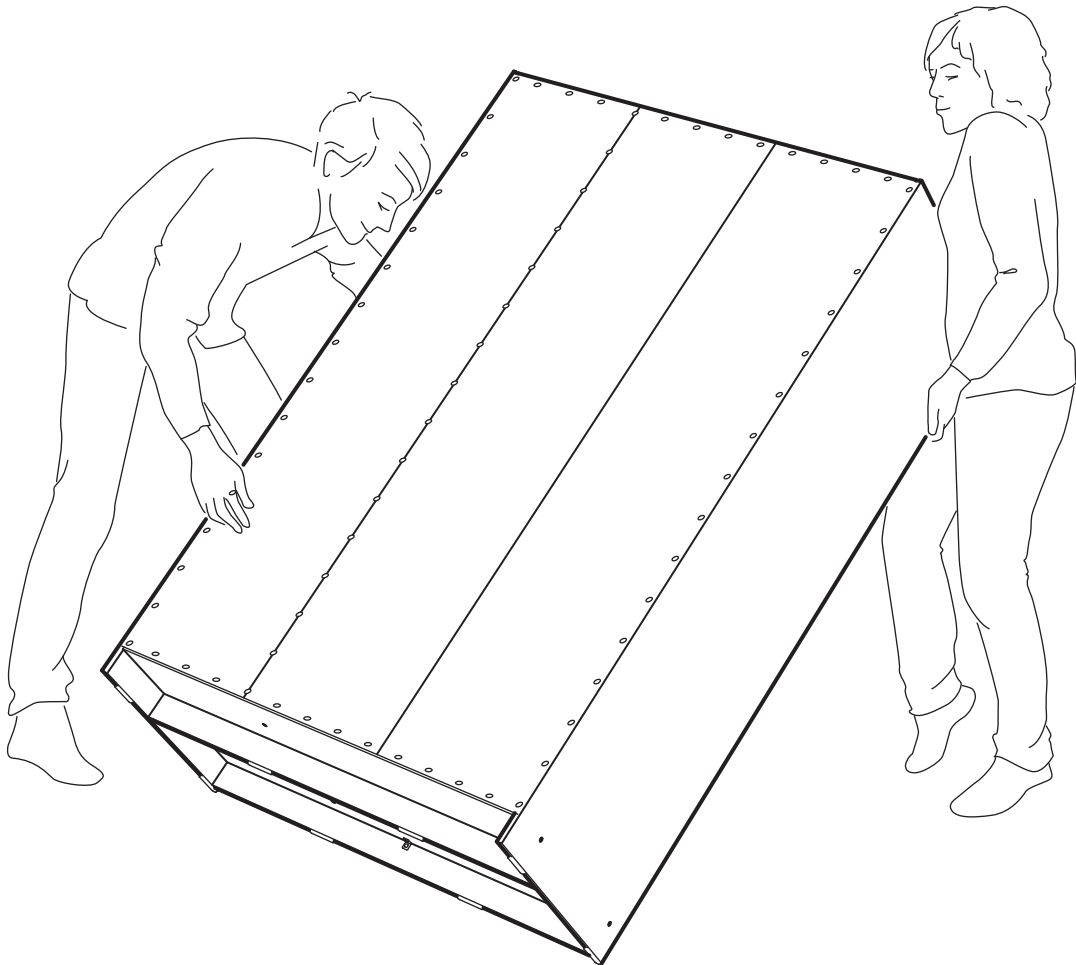 

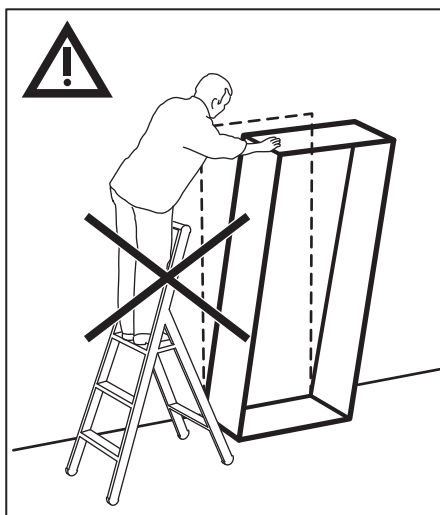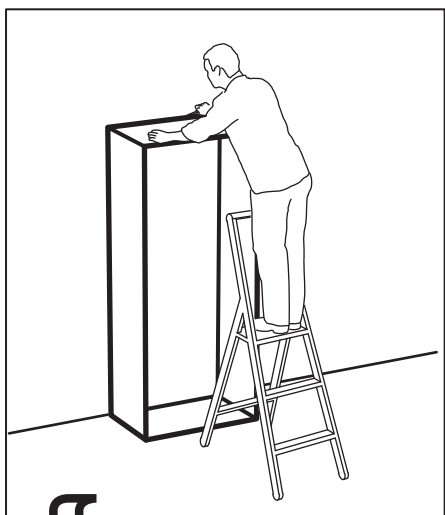  

27

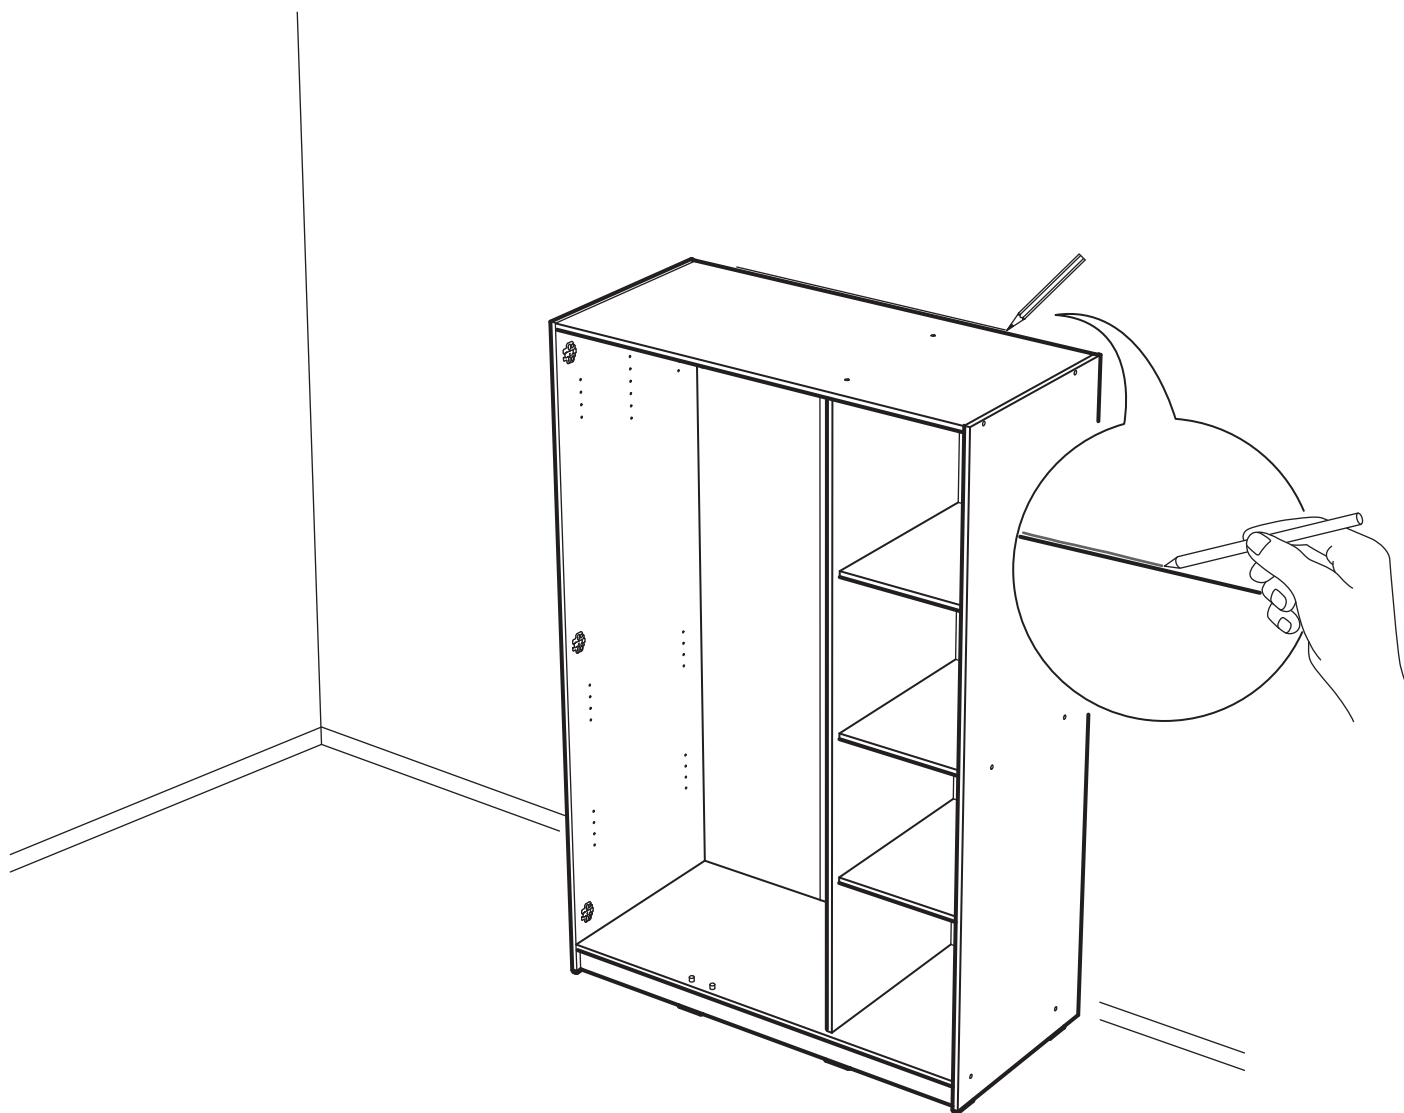 

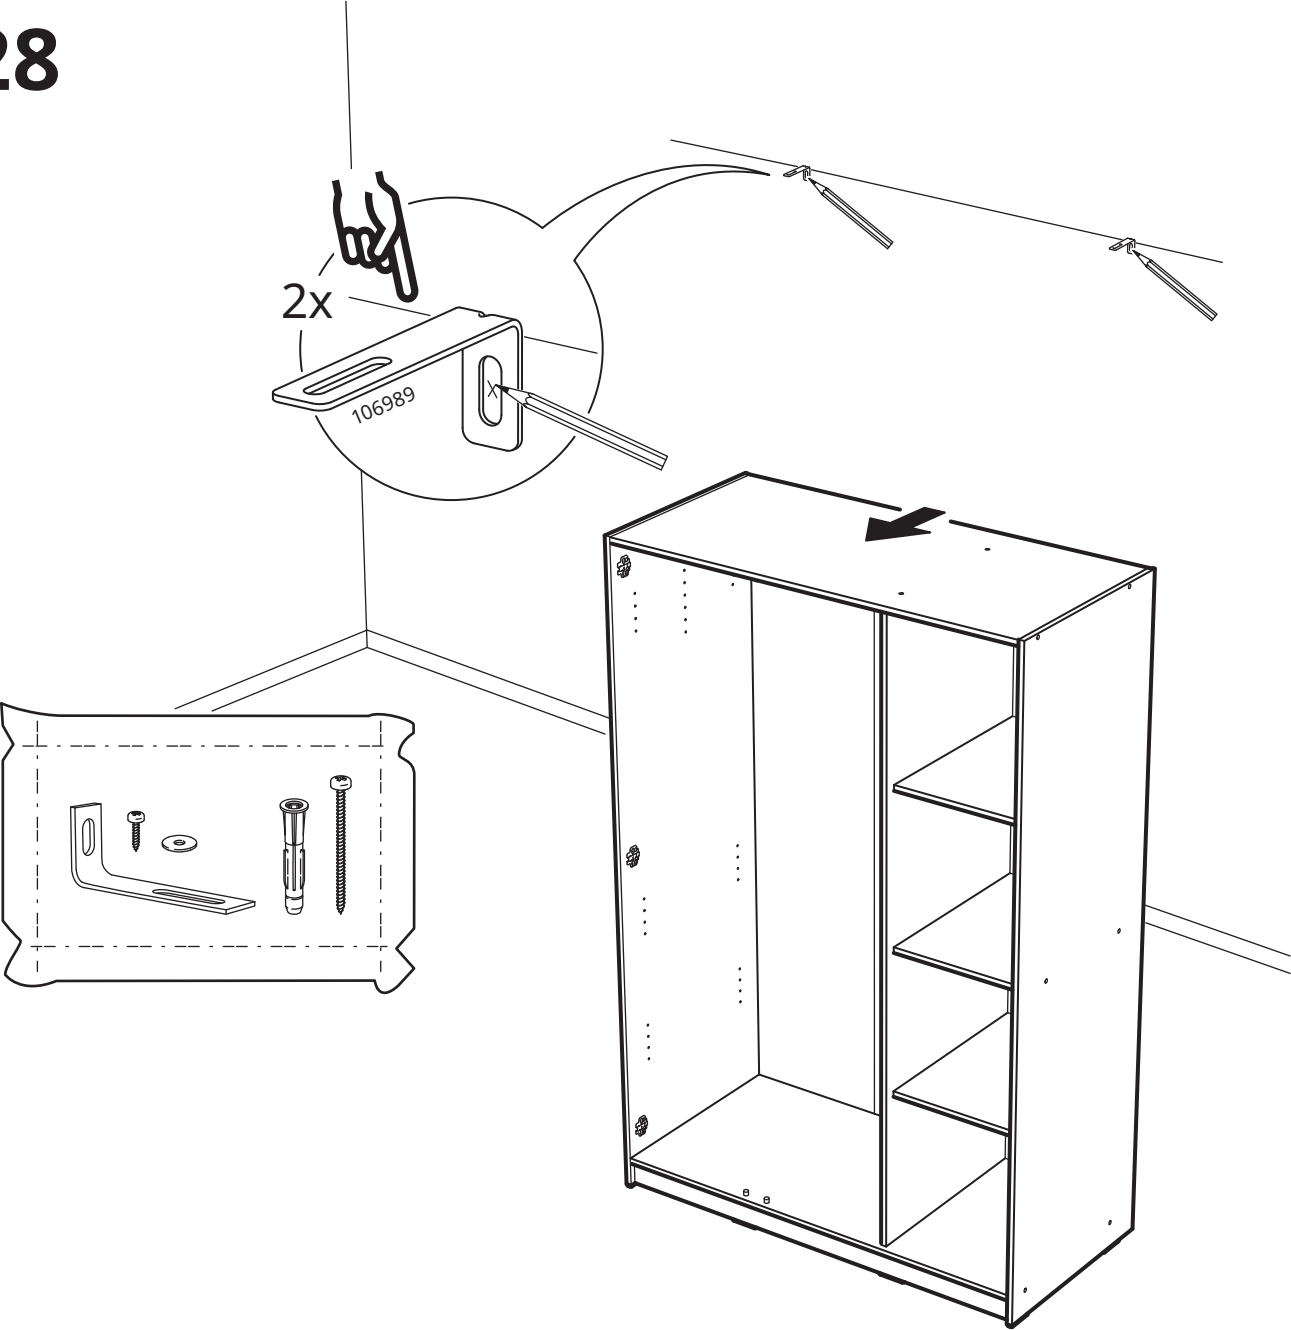 




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

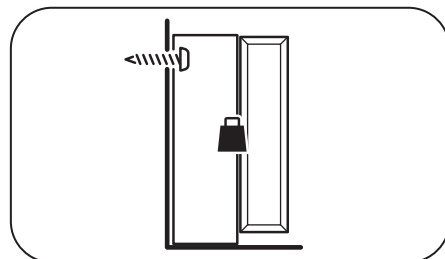

29

 
English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

עברית

הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.


A

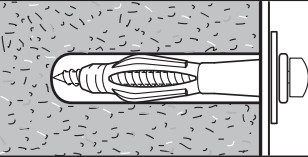


Ø 8 mm
(5/16")



 1




2

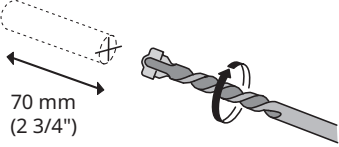 


70 mm
(2 3/4")

 3

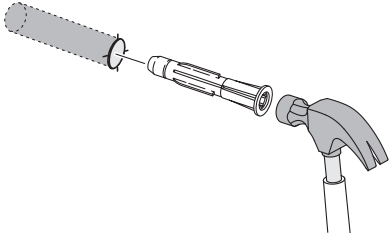


B

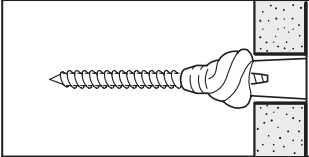 


Ø 8 mm
(5/16")



 1




2

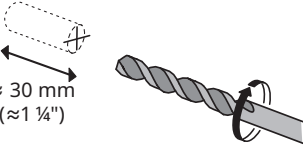 


≈ 30 mm
(≈ 1 1/4")

 3

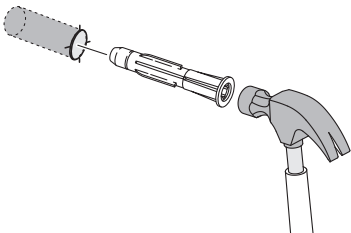


C

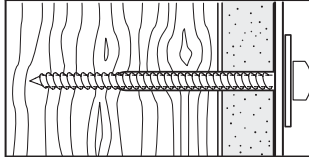 

Ø 3 mm
(1/8")



 1



2

 


≈ 30 mm
(≈ 1 1/4")


3




30

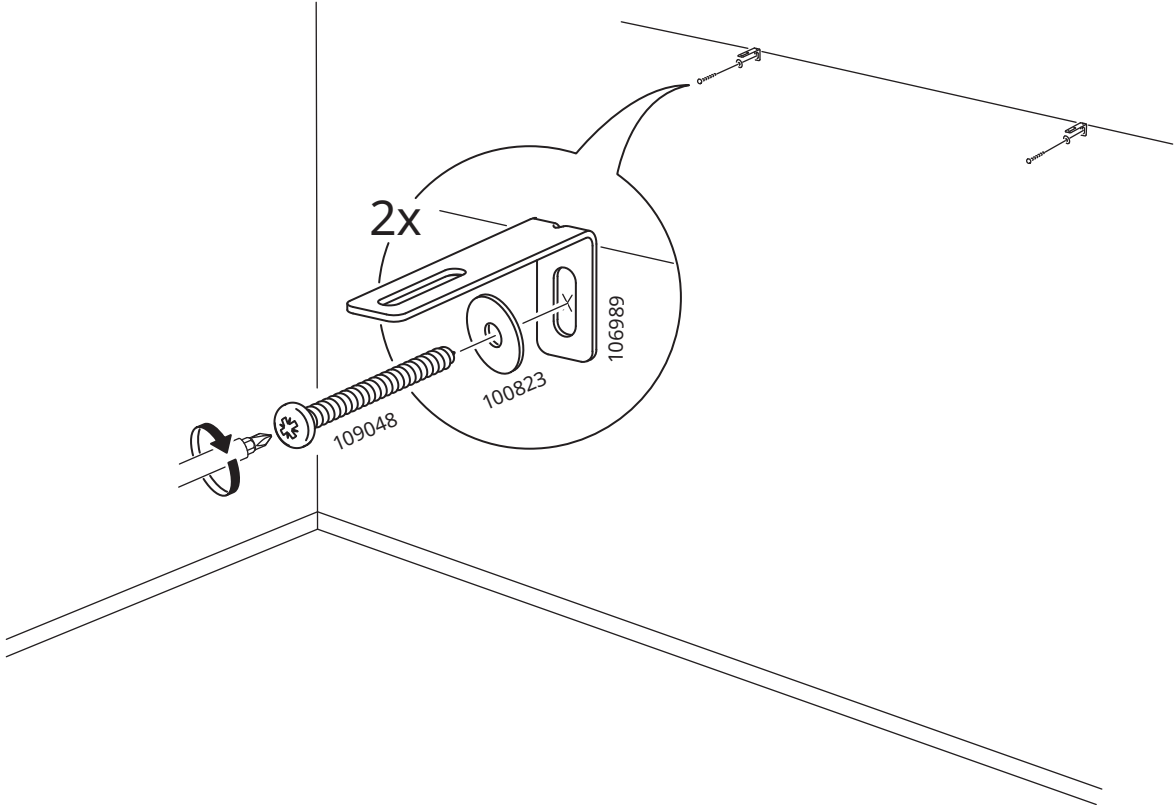


31

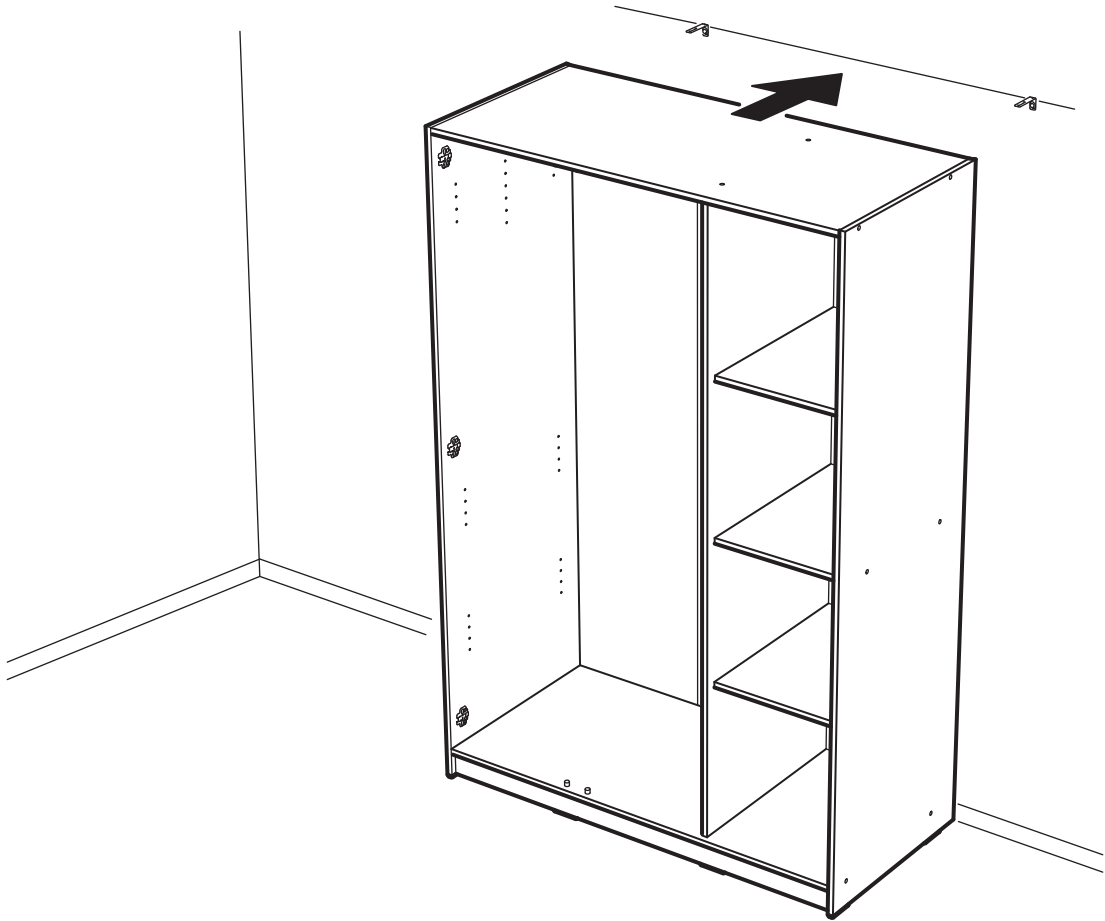 


32

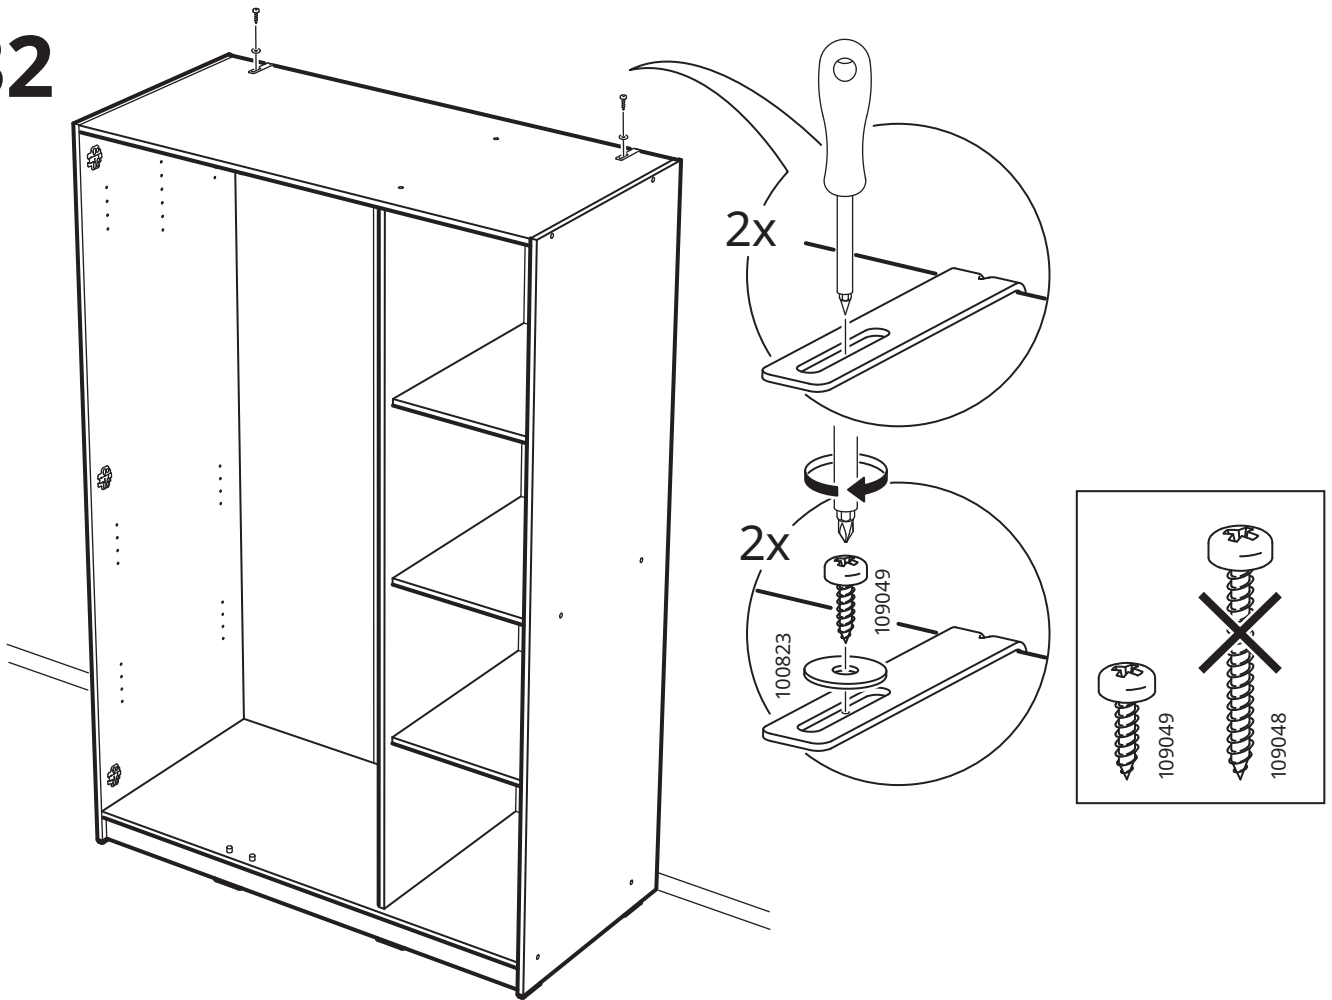 

33

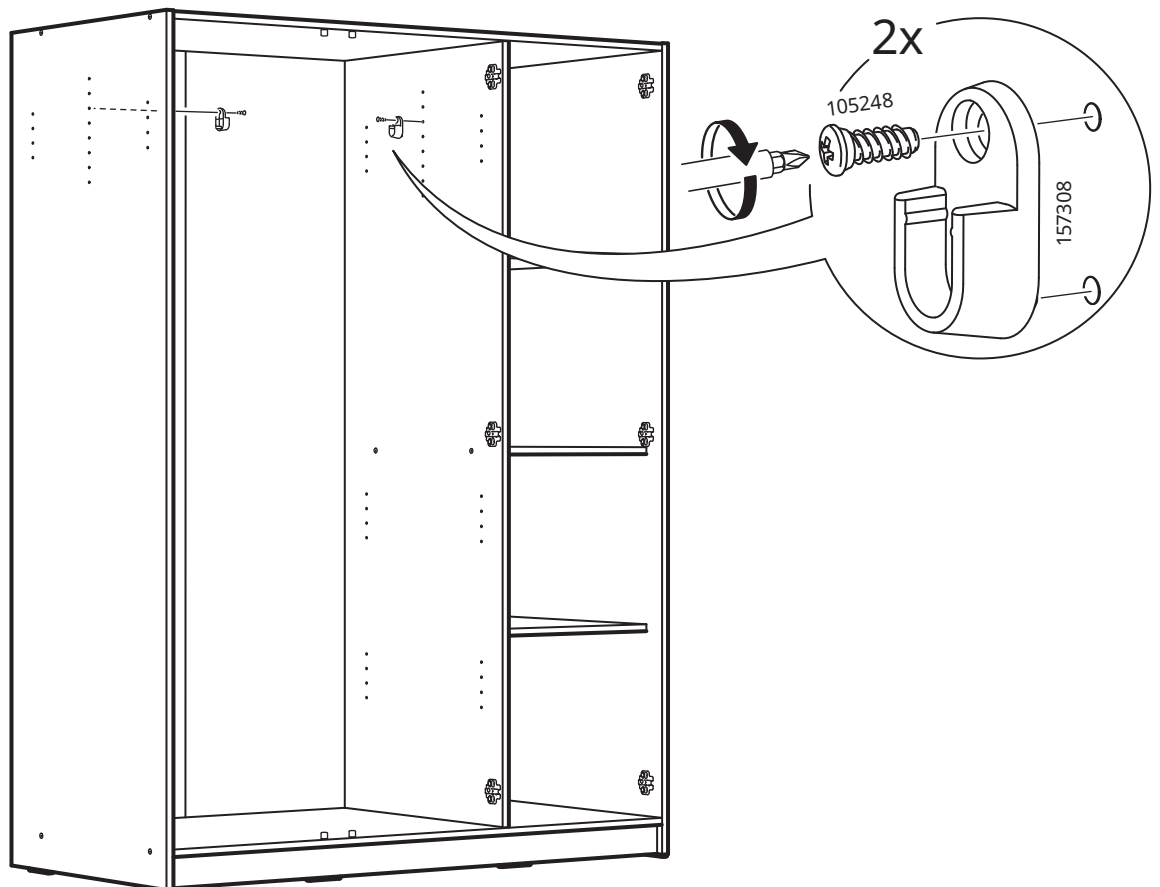 

34

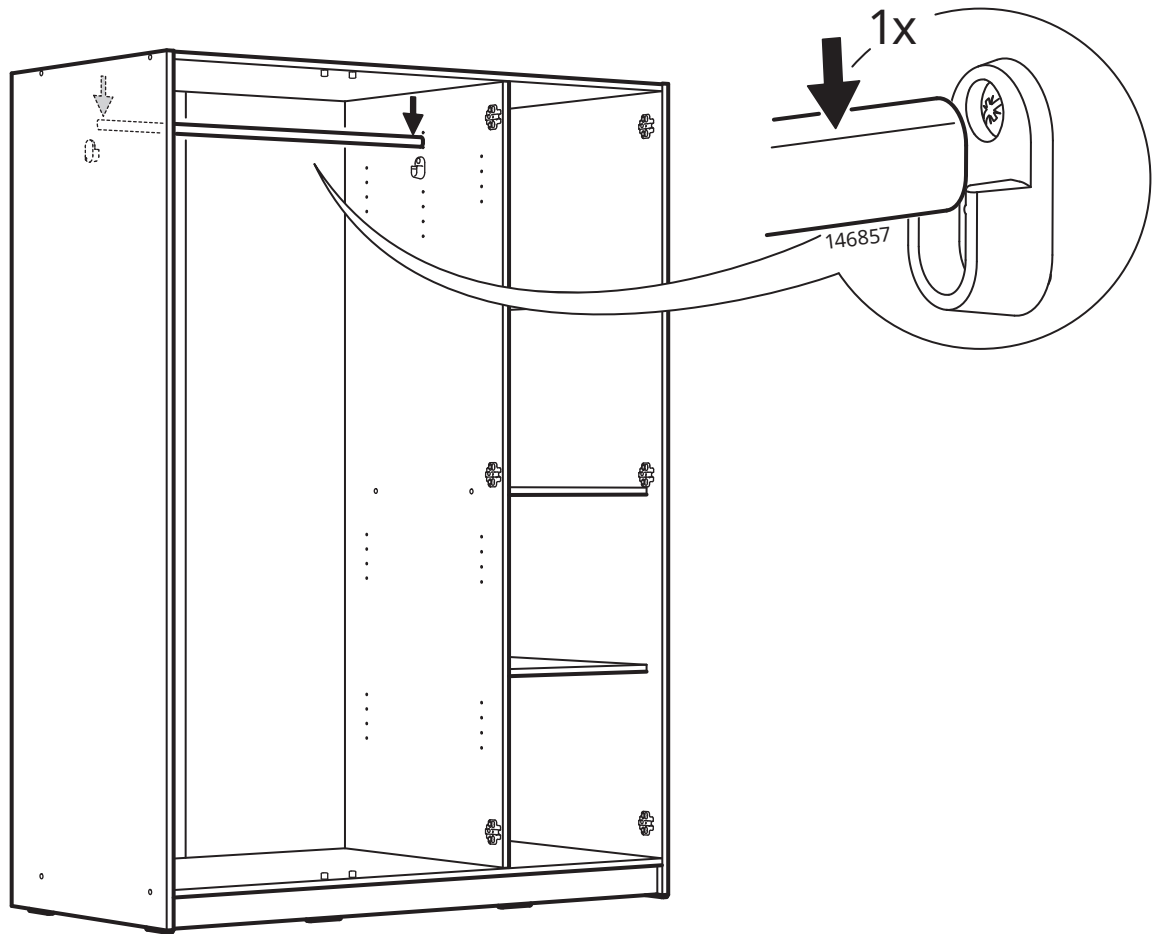 

35

