 


SKRUVBY

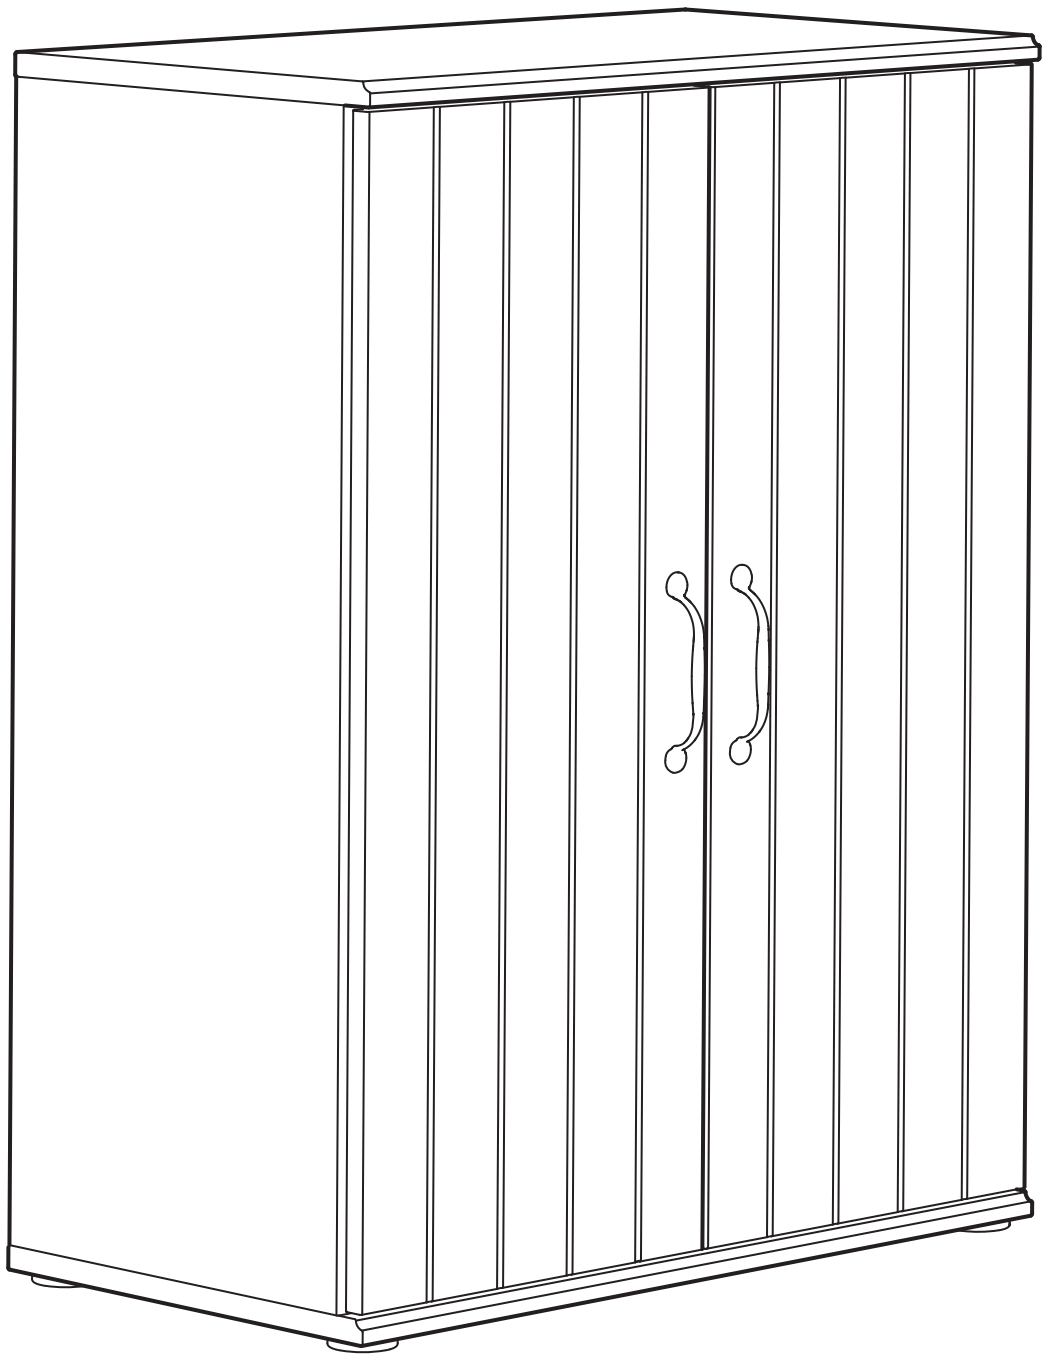

Design and Quality
IKEA of Sweden



English

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, or shelves.

עברית

אזהרה

נפילת הרהיט עלולה לגרום לפגיעה גופנית חמורה או קטלנית.

יש לקבע את הרהיט לקיר באמצעות אבזרי הקיבוע המצורפים.

על-מנת למזער את סכנת הפגיעה הגופנית או המוות מנפילת רהיטים:

מקמו את הפריטים הכבדים ביותר במגירה התחתונה.

 
 
 
 
הימנעו מלהניח טלוויזיות או פריטים כבדים אחרים על מוצר זה.

 
 
 
 
 
אין לאפשר לילדים לטפס על המגירות, הדלתות או המדפים.








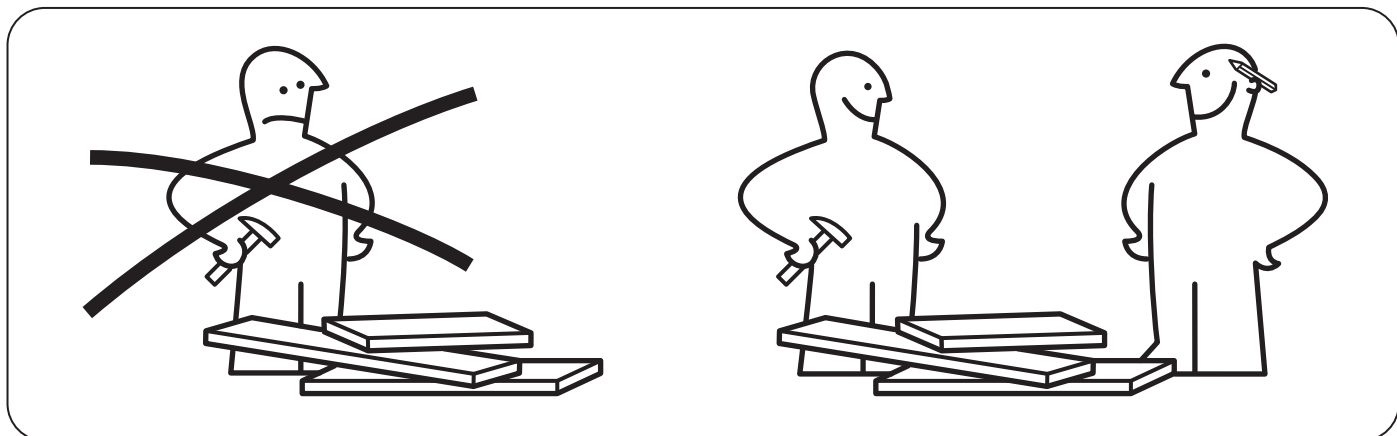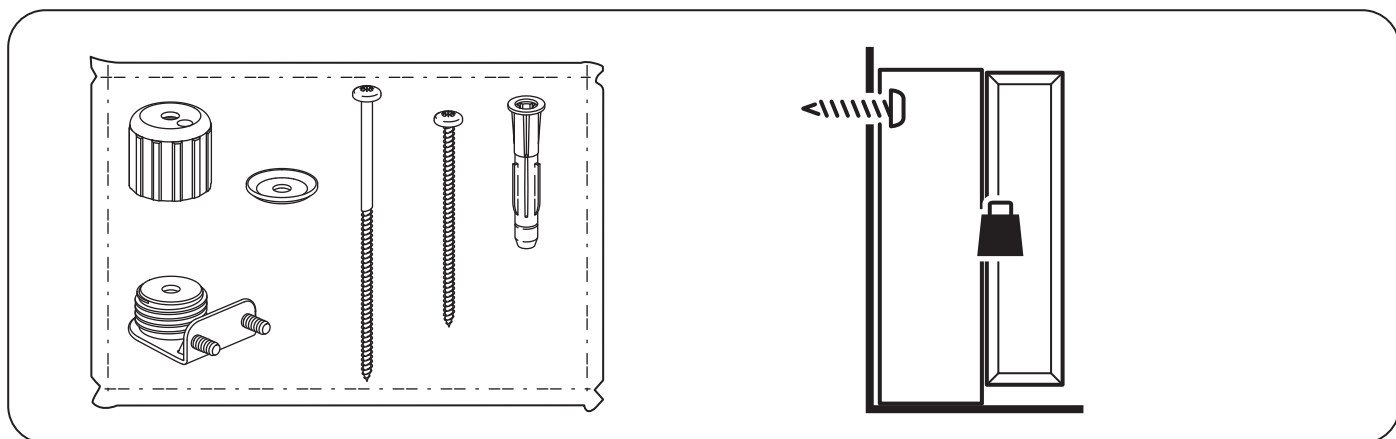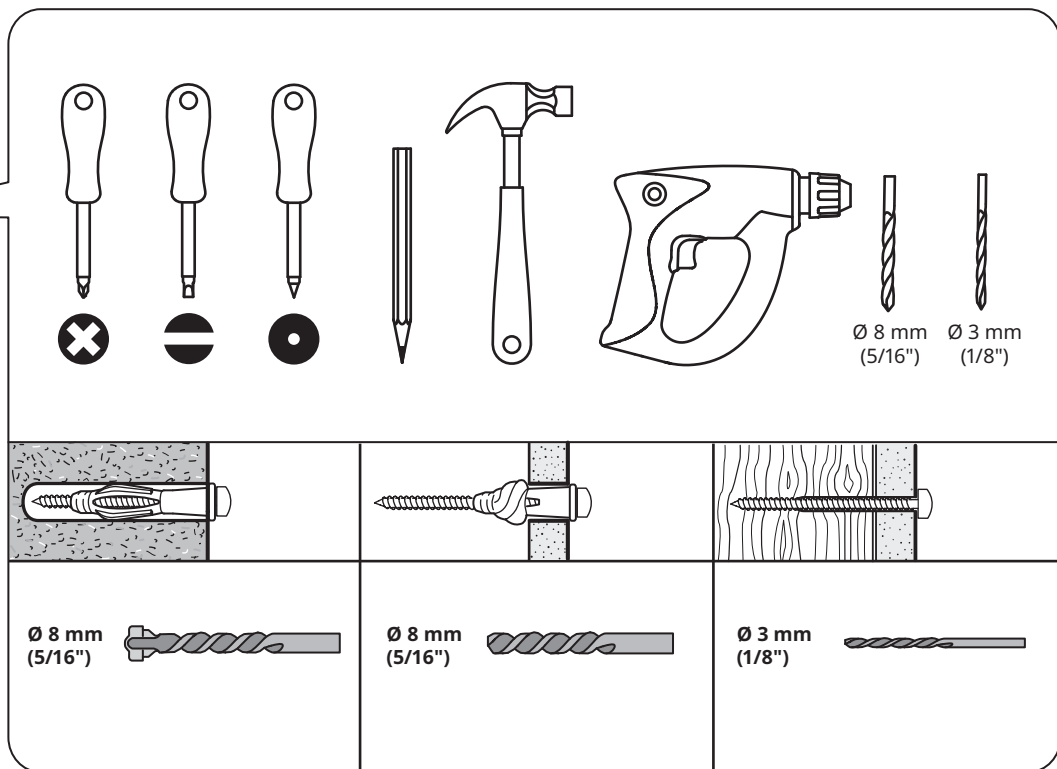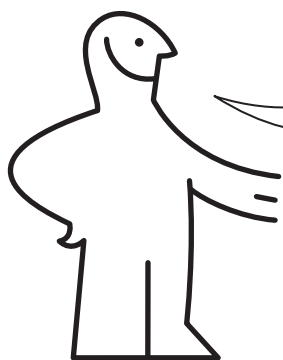

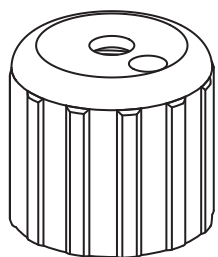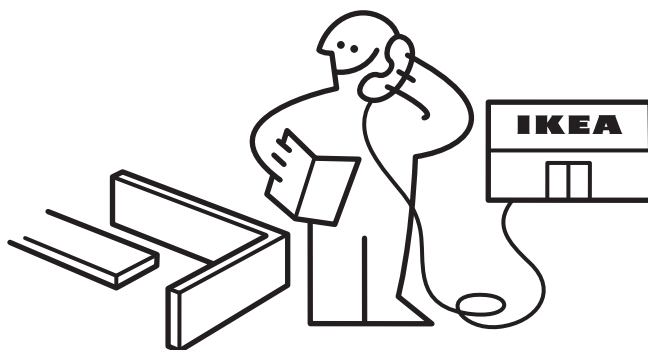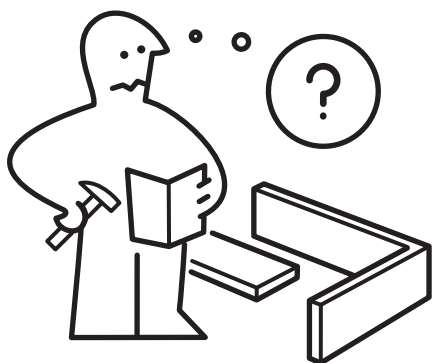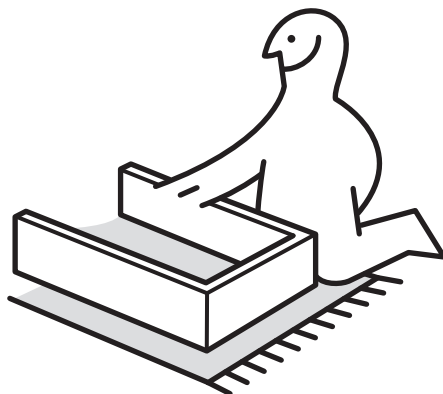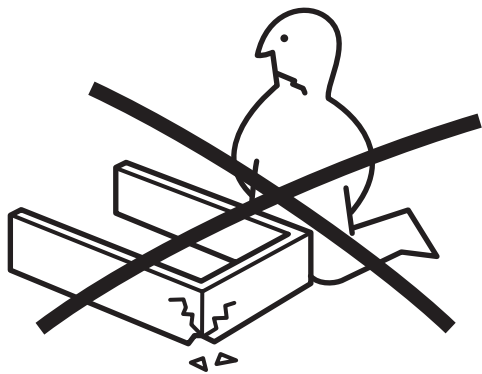


150689

 2x




126916

 2x

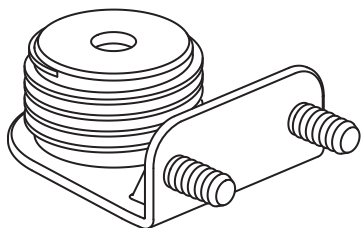


150688

 2x




147968

 2x



158469

 2x



121714

2x



16



10047135

8x



 
100400

4x




101345

8x

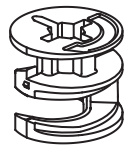

10078589
10069936

 8x

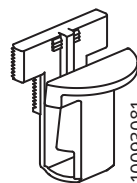


10093081

10x



10093082

 10x

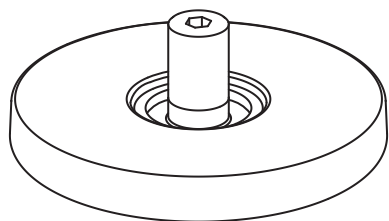


152676

4x




10075382
10051660

 8x

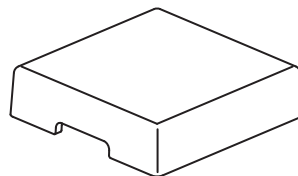


133304
133303

 2x




104663

 2x

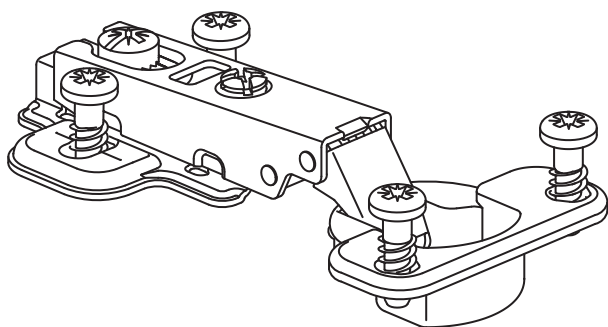

10071303

 
4x

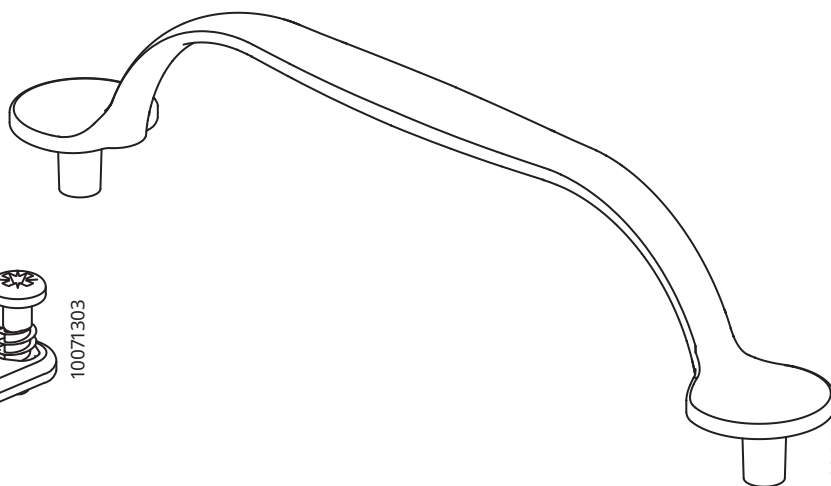


130417

2x

 
1

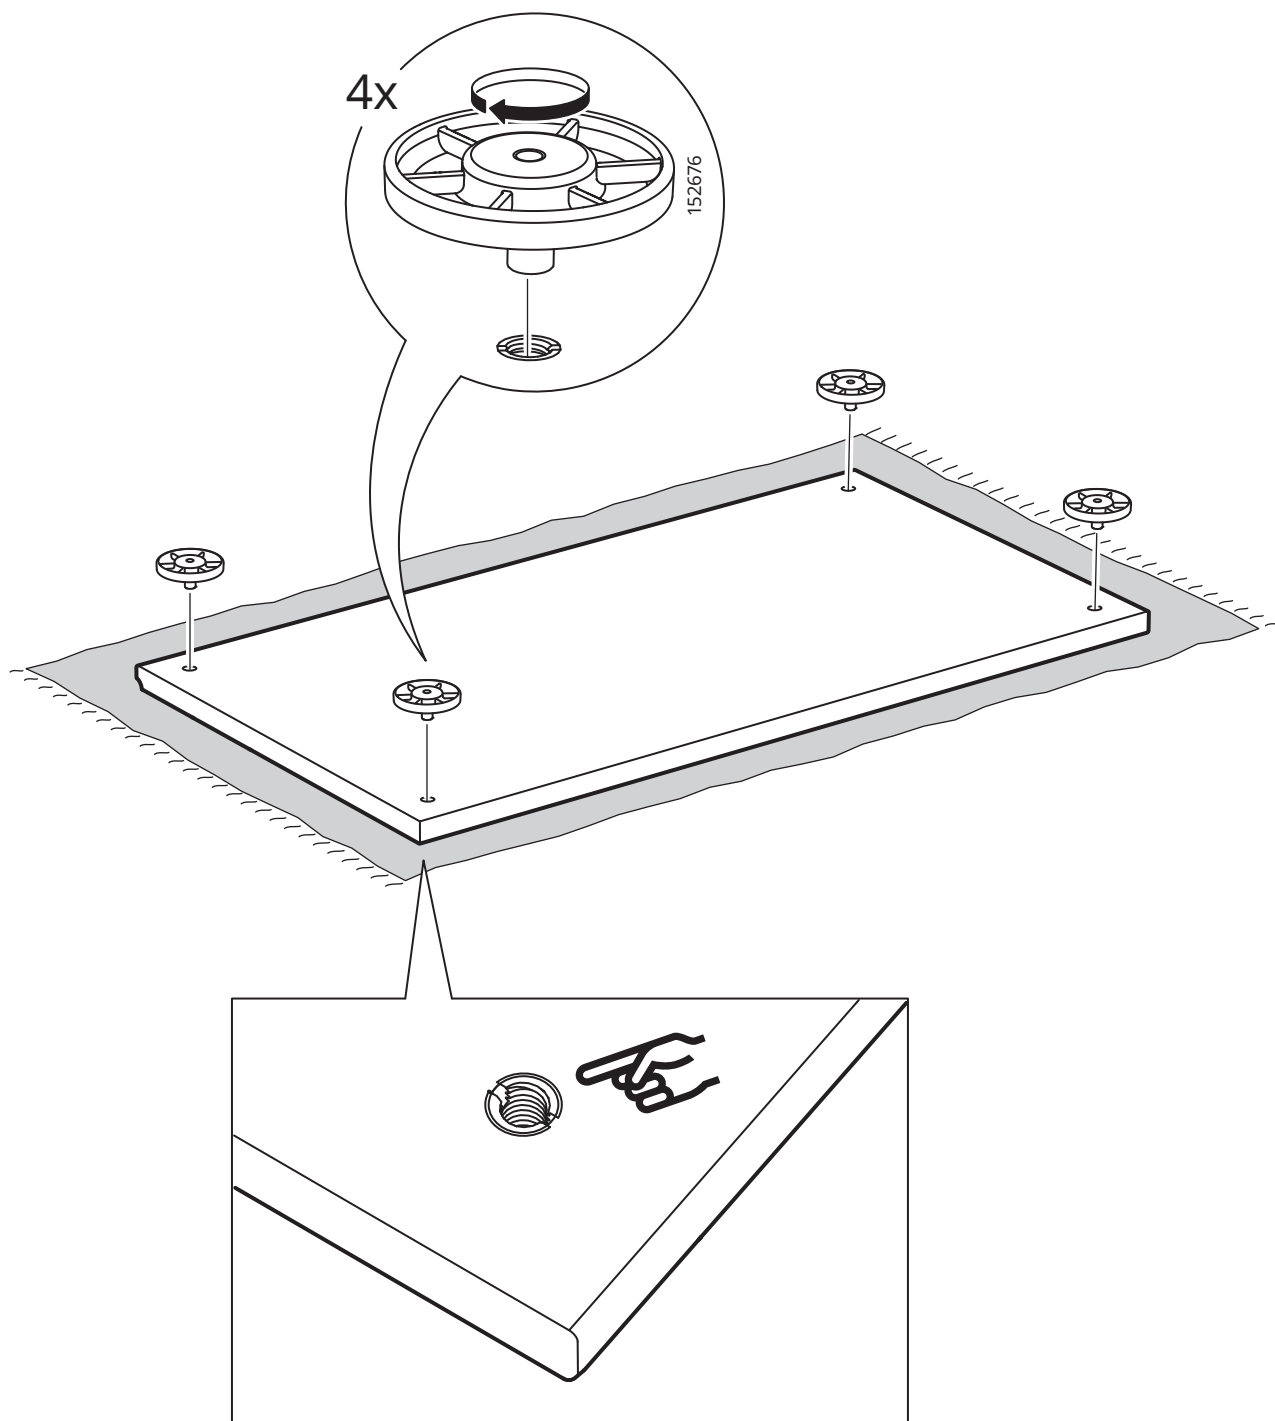


2

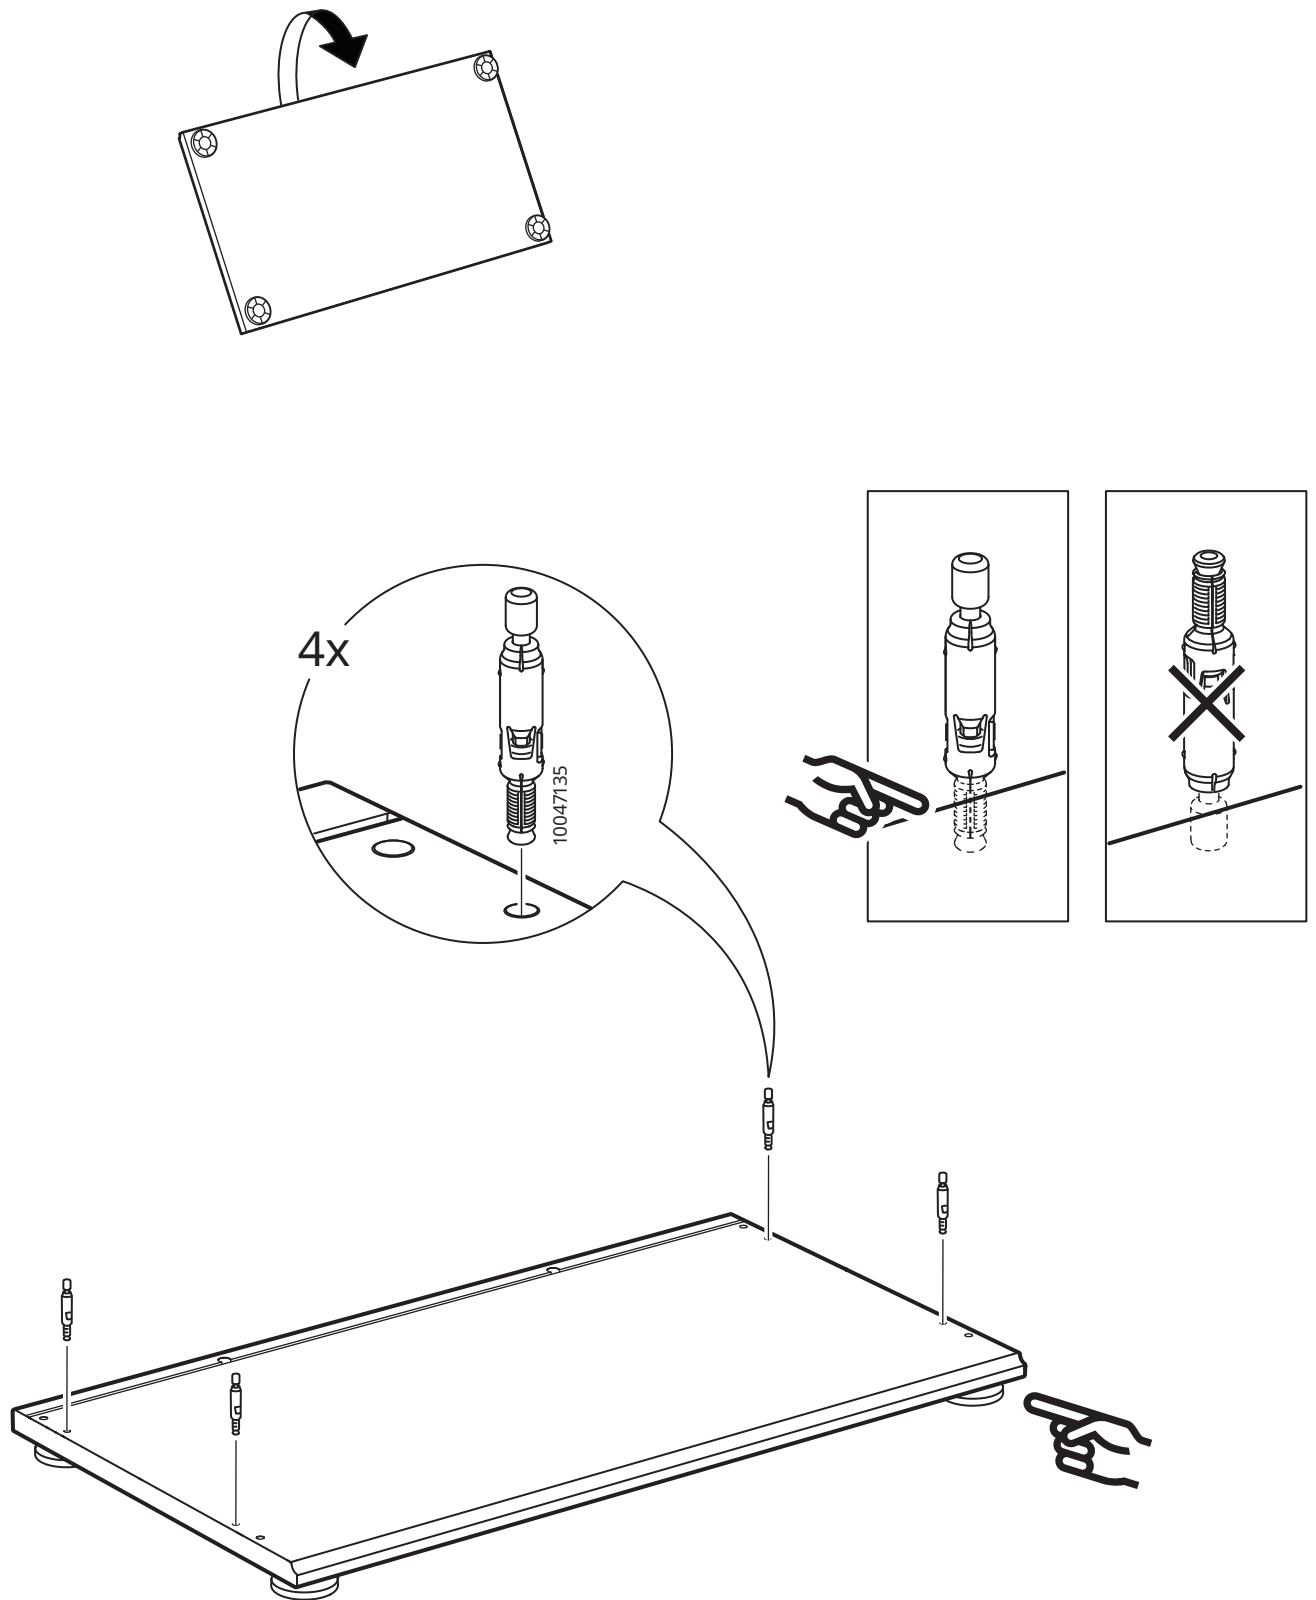 


3

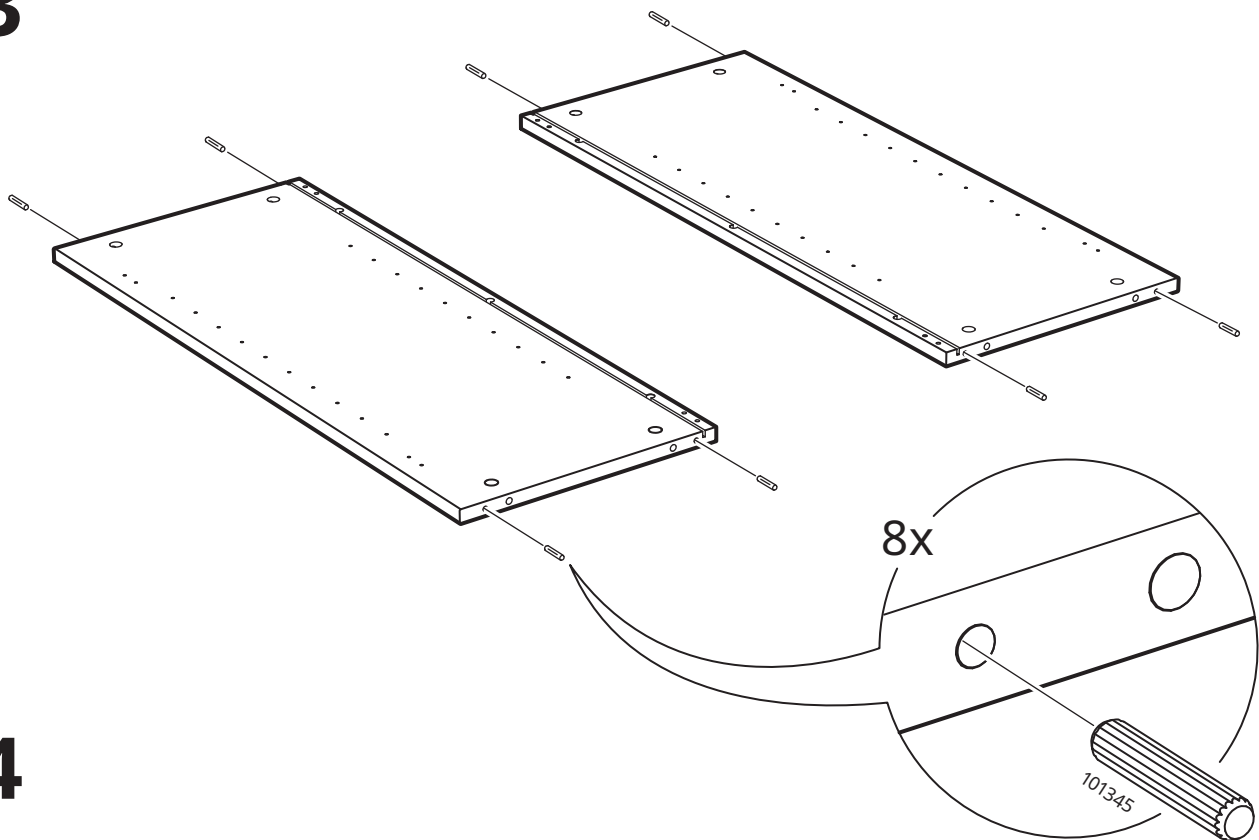 


4

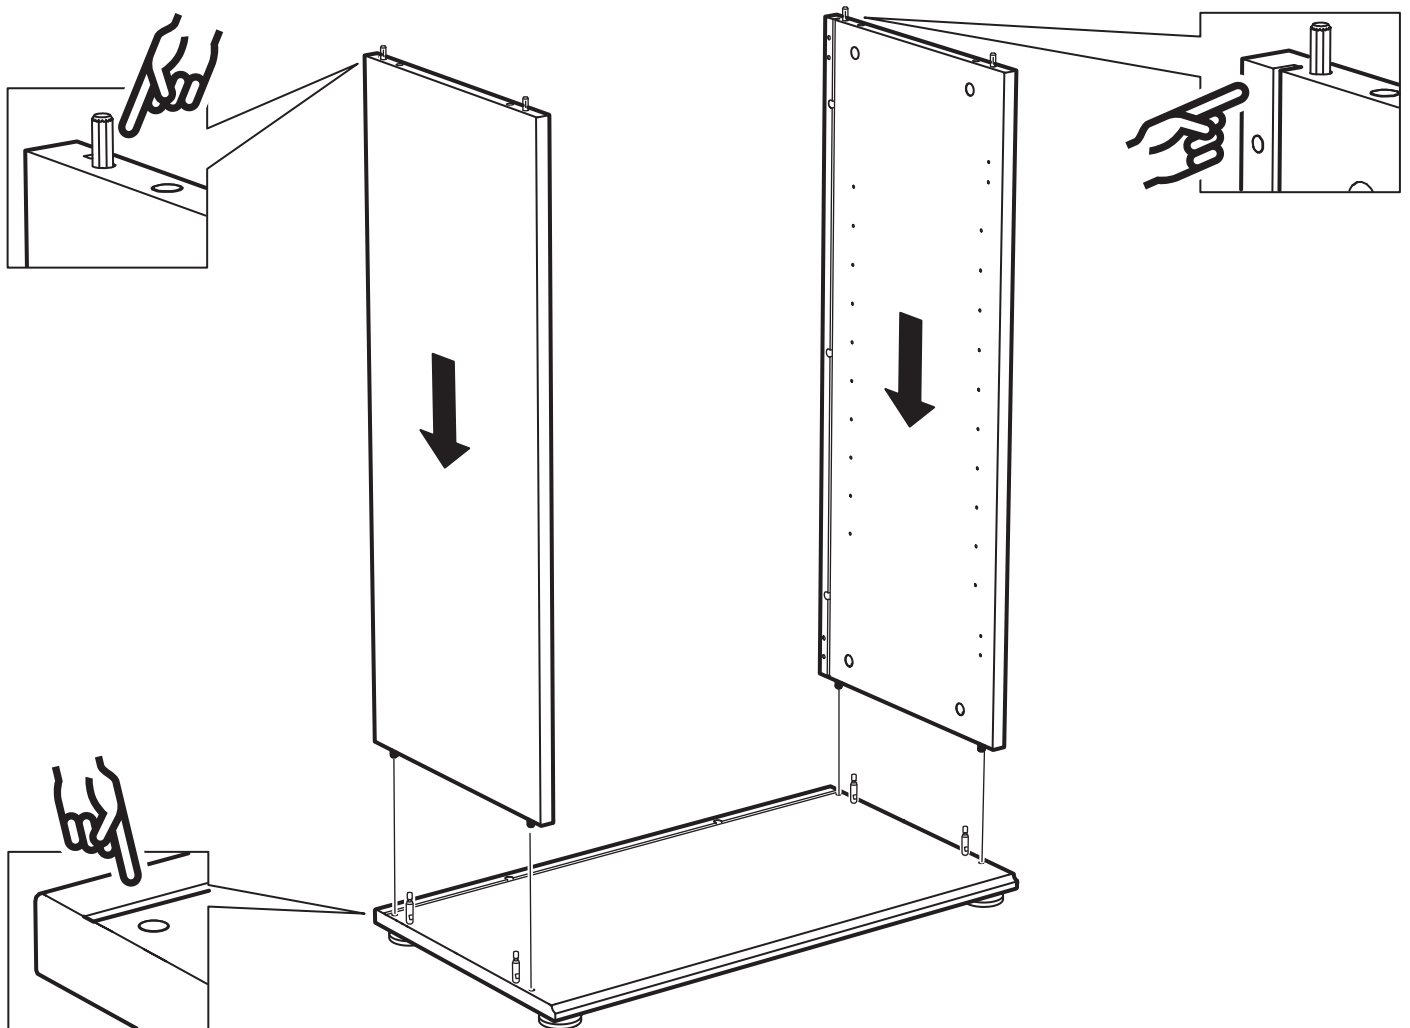 


5

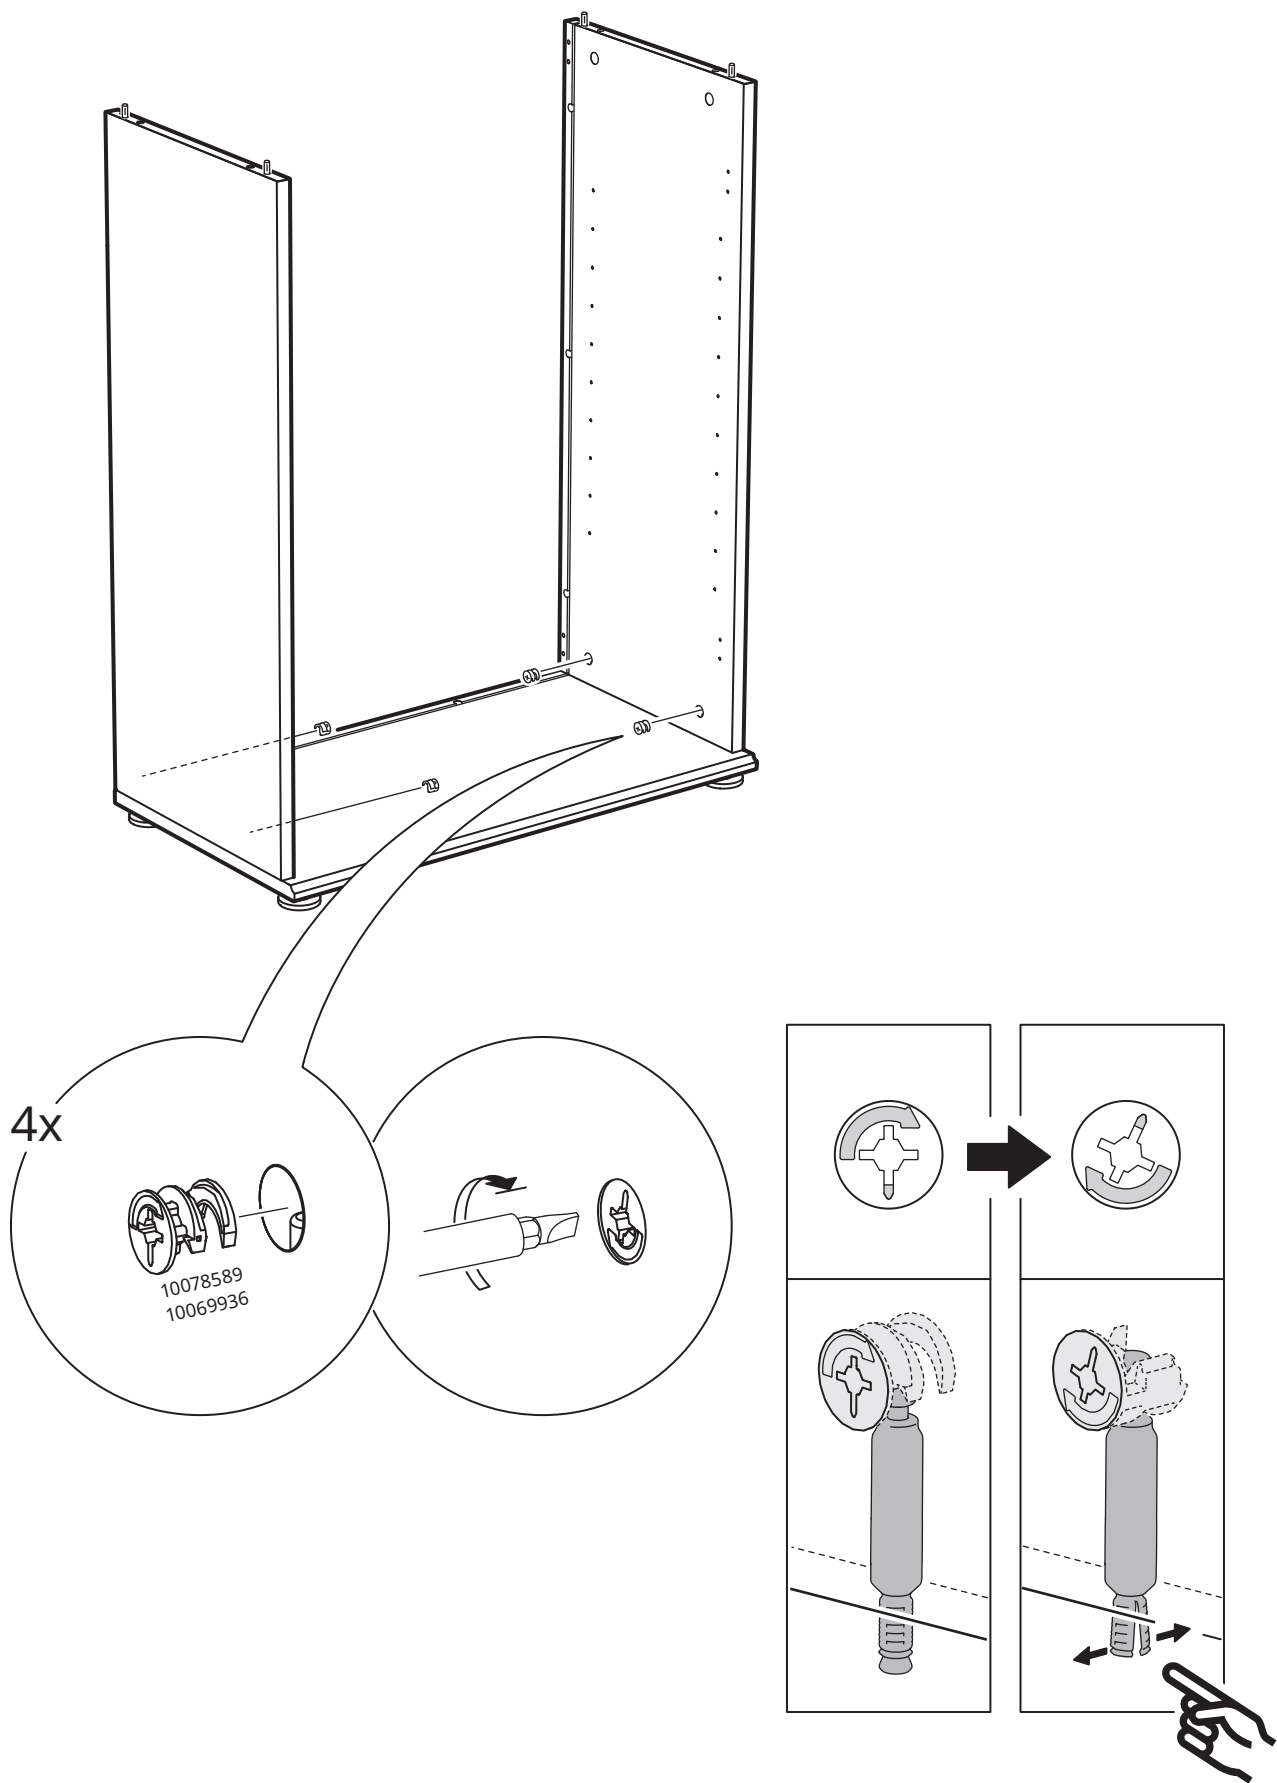 


6

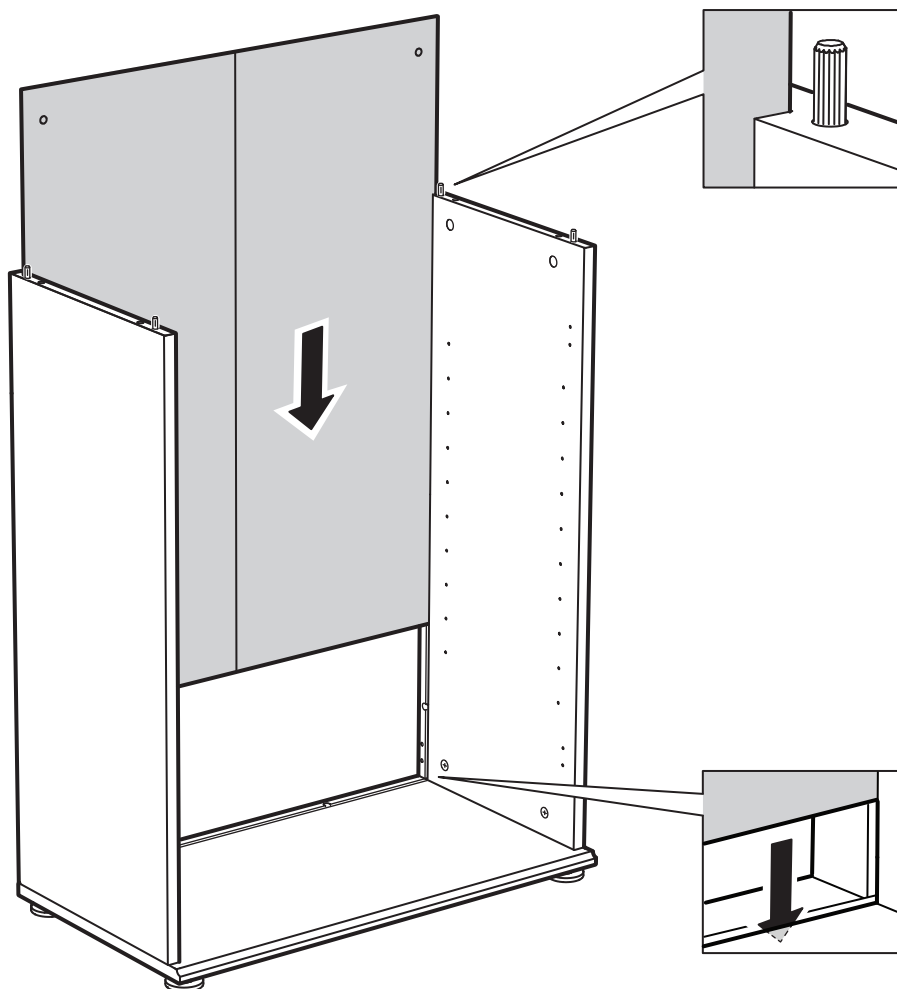 


7

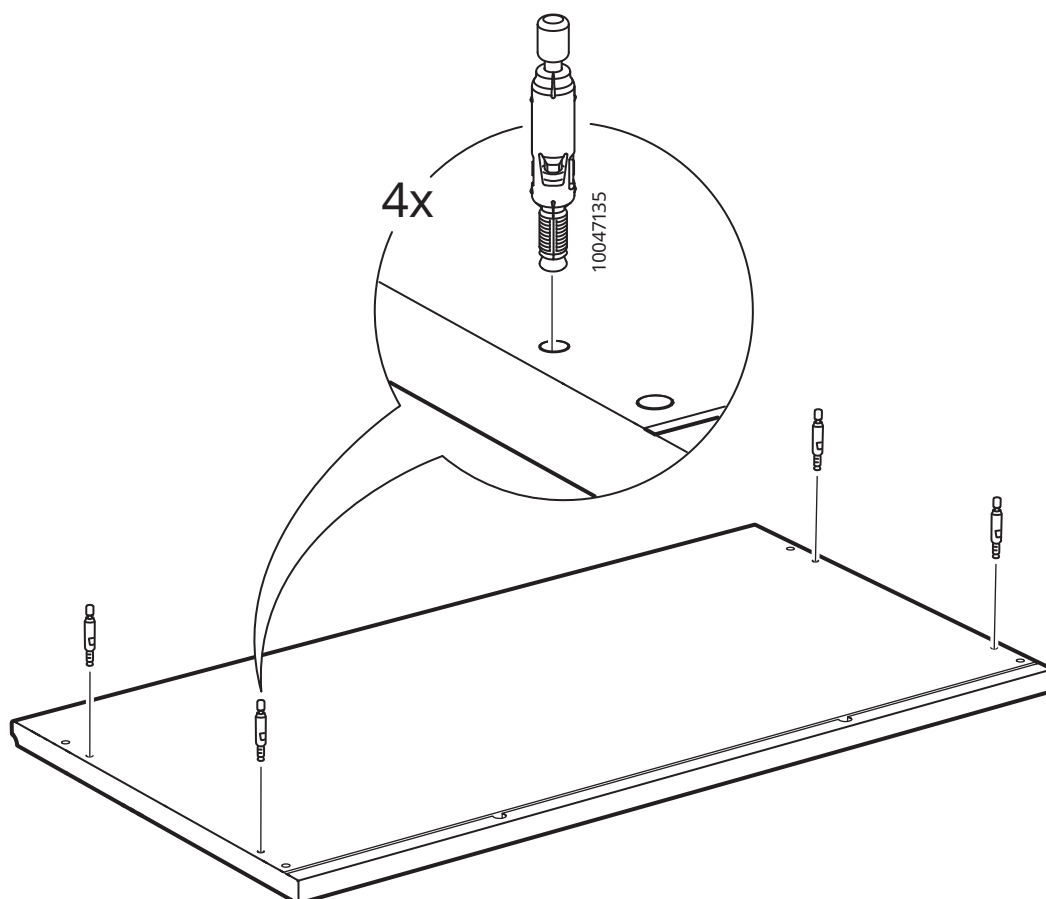 


8

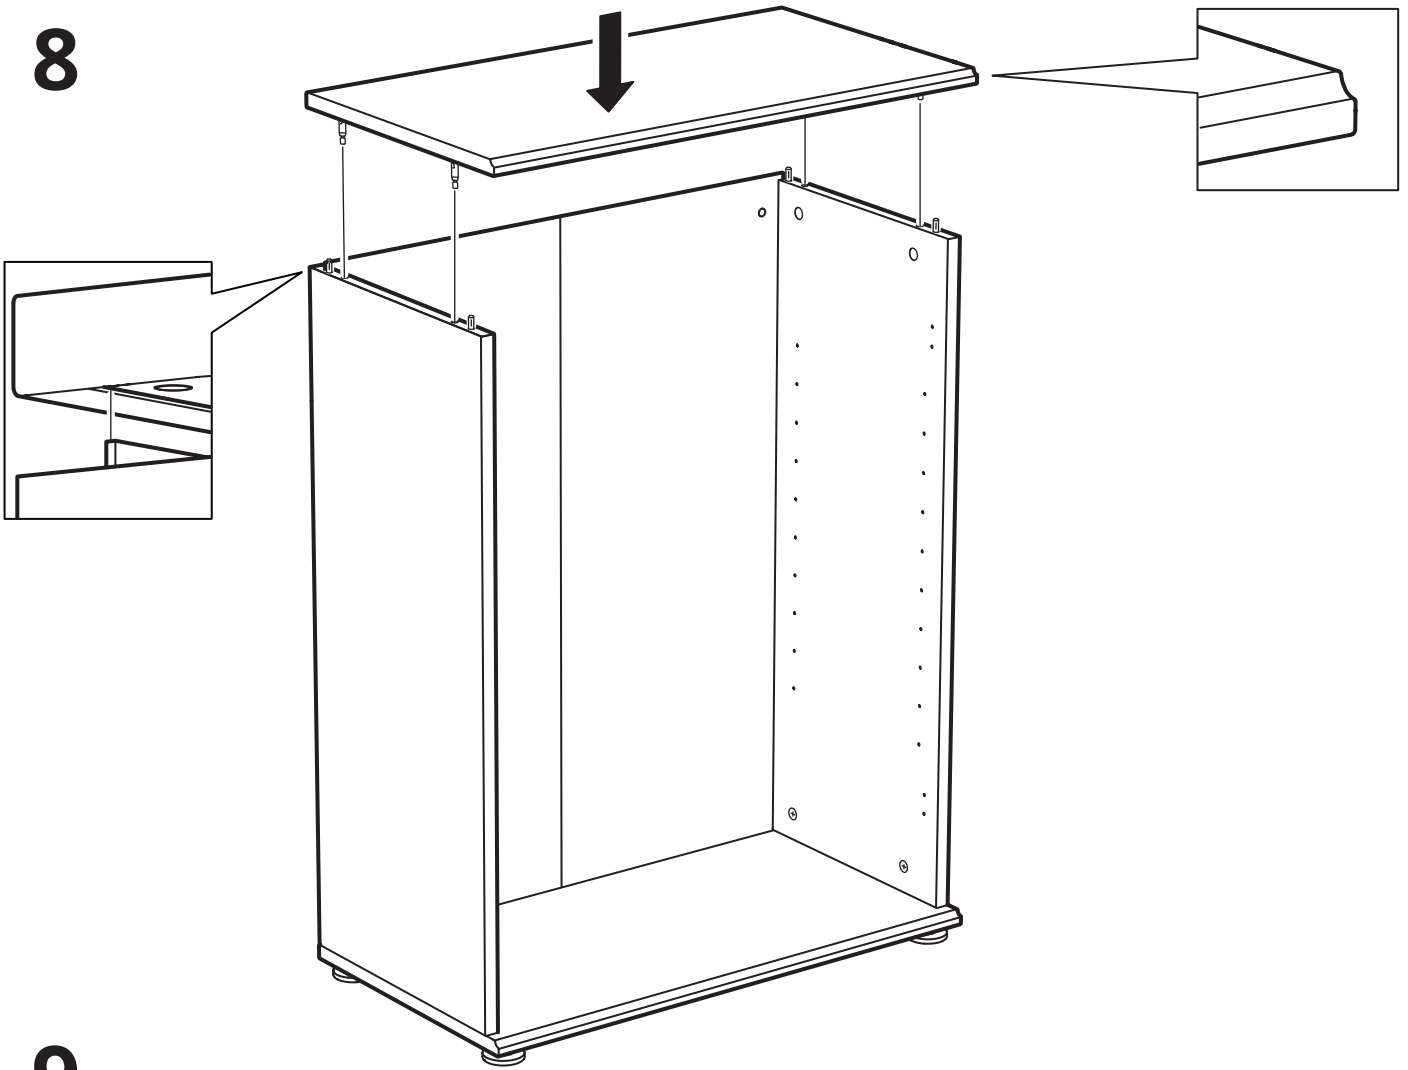 



9


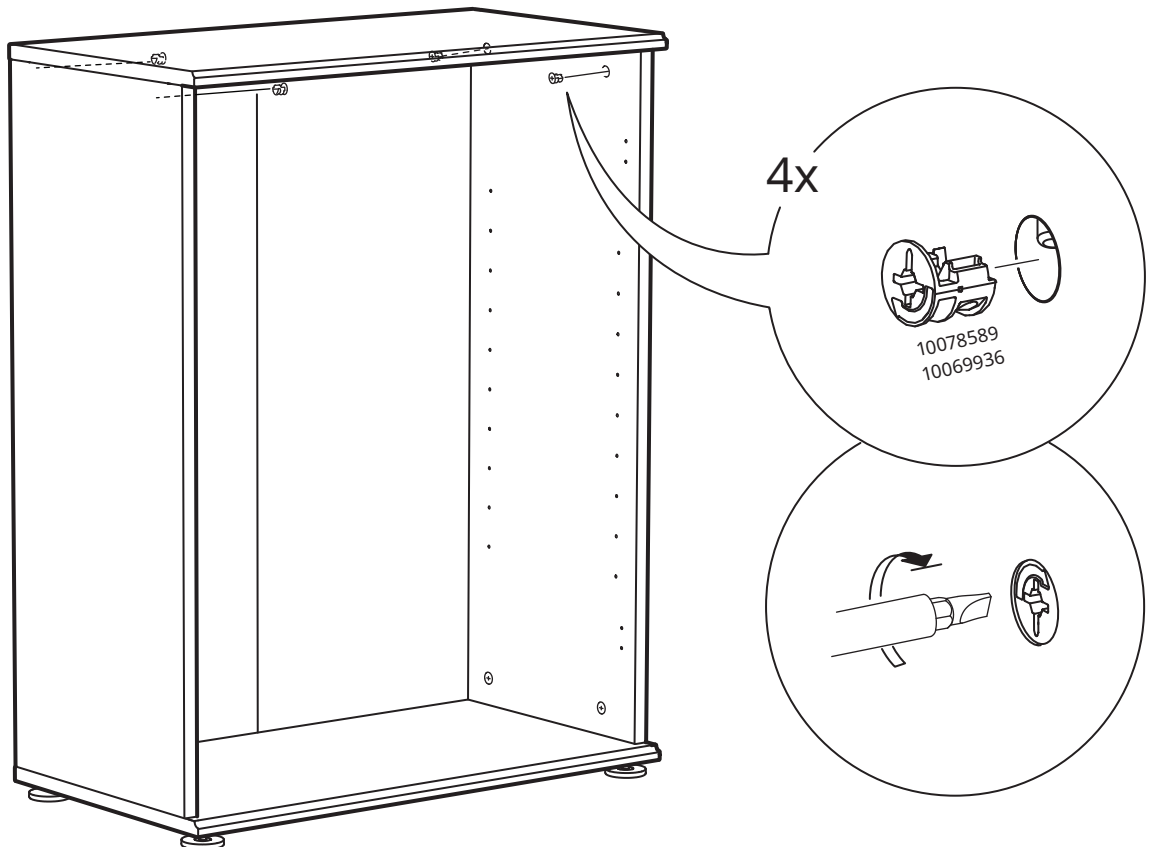 


10

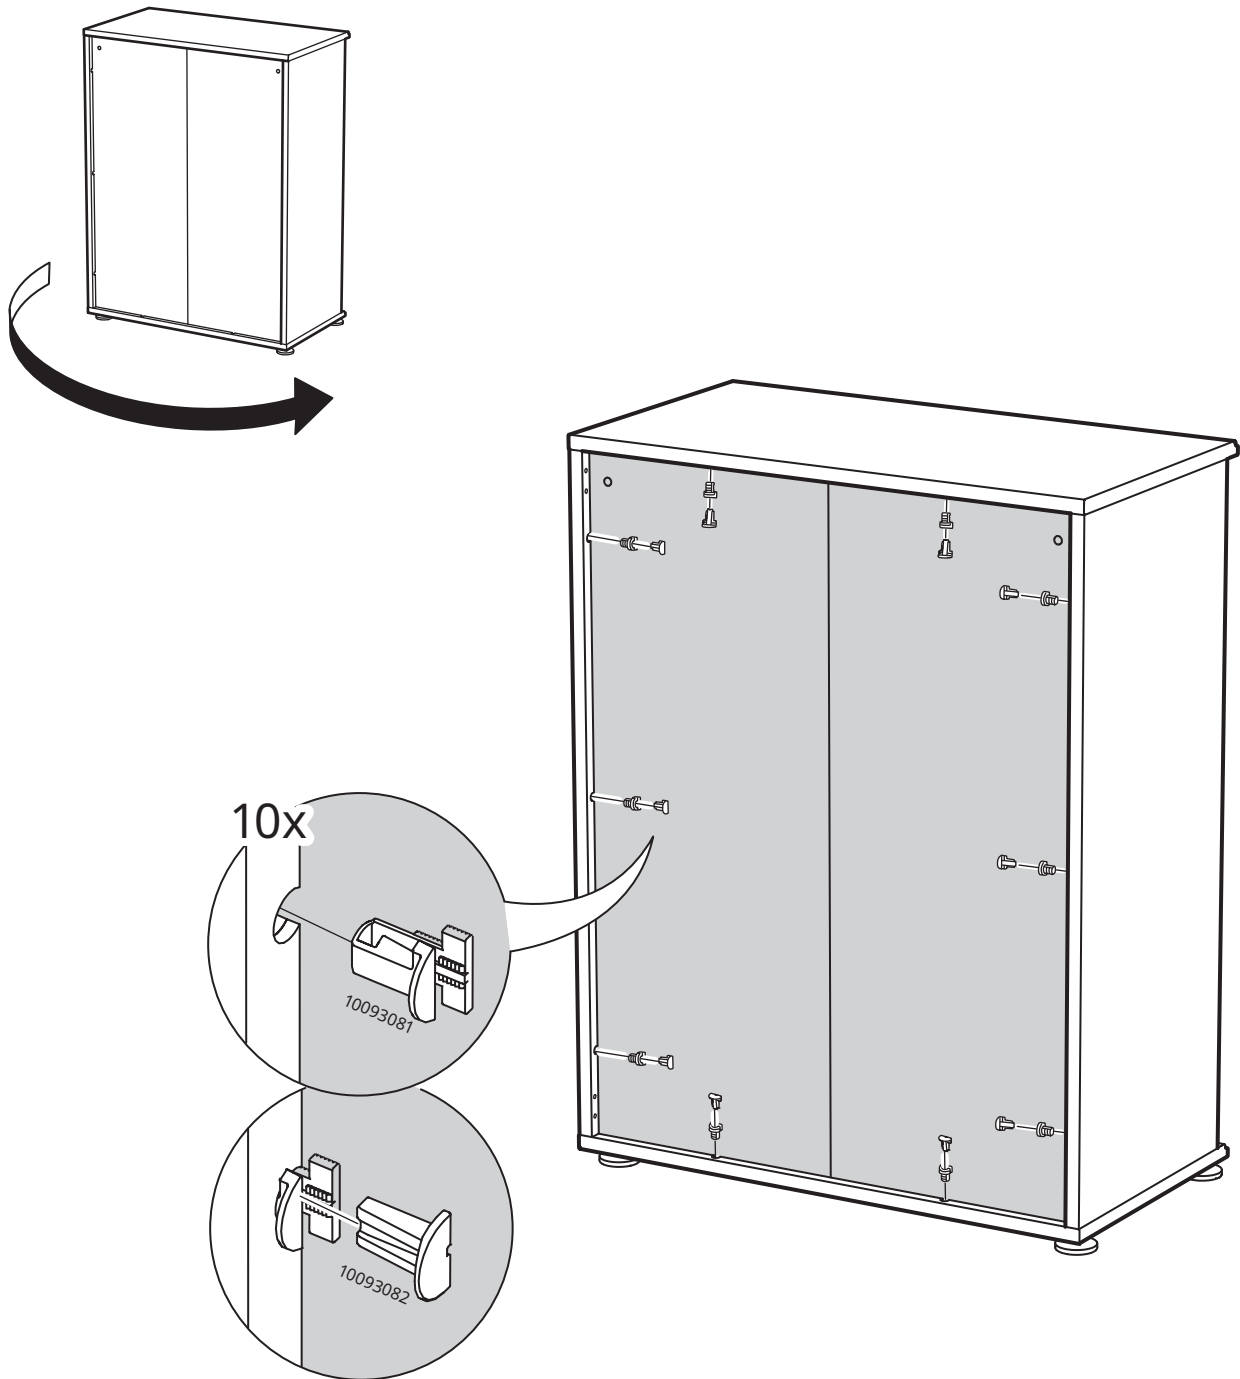 


11

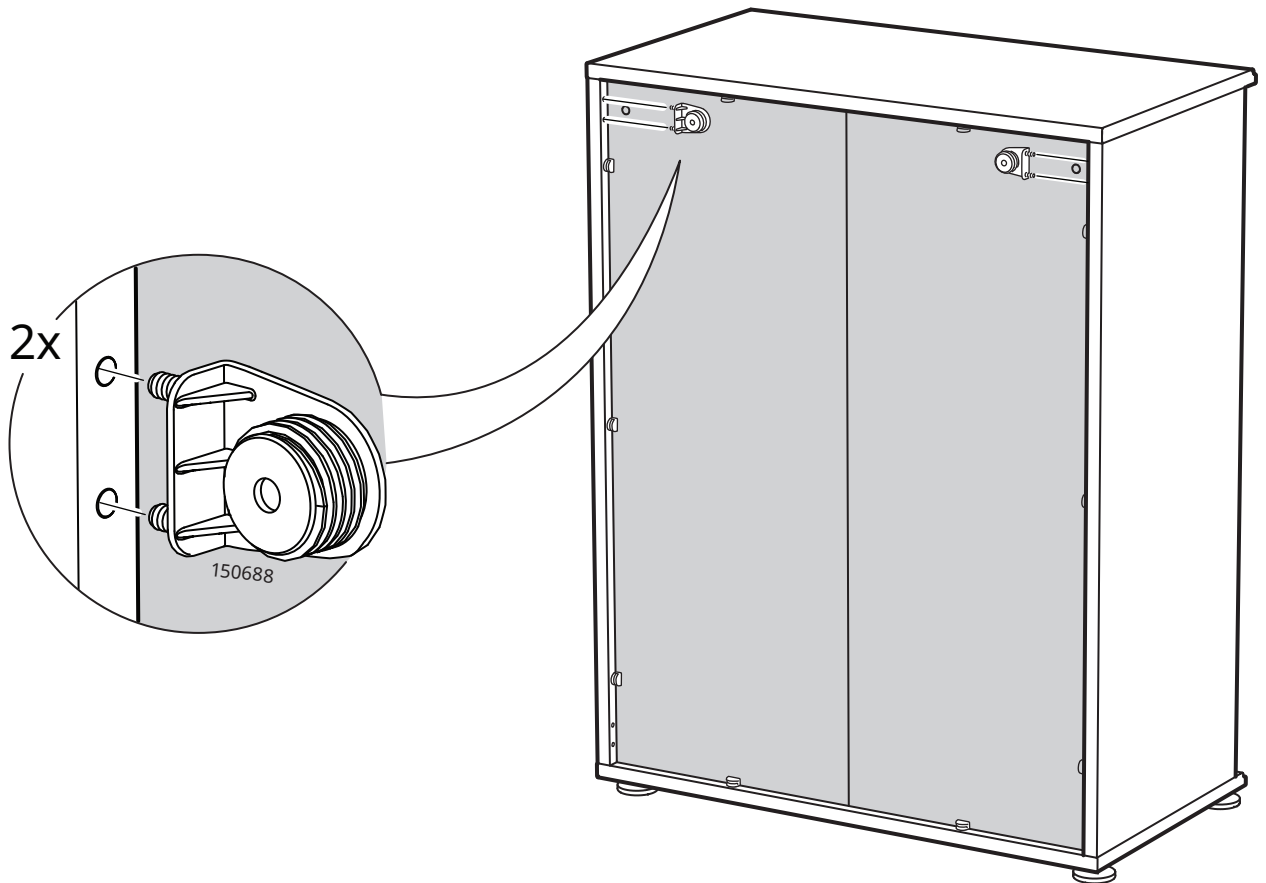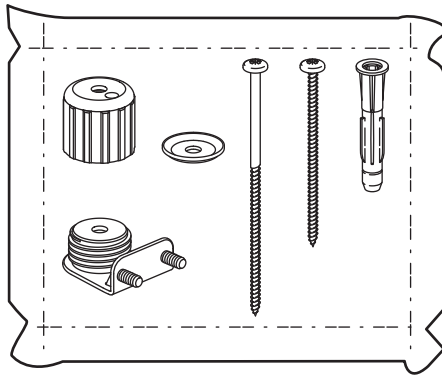  


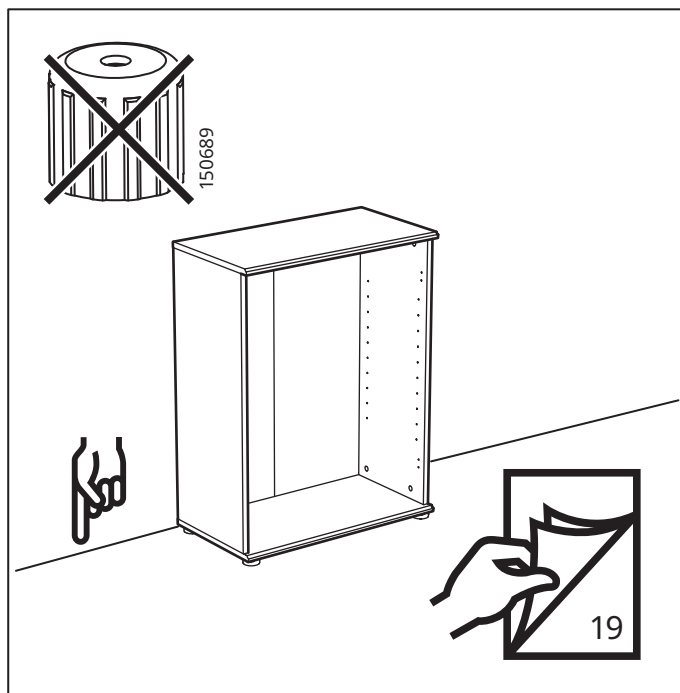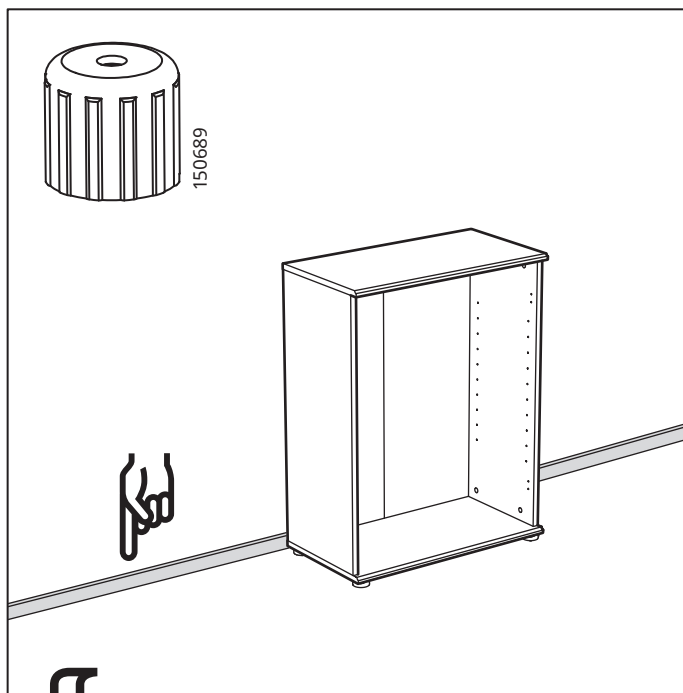  


12

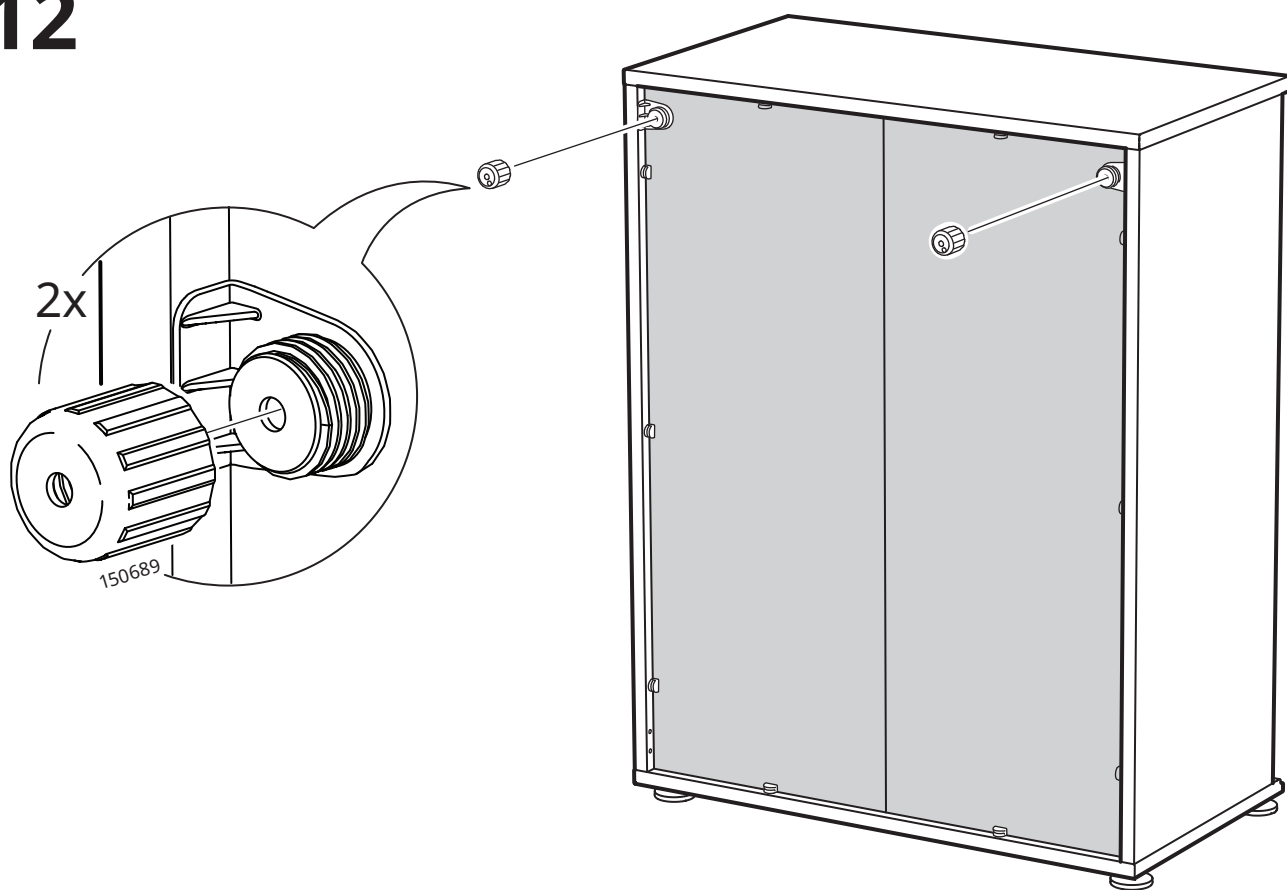 


13

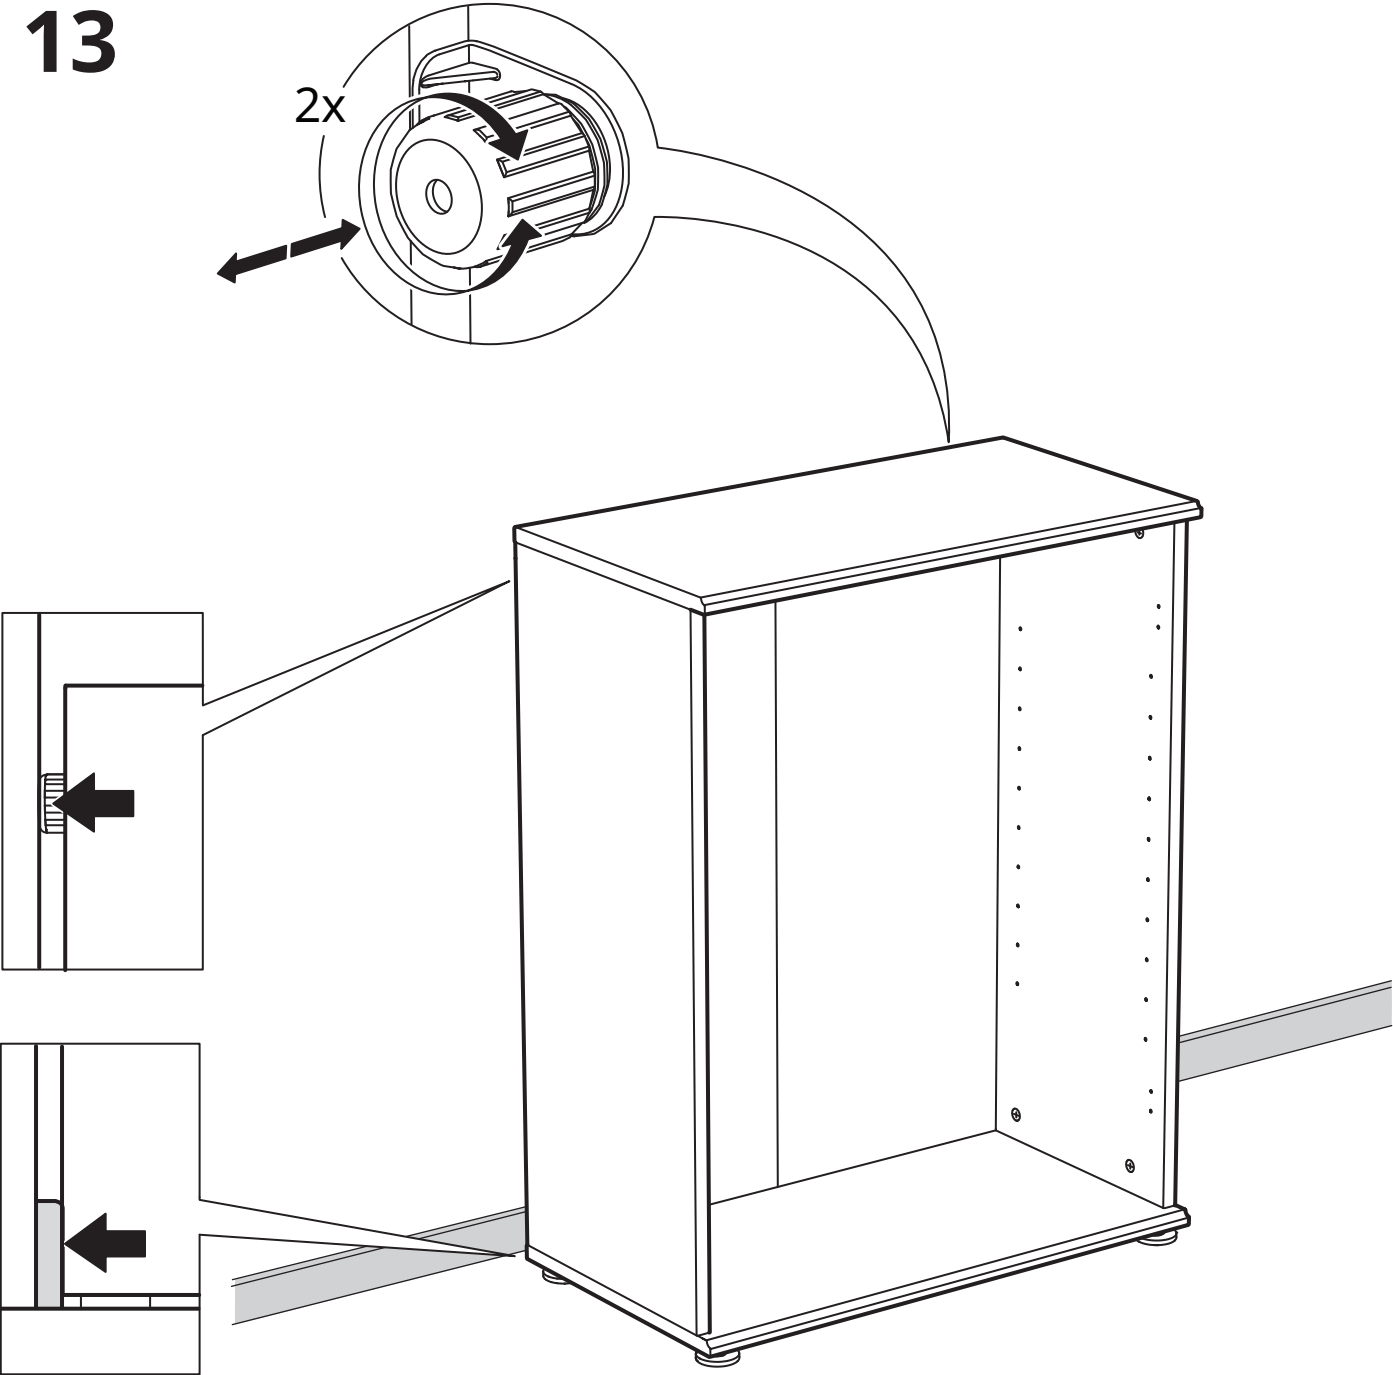 

14

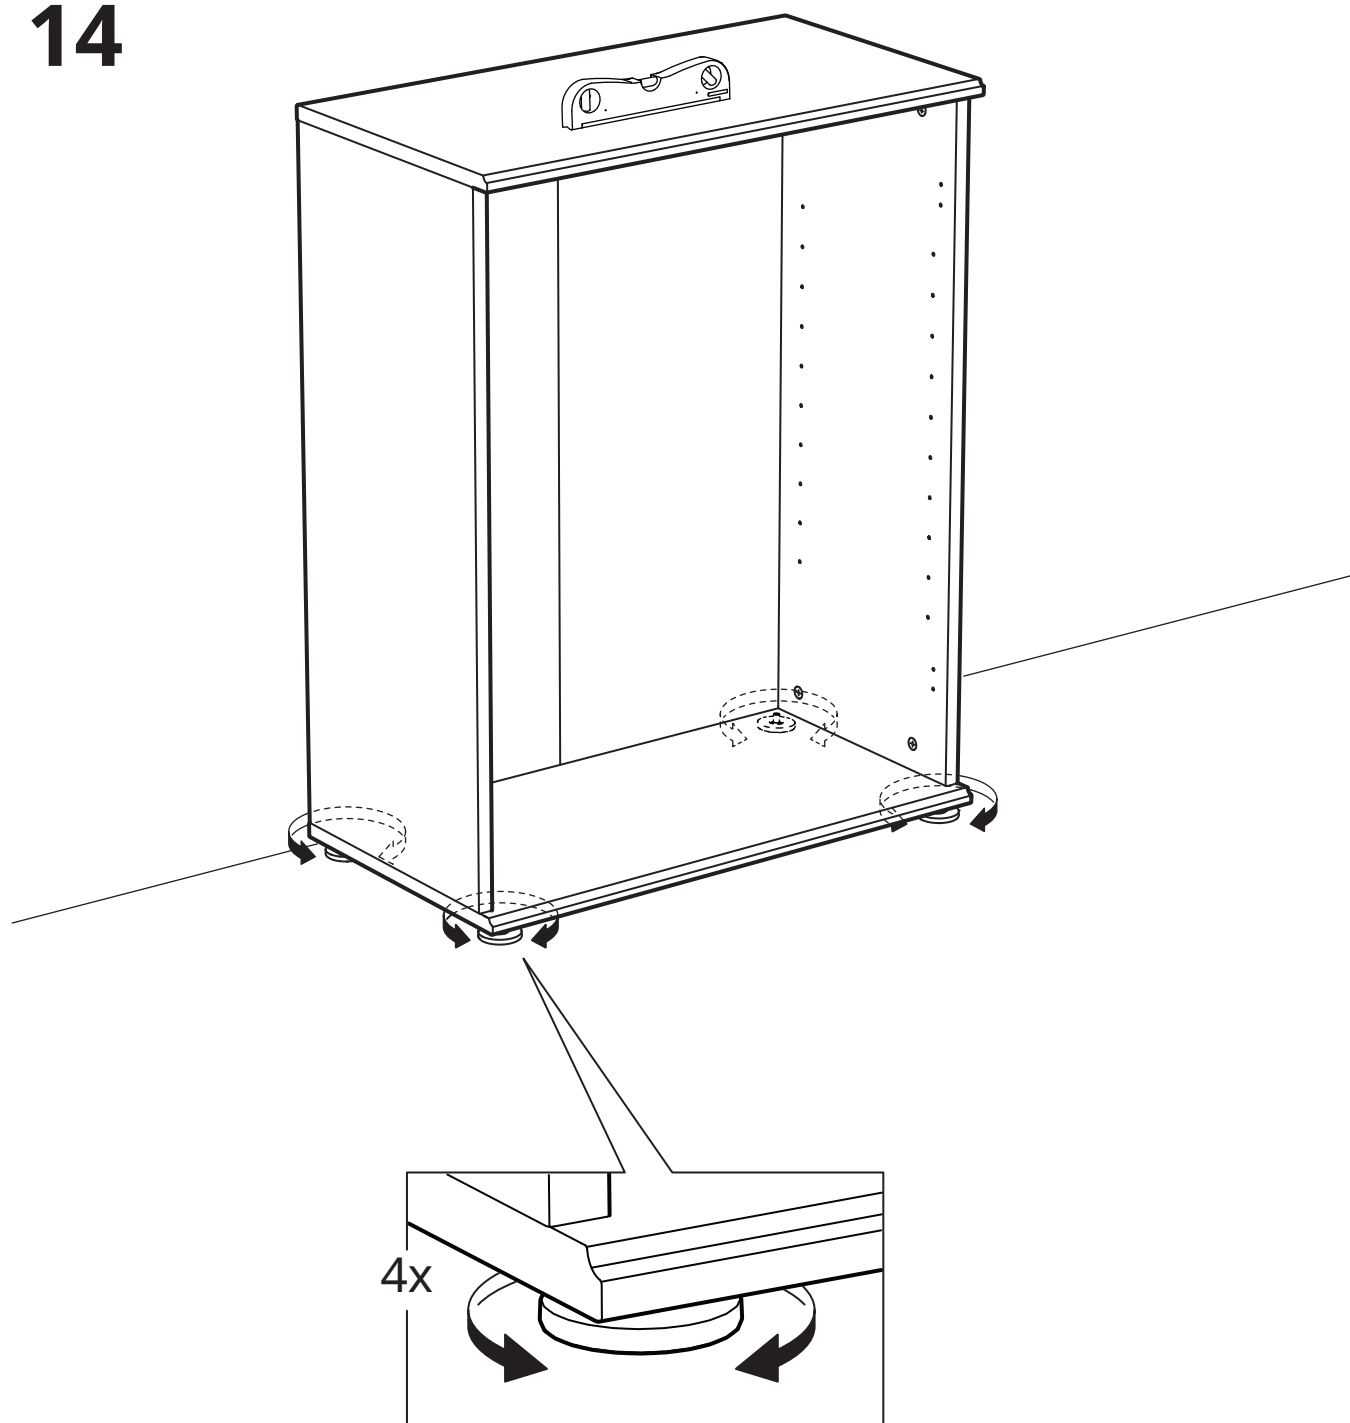 


15

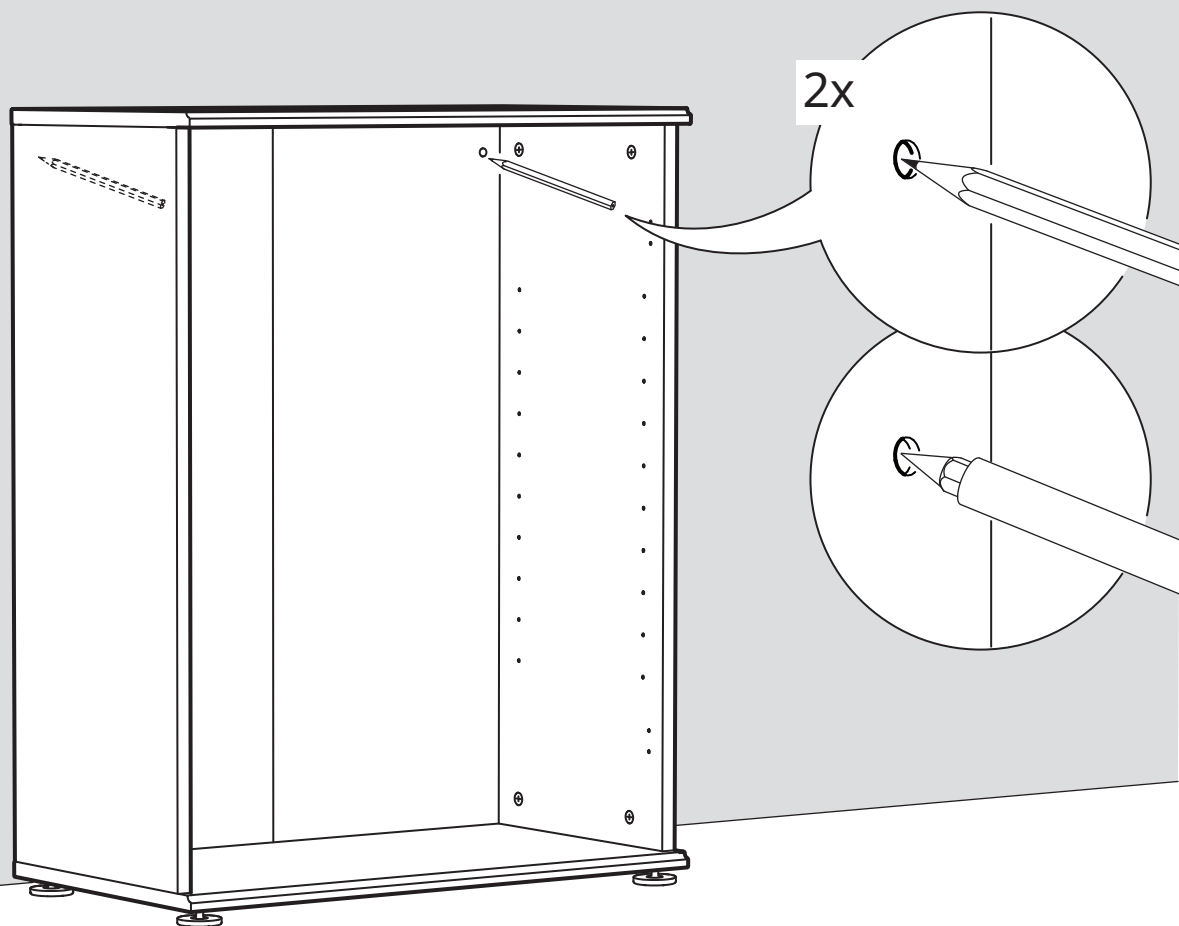 

16

x

 x

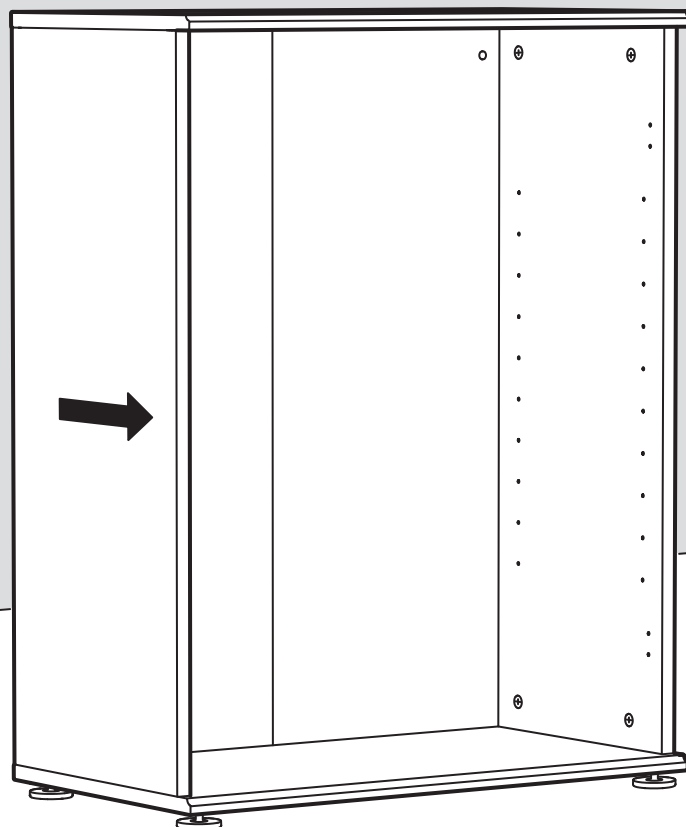



www.IKEA.com/secure-it



www.IKEA.cn/secure-it

 
17

English


The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

עברית

הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.

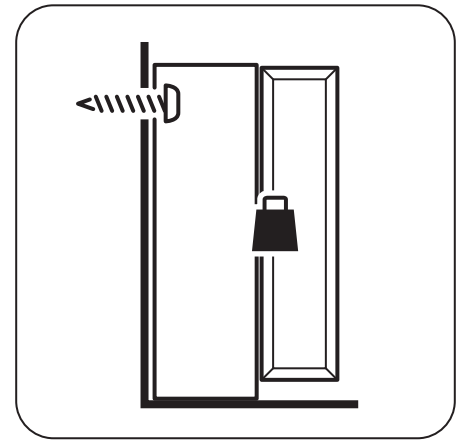


A

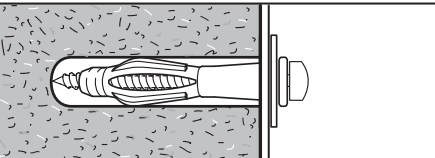 


Ø 8 mm
(5/16")



 1




2

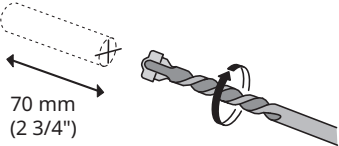 


70 mm
(2 3/4")

 3

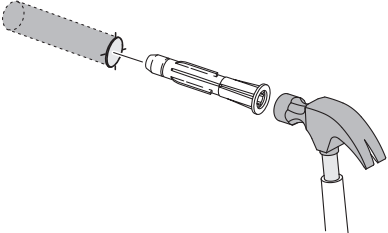


B

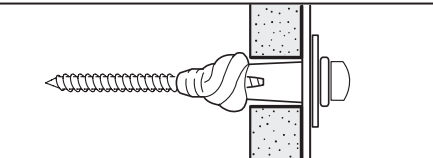 


Ø 8 mm
(5/16")



 1




2

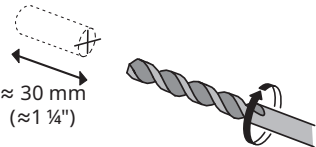 


≈ 30 mm
(≈ 1 1/4")

 3

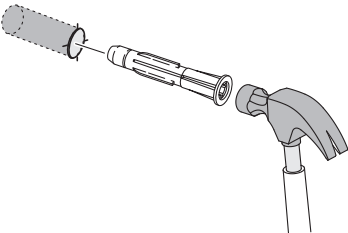


C

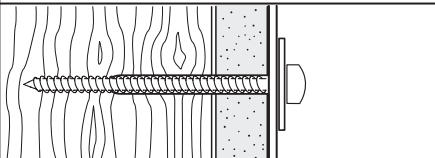 

Ø 3 mm
(1/8")



 1





2





≈ 30 mm
(≈ 1 1/4")

 
 
3




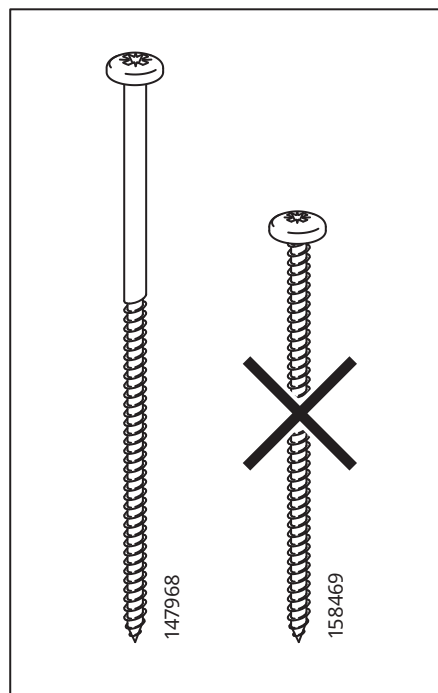
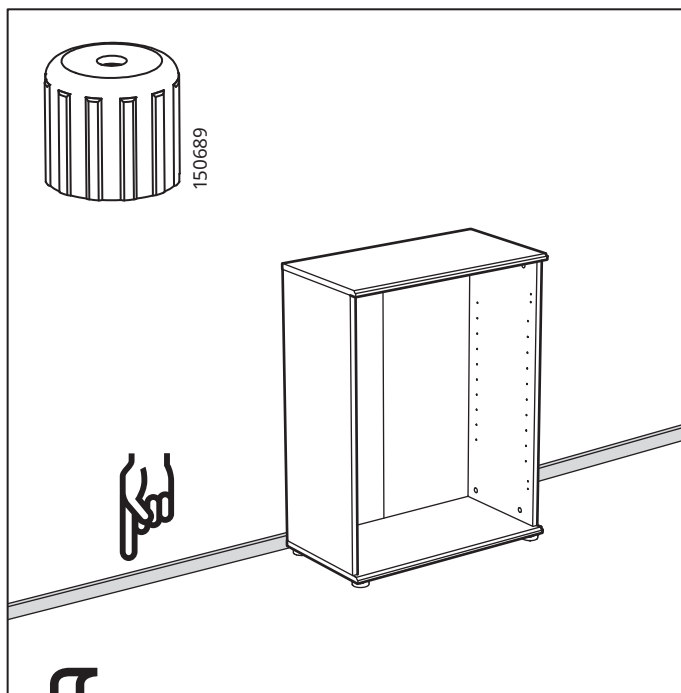


18

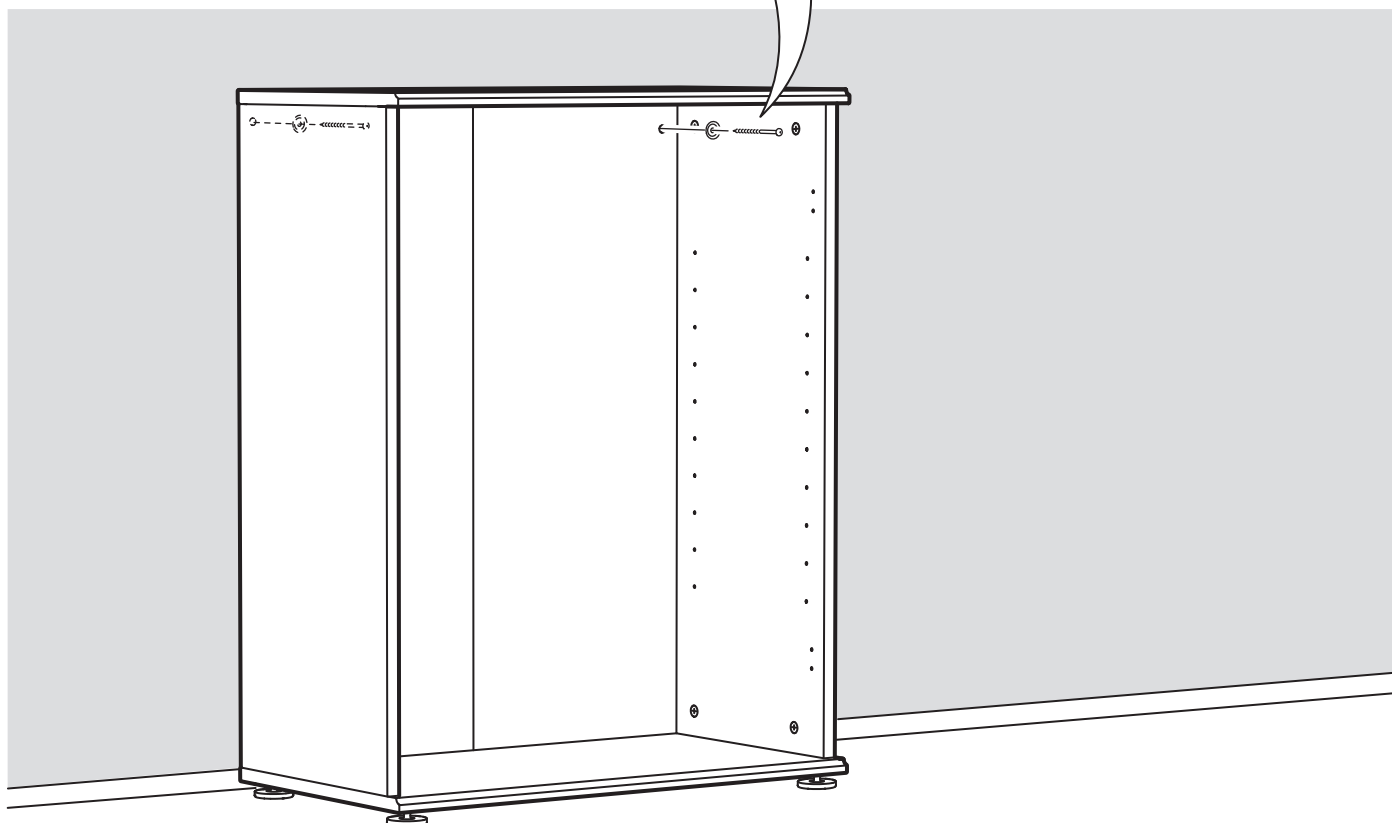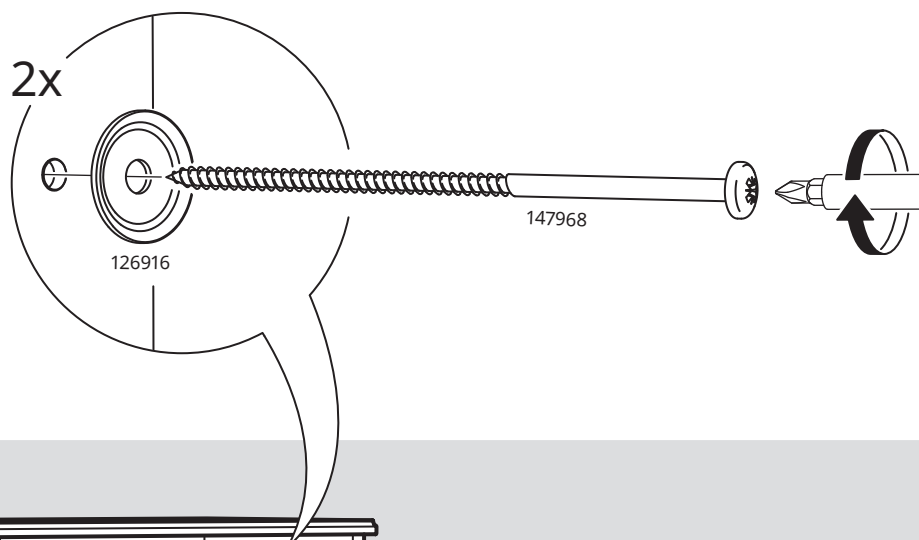  


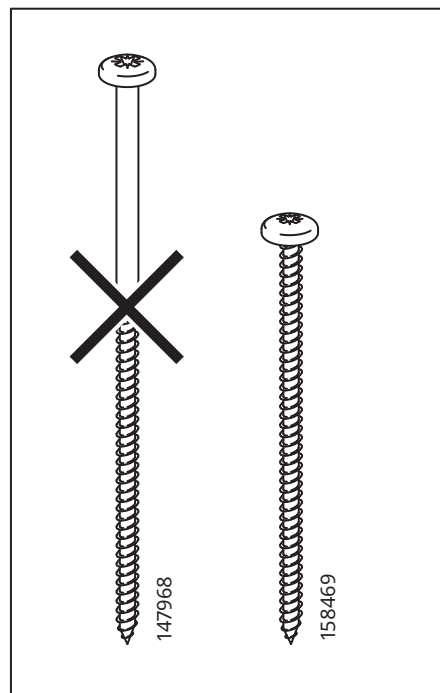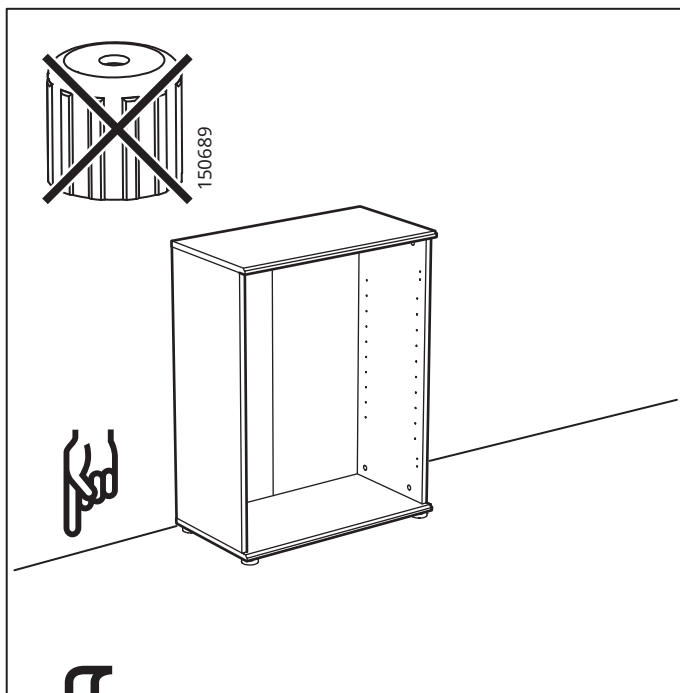  


18

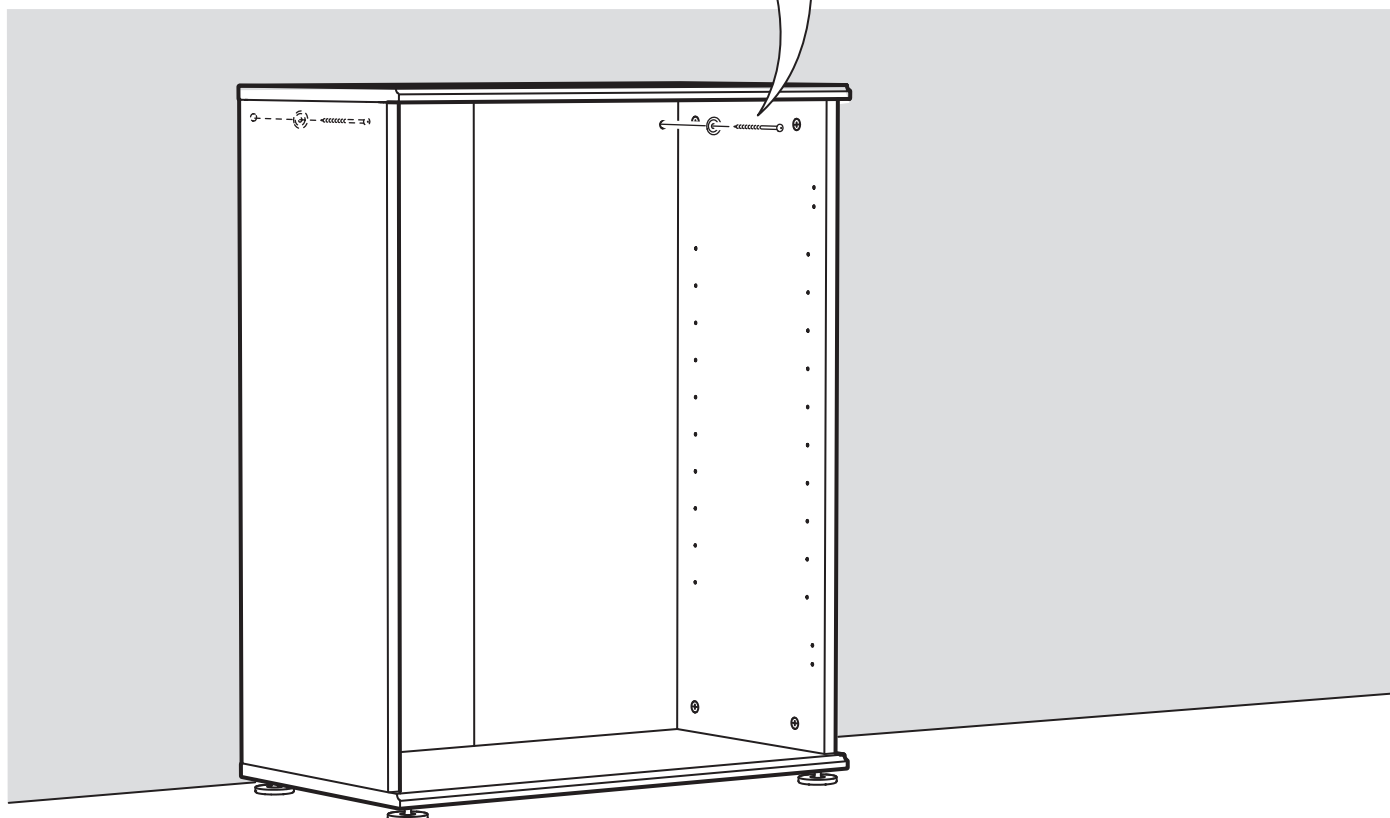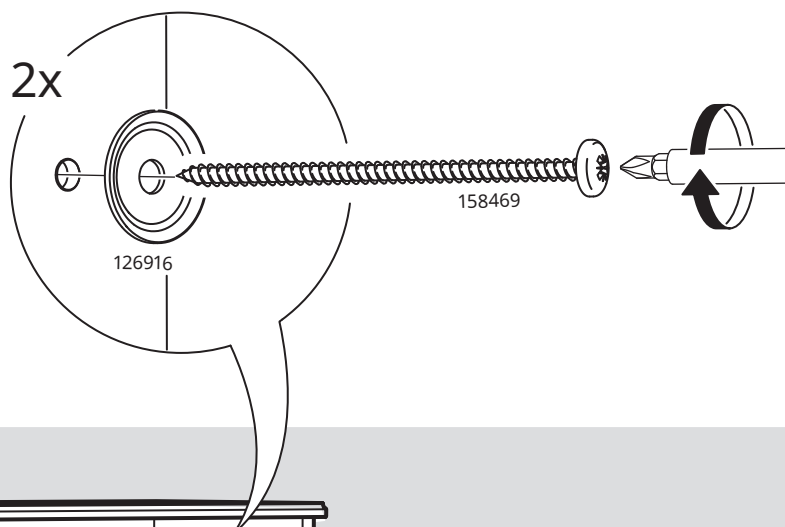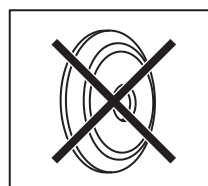   


19

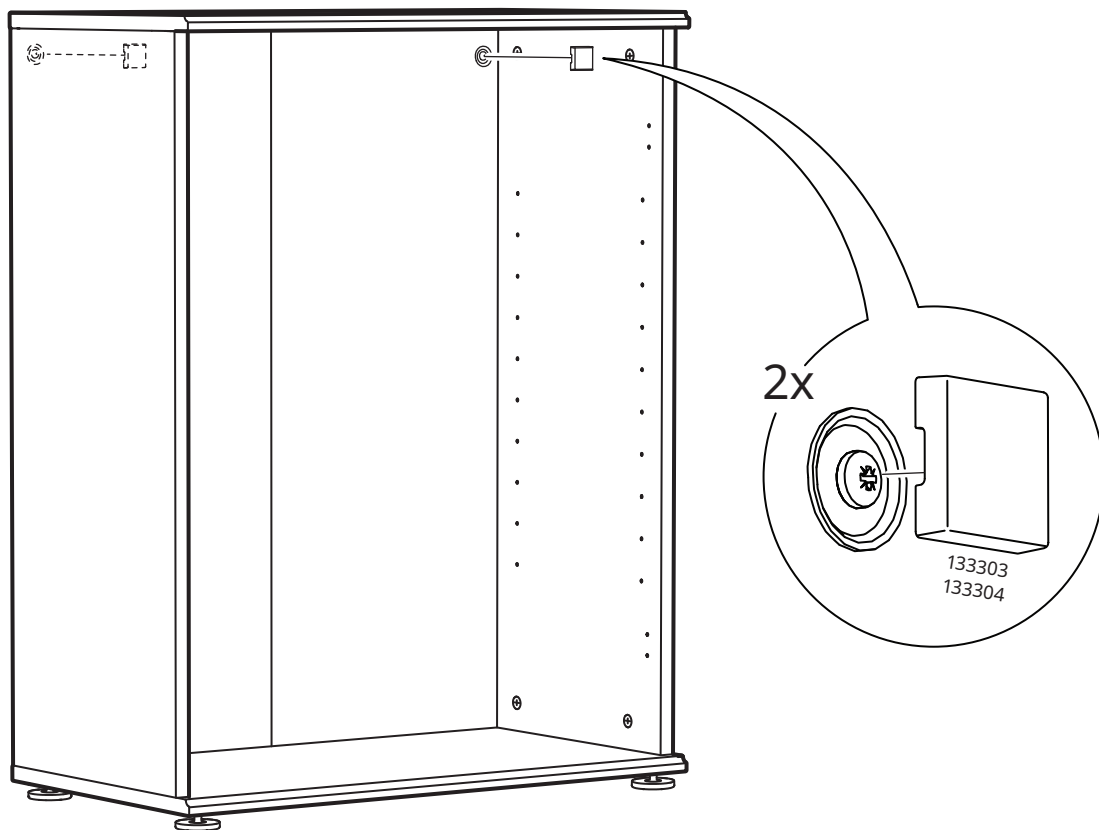 

20

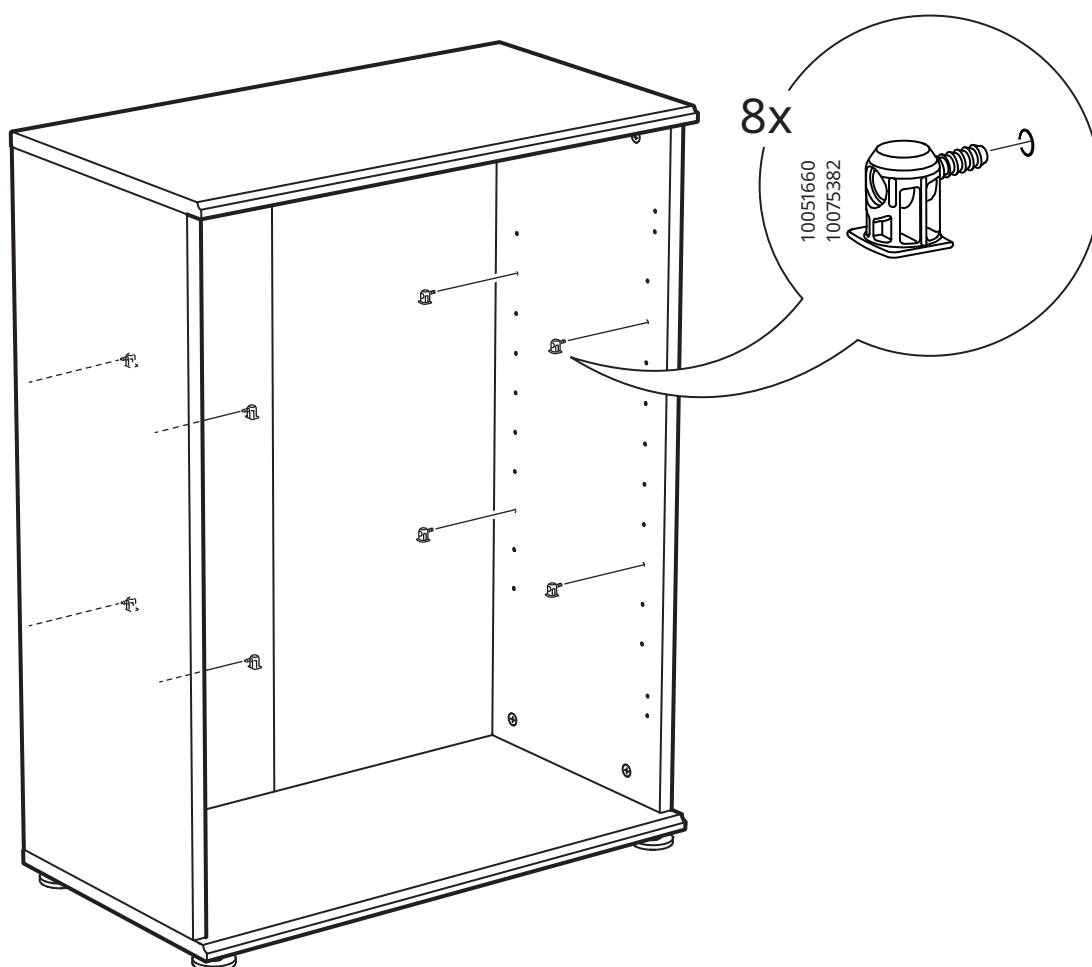 

21

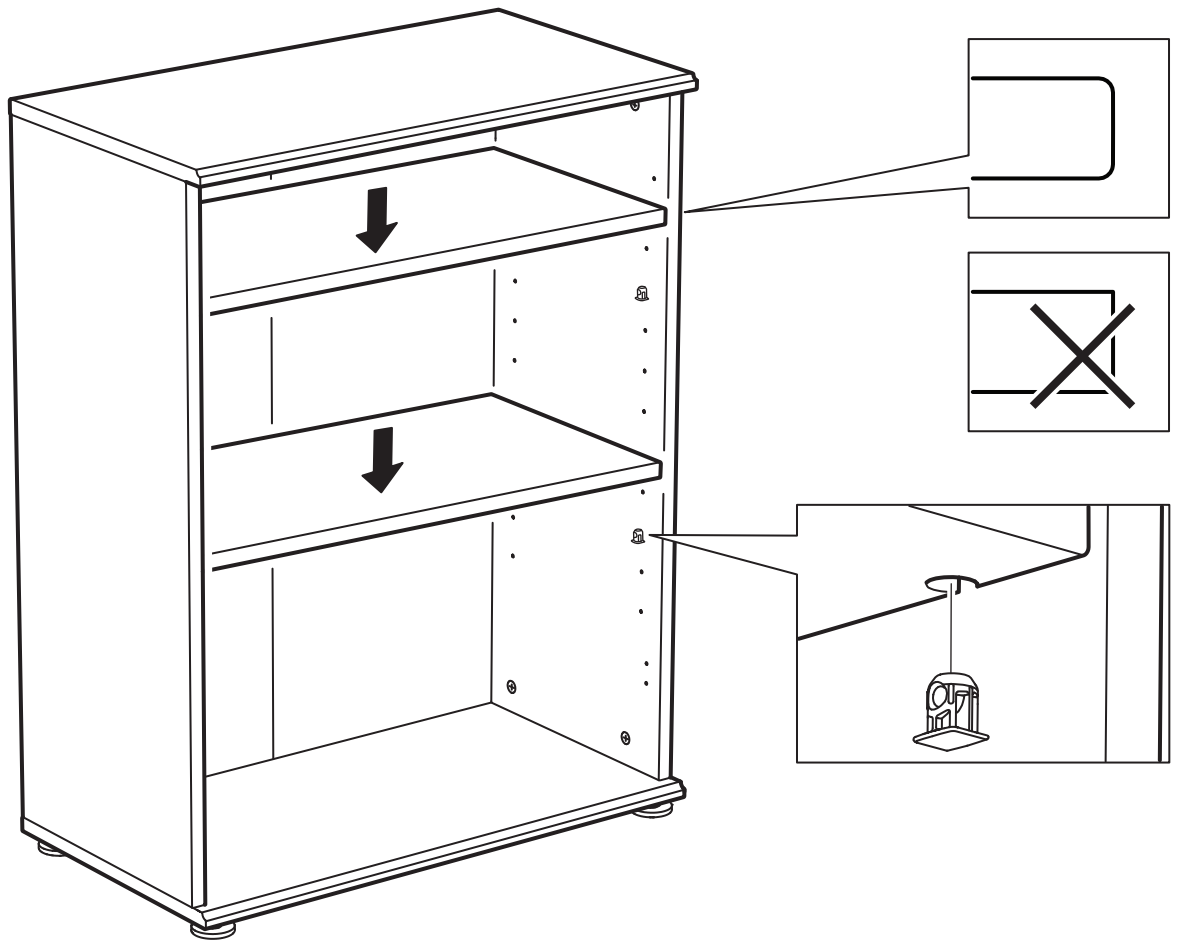 

22

