 


SKYDRAG

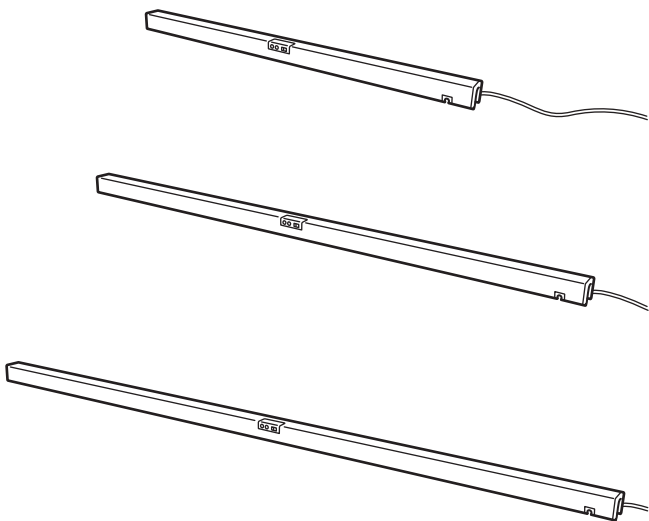

Design and Quality
IKEA of Sweden



English

IMPORTANT SAFETY INSTRUCTIONS

For indoor use only.

Regularly check the cord, the transformer and all other parts for damage. If any part is damaged the product should not be used. Important information! Keep these instructions for future use.

English

The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.

English

The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

English

ONLY USE A SAFETY TRANSFORMER WITH A SELV OUTPUT AS A SUPPLY FOR THE PRODUCT.

English

1. Wipe the surface dry where the tape will be used with a clean and dry cloth.
2. The assembly tape is permanent and is not intended to be removed. You might damage the surface under the lamp if you try to remove the tape.
3. Please keep the unused fittings for future use.



English

WARNING – Strangulation hazard. NEVER place cord within reach of the child in a cot or playpen. ALWAYS secure cord to wall or cabinet. Check regularly that the cord is securely fastened. Pull the cord to remove any slack between fasteners. Tie up any remaining slack cord between driver and socket.



עברית

הוראות בטיחות חשובות
מיועד לשימו ביתי בלבד.

בדקו באופן קבוע את הכבל, השנאי וכל
שאר החלקים על מנת לוודא כי לא ניזוקו.
במידה ונמצא כי חלקים מסוימים ניזוקו,
אין להשתמש במוצר. מידע חשוב! שמרו
הוראות אלה לעיון בעתיד.

עברית

הכבל המחובר לגוף תאורה זה אינו ניתן
להחלפה; במידה ונגרם נזק לכבל, יש
להשליך את המוצר כולו.

עברית

נורת המנורה אינה ניתנת להחלפה; יש
להחליף את המנורה כולה כאשר הנורה
מגיעה לסוף חייה.

עברית

יש להשתמש אך ורק בשנאי הבטיחות
בעל יציאת SELV המצורף לאריזת
המוצר.

 
 
עברית

 
1. נגבו את אזור ההדבקה באמצעות
מטלית נקייה ויבשה.
2. סרט ההדבקה קבוע ואינו מיועד
להסרה. הוא עשוי לגרום נזק למשטח
שמתחת למנורה במידה ותנסו להסירו.
3. שמרו את אביזרי החיבור אשר אינם
בשימוש לשימוש עתידי.



עברית

אזהרה - סכנת חנק.
לעולם אין למקם חוטים בטווח הישג ידם
של ילדים במיטת התינוק או הלול. יש
תמיד לקבע את החוט לקיר או לארון.
בדקו באופן תדיר כי החוט מהודק באופן
בטוח.
משכו את החוט בכדי למנוע רווחים
בין החיבורים. קשרו חוטים מיותרים
הנמצאים בין השנאי לבין השקע.

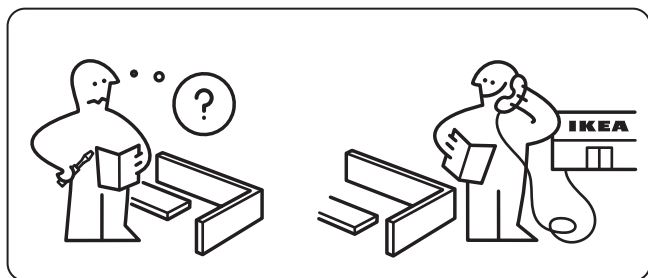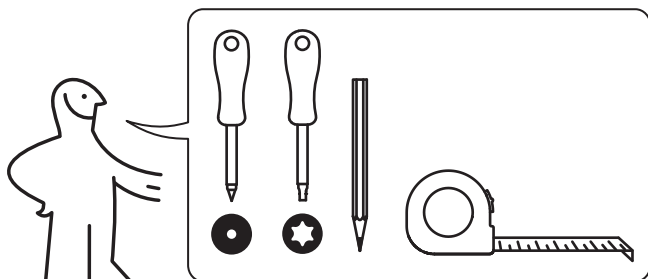




1x



10067953

 2x



10067941

 
2x




2x



2x




1x

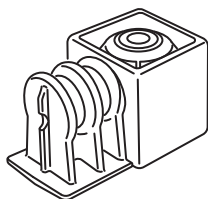 


○ 10066553
● 10066503

 2x




10066995

 2x

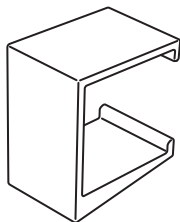


○ 10066954
● 10066955

 2x

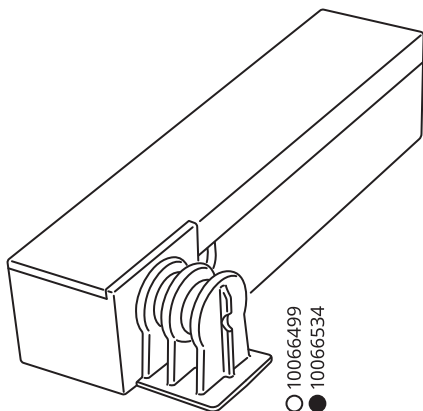



1x



 
○ 10066499
● 10066534


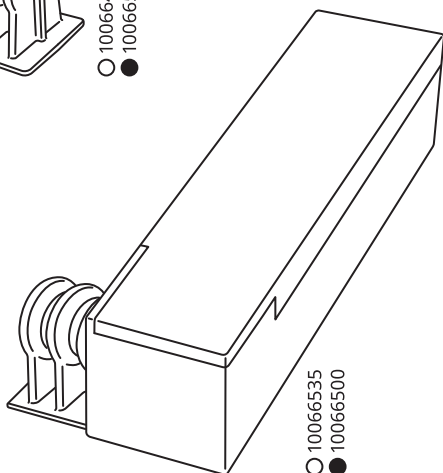


1x

       ○ 10066535
● 10066500

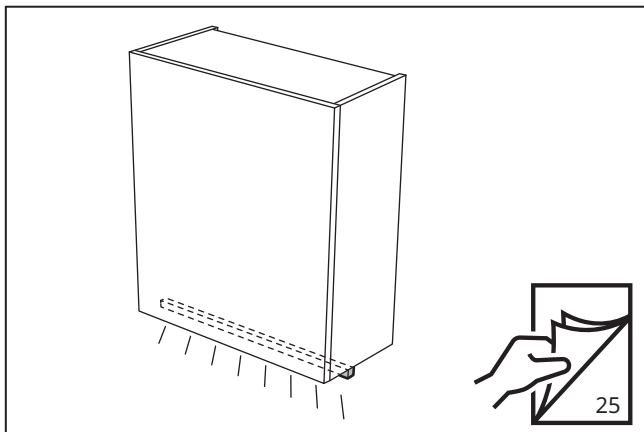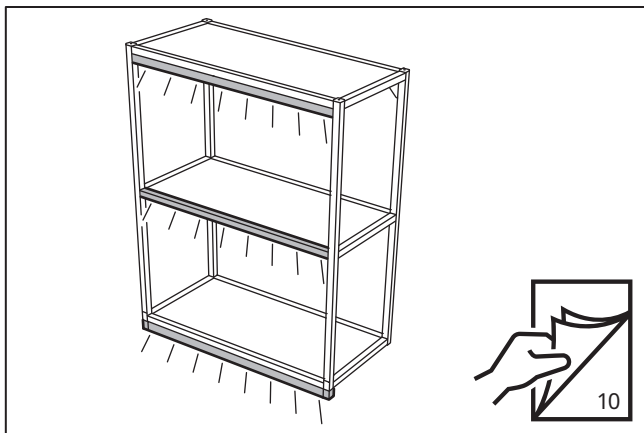

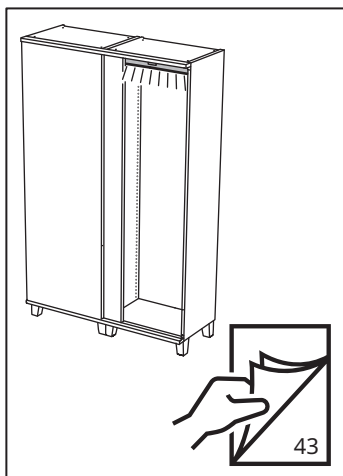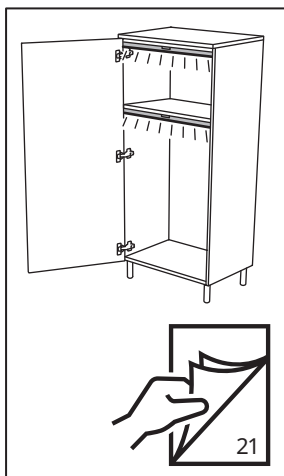
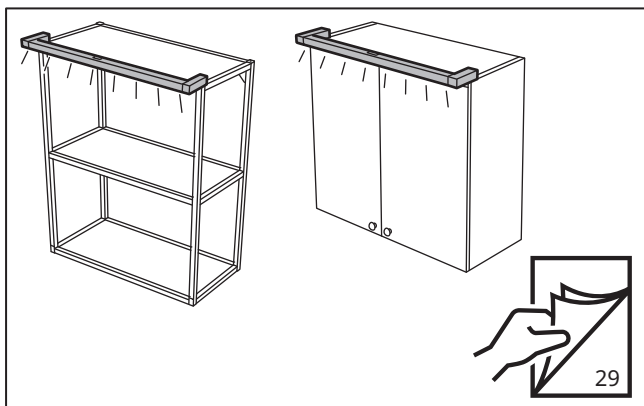


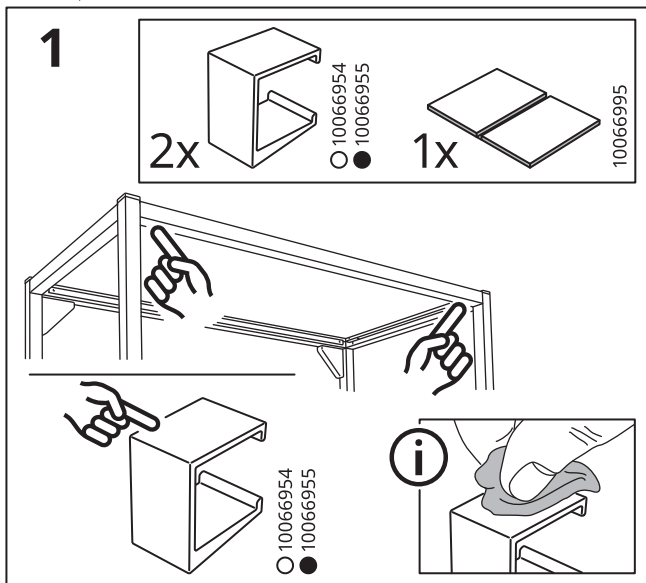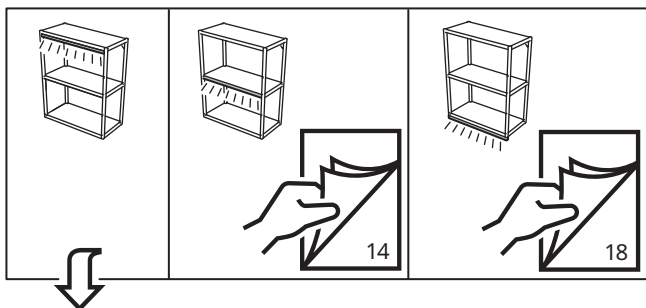

2



  2x

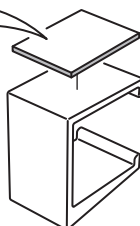
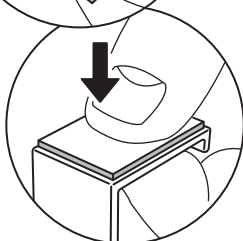


10066995



○ 10066954



● 10066955

  3

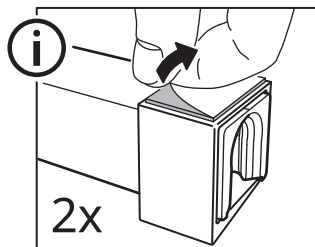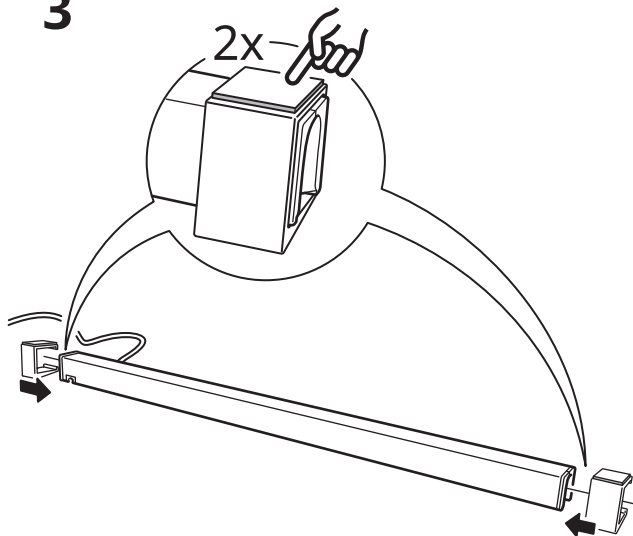


4

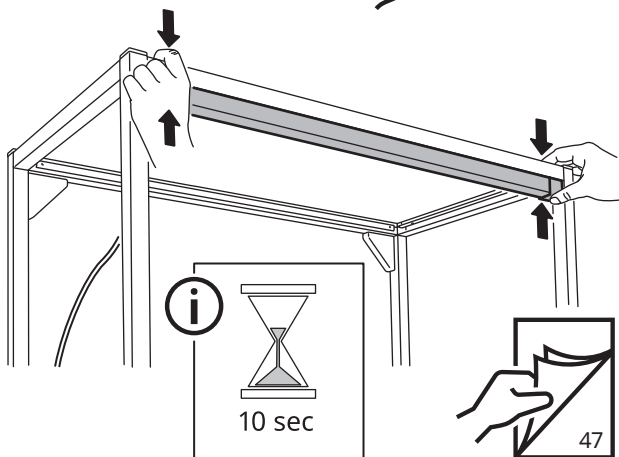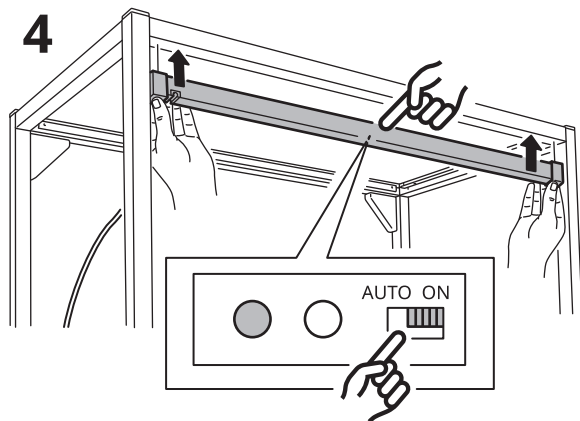  


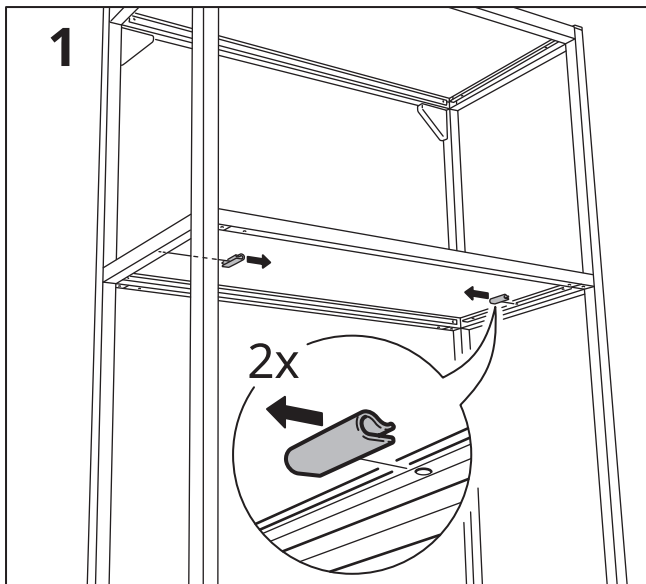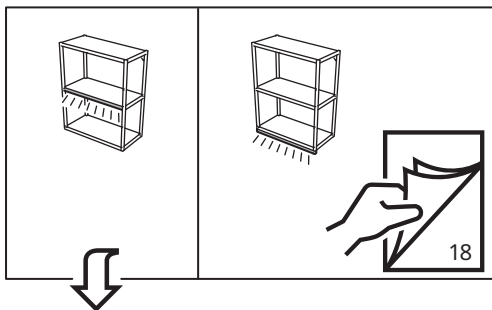  





2

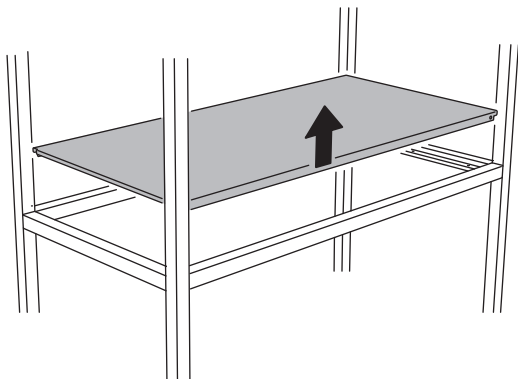 


3

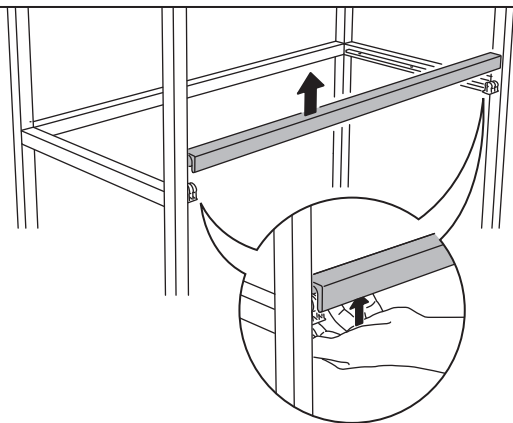 


4

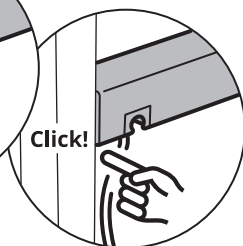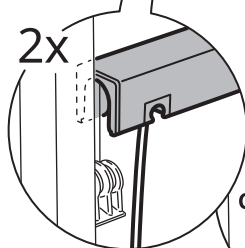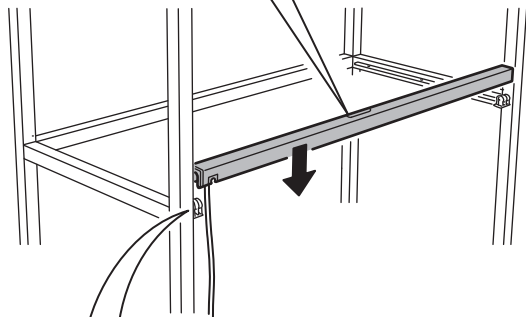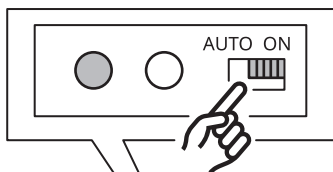    


5


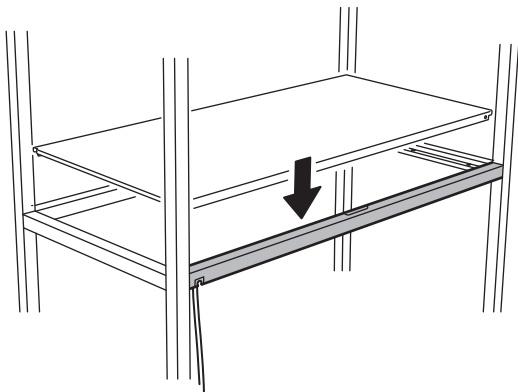 


6

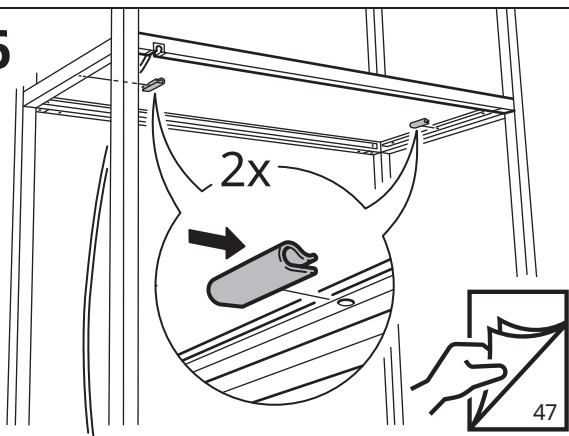 


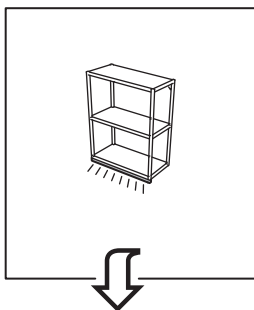 




1

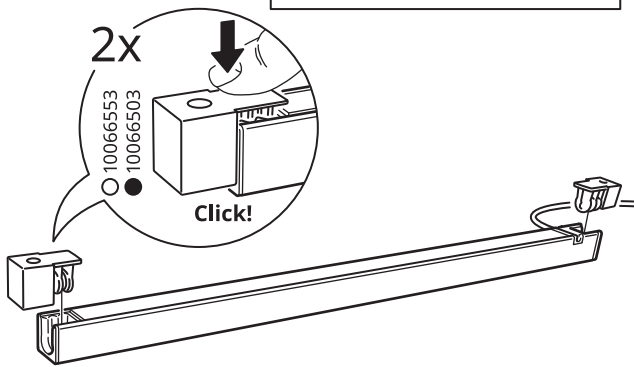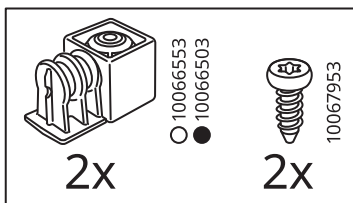  

2

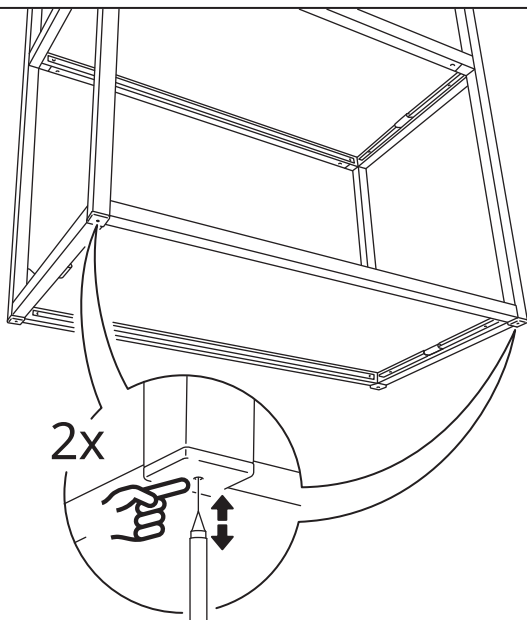 



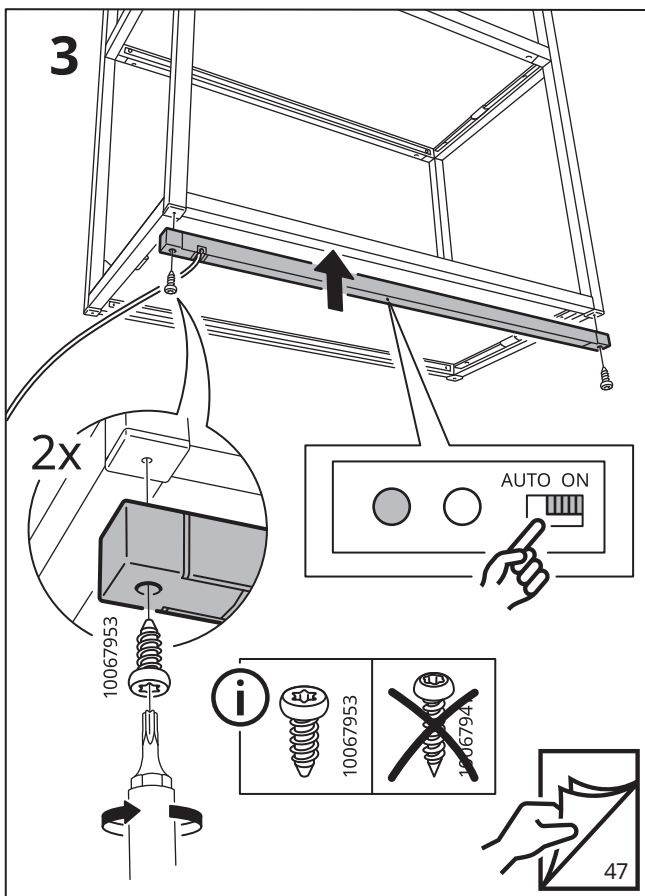 


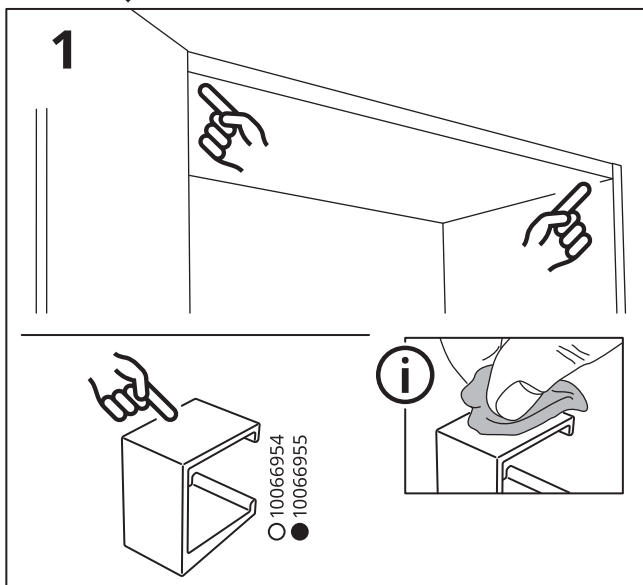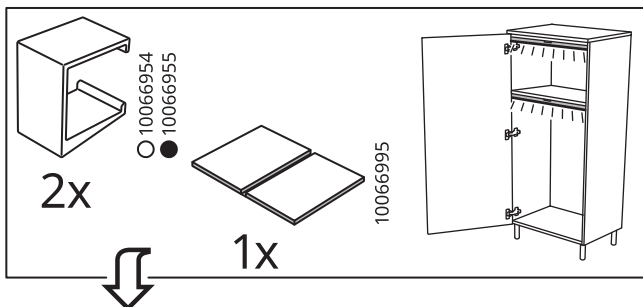  

2



   2x

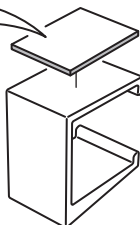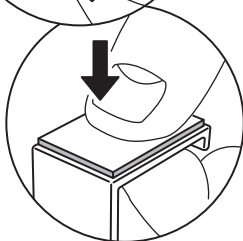
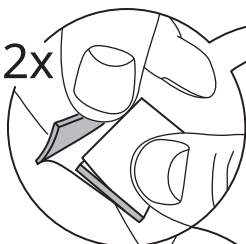


10066995





10066954



10066955

 
 
3

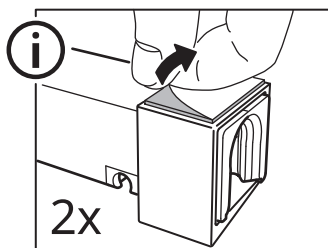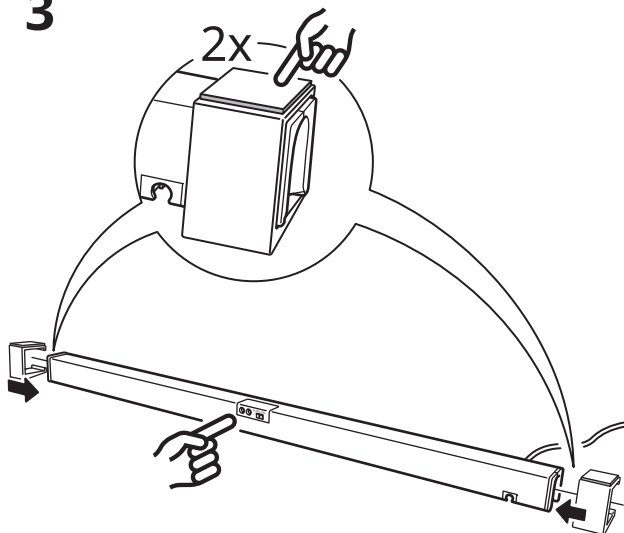




4

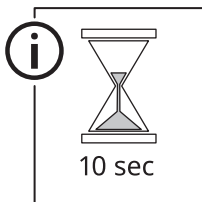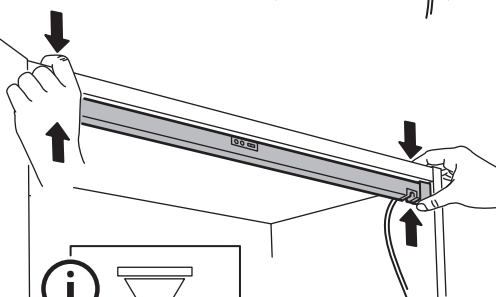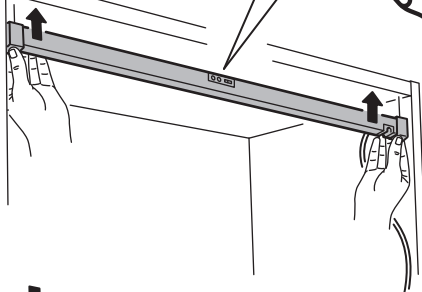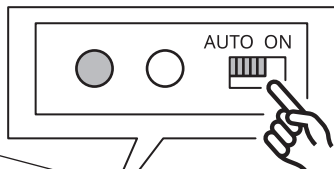    

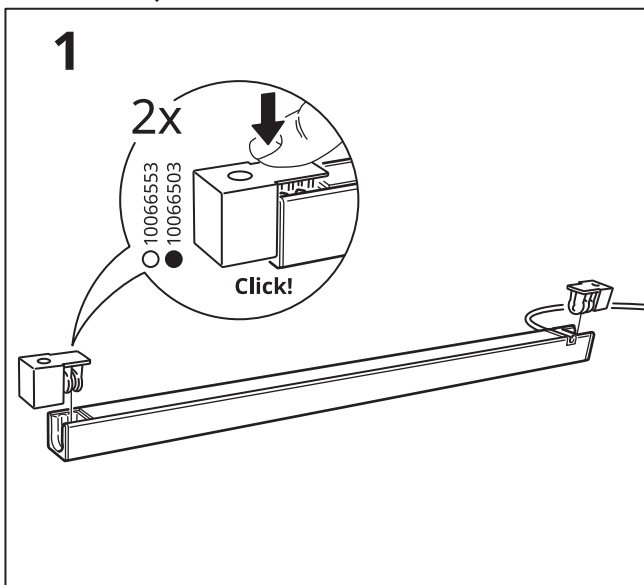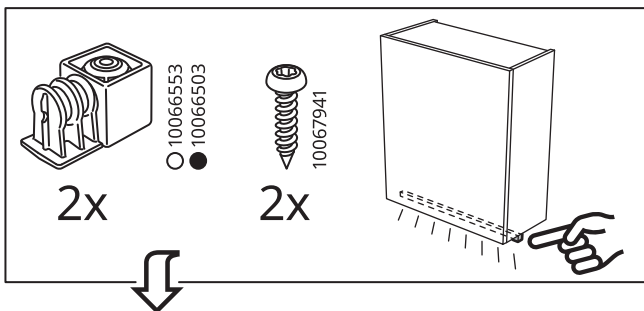  


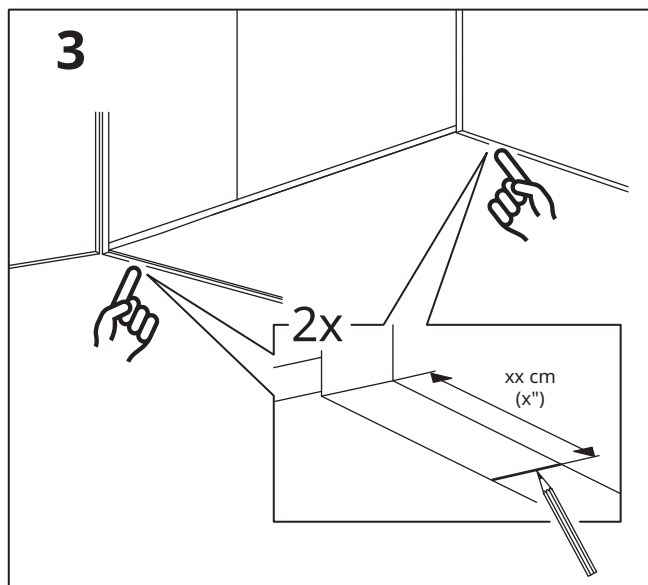 
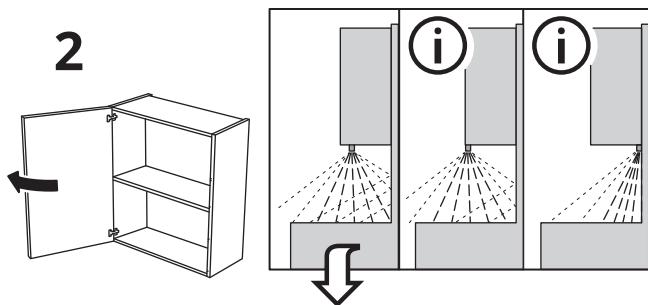 




4

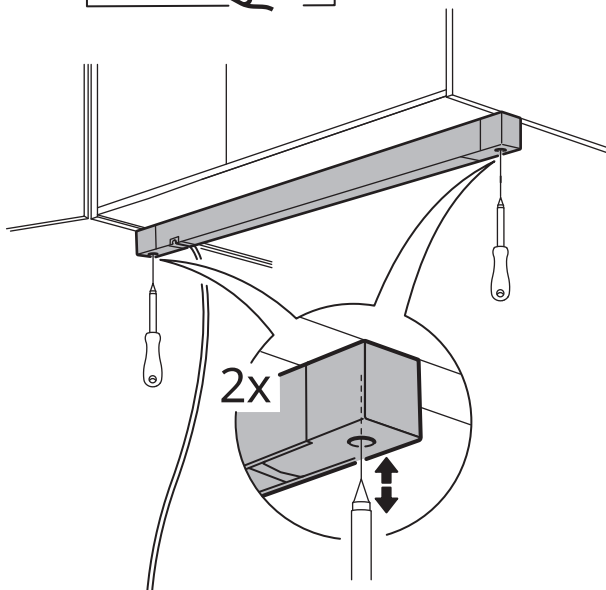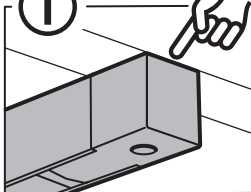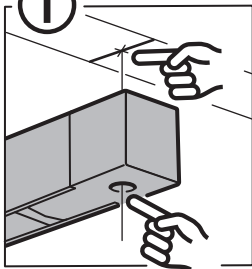   


5

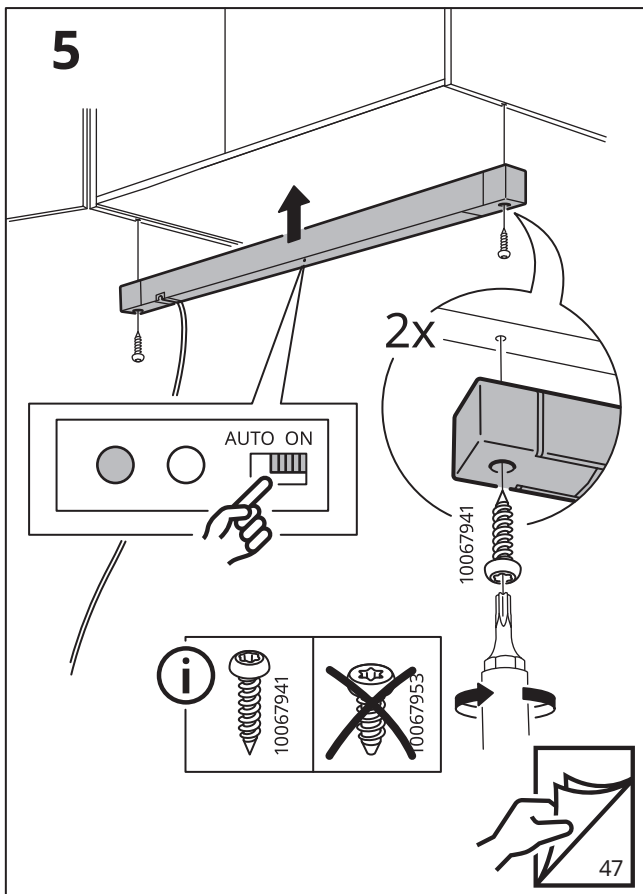 

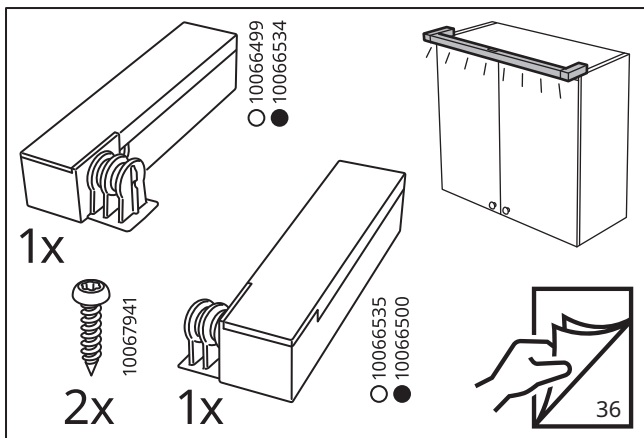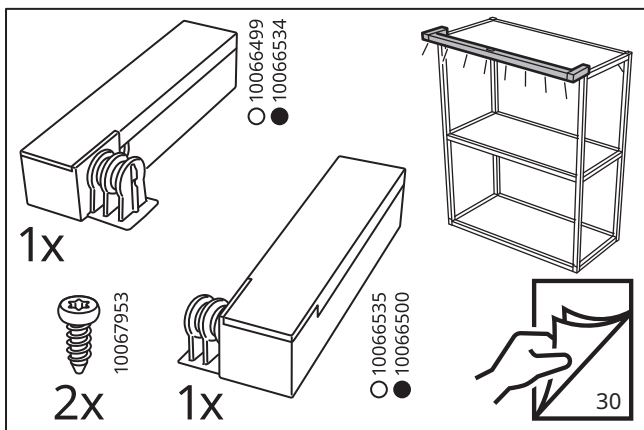  

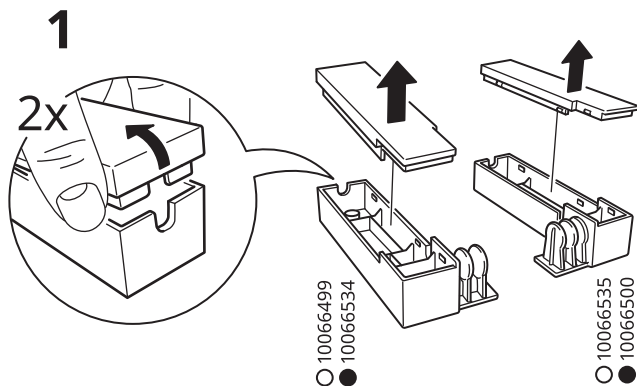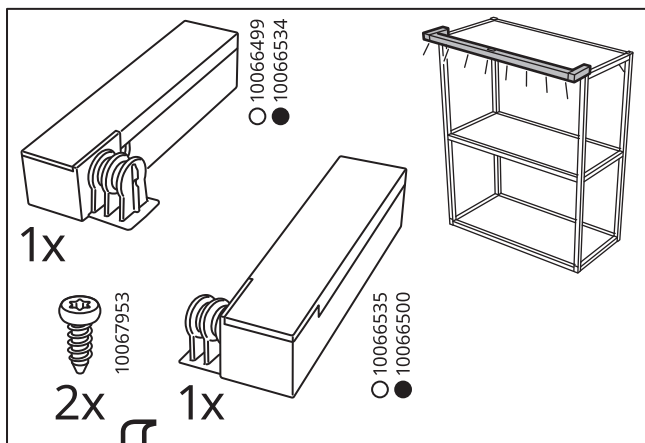  

2

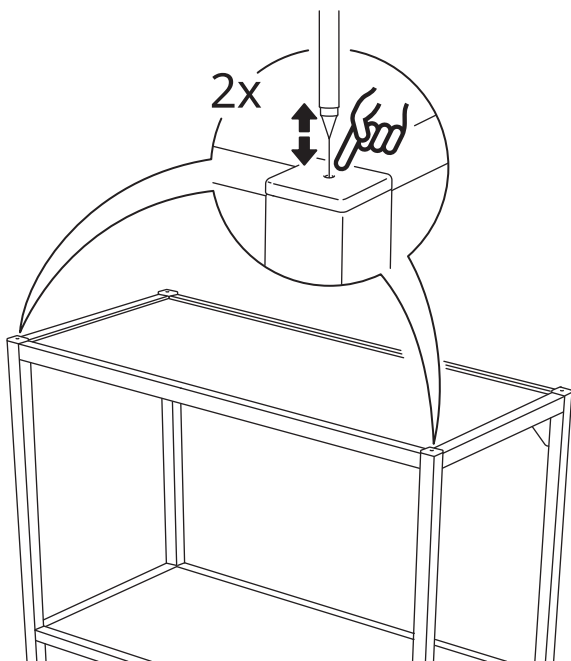 

3

2x

 
10067953






10067953




1006794

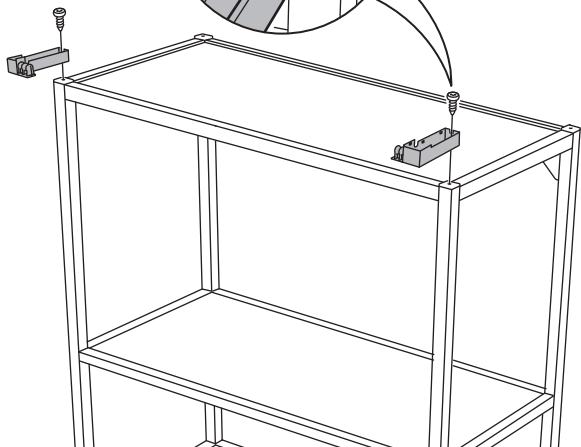



4

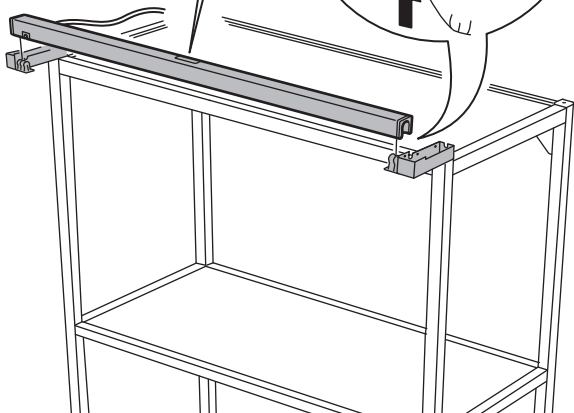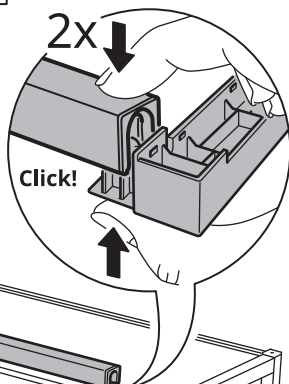  
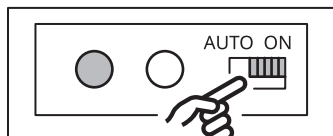 


5

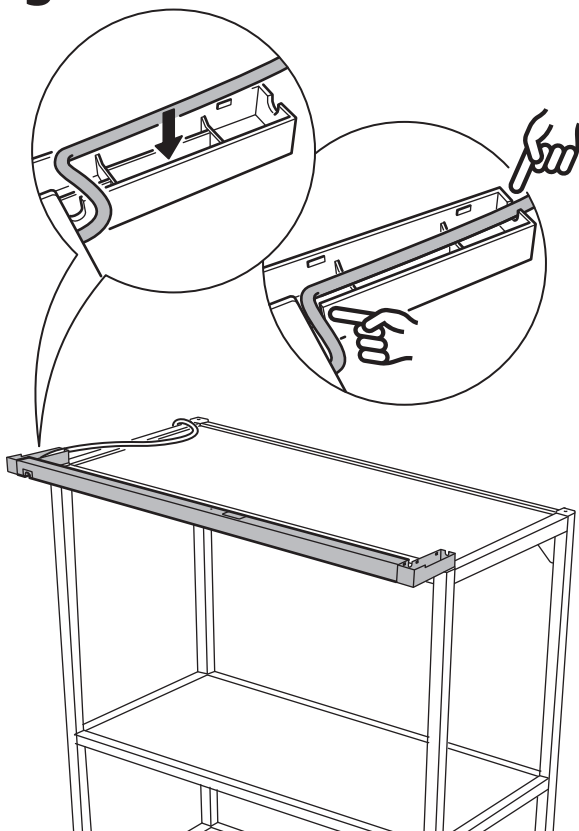 



6

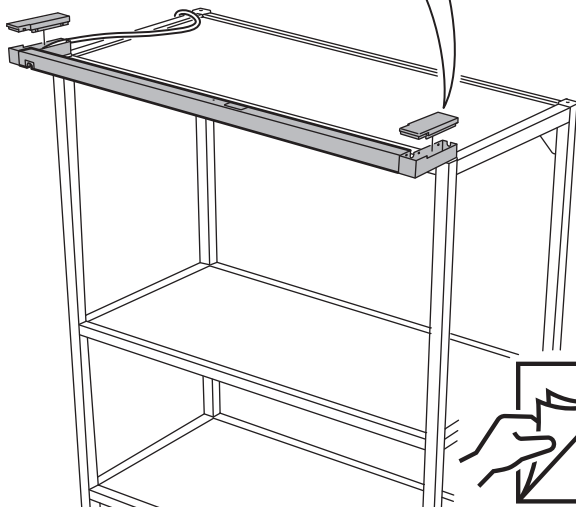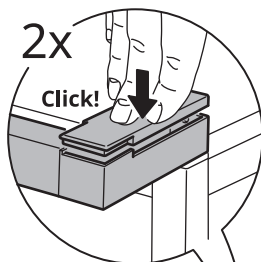  

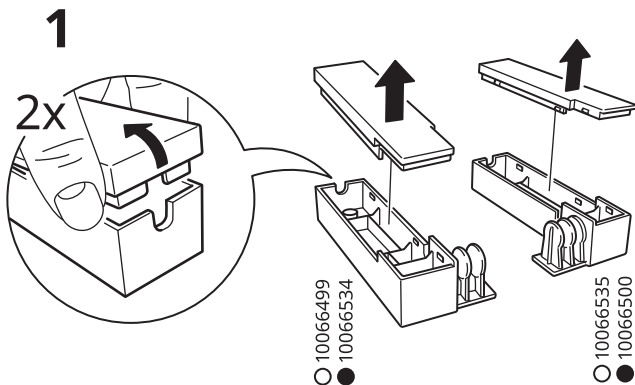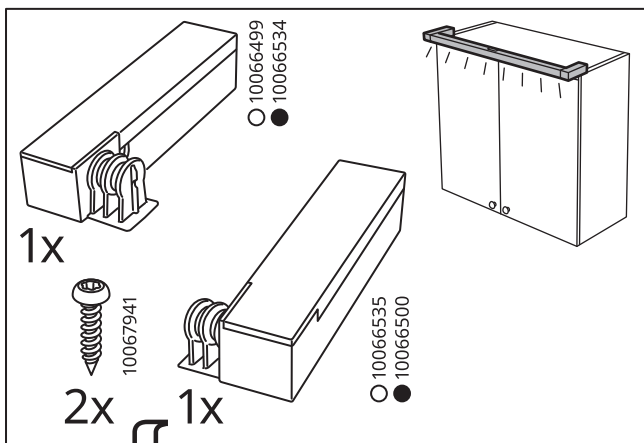  

2

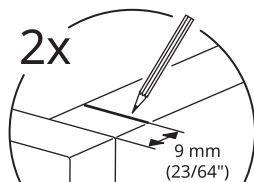 

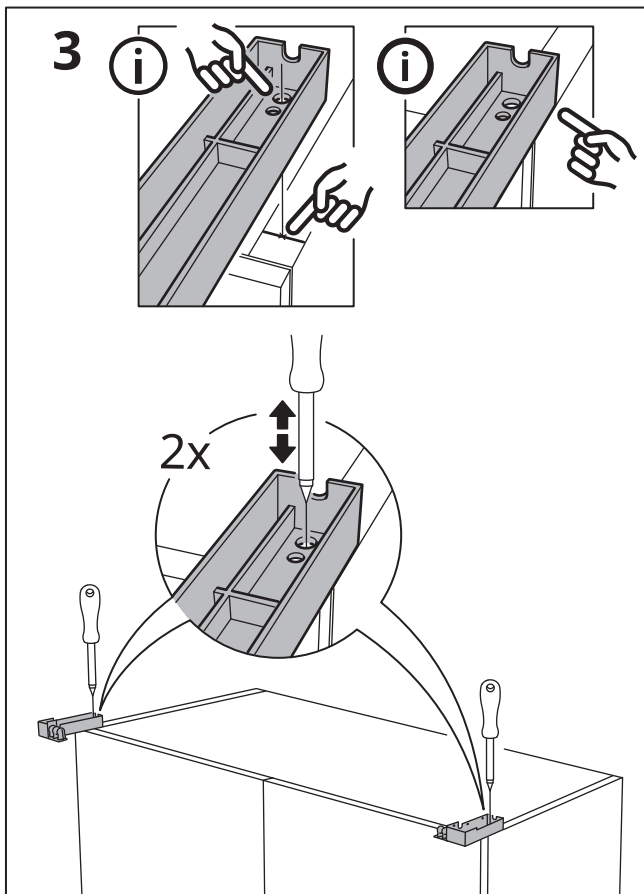 


4






10067941



 
10067953

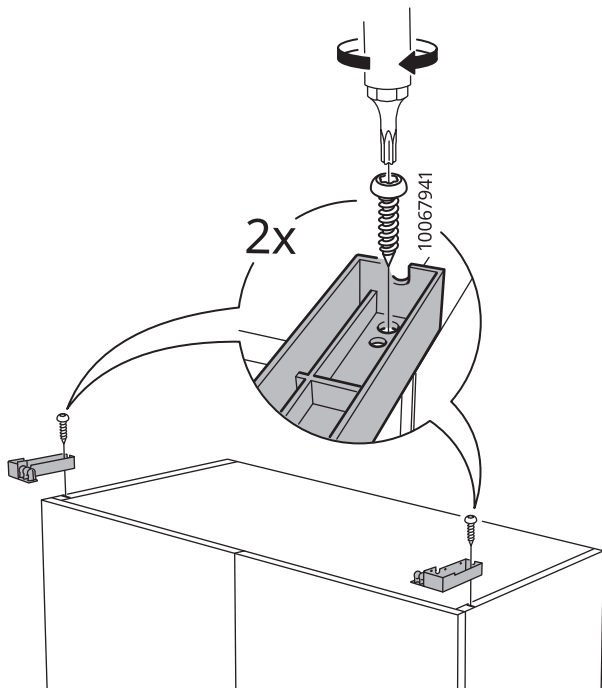



5

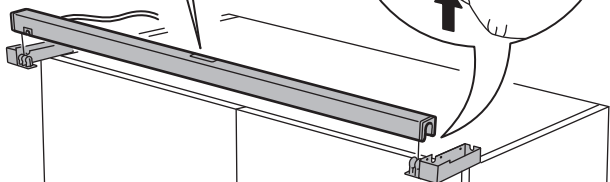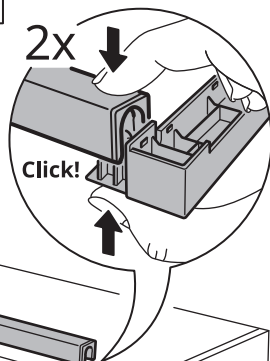  
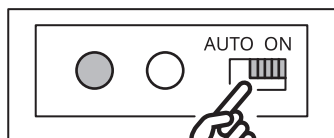 


6

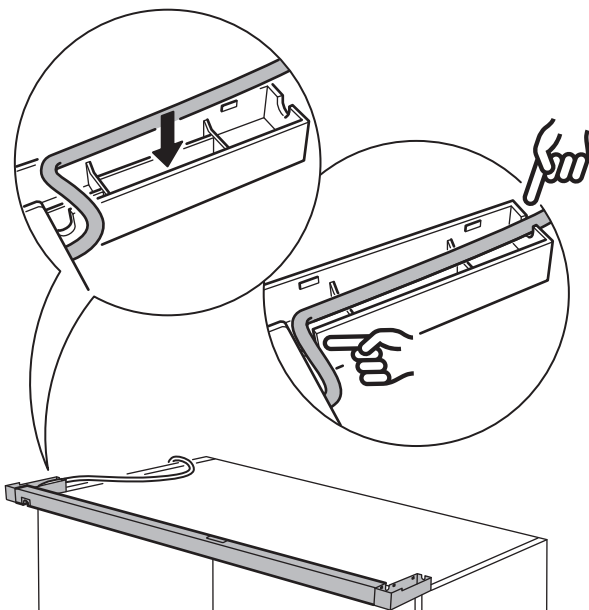 


7


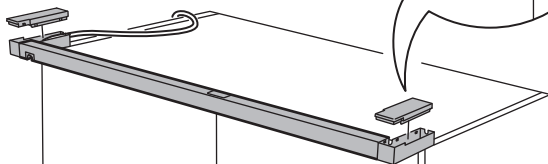 
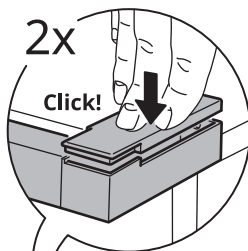 


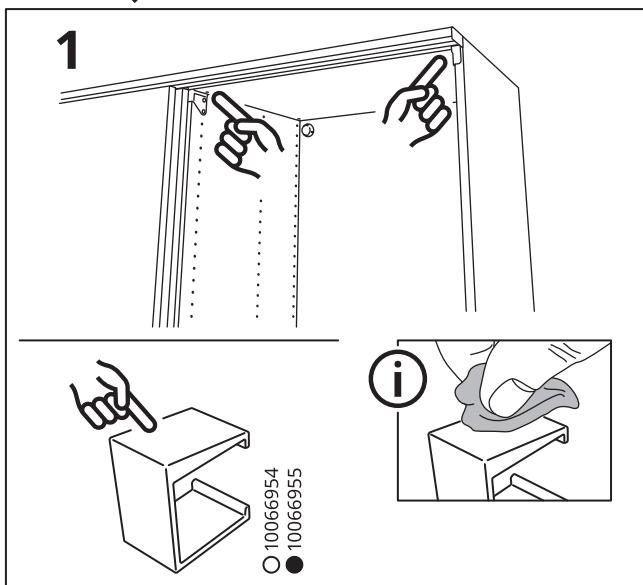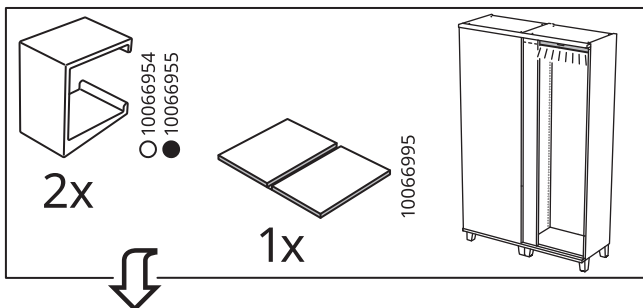  

2

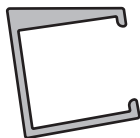 

2x

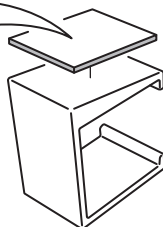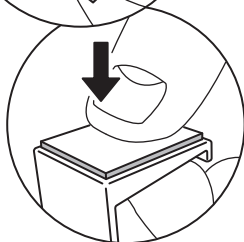  
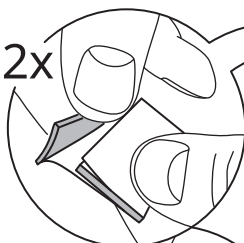 


10066995


○ 10066954


● 10066955

  3

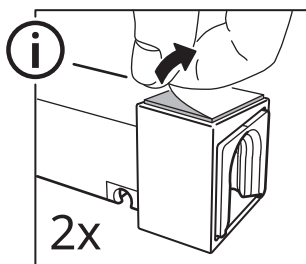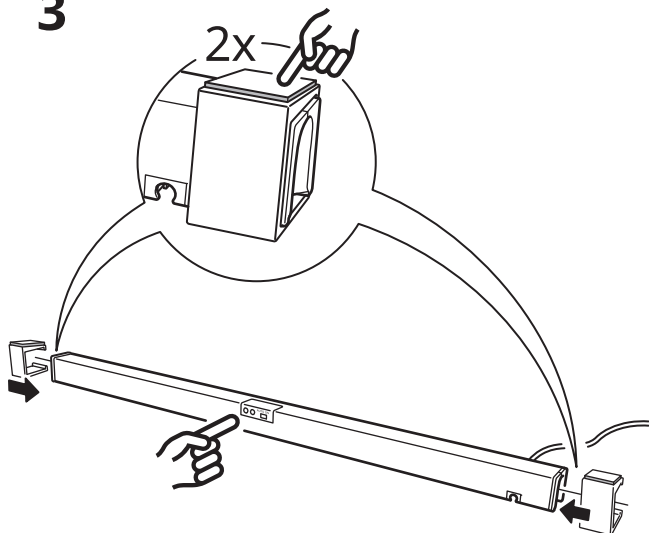

4

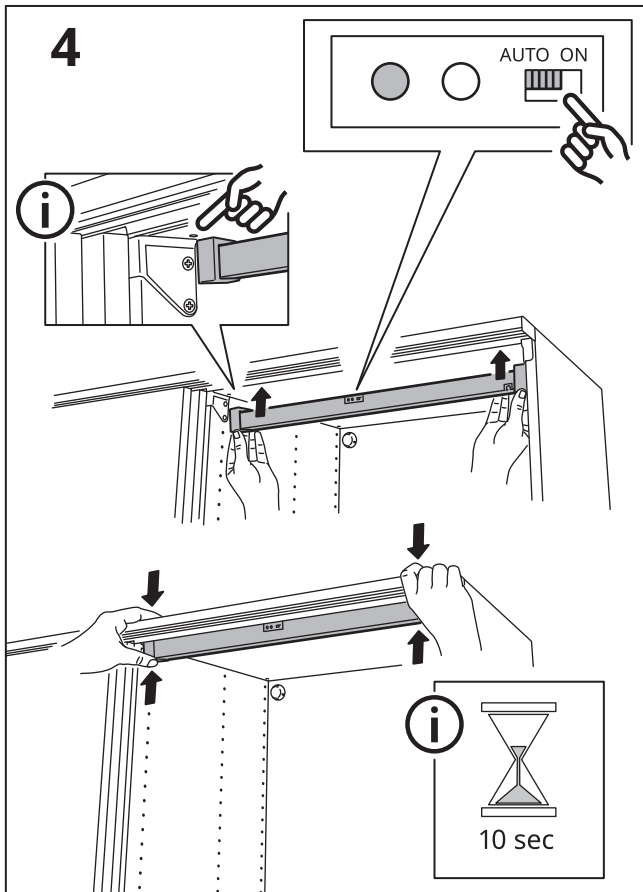 



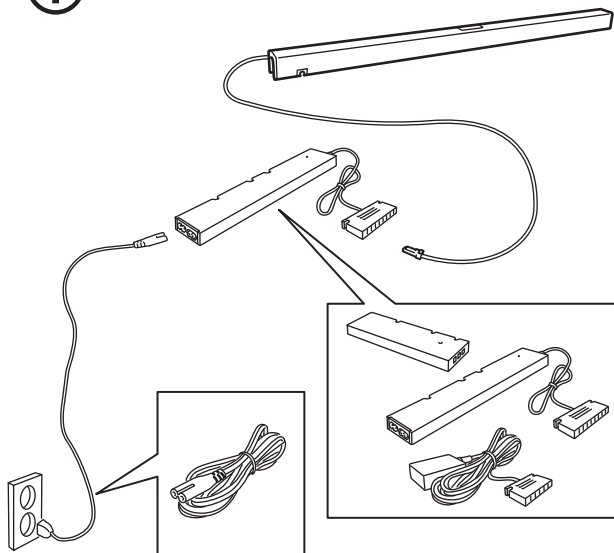 



English


LED driver and power supply cord are sold separately.







עברית

           ספק כוח LED וכבל החשמל נמכרים בנפרד.

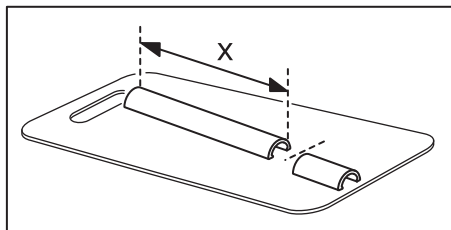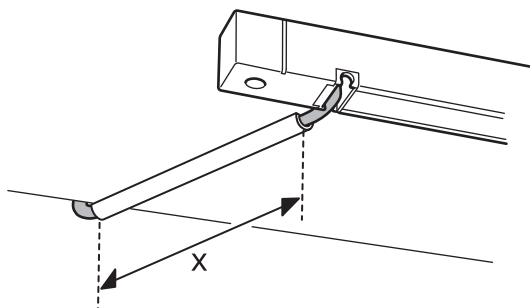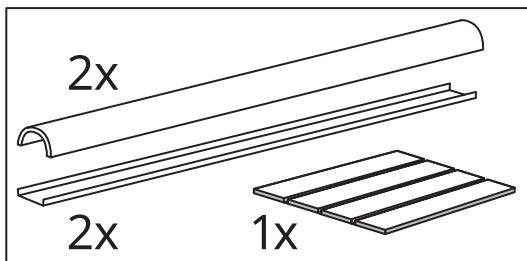

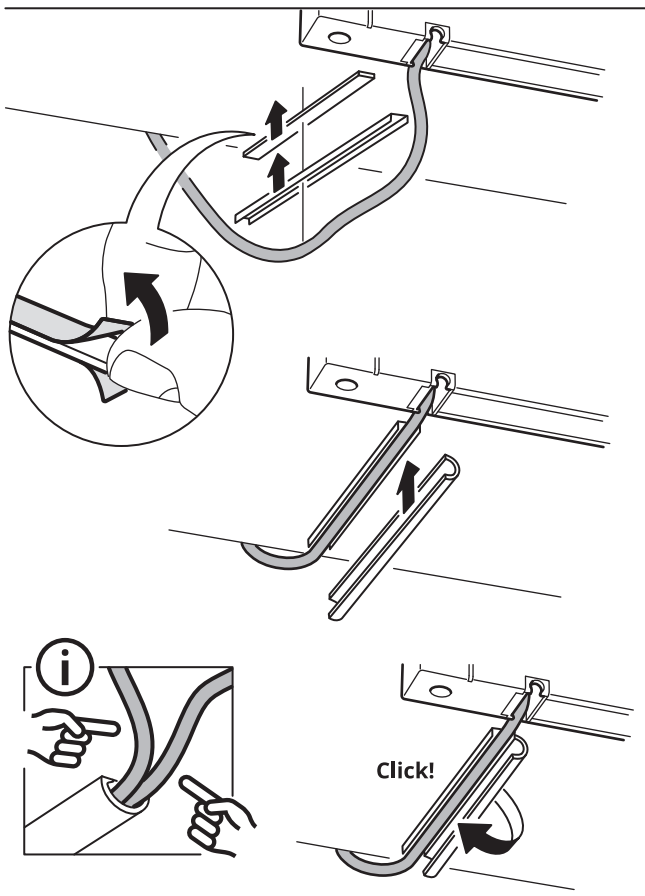

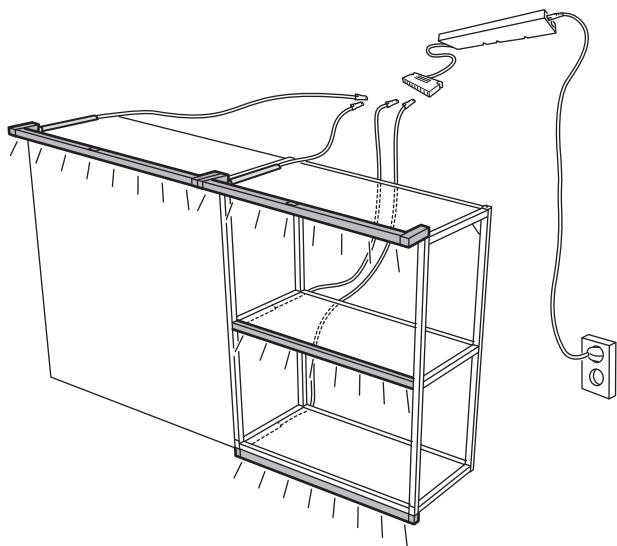

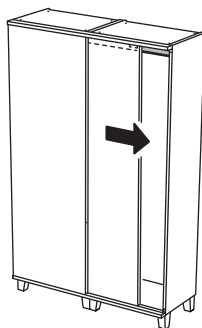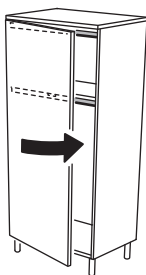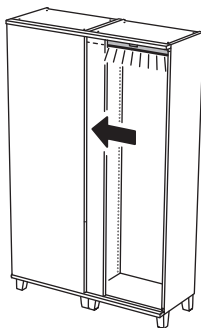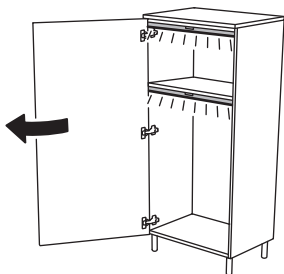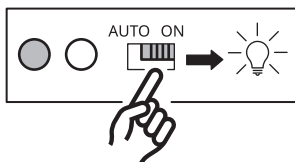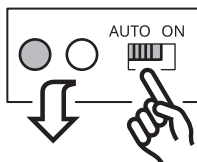

4 sec

