 


SONGESAND



Design and Quality
IKEA of Sweden

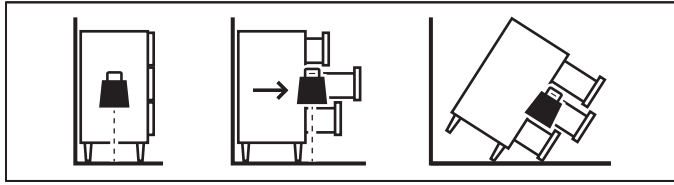

English

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, or shelves.

עברית

אזהרה

נפילת הרהיט עלולה לגרום לפגיעה גופנית חמורה או קטלנית.

 
יש לקבע את הרהיט לקיר באמצעות אבזרי הקיבוע המצורפים.

 
על-מנת למזער את סכנת הפגיעה הגופנית או המוות מנפילת רהיטים:

 
 
 
 
מקמו את הפריטים הכבדים ביותר במגירה התחתונה.

 
 
 
הימנעו מלהניח טלוויזיות או פריטים כבדים אחרים על מוצר זה.

אין לאפשר לילדים לטפס על המגירות, הדלתות או המדפים.

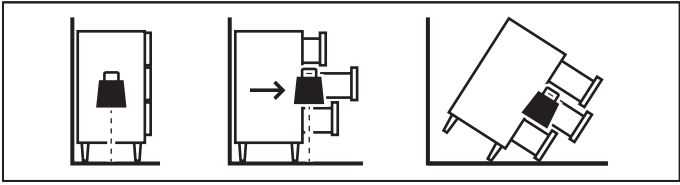

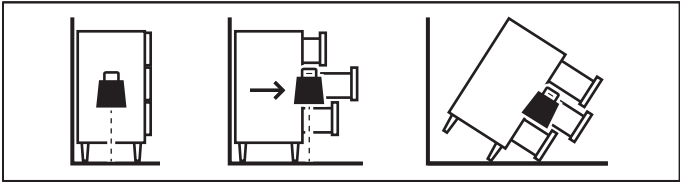

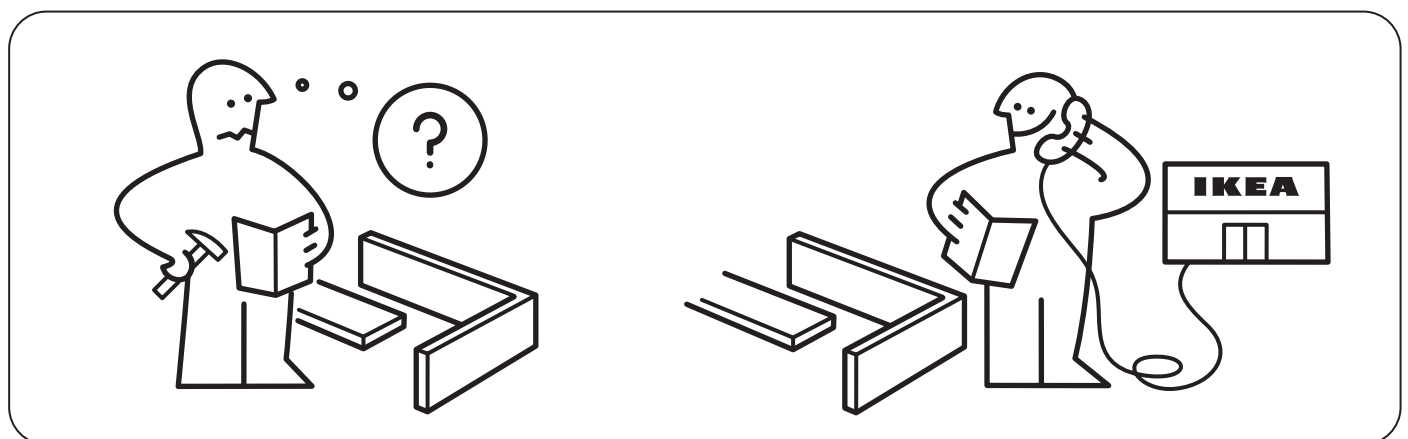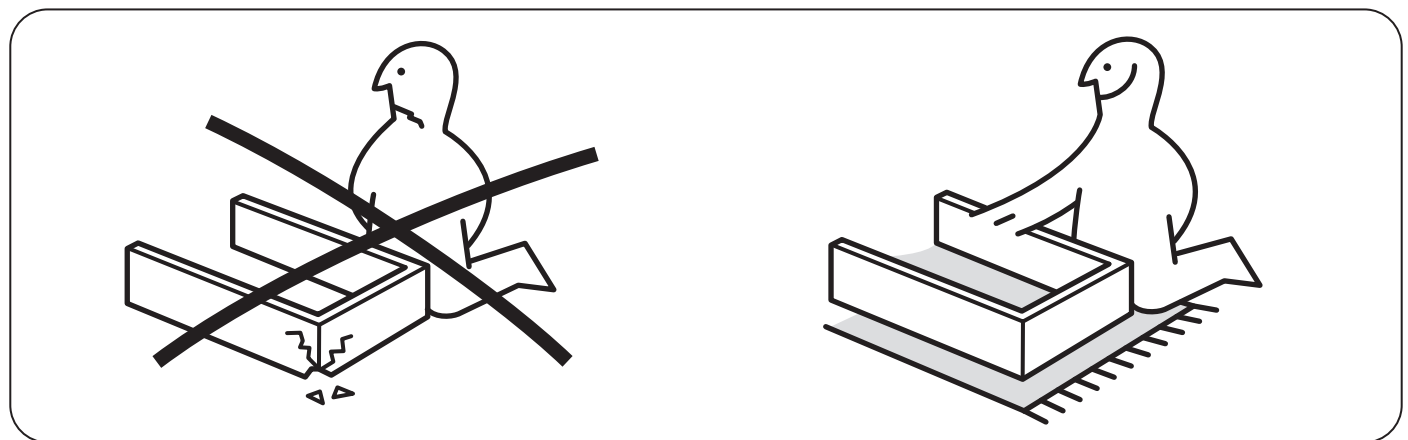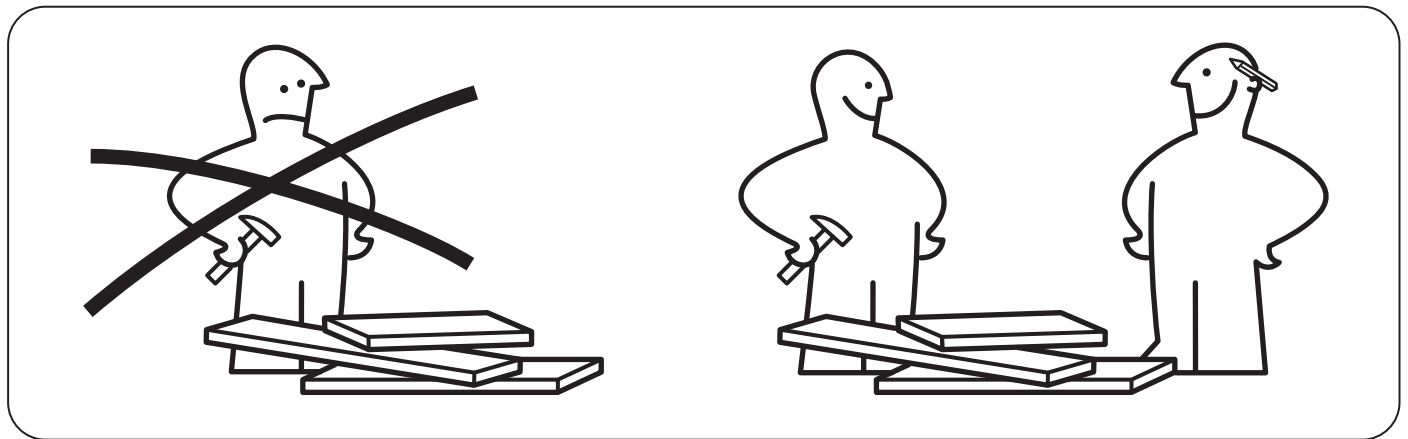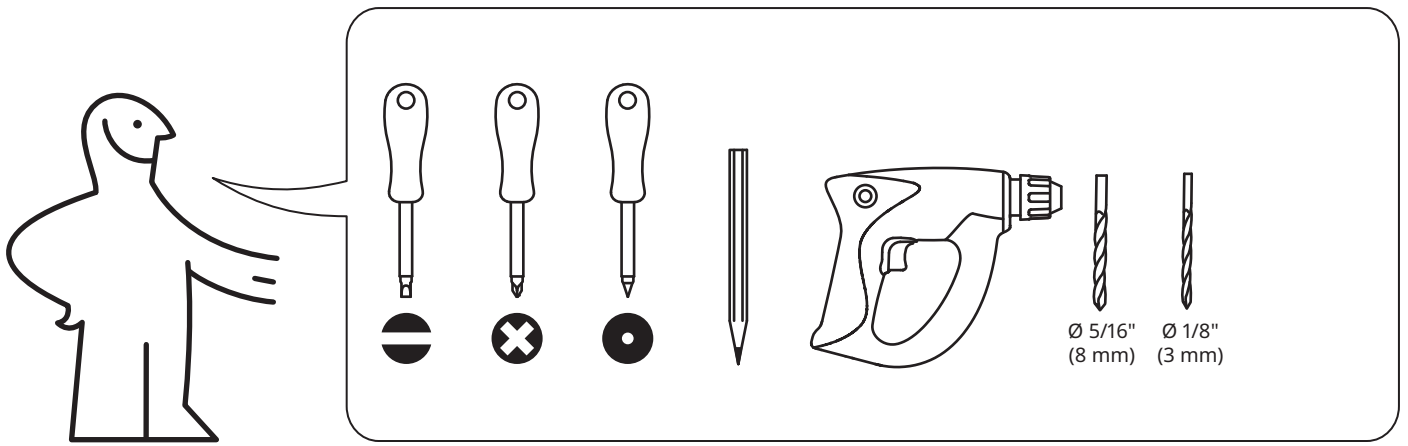

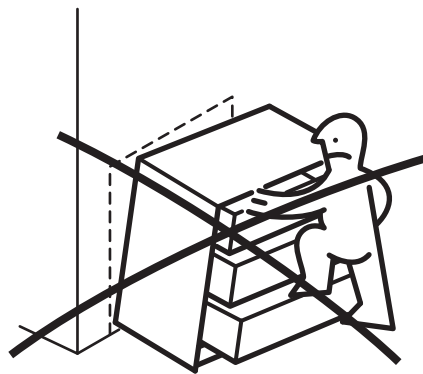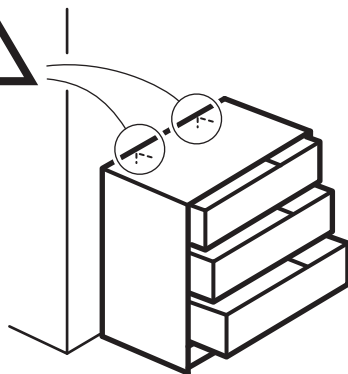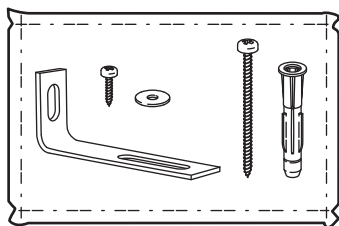

1



118331

16x



101345

18x



105248

4x



146114

 
36x



119252

16x


119250

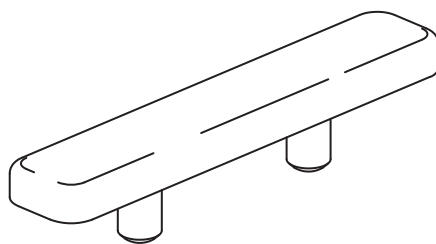

153548

158568

 5x

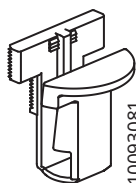

10093081

 
 
16x

 
 


10093082



16x



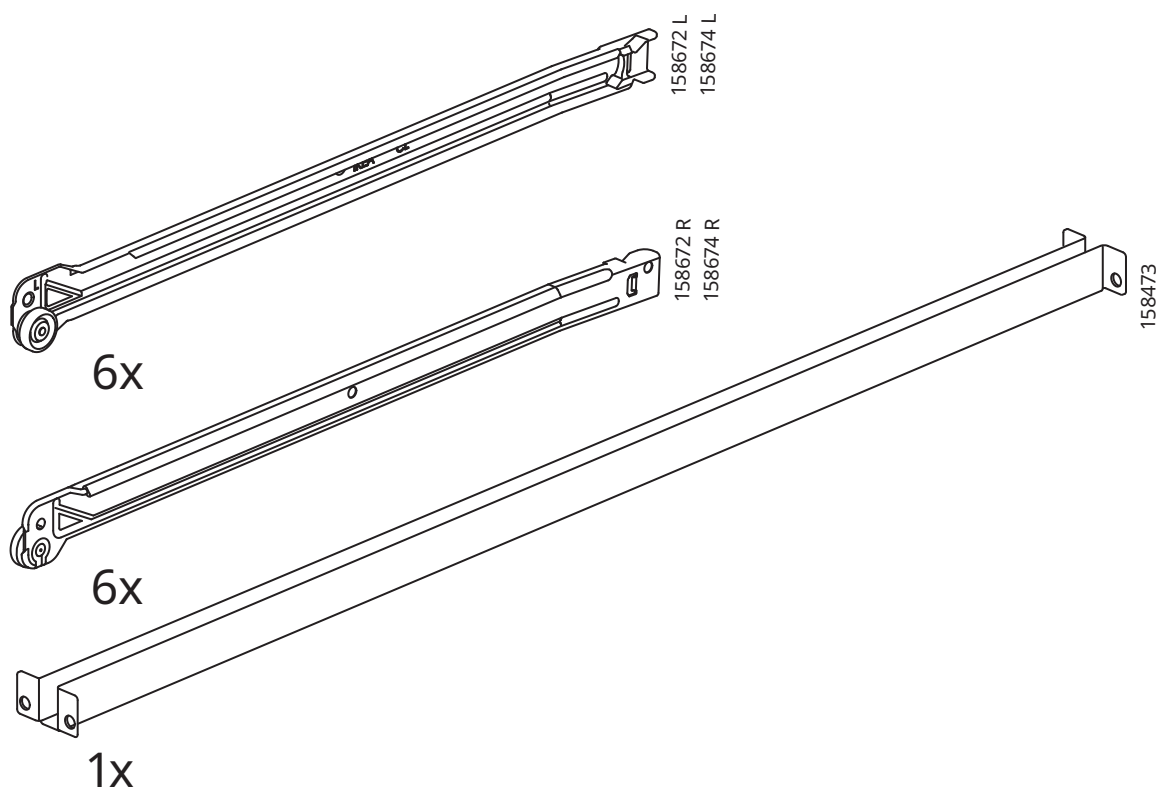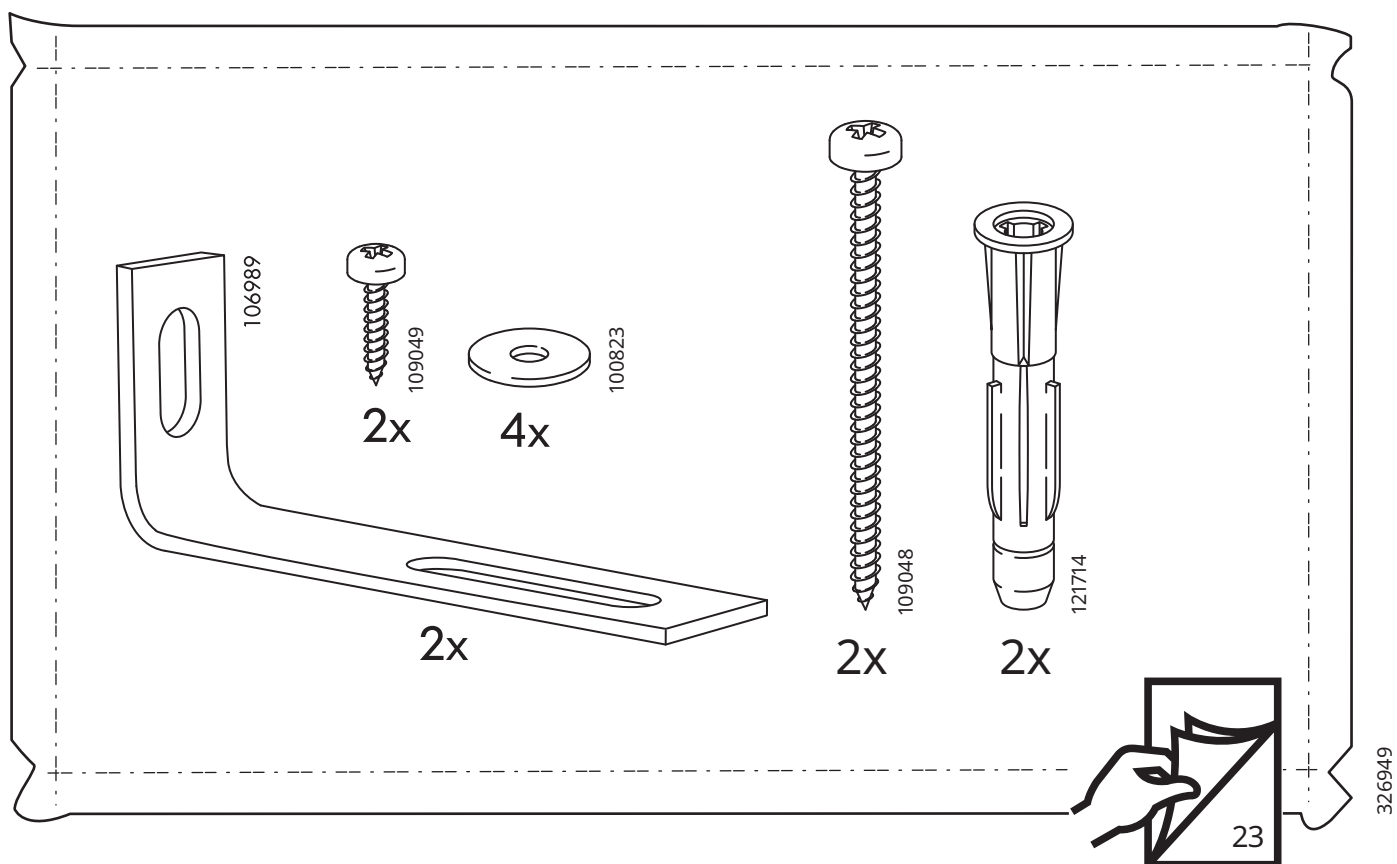


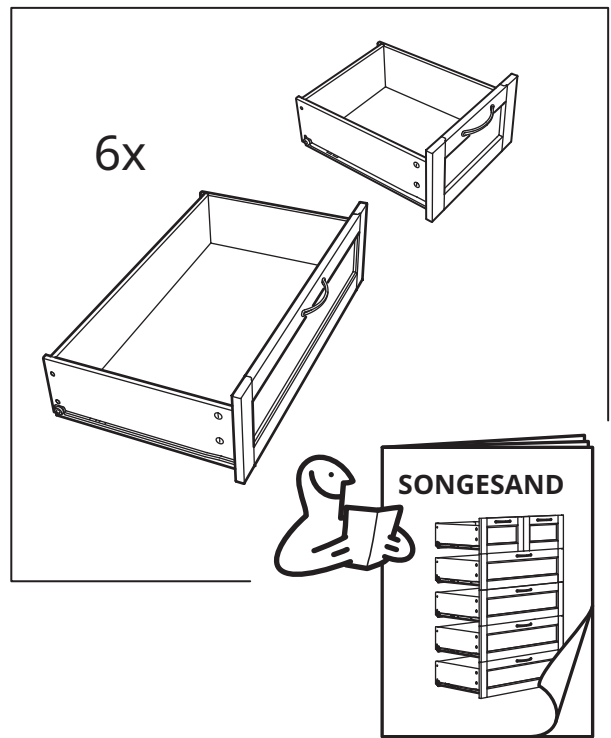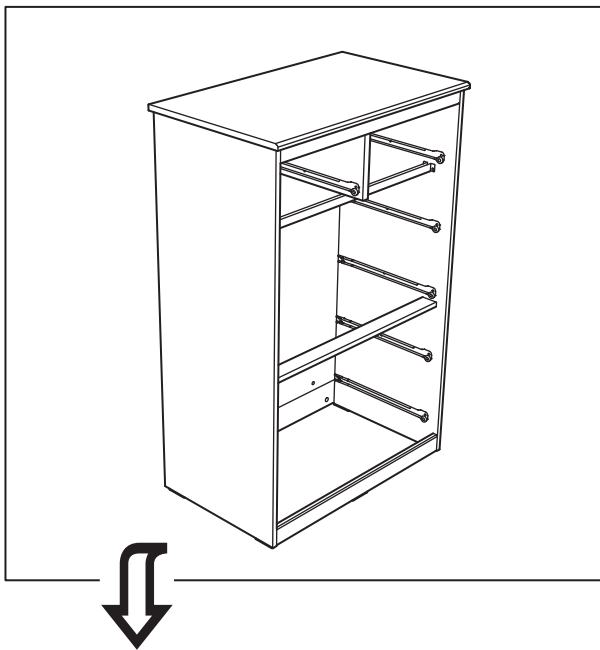


1

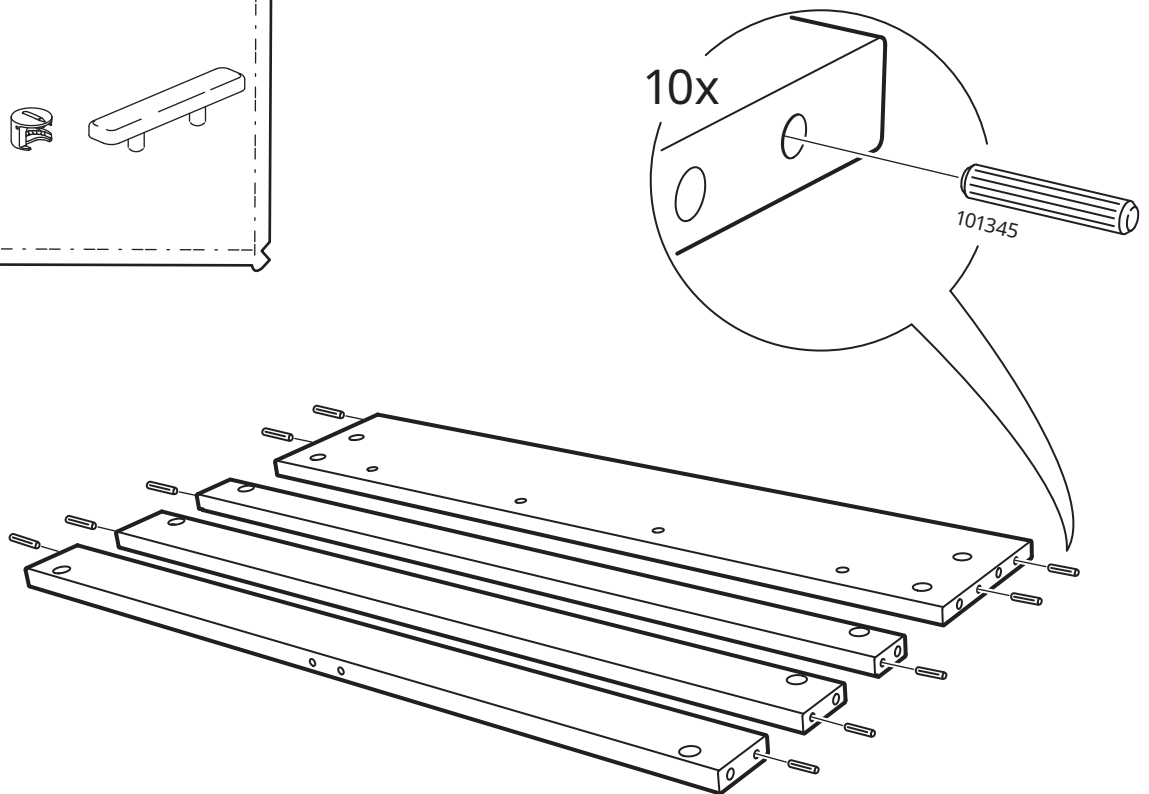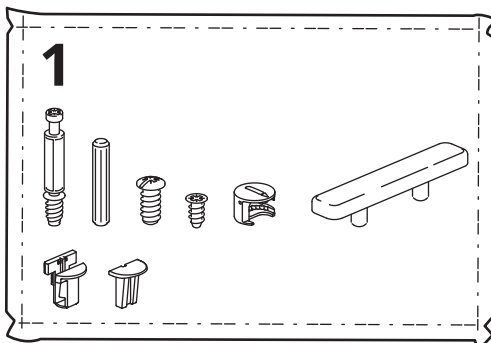  


2

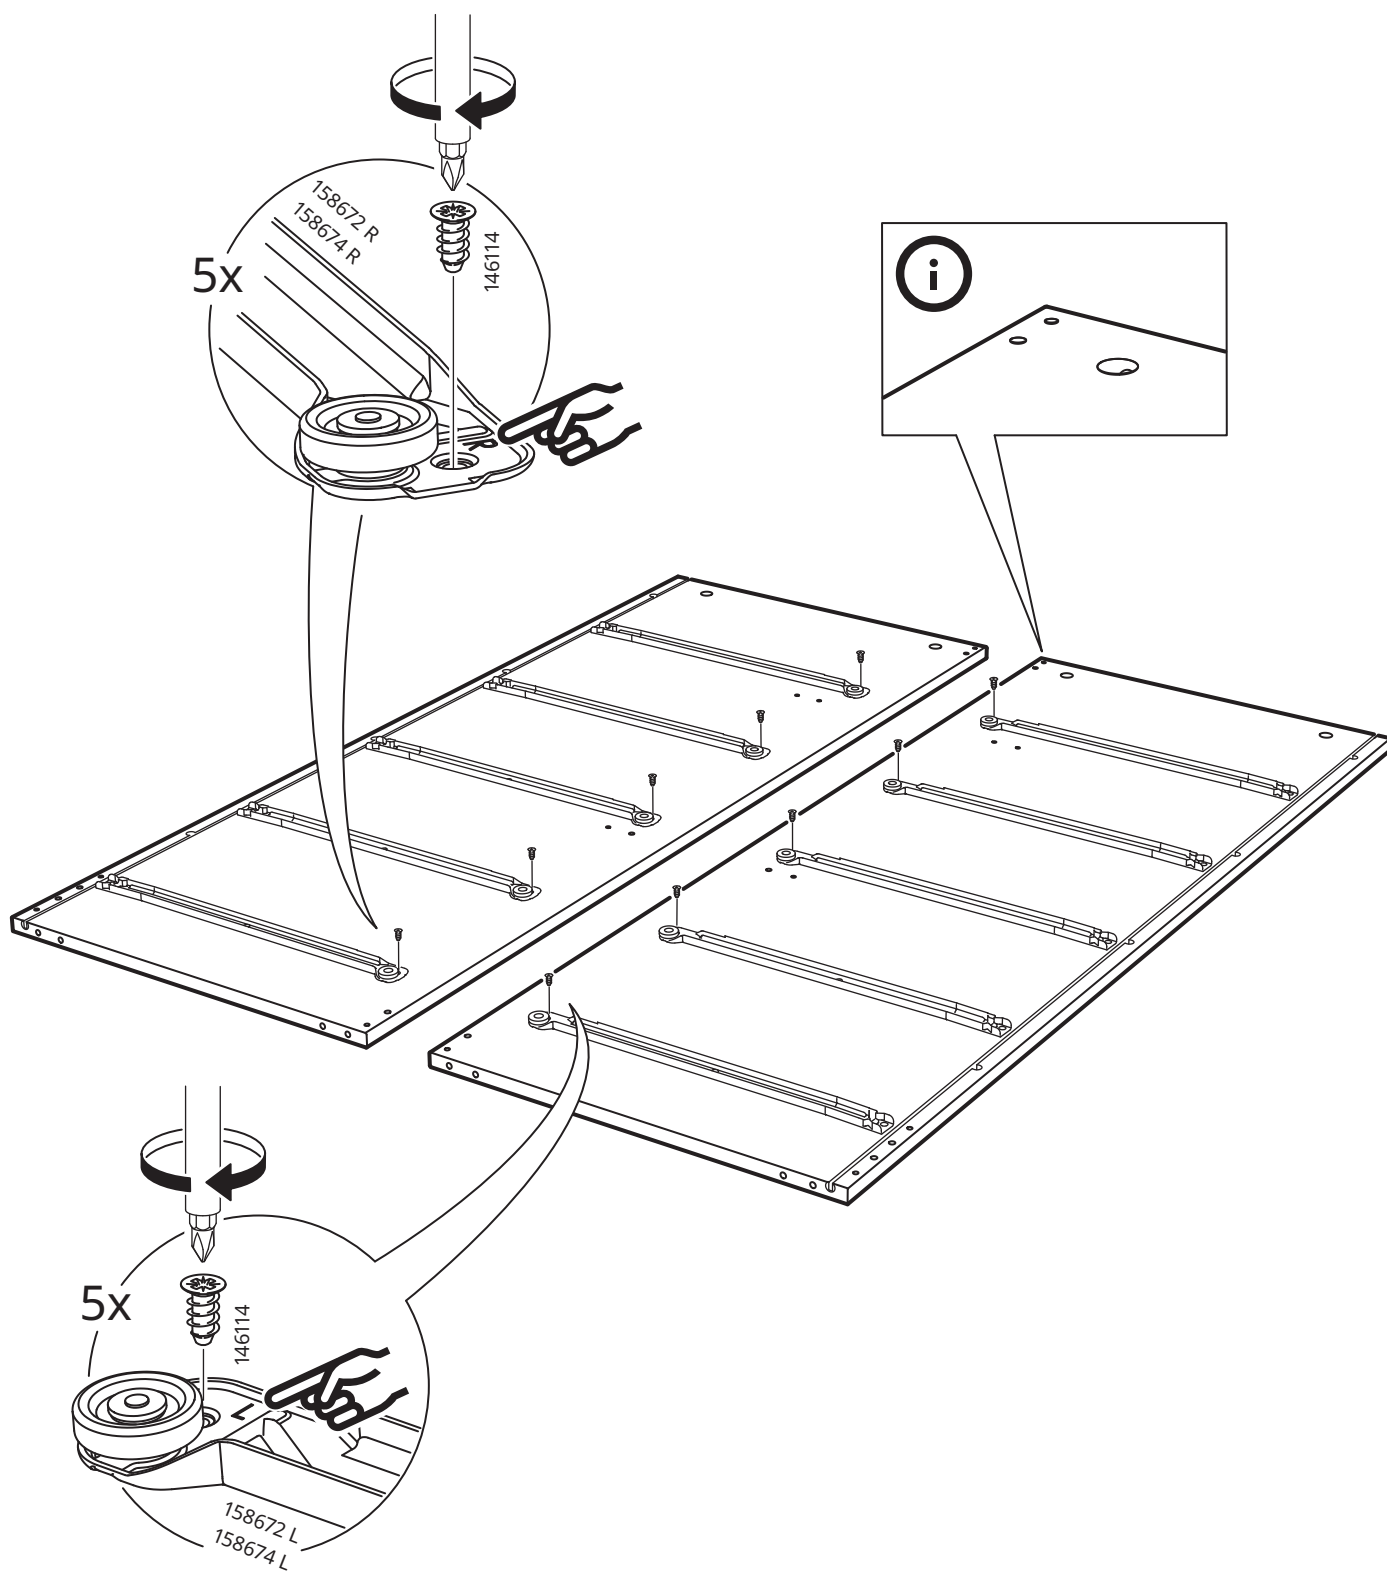 


3

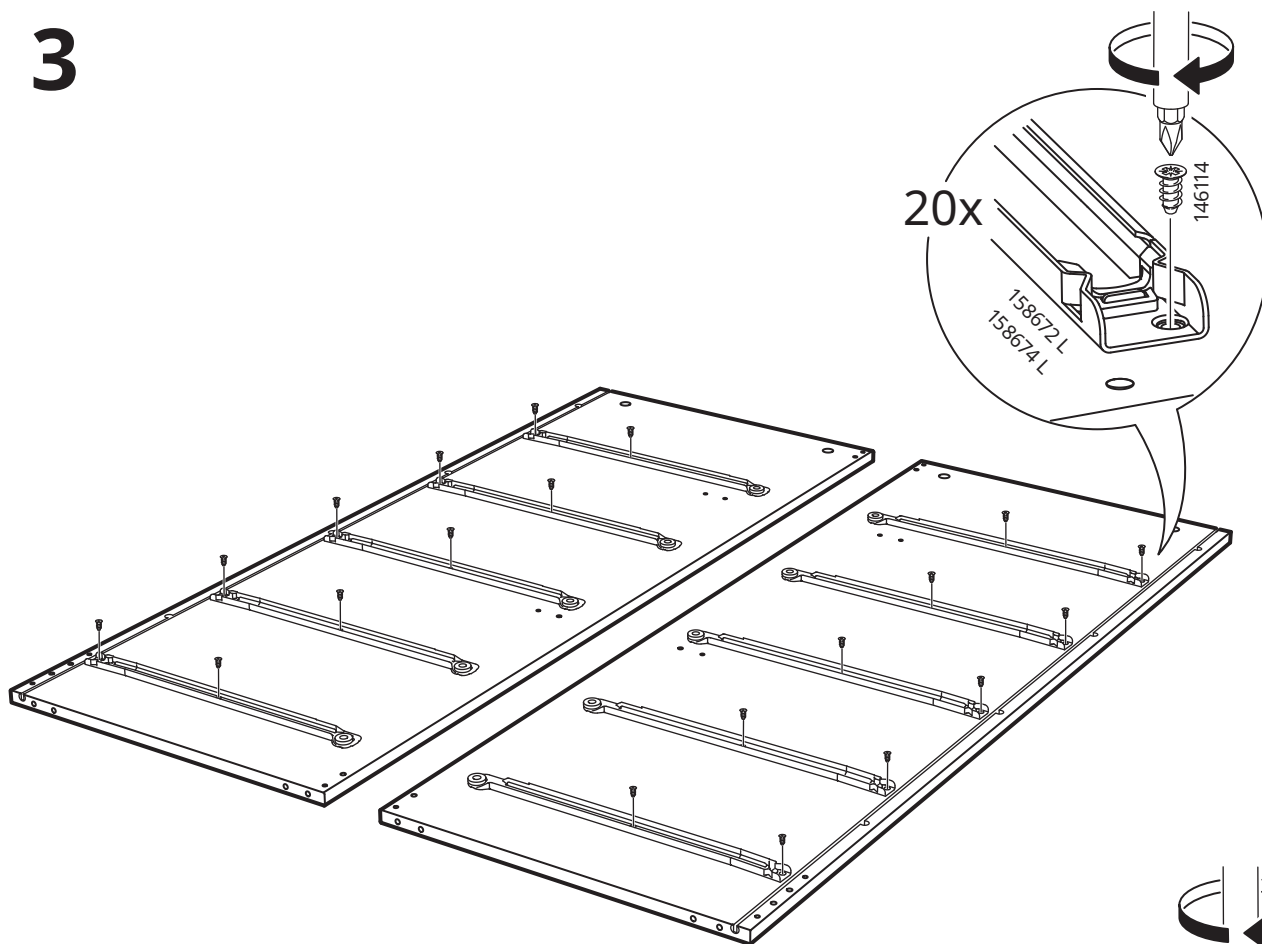 


4

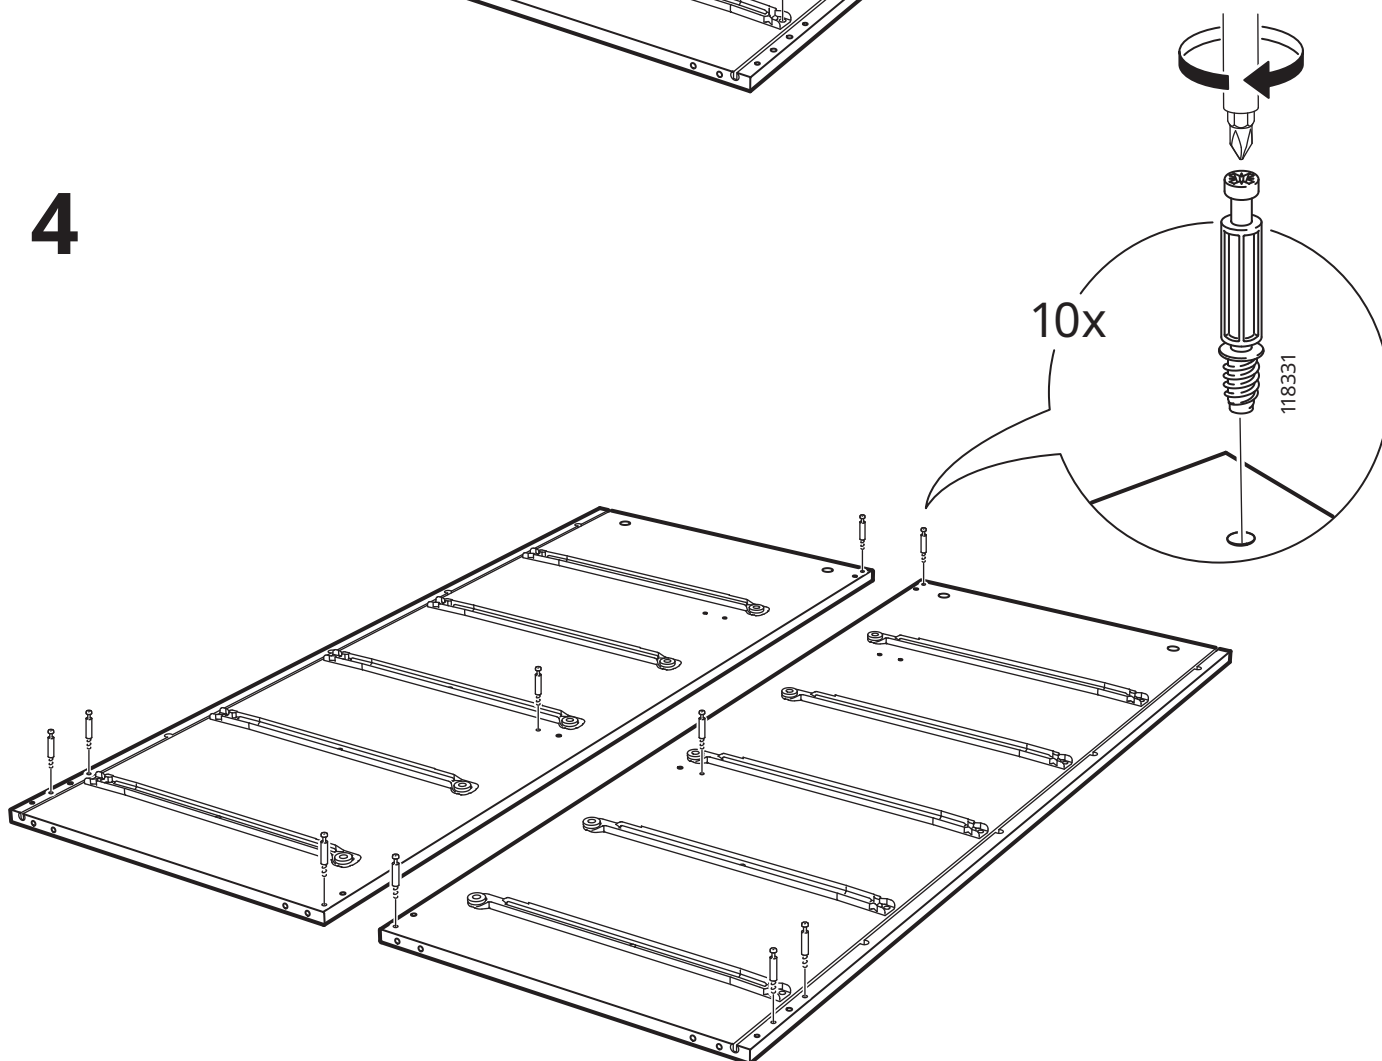 


5

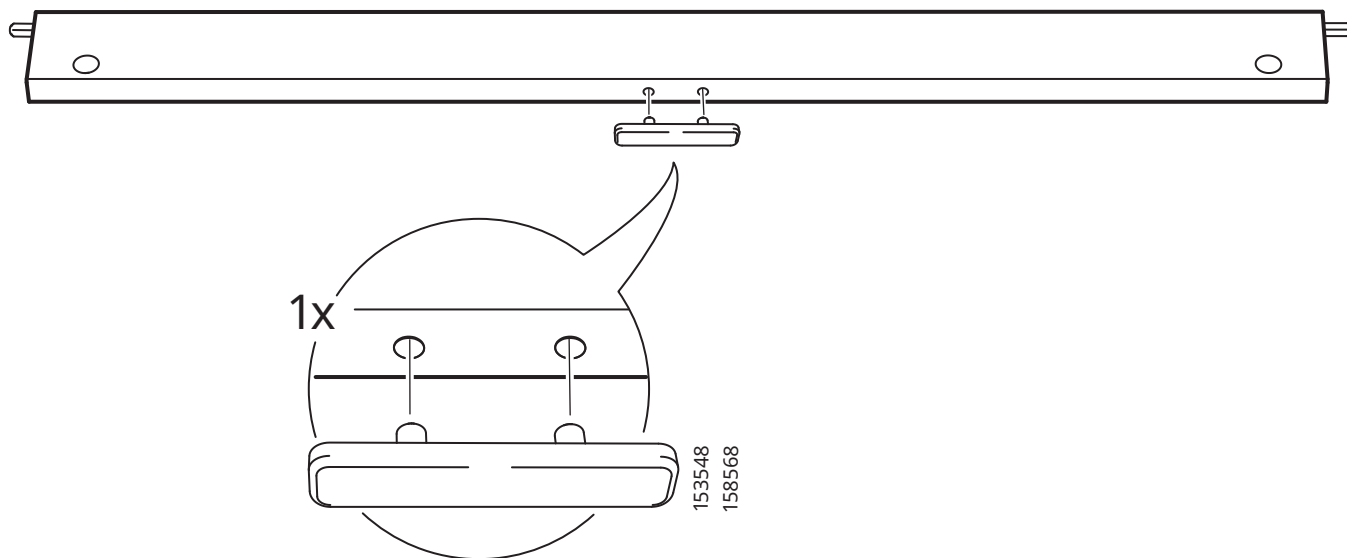 


6

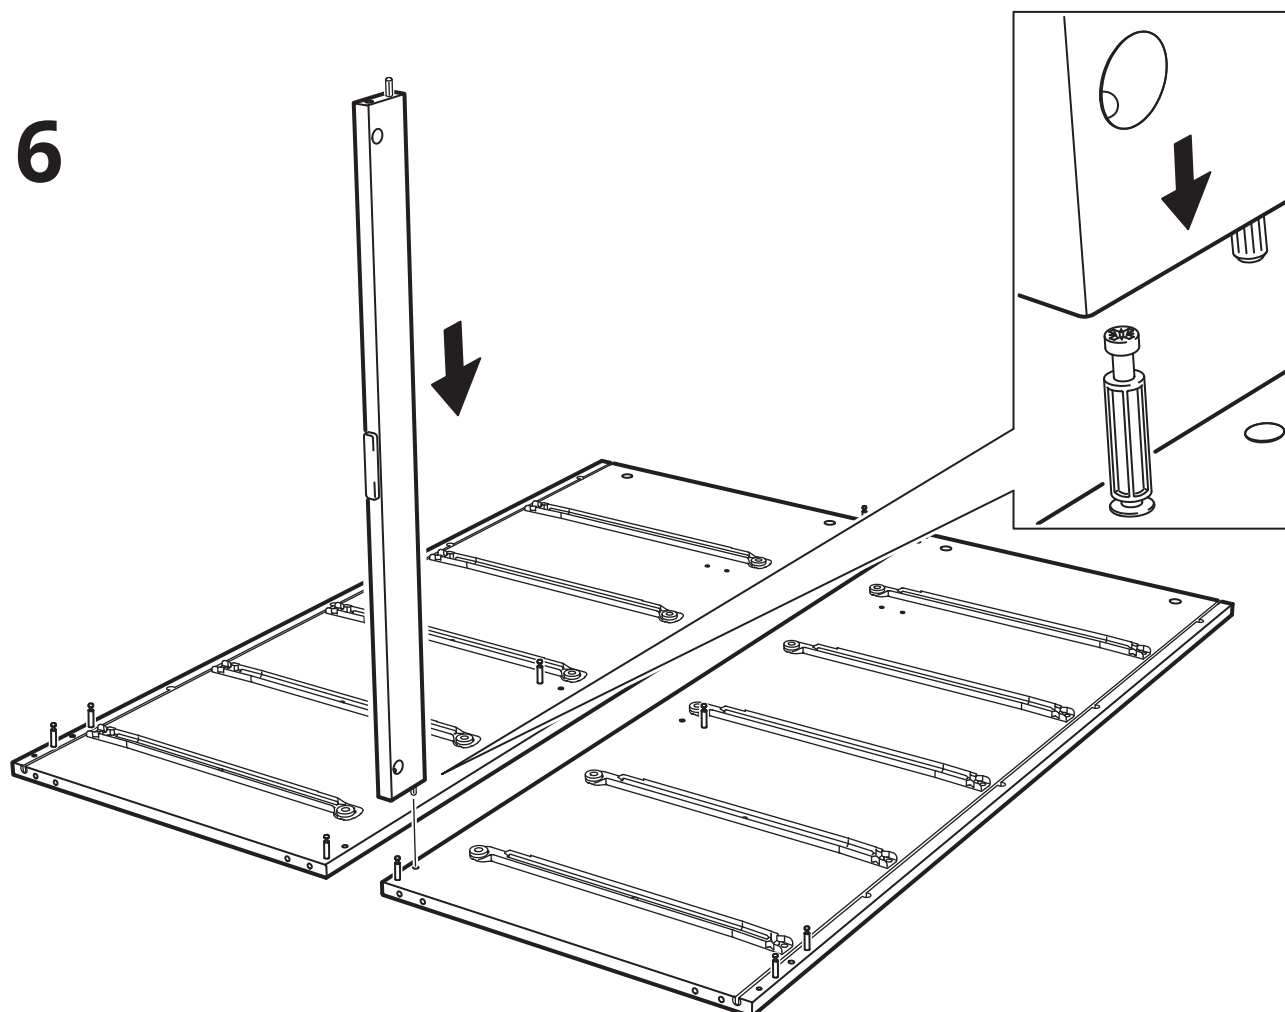 


7

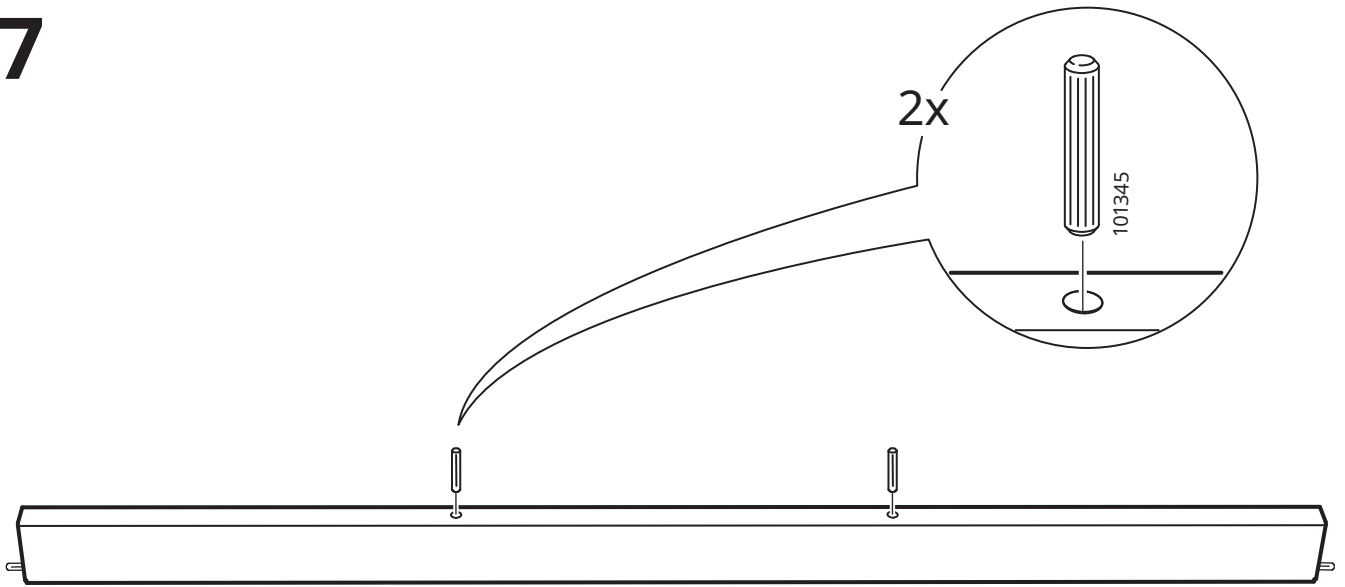 


8

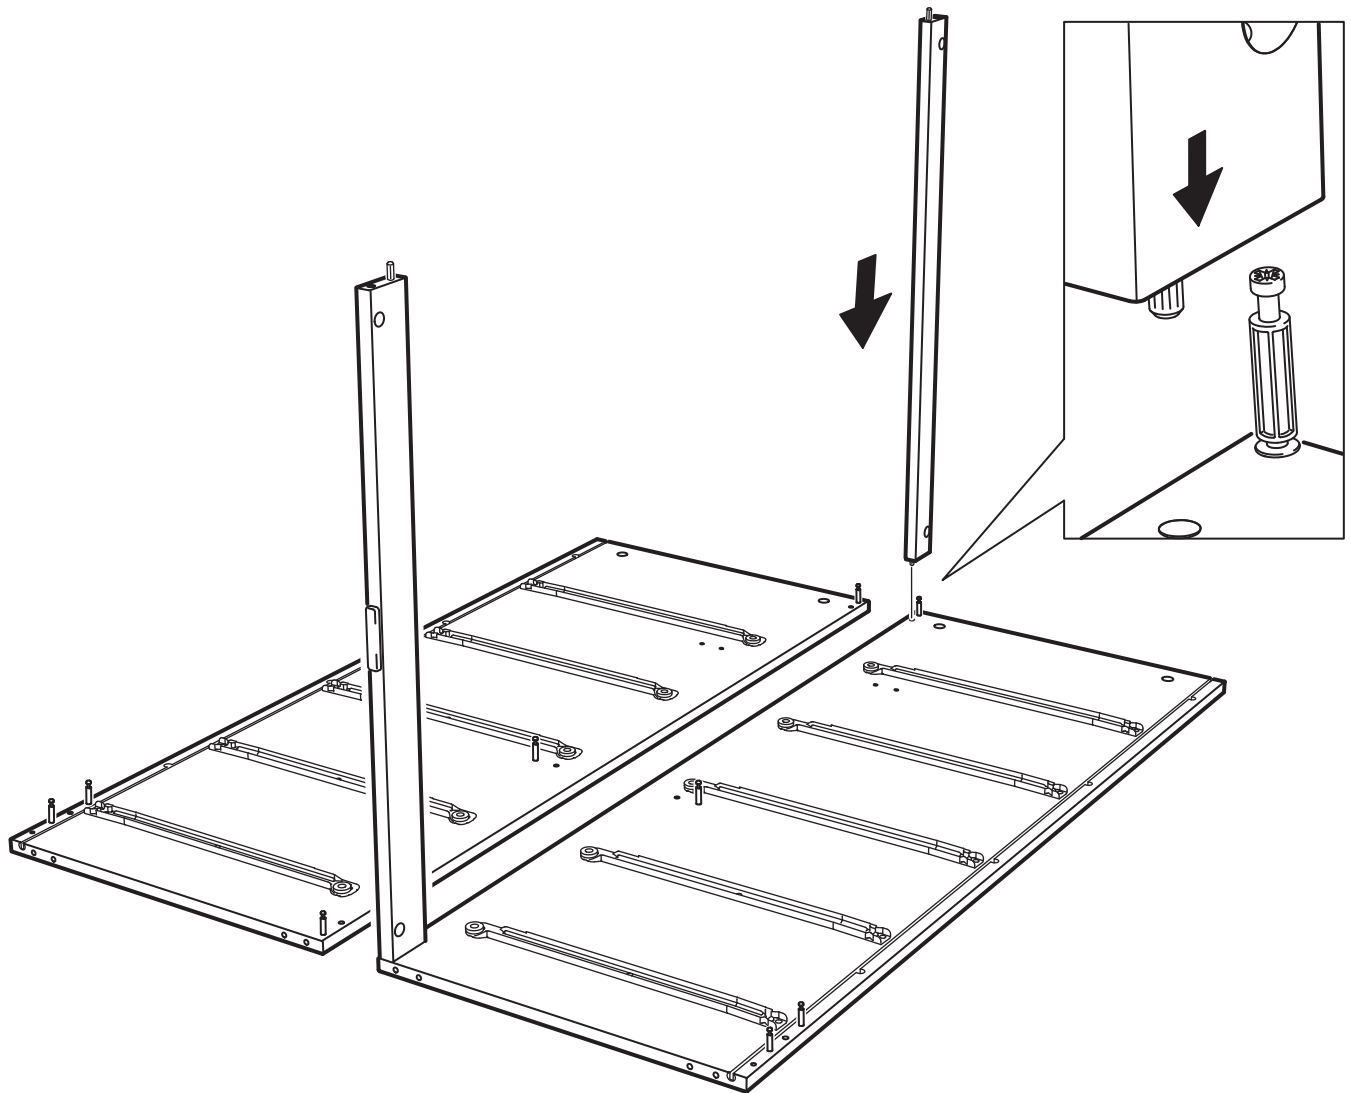 


9

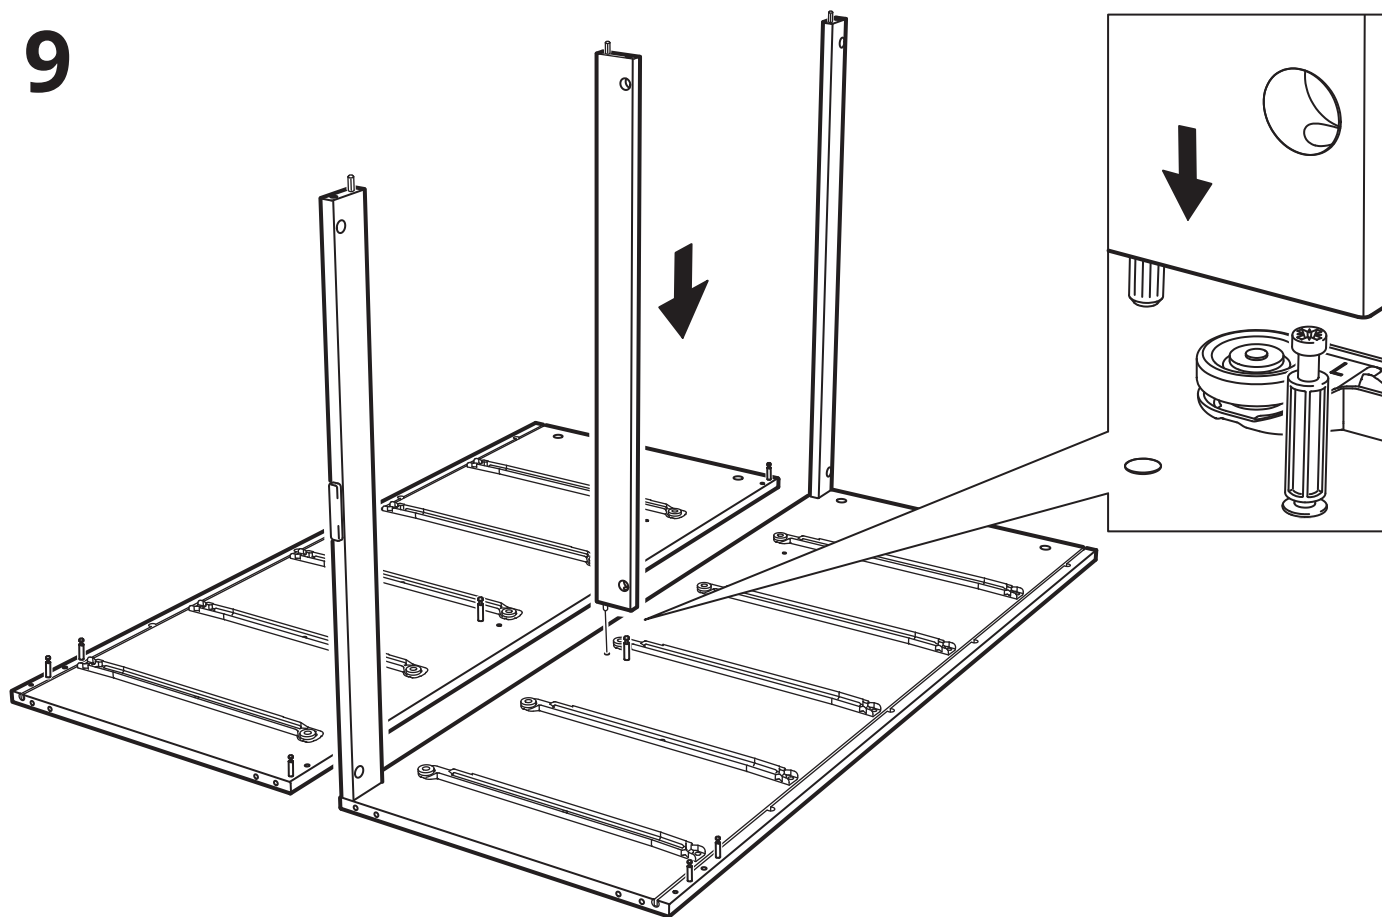 


10

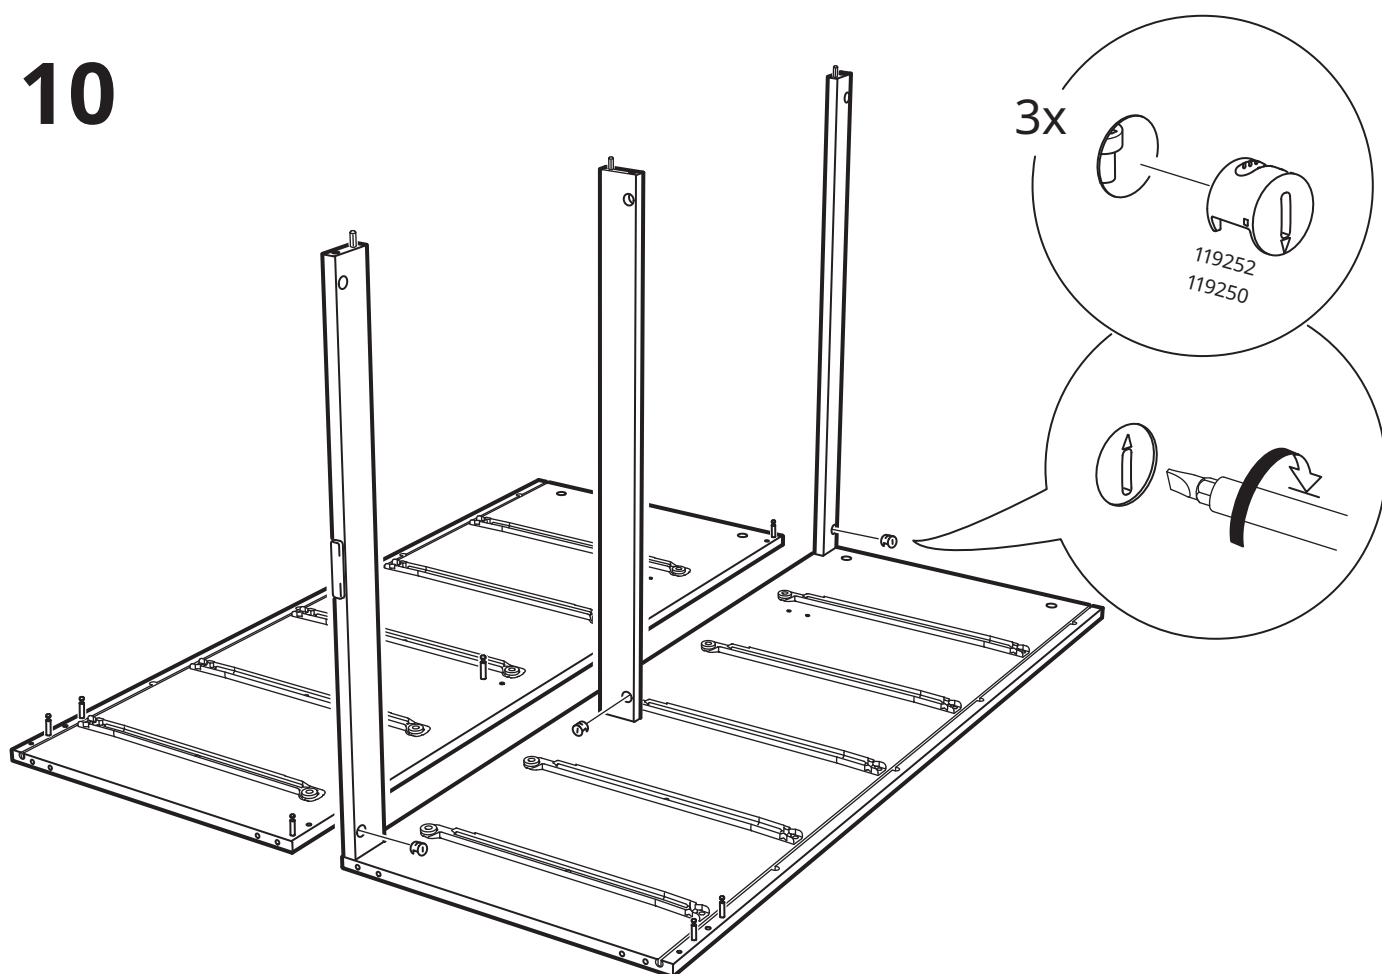 


11

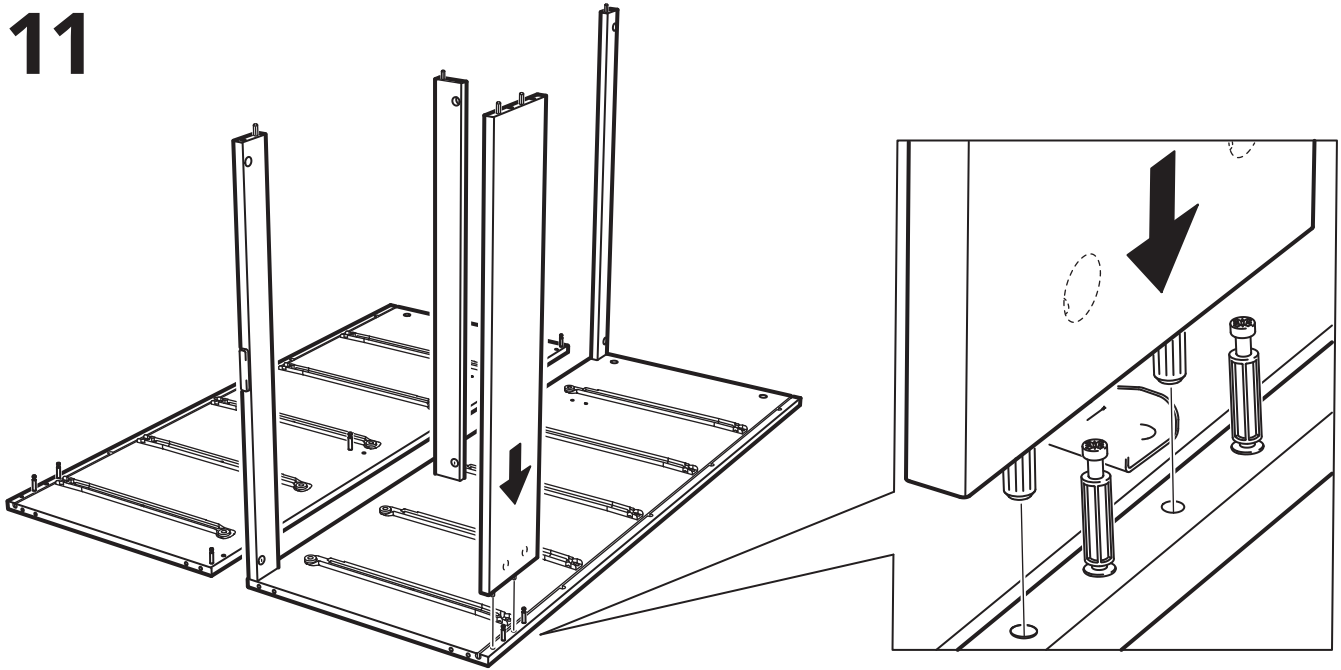 


12

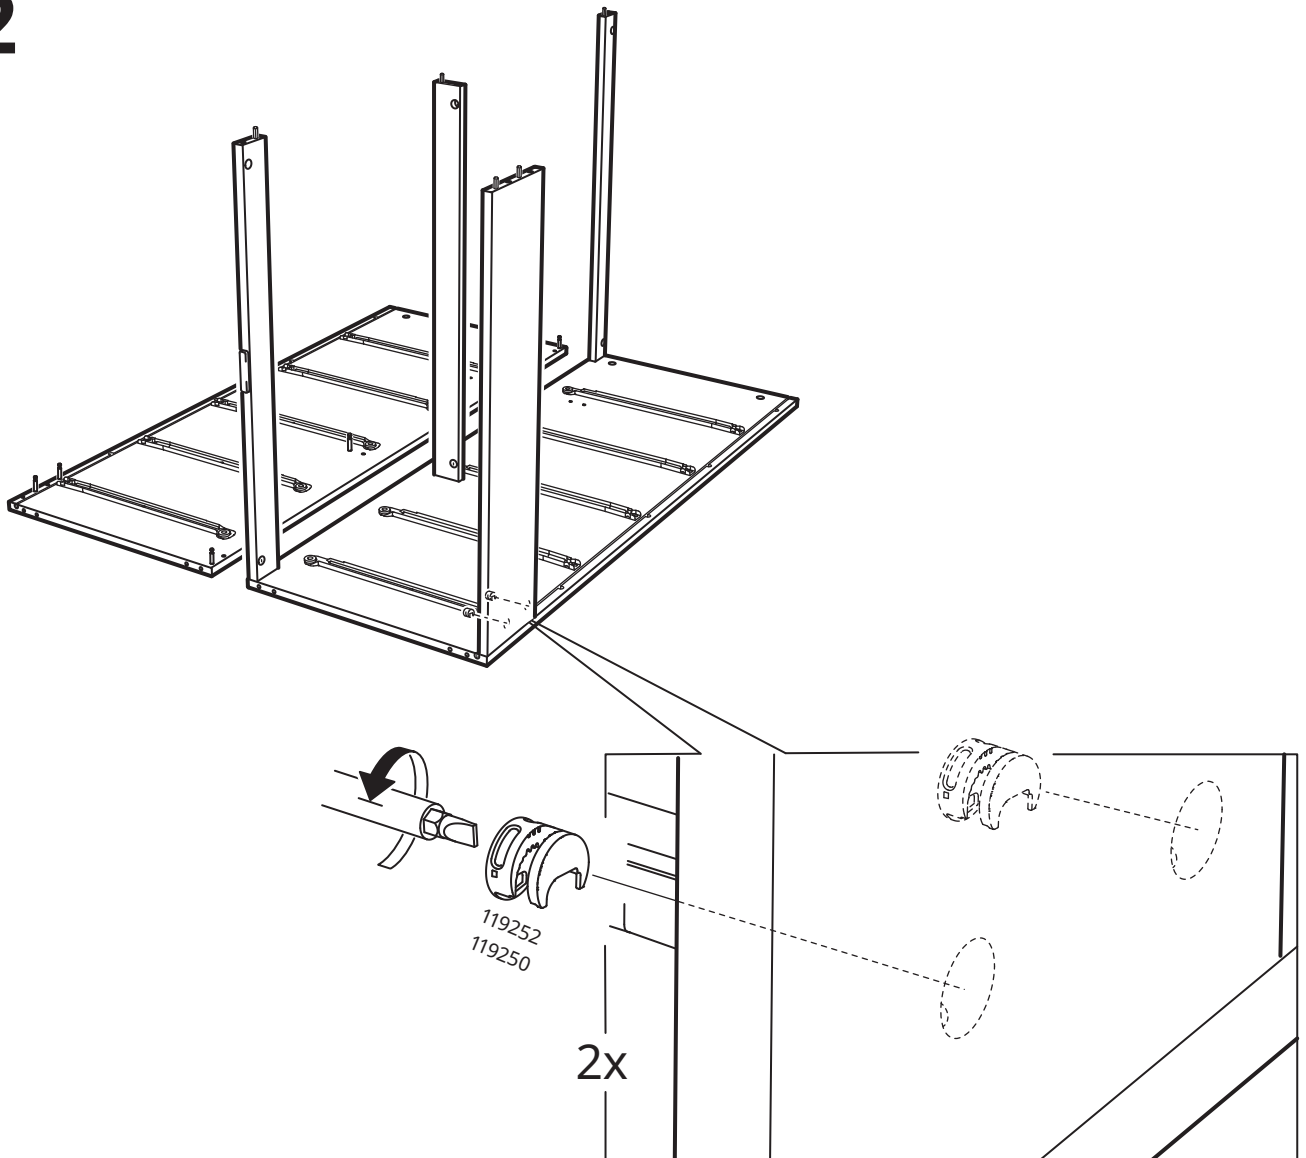 

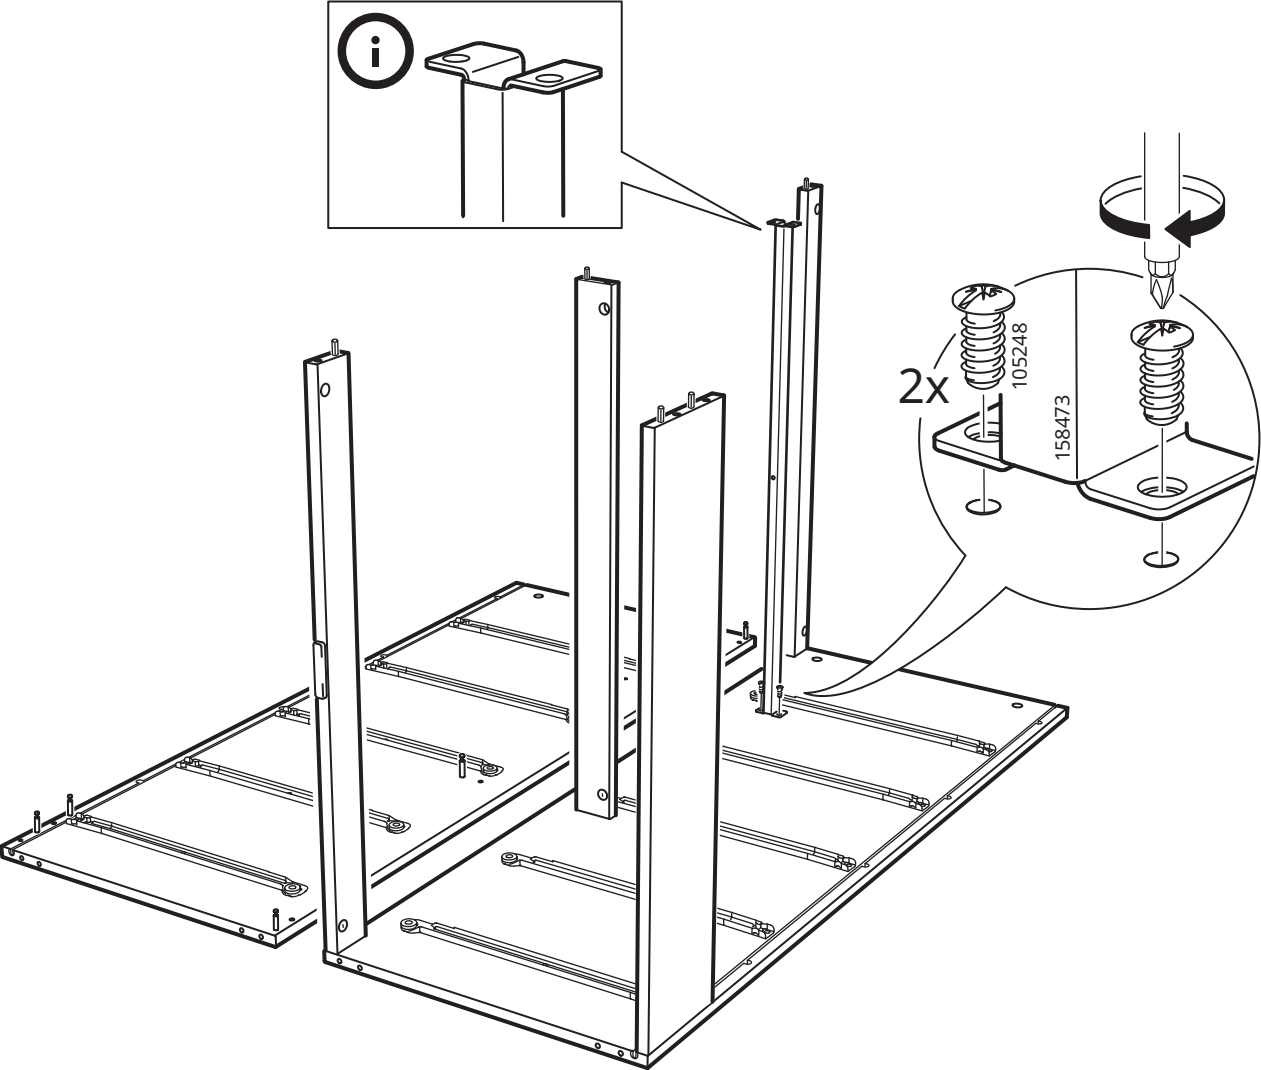 


14


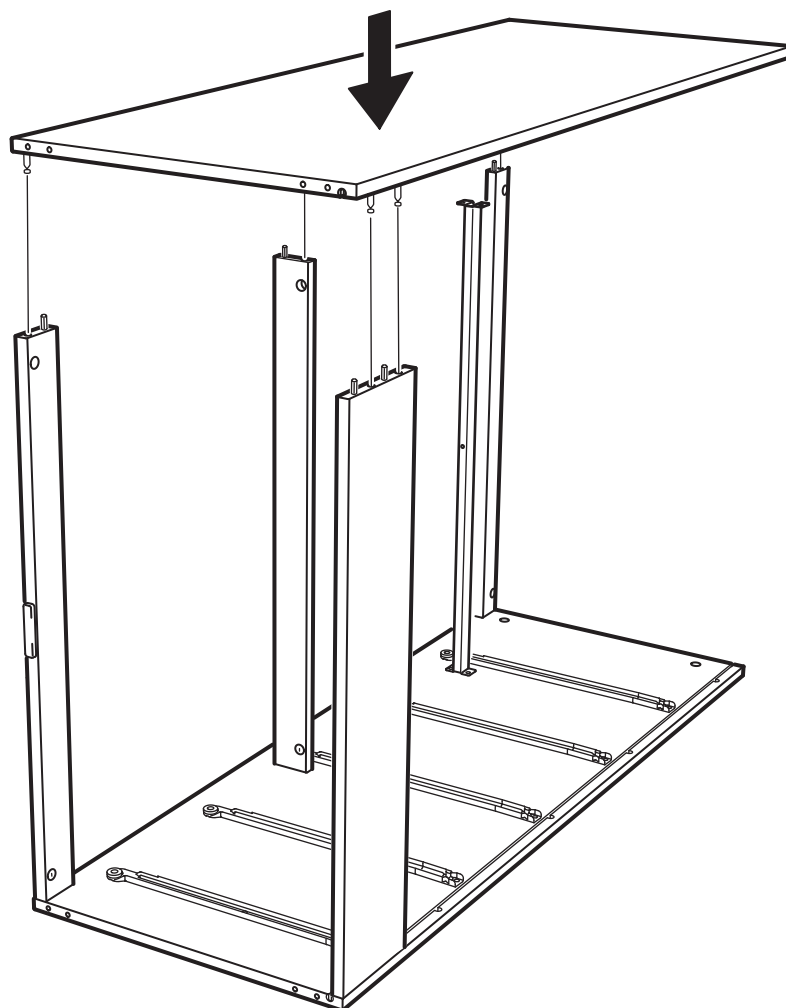 


15

 
5x




119252
119250

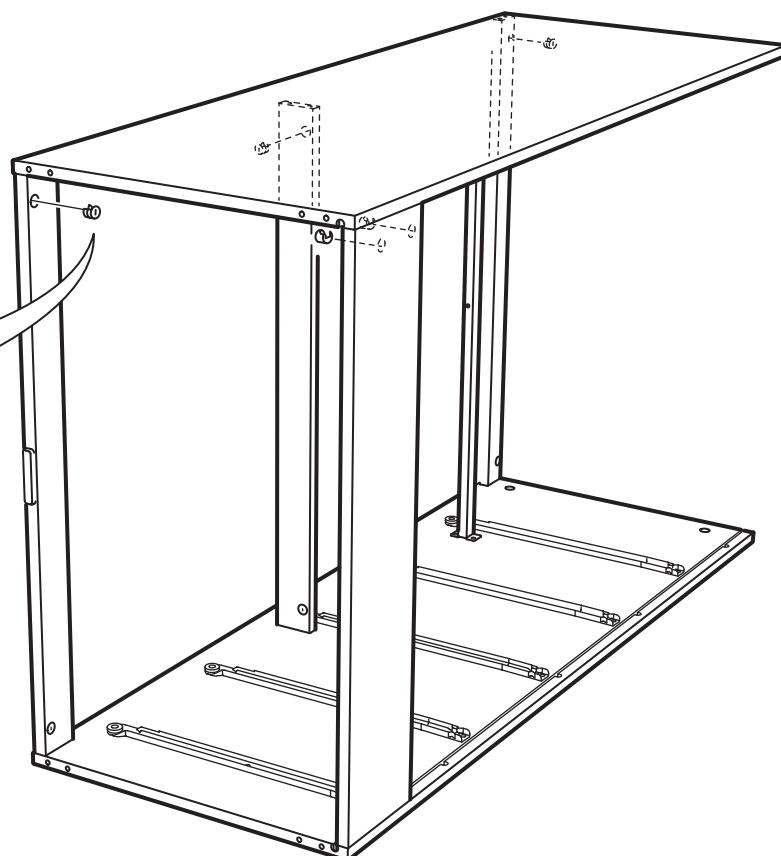  


16

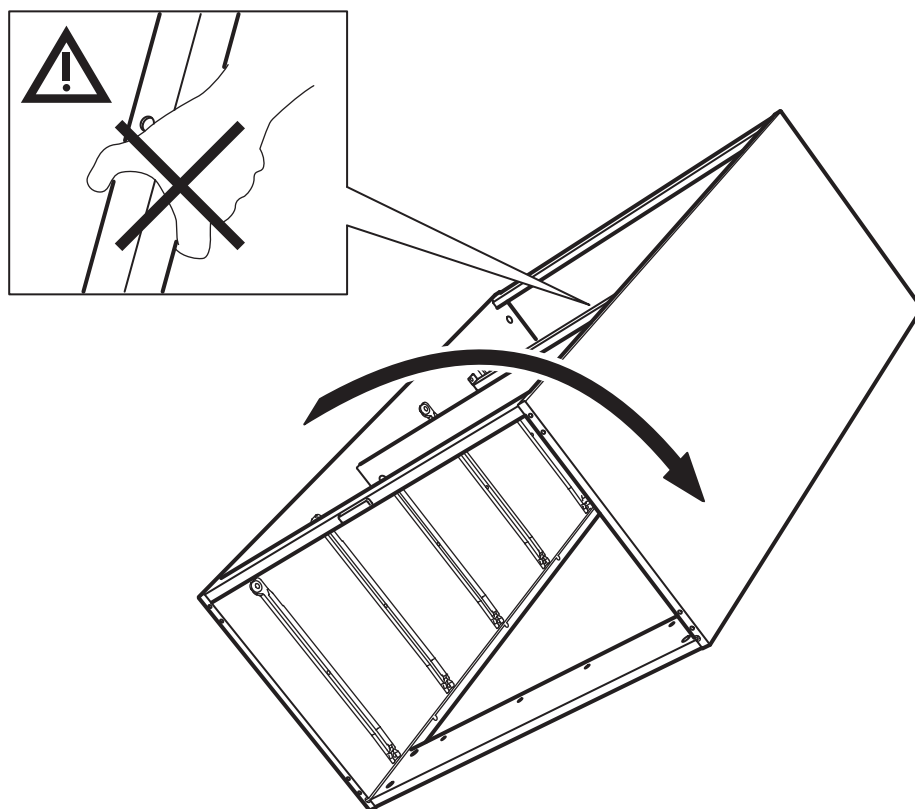 


17

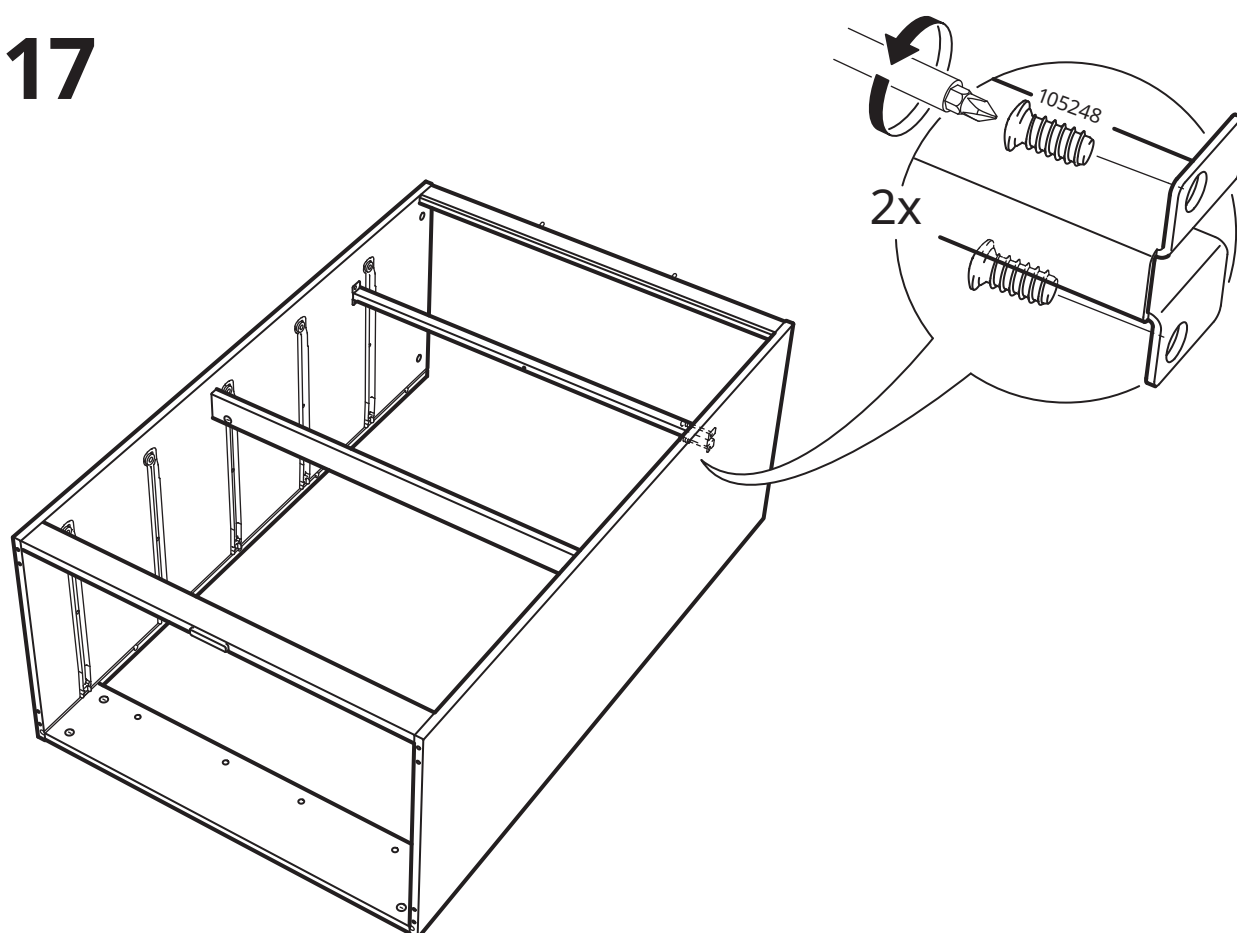 


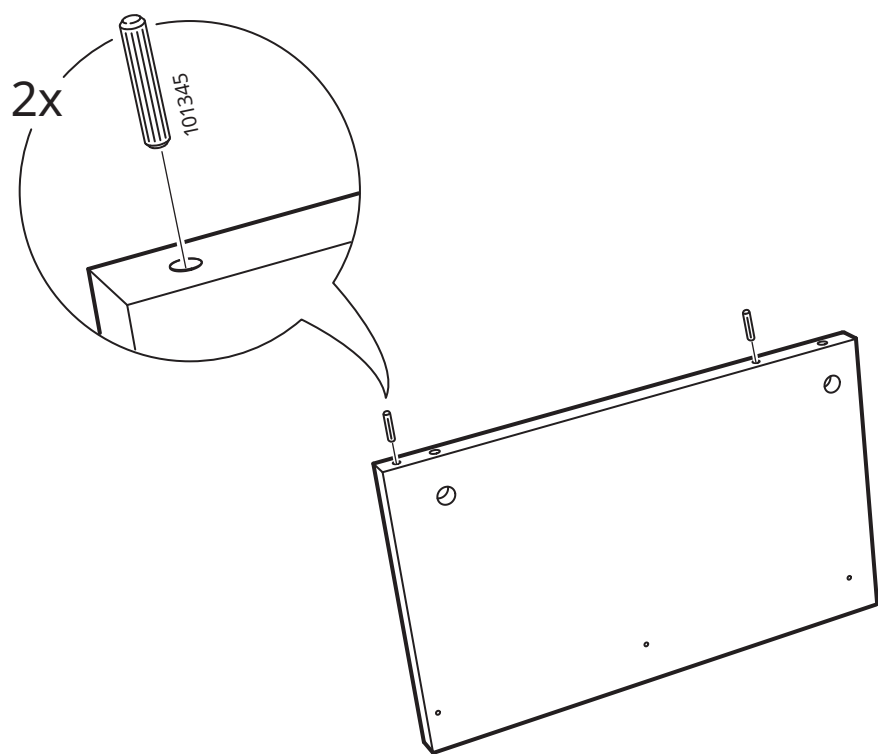 


19

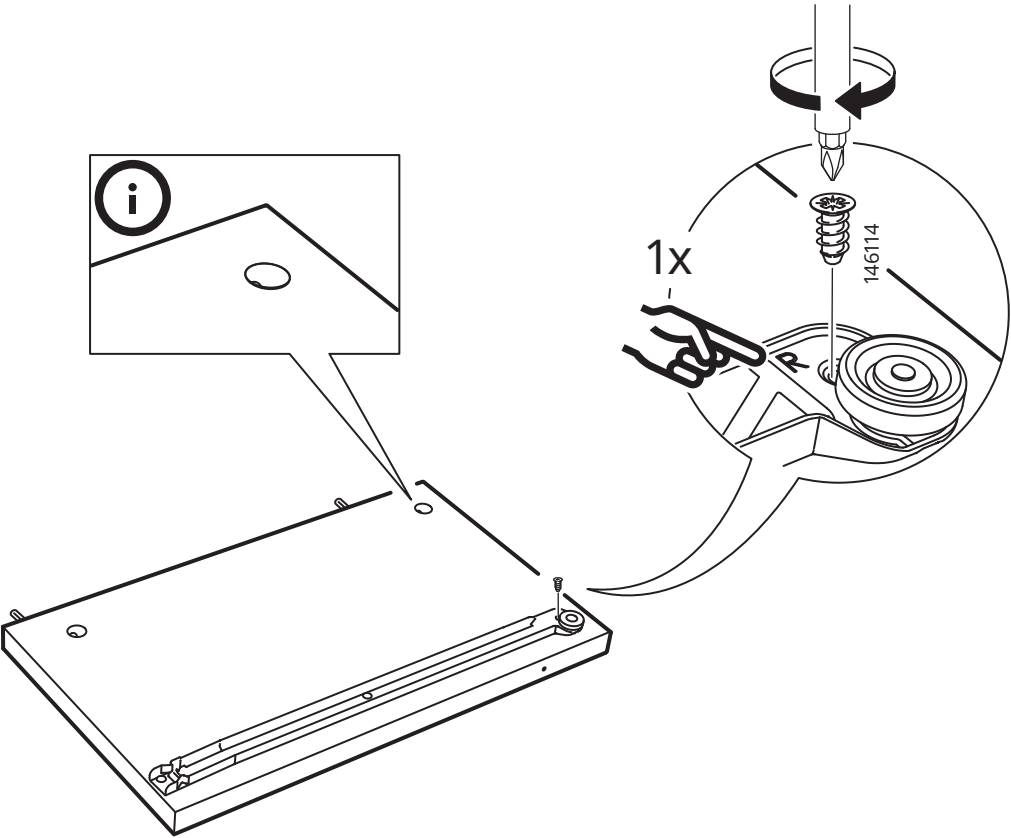 


20

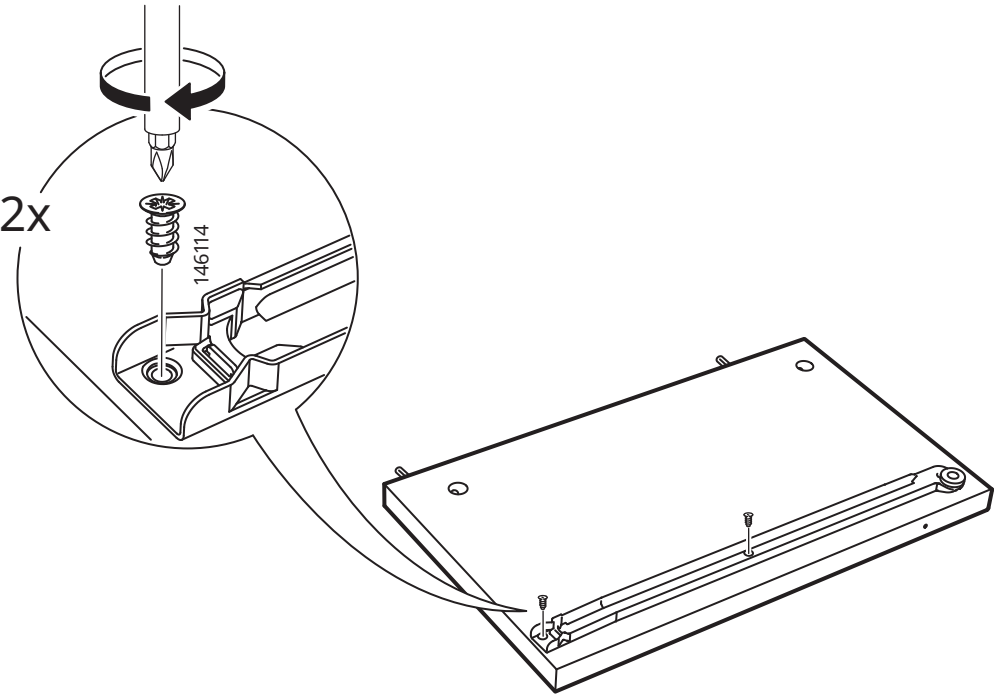 


21

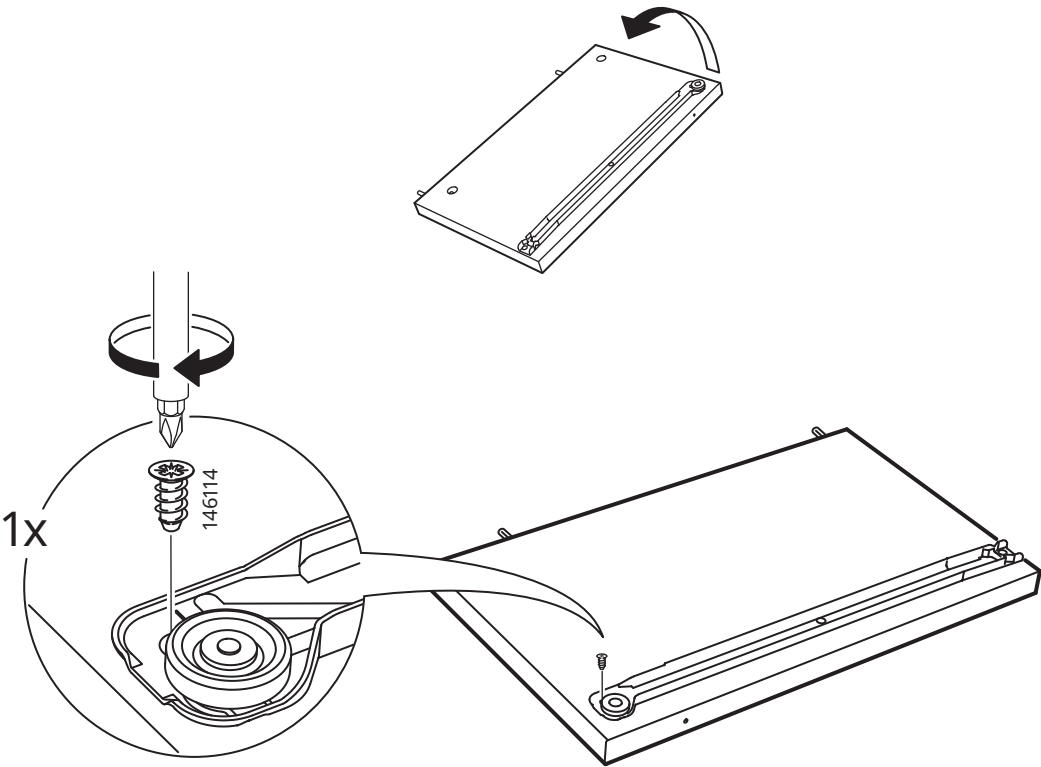 


22

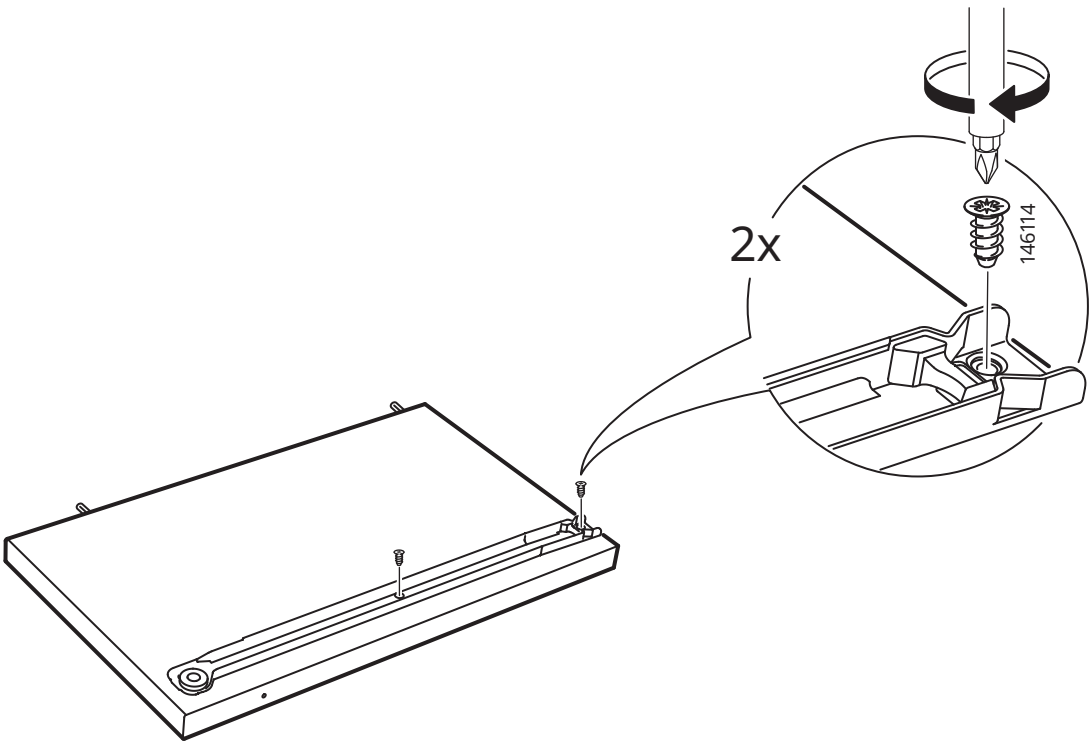 



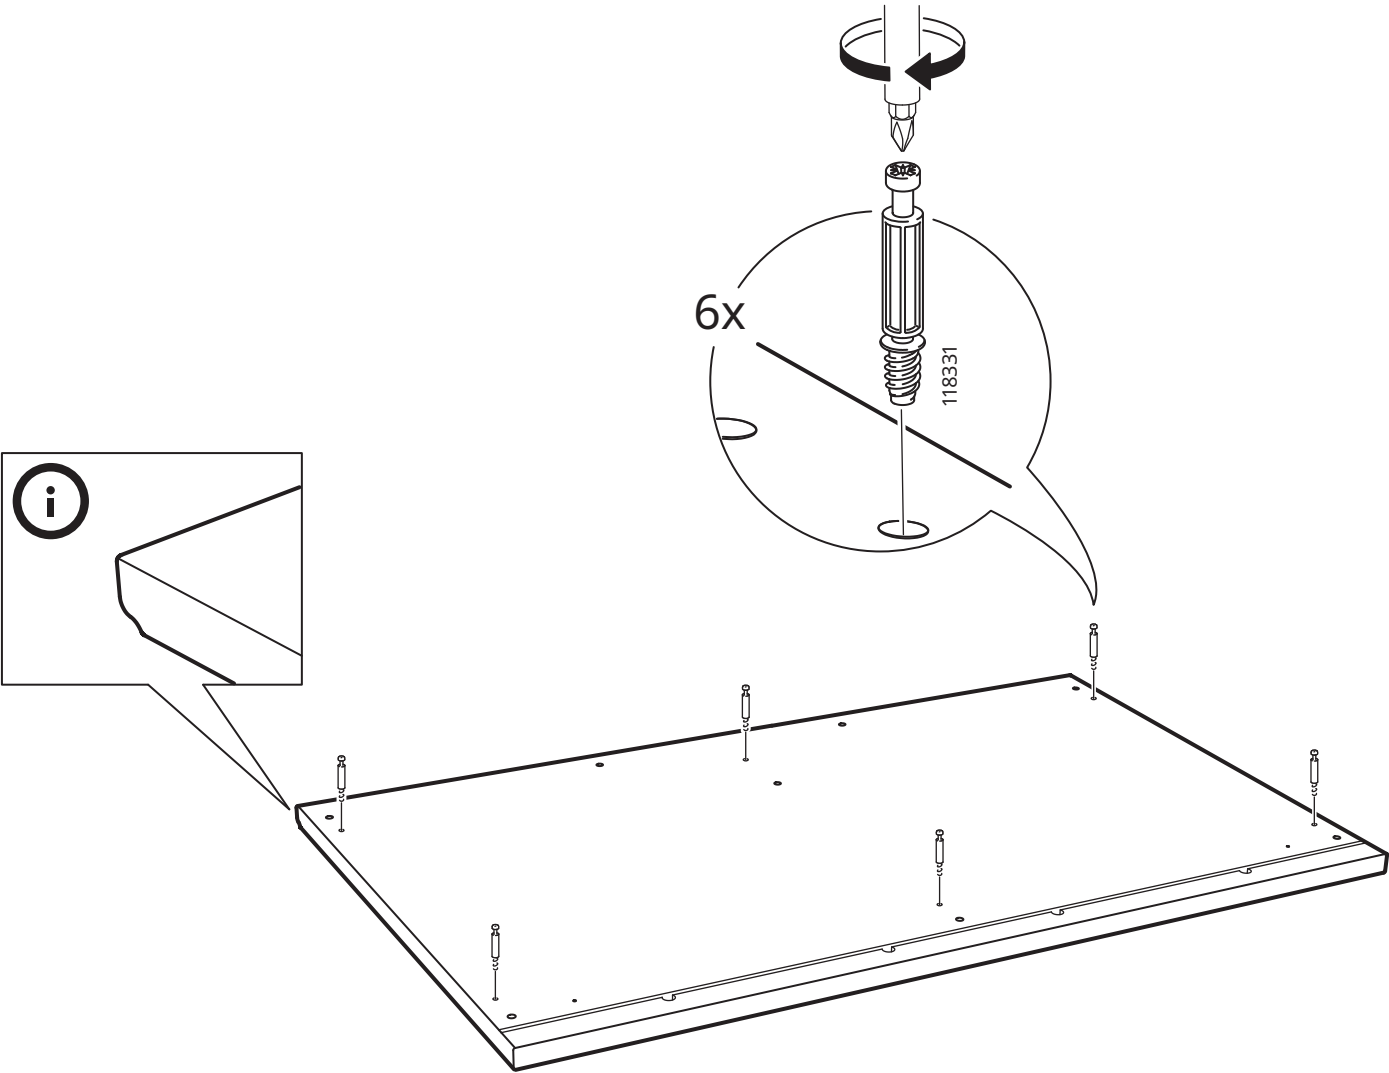 


24


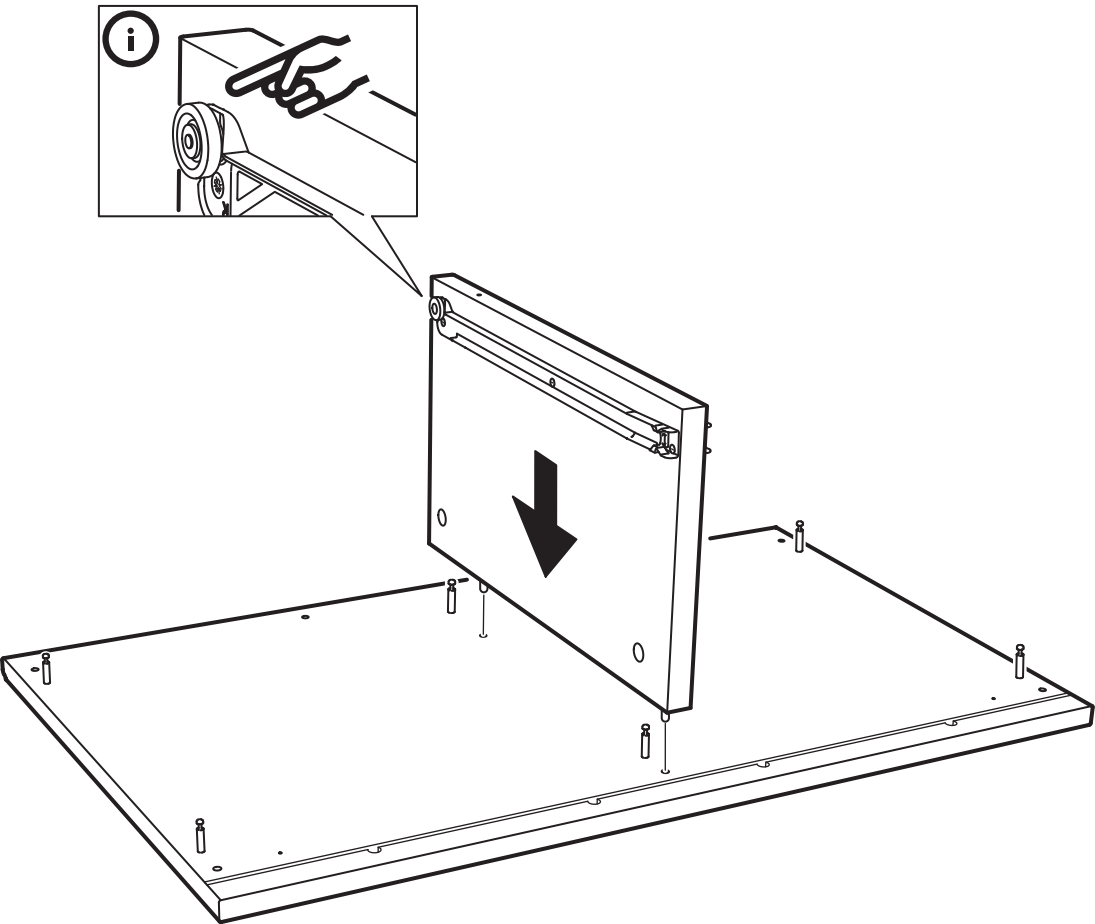 


25

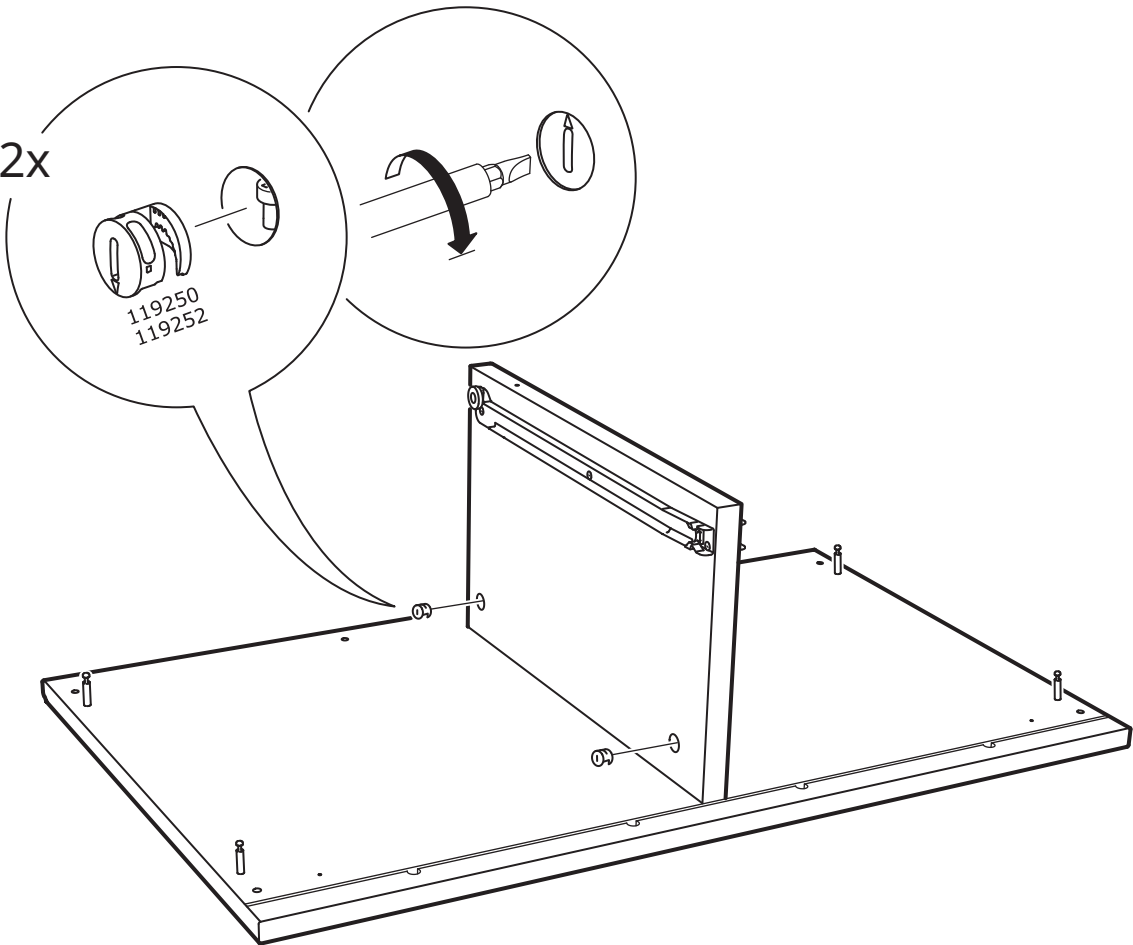 


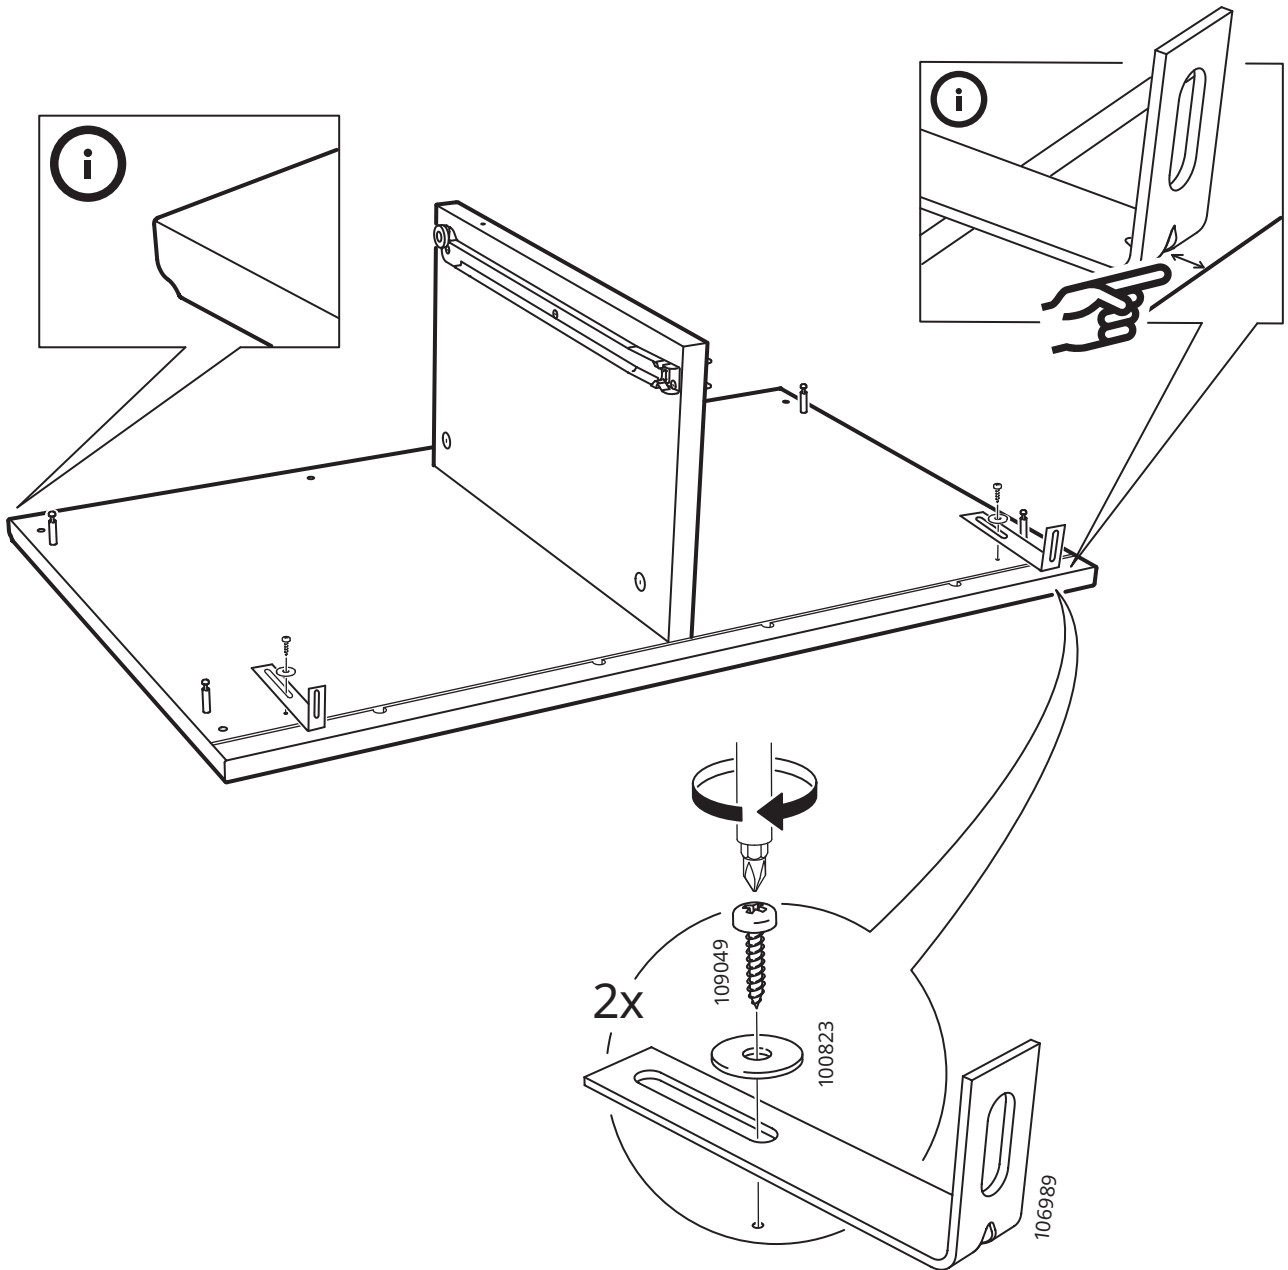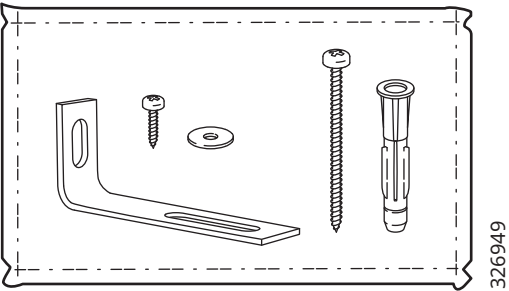  


27

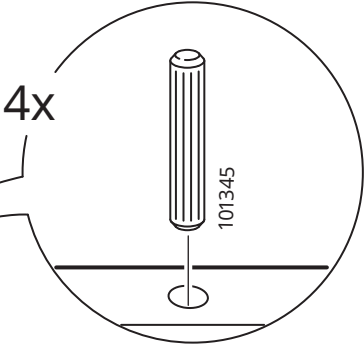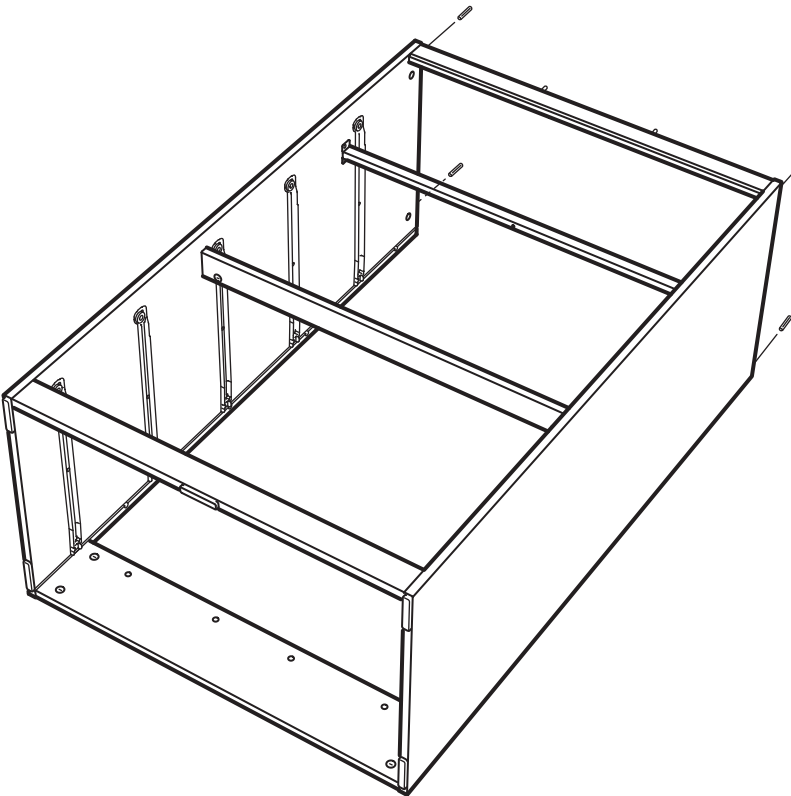  


28

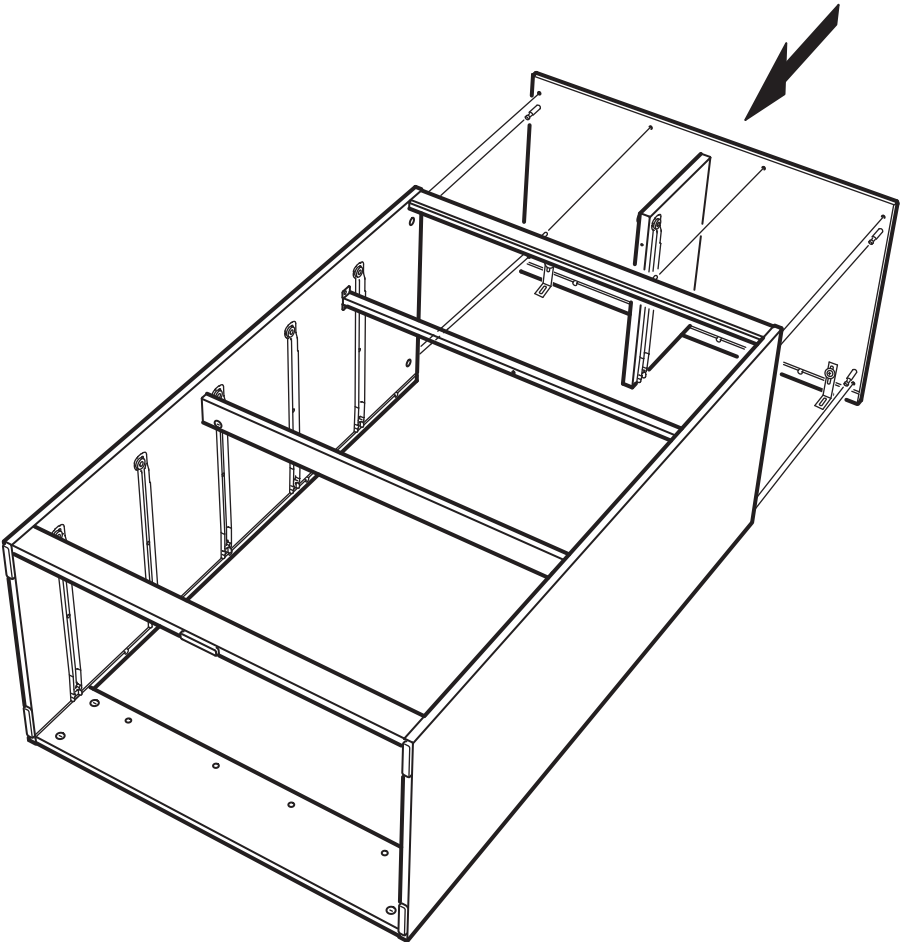 

29



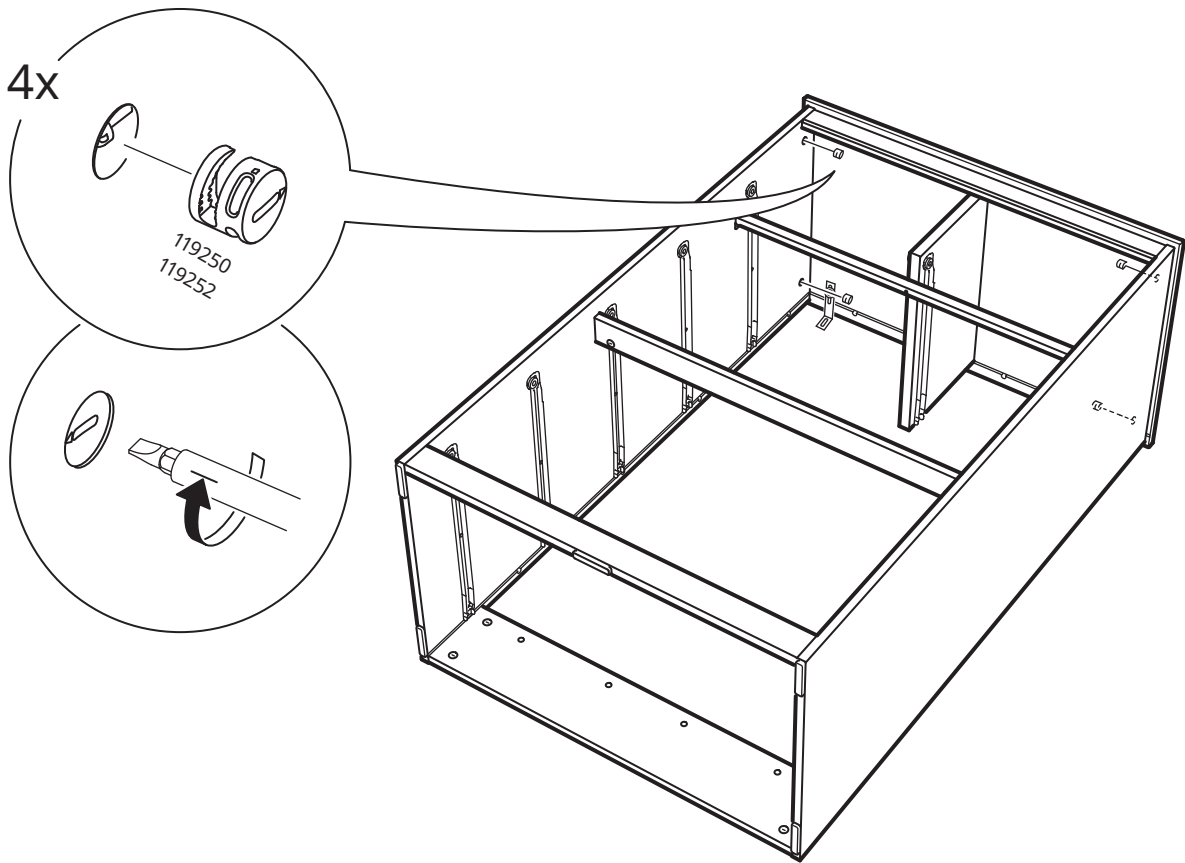 


30

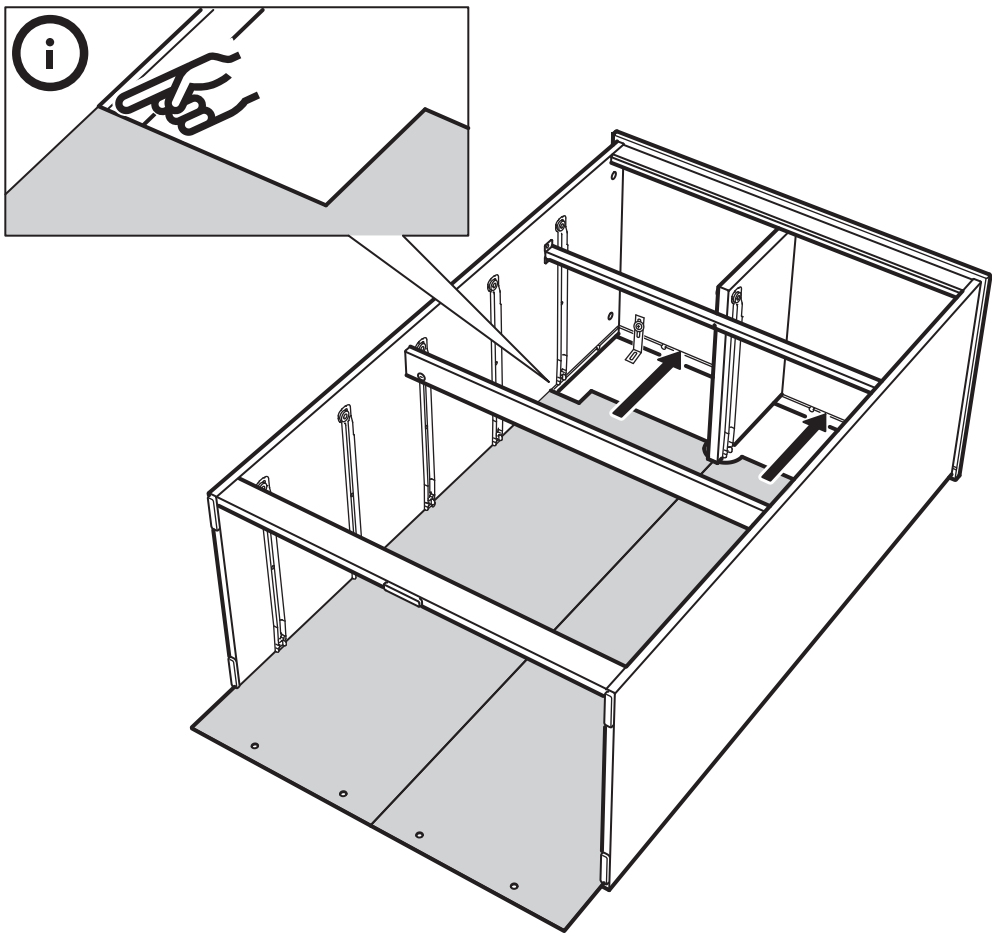 



31

   4x

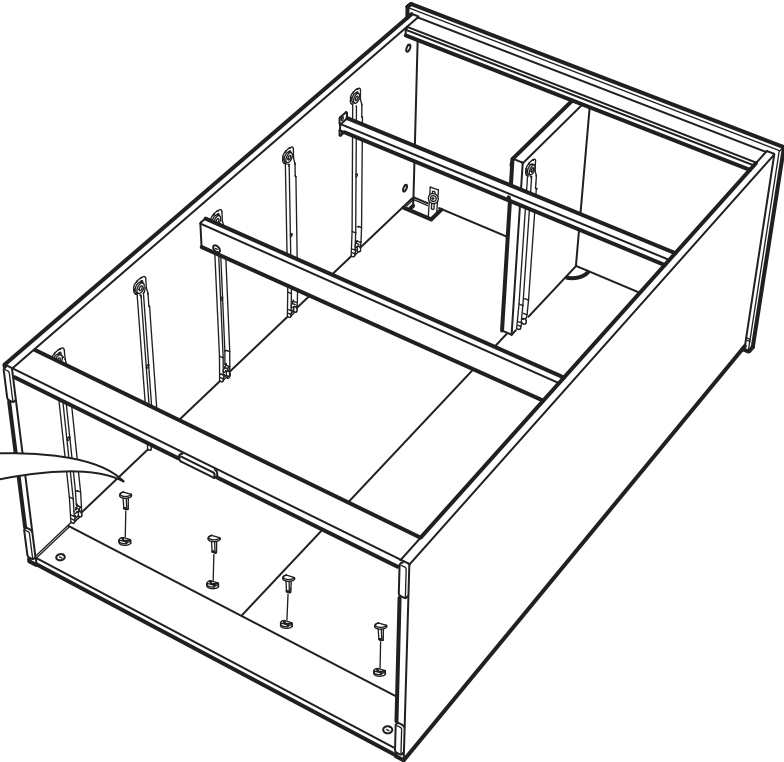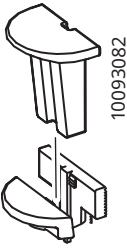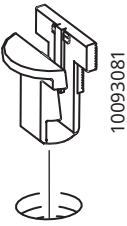


32

  
4x

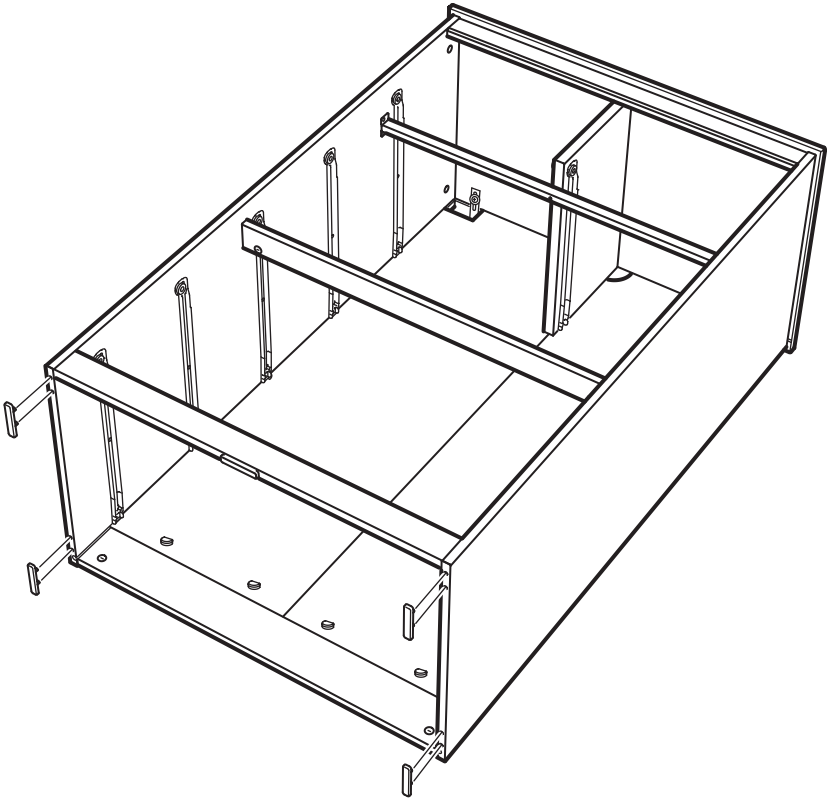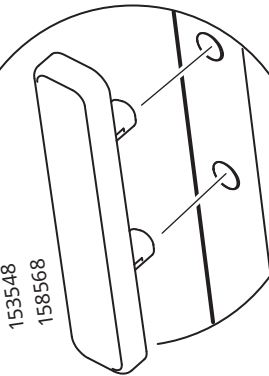


33

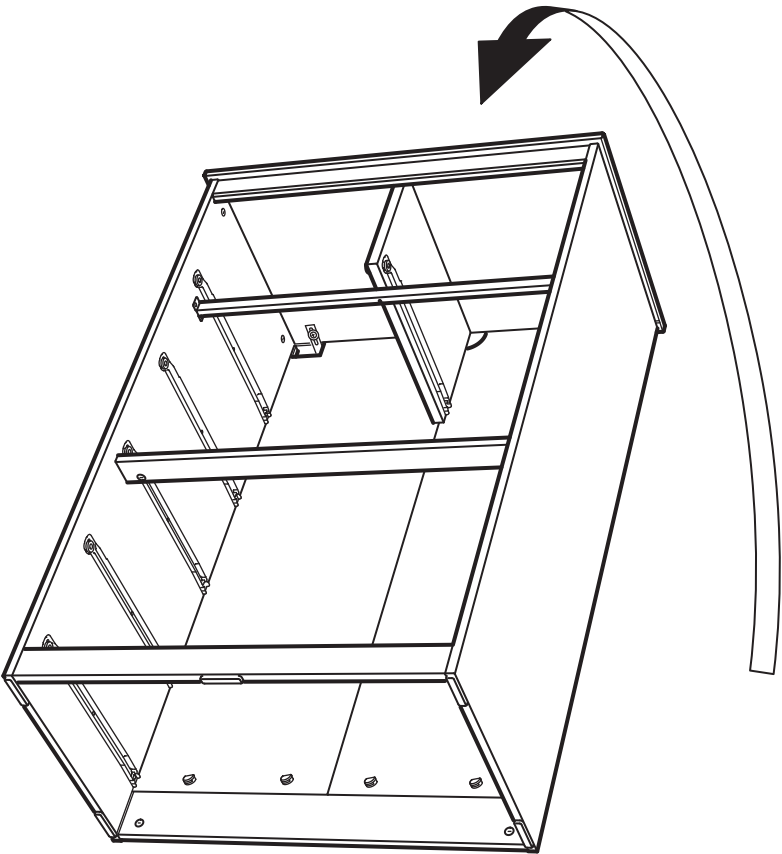 


34

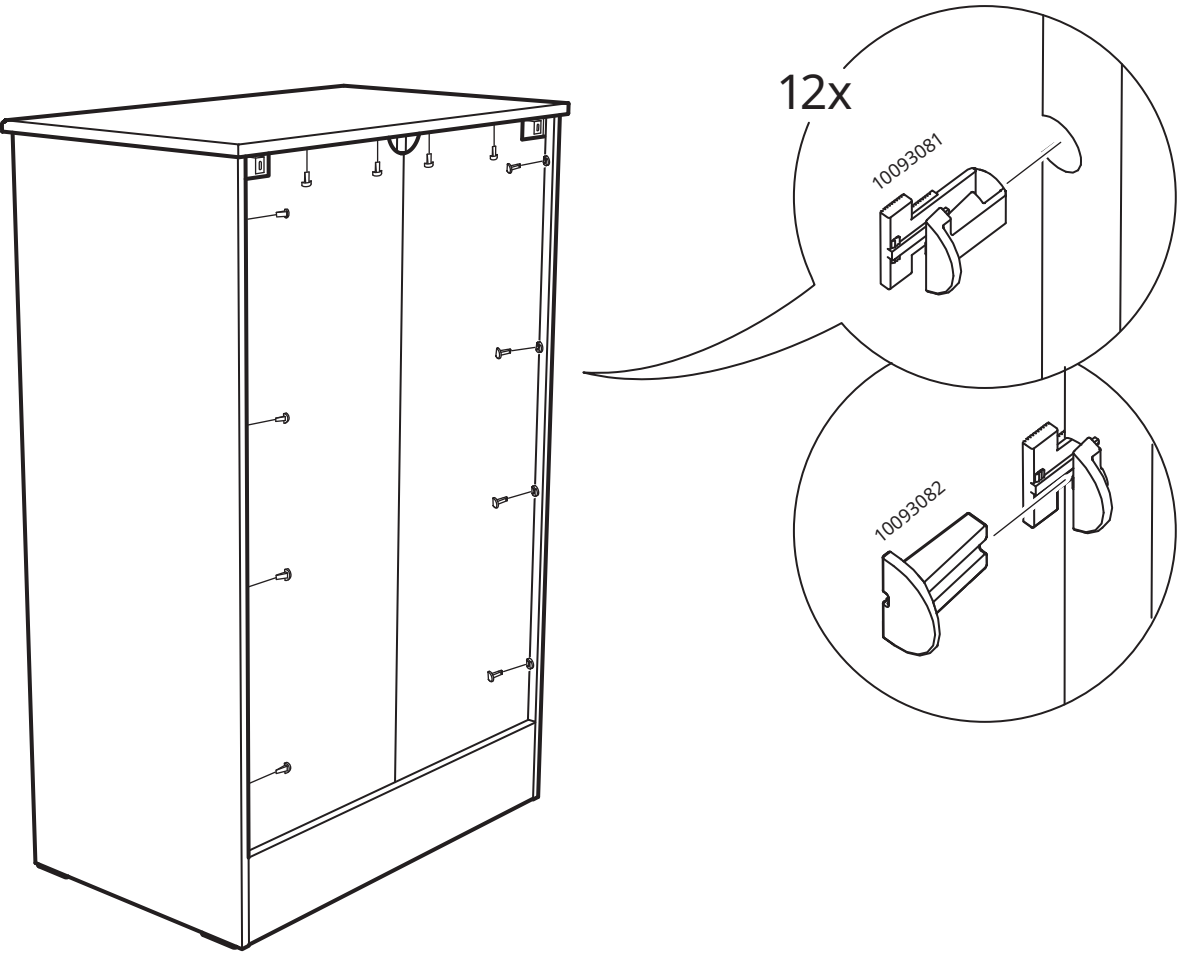 


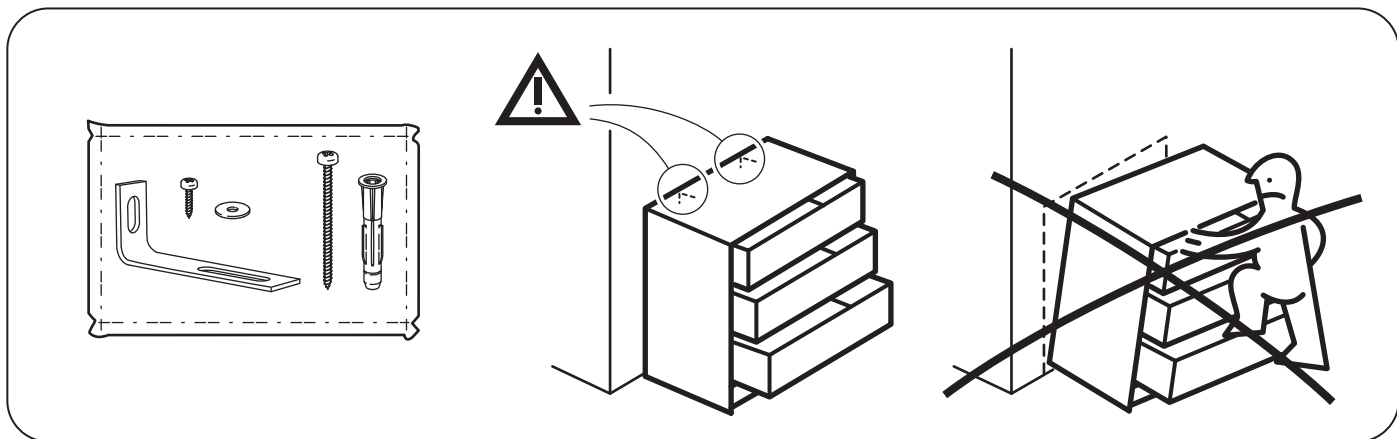 

35

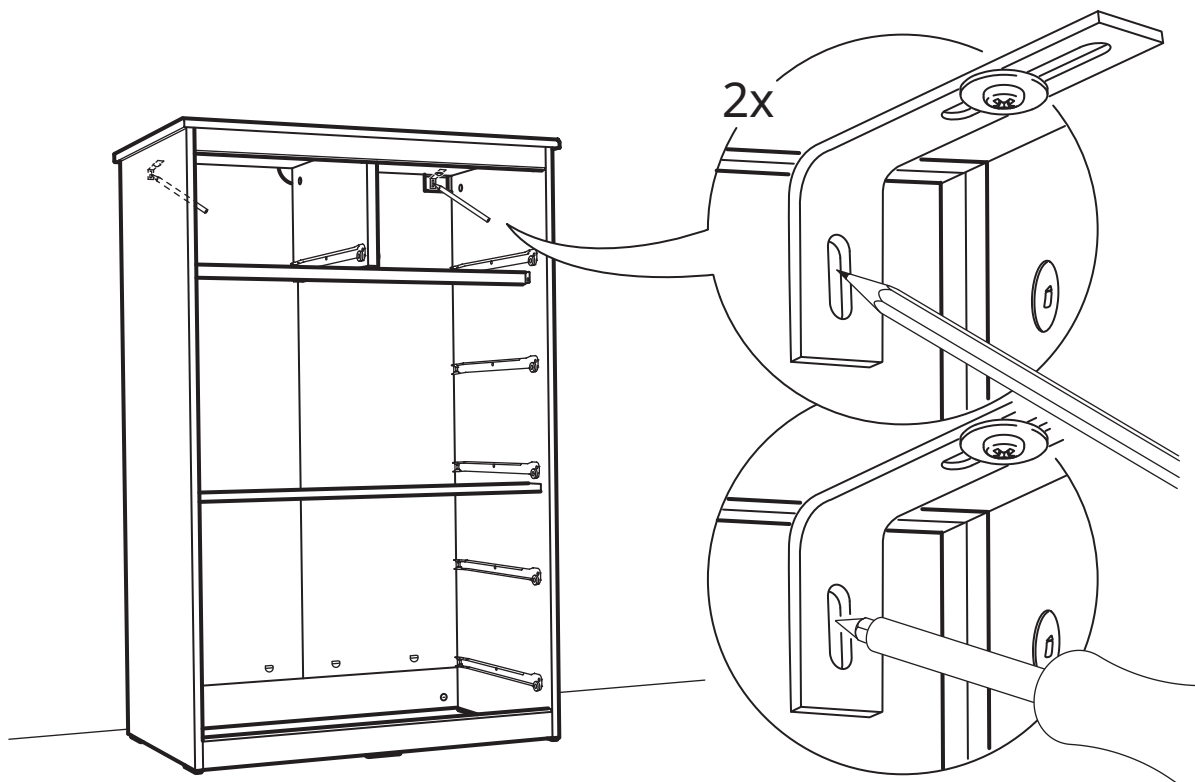 

36

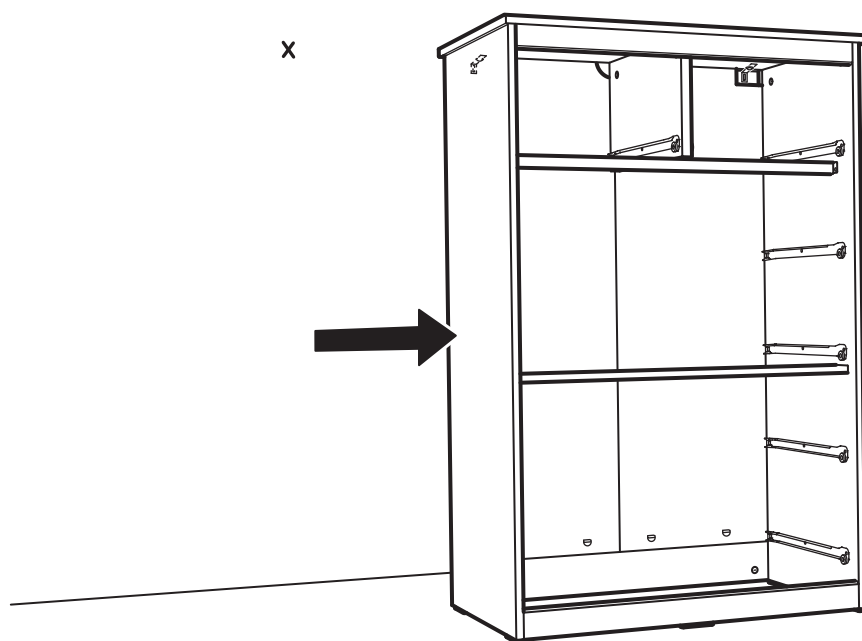 




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

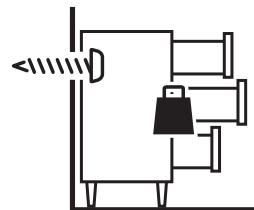

37

 
English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

עברית

הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.


A

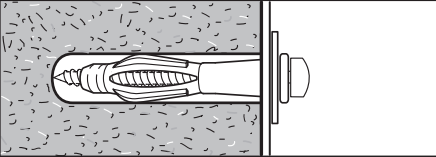


Ø 8 mm
(5/16")



 1




2

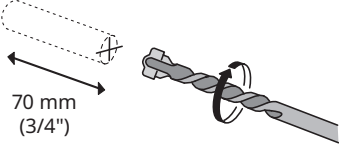 


70 mm
(3/4")

 3

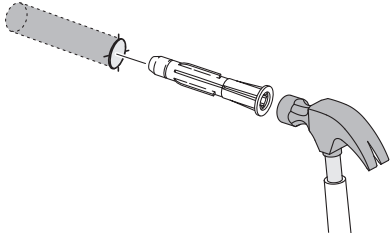


B

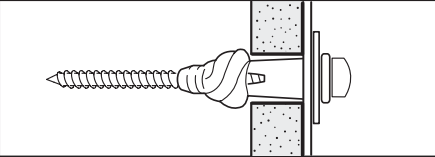 


Ø 8 mm
(5/16")



 1




2

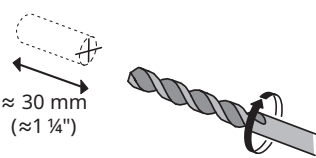 


≈ 30 mm
(≈ 1 1/4")

 3

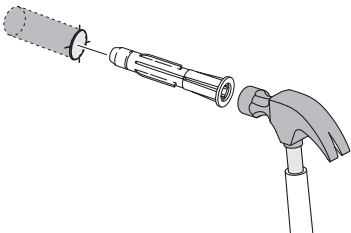


C

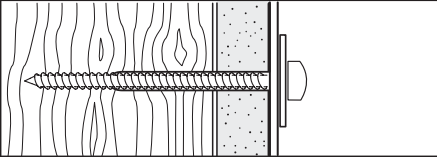 


Ø 3 mm
(1/8")



 1



2

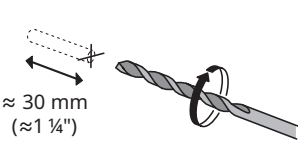 


≈ 30 mm
(≈ 1 1/4")


3





 38

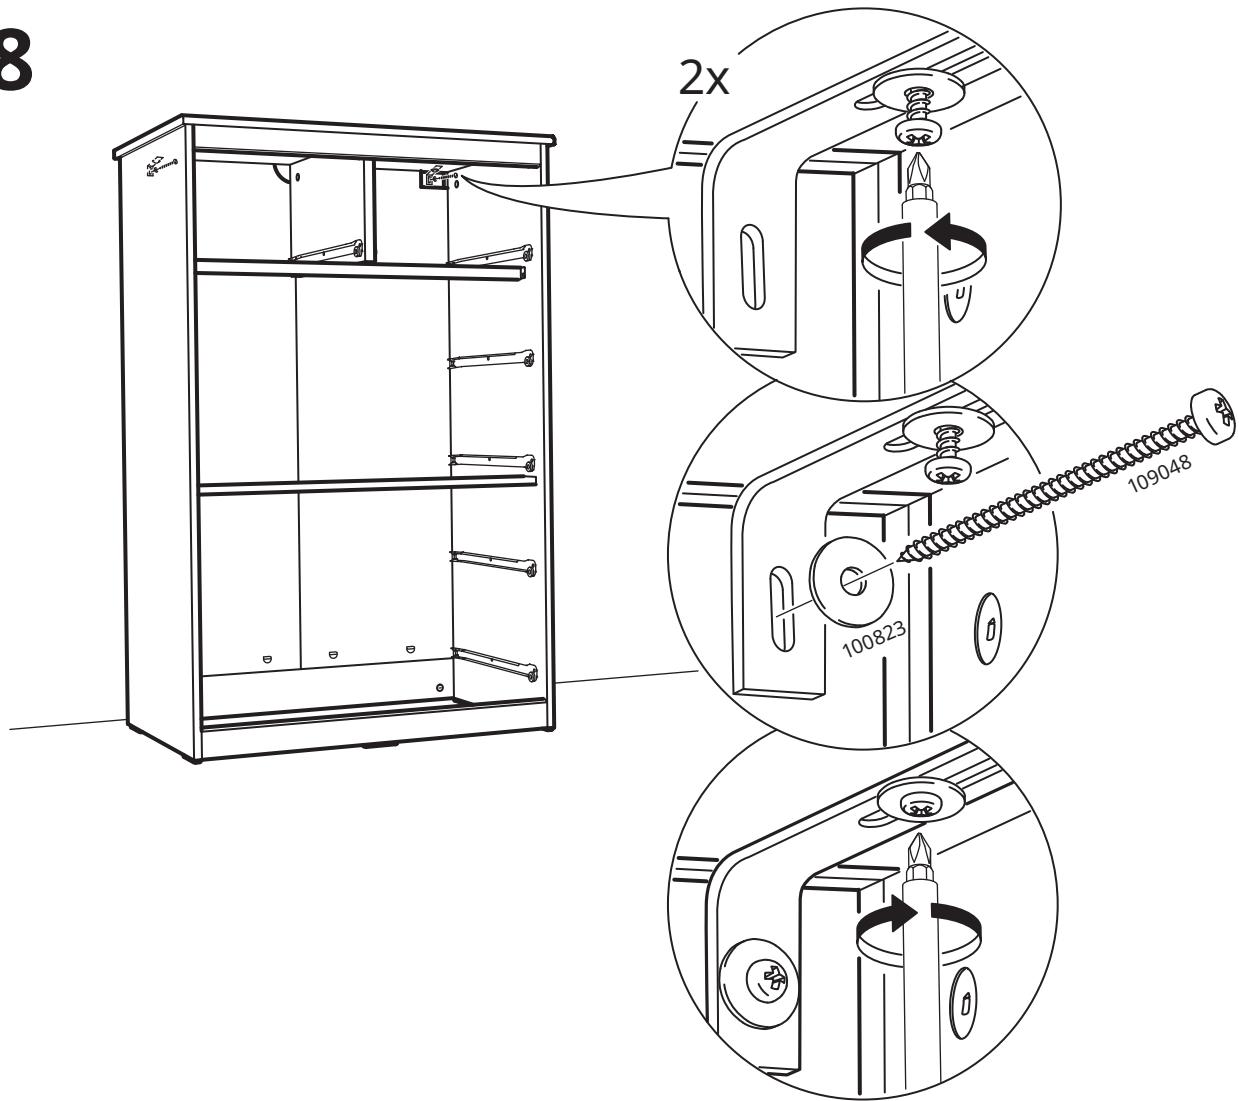

39

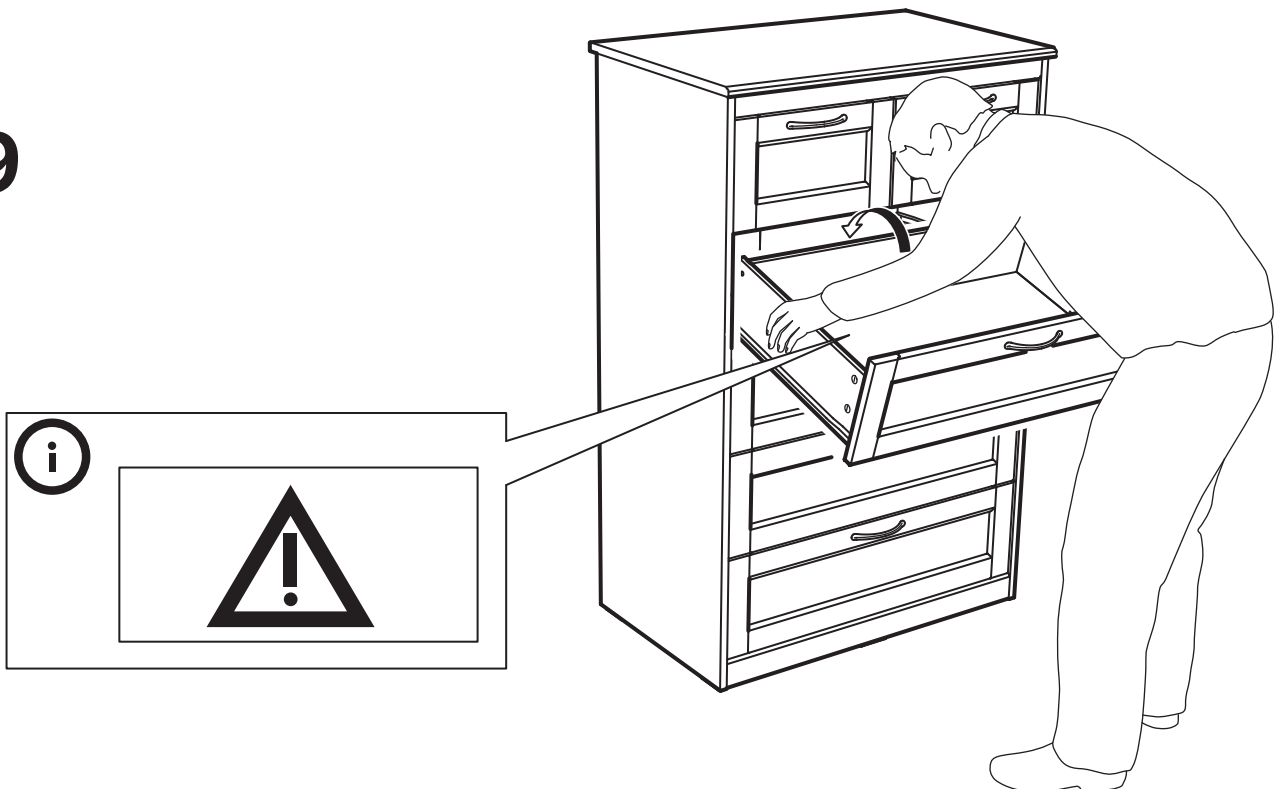 

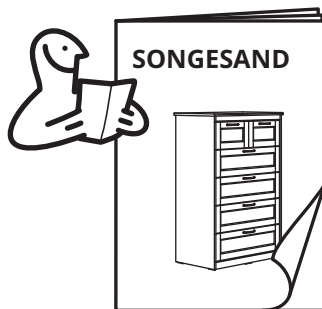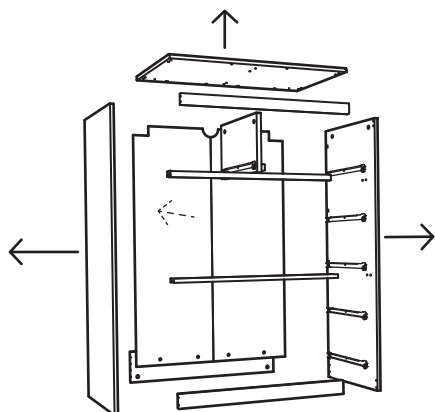  

34 → 1

