 
 
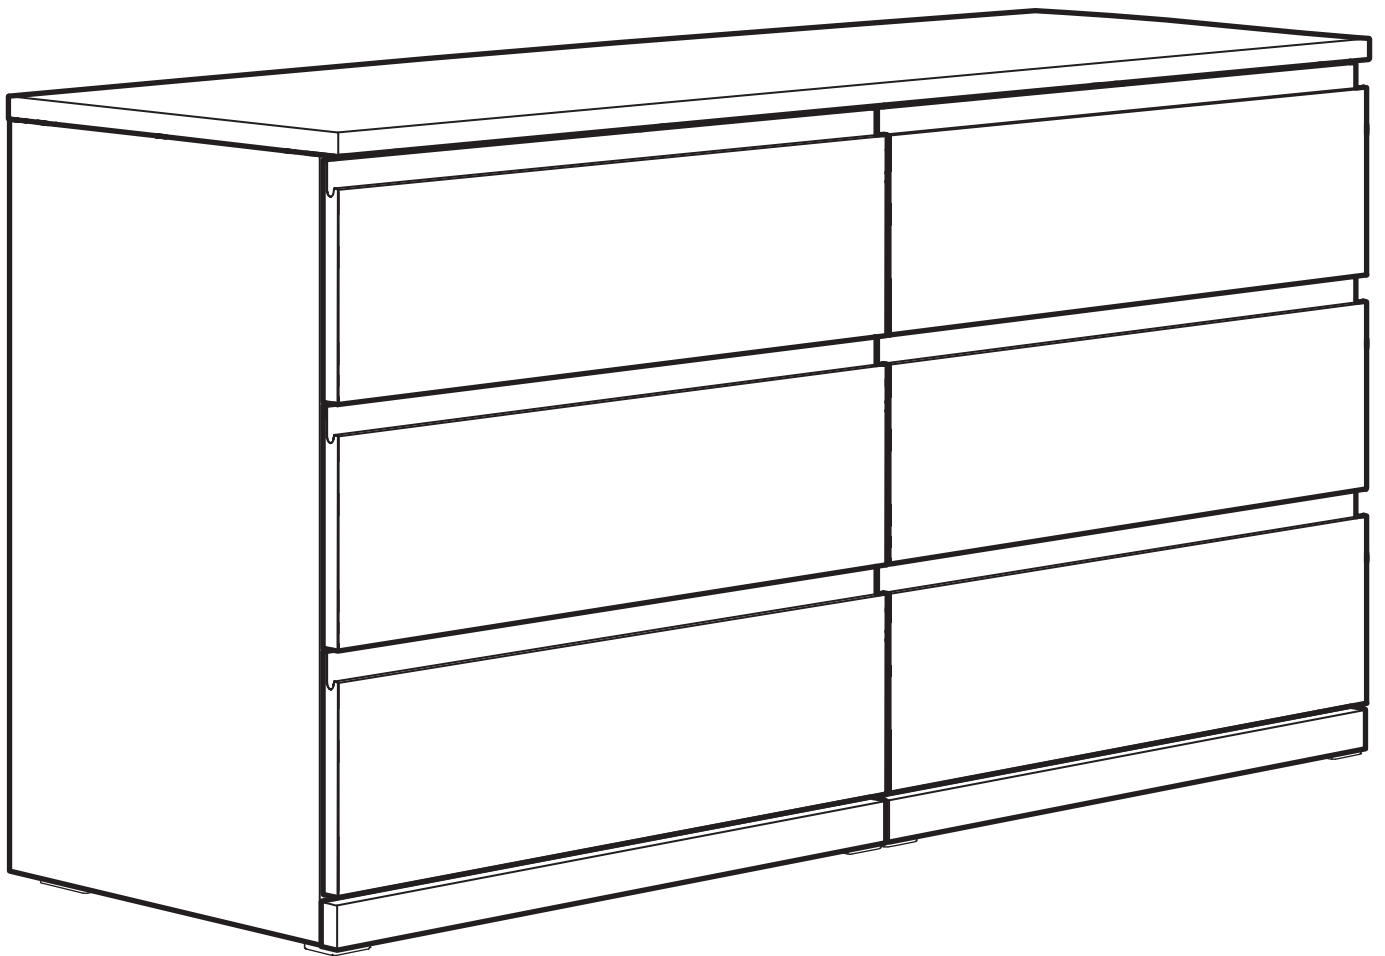 


STORKLINTA

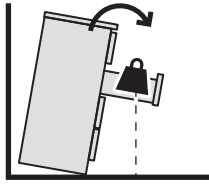

Design and Quality
IKEA of Sweden

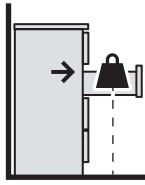

English

WARNING!

Serious or fatal crushing injuries can occur from furniture tip-over. To reduce the risk of furniture tip-over:

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

Place heaviest items in the lower drawer.

Do not set TVs or other heavy objects on top of this product.

Never let children climb or hang on drawers, doors, or shelves.

Read and follow each step of the instruction carefully.

עברית

אזהרה!

 
 
נפילת הרהיט עלולה לגרום לפגיעה גופנית חמורה או קטלנית. על מנת להפחית את הסיכון של נפילת רהיטים:

 
 
יש להקפיד ולקבע את הריהוט לקיר באמצעות אביזרי קיבוע.

 
 
 
 
על-מנת למזער את סכנת הפגיעה הגופנית או המוות מנפילת רהיטים:

הניחו את הפריטים הכבדים ביותר במגירה התחתונה. הימנעו מלהניח טלוויזיות או פריטים כבדים אחרים על מוצר זה.

אין לאפשר לילדים לטפס על המגירות, הדלתות או המדפים. קראו ופעלו בזהירות לפי כל שלב בהוראות.



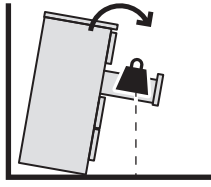
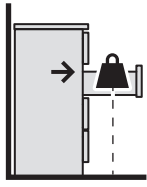


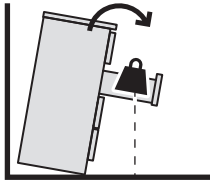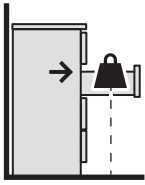

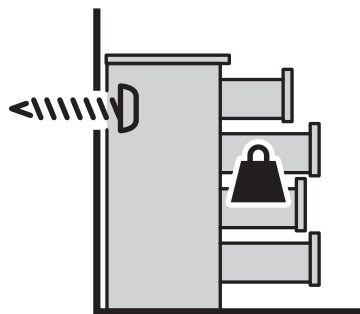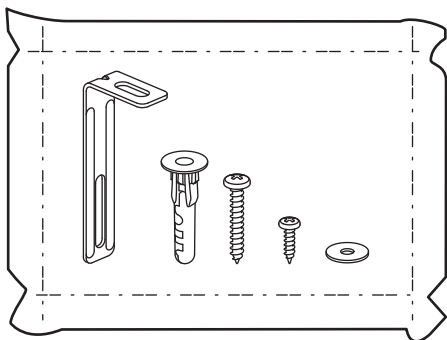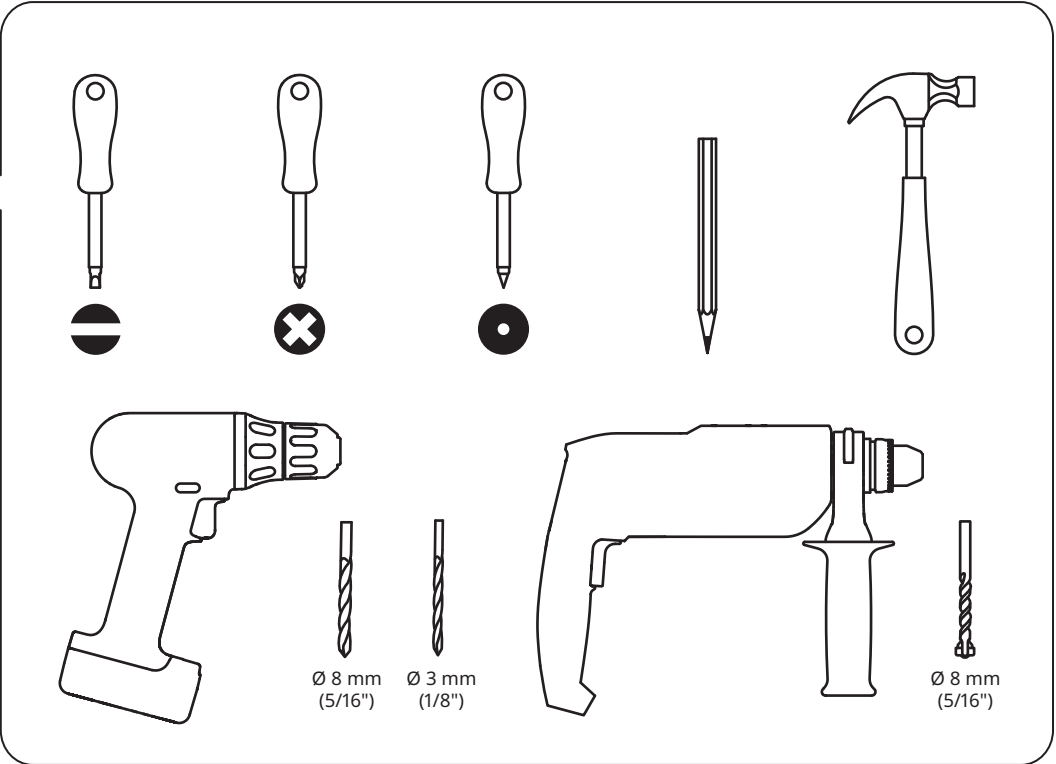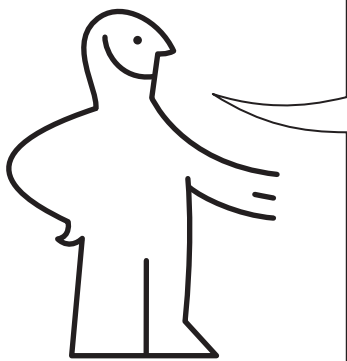


www.IKEA.com/secure-it

A	B	C
Ø 8 mm (5/16")	Ø 8 mm (5/16")	Ø 3 mm (1/8")

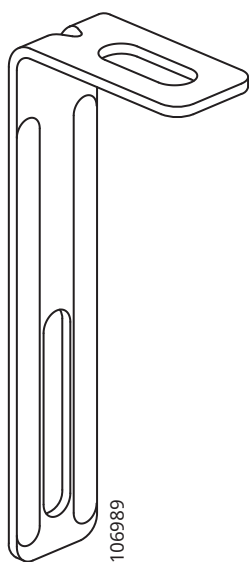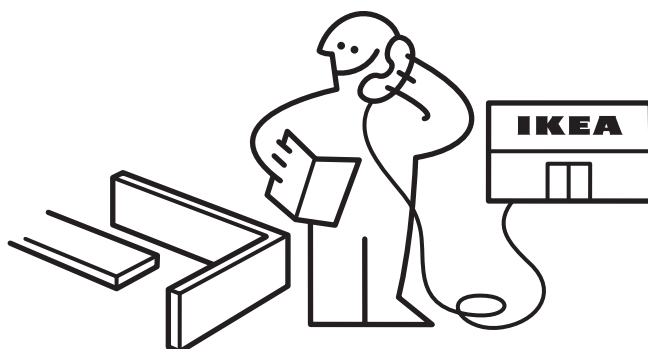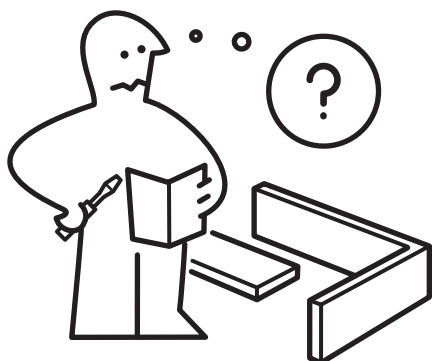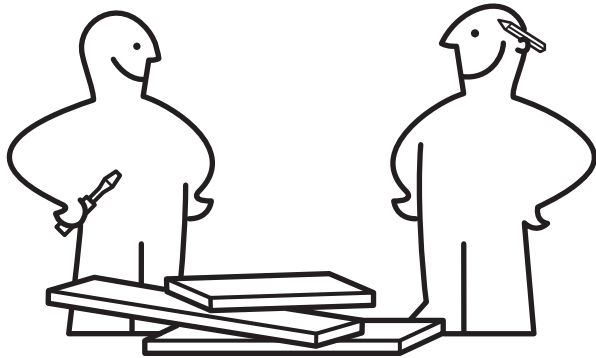    


106989

 2x

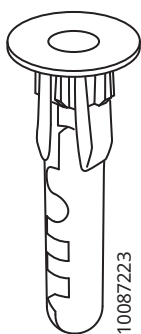

10087223

 2x



109567

2x



109049

 
2x



100823


4x

1

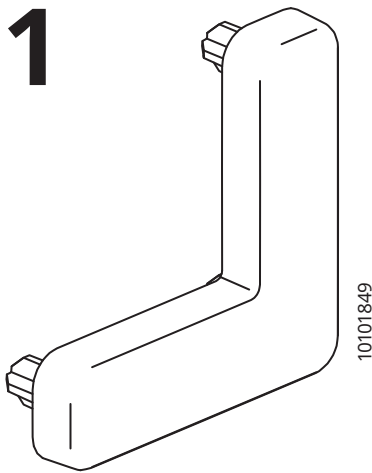


10101849

 4x

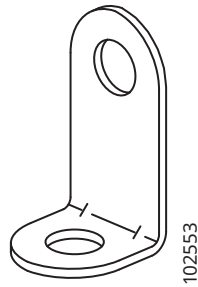


102553

 4x

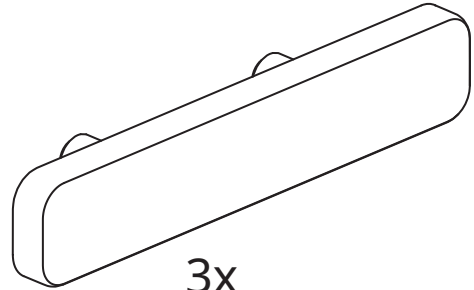


158568

 3x




151708

 4x



151707

 4x

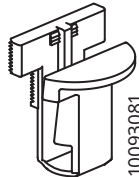

10093081

8x



10093082

20x



105248

8x



100359

 
2x



146114


36x

2

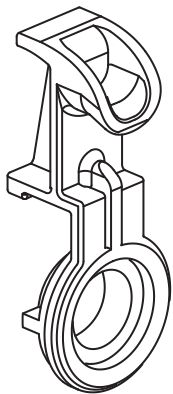

10133139

 6x



10120234

24x

10096669

145718

 


119030

24x

120076

117434

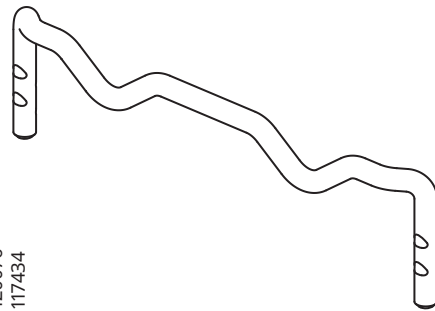


10040242

6x




146114

 36x

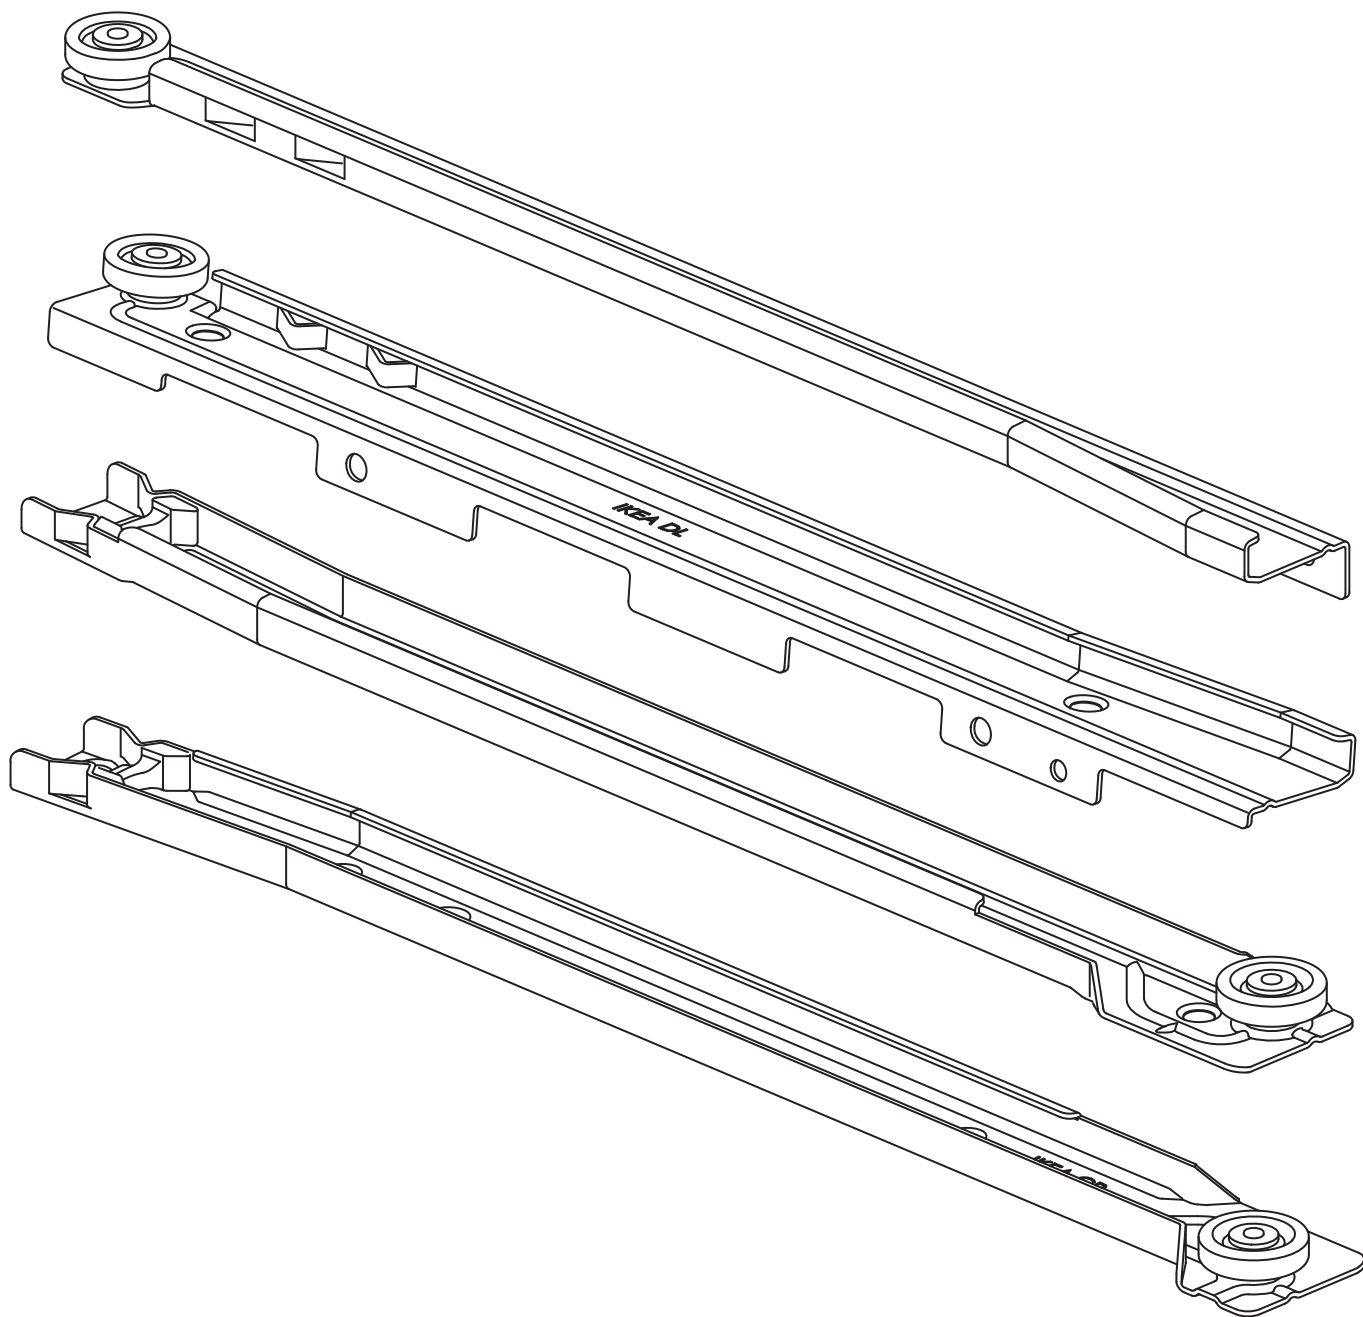

6x

 
10103402
10107508
10060250

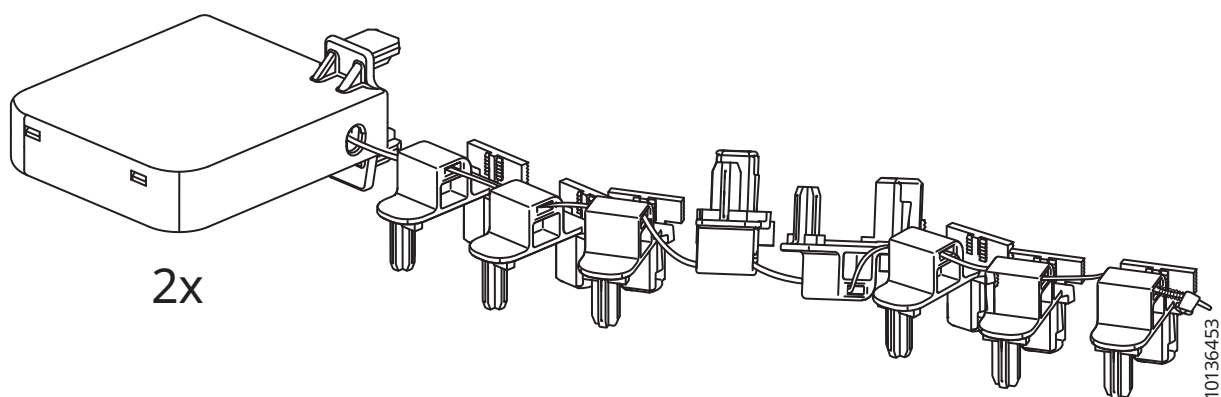


2x

10136453

 
1

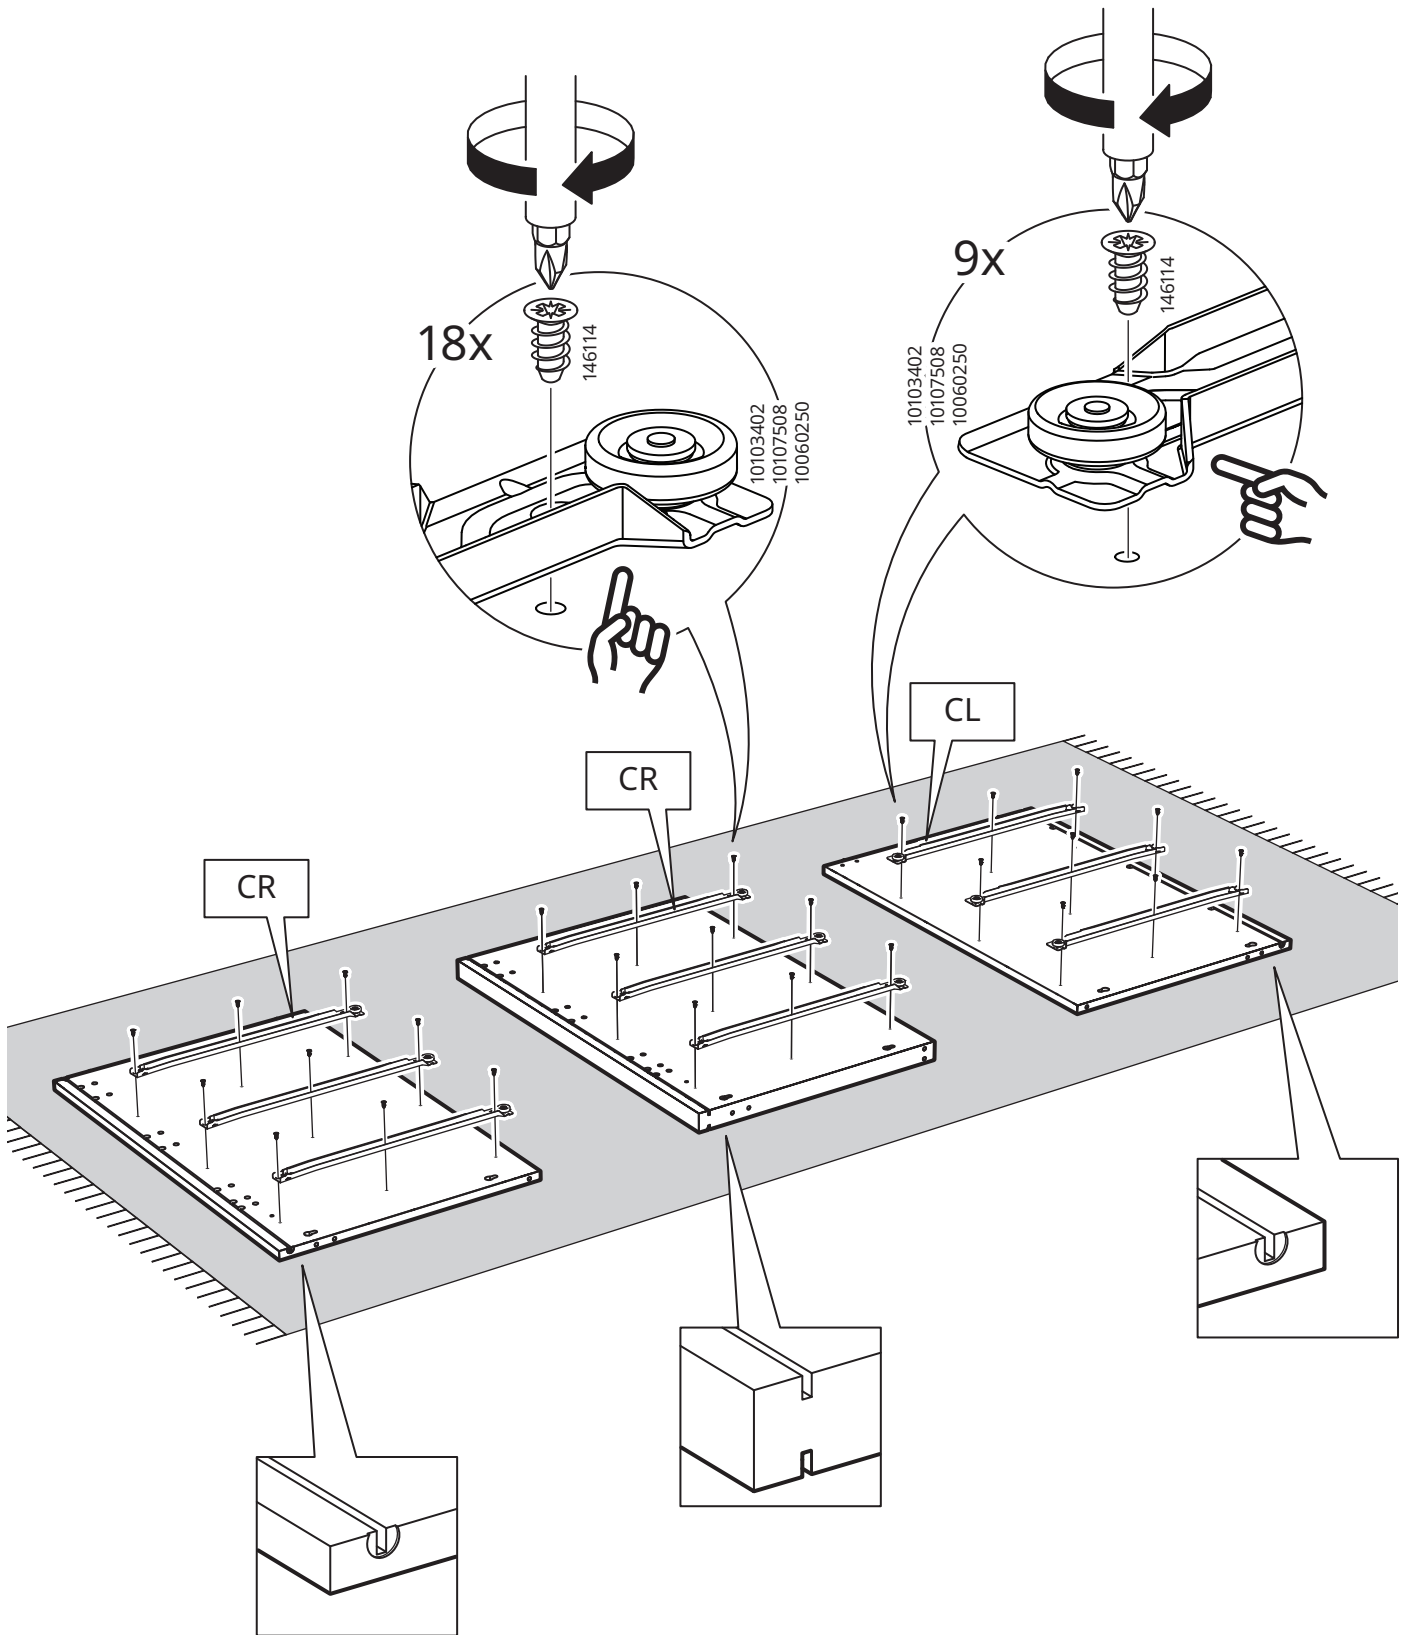


2

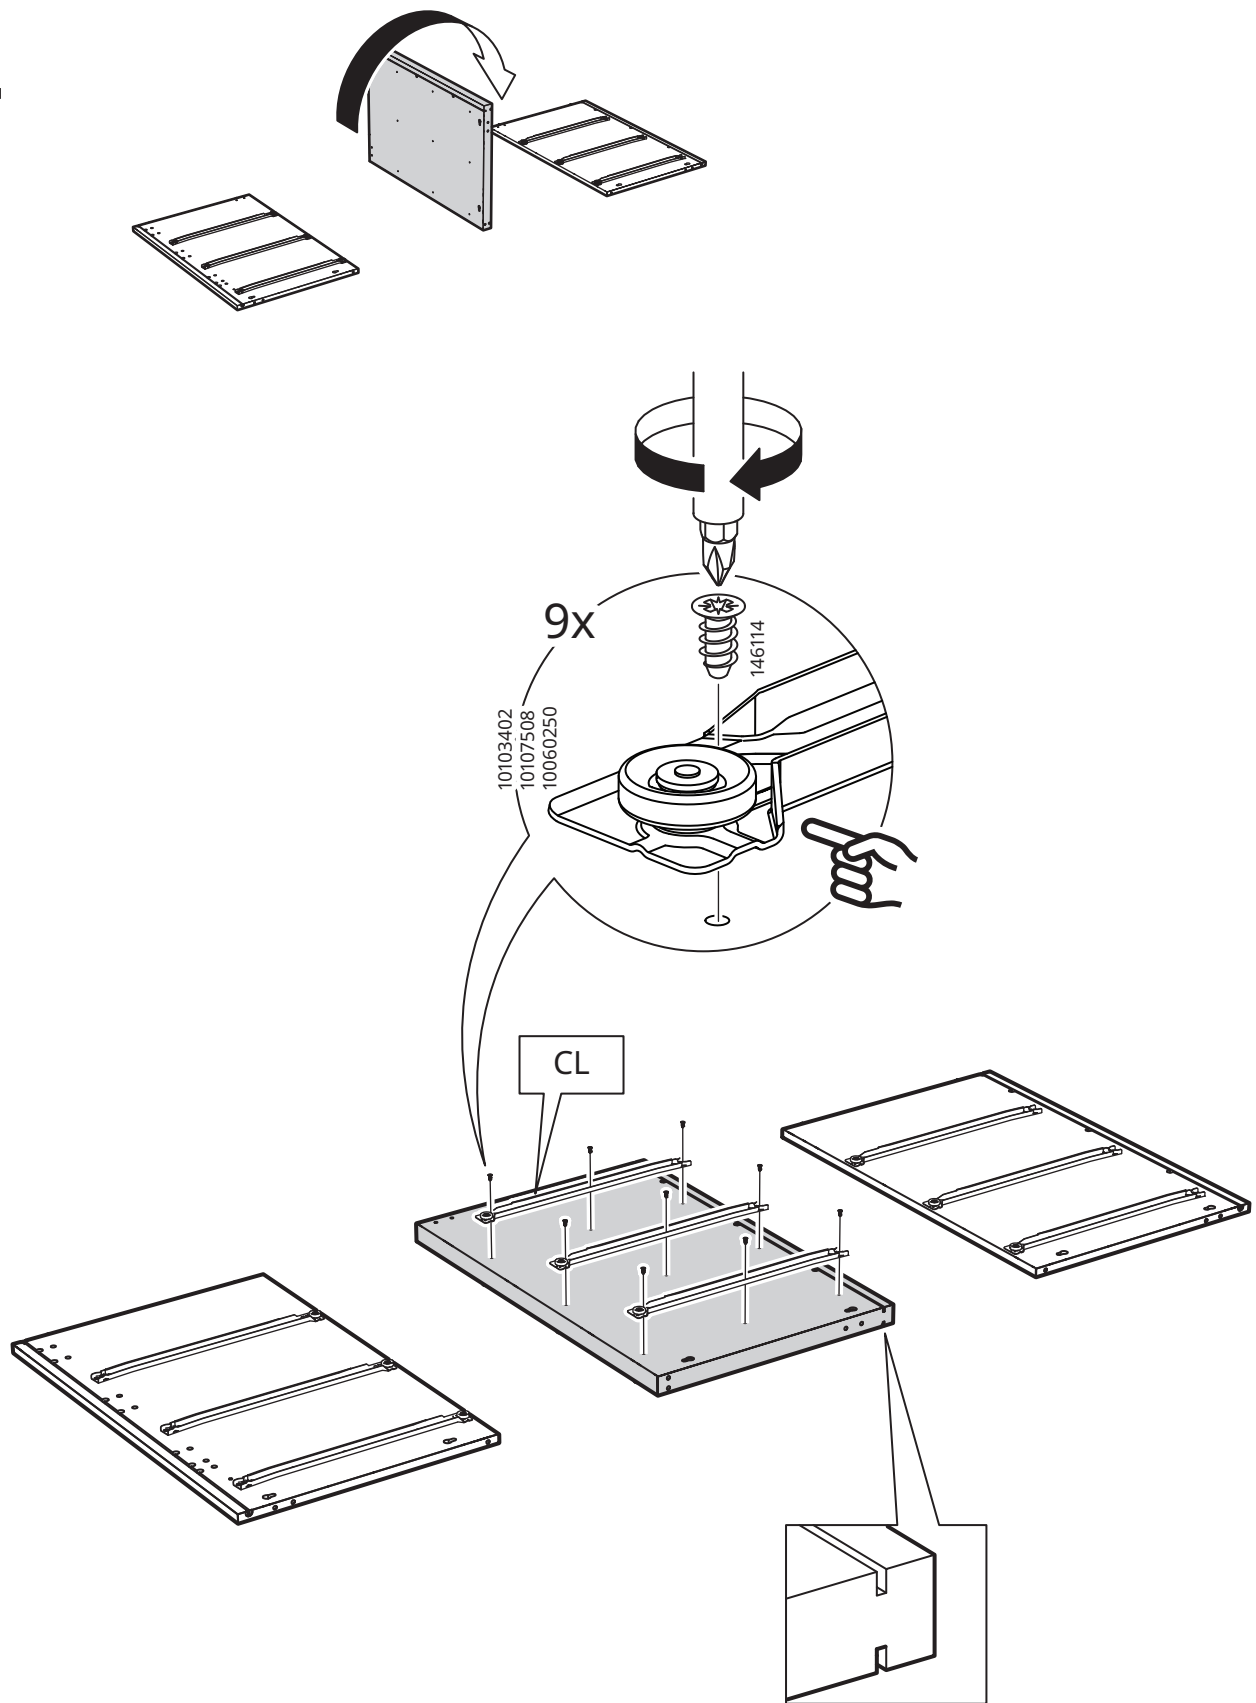 


3

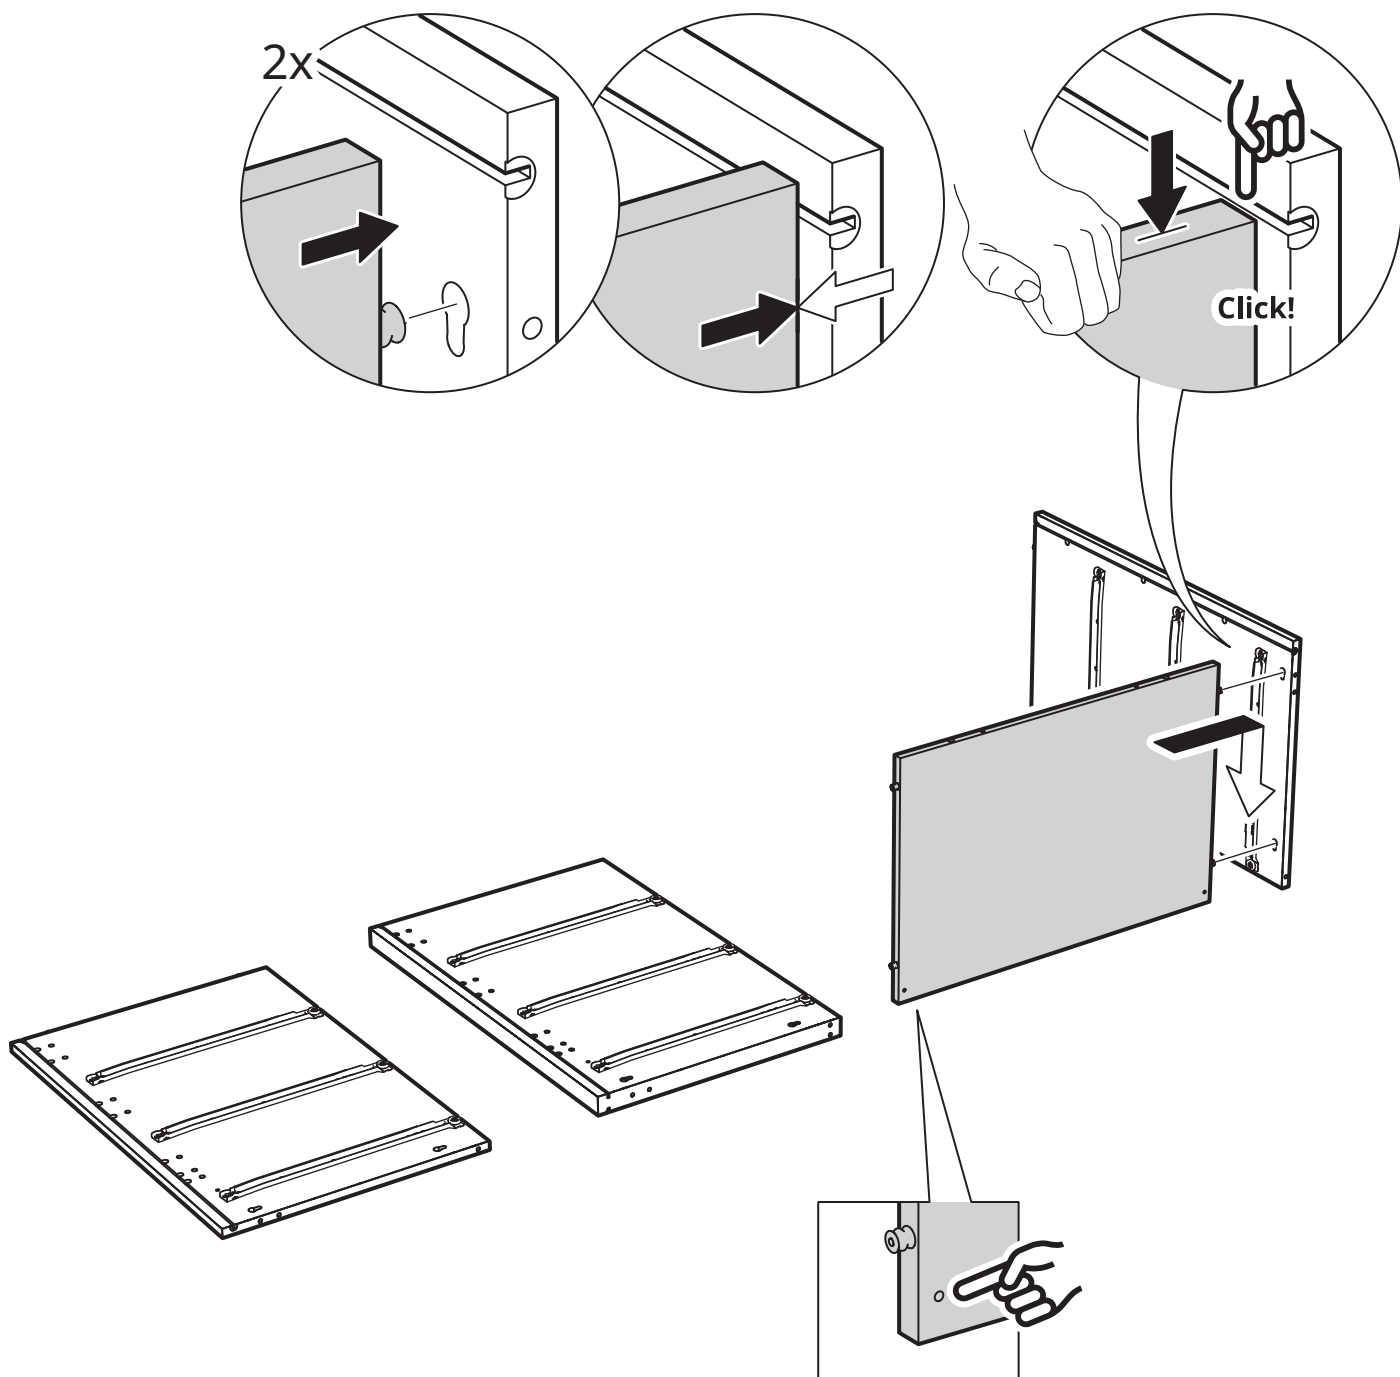 


4

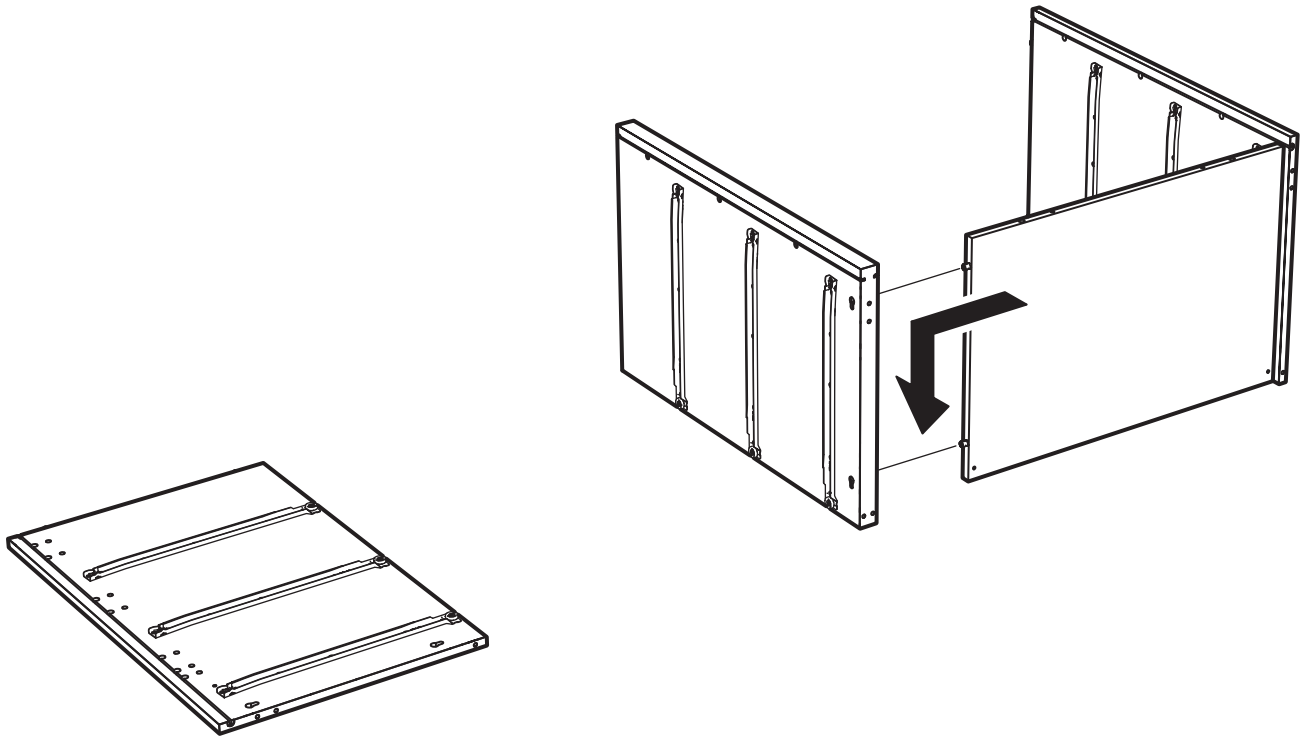 


5

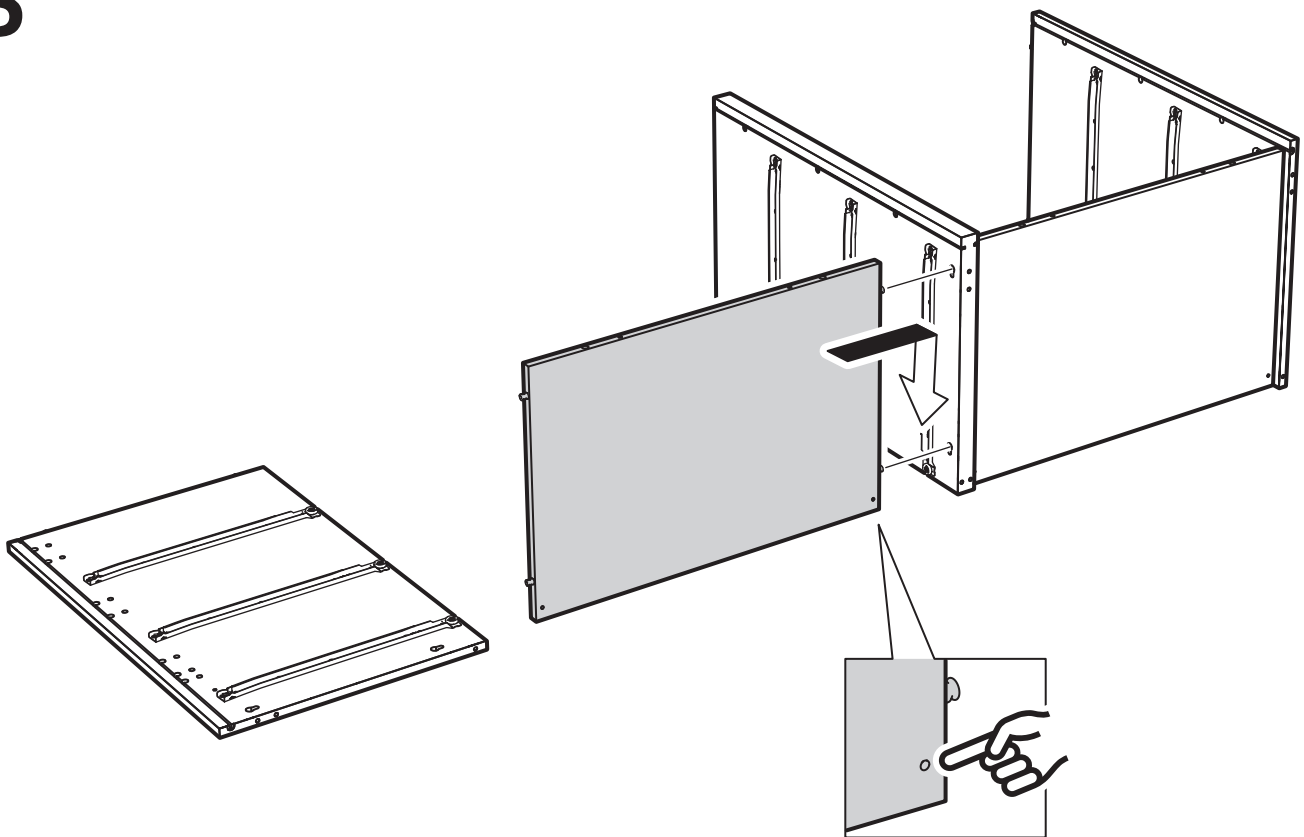 


6

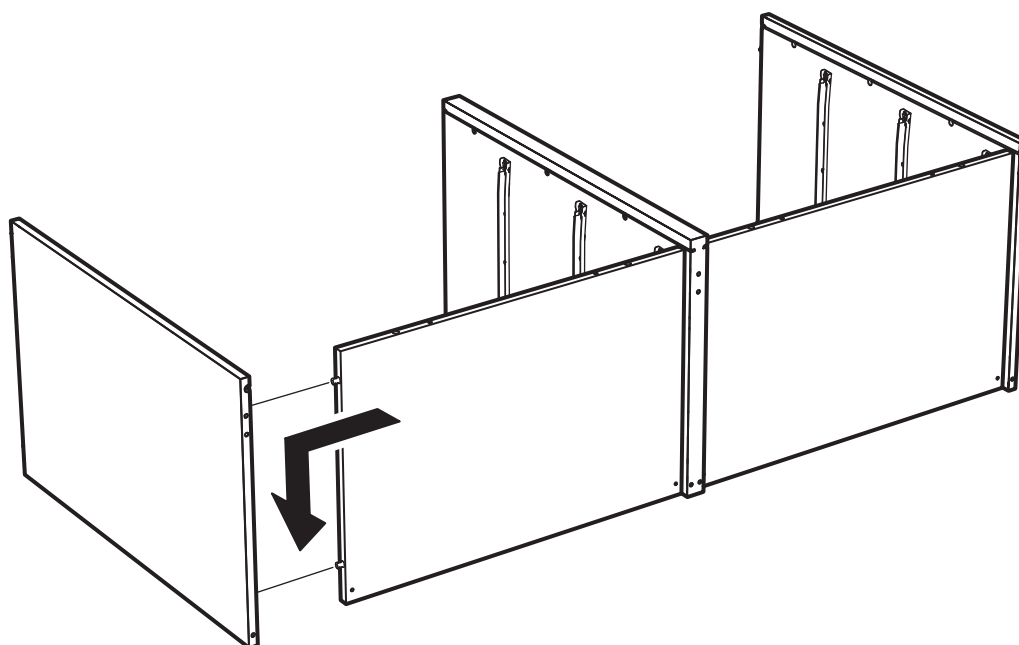 


7

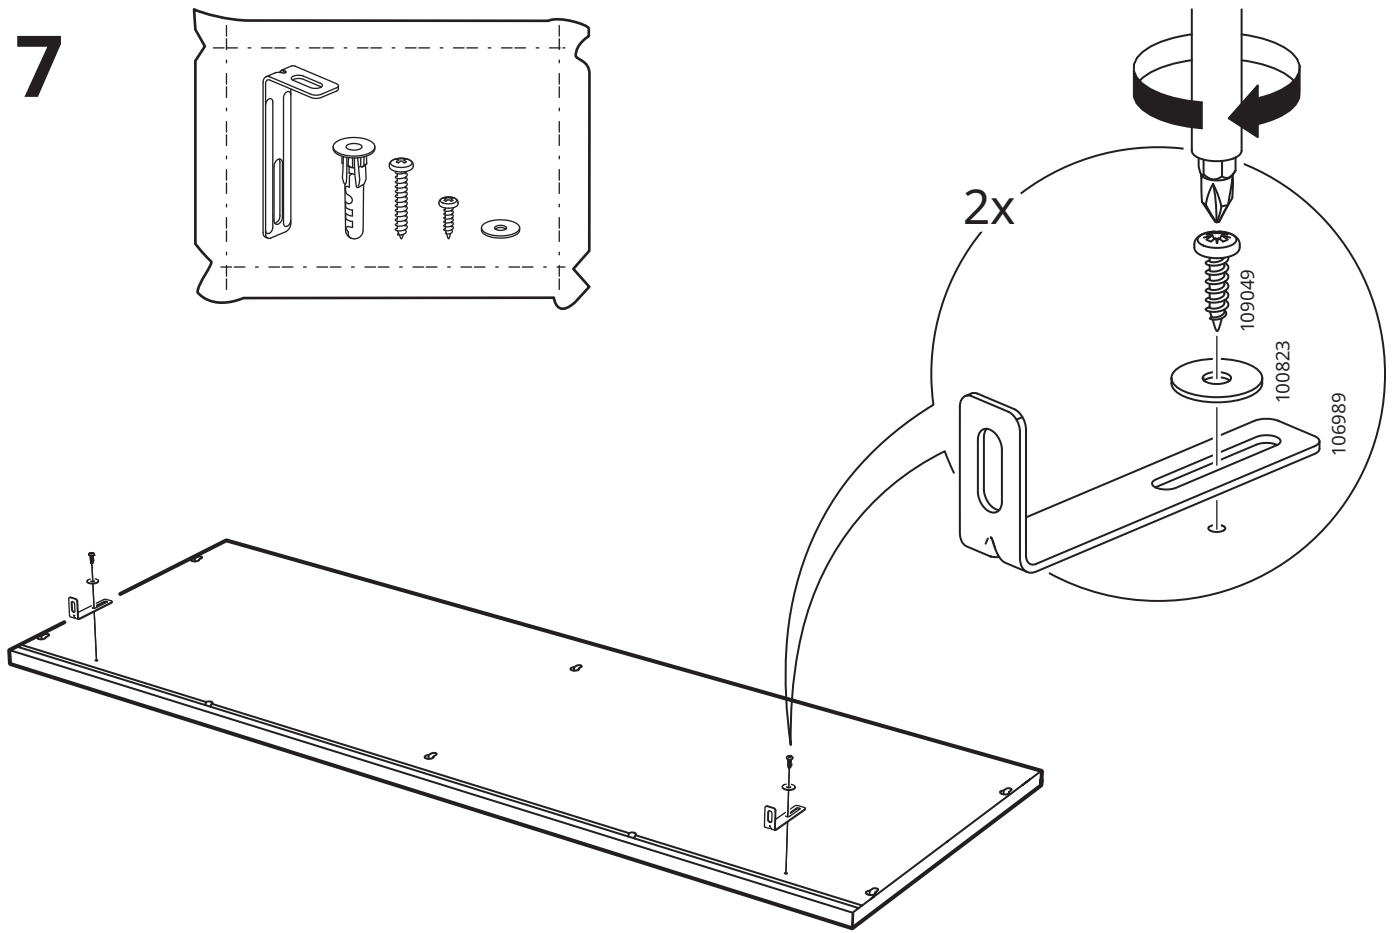 


8

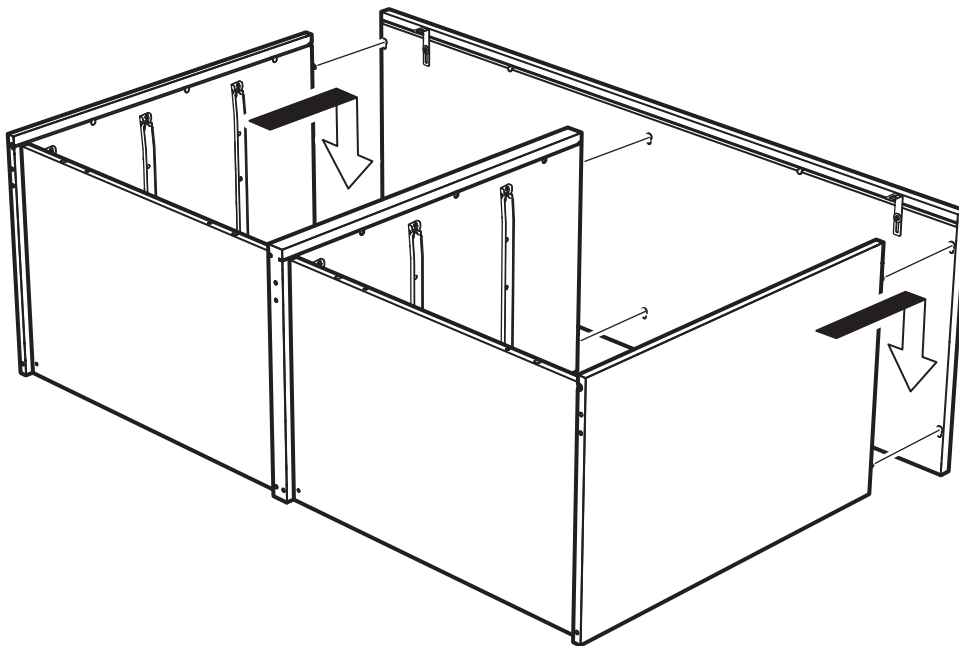 


9

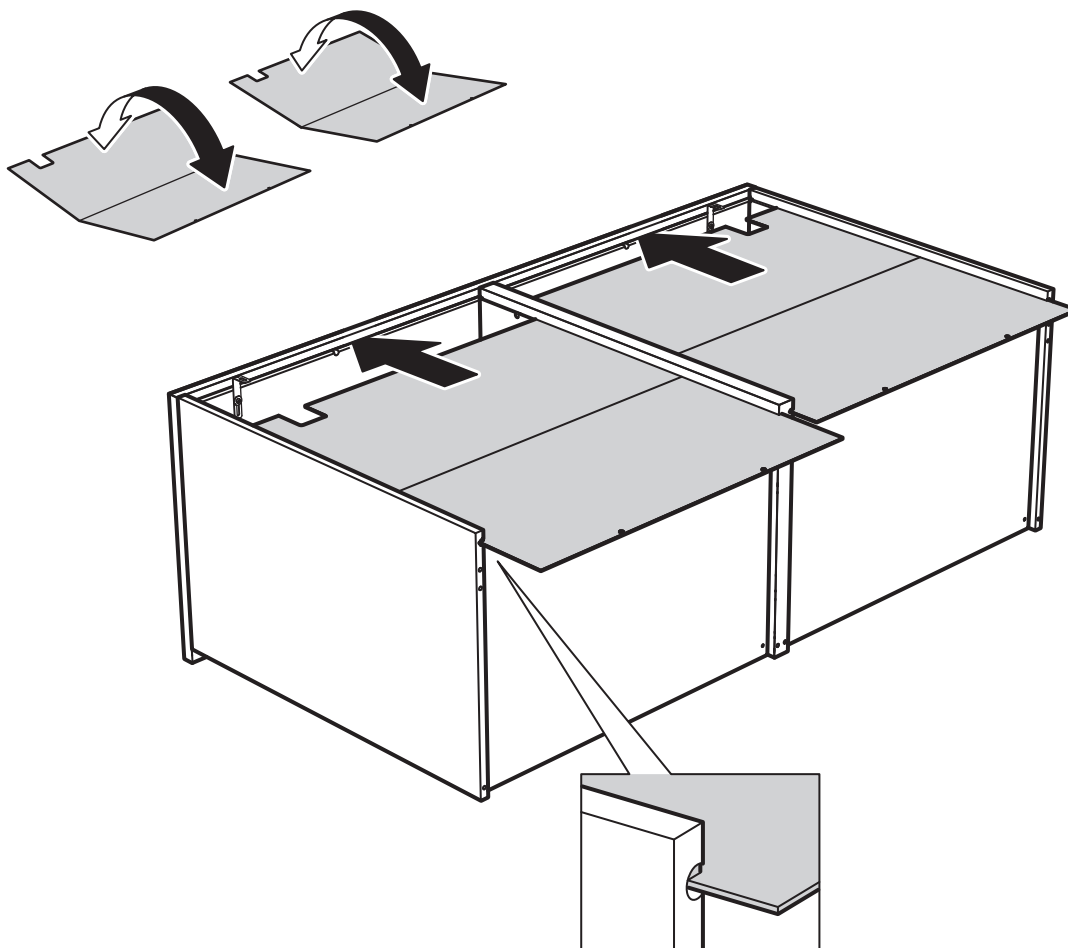 


10

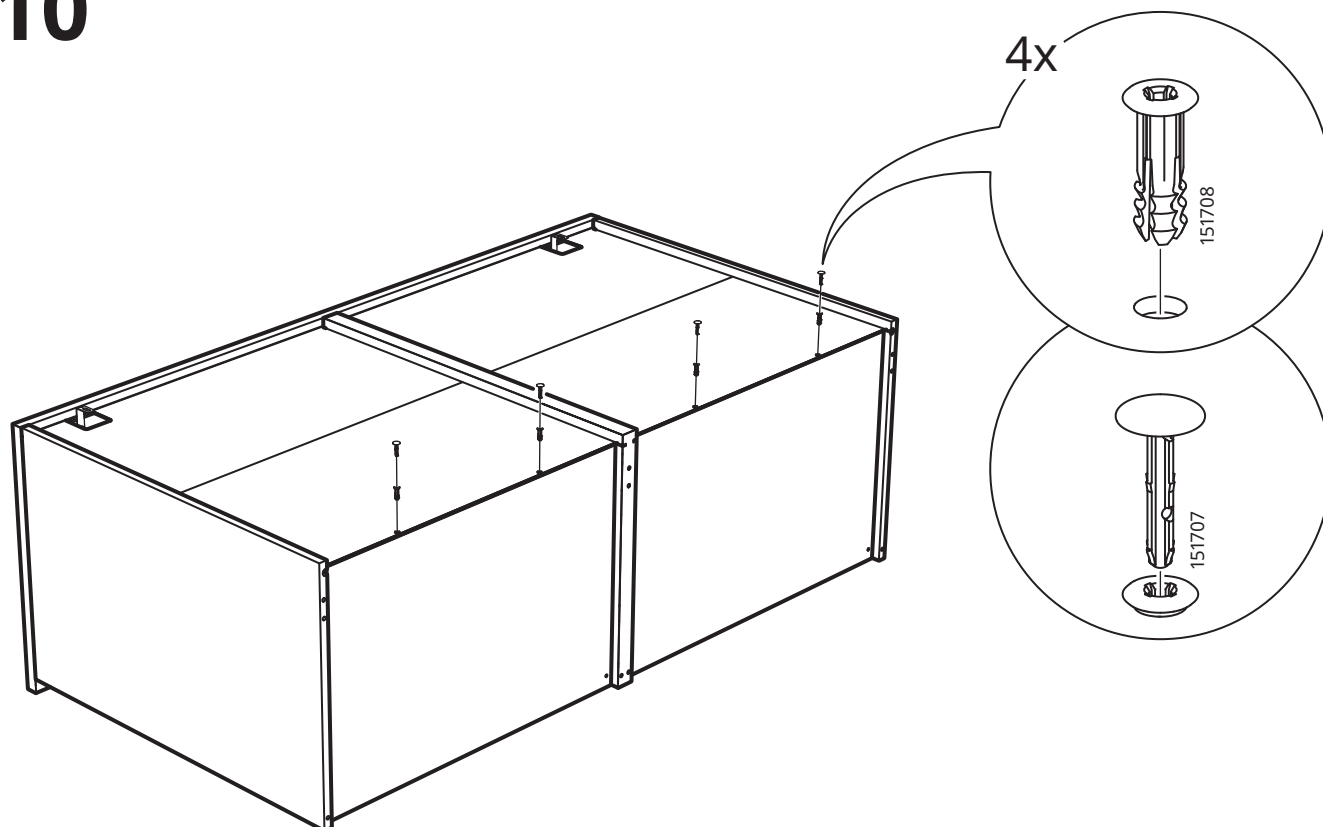 


11

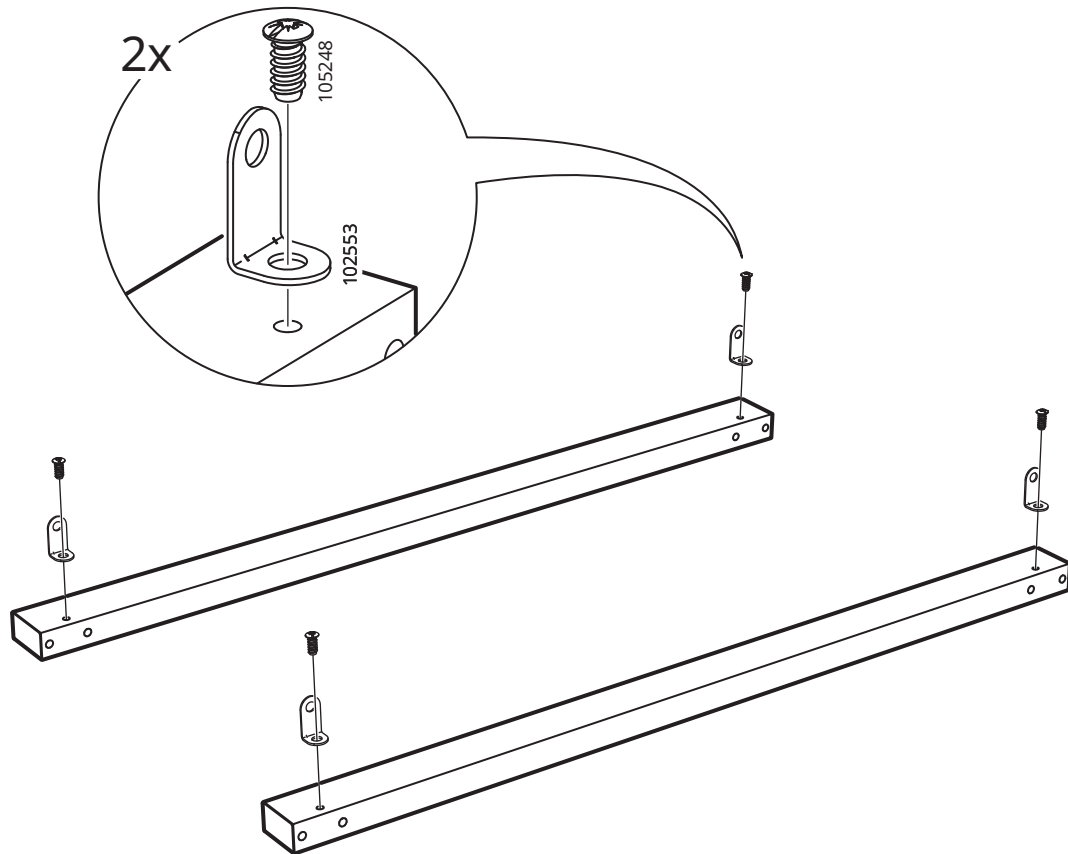 


12

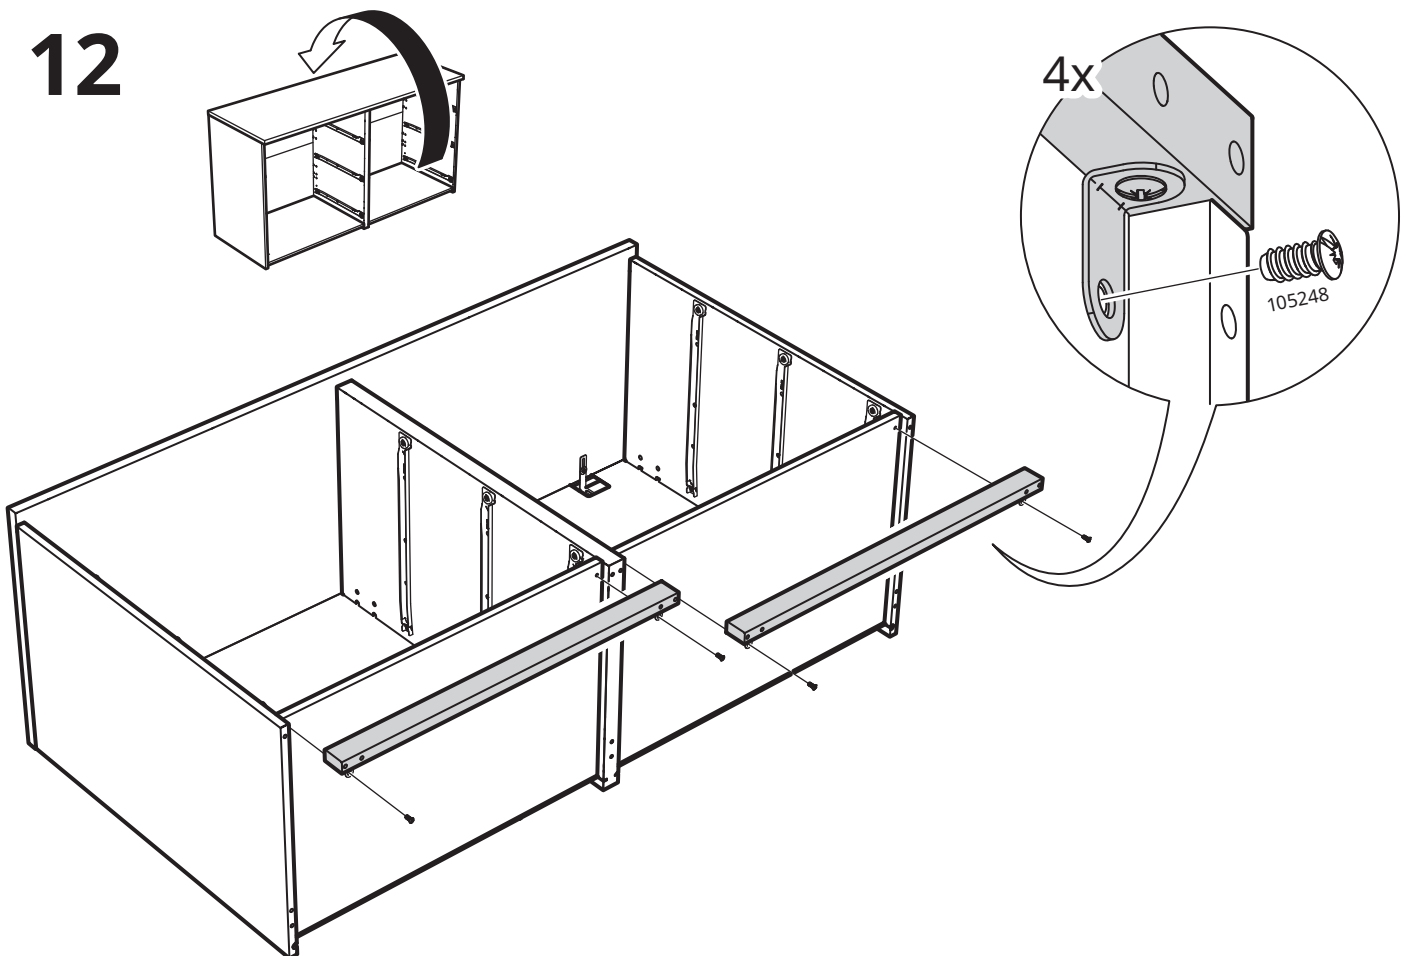 


13

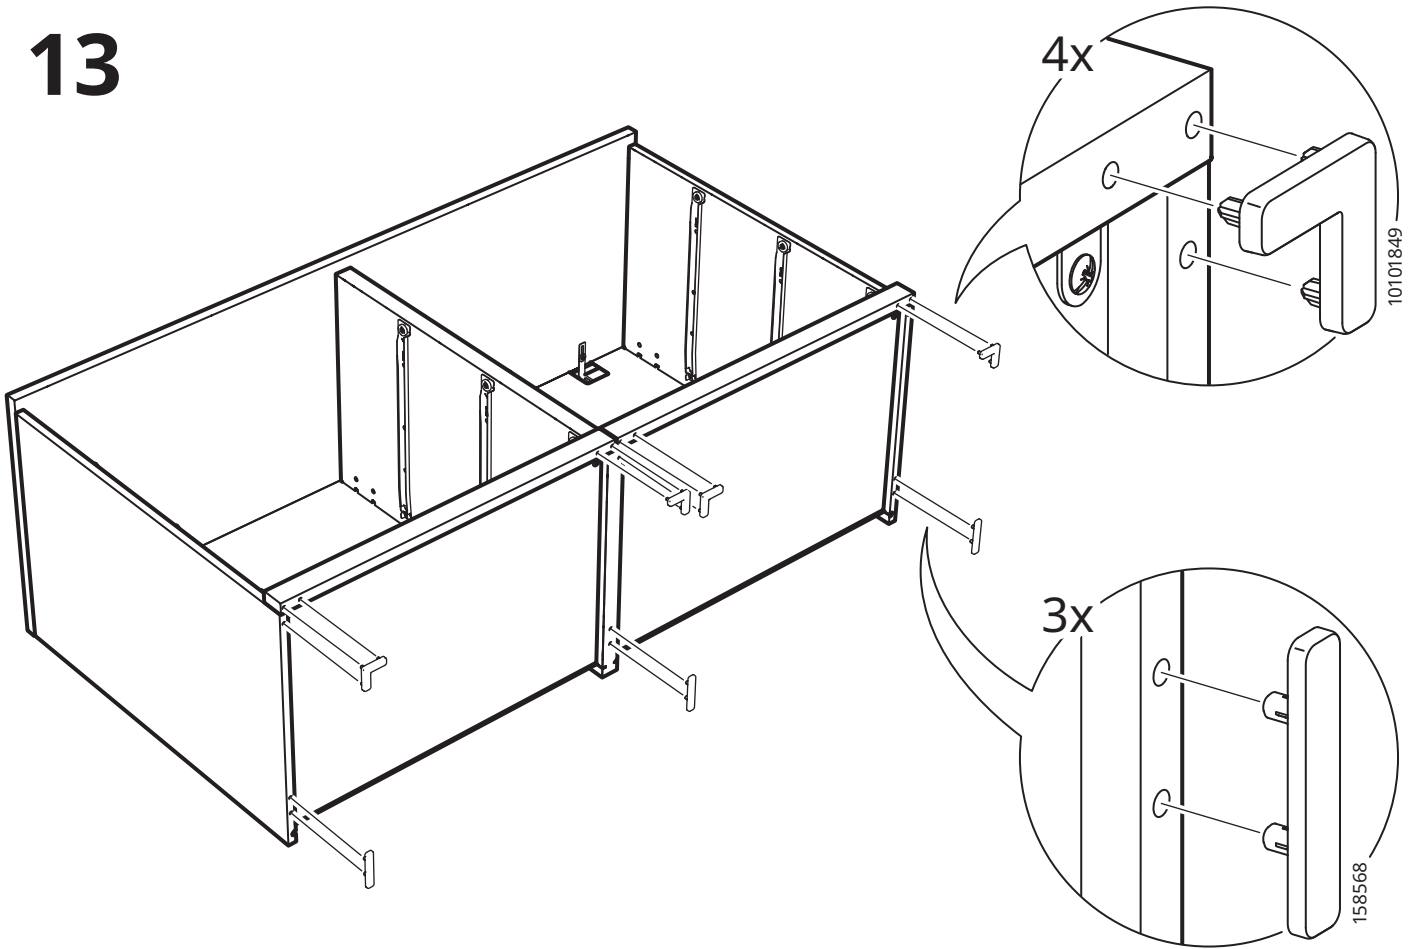 


14

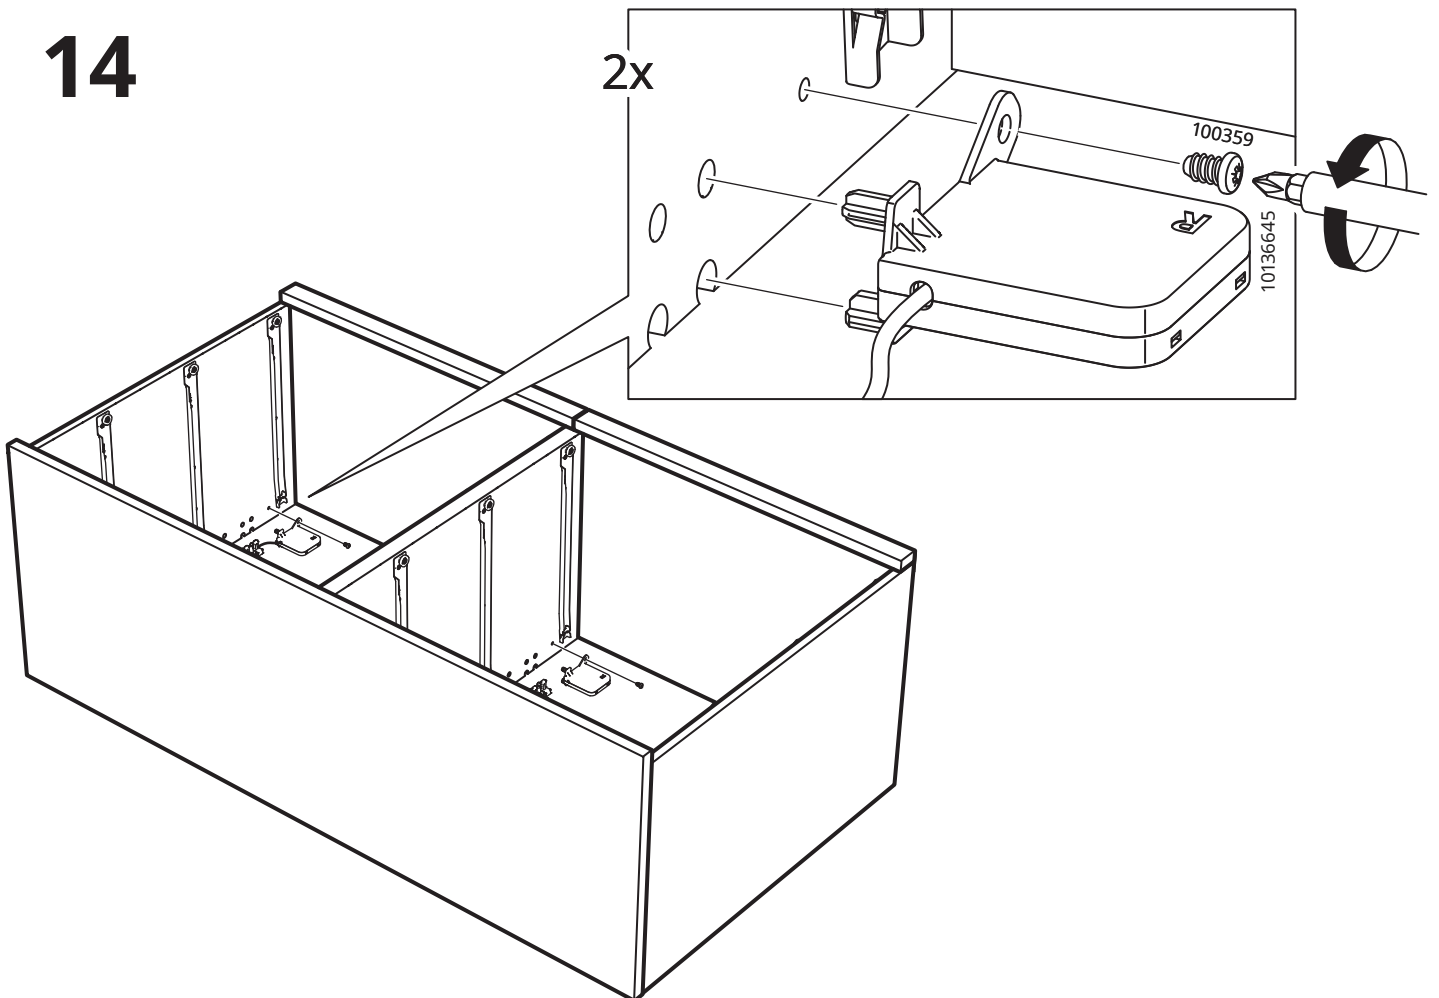 



15

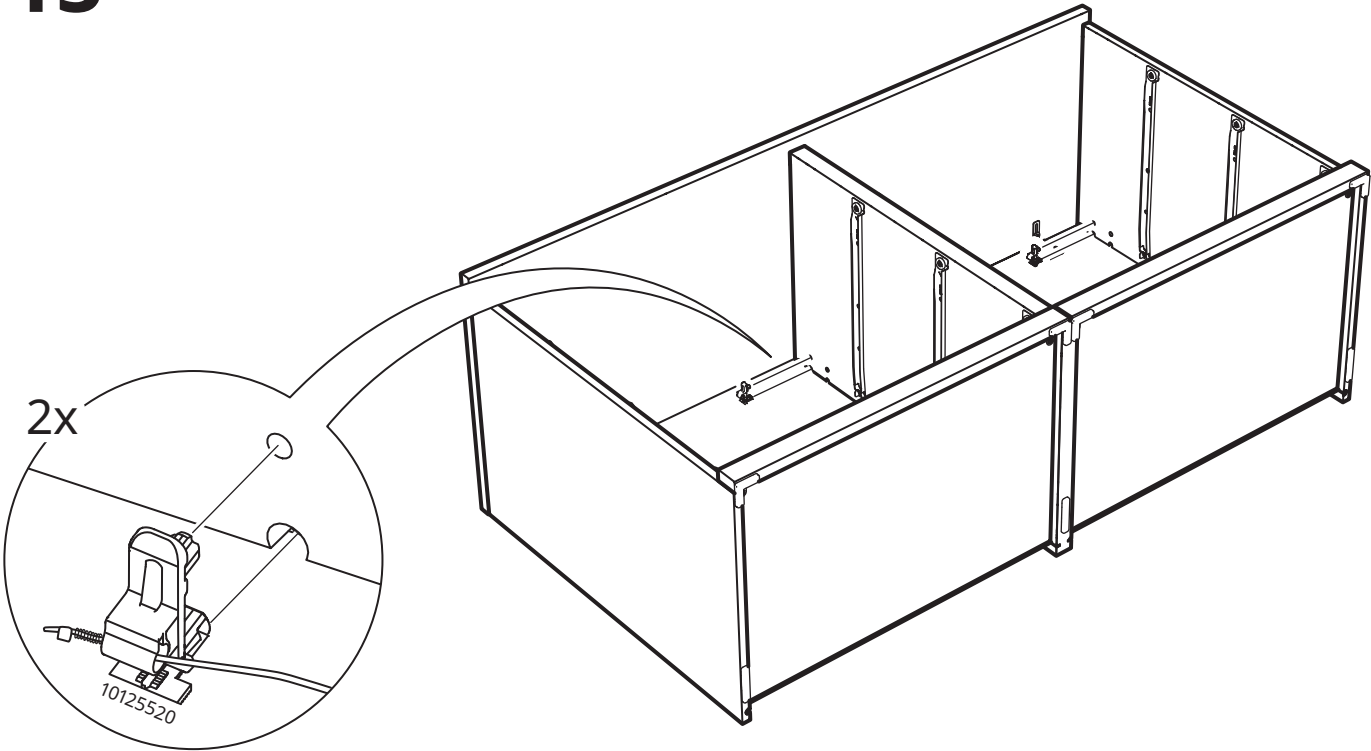 


16

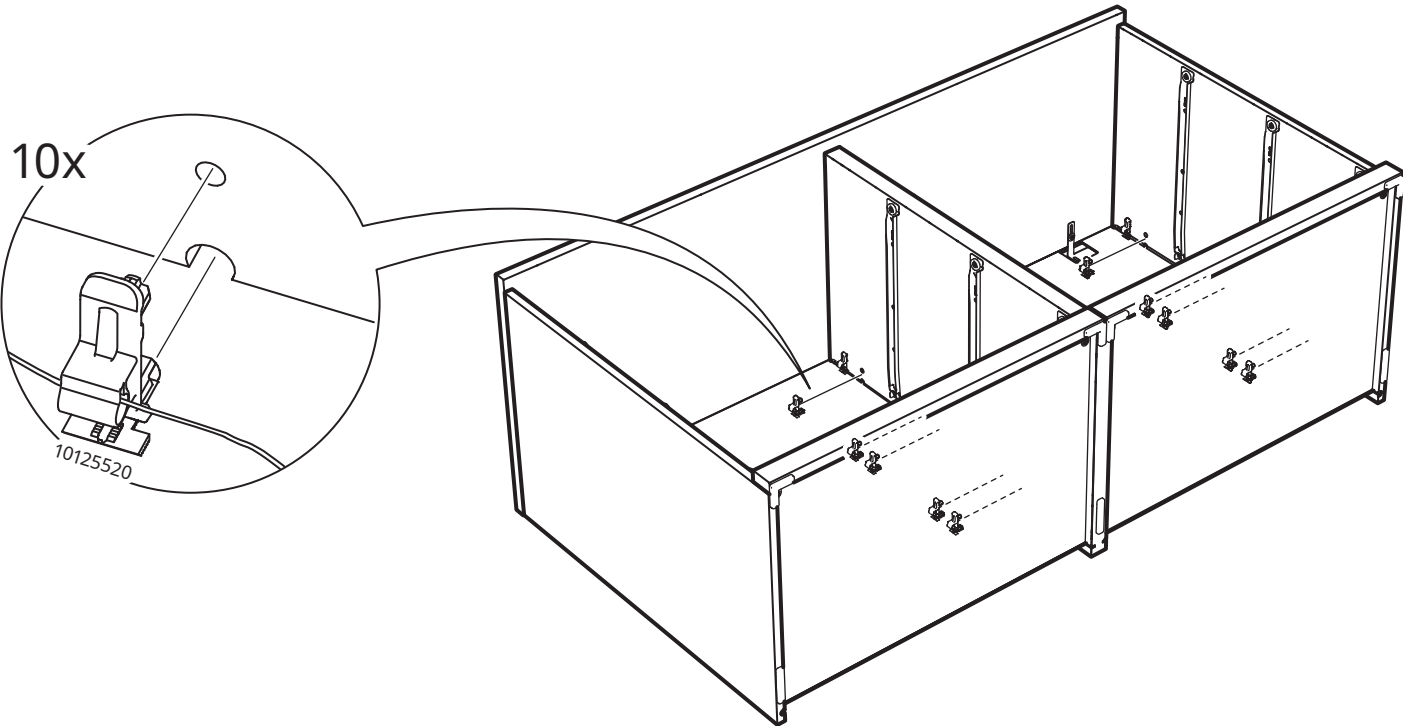 

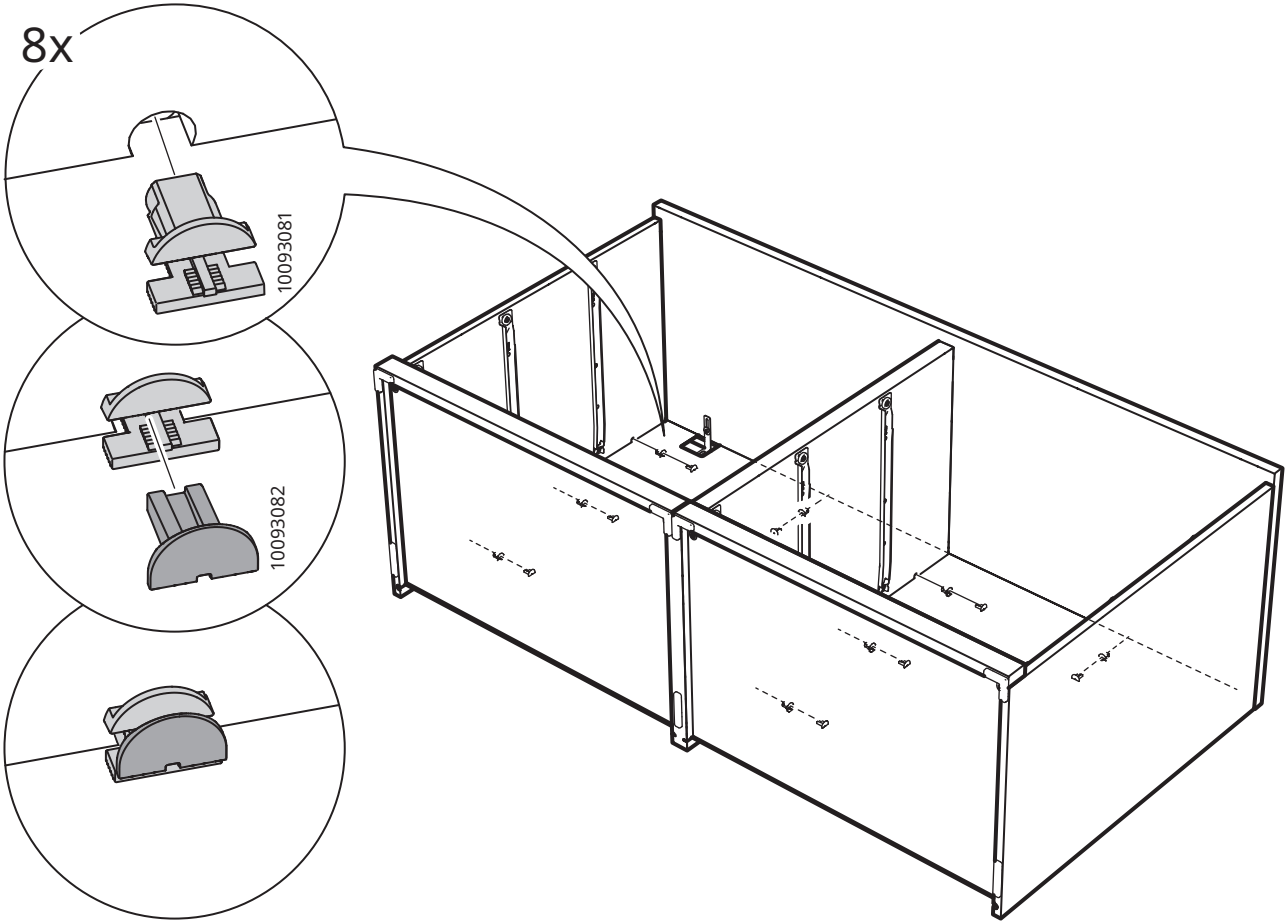 


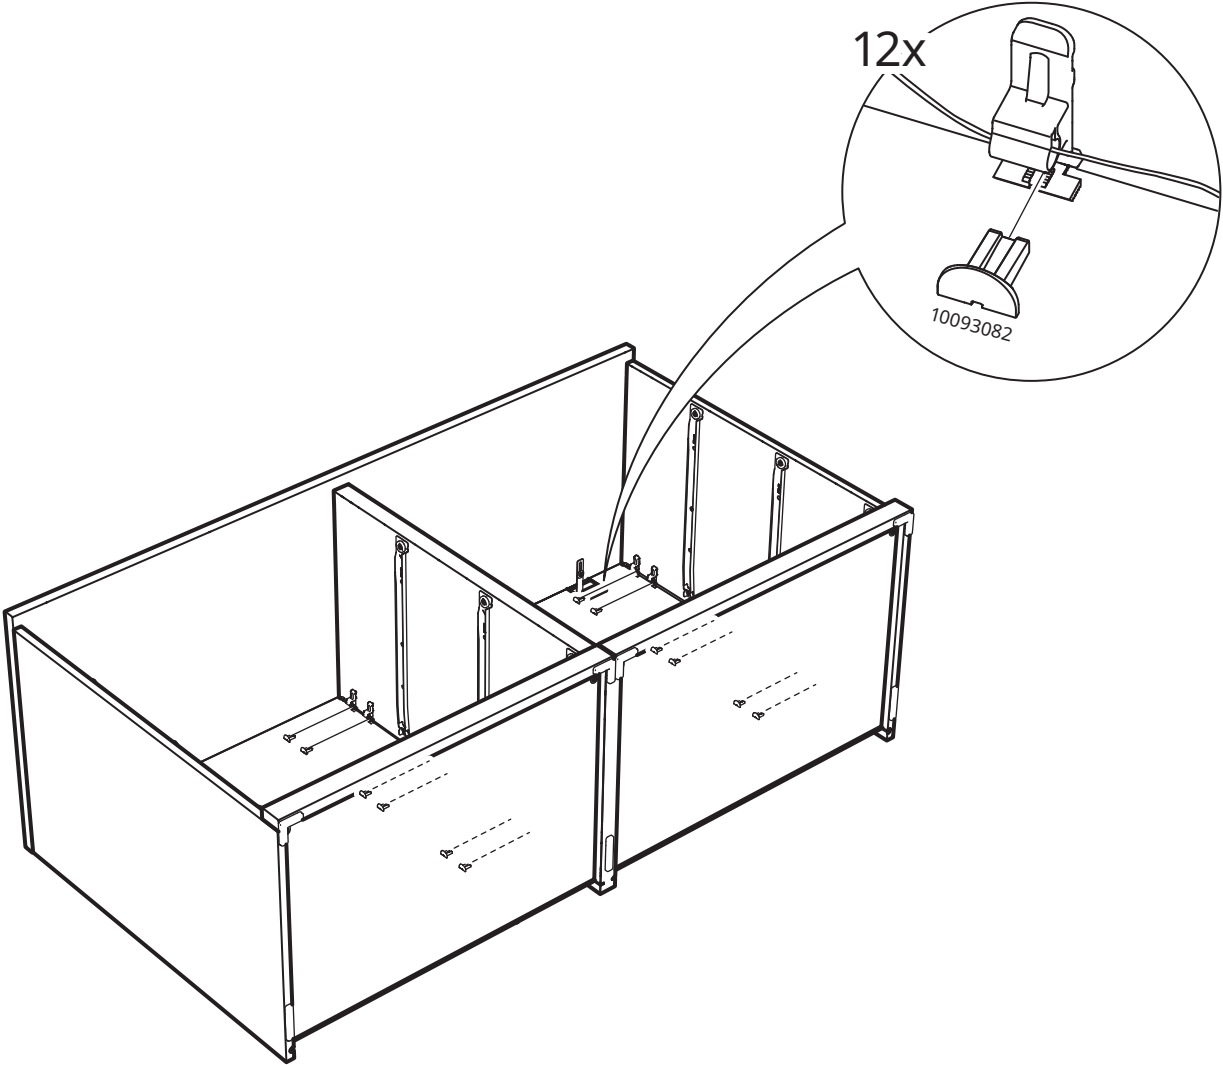 

19

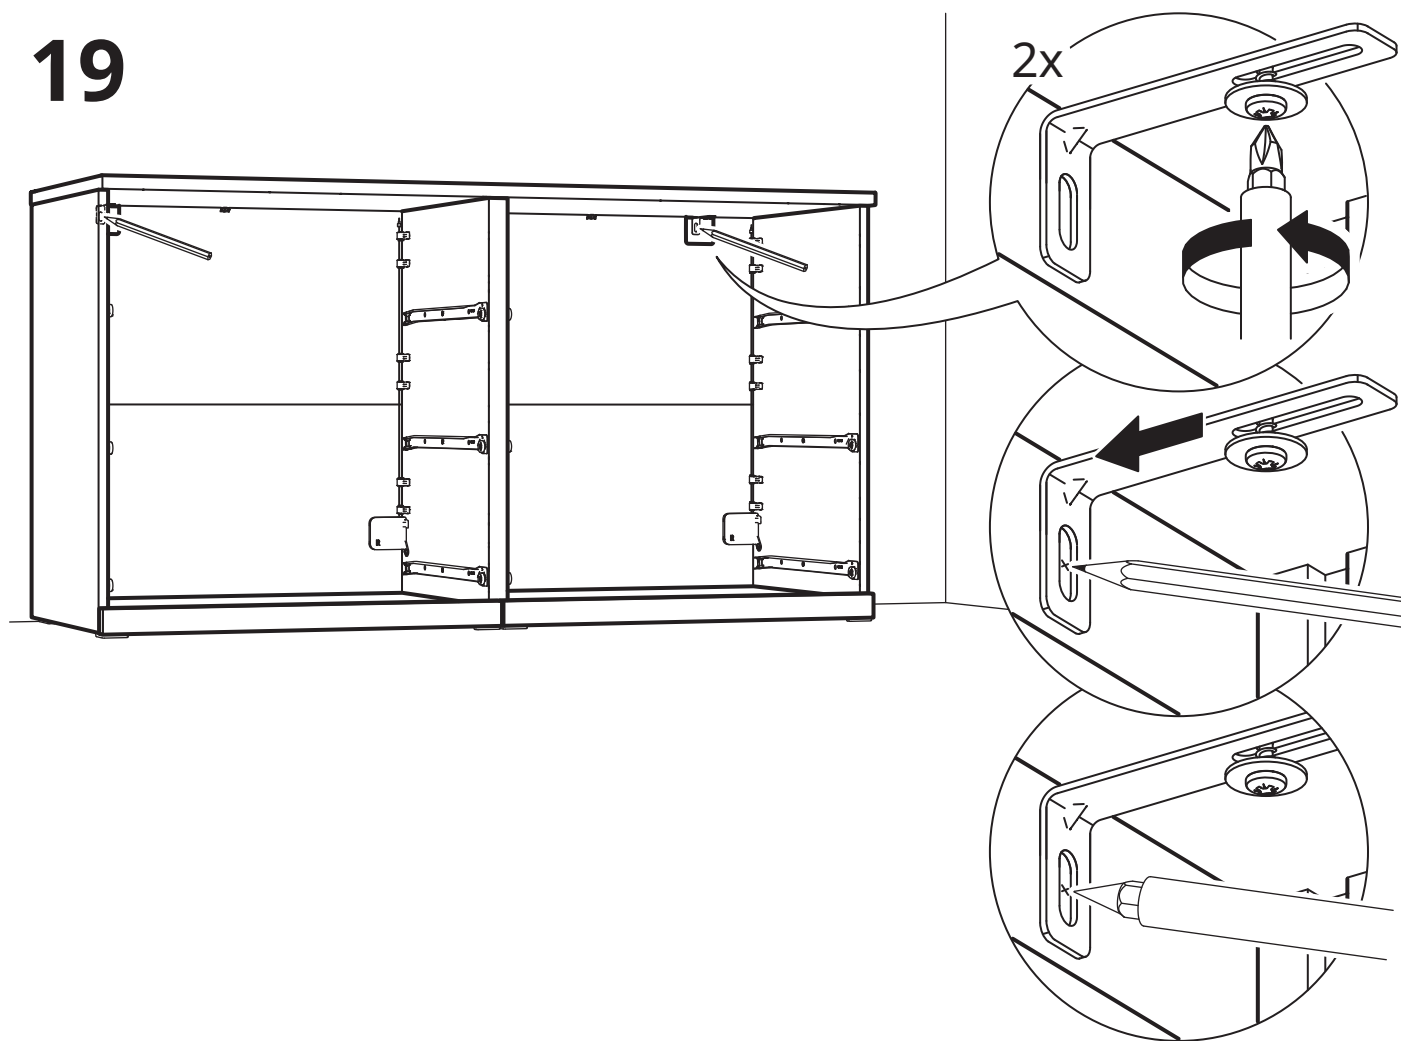 

20

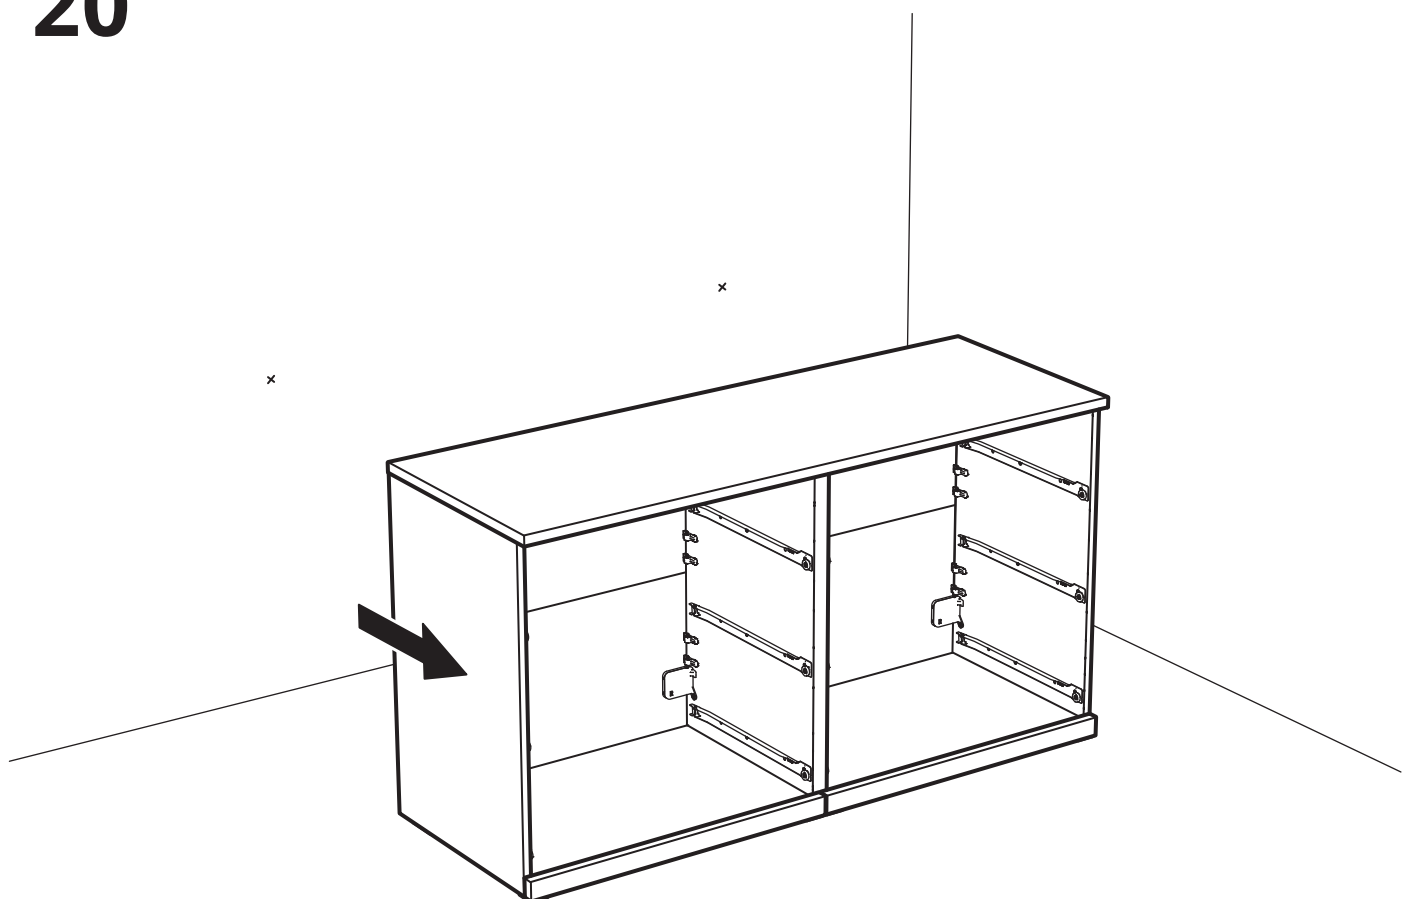 




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

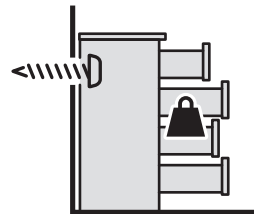

21

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

עברית

הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.

A

Ø 8 mm
(5/16")

1

2 3/4"
(70 mm)

2

24

B

Ø 8 mm
(5/16")

1

≈ 1 1/4"
(≈ 30 mm)

2

25

 
C

Ø 3 mm
(1/8")

1


≈ 1 1/4"
(≈ 30 mm)

27

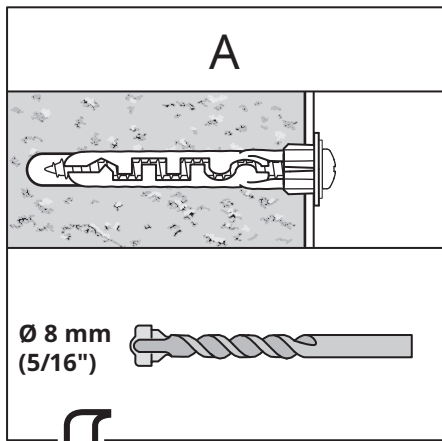




22

 x

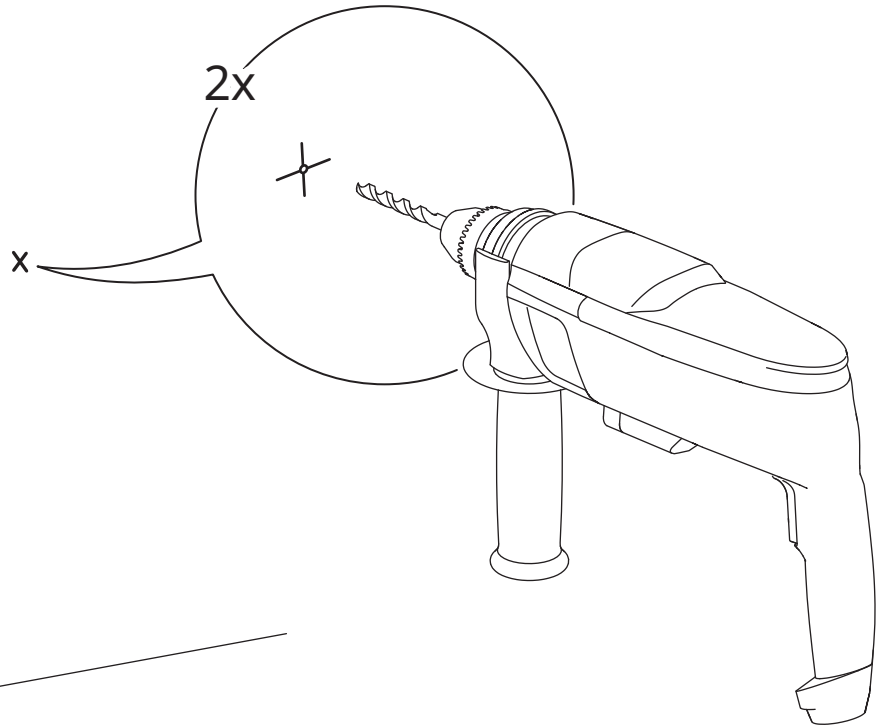



23

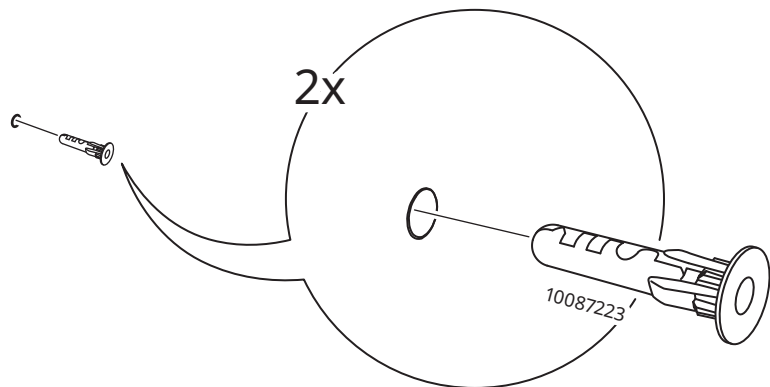 


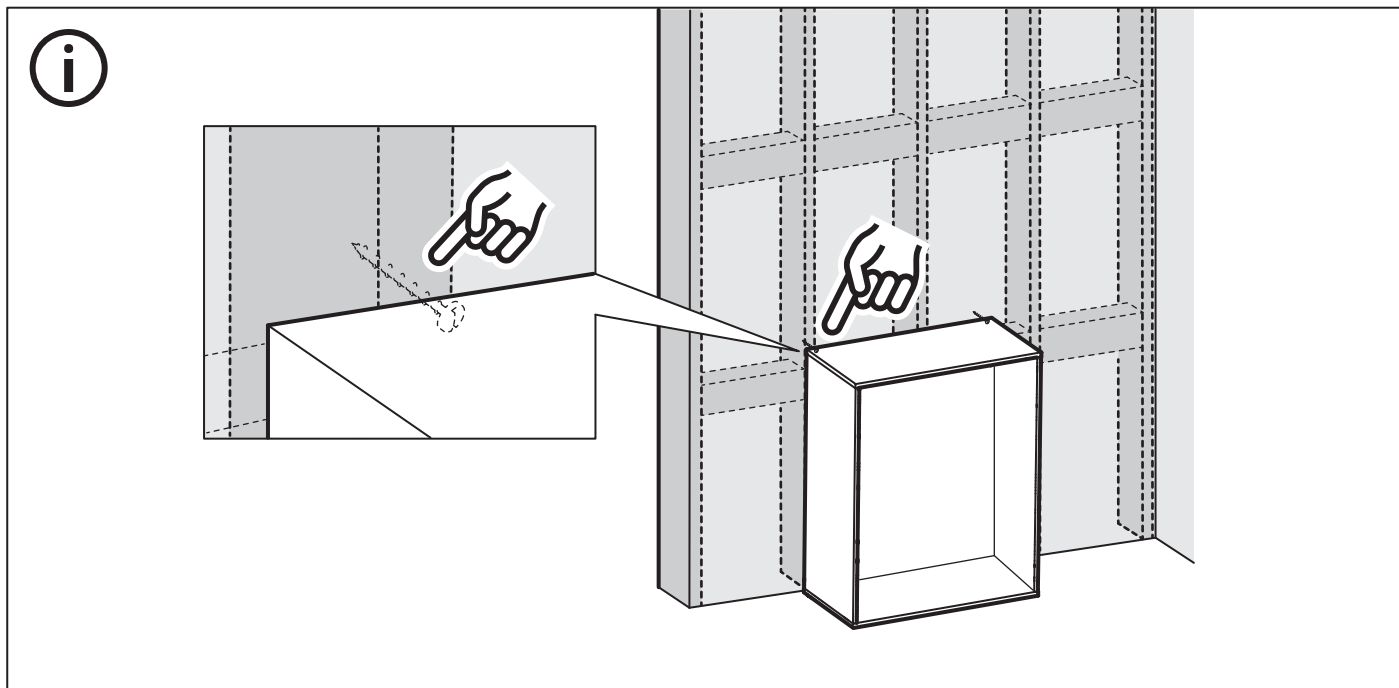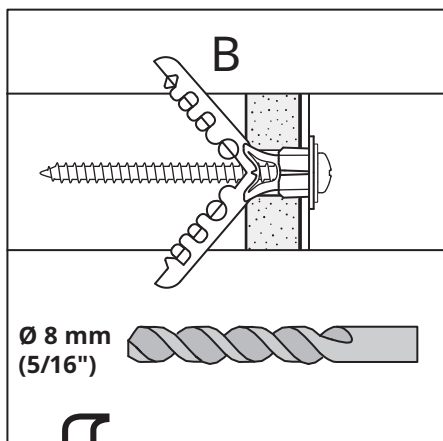  


22

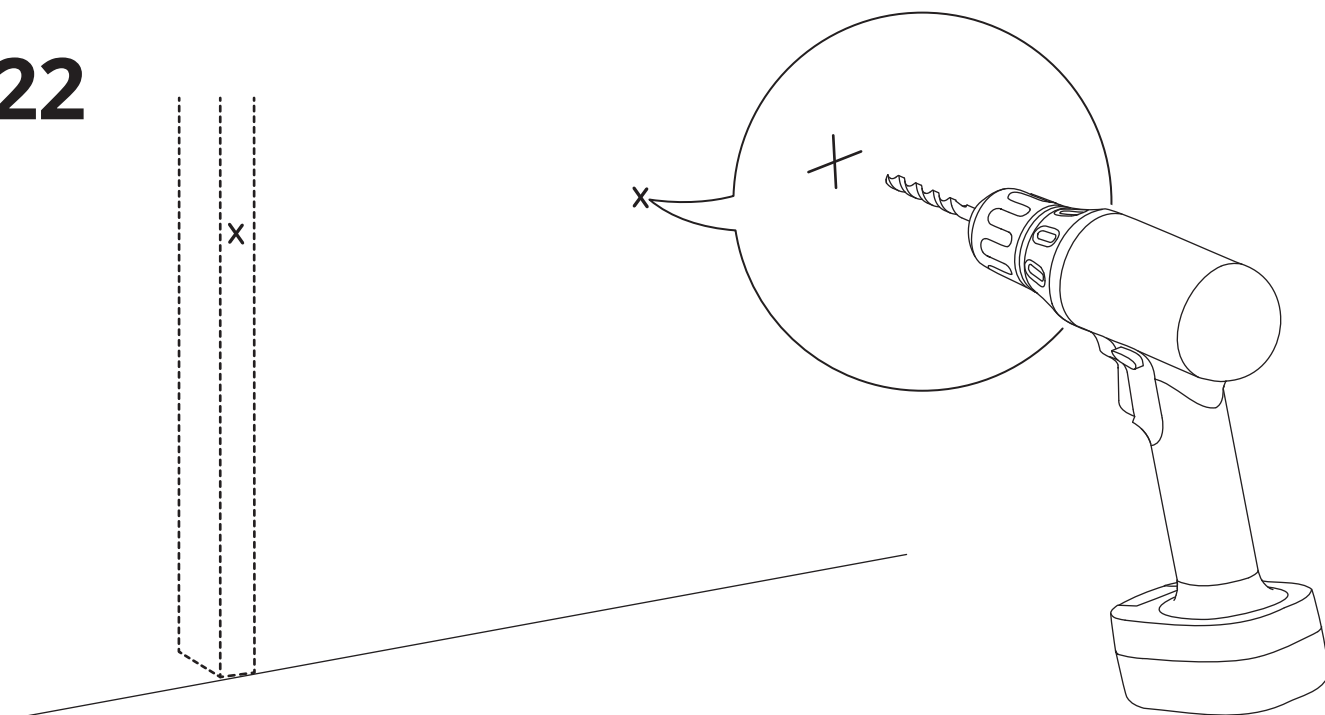 


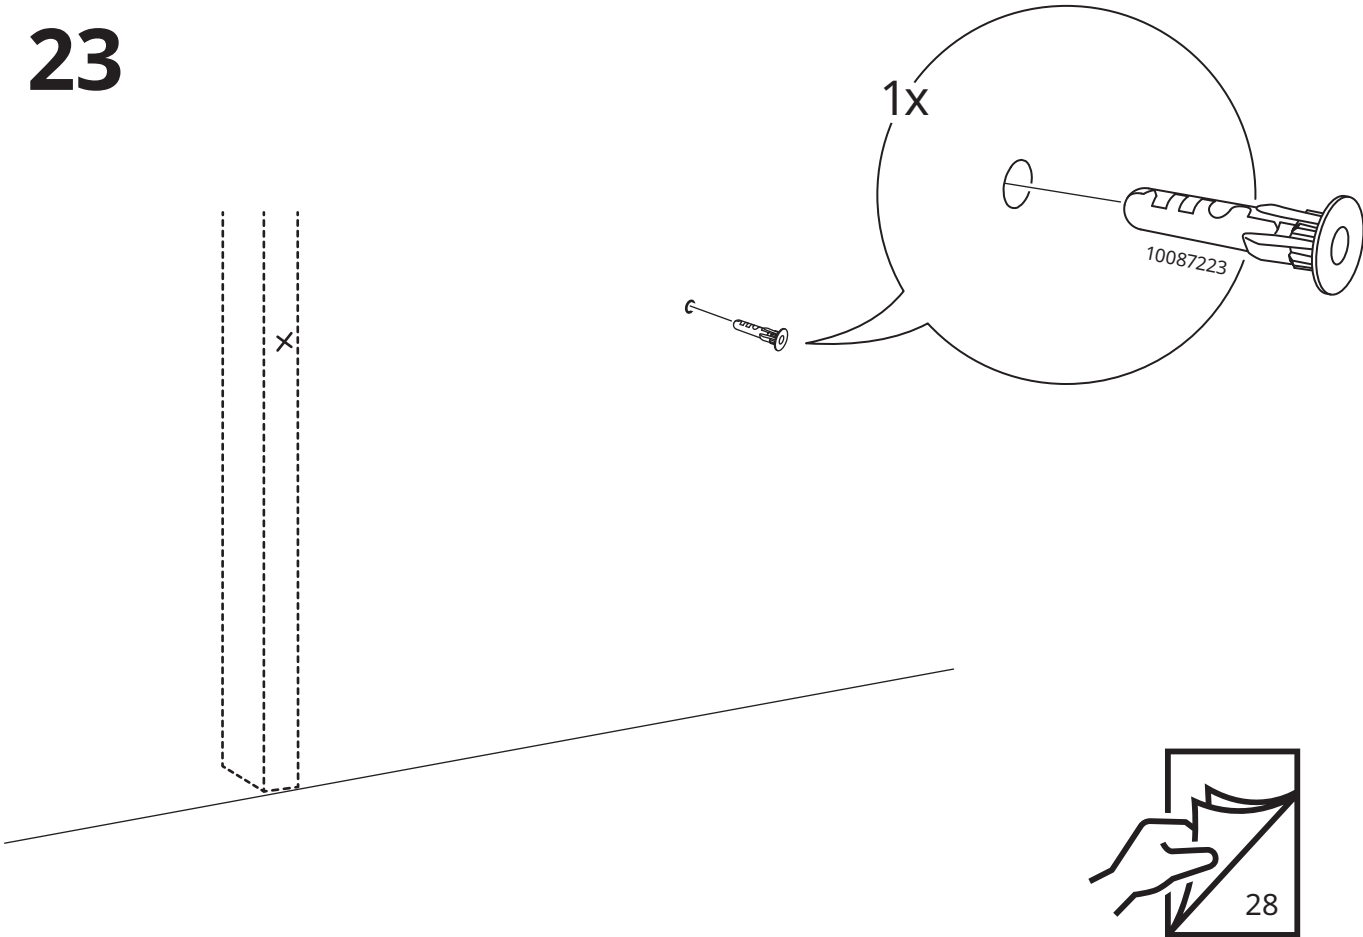 


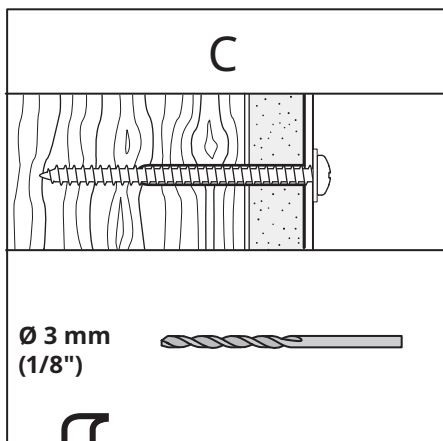 


22

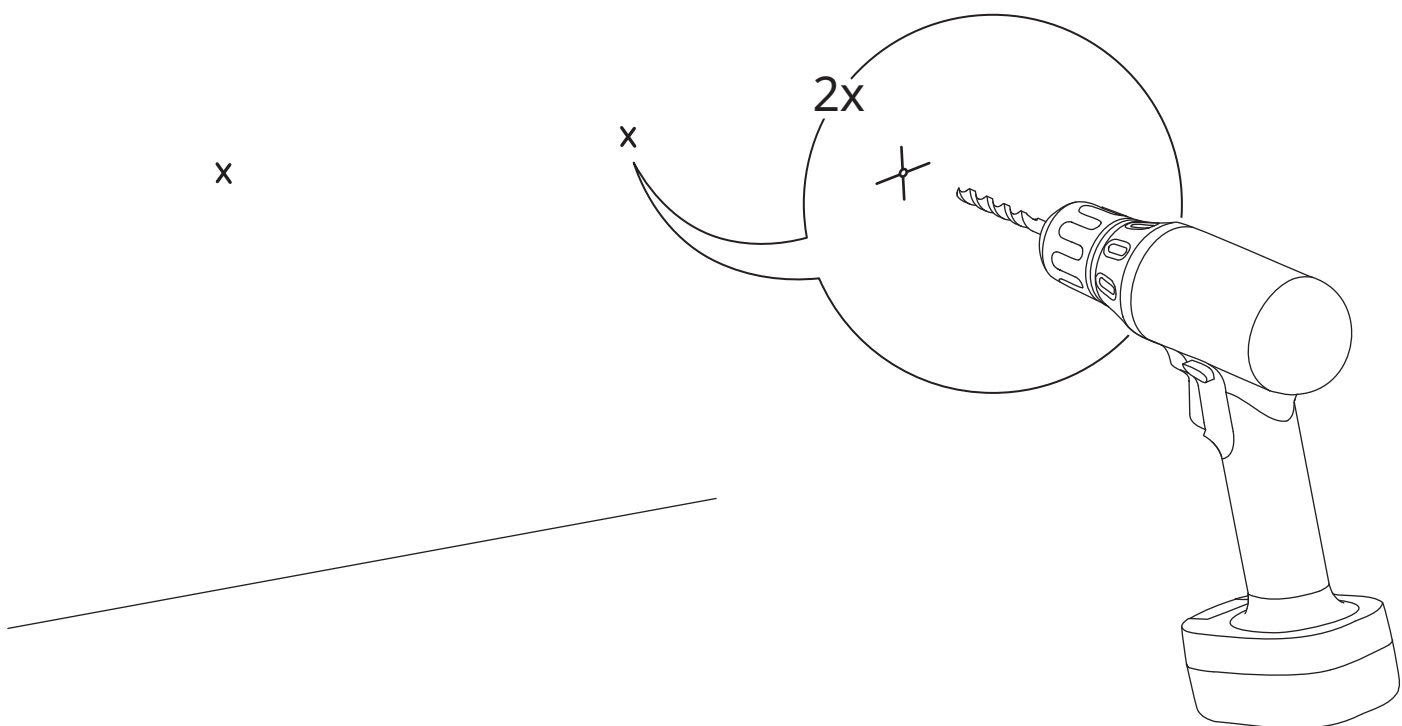 

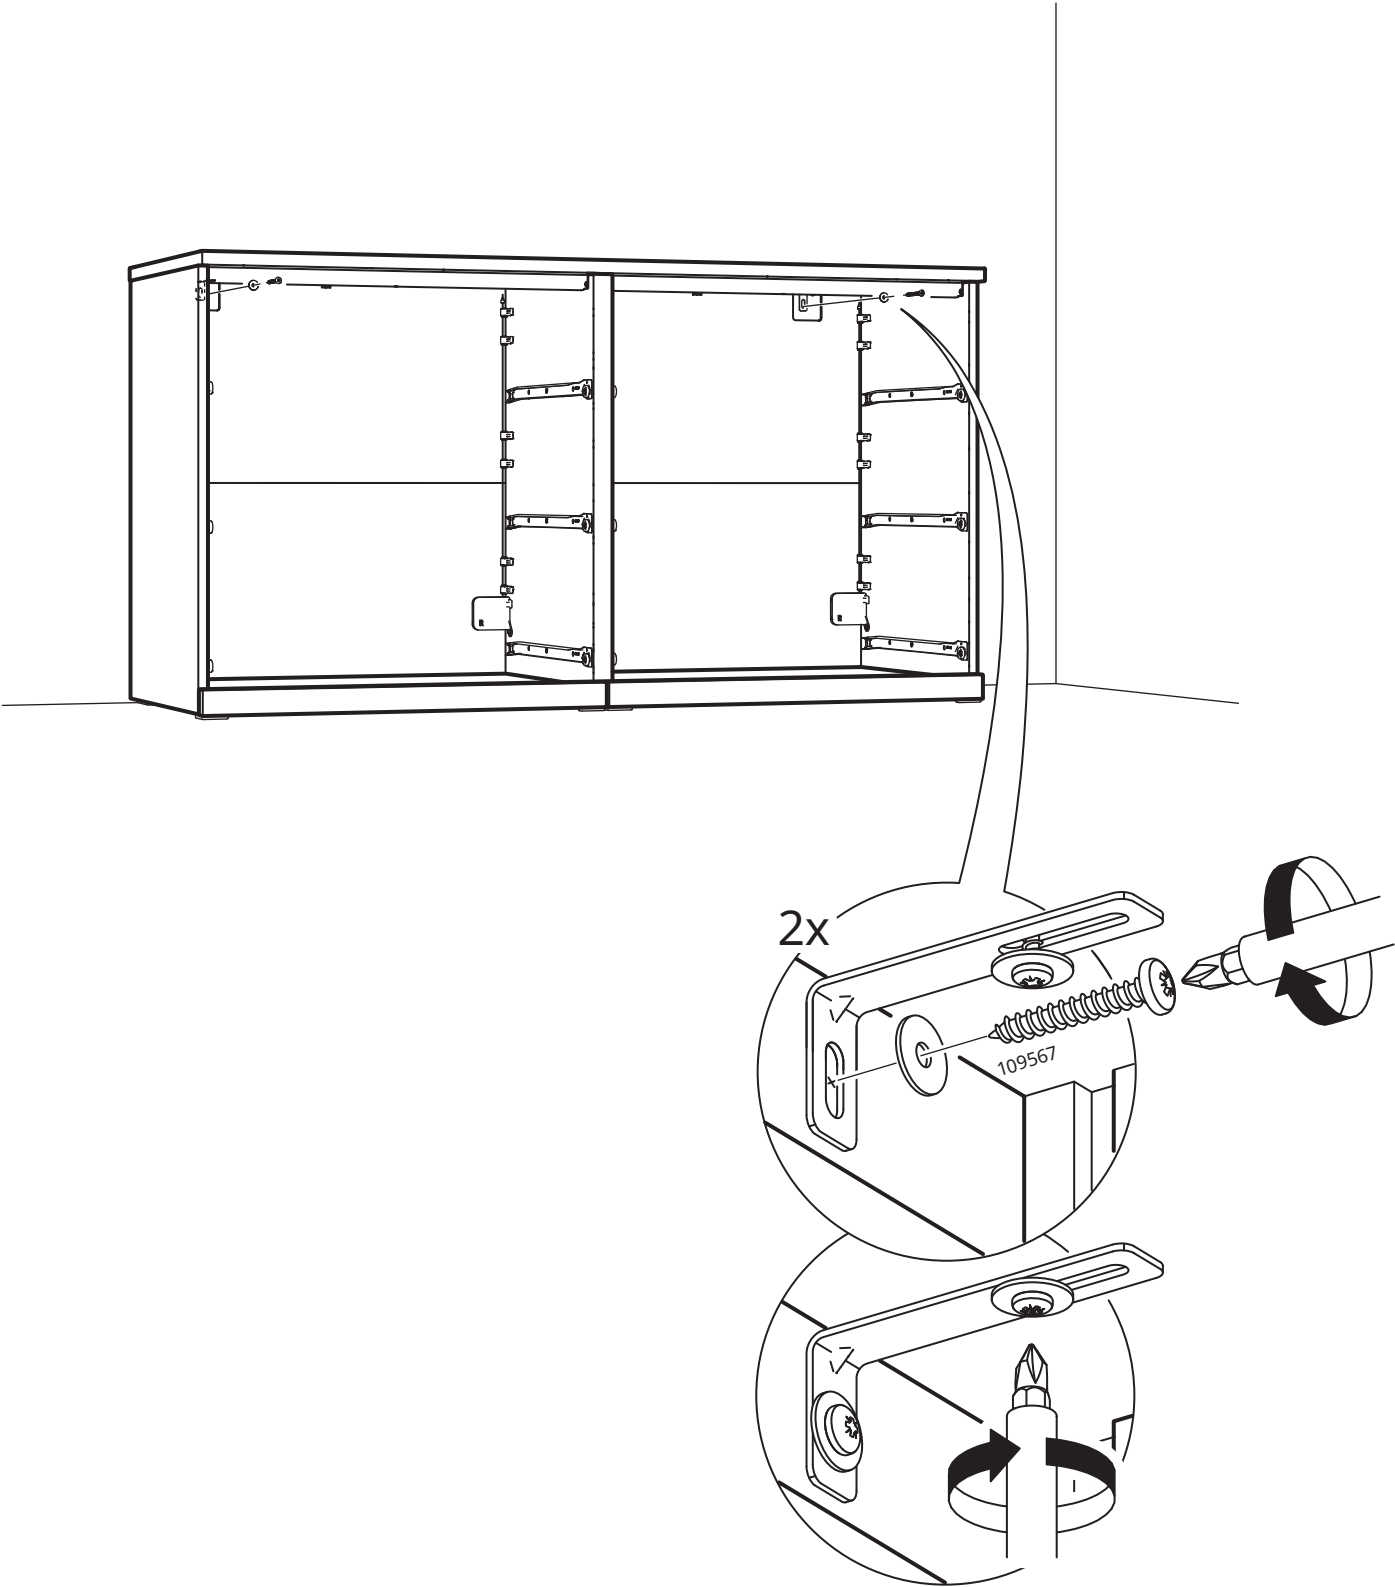 


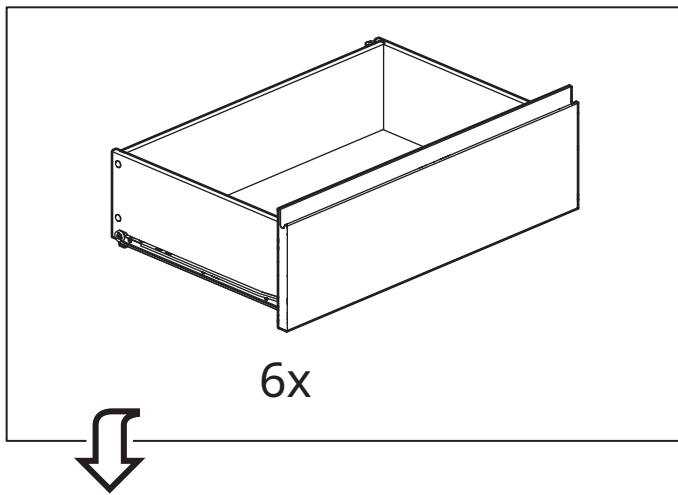 




25

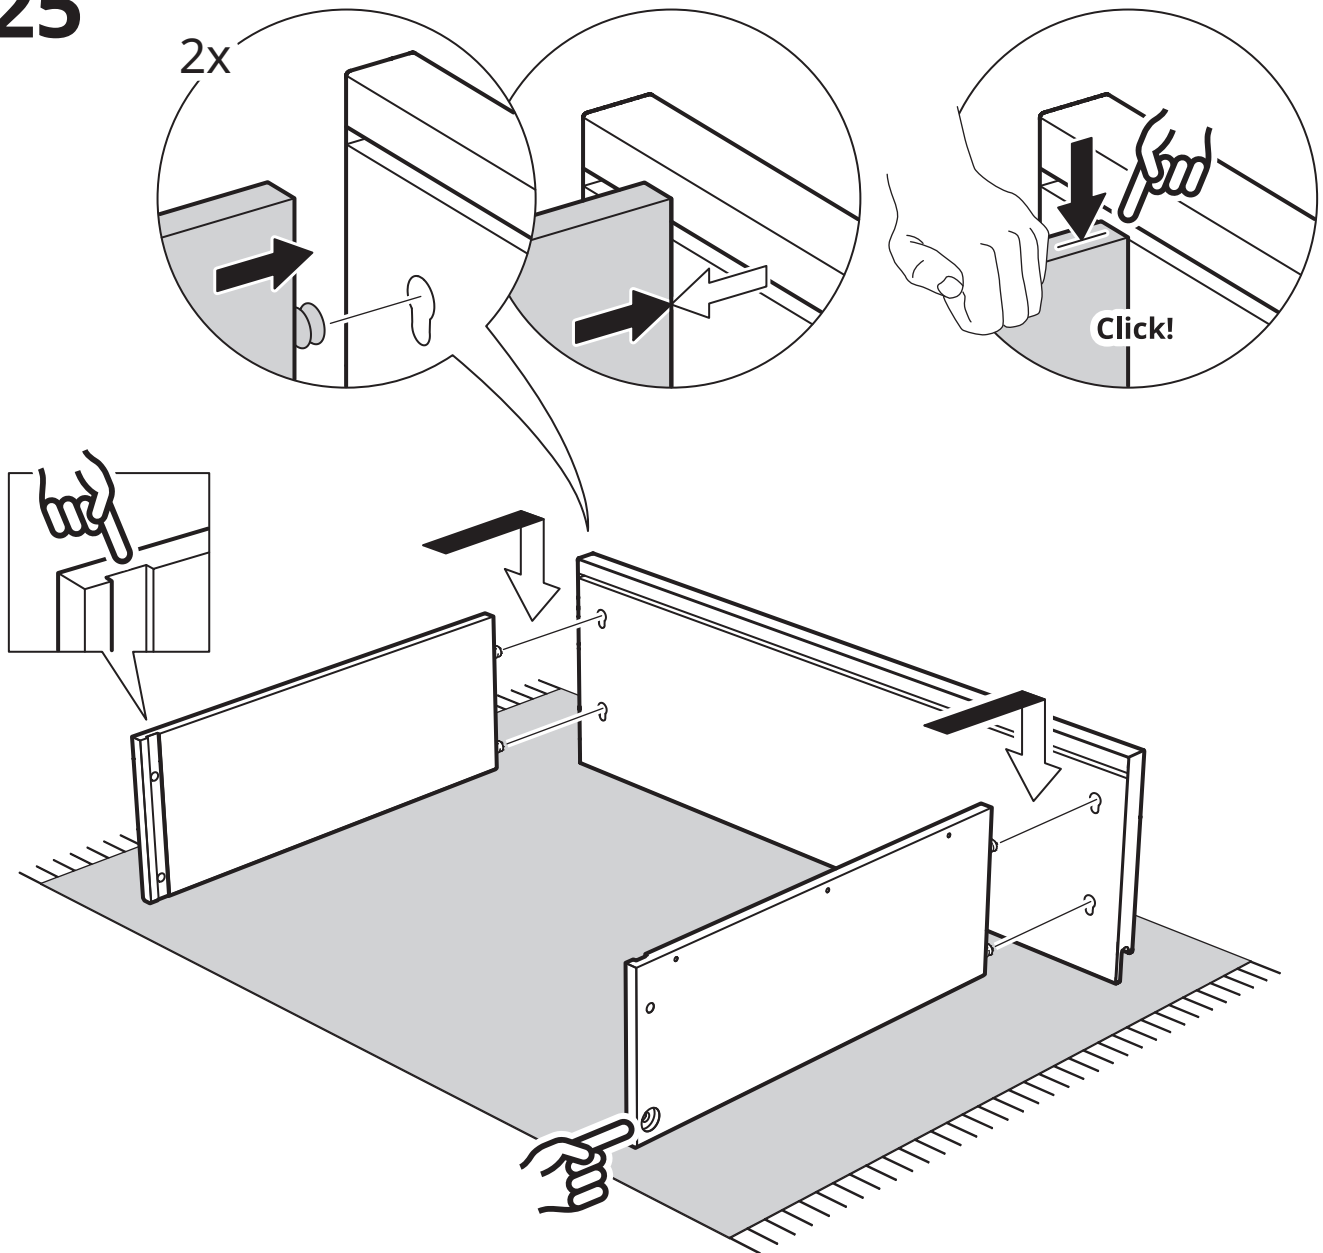 


26

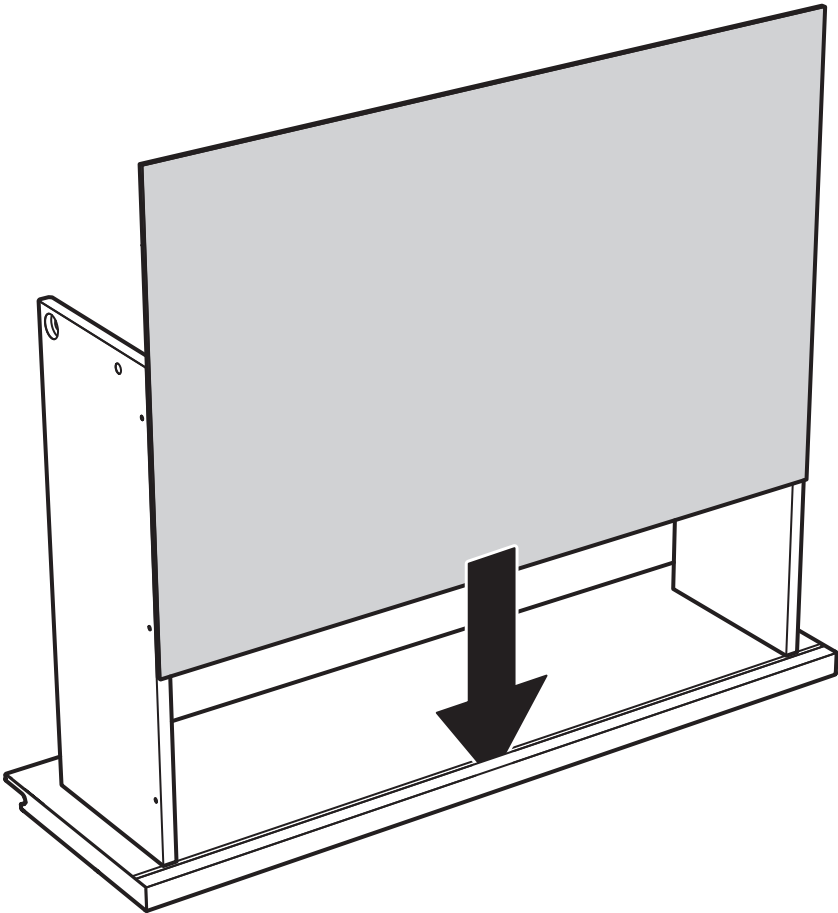 


27

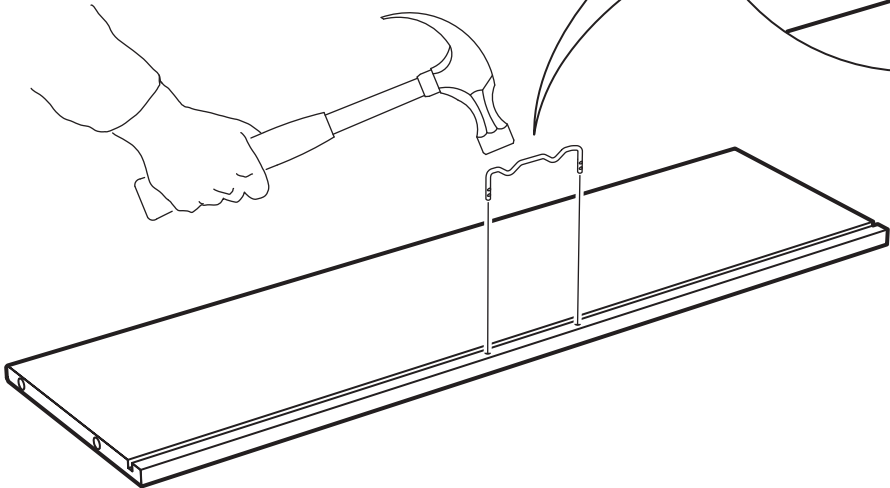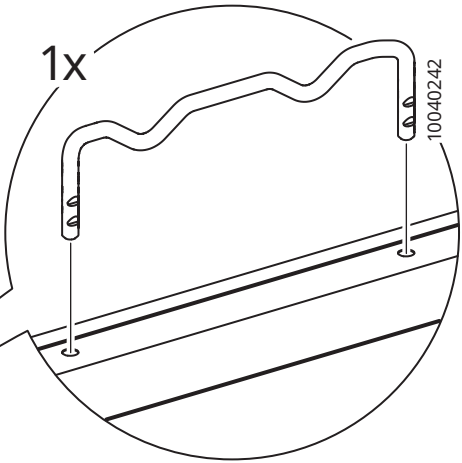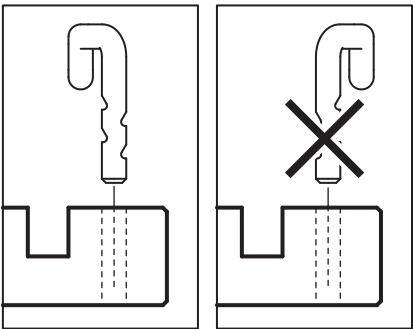   


28

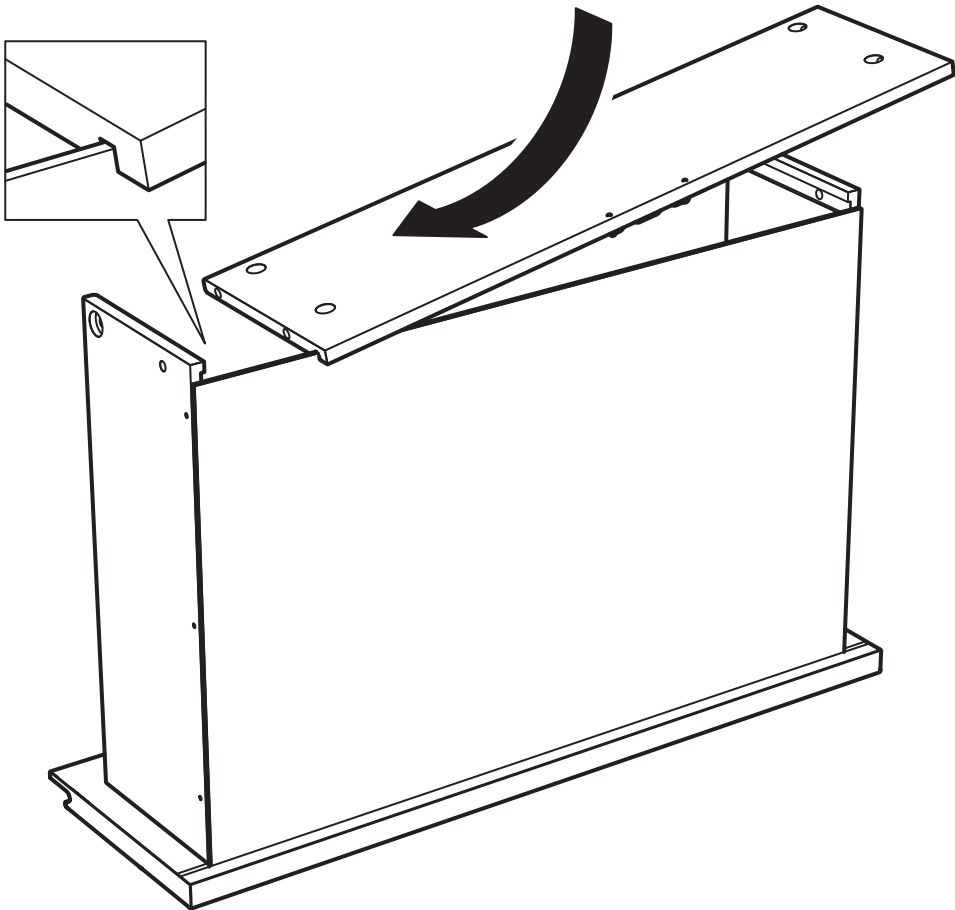 


29

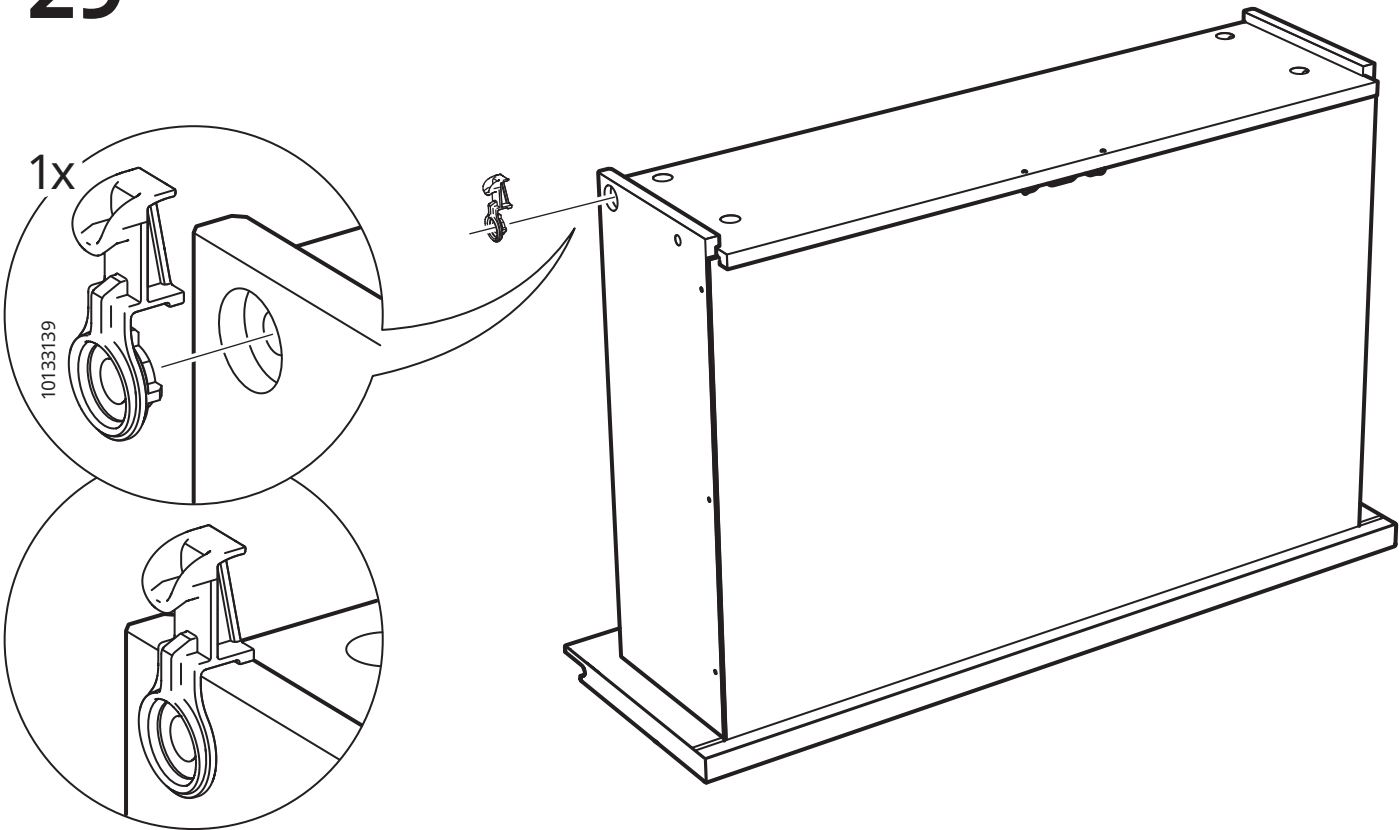 


30

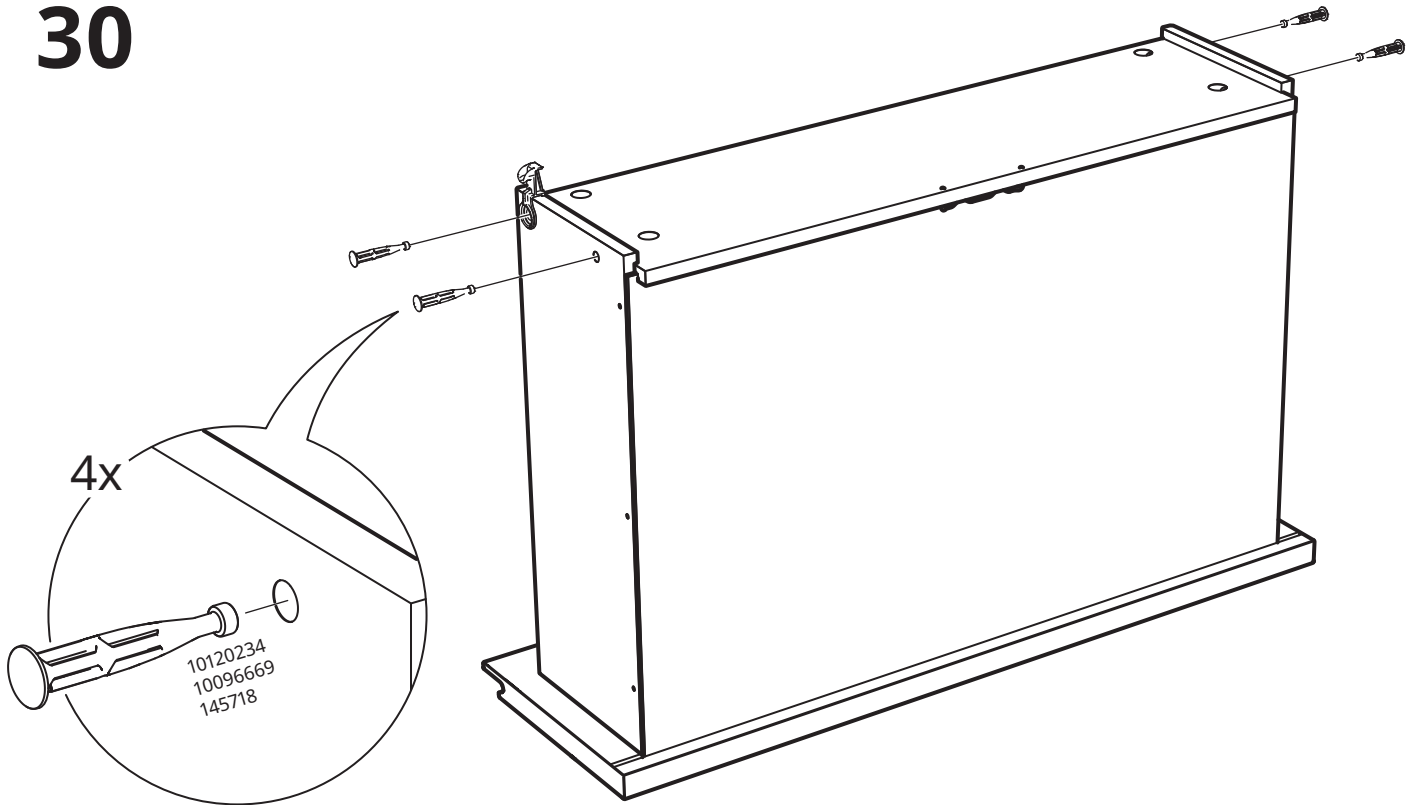 

31

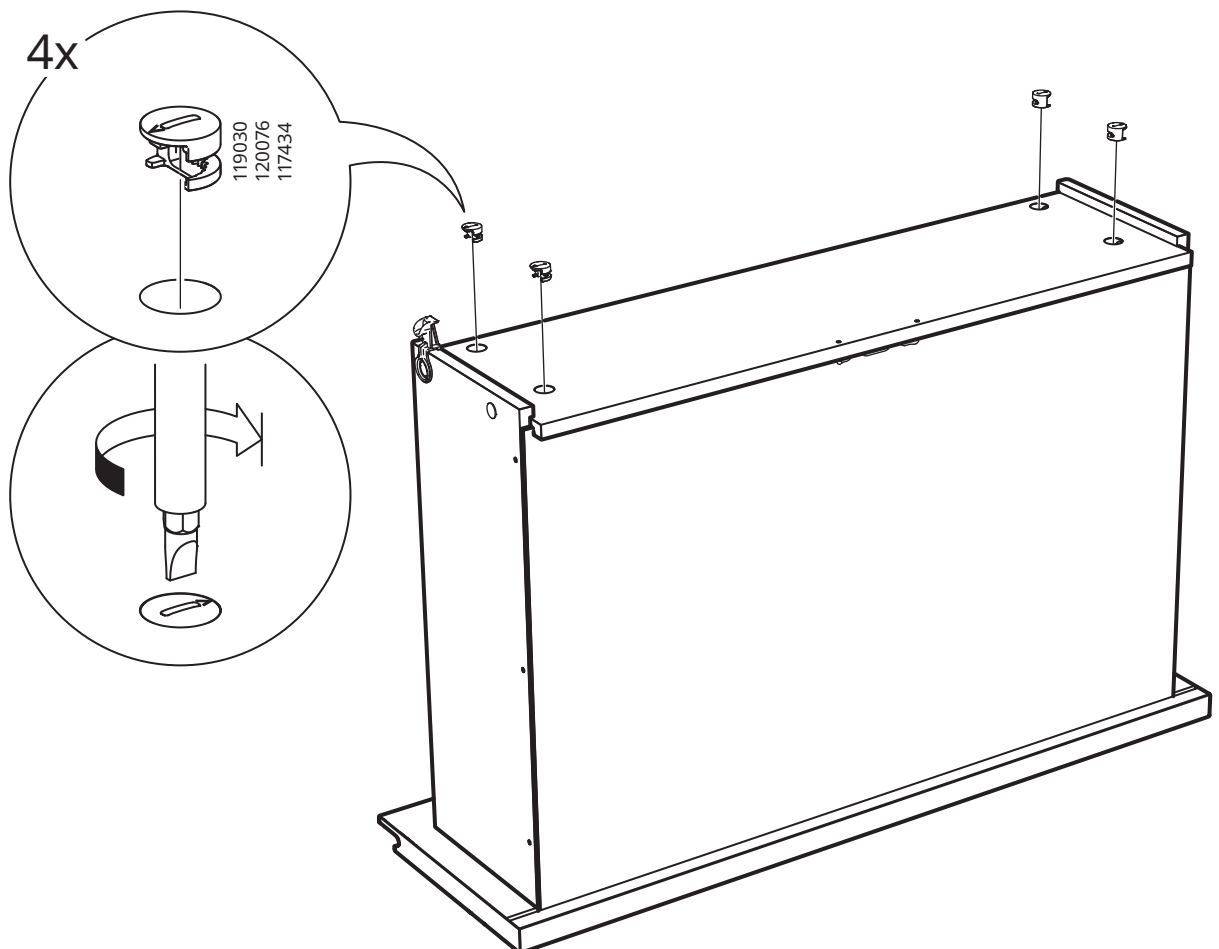 

32

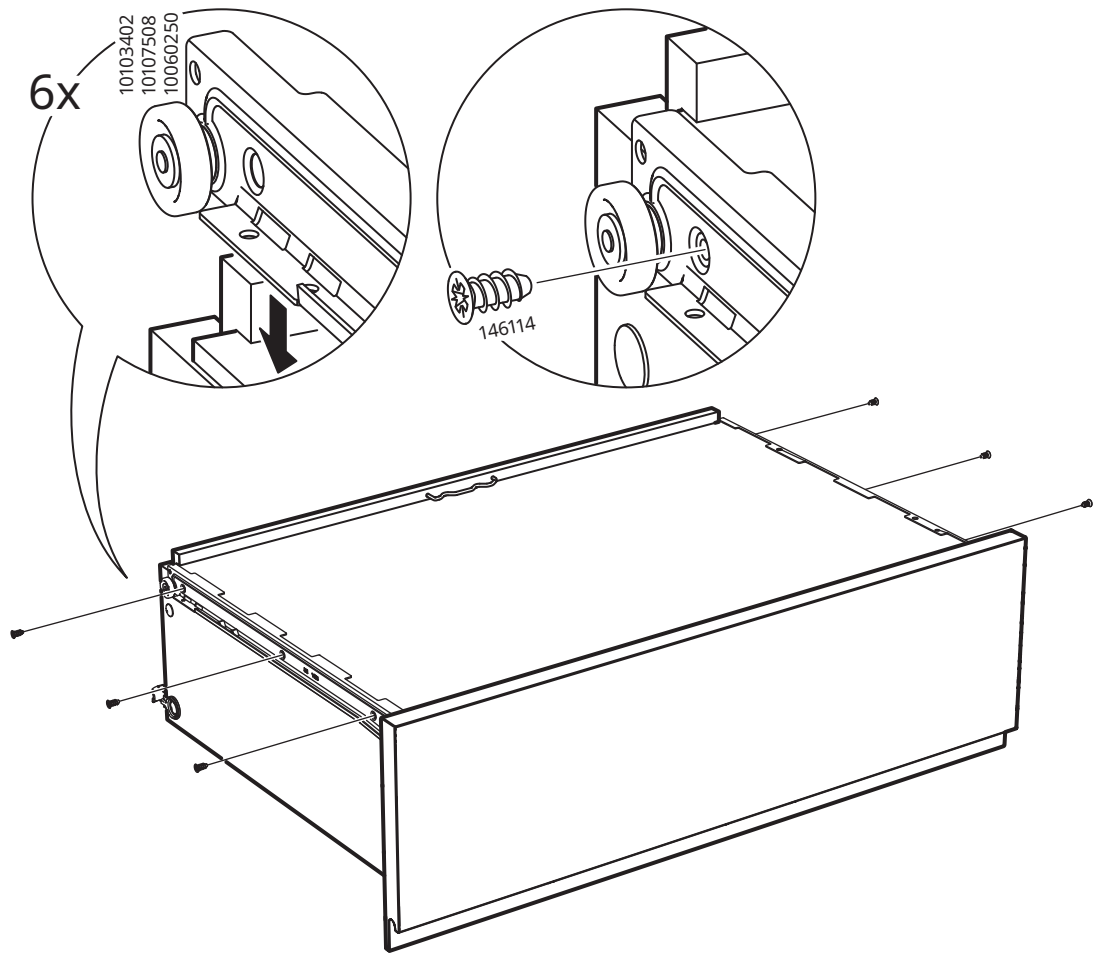 

33

