 


TONSTAD

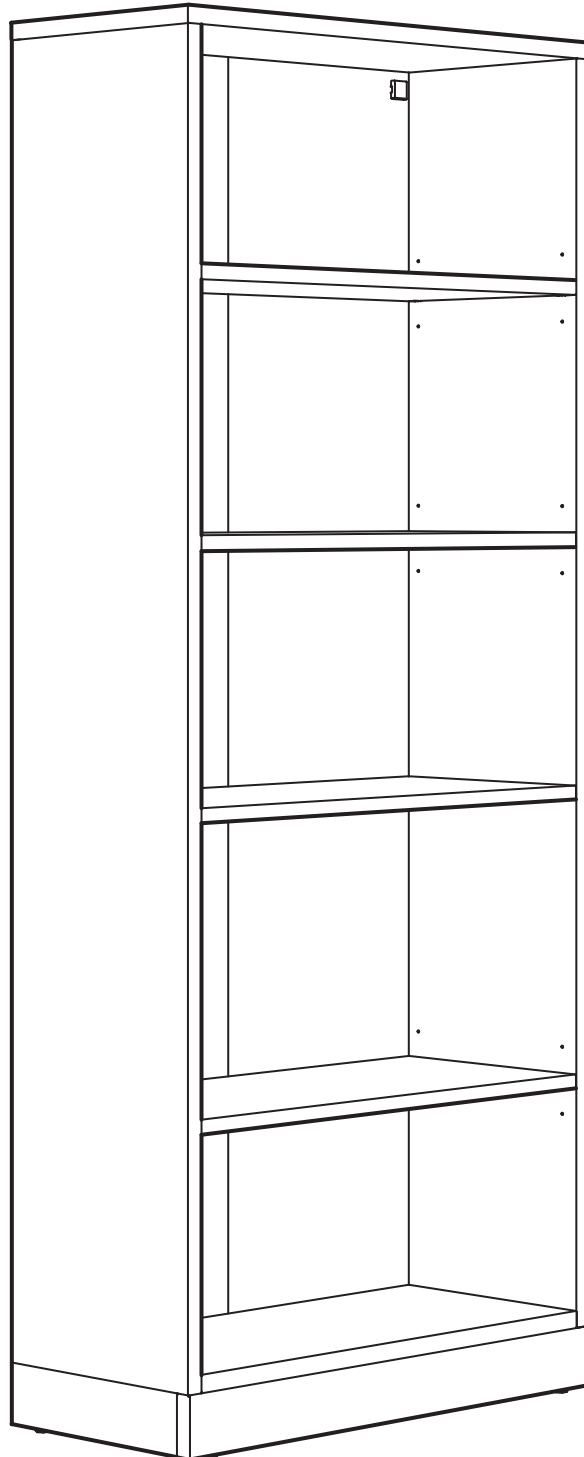

Design and Quality
IKEA of Sweden



English

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, or shelves.

עברית

אזהרה

נפילת הרהיט עלולה לגרום לפגיעה גופנית חמורה או קטלנית.

יש לקבע את הרהיט לקיר באמצעות אבזרי הקיבוע המצורפים.

על-מנת למזער את סכנת הפגיעה הגופנית או המוות מנפילת רהיטים:

מקמו את הפריטים הכבדים ביותר במגירה התחתונה.

 
 
 
 
הימנעו מלהניח טלוויזיות או פריטים כבדים אחרים על מוצר זה.

 
 
 
 
 
אין לאפשר לילדים לטפס על המגירות, הדלתות או המדפים.








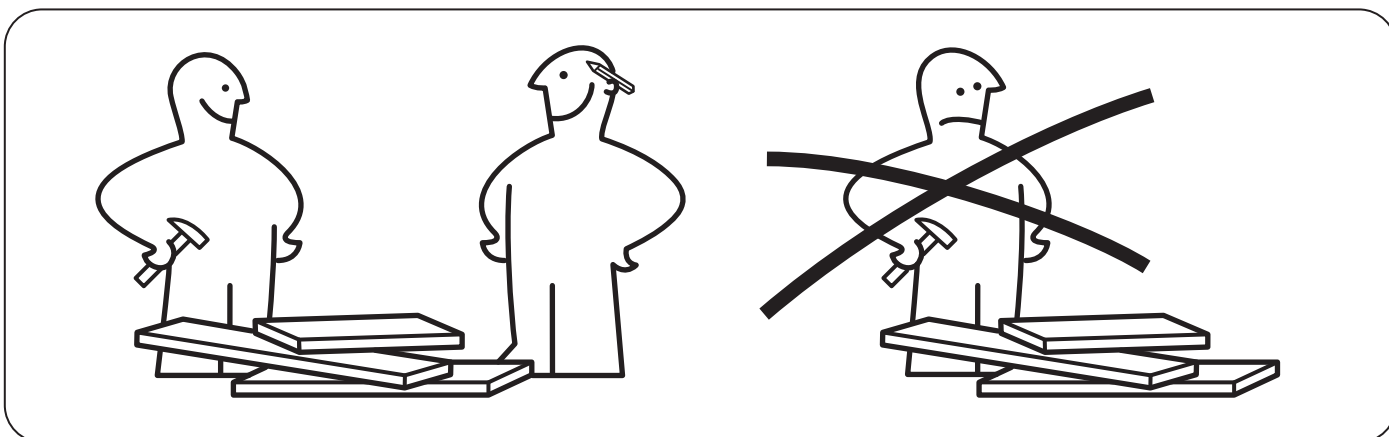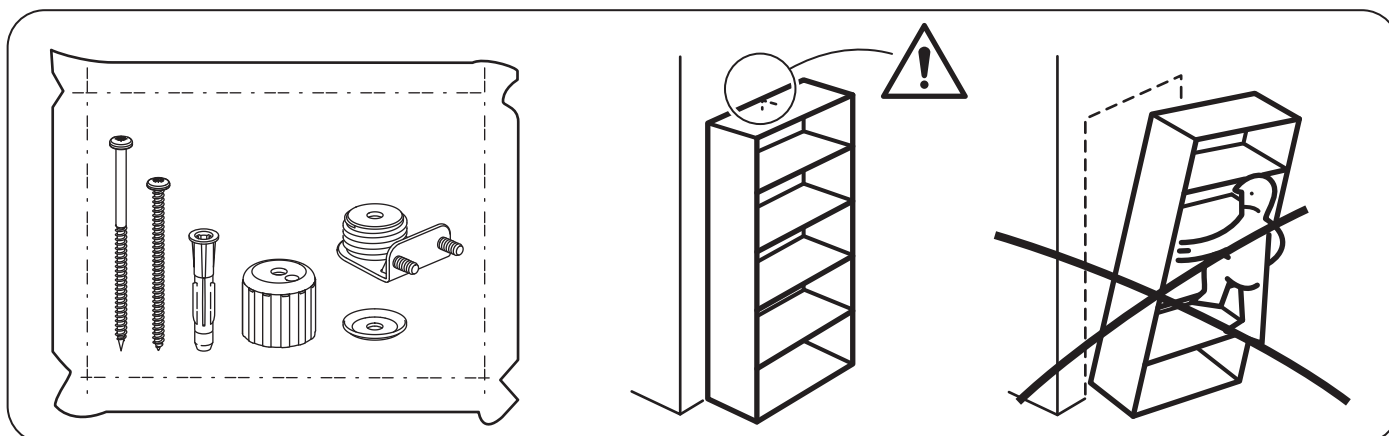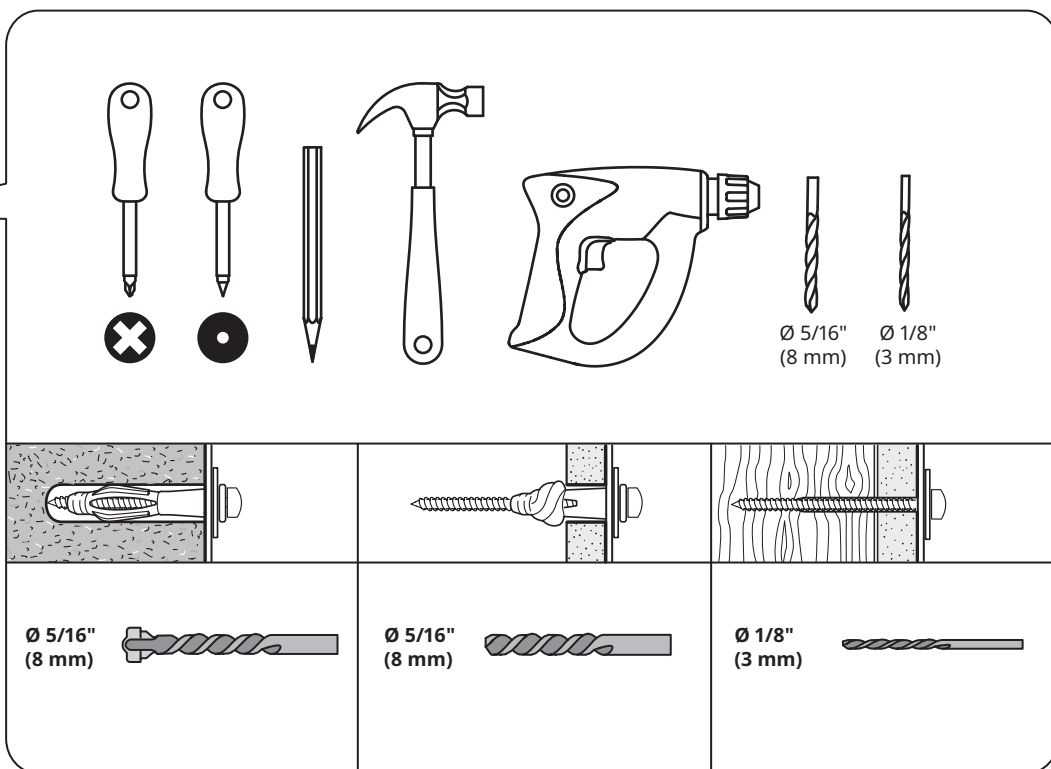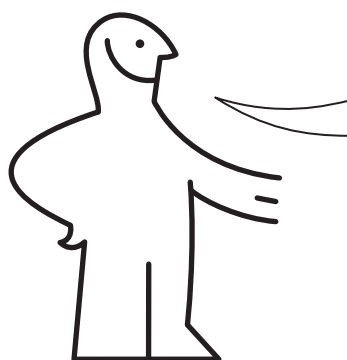

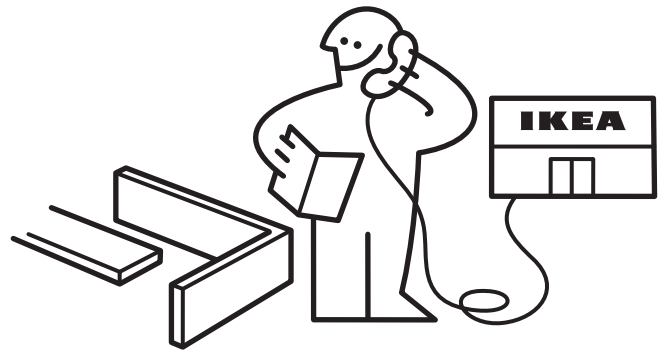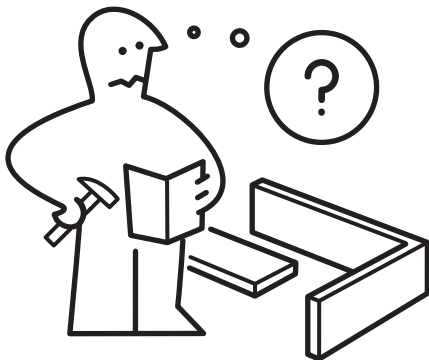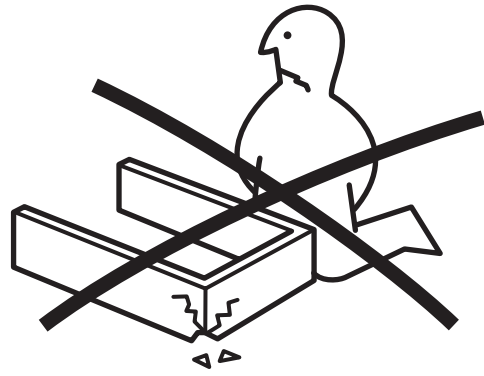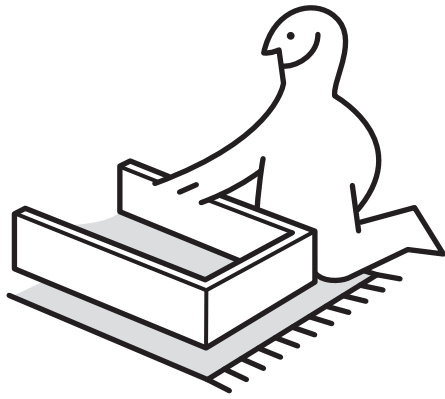


147968

 2x




158469

 2x




121714

 2x

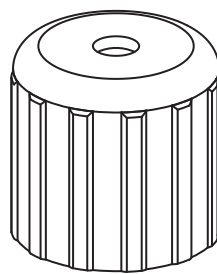


150689

 2x

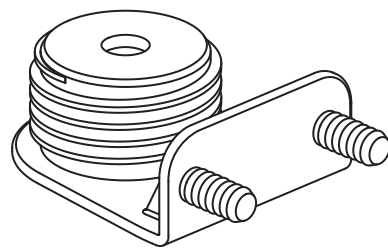

150688

 
2x



126916


2x

 1




151707

 6x



151708

 6x

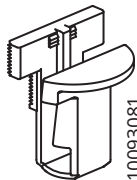


10093081

10x




10093082

 10x

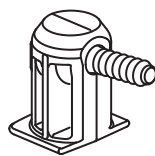

10092248
10092282

 12x

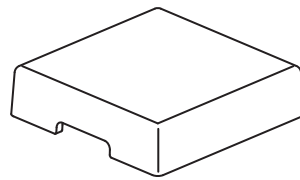

133194
126918

2x

2



 
118331

6x



101350

7x

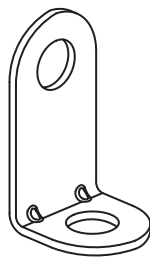


102553

4x




113434

 6x




151707

 8x




151708

 8x

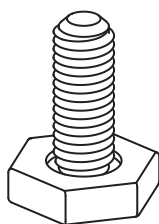

159991

 
4x

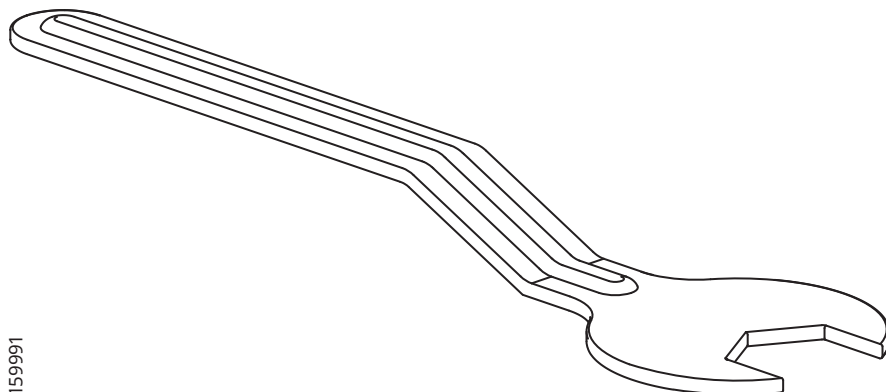


190459

1x

 
1

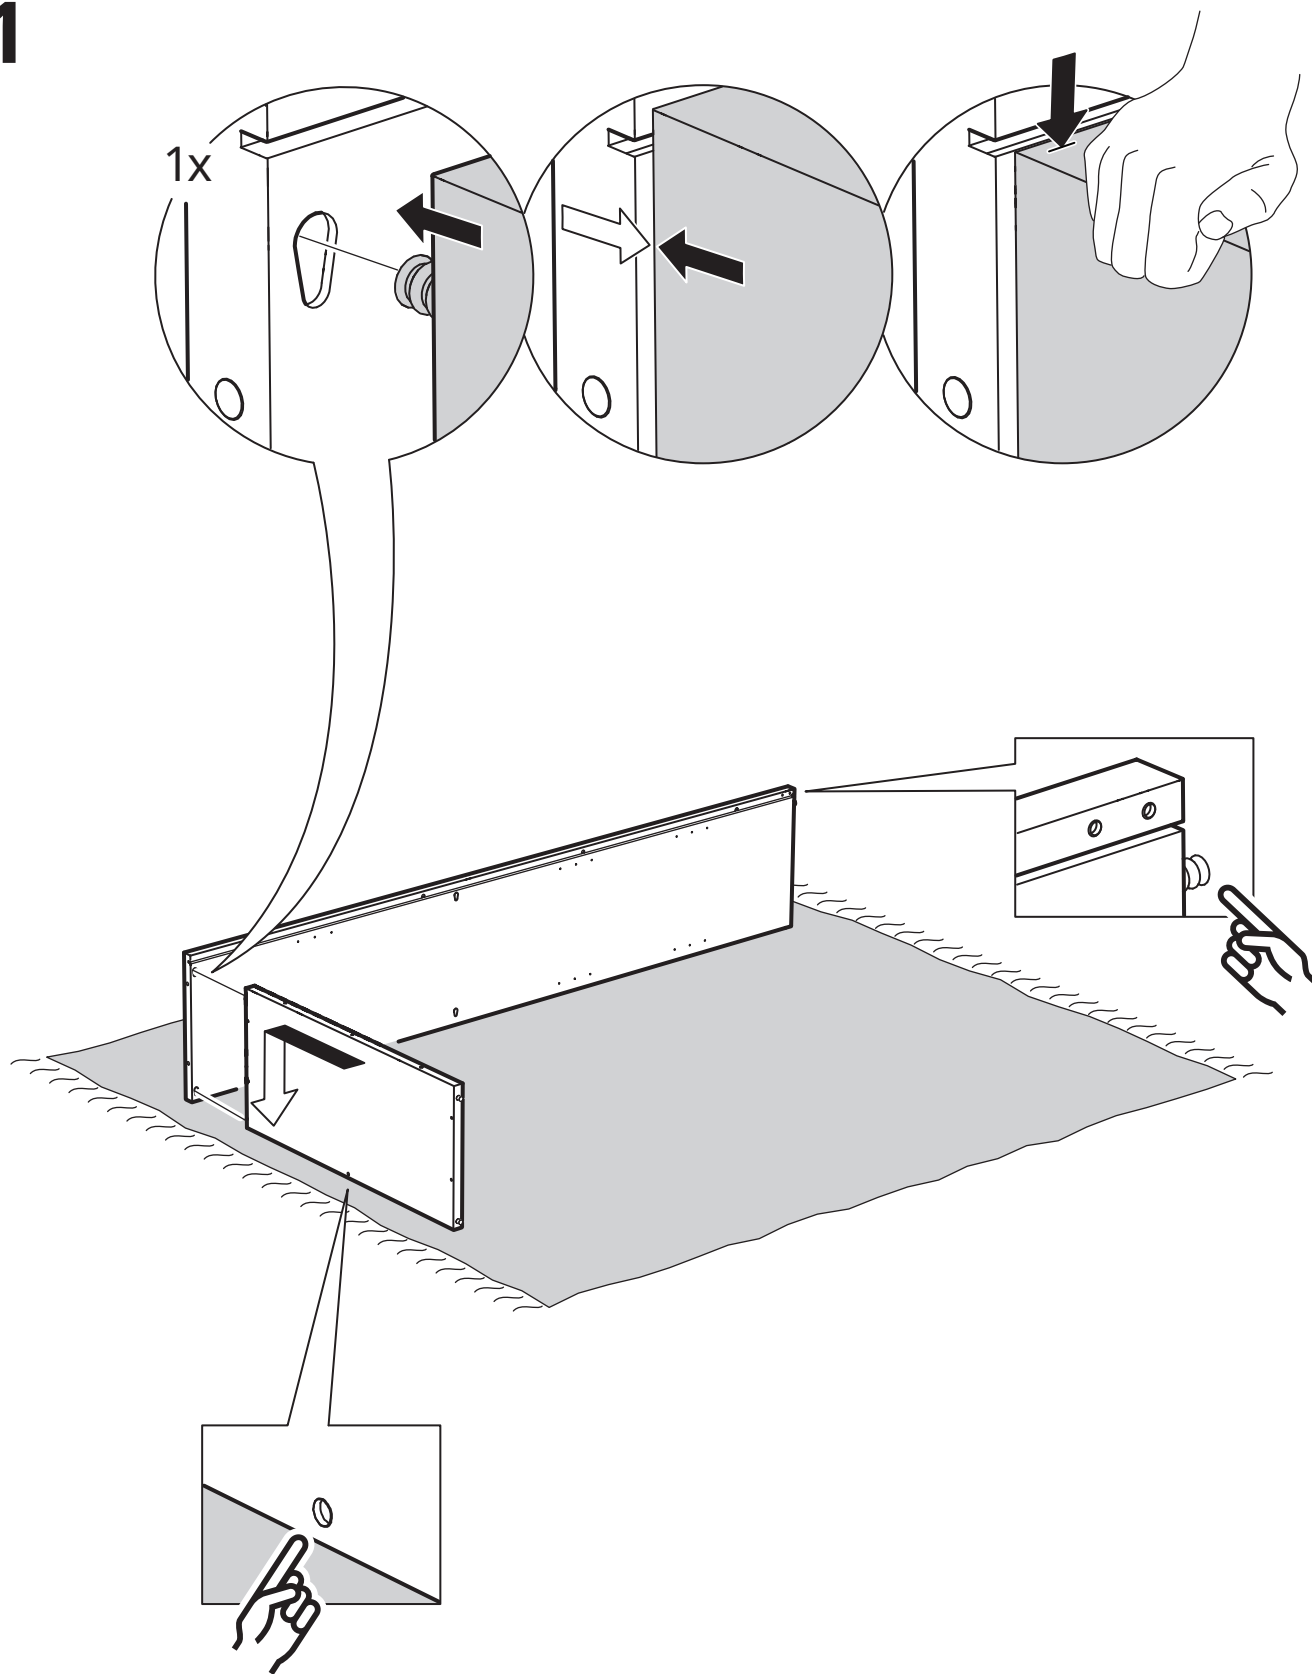


2

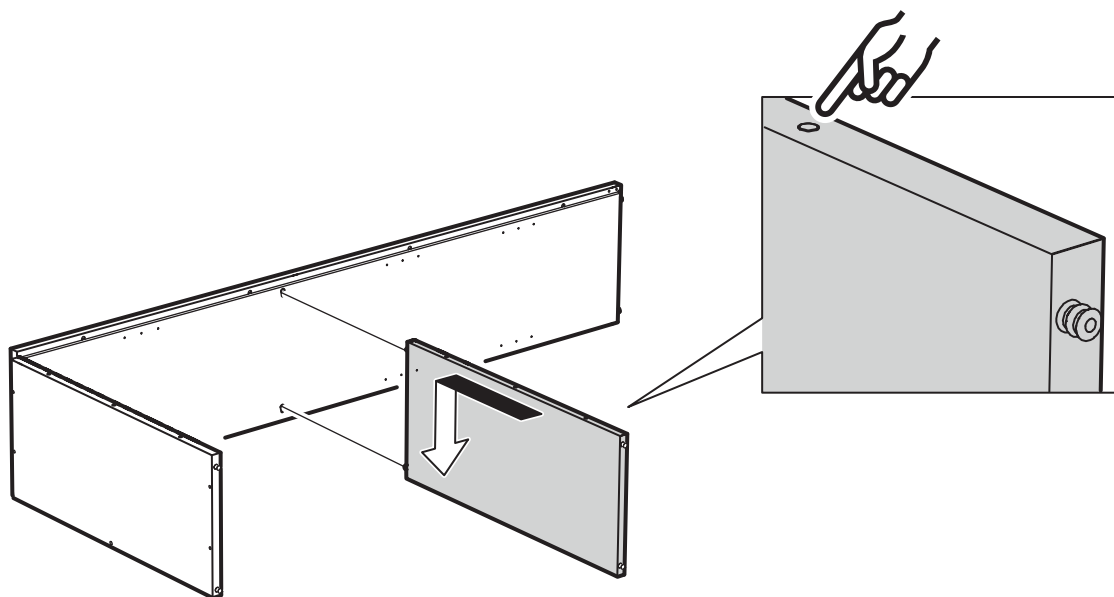 


3

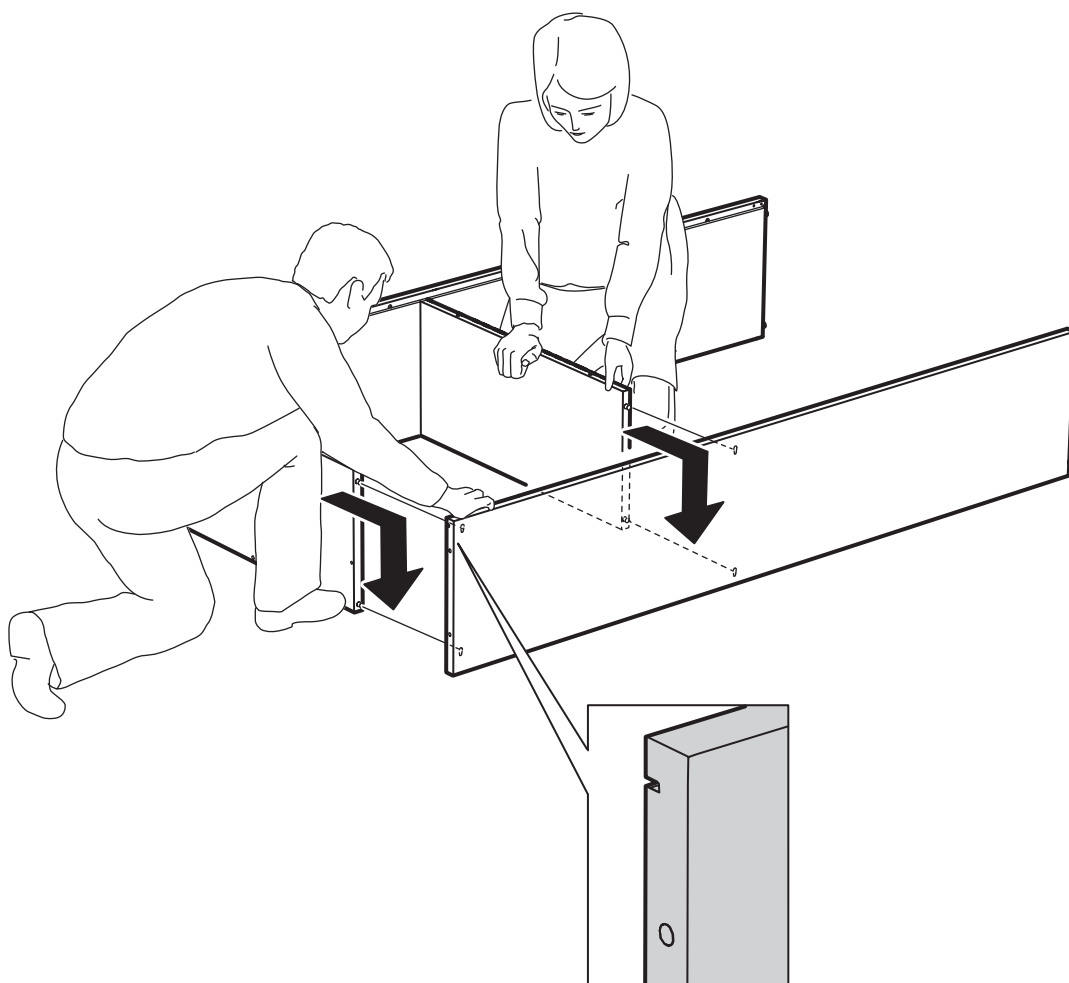 



4

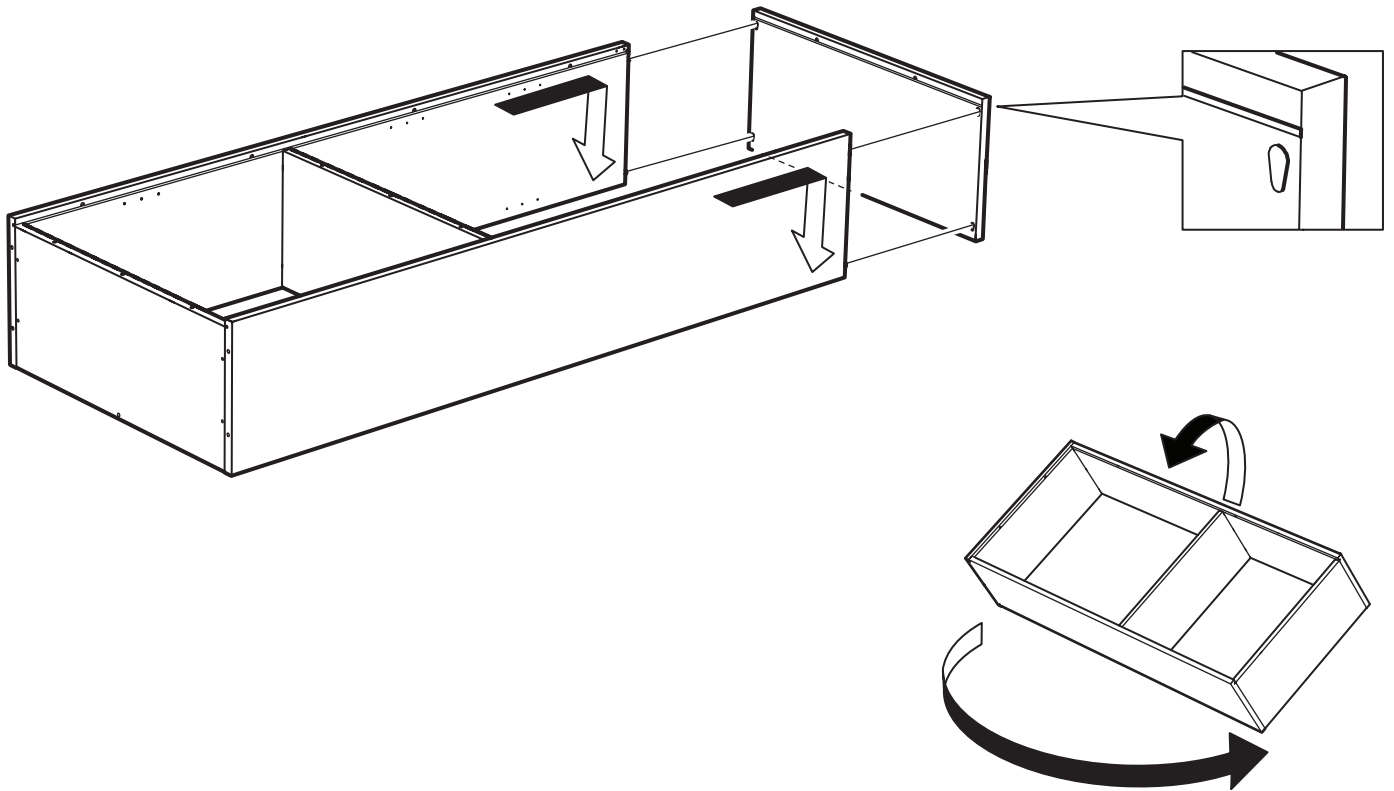 


5

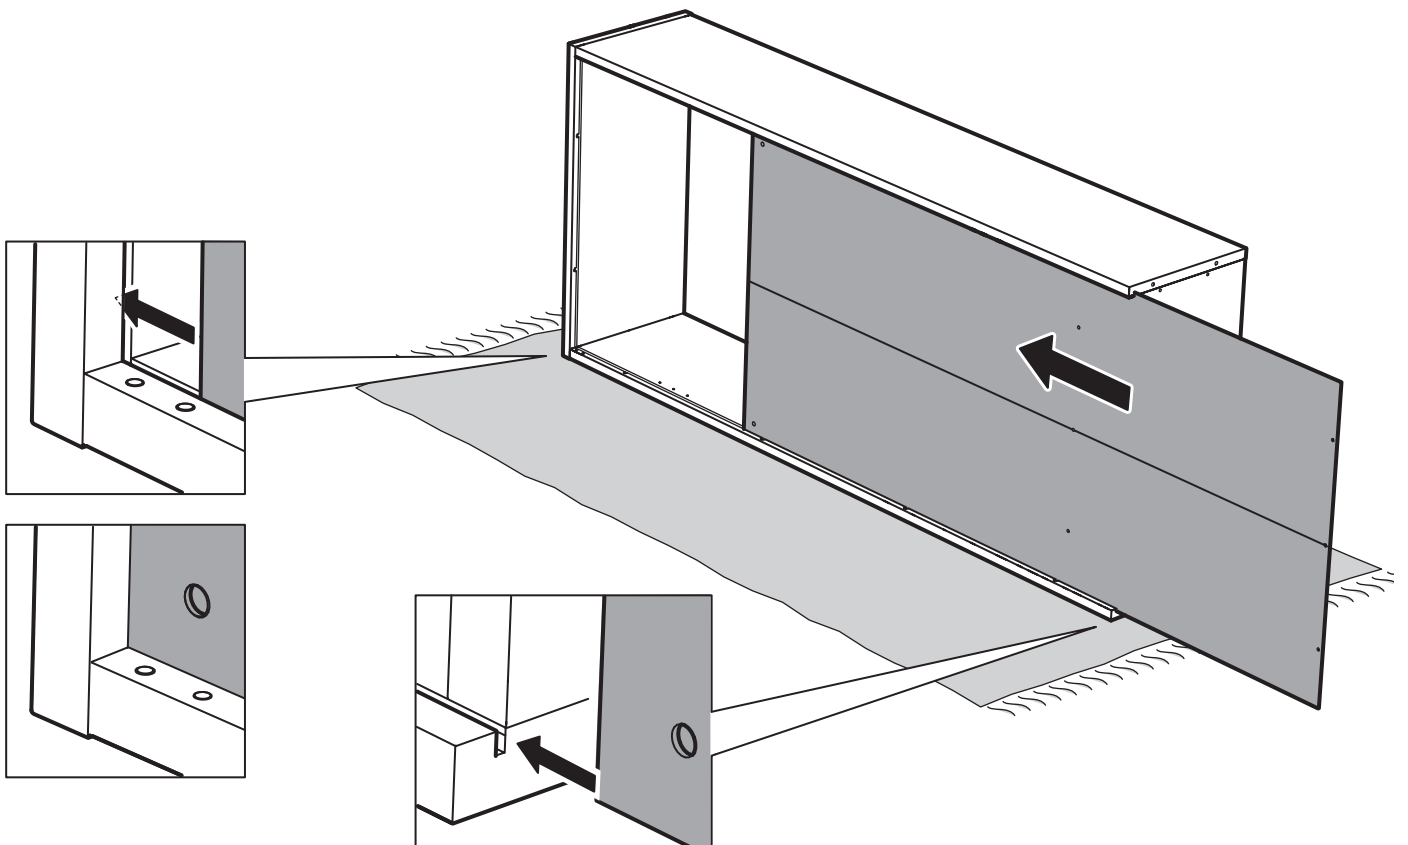 



6

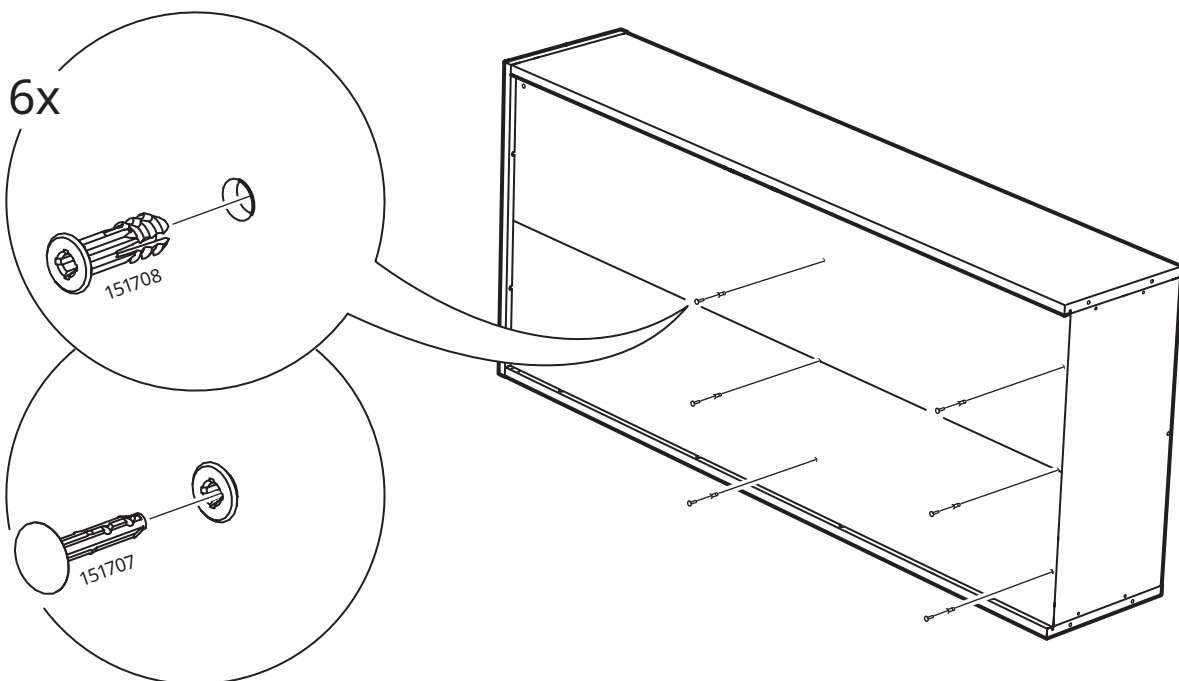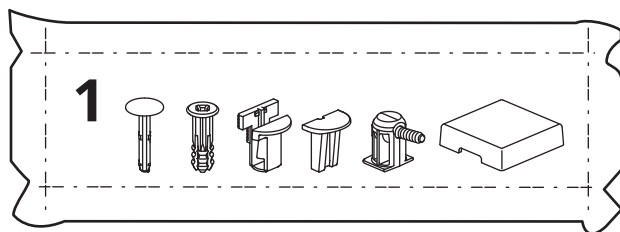  


7

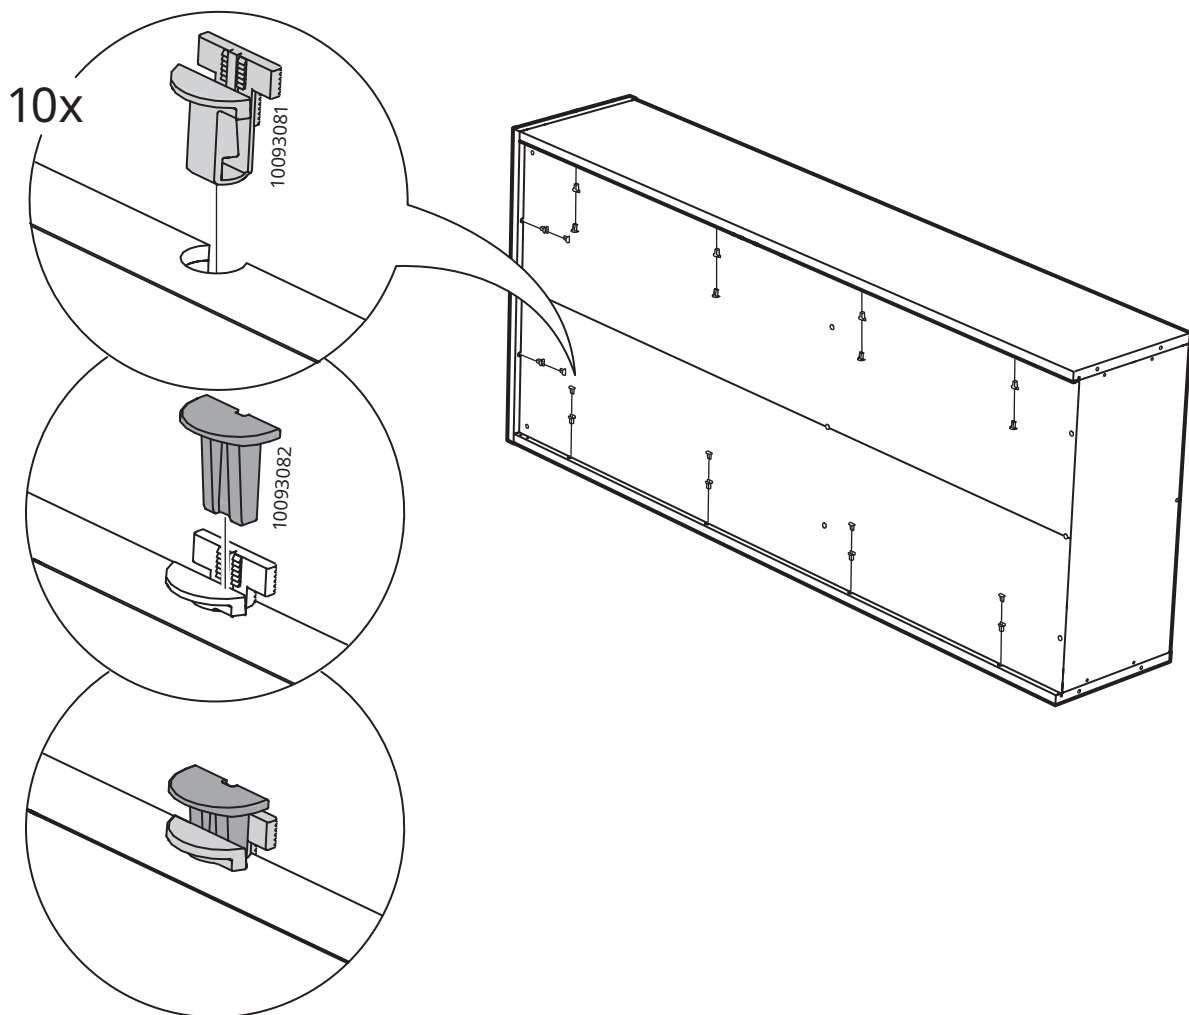 


8

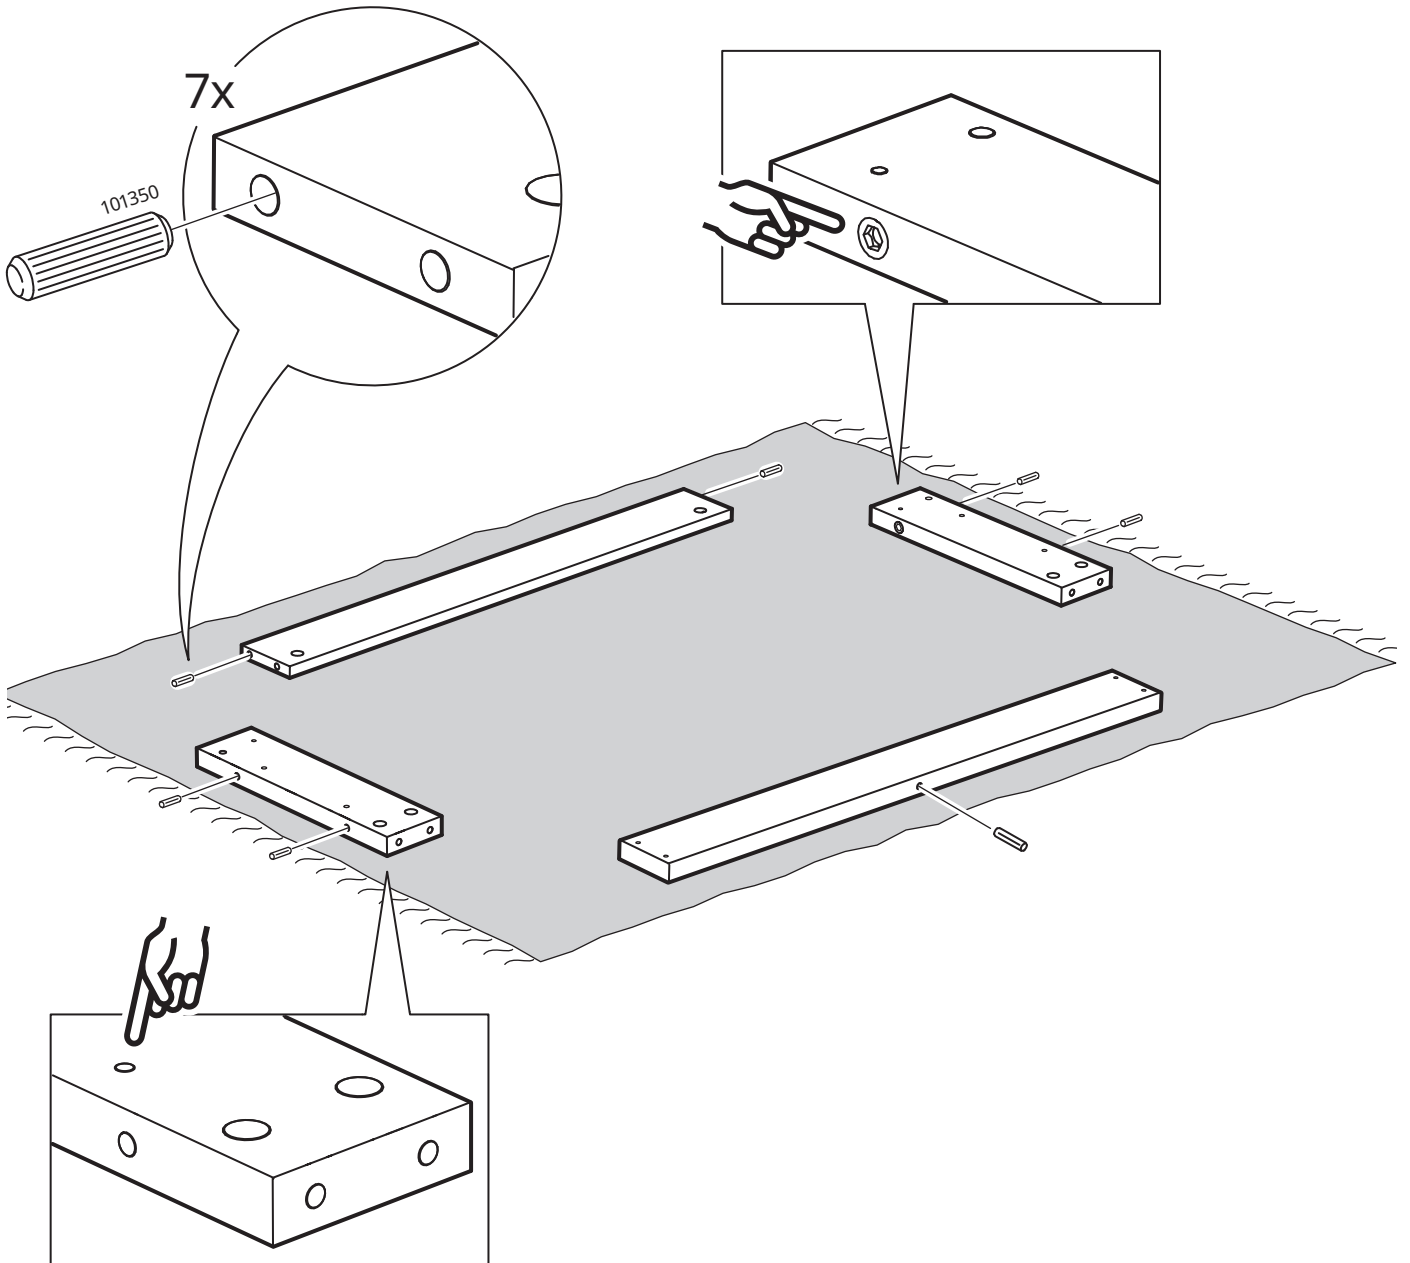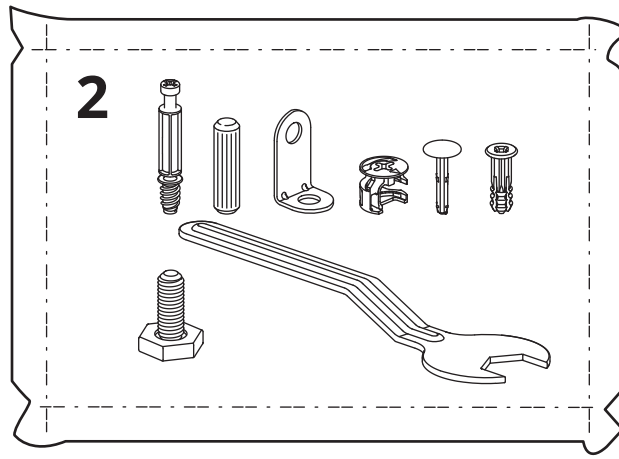  


9

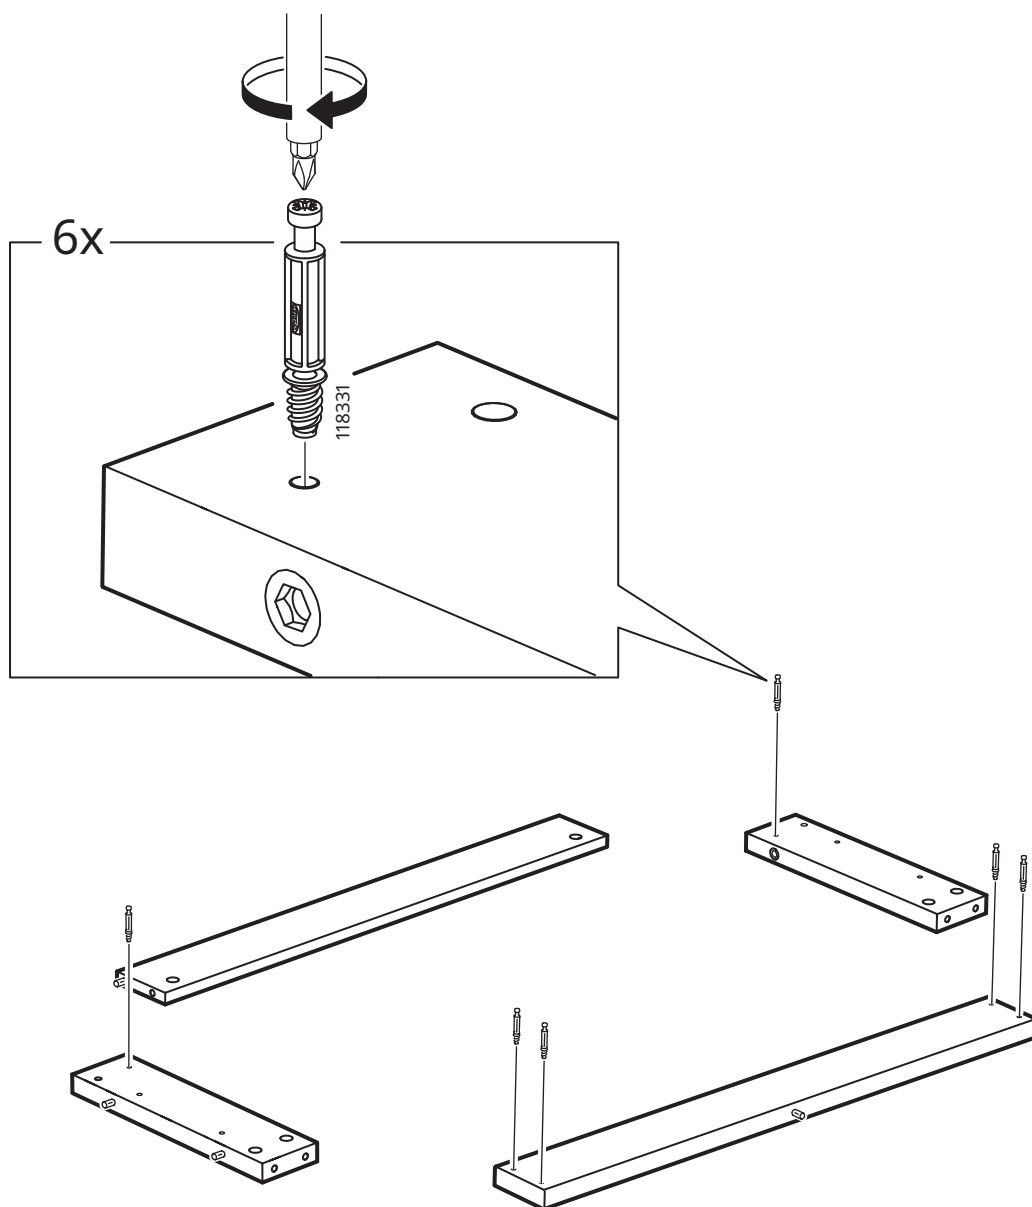 


10

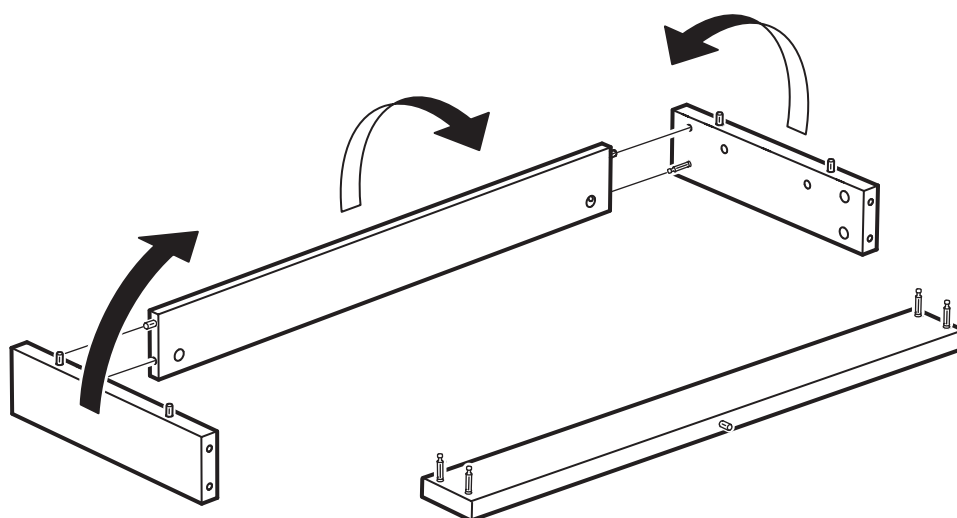 


11

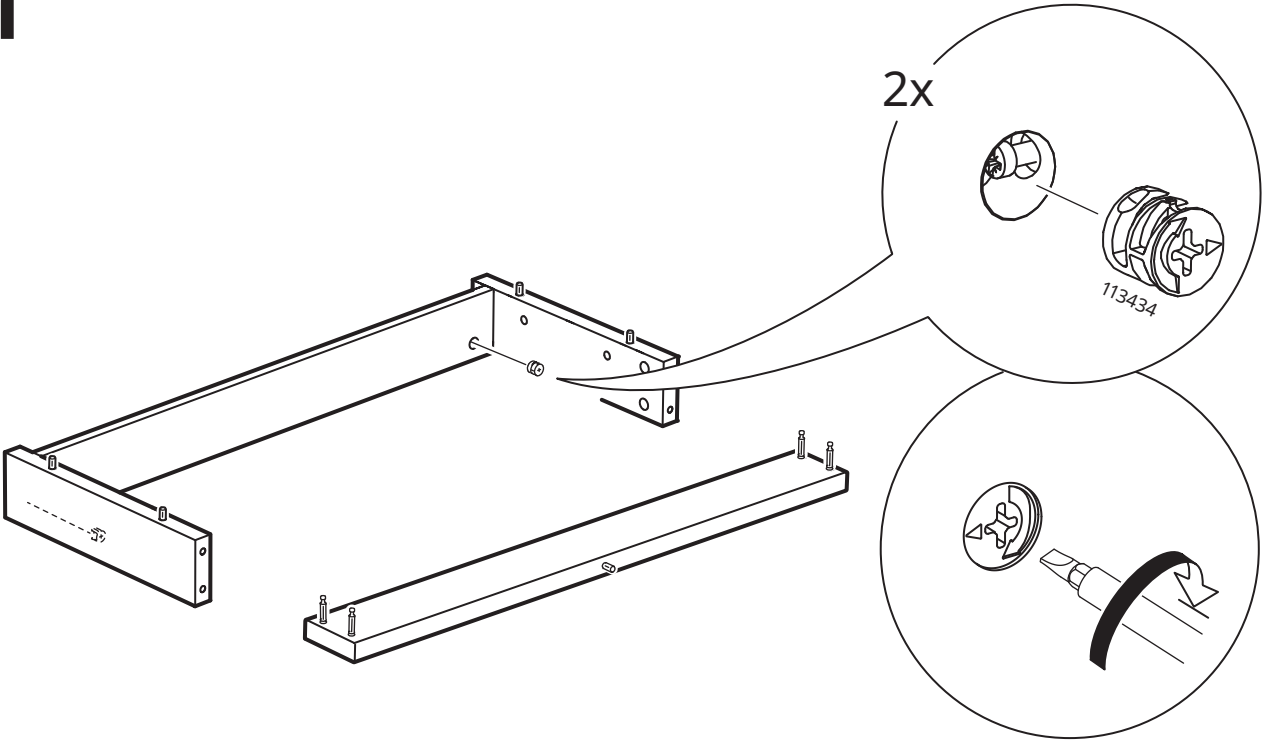 


12

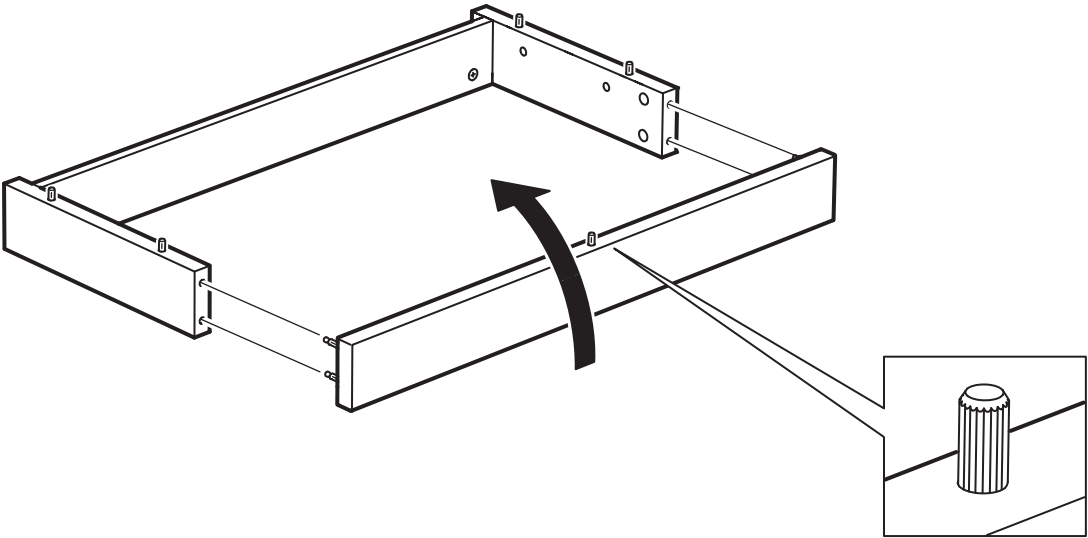 


13

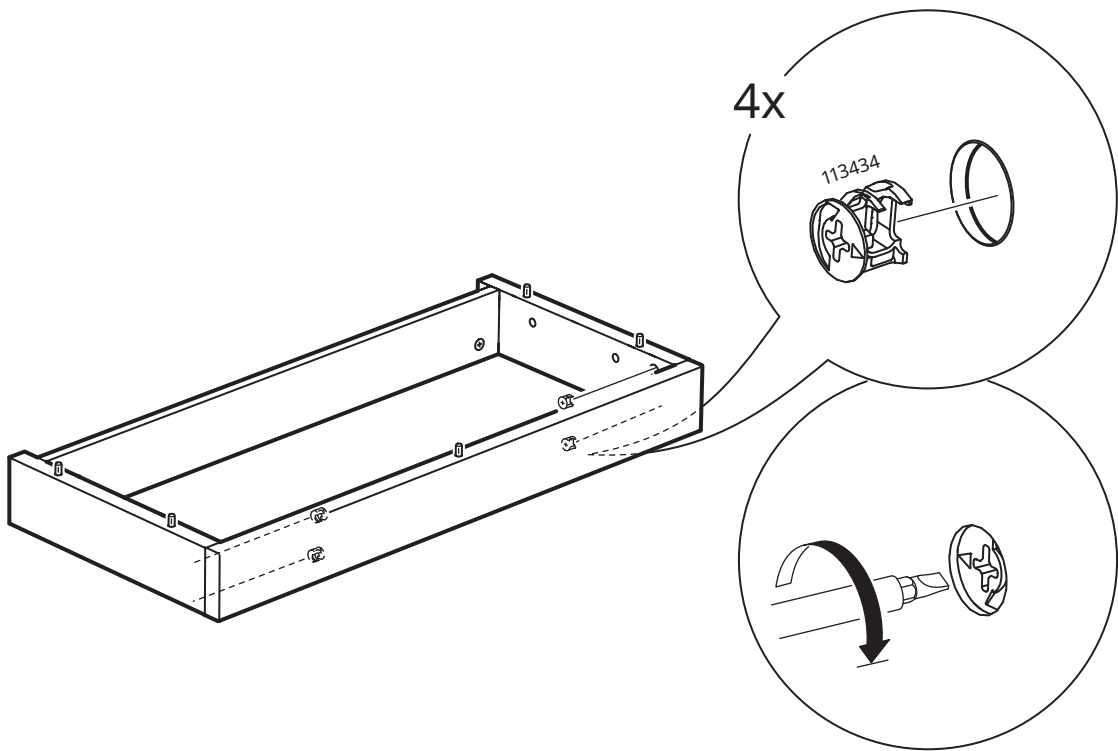 


14

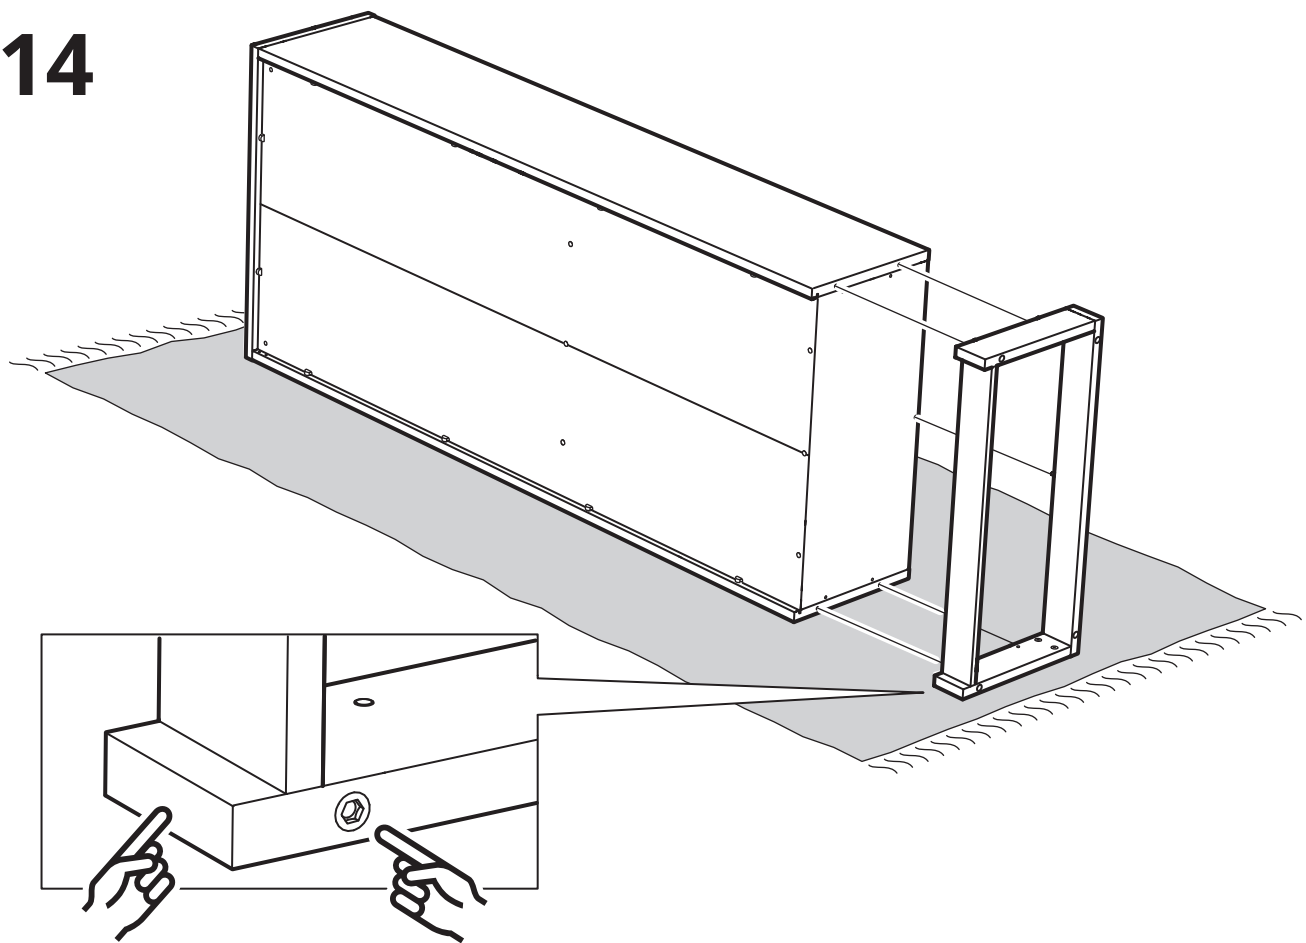 


15

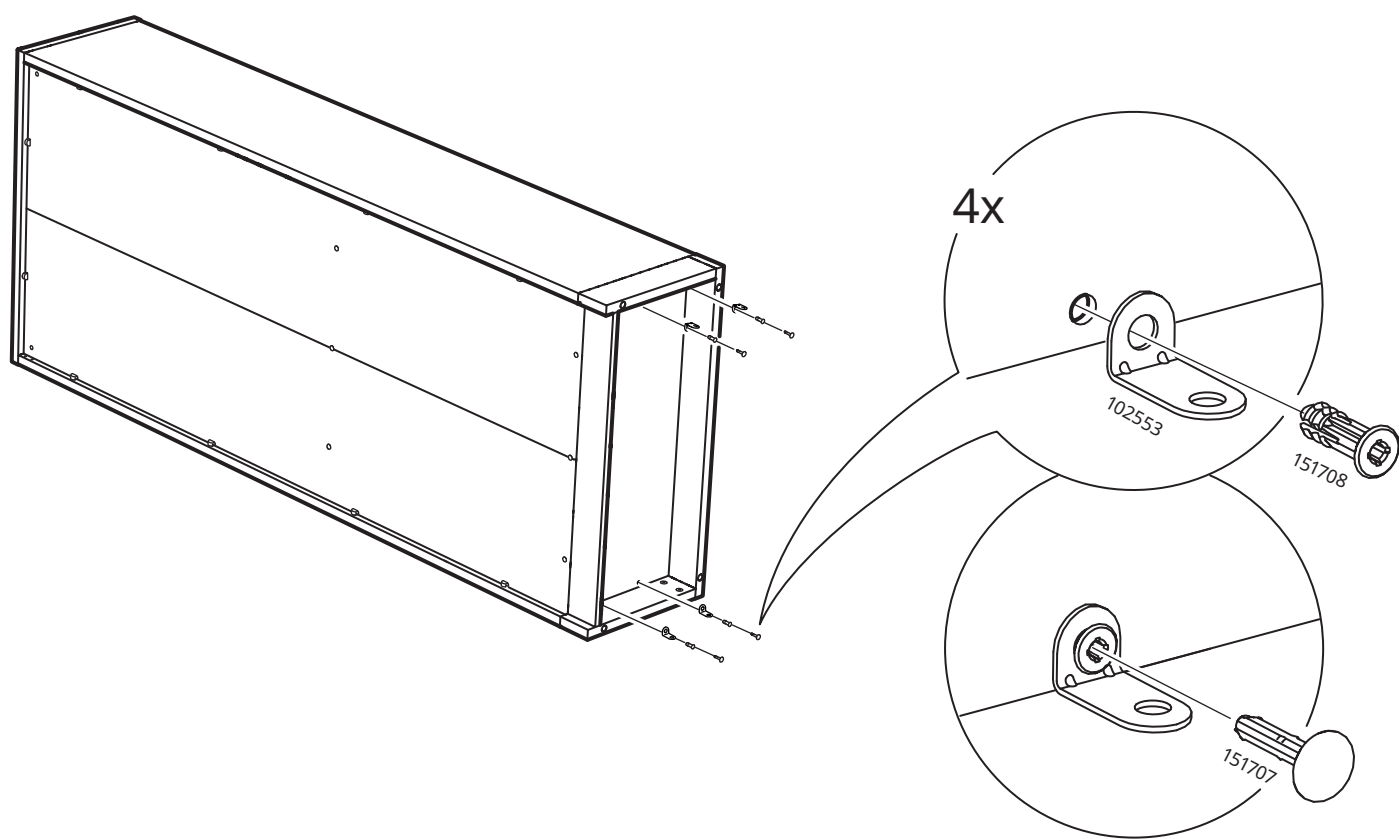 


16


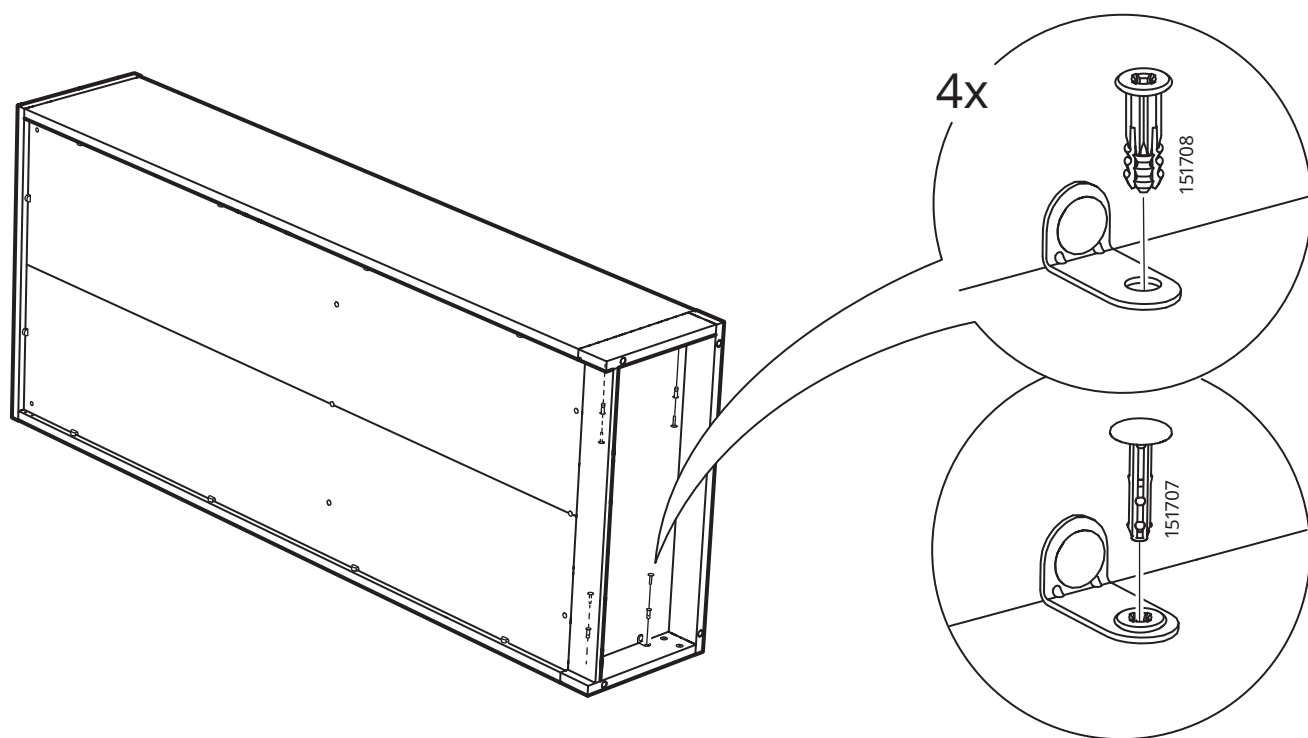 


17


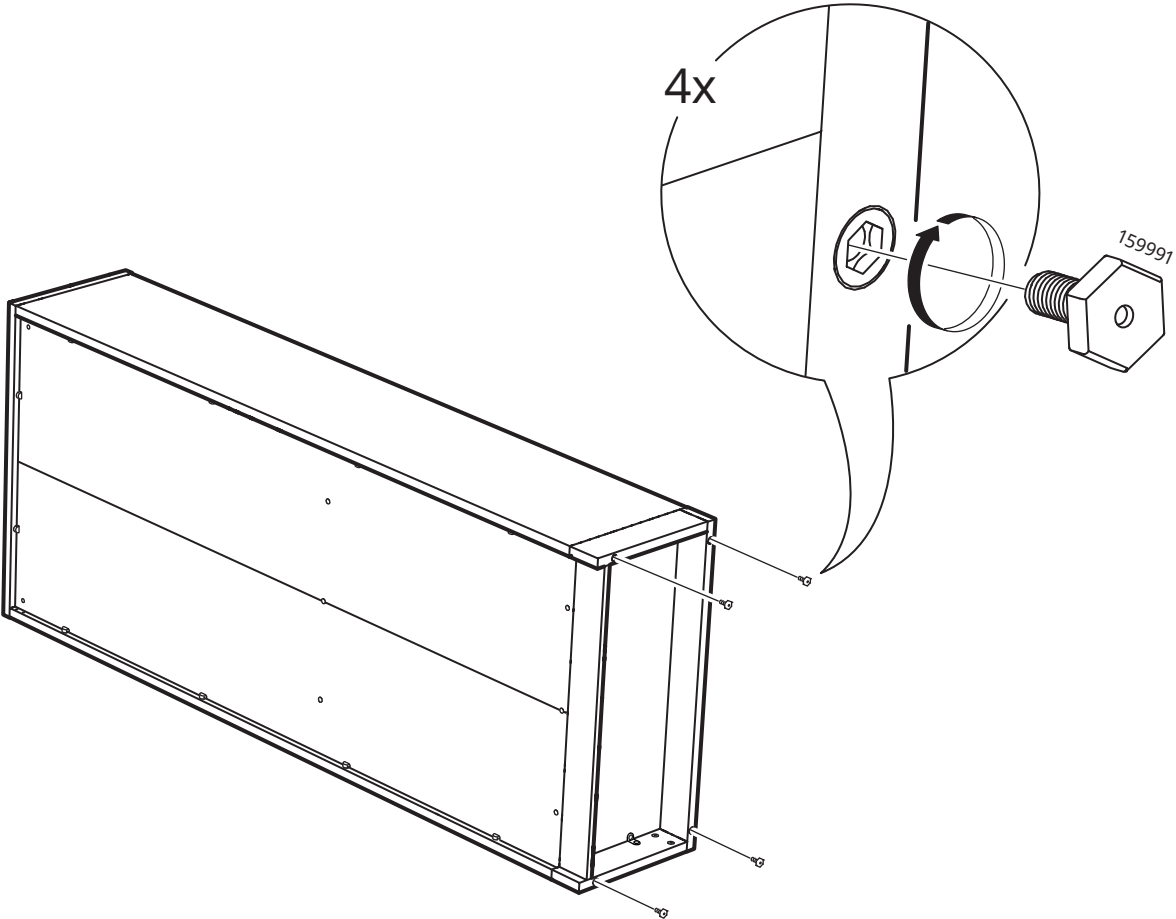 


18

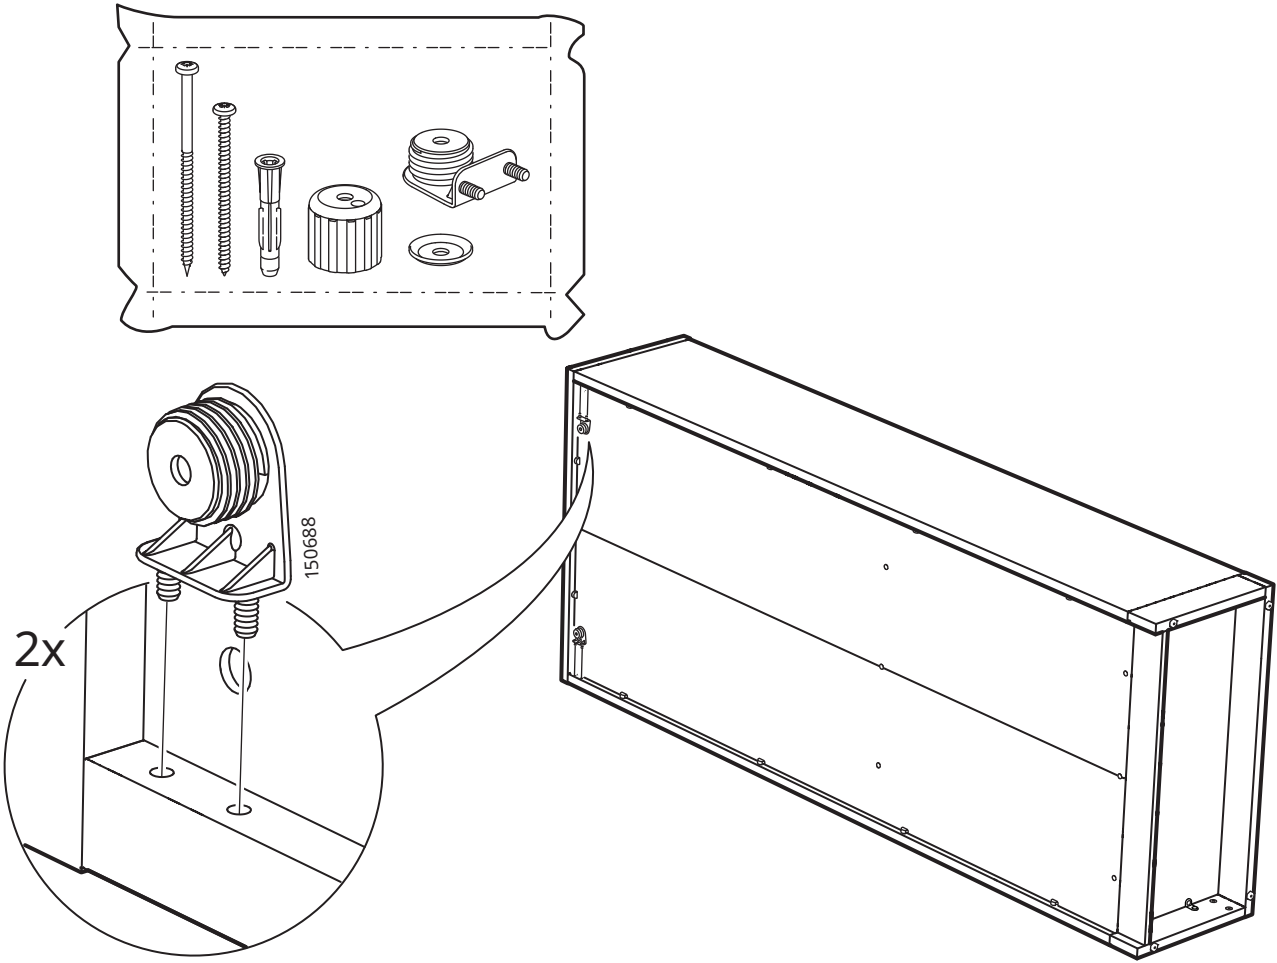 


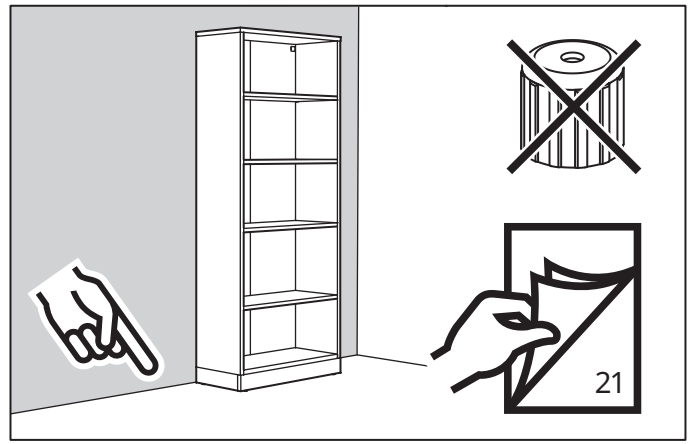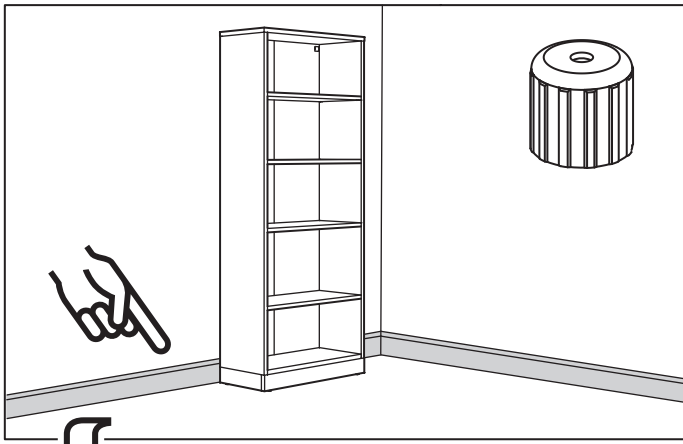  


19

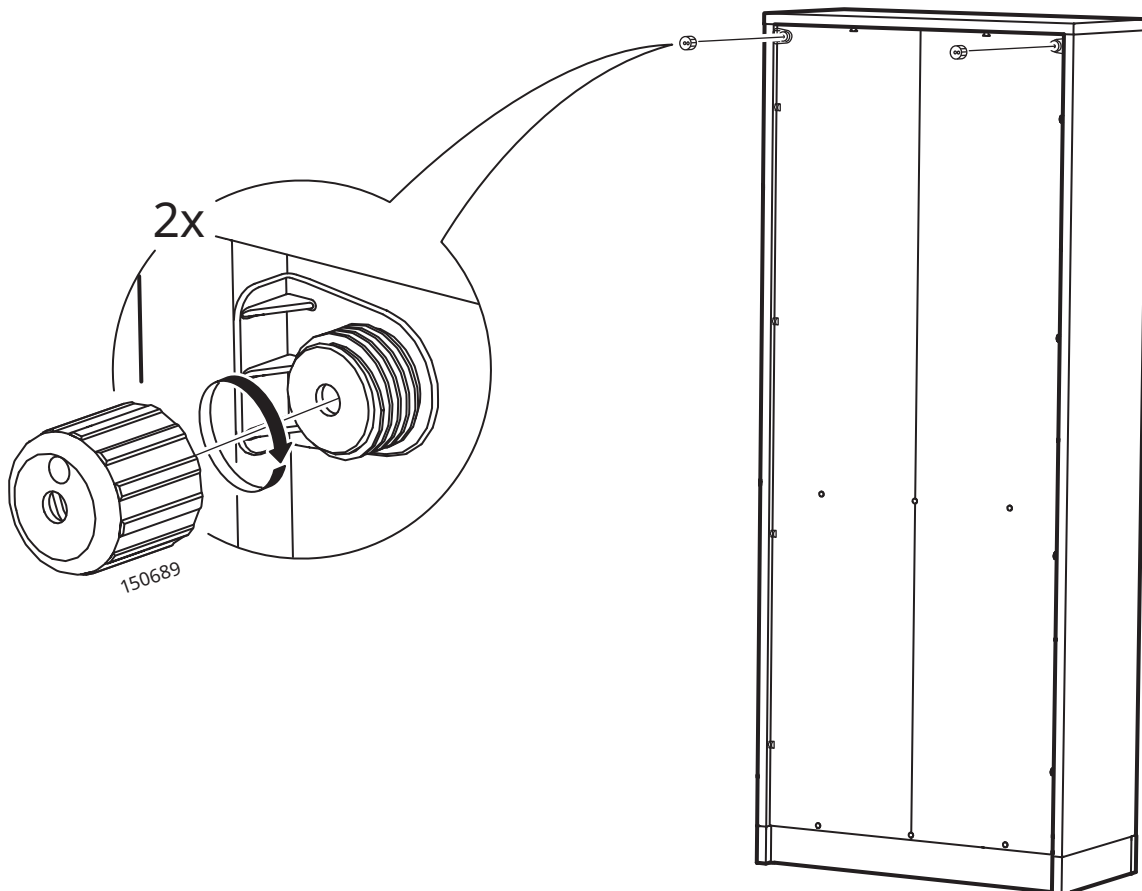 
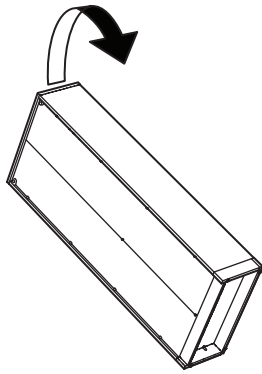 


20

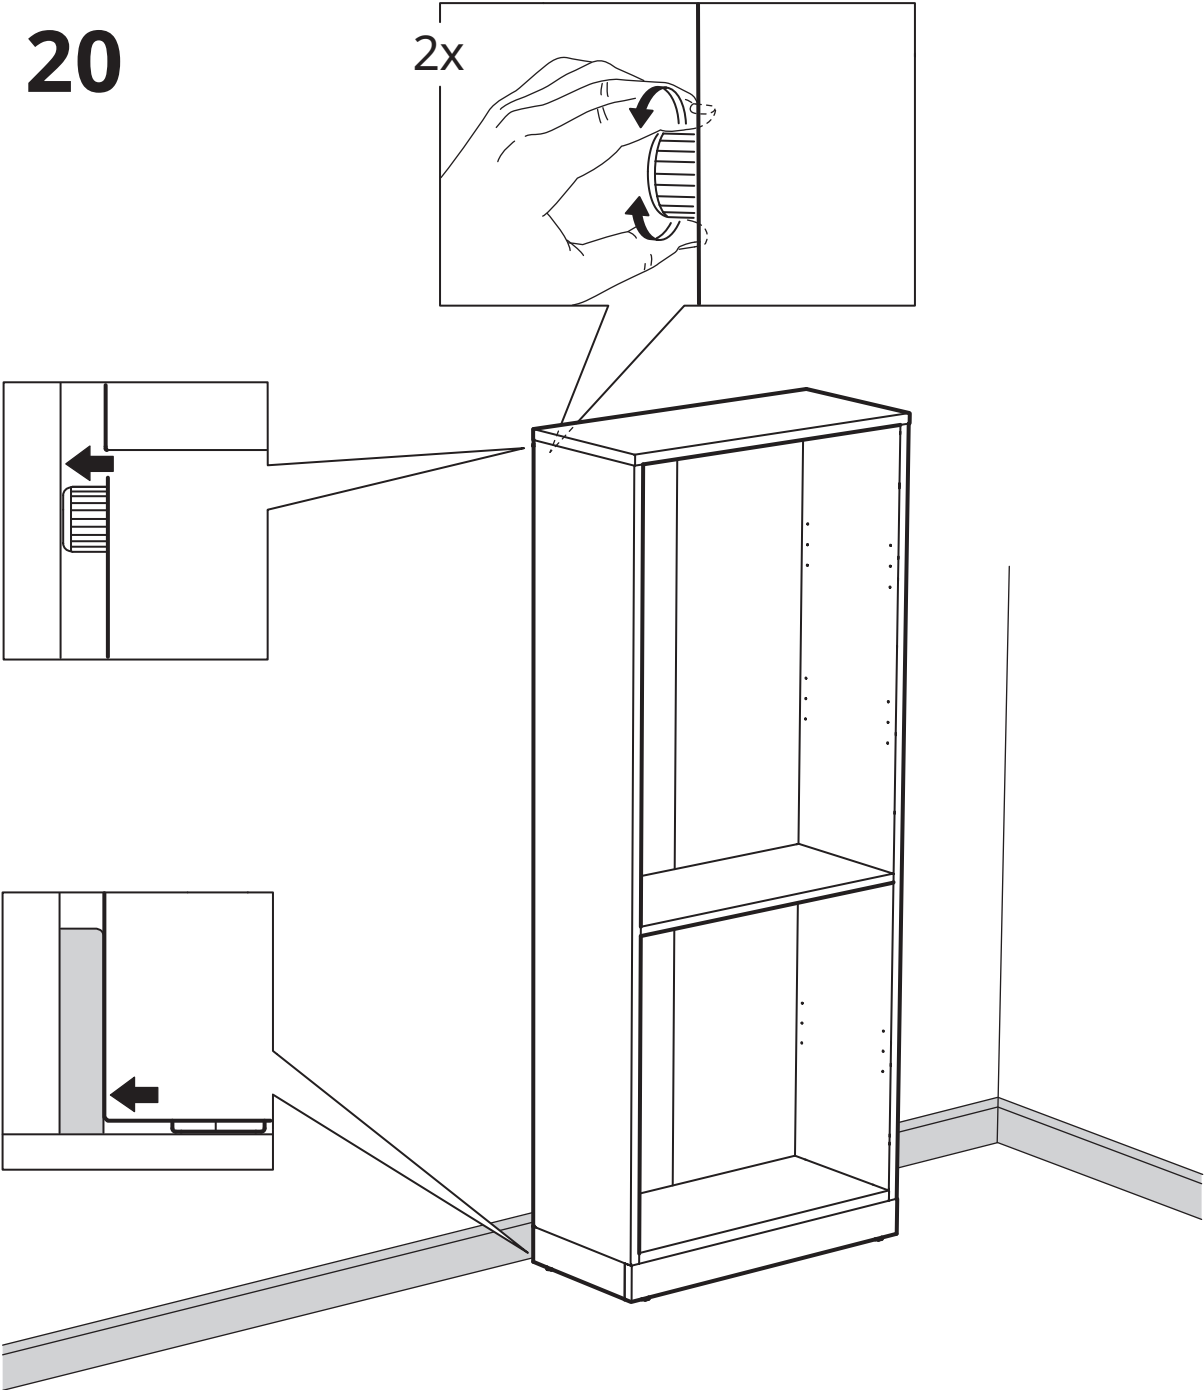 


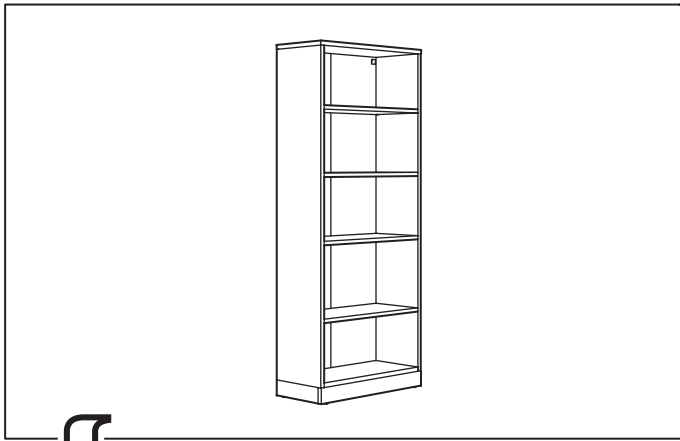 

21

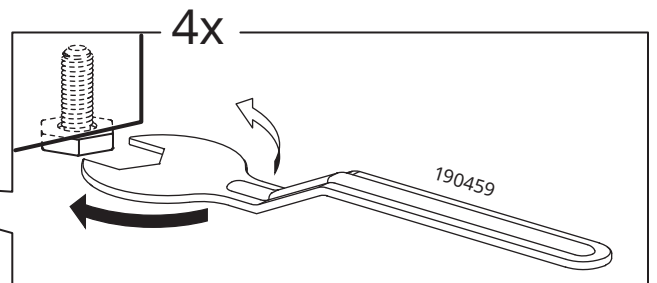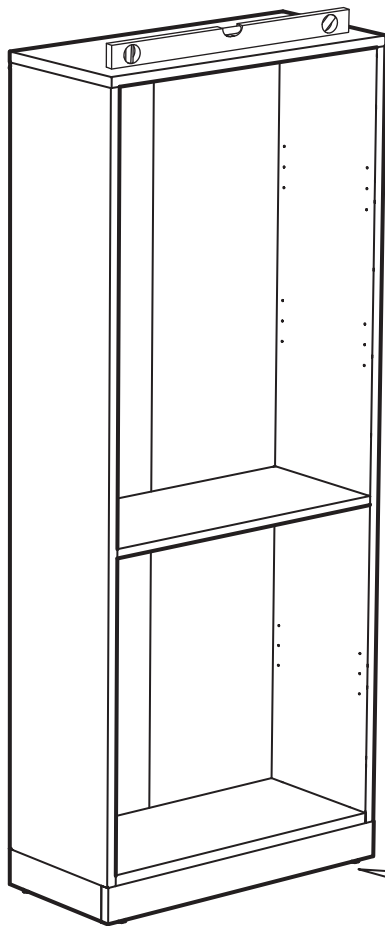  


22

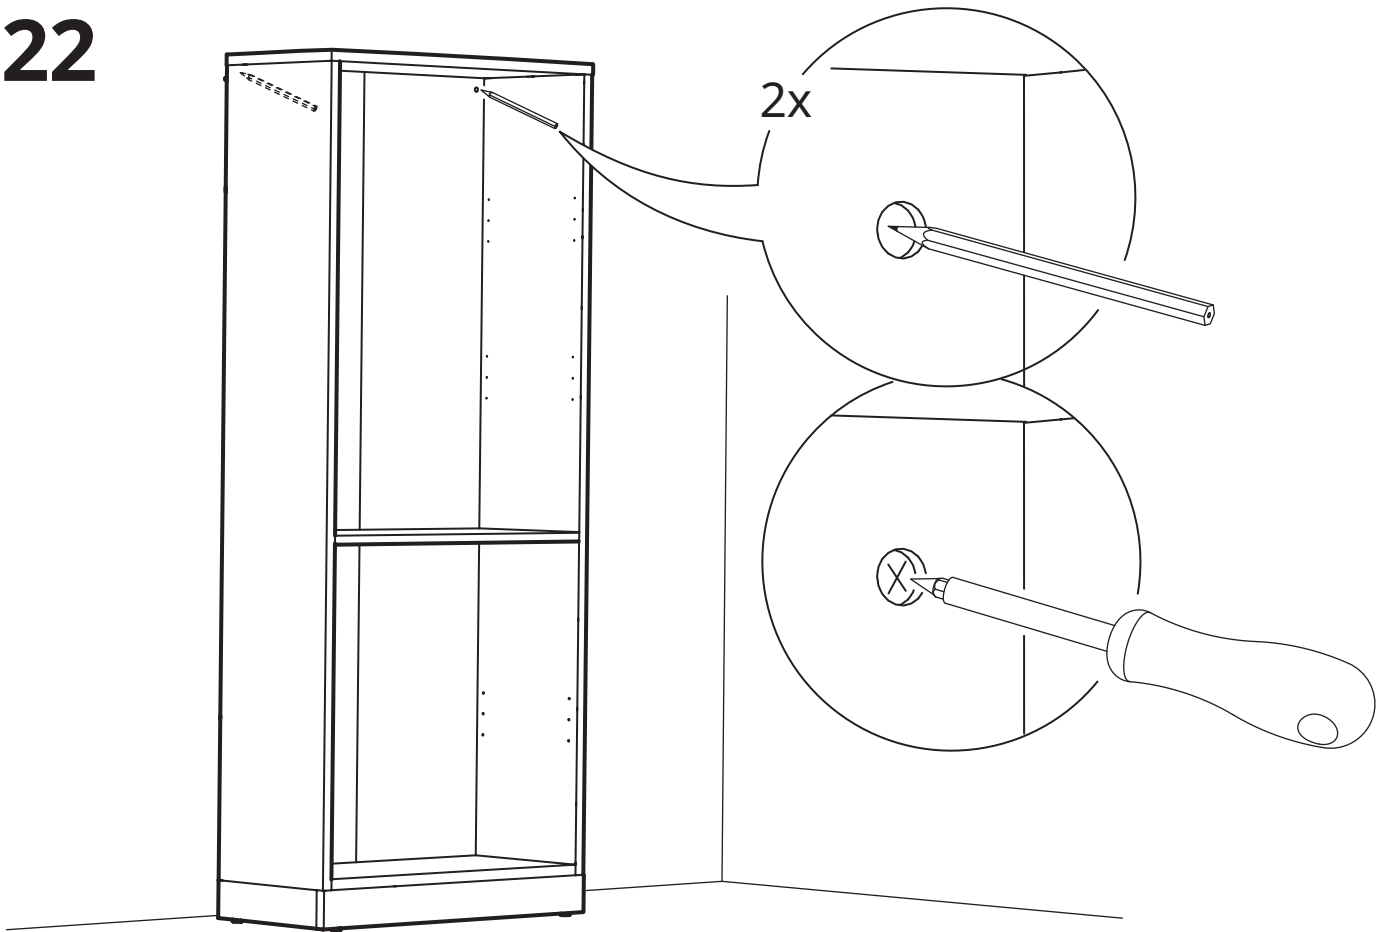 

23

x

 x

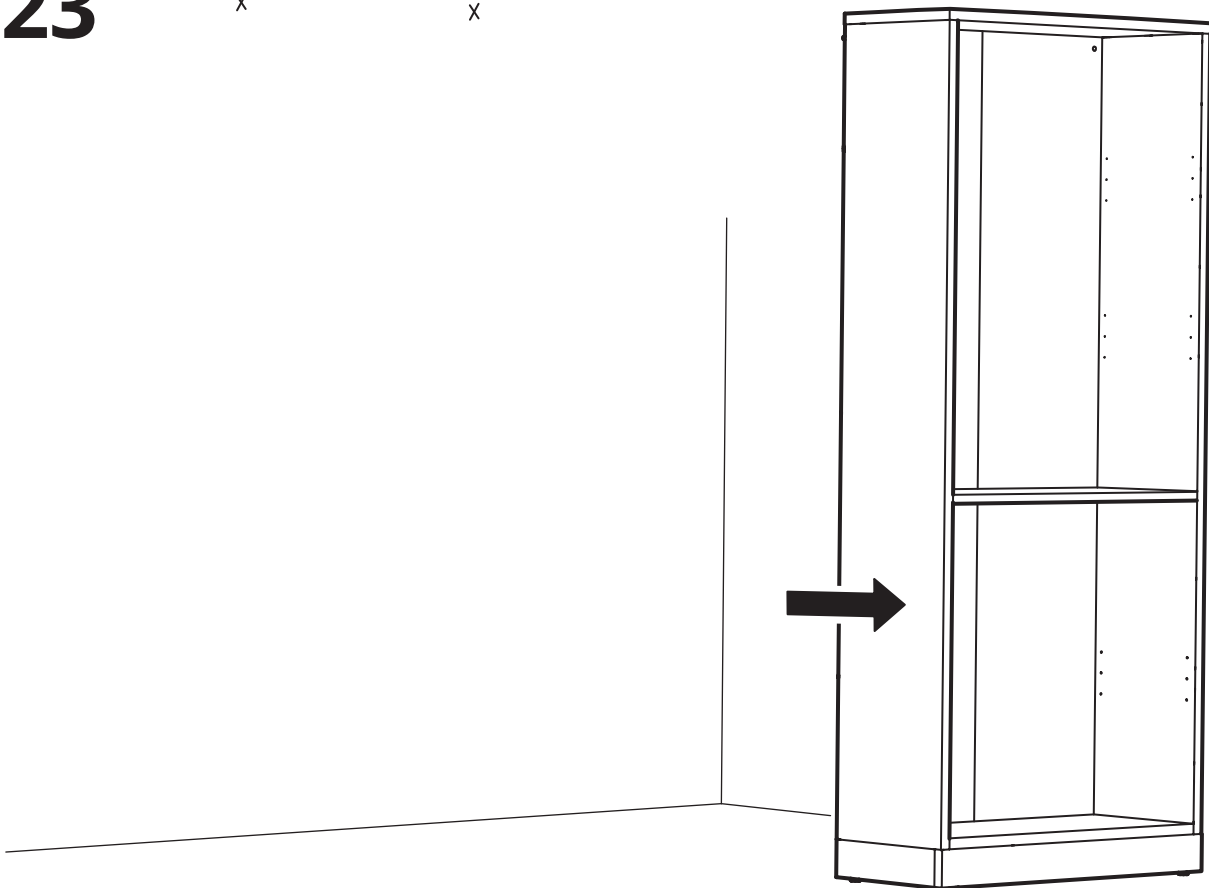



www.IKEA.com/secure-it



www.IKEA.cn/secure-it

 
24

English


The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

עברית

הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.

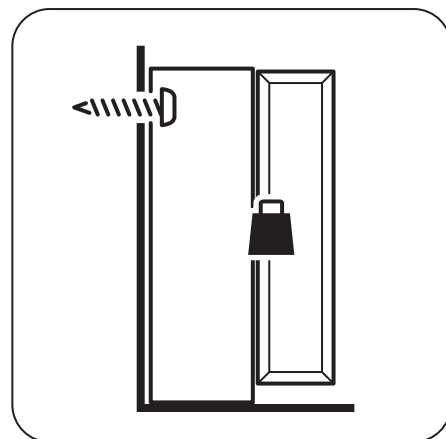


A

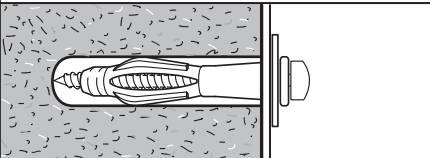 


Ø 8 mm
(5/16")



 1




2

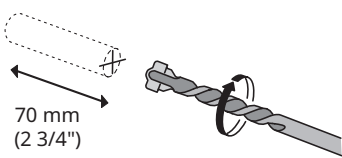 


70 mm
(2 3/4")

 3

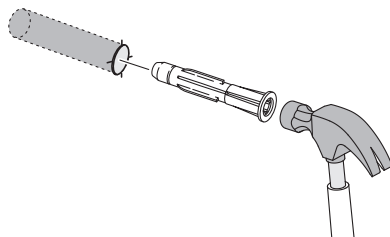


B

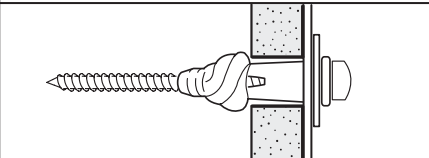 


Ø 8 mm
(5/16")



 1




2

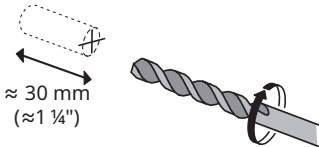 


≈ 30 mm
(≈ 1 1/4")

 3

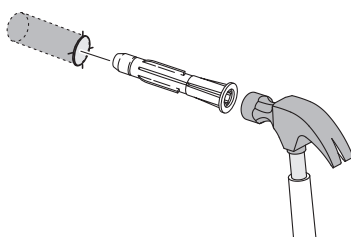


C

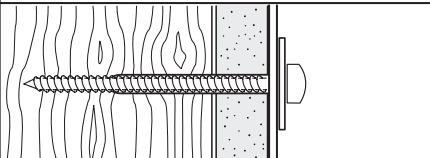 


Ø 3 mm
(1/8")



 1





2

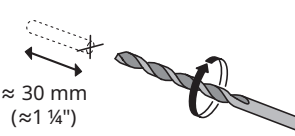 




≈ 30 mm
(≈ 1 1/4")

 
 
3




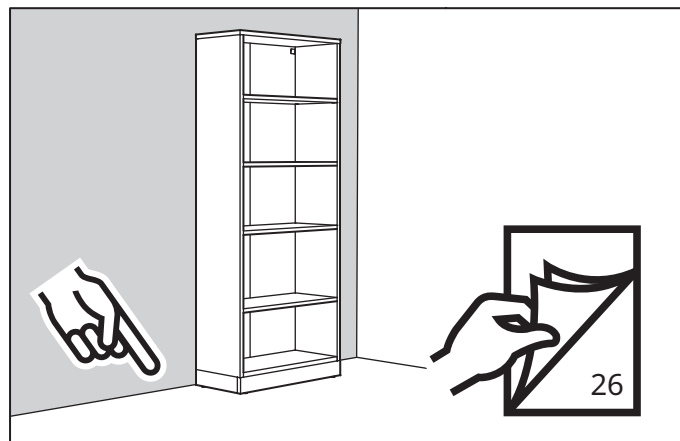
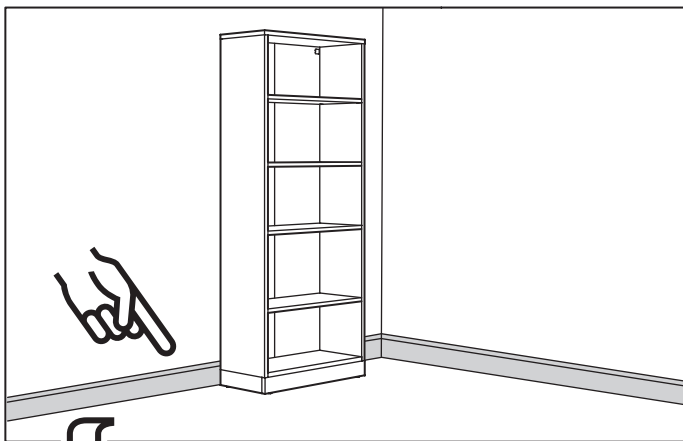



25

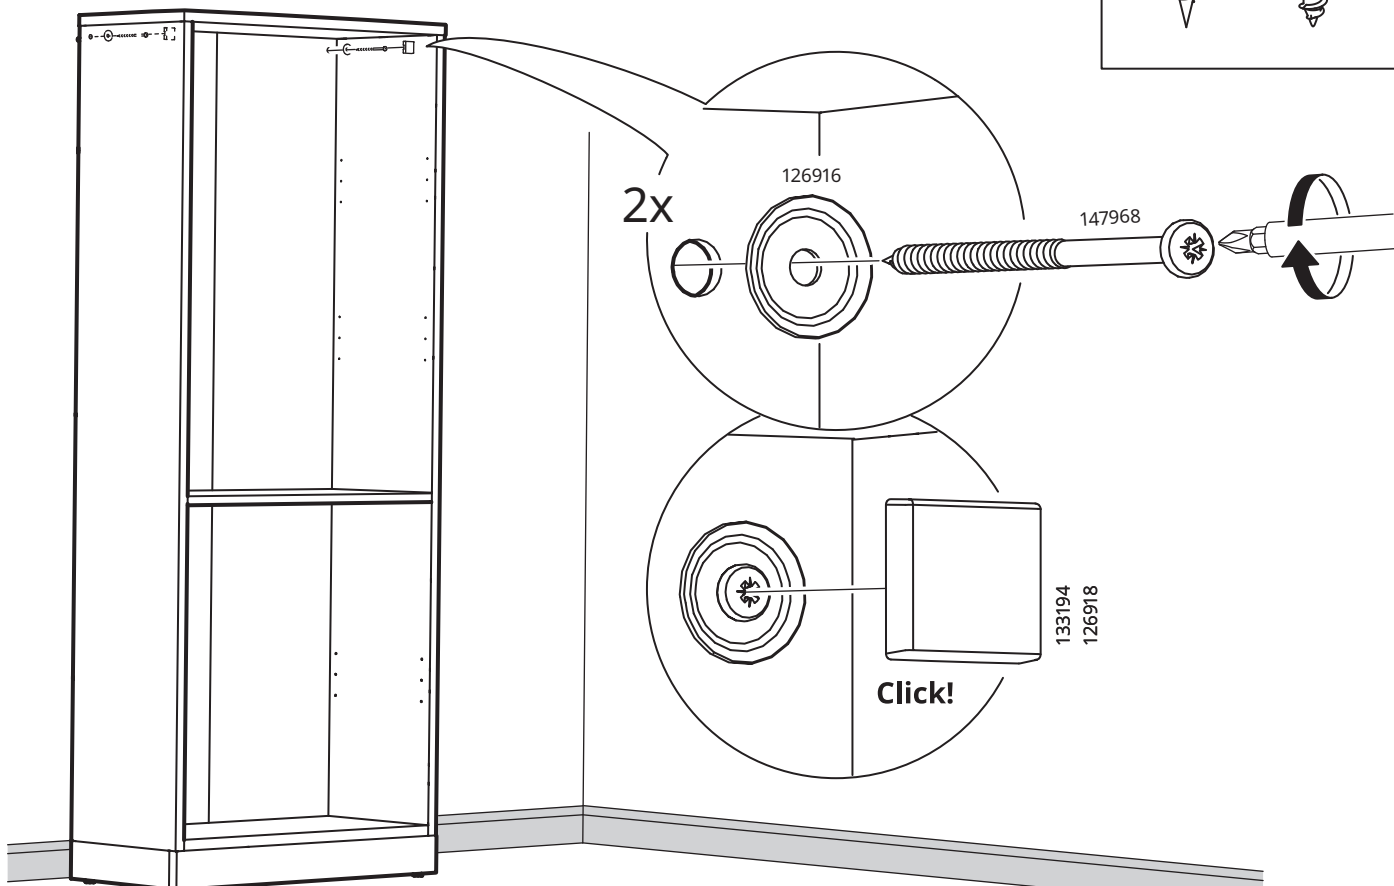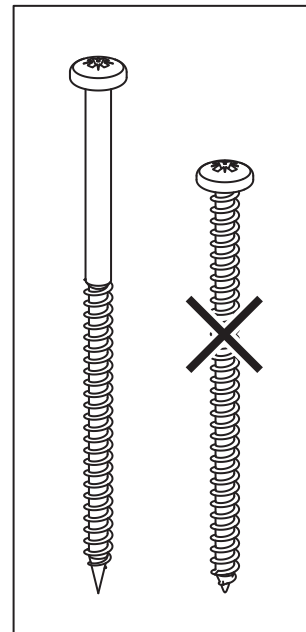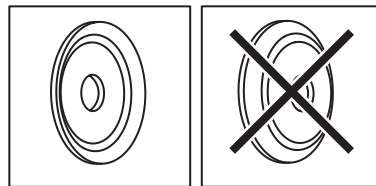   

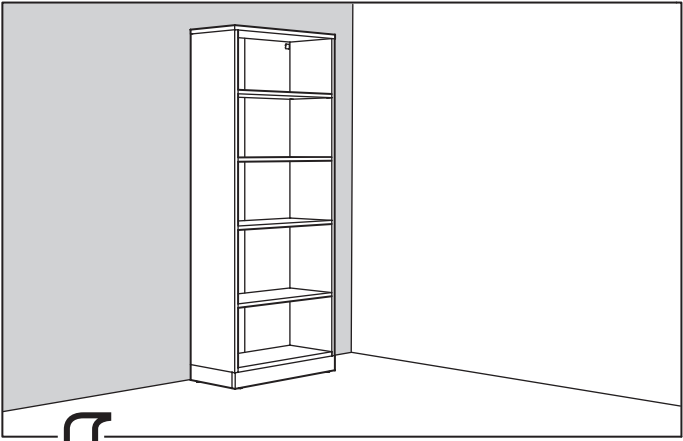  

25

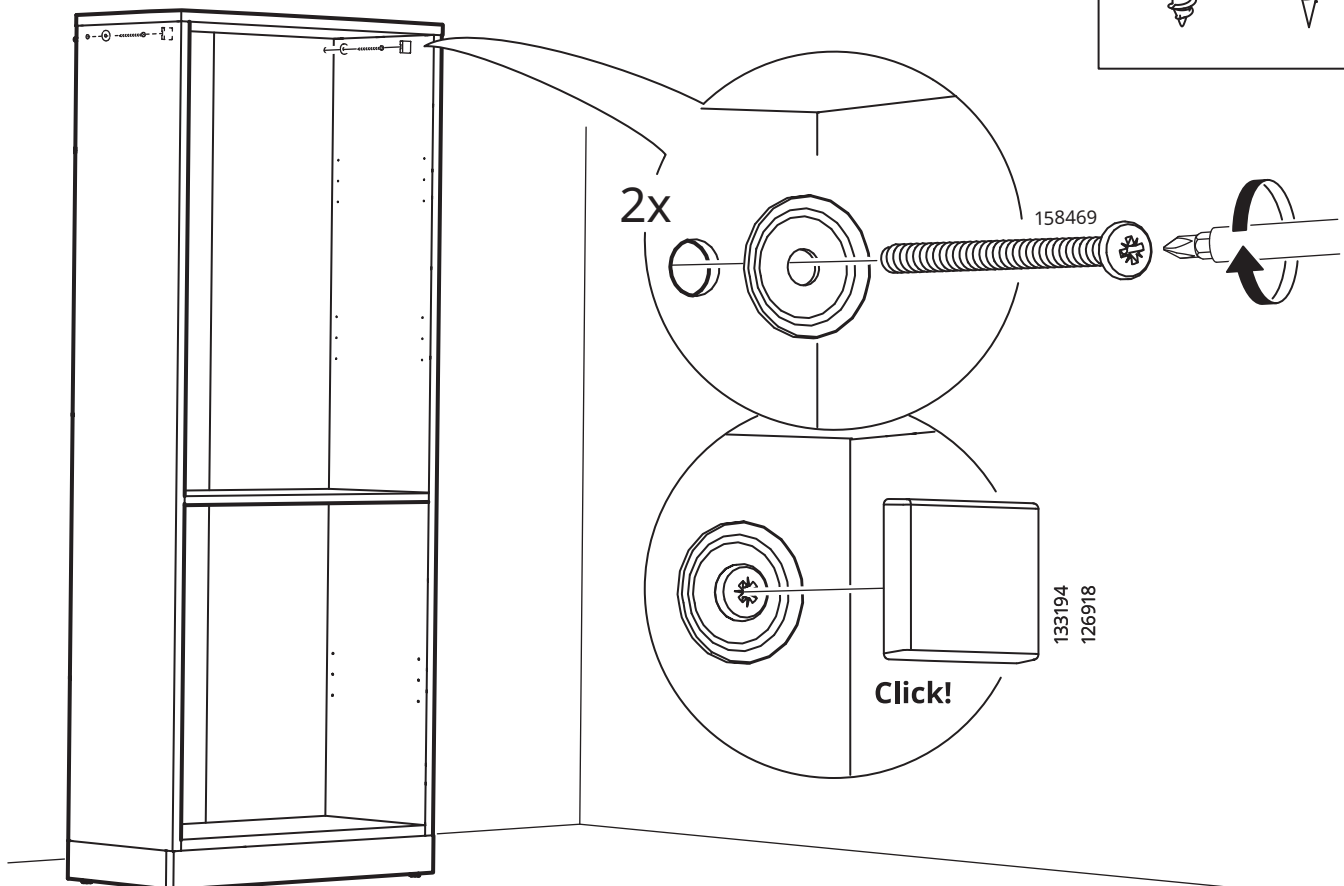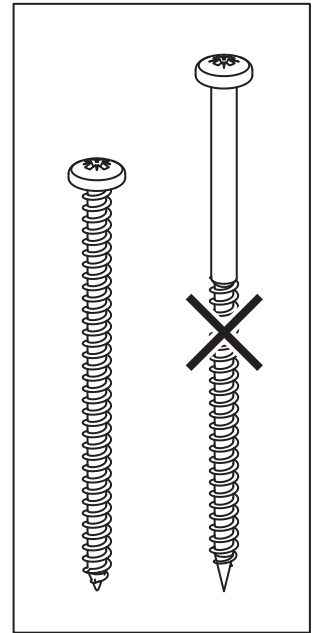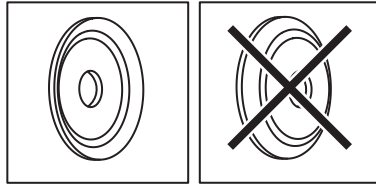   

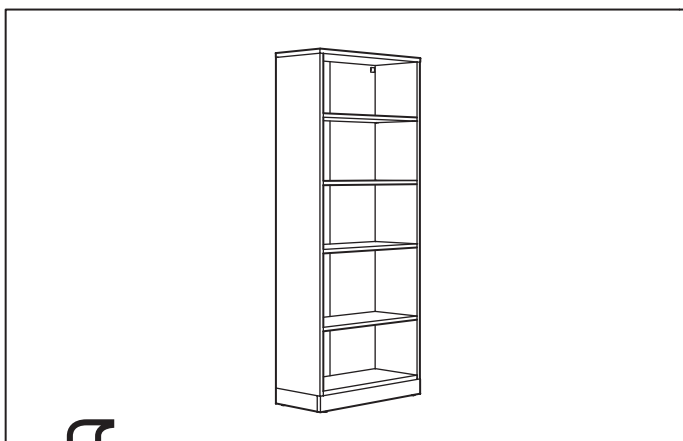 

26

