 


TONSTAD

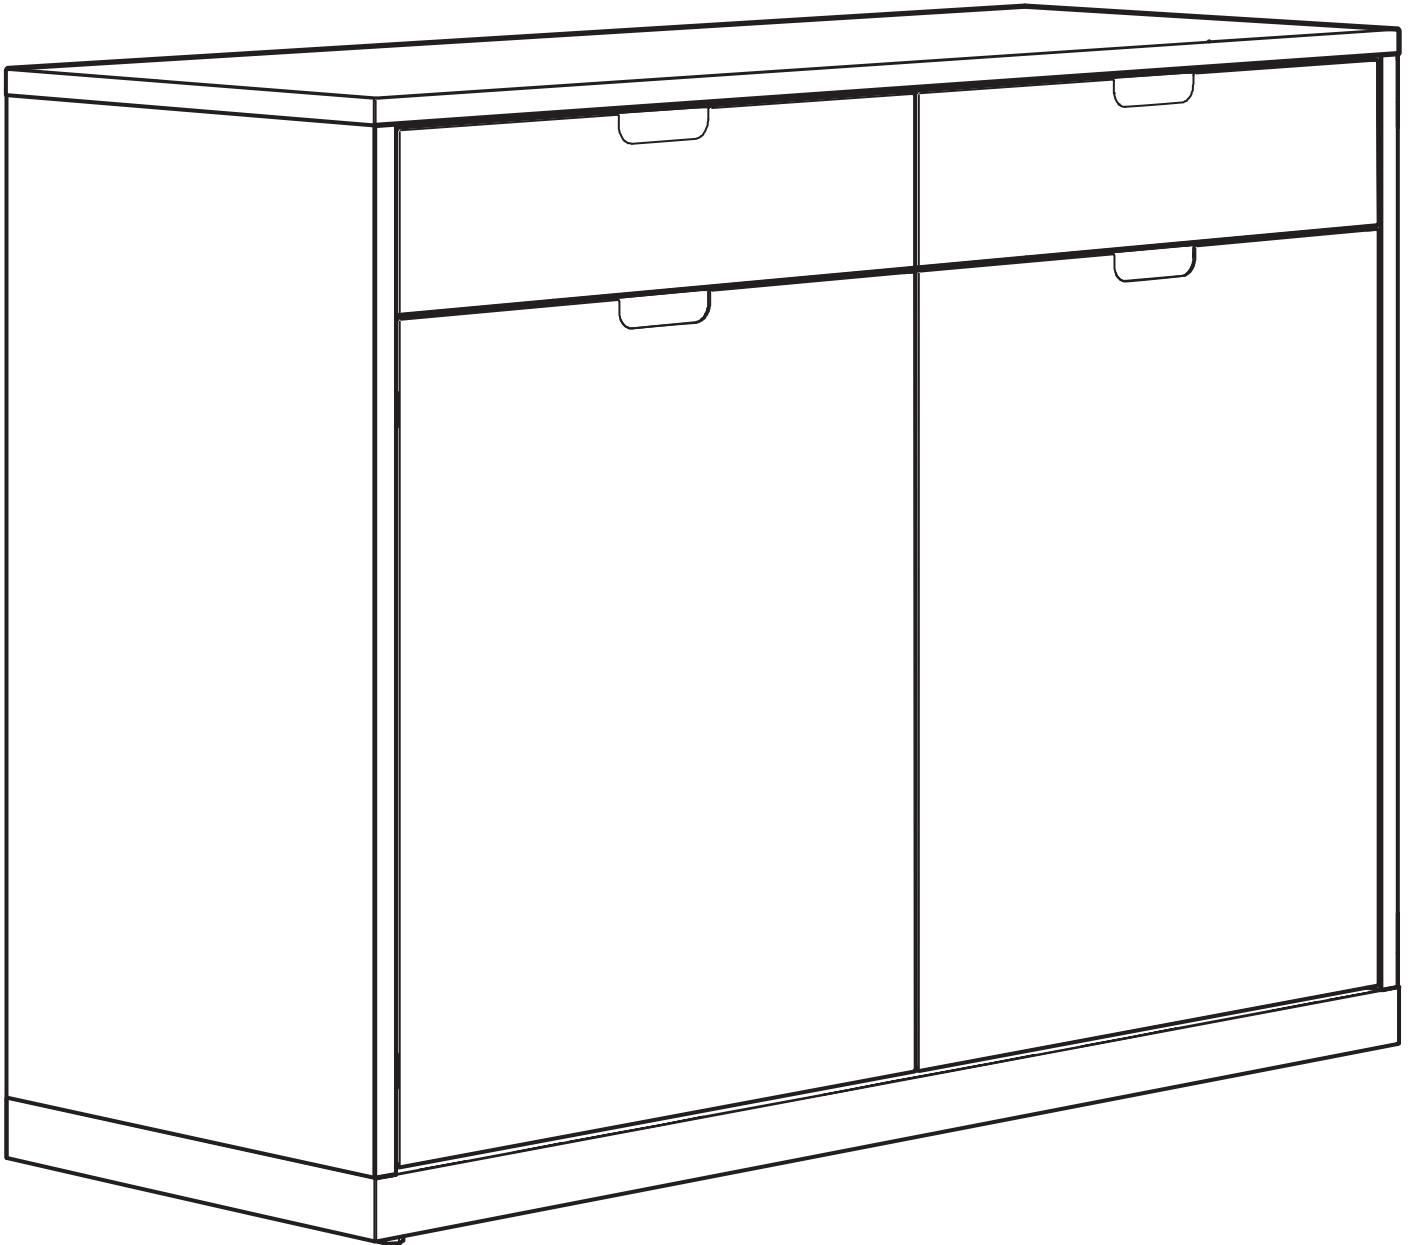

Design and Quality
IKEA of Sweden



English

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, or shelves.

עברית

אזהרה

נפילת הרהיט עלולה לגרום לפגיעה גופנית חמורה או קטלנית.

יש לקבע את הרהיט לקיר באמצעות אבזרי הקיבוע המצורפים.

על-מנת למזער את סכנת הפגיעה הגופנית או המוות מנפילת רהיטים: מקמו את הפריטים הכבדים ביותר במגירה התחתונה.

 
 
 
 
 
הימנעו מלהניח טלוויזיות או פריטים כבדים אחרים על מוצר זה.

 
 
 
 
 
 
אין לאפשר לילדים לטפס על המגירות, הדלתות או המדפים.







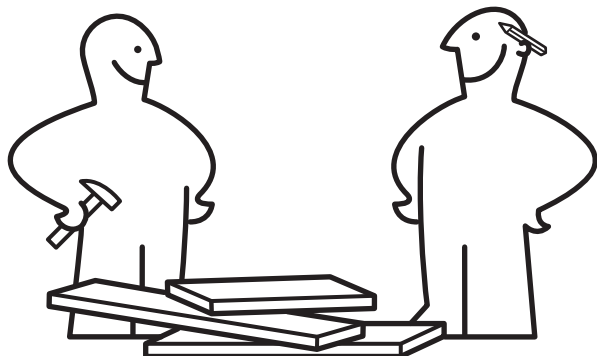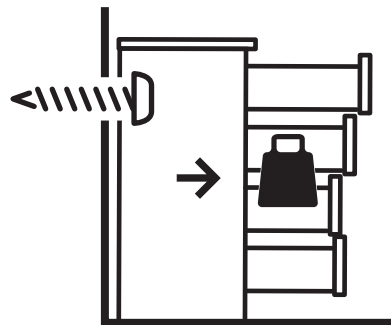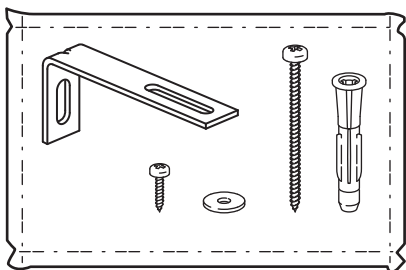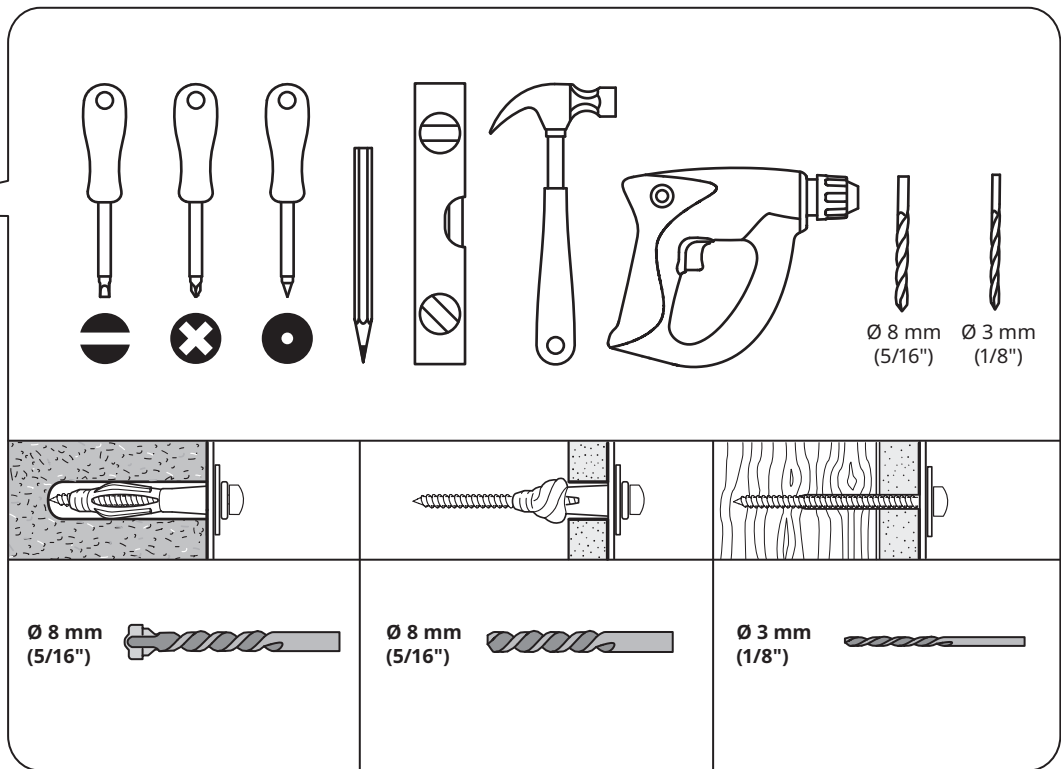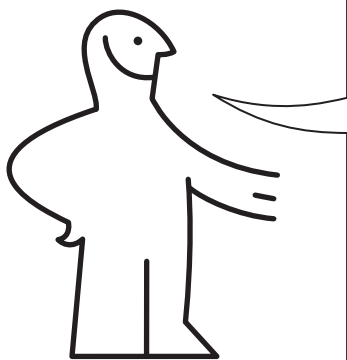

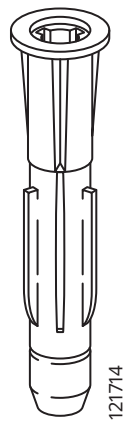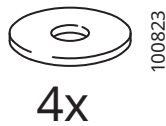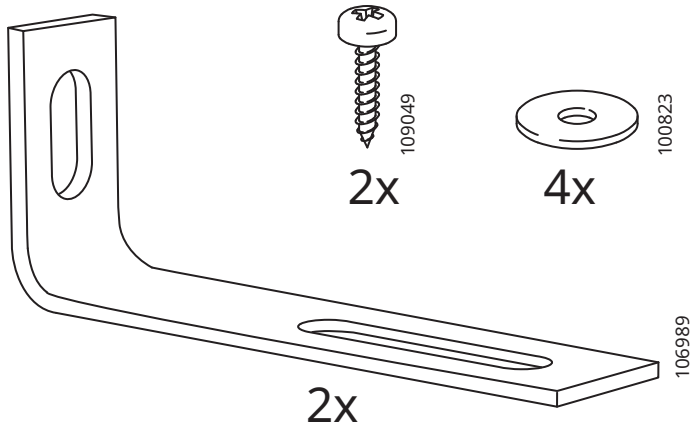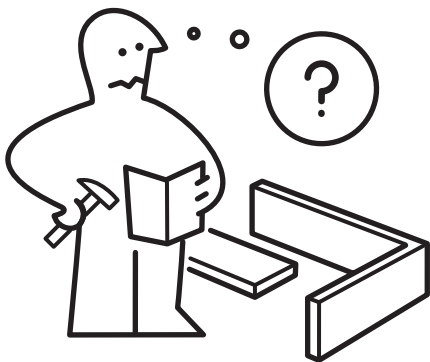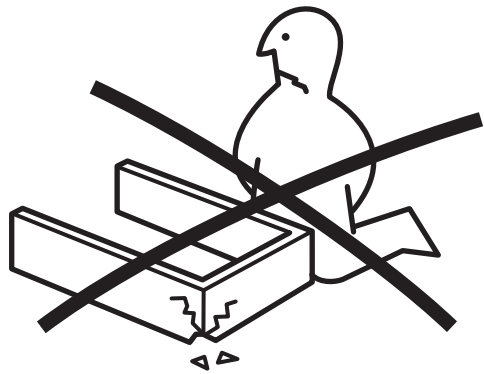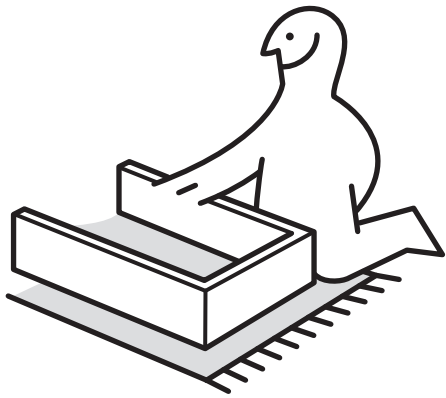

1



 
101339

3x




101345

14x



151707

 10x




151708

10x




100347

 8x

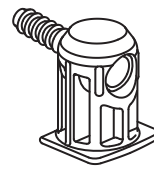


10116968

 8x

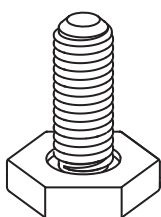


159992

 5x

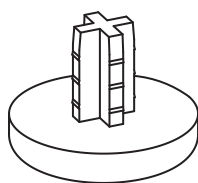


153552

 1x

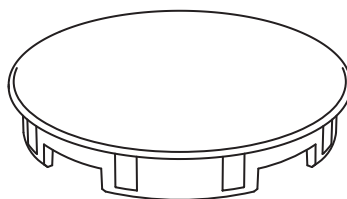

10117001

 
2x

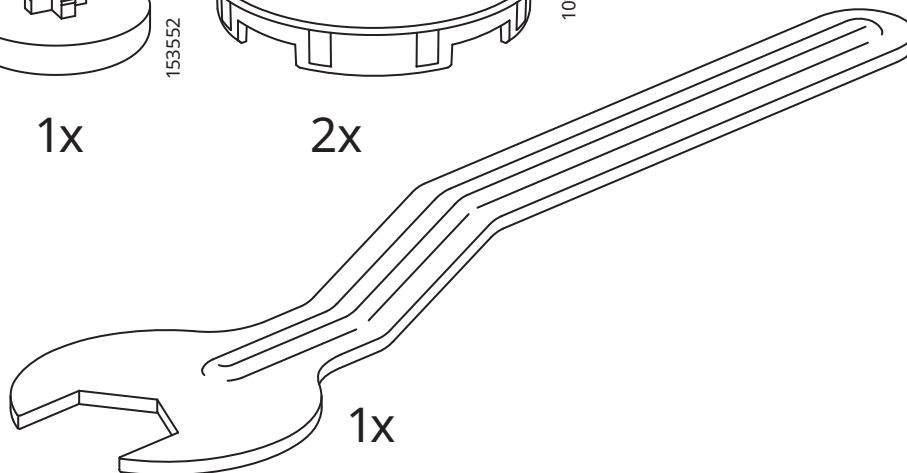

190459

1x

 2



10095420

8x



 
 
 
107586

4x






119030



8x

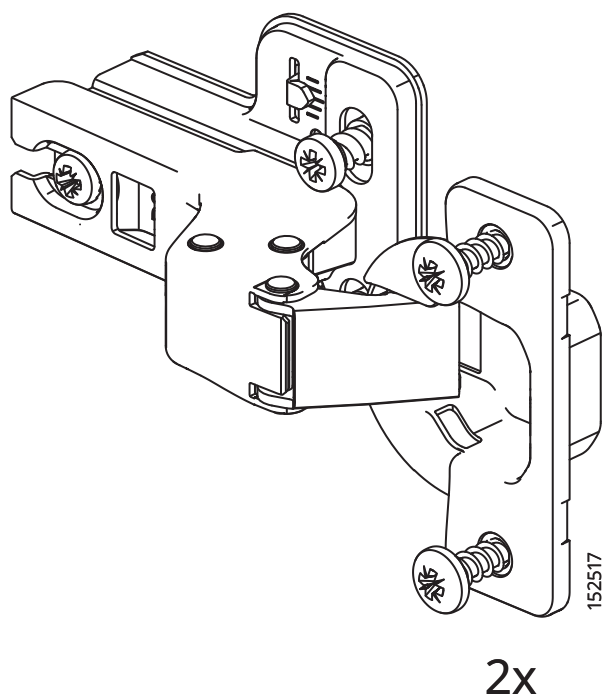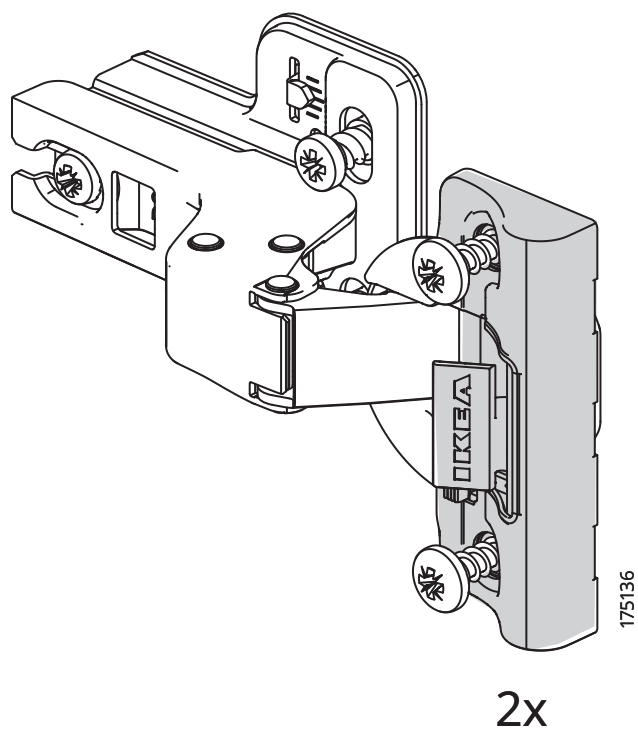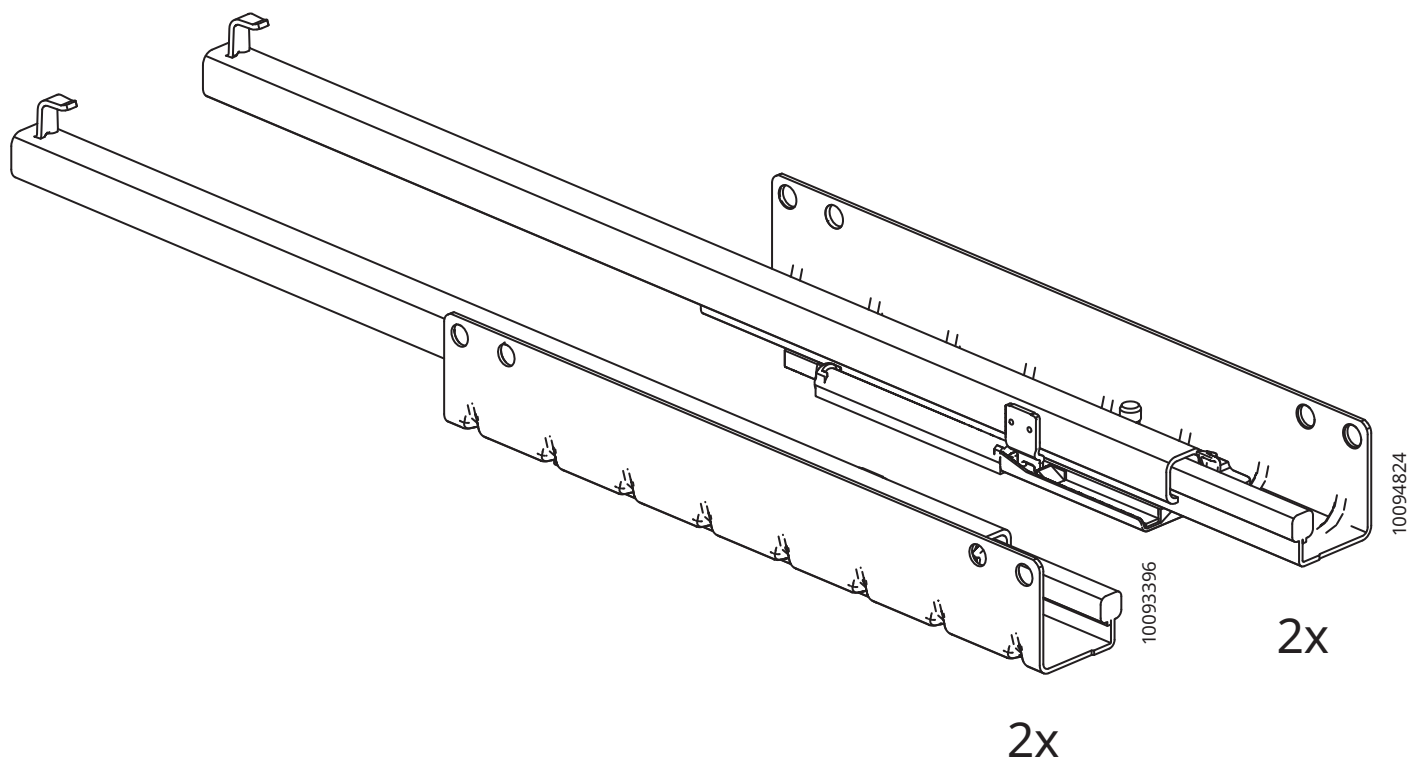


1

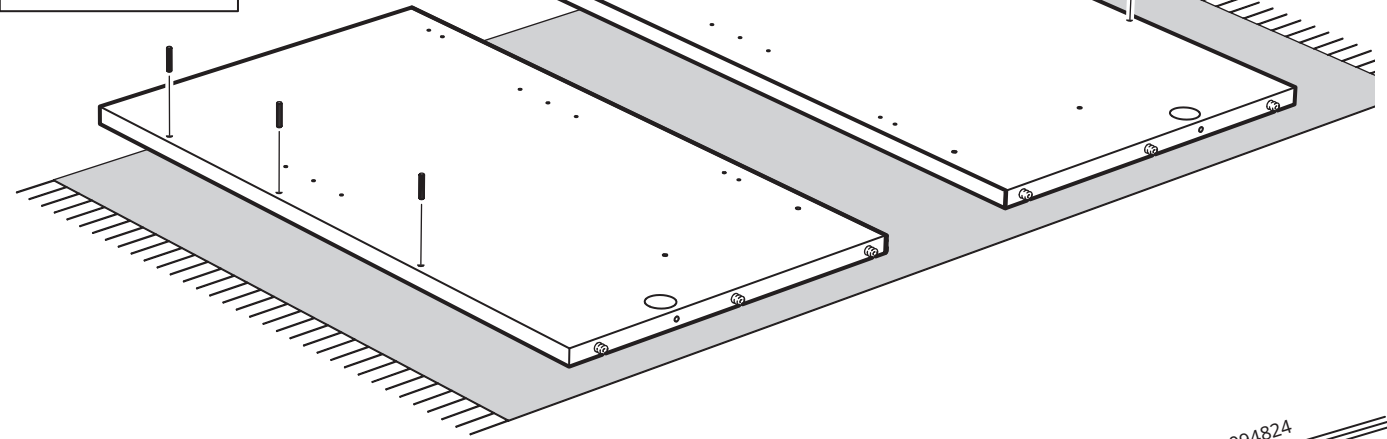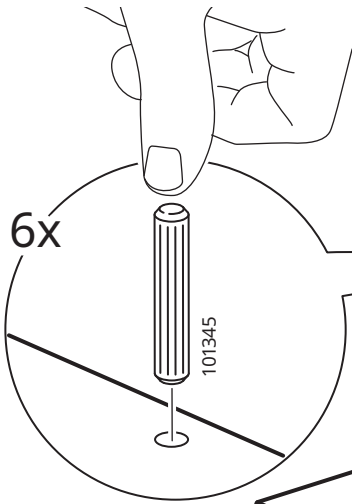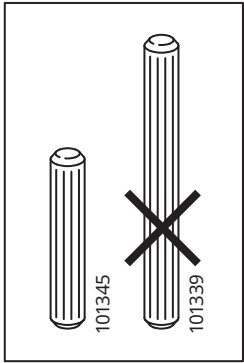   



2

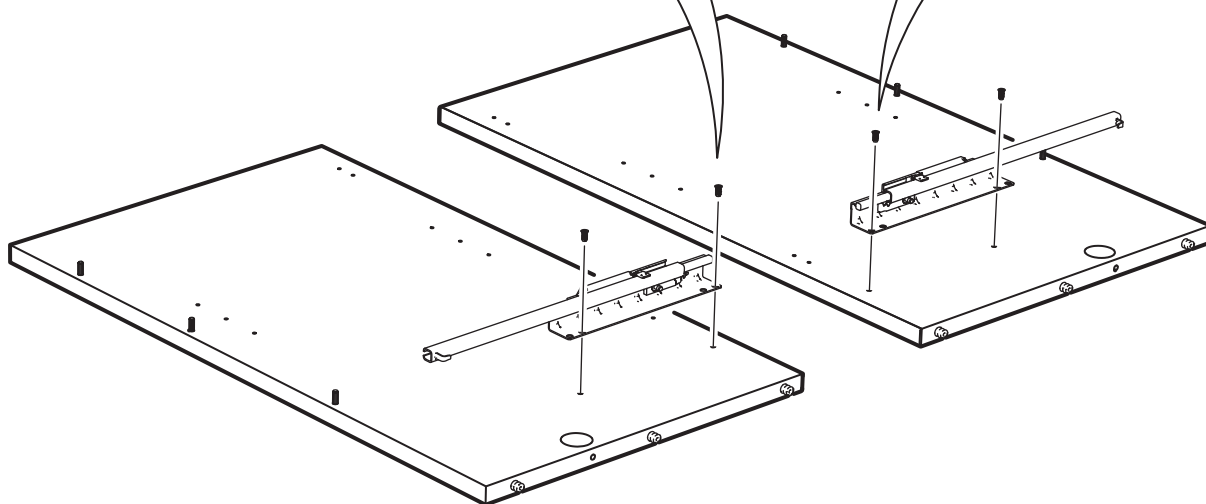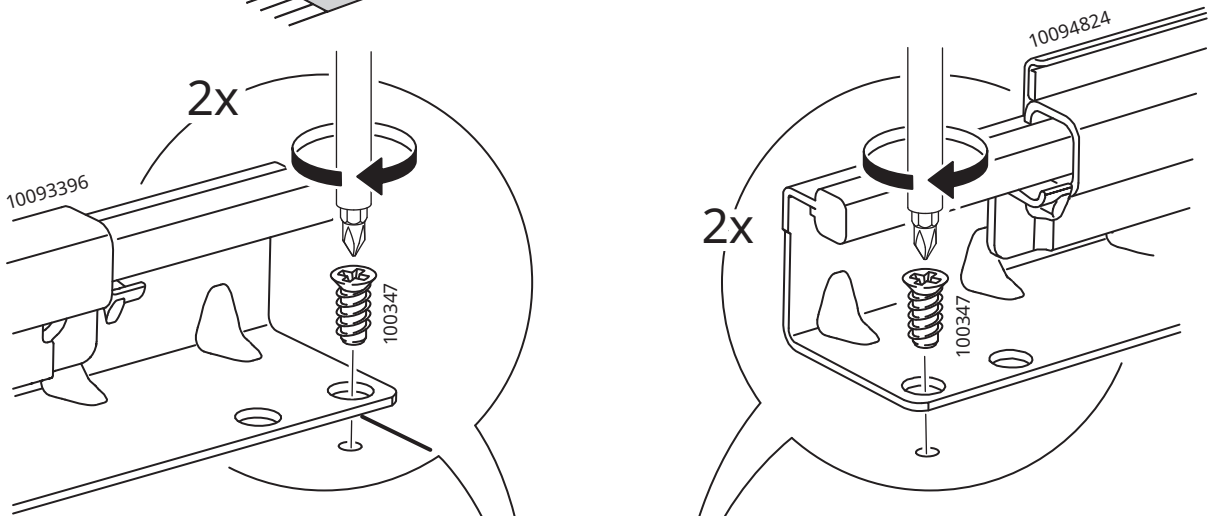  



3

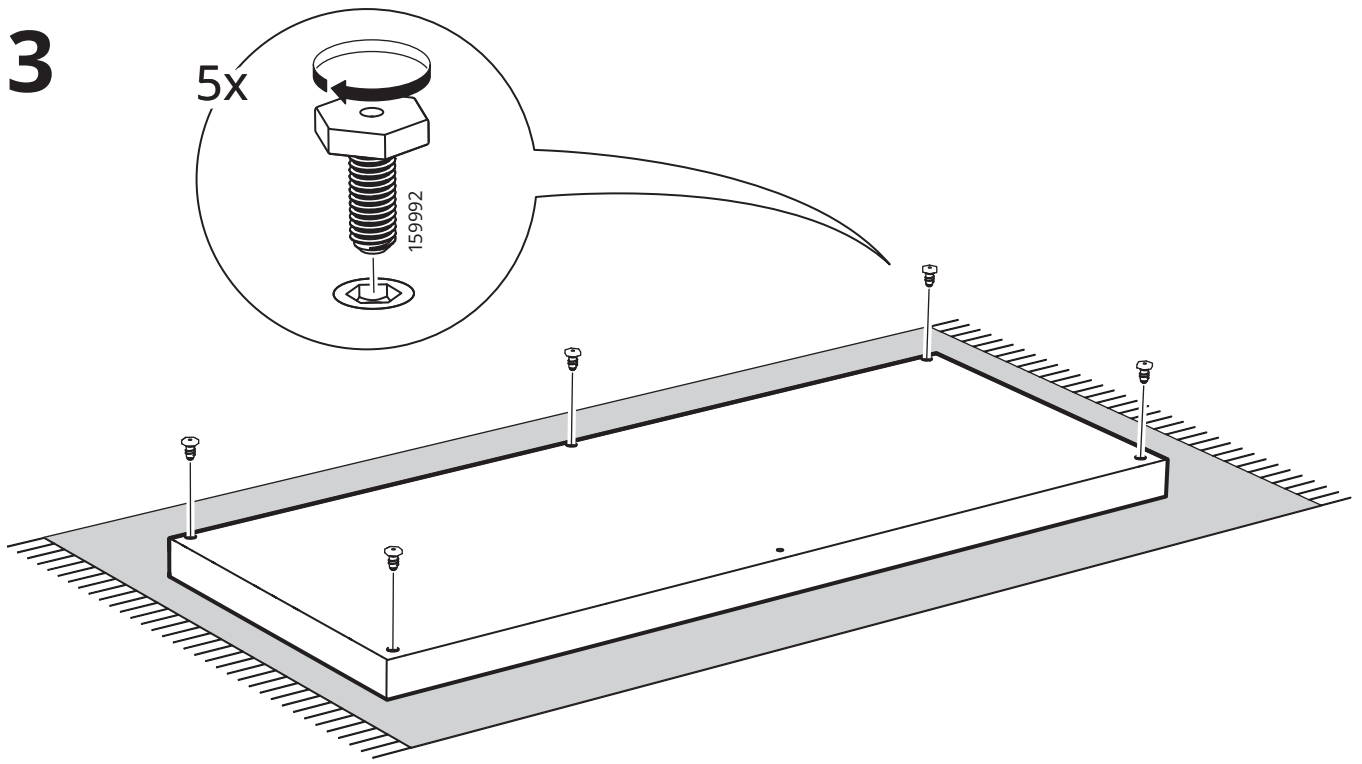 


4

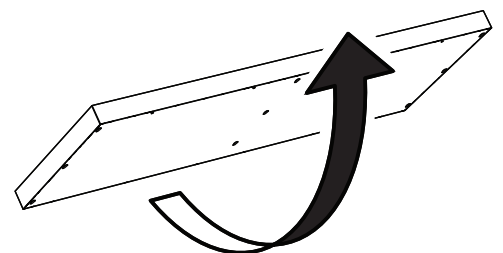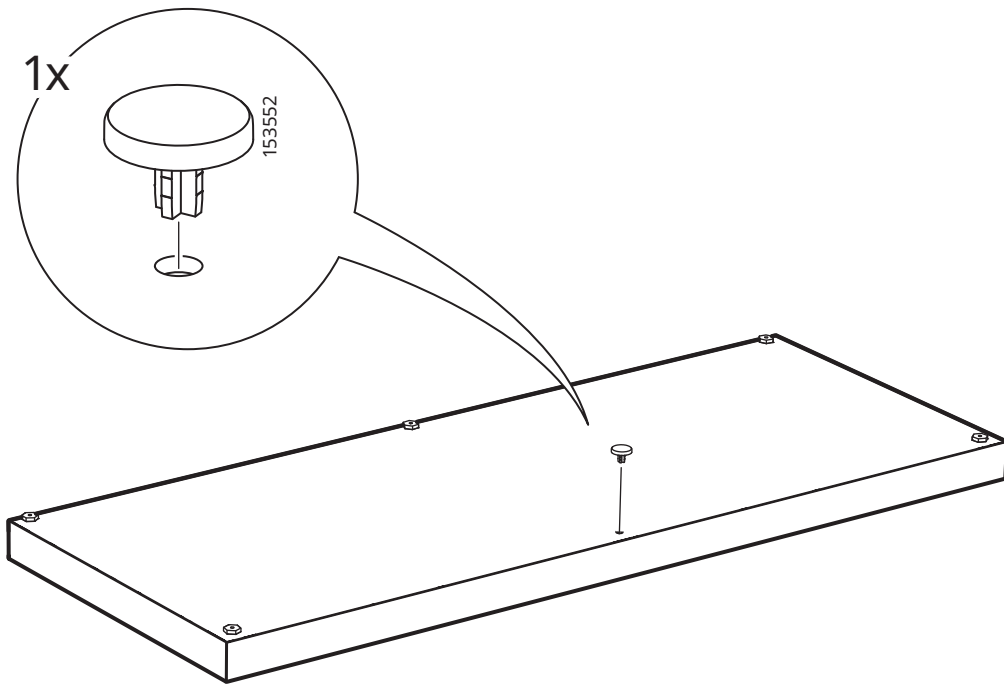  


5

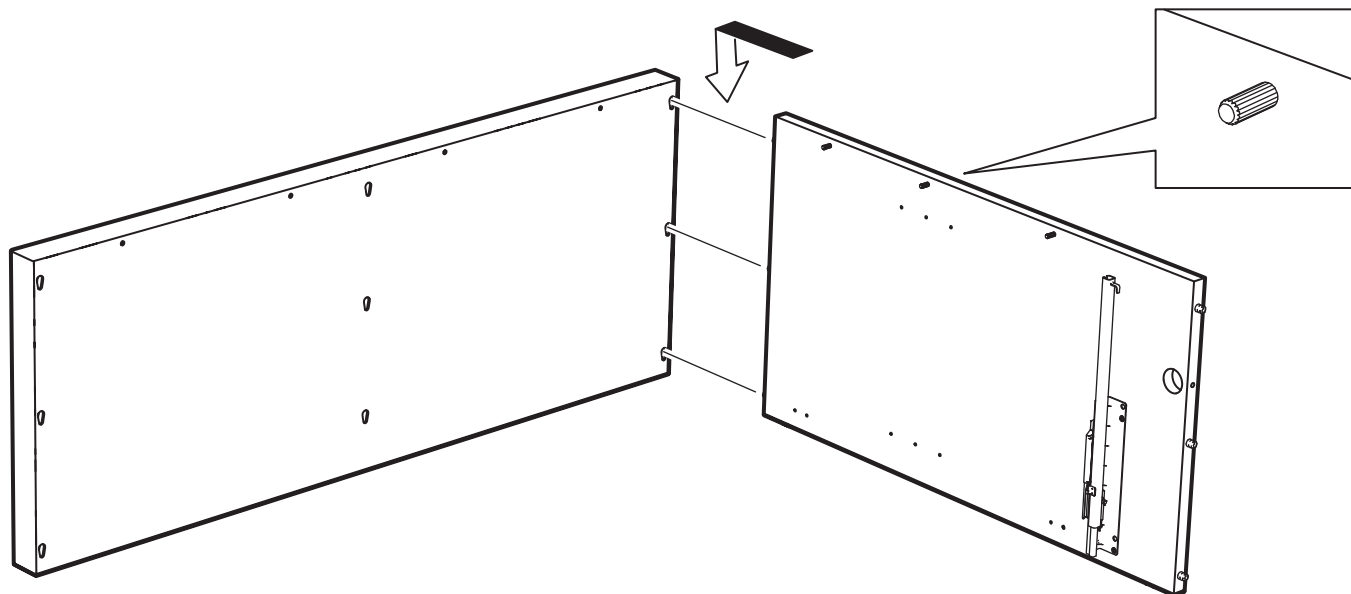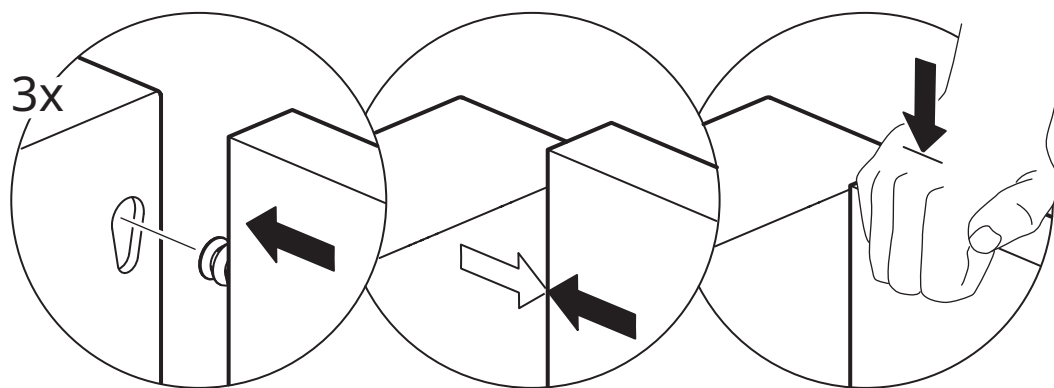  


6

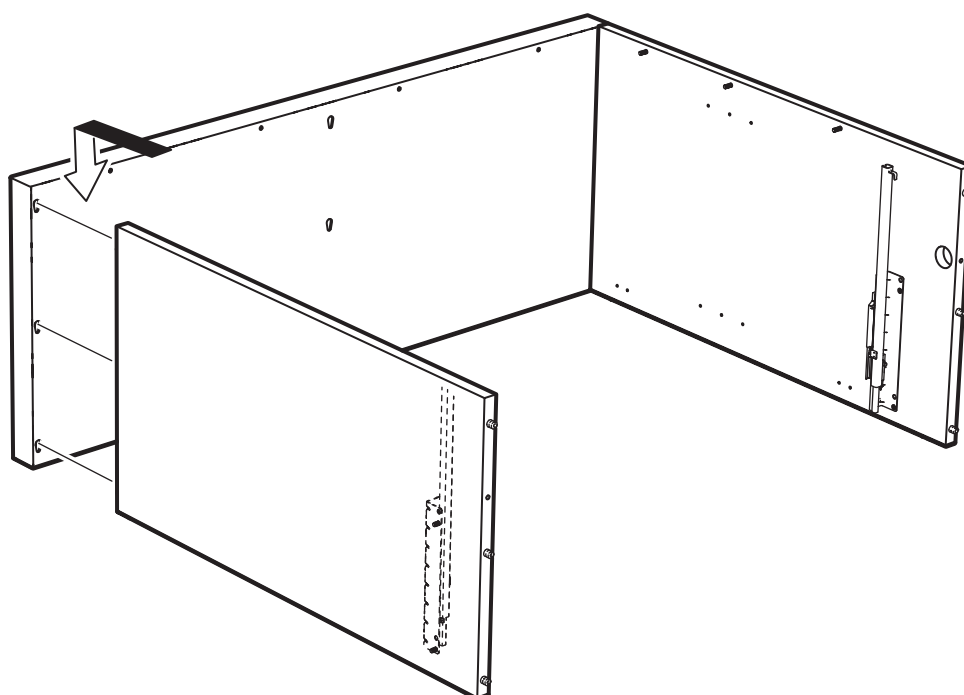 


7

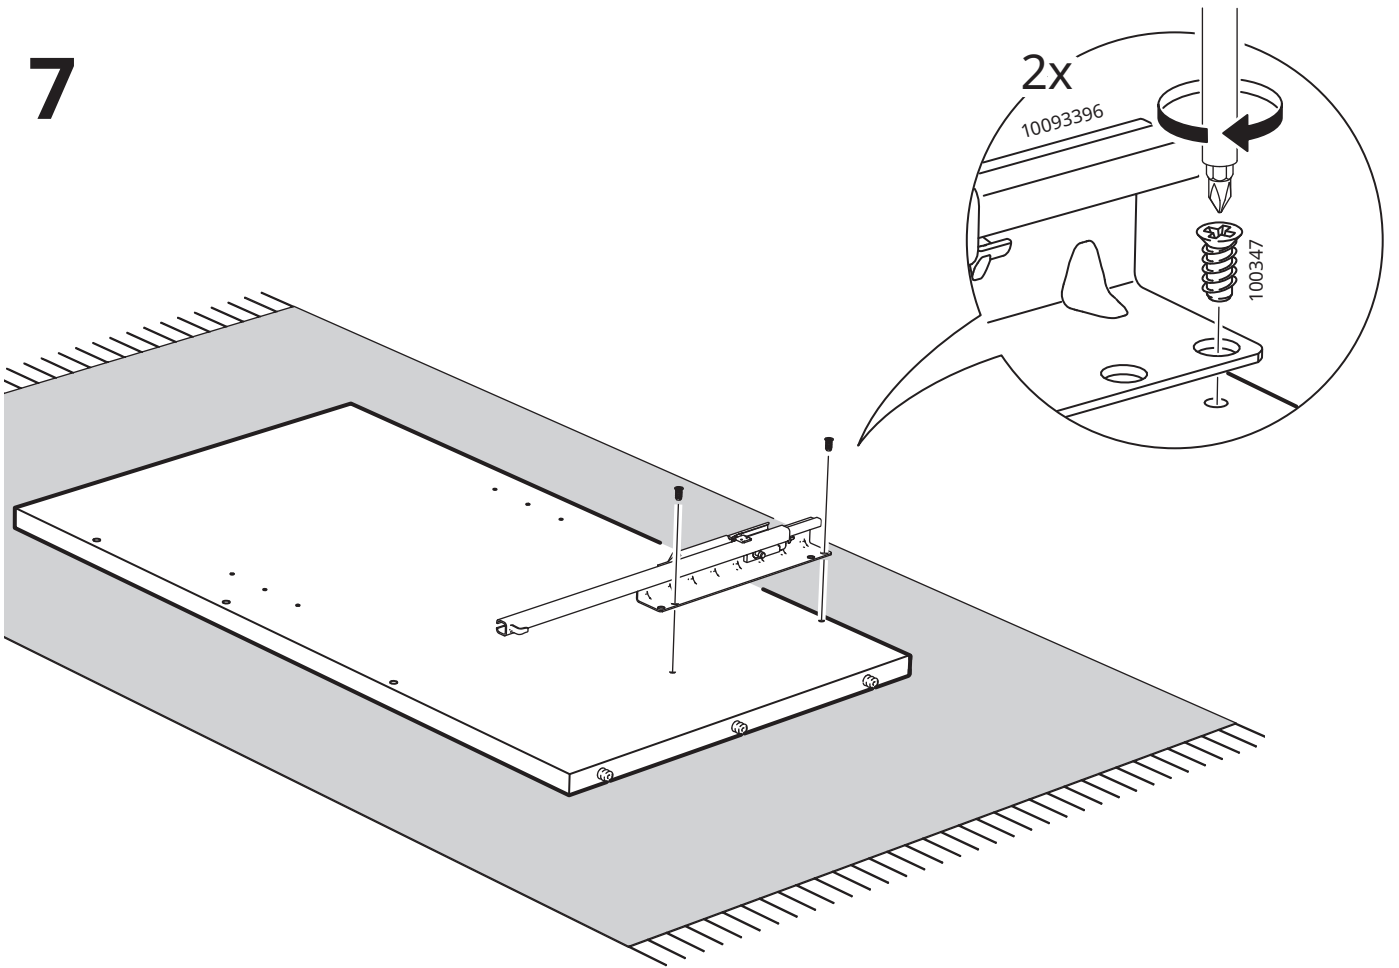 


8

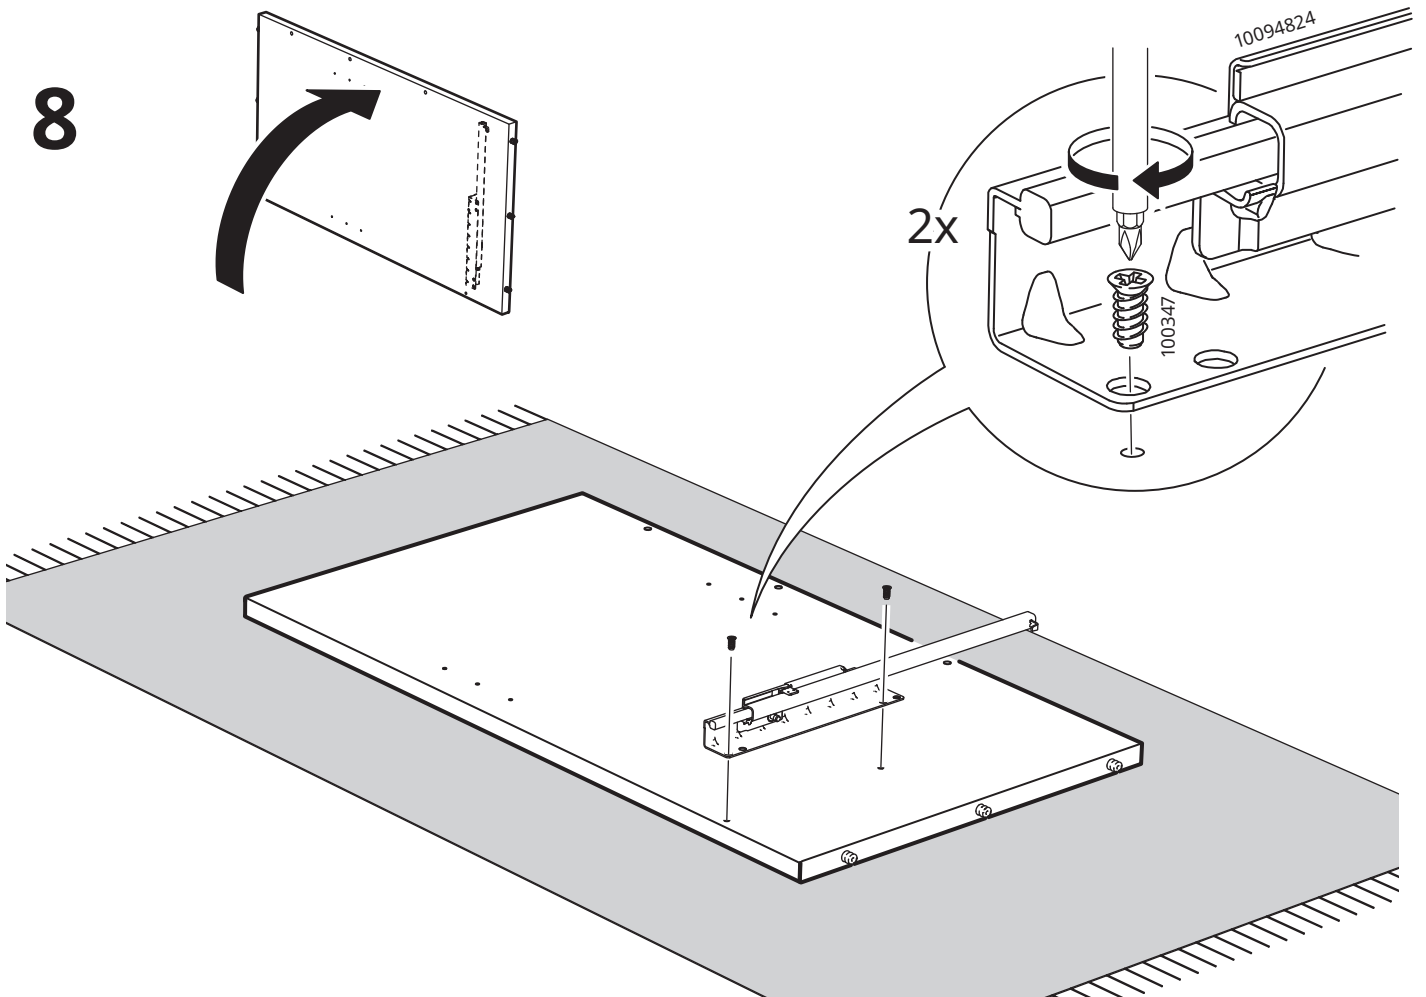 

9



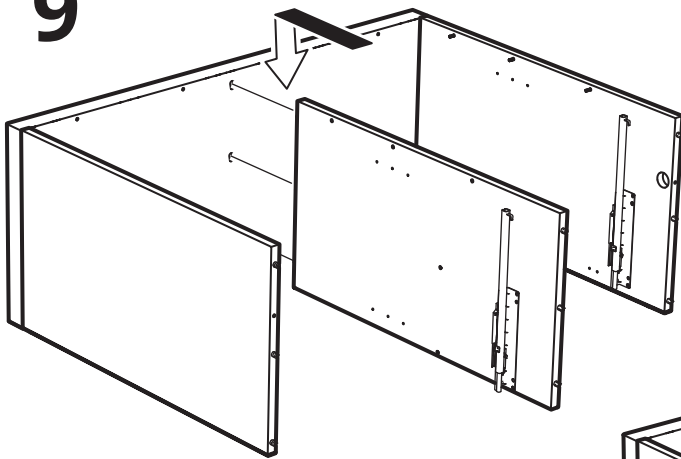 


10

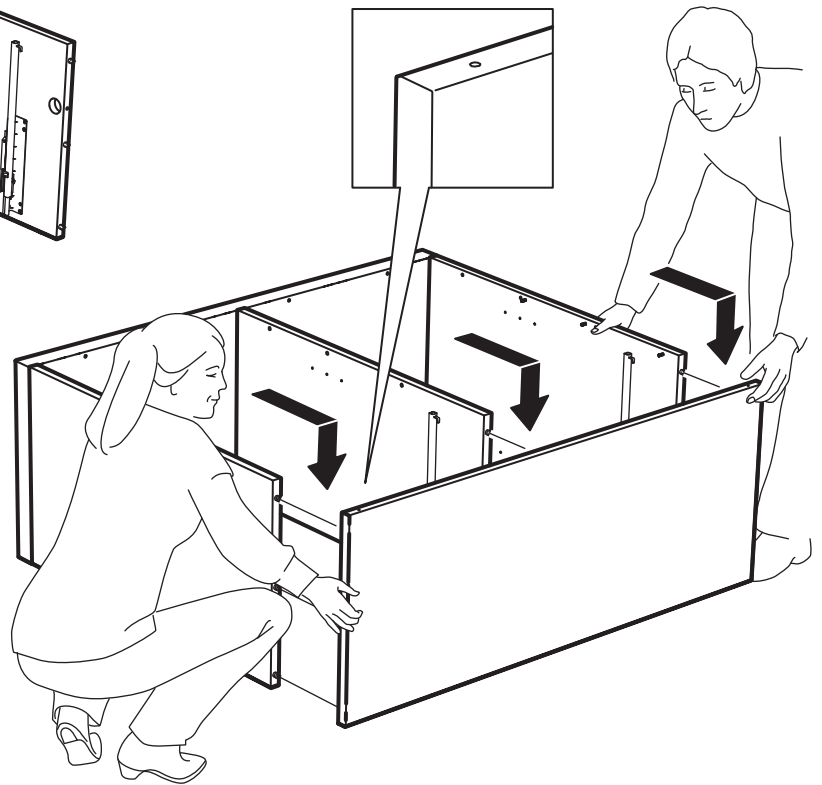 


11

   
2x

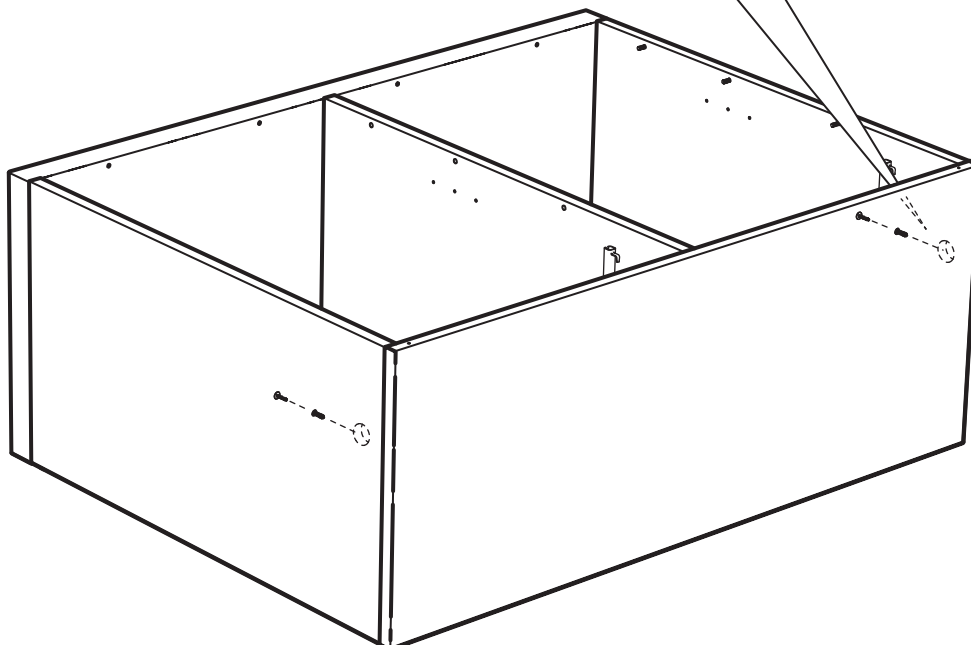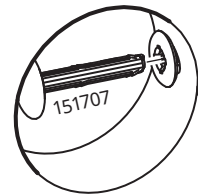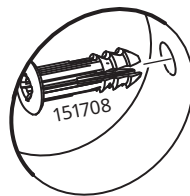


12

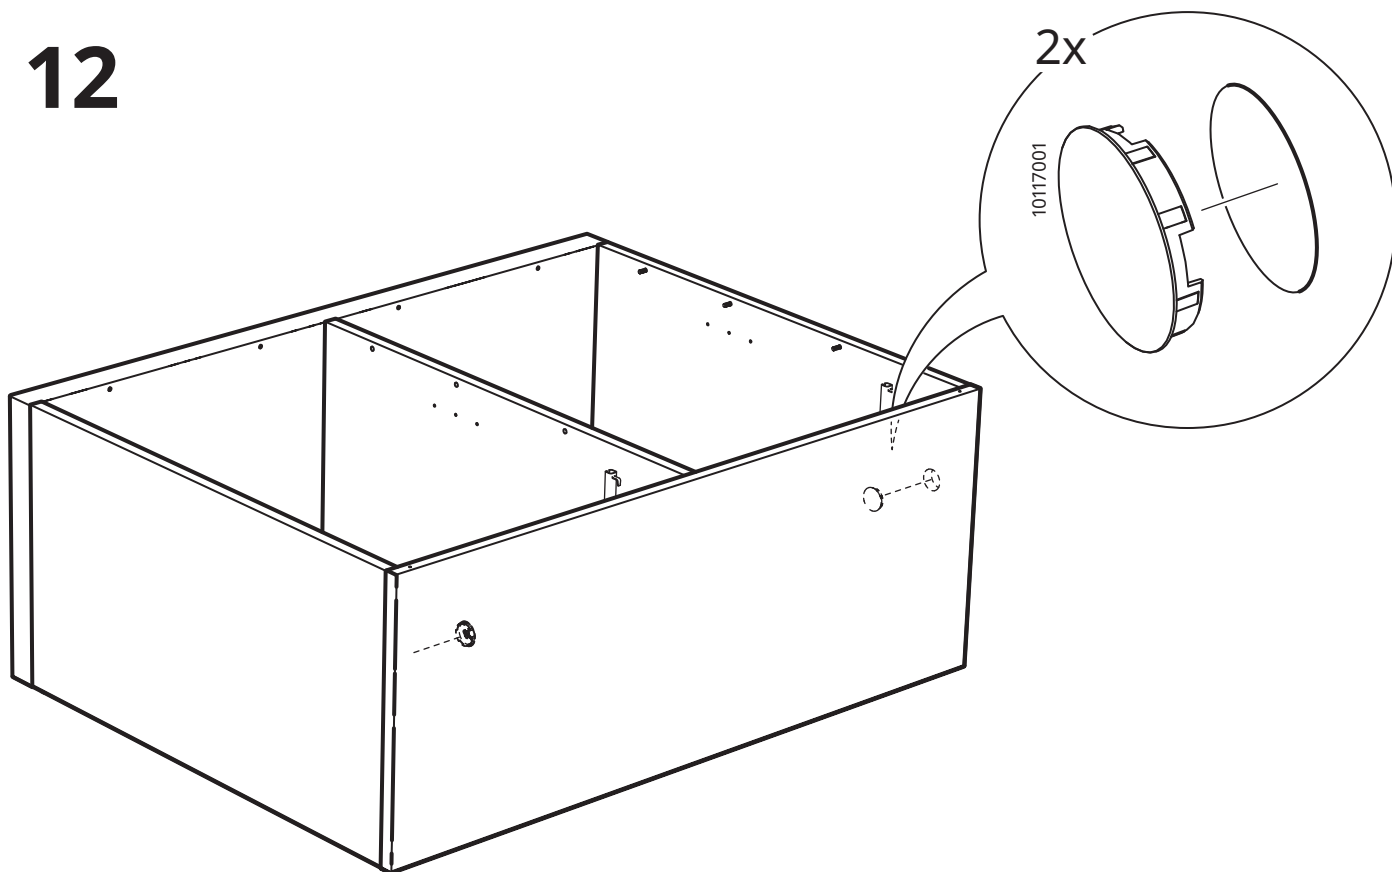 


13

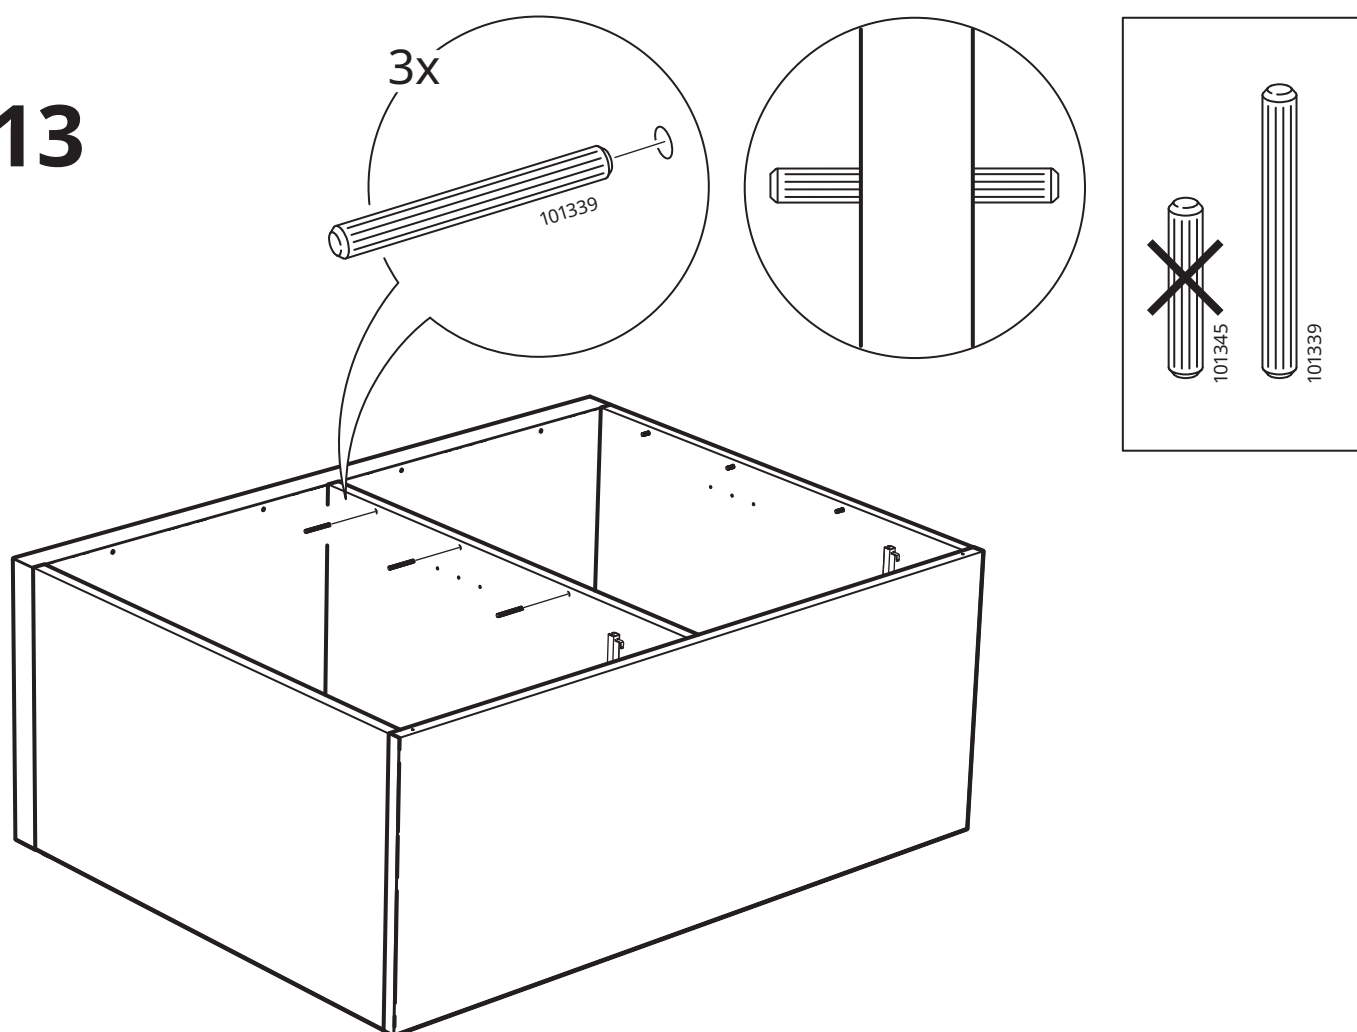 


14

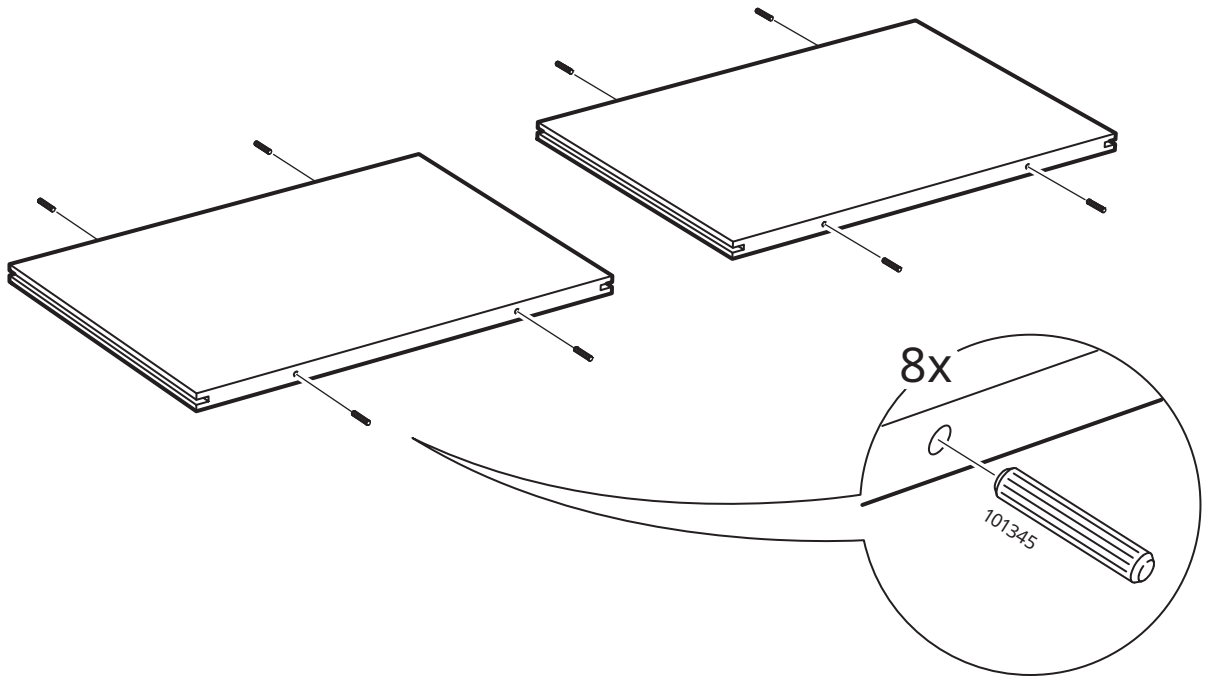 


15

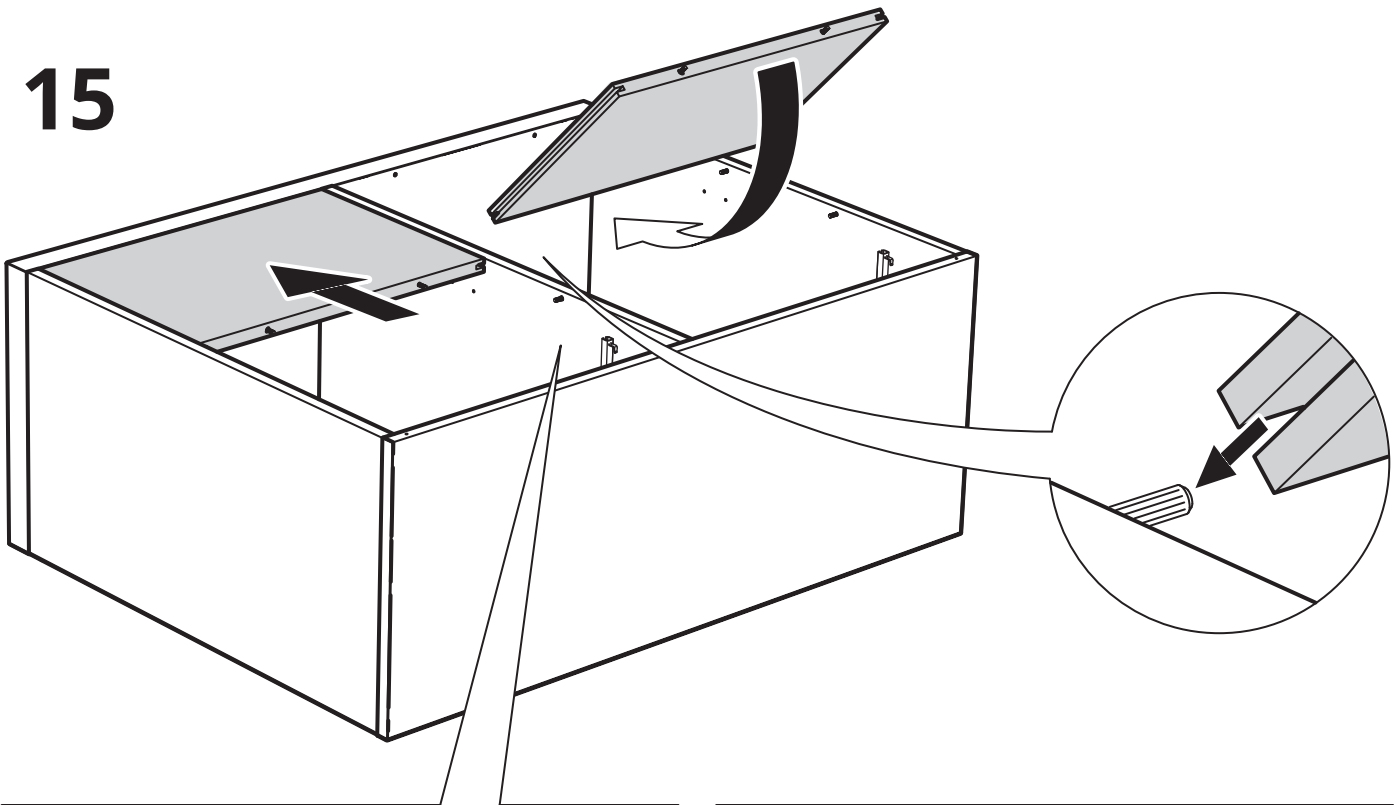 



1

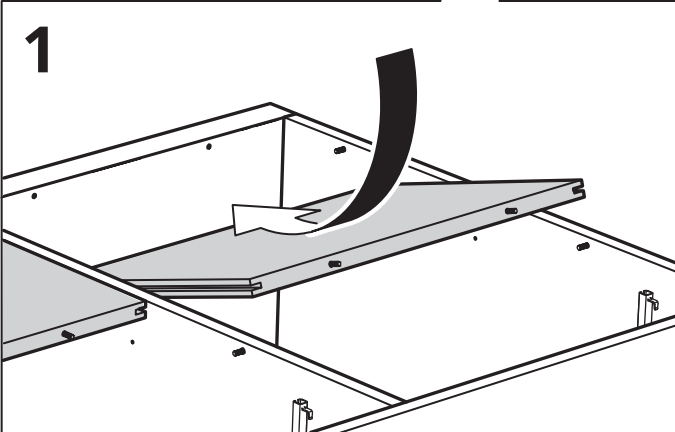 


2

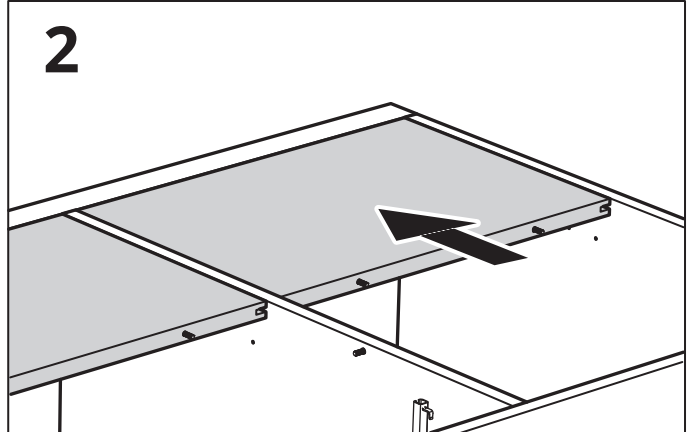 




16

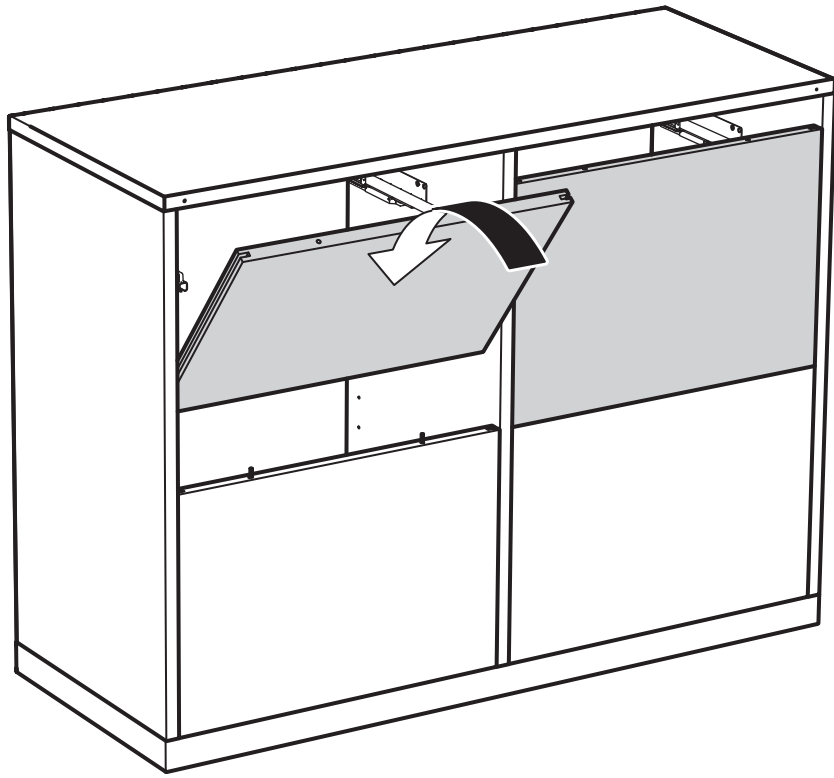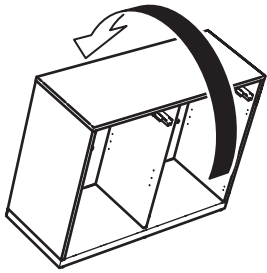  


17





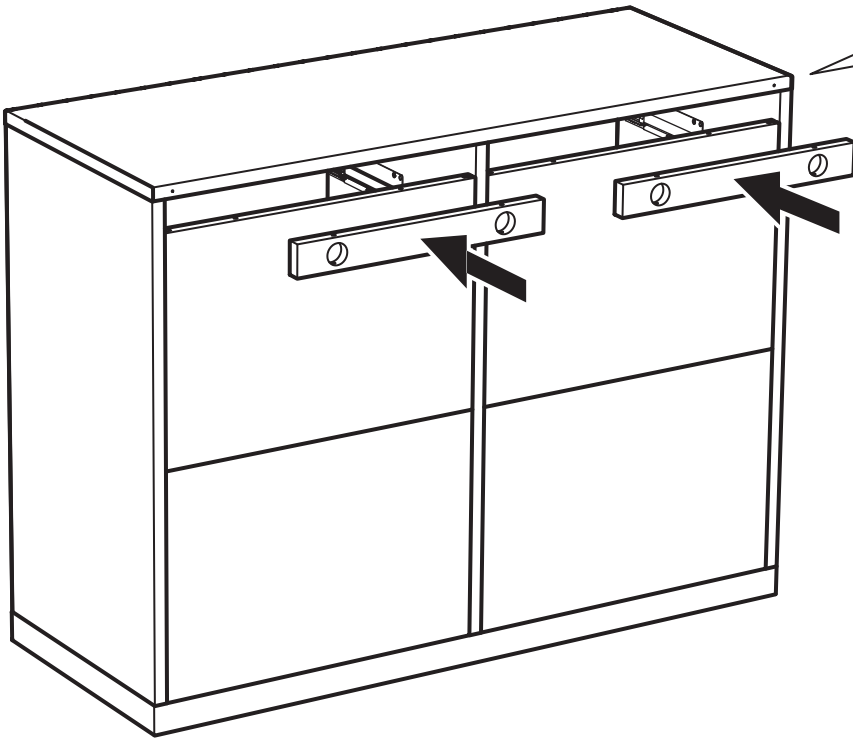 


8x

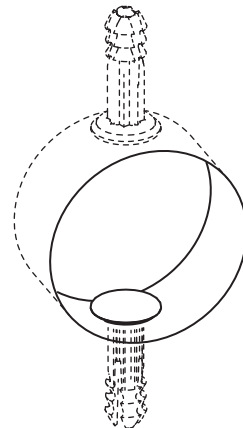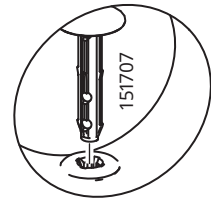  
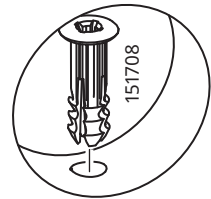 


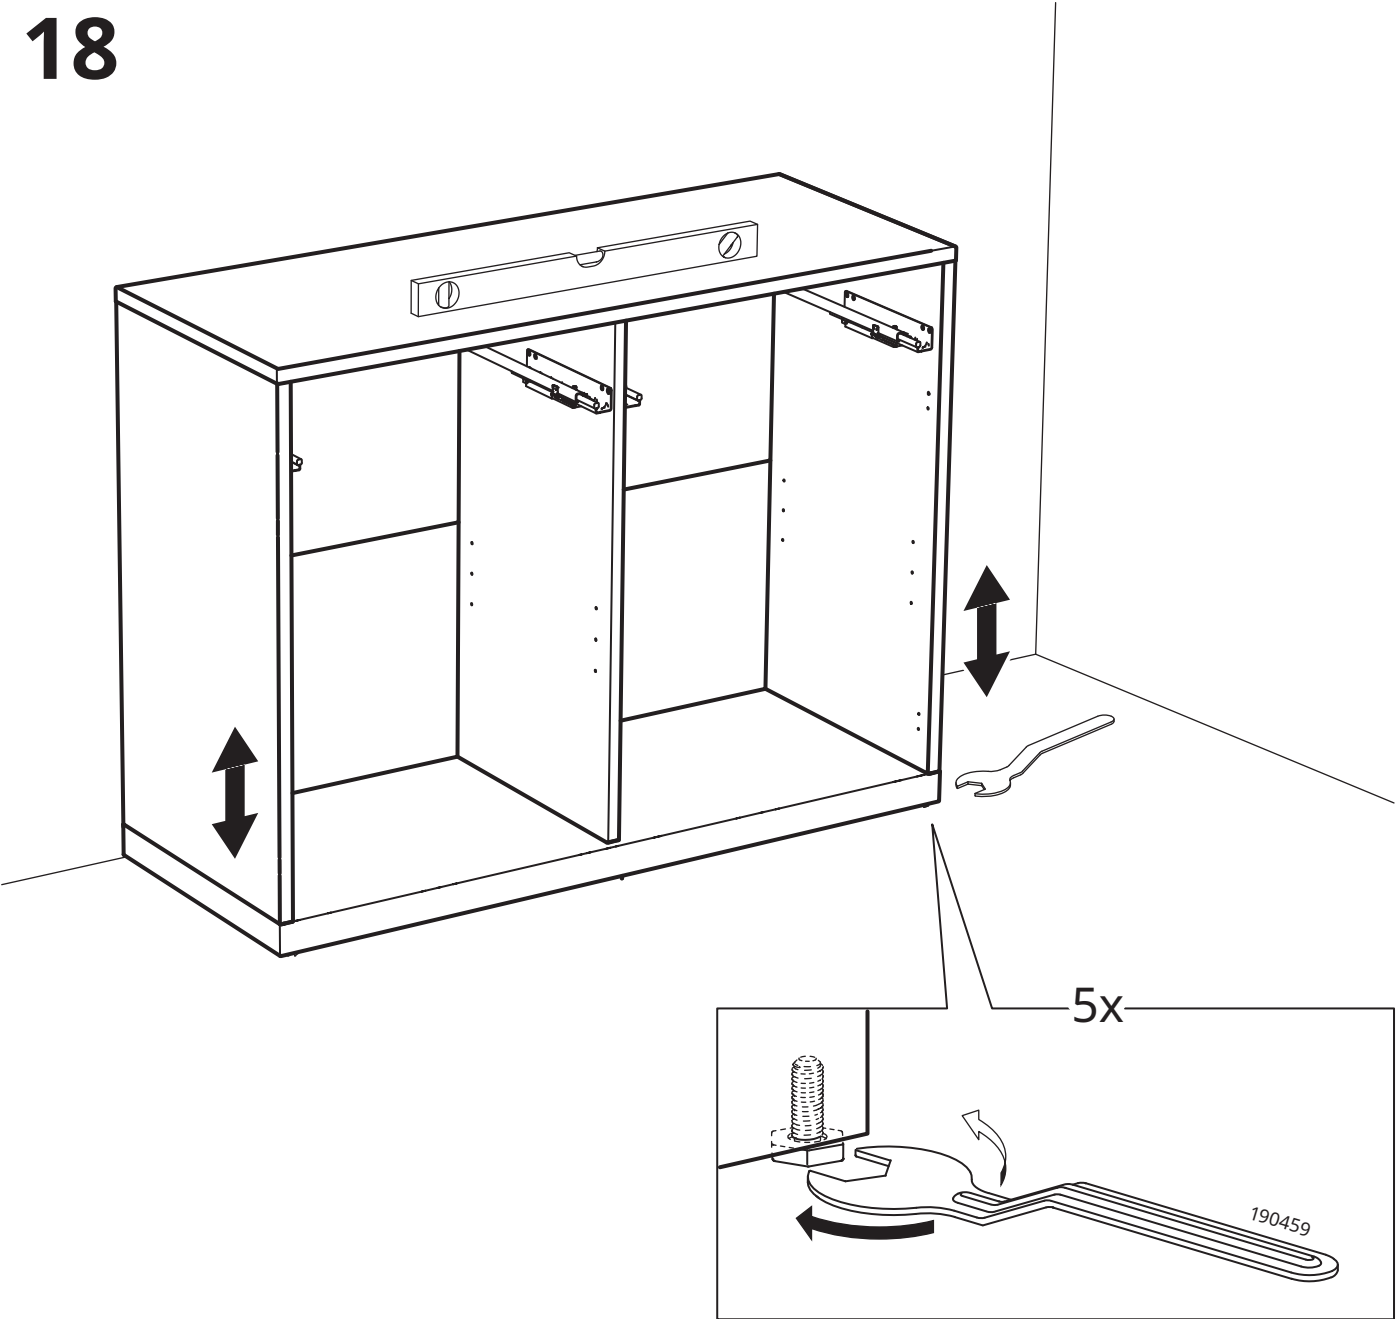 

19

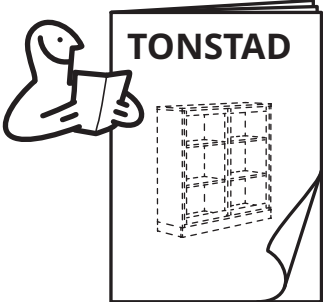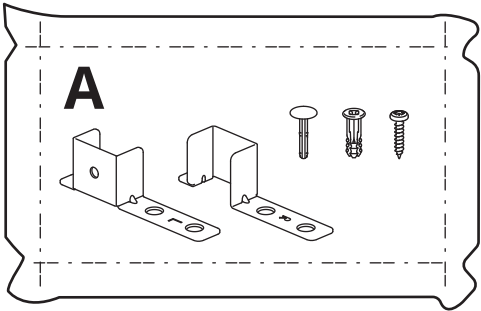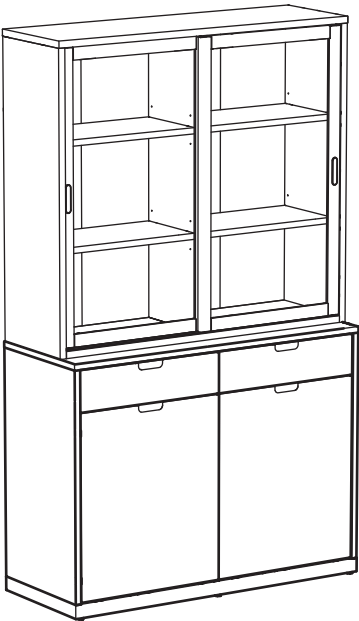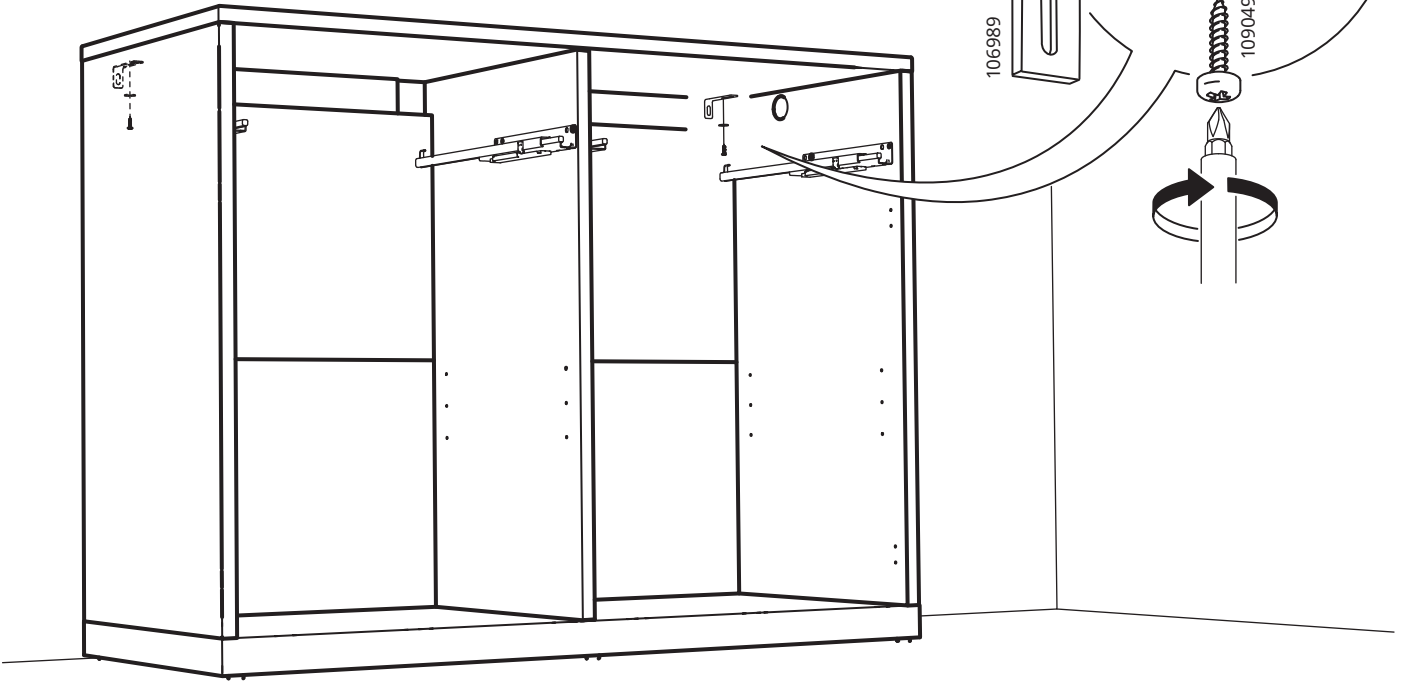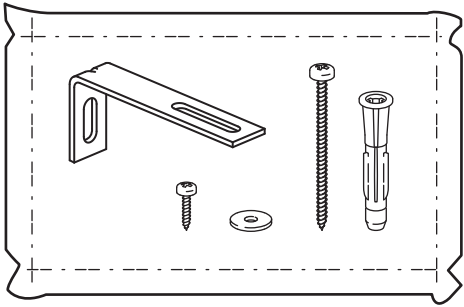     


20

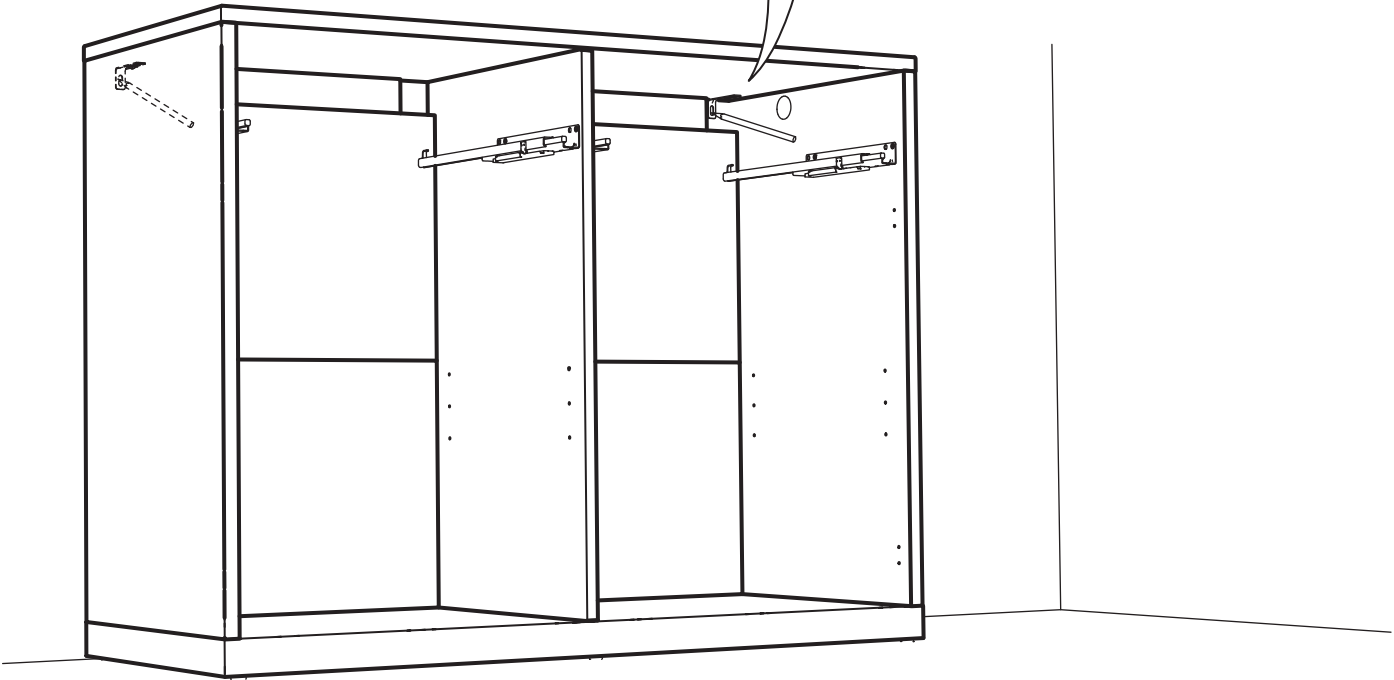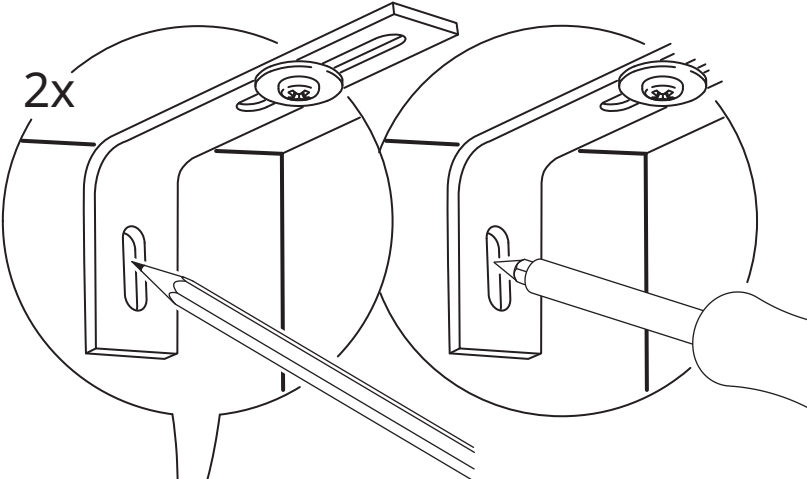  

21

x

 x

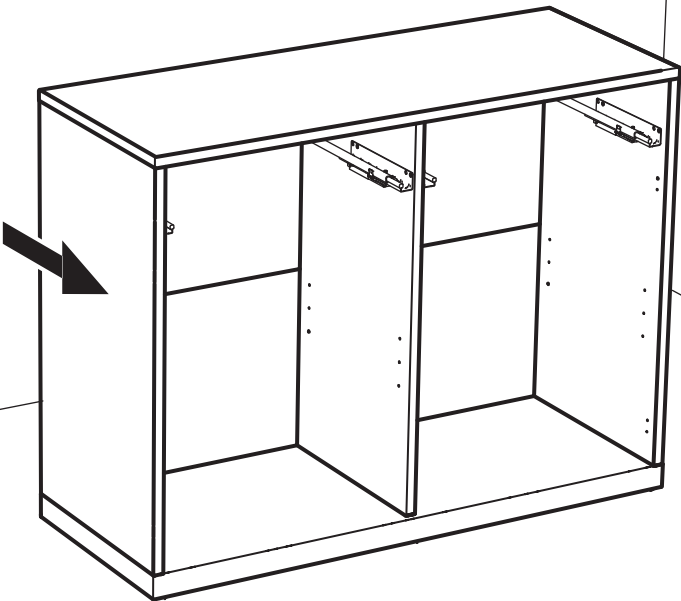




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

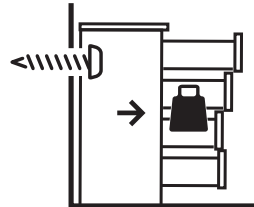

22

 
English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

עברית


הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.

A

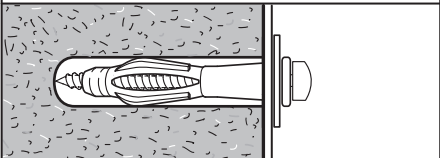


Ø 8 mm
(5/16")

 
1




2

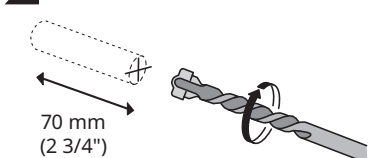 


70 mm
(2 3/4")

 3

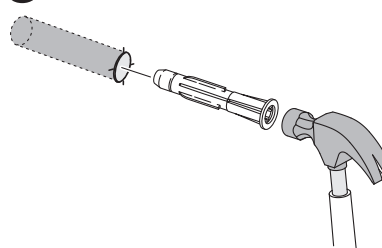


B

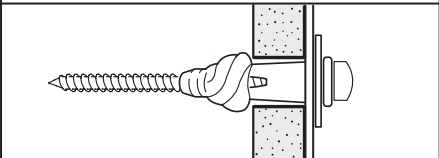 


Ø 8 mm
(5/16")

 
1




2

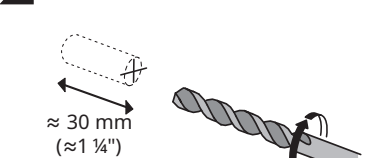 


≈ 30 mm
(≈ 1 1/4")

 3

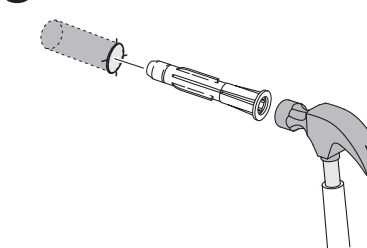


C

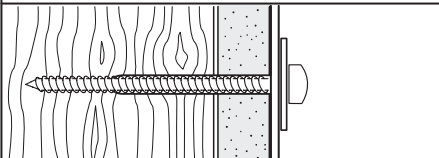 


Ø 3 mm
(1/8")

 
1





2

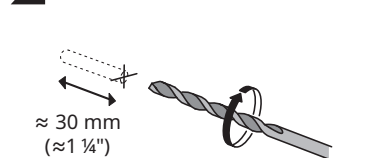 


≈ 30 mm
(≈ 1 1/4")

  3



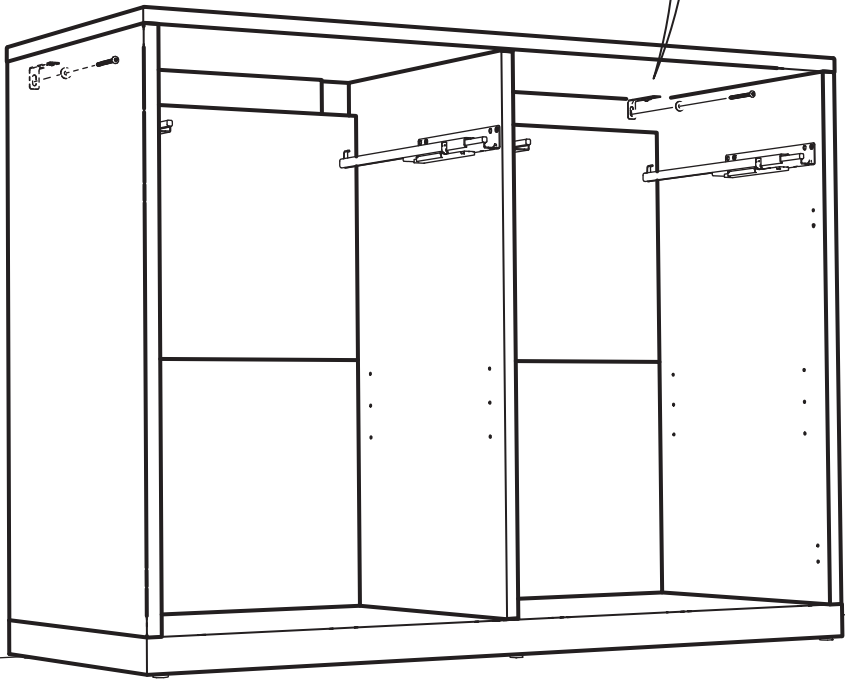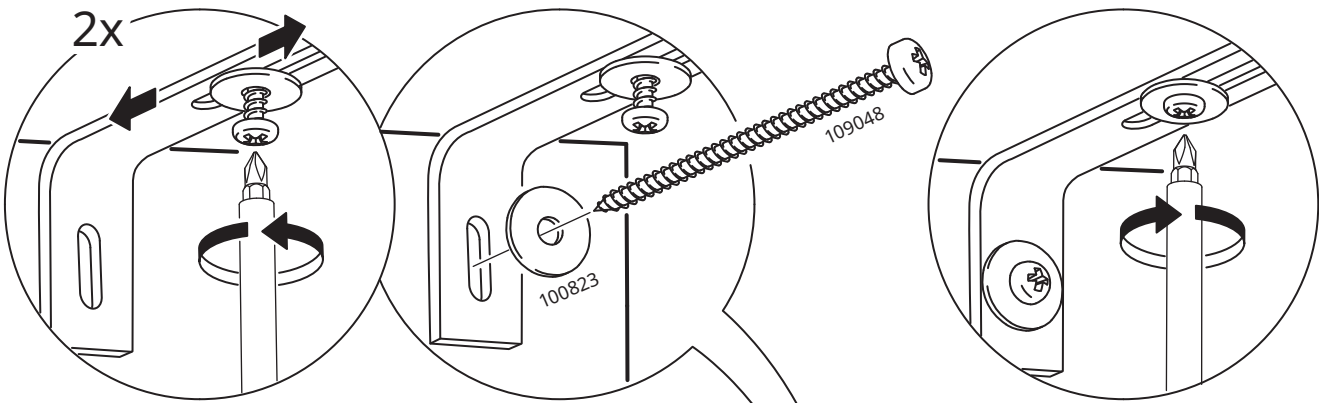


24

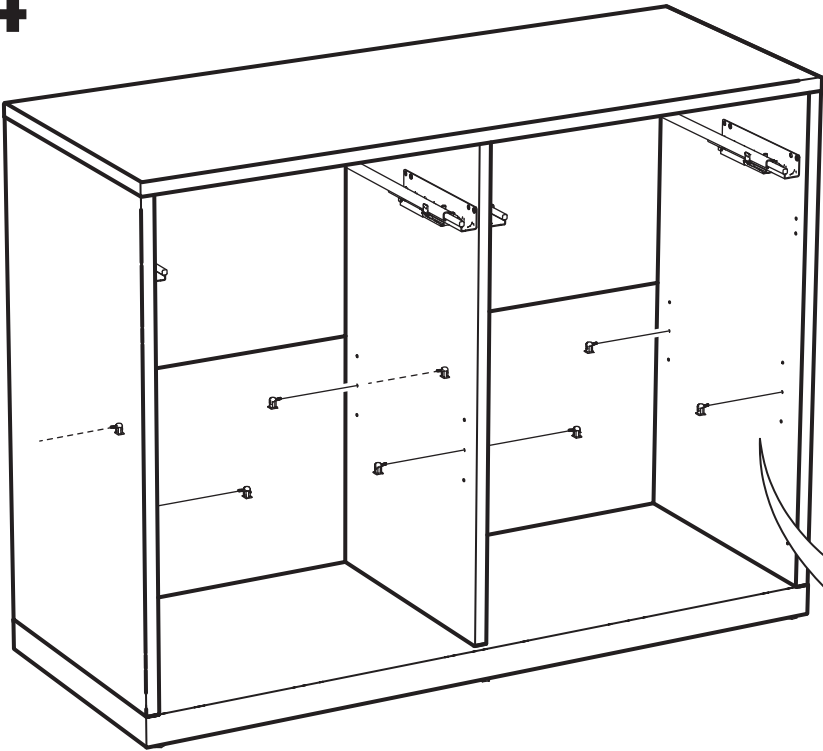 


8x

 10116968

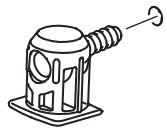

25

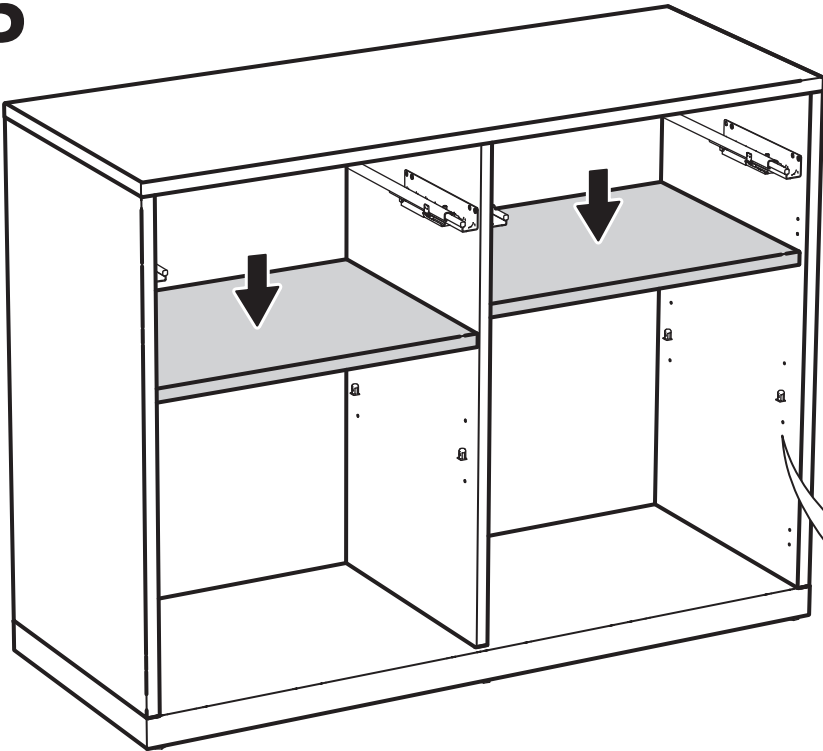 

8x

 


26

4x

107586



2

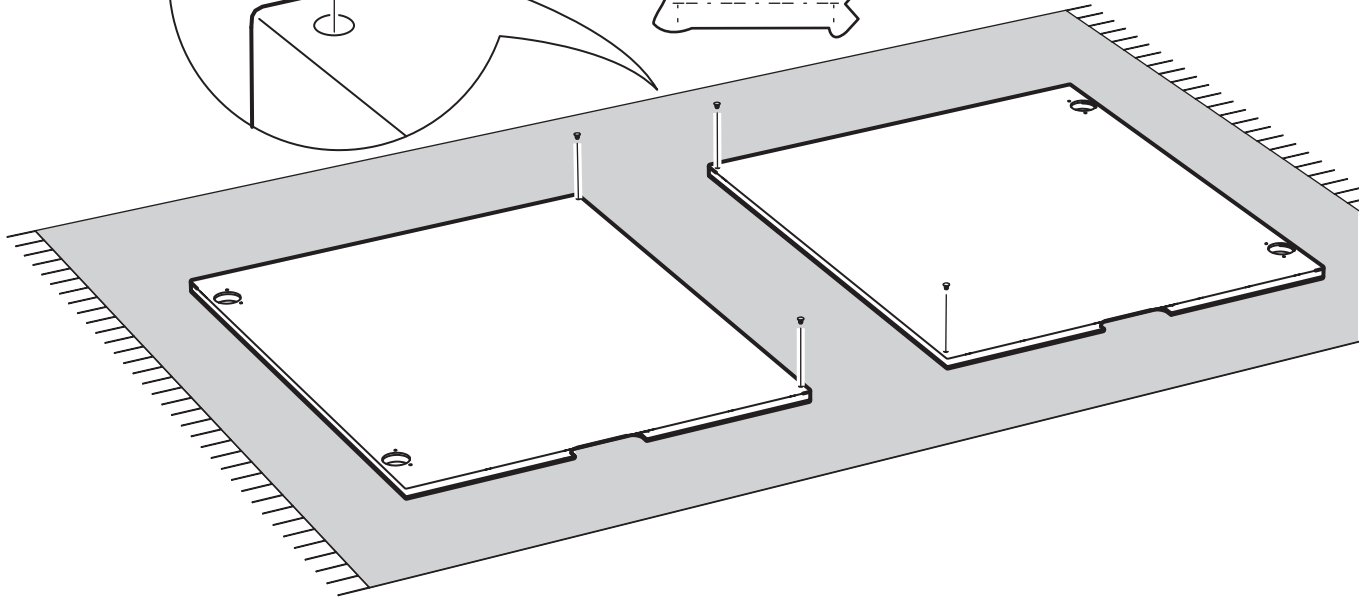


27

2x

  
175136

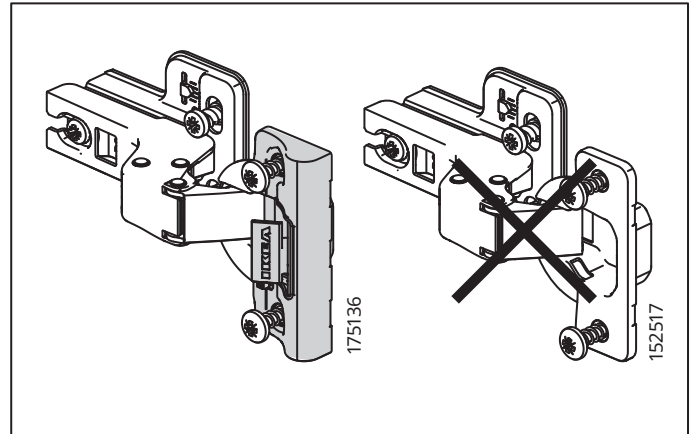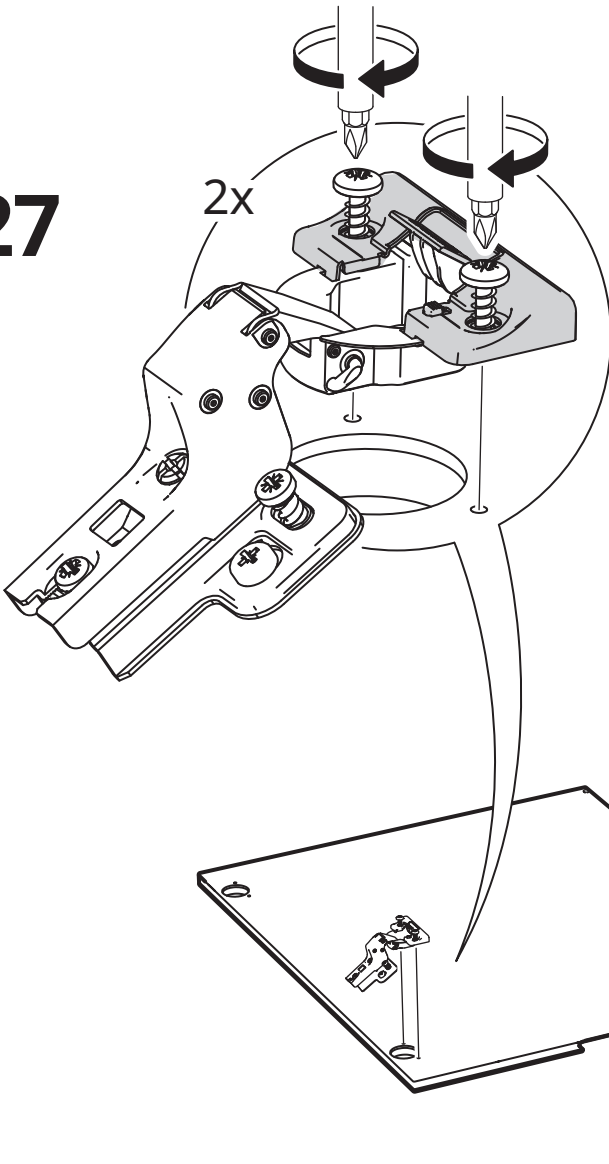


28

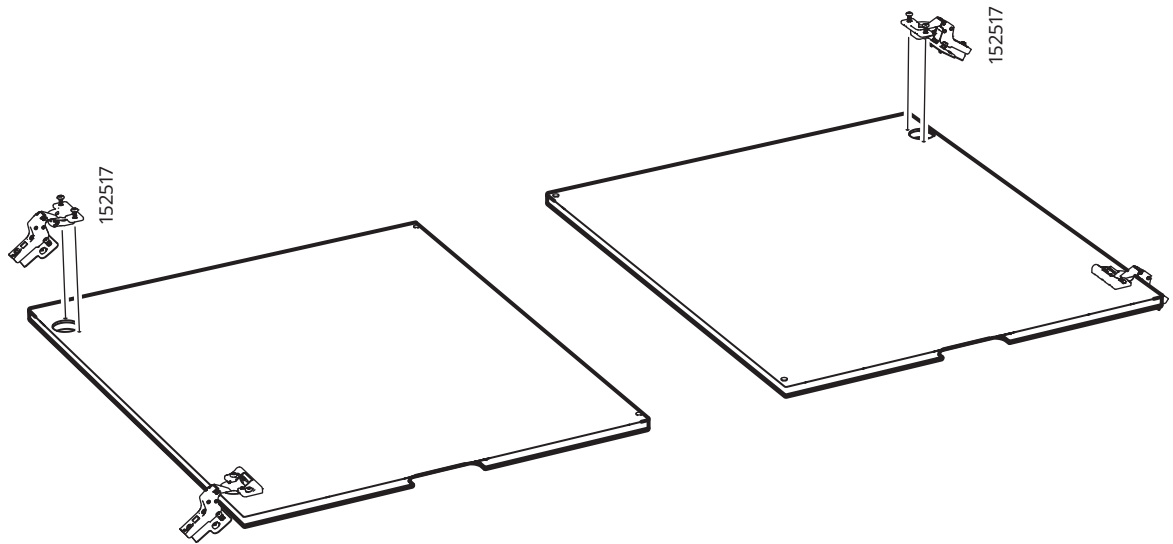 


29

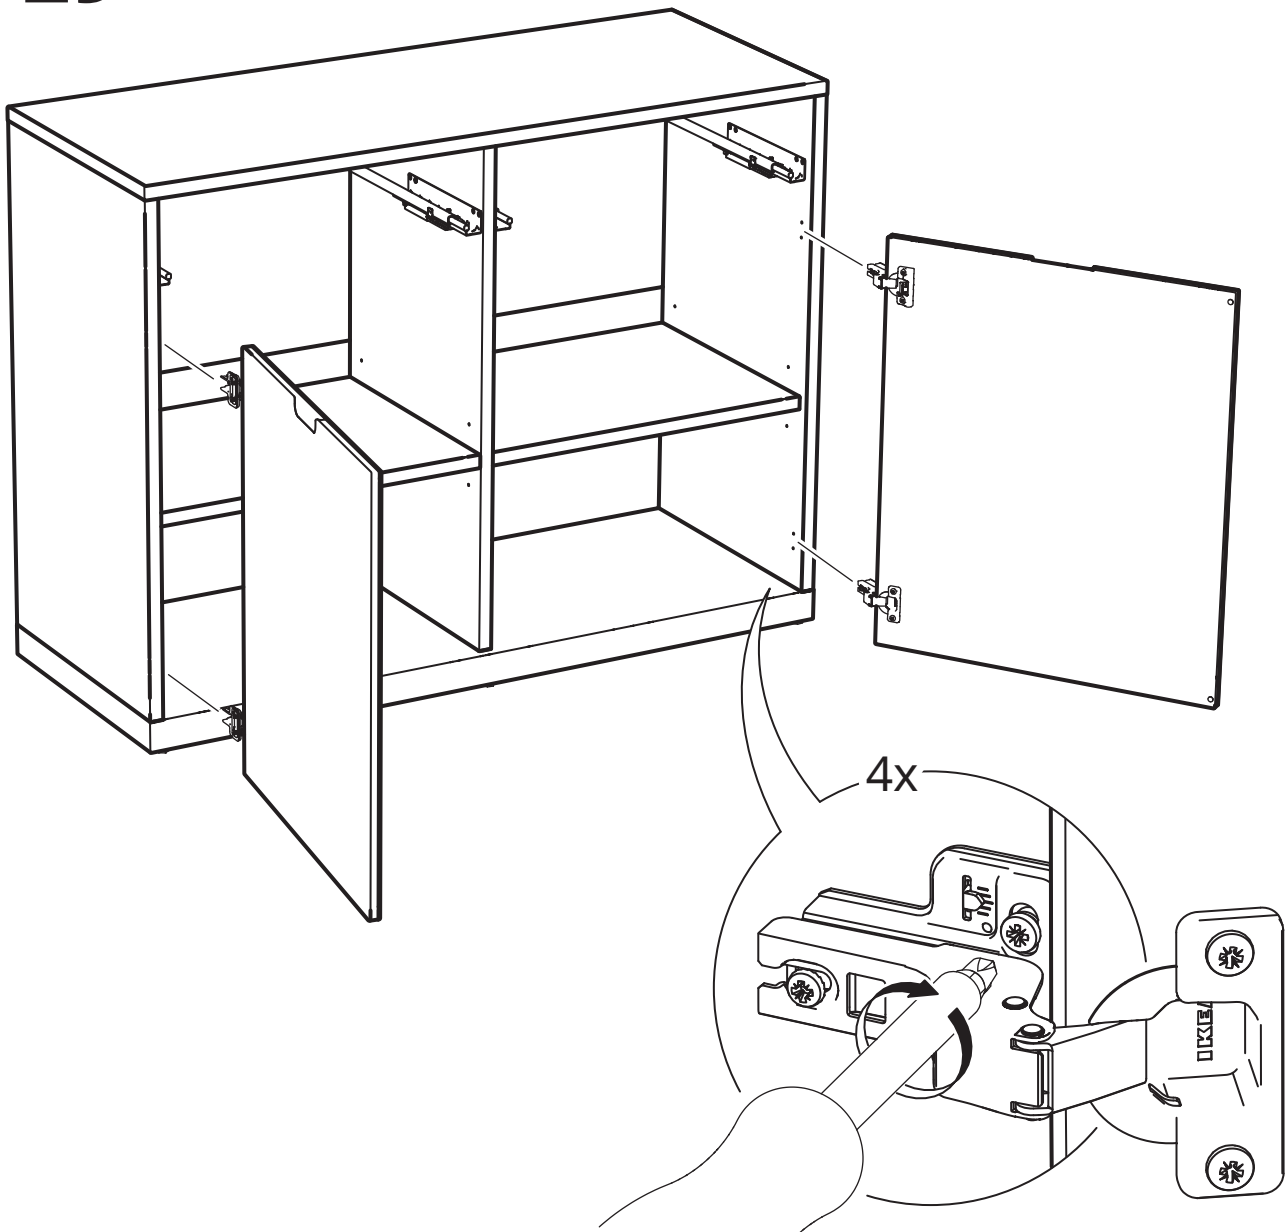 


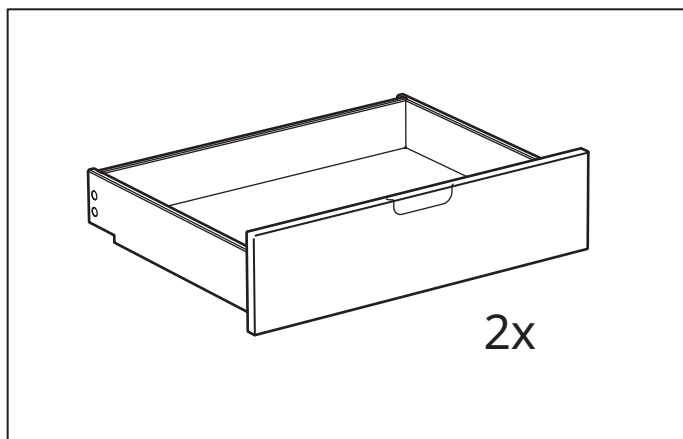 




30

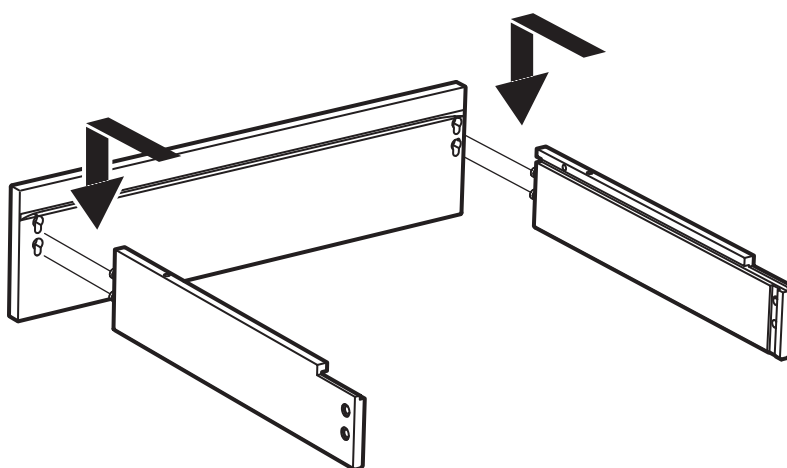 

31




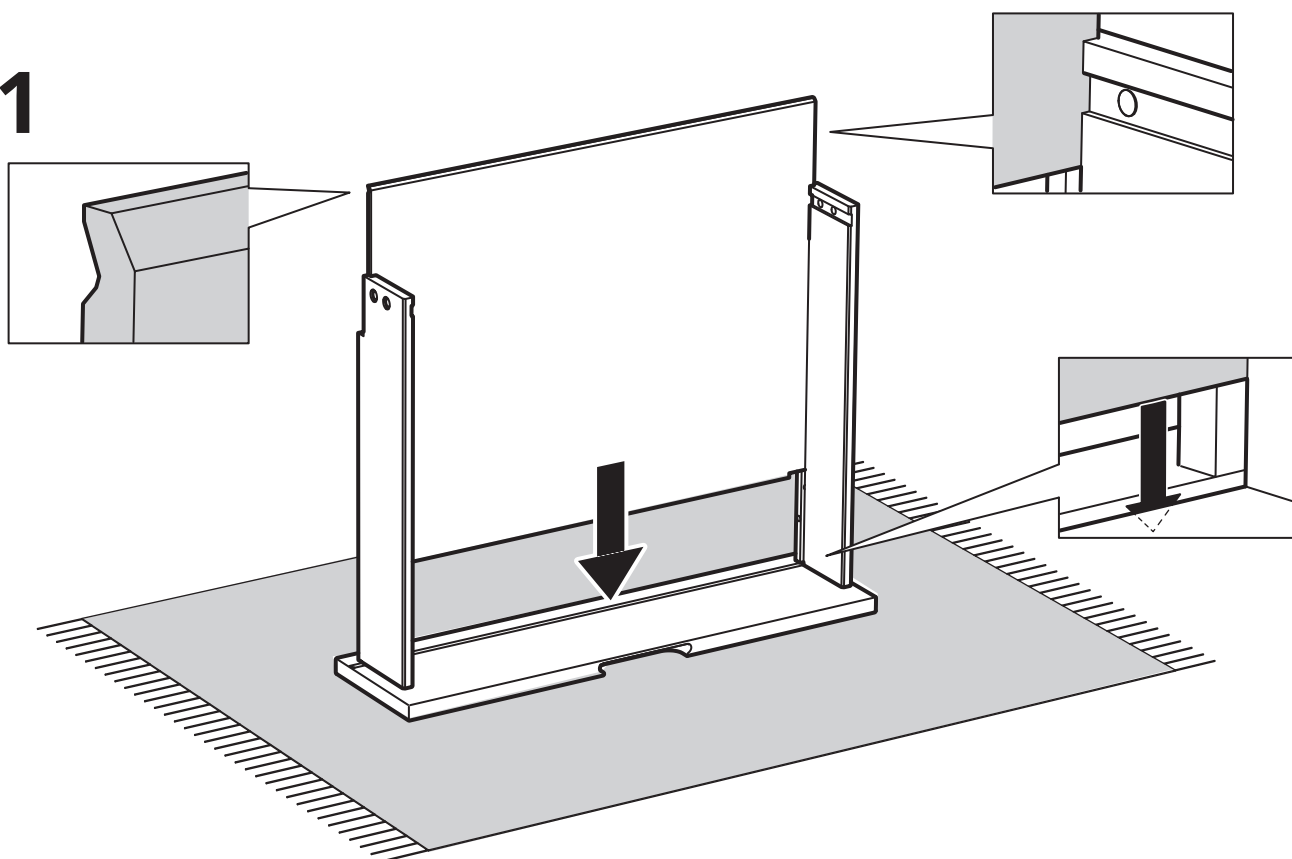 


32

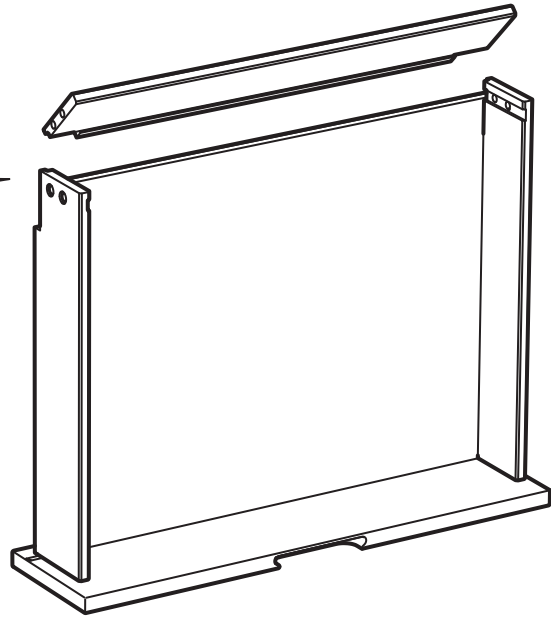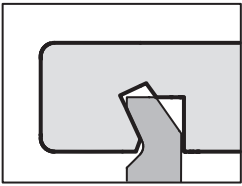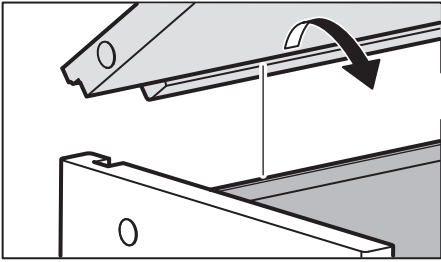   

33

    4x

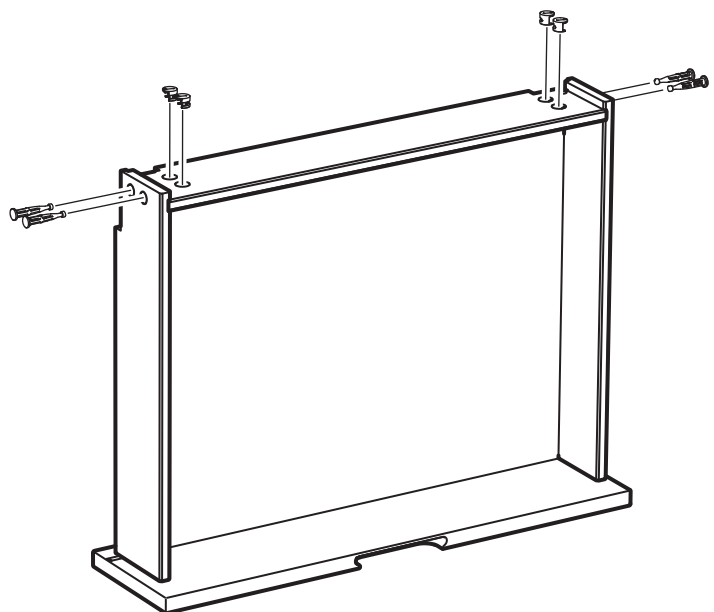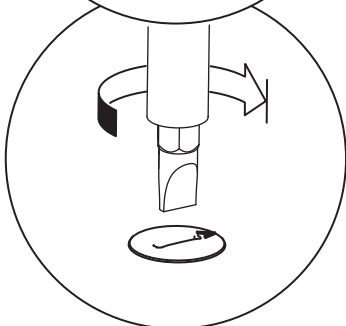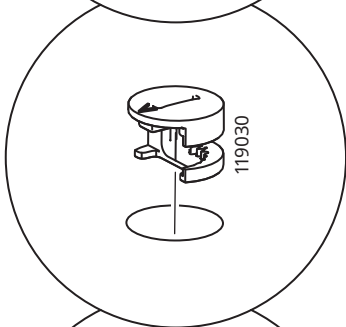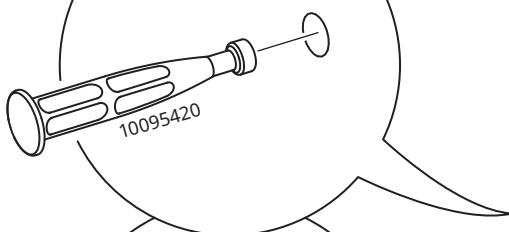

34

