 
 



STJÄRNSKOTT

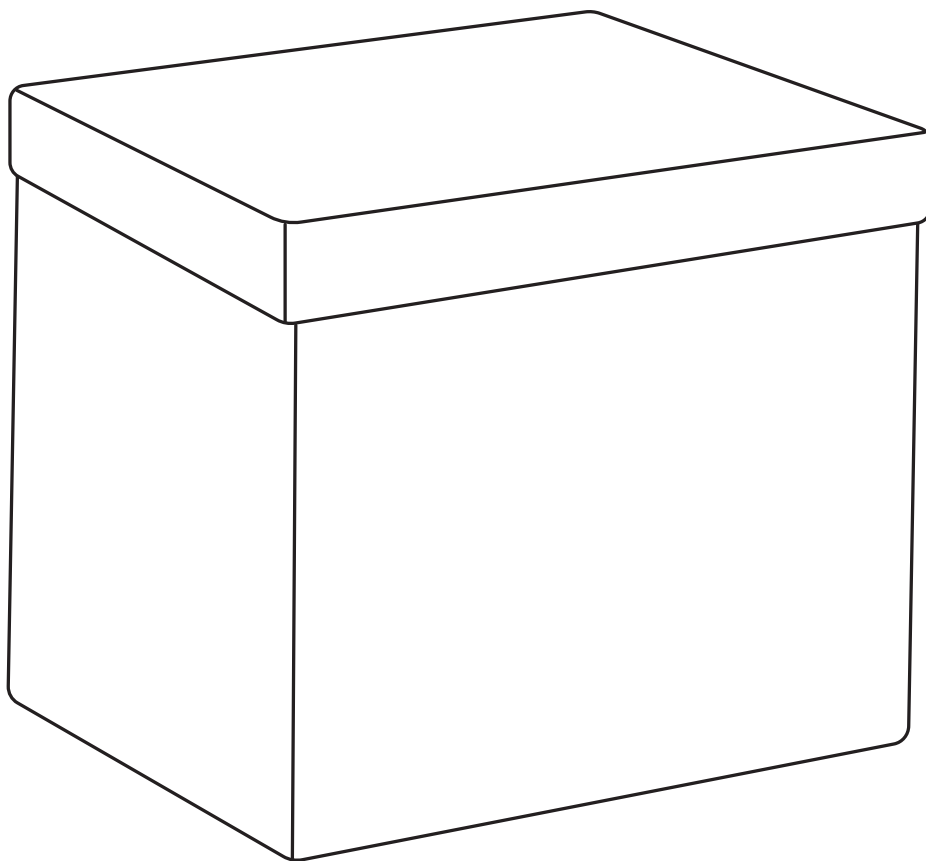


Design and Quality
IKEA of Sweden

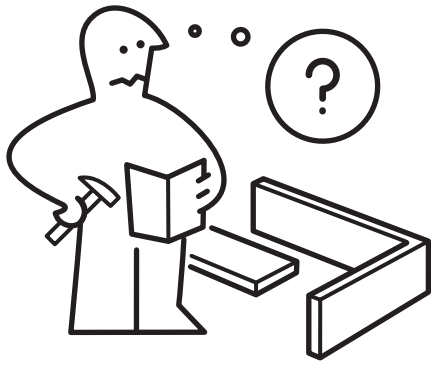

 
1




2

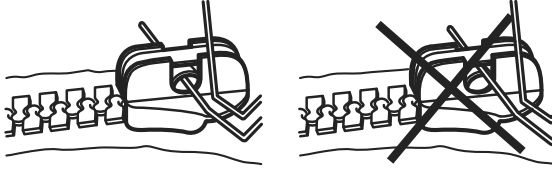 

3

 

4

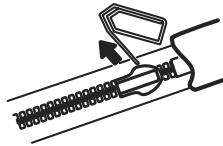 

5

 
 


ENGLISH





Child-safe zip

The zip fastener has no tab. This is to prevent children from opening the cover and putting the contents in their mouth. Open and close the zip fastener by pushing, for example, a paper clip through the loop on the slide. Important! Make sure you always remove the paper clip afterwards.



1

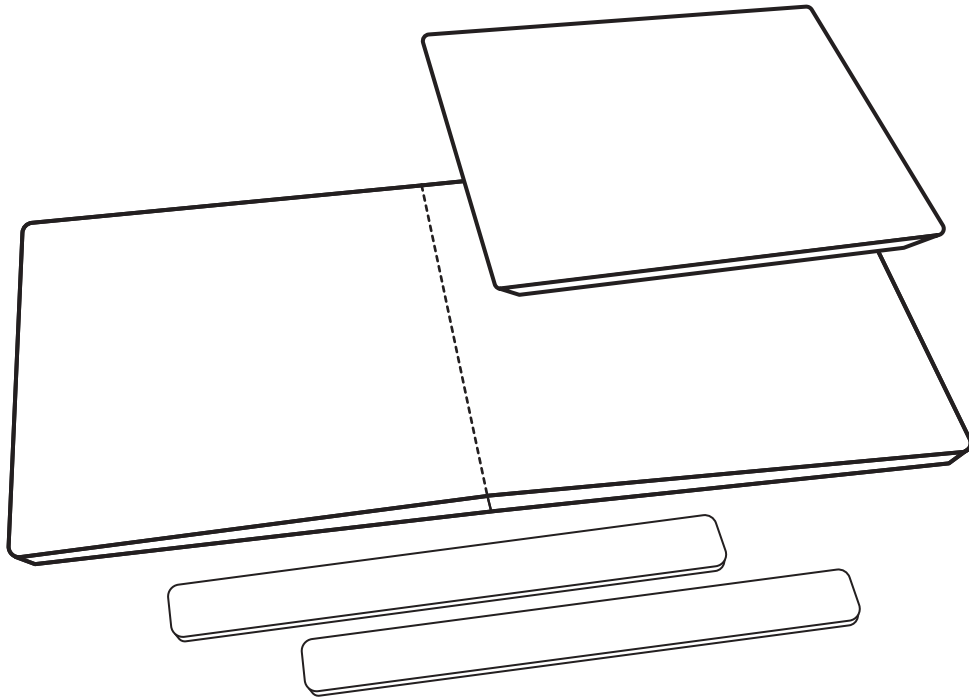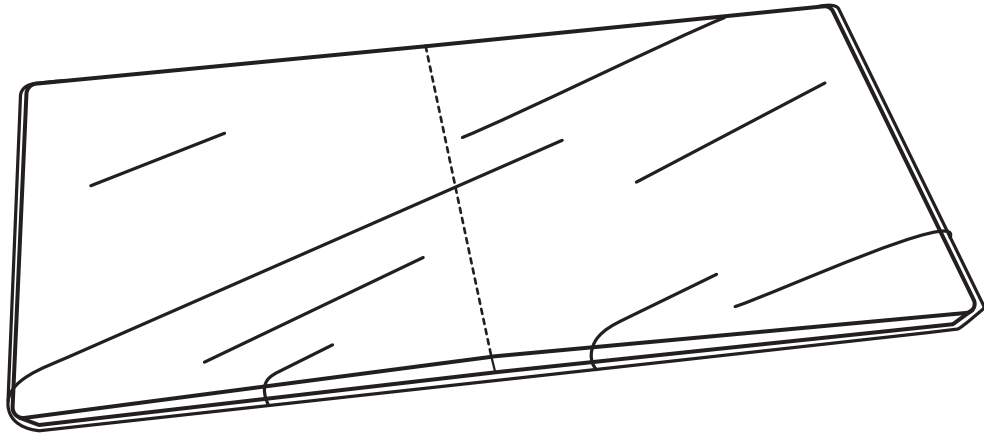

2

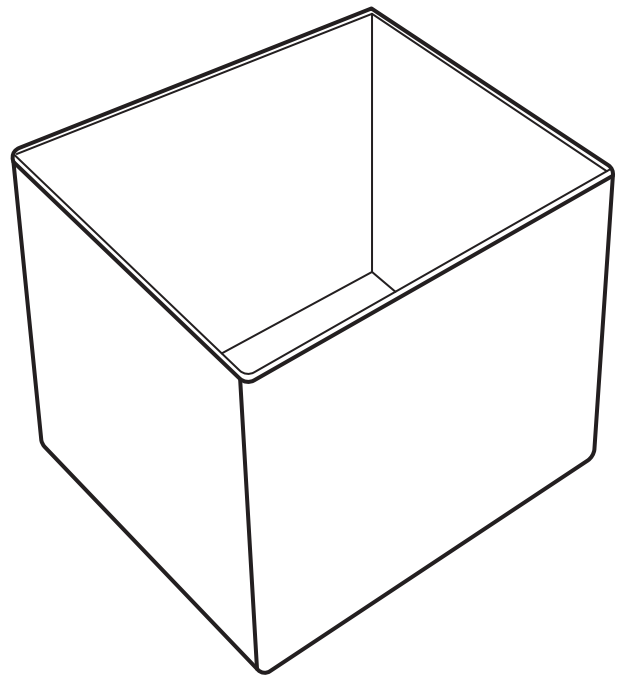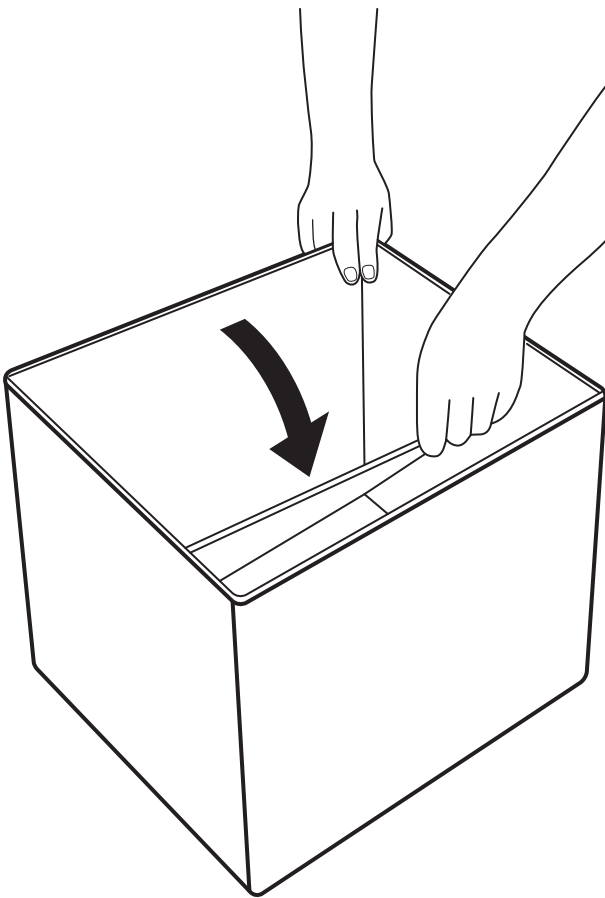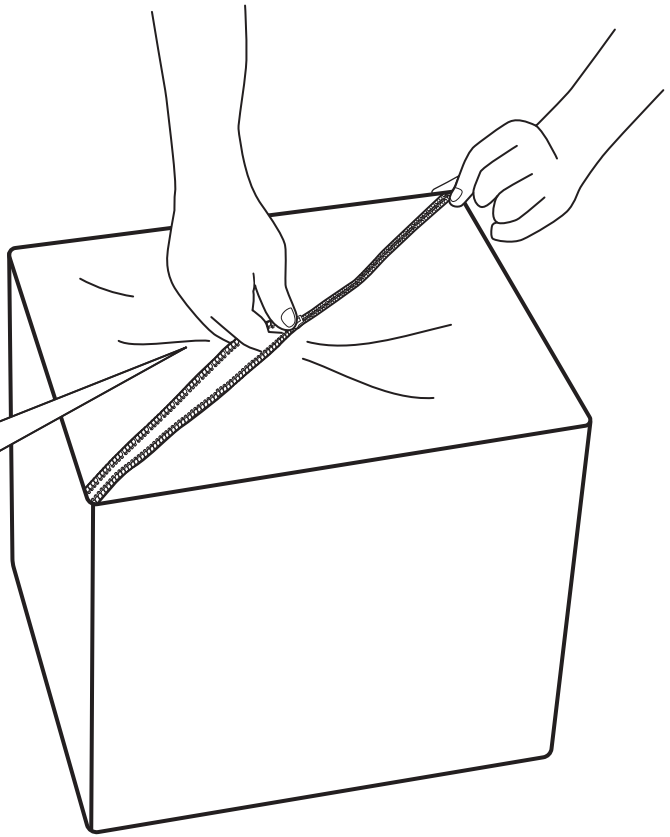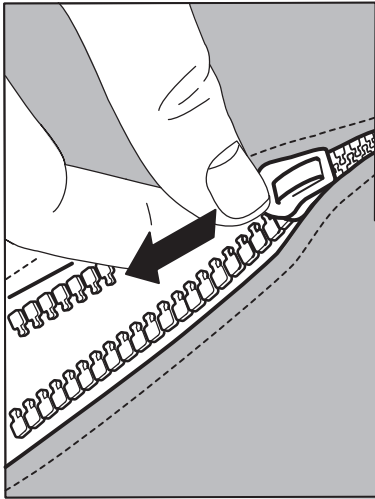    

3

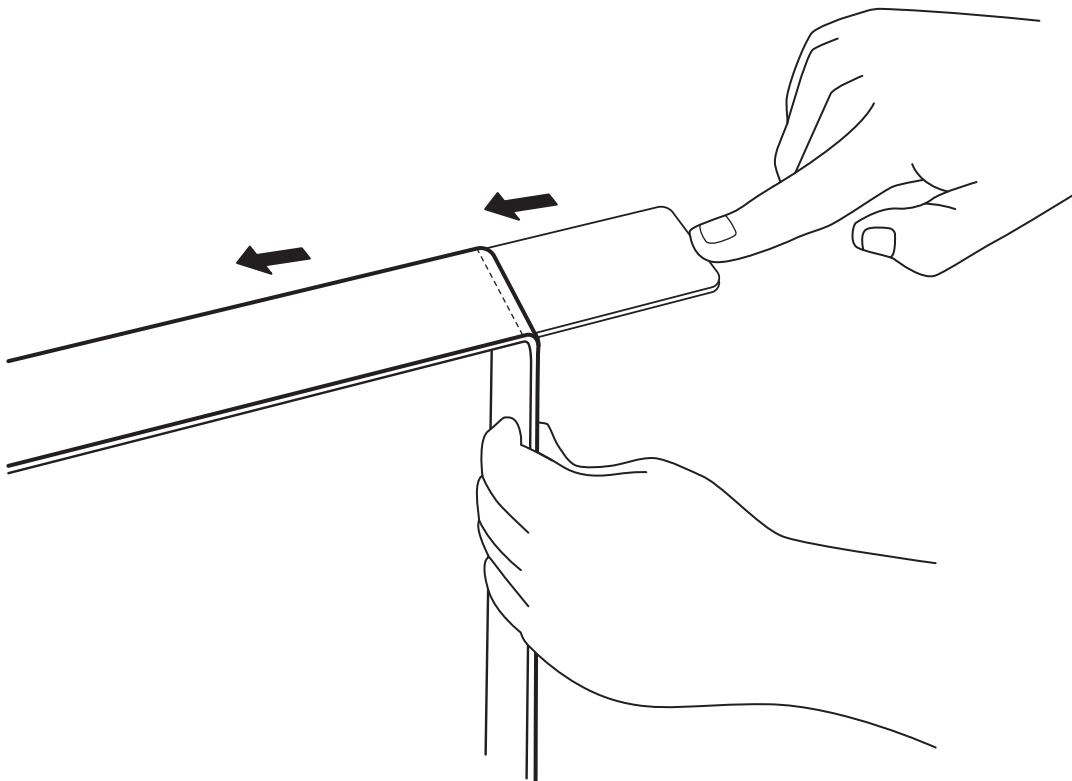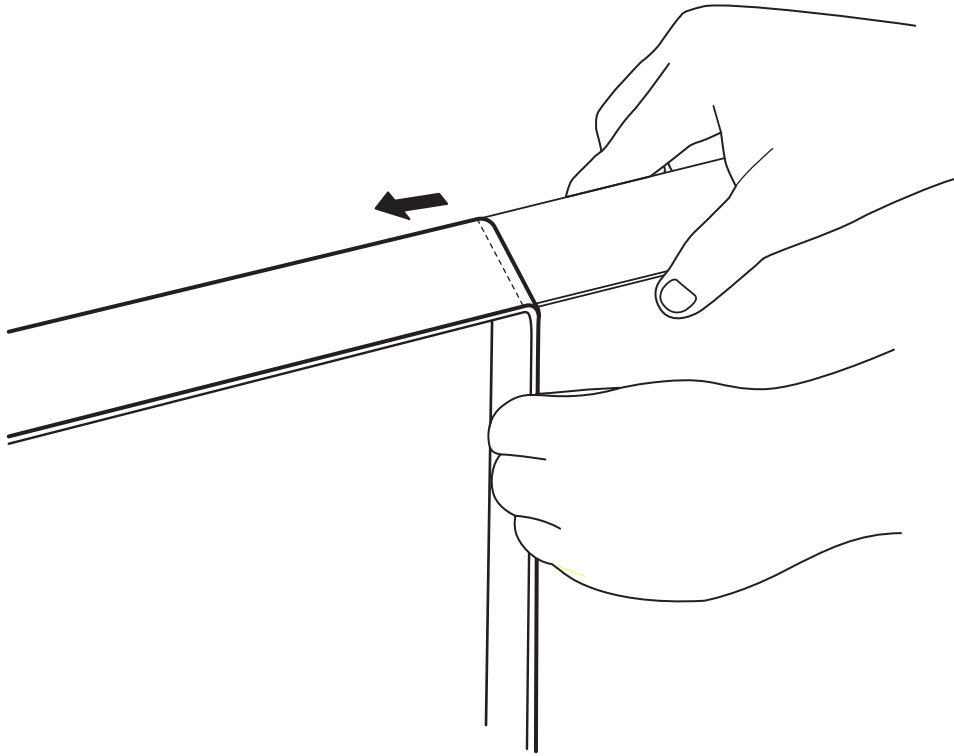  

4

