

BÄCKBRÄSMA



Design and Quality
IKEA of Sweden

- suitable for use on gas hob, glass ceramic hob, cast iron hob including induction hob.
- It is provided with non stick coating, which means you can cook food in little, or no oil at all
- The pan gets hot during use. Therefore, always use pot holders when moving the pan.
- The handle can get damaged when the pan is used on a gas hob.
- Do not let the pan boil dry, as the base becomes skew by overheating and the coating loses its non-stick properties.
- Use wooden or plastic utensils without sharp edges.
- If you have any problem with the product, contact your nearest IKEA store/Customer Service or visit www.ikea.com

Cleaning

- Before using this product for the first time, wash it by hand and dry carefully.
- For best results - grease the pan with a small amount of fat or oil. Then clean with cleaning agent and water, rinse and dry. Now the pan is ready for use.
- Always wash the product by hand after use.
- If a white film or stain appears due to minerals from water or starch from food – clean the pan with a sponge dipped in

vinegar or lemon concentrate.

- Do not use steel wool or anything that may scratch the coating. Dishwasher detergent can affect the surface.
- The base is slightly concave when cold, but expands to flatten out when heated. Always leave the cookware to cool before cleaning it. This allows the base to resume its shape and helps to prevent it from becoming uneven with use.

