

DVÄRGKRÄFTA



Design and Quality
IKEA of Sweden

English

Before first use

- Before using this product for the first time, wash, rinse and dry thoroughly.

Cleaning

- Dishwasher safe.
- Do not use steel wool or anything that may scratch the surface.
- The base is slightly concave when cold, but expands to flatten out when heated. Always leave the cookware to cool before cleaning it. This allows the base to resume its shape and helps to prevent it from becoming uneven with use.

How to use

- This cookware is suitable for use on gas hob, glass ceramic hob, cast iron hob including induction hob.
- Never let the cookware boil dry, because the base becomes skew when overheated.
- By placing the cookware on a cooking zone with the same or a smaller diameter as the cookware, you can save energy.
- Bear in mind that the cookware gets hot during use. Always handle with potholders.
- Always lift the cookware when moving it on a glass ceramic hob to avoid the risk of scratching the hob.
- If you have any problems with the product, please contact your nearest IKEA store/ Customer Service.

