

# TREVLIG

IN



Design and Quality  
IKEA of Sweden





Please refer to the last page of this manual for the only the After Sales Call Center Nos is in the User manuals national phone numbers.

**ENGLISH**


**4**

**Table of contents**


<b>Safety information</b>	<b>4</b>	<b>What to do if</b>	<b>9</b>
<b>Product description</b>	<b>5</b>	<b>Technical Data</b>	<b>10</b>
<b>Daily use</b>	<b>6</b>	<b>Electrical connection</b>	<b>11</b>
<b>Maintenance and cleaning</b>	<b>8</b>	<b>Environmental concerns</b>	<b>12</b>
<b>Installation</b>	<b>8</b>	<b>IKEA WARRANTY</b>	<b>13</b>


**Safety Information**

Your safety and that of others is paramount. This manual and the appliance itself provide important safety warnings, to be read and observed at all times.

 This is the safety alert symbol, pertaining to safety, which alerts users to potential hazards to themselves and others.

All safety messages are preceded by the safety alert symbol and the following terms:

 **DANGER** Indicates a hazardous situation which, if not avoided, will result in serious injury.

 **WARNING** Indicates a hazardous situation which, if not avoided, could result in serious injury.


All safety warnings give specific details of the potential risk present and indicate how to reduce risk of injury, damage and electric shock resulting from improper use of the appliance. Please observe the following instructions:

- The appliance must be disconnected from the power supply before carrying out any installation work.
- Installation and maintenance must be carried out by a qualified technician, in compliance with the manufacturer's instructions and local safety regulations. Do not repair or replace any part of the appliance unless specifically stated in the user manual.
- Regulations require that the appliance is earthed.
- The power cable must be long enough for connecting the appliance, once fitted

- in its housing, to the power supply.
- For installation to comply with current safety regulations, an all-pole disconnect switch with minimum contact gap of 3 mm must be utilized.
- Do not use multiple plug adapters or extension leads.
- Do not pull the power cable to disconnect it from the electrical supply.
- The electrical components must not be accessible to the user after installation.
- The appliance is designed solely for household use for cooking food. No other type of use is permitted (e.g. heating rooms). The Manufacturer declines all responsibility for inappropriate use or incorrect setting of the controls.
- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. They shall not play with the appliance. Cleaning and user maintenance shall not be made by children supervision.


- The accessible parts of the appliance may become very hot during use. Keep children away from the appliance and supervise them to ensure that they do not play with it.
- During and after use, do not touch the heating elements of the appliance. Do not allow the appliance to come into contact with cloths or other flammable materials until all the components have cooled sufficiently.
- Do not place flammable material on or near the appliance.
- Overheated oils and fats catch fire easily. Never leave the appliance unattended when cooking with fat and oil.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.
- A separator panel (not supplied) must be installed in the space under the appliance at a distance at least 20mm. If an Ikea separator is used, follow the instructions given in the panel reference material.
- No separator is needed if an oven is installed underneath.
- If you don't install the oven underneath, you must use the separator and between the separator and the cabinet you must install the drawer.
- If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Do not use steam cleaners.
- Unattended cooking on a hob with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
- Danger of fire: do not store items on the cooking surfaces.
- After use, switch off the hob element by its control and do not rely on the pan detector.

**Product description**

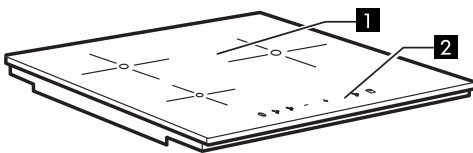

- 1** Induction cooking zone
- 2** Control panel


**Control panel**

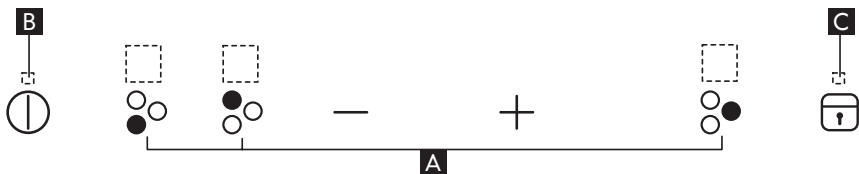

- A** Cooking zone controls and corresponding display
- B** On/Off
- C** Key lock

## Daily use

### Switching the hob ON/OFF

To switch the hob on, press the  button for approx. 2 seconds until the cooking zone displays light up. To switch off, press the same button until the displays switch off. All the cooking zones are deactivated.

If the hob has been in use, the residual heat indicator “H” remains lit until the cooking zones have cooled down.

If within 10 seconds of switching on, no function is selected, the hob switches off automatically.

### Before use

**Important:** The induction cooking zones will not switch on if pots and pans are not of the correct dimensions.

Only use pots bearing the symbol “INDUCTION SYSTEM”.

Before switching the hob on, position the pot on the desired cooking zone.

### Existing pots and pans:

Use a magnet to check whether pots or pans are suitable for use on the induction hob: pots are unsuitable if they cannot be magnetically detected.

1. Ensure pots have a smooth bottom, otherwise they may scratch the hob's glass ceramic surface. Check dishes.
2. Do not use empty pots on the hob. This could result in damage to both the glass ceramic surface and the bottom of the pots.
3. Never place hot pots or pans on the hob's control panel. This could result in damage.

### Switching on and adjusting cooking zones



Power indicator display

Selected cooking zone indication



Cooking zone positioning

Once the hob is switched on and the pan is positioned on the chosen cooking zone, select the zone using the corresponding button: the display shows level 0.

Each cooking zone has various power levels, adjustable with the +/- buttons, going from “1”: min. power, to “9”: max. power.

### Demo Mode

This hob is equipped with a demo mode which allows you to interact with the control panel without activating the corresponding cooking zones.

The activation and deactivation procedure must be carried out within 60 seconds of the appliance being connected to the power supply in the home.

To activate the demo mode, hold the two external cooking zone selection buttons at the same time for at least 5 seconds: “dE” appears on the central display. You can now explore the control panel functions.

To deactivate Demo mode, repeat the procedure, remembering first of all to disconnect the hob from the mains and then reconnect it, carrying out the procedure within 60 seconds of connection.

### Activation/deactivation of the acoustic signal

After switching on the hob, keep the “+” button and outermost selection button on the right (“control panel lock”) pressed at the same time for at least 3 seconds

**Deactivation of cooking zones**

Select the cooking zone you wish to switch off. Press the corresponding button (a dot lights up at the bottom right of the power level indicator).

Press the key “-” to set the level to “0”.

To switch off instantly, hold the zone selection button for 3 seconds. The cooking zone switches off and the residual heat indicator “H” lights up.

**Control panel lock**

This function locks the controls to prevent accidental switching on of the hob.

To activate the control panel lock function, hold button D for 3 seconds.

The control panel is locked except for the deactivation function. To deactivate the control panel lock, repeat the activation procedure.

The luminous dot goes off and the hob is active again.

The presence of water, liquid spilled from pots or any objects resting on the button below the symbol can accidentally activate or deactivate the control panel lock function.

**Control panel warnings****Residual heat indicator.**

The hob is fitted with a residual heat indicator for each cooking zone. These indicators alert the user when cooking zones are still hot.

If the display shows H, the cooking zone is still hot. If the residual heat indicator of a given cooking zone is lit, that zone can be used, for example, to keep a dish warm or to melt butter.

When the cooking zone cools down, the display goes off.

**Incorrect or missing pot indicator.**


If you are using a pot that is not suitable, not correctly positioned or not of the correct dimensions for your induction hob, the message “no pot” will appear in the display (see figure). If no pot is detected within 60 seconds, the hob switches off.

**Recommended pot bottom widths**

Ø Zone	Ø Pot
210 mm	150 - 210 mm
180 mm	120 - 180 mm
145 mm	100 - 145 mm

## Maintenance and cleaning

Clean the hob after each use in order to avoid damaging the surface and to prevent the formation of baked-on deposits which are difficult to remove. Before cleaning, make sure the cooking zones are switched off and that the residual heat indicator ("H") is not displayed.

 Steam cleaner is not to be used! Periodically check for dust under the appliance, near the cooling air inlet or the outlet openings.

This could hinder the ventilation and cooling of the electronic module and decrease the effectiveness of the hob.

To clean the hob, proceed as follows:

1. use a soft clean cloth, absorbent kitchen wipes or a proprietary cleaner for glass ceramic hobs. Do not use abrasive sponges and/or metal scouring pads.
2. Food spills should be cleaned off before they bake onto the glass ceramic surface. Sugar and foods with a high sugar content damage the glass ceramic surface and must be immediately removed using a scraper for glass. Caution! Glass scrapers have a very sharp blade and must be handled with care.
3. Remove any stubborn food residues with a scraper or proprietary detergents.
4. Salt, sugar and sand can scratch the glass ceramic hob: clean up any such spills on the hob immediately.

## Installation

In order to prevent damage of the product, please use the voltage stabilizer.

**What to do if ...**

<b>Error code</b>	<b>Problem</b>	<b>Possible cause</b>	<b>Solution</b>
The hob switches off and after 10 seconds emits an acoustic signal every 3 seconds	Continuous pressure on control panel area	Water or utensils on control panel	Clean the control panel
C81, C82	The control panel switches off because of excessively high temperatures	The internal temperature of electronic parts is too high	Wait for the hob to cool down before using it again
C83	The control panel indicates the error code hob off because of an issue on electronic circuit	Cooktop has been supplied with over voltage	Cooktop may be still used but call the After-Sales Service
C85	Hob is not able to give power to the pot	Pot is not suitable to the induction hob	Use another induction pot
F02 or F04 or C84	The connection voltage is wrong or issue to the power supply	The sensor detects a discrepancy between the appliance voltage and that of the mains supply	Disconnect the hob from the mains and check the electrical connection
F42 or F43	The connection voltage is wrong	The sensor detects a discrepancy between the appliance voltage and that of the mains supply	Disconnect the hob from the mains and check the electrical connection
F01, F05, F06, F07, F10, F12, F25, F33, F34, F36, F37, F46, F47, F48, F49, F58, F61, F62, F63, F72, F74, F77	Call the After-Sales Service and specify the error code		

**Before calling the After-Sales Service:**

1. Check “Troubleshooting guide” to see if you can eliminate the problem yourself
2. Turn the hob on again to check if correct operation has been restored.
3. If the problem persists, contact the After-sales Service.

Give the following information:

- type of fault;
- hob model;
- service number (i.e. the number after the word SERVICE on the dataplate under the hob and on the warranty certificate);

**SERVICE** 0000 000 00000



- your full address;
- your telephone number.

If any repairs are required, contact an authorised service centre, indicated in the warranty.


In the unlikely event that an operation or repair is carried out by an unauthorised technician, always request certification of the work carried out and insist on the use of original spare parts.

Failure to comply with these instructions may compromise the safety and quality of the product.

**Technical data**

Dimensions	
Width (mm)	580
Height (mm)	58
Depth (mm)	510
Voltage (V)	See Installation and electrical connection

The technical information are situated in the rating plate on the bottom side of the appliance.


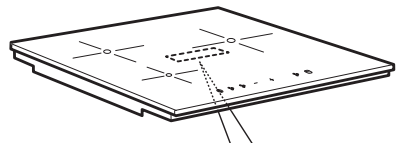


**Electrical connection**



**⚠ WARNING.** Disconnect the appliance from the power supply.

- Installation must be carried out by qualified personnel who know the current safety and installation regulations.
- The manufacturer declines all liability for injury to persons or animals and for damage to property resulting from failure to observe the regulations provided in this chapter.
- The power cable must be long enough to allow the hob to be removed from the worktop.
- Make sure the voltage specified on the dataplate located on the bottom of the appliance is the same as that of the home.





4. Close the cover (C) and screw on the terminal with the screw removed. For each connection to the network, the hob automatically checks for a few seconds.

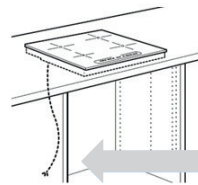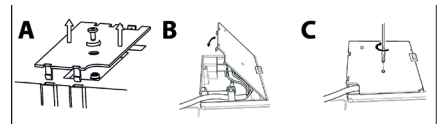

Connection to main power

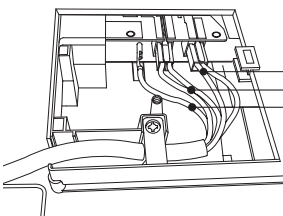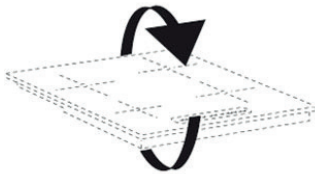

blue/grey  
black/brown  
yellow/green

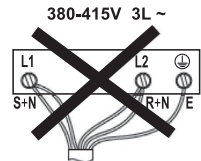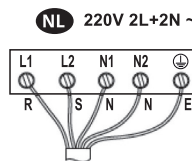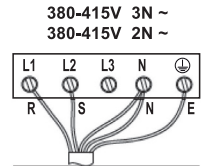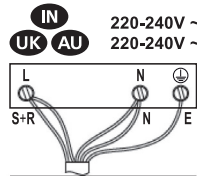

1. Remove the terminal cover (A) by unscrewing the screw and insert the cover into the hinge (B) of the terminal.
2. Plug the power cord into the clamp and connect the wires to the terminal block as shown in the wiring diagram located near the terminal.
3. Secure the power cable with the cable clamp.

= E (yellow-green)

**N1** = N (blue)


**N2** = N (blue)

**L1** = R (black)

**L2** = S (brown)

## Environmental concerns


### Disposal of packaging materials

The packaging material is entirely recyclable and marked with the recycling symbol . Do not dispose of the various packaging materials carelessly, but do so responsibly and in full compliance with local authority regulations governing waste disposal.

### Scrapping

This appliance is marked in compliance with European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring that this appliance is scrapped suitably, you can help prevent potentially damaging consequences for the environment and health.



The symbol  on the appliance or accompanying documentation indicates that this product should not be disposed of as unsorted municipal waste but must be taken to a collection point for the treatment of WEEE.

### Energy saving

For optimum results, observe the following advice:

- Use pots and pans whose bottom diameter is equal to that of the cooking zone.
- Only use flat-bottomed pots and pans.
- If possible, keep pot lids on when cooking.
- Make sure you place the pot or pan in the centre of the cooking zone outlined on the hob.

## IKEA WARRANTY

### How long is the IKEA warranty valid?

This warranty is valid for five years from the original date of purchase of your appliance at IKEA. Proof of purchase is required. If service work is carried out under warranty, this will not extend the warranty period for the appliance.

### Who will execute the service?

IKEA Service Provider will provide the service through its own service operations or authorized service partner network.

### What does this warranty cover?

The warranty covers faults of the appliance, which have been caused by faulty construction or material faults from the date of purchase from IKEA. This warranty applies to domestic use only. The exceptions are specified under the headline "What is not covered under this warranty?" Within the warranty period, the costs to remedy the fault e.g. repairs, parts, labour and travel will be covered, provided that the appliance is accessible for repair without special expenditure. Replaced parts or appliance become the property of IKEA.

### What will IKEA do to correct the problem?

IKEA will examine the product and decide, at its sole discretion, if it is covered under this warranty. If considered covered, IKEA will then, at its sole discretion, either repair the defective product or if the product is found to be not repairable in its sole discretion (a) IKEA will replace it with the same or a comparable product or (b) refund it as per the prevailing depreciation rules of IKEA.

### What is not covered under this warranty?

- Normal wear and tear.
- Deliberate or negligent damage, damage caused by failure to observe operating instructions, incorrect installation or by connection to the wrong voltage, fluctuating voltage, improper electrical circuit, blown fuse, damage caused by chemical or electrochemical reaction, rust,

corrosion or water damage including but not limited to damage caused by excessive lime in the water supply, damage caused by abnormal environmental conditions, damage caused by rodents/insects, water, lightening, pest infestation or other acts of god.

- Consumable parts including batteries and lamps.
- Non-functional and decorative parts which do not affect normal use of the appliance, including any scratches and possible colour differences.
- Accidental damage caused by foreign objects or substances and cleaning or unblocking of filters, drainage systems or soap drawers.
- Damage to the following parts: ceramic glass, plastic parts accessories, crockery and cutlery baskets, feed and drainage pipes, seals, lamps and lamp covers, screens, knobs, casings and parts of casings. Unless such damages can be proved to have been caused by production faults.
- Repairs or any alteration not carried out by our appointed service providers and/or an authorized service contractual partner or where non-original parts have been used.
- The use of the appliance in a non-domestic environment i.e. professional use or any alteration, abuse or misuse of the appliance.
- the Serial number or barcode label of the appliance is tampered with, defaced, missing or altered
- Transportation damages. If a customer transports the product to his home or another address, IKEA is not liable for any damage that may occur during transport. However, if IKEA delivers the product to the customer's delivery address, then damage to the product that occurs during this delivery will be covered by IKEA.

In cases the above conditions are observed at the time of visit by the Authorized Service Center service partner then the Purchaser shall be liable to bear the repair charges incurred during the process and price of other parts/consumables/spares not covered in Warranty and/or repair charges for the parts covered under warranty if the same is damaged by the Customer or otherwise gets damaged due to non adherence to User manual or warranty terms.

### How country law applies

The IKEA warranty gives you specific legal rights, which cover or exceed all the local legal demands. However these conditions do not limit in any way consumer rights described in the local legislation.

The courts at New Delhi have exclusive jurisdiction for settling the claims or disputes or matters arising out of present Warranty.

### Area of validity

This IKEA warranty applies only to products purchased in India. This Warranty shall be restricted to and valid in India.

An obligation to carry out services in the framework of the warranty exists only if the appliance complies with:

- The technical specifications of the country in which the warranty claim is made;
- The Assembly Instructions and User Manual Safety Information.

### AFTER SALES for IKEA appliances

Please don't hesitate to contact IKEA to:

- make a service request under this warranty;
- ask for clarification on functions of IKEA appliances

To ensure that we provide you with the best assistance, please read carefully the Assembly Instructions and/or the User Manual before contacting us.

### How to reach us if you need our service



**1800-419-4532**

**Opening time  
10.00 – 22.00**

The IKEA after sales customer service centre will assist you on the phone with basic trouble shooting for your appliance at the time of service call request.

**In order to provide you a quicker service, please also always refer to the IKEA article number (8 digit code) placed on the rating plate of your appliance.**

While IKEA will make every effort to carry out repairs/ replacement of parts under this Warranty as soon as possible; it is expressly made clear that IKEA or its authorised service partner shall not be liable to do so within specified period of time.

It is entirely left to IKEA's discretion to effect repairs/replacements of parts at the site of installation or at any service station of its its Authorized Service Center(s).

### SAVE THE PROOF OF PURCHASE!

It requires for the warranty to apply. The proof of purchase also reports the IKEA name and article number (8 digit code) for each of the appliances you have purchased.

### Do you need extra help?

For any additional questions not related to After Sales of your appliances please contact your nearest IKEA store call centre. We recommend you read the appliance documentation carefully before contacting us. IKEA reserves the right to alter the terms and conditions of the present Warranty at any time with its sole discretion without any prior notice.





23218

AA-2015422-1