 
 
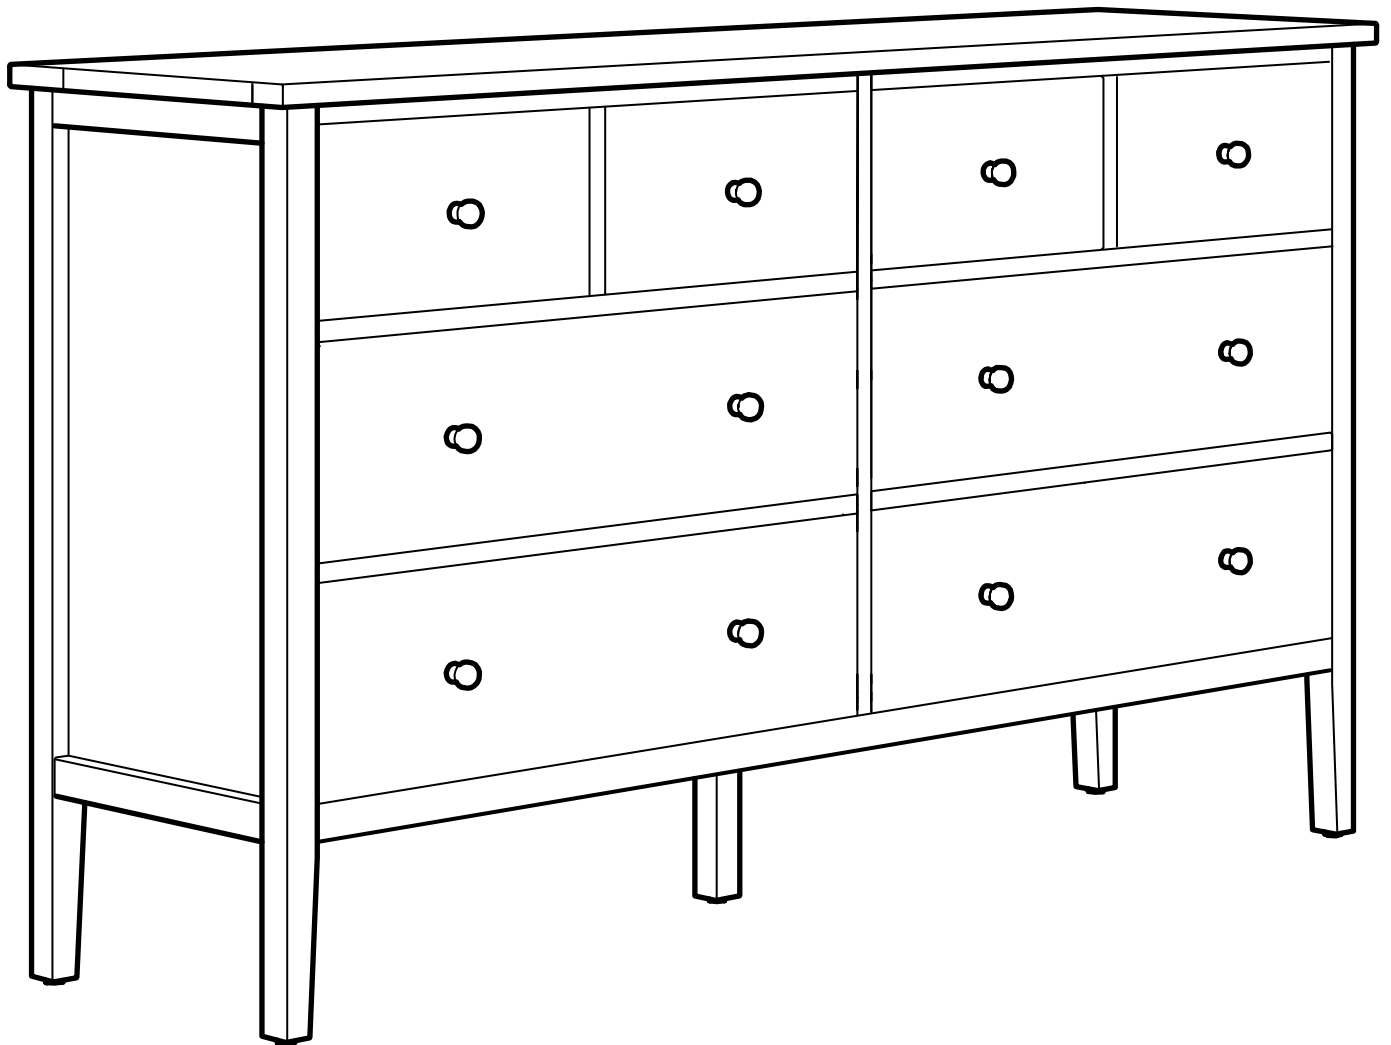 
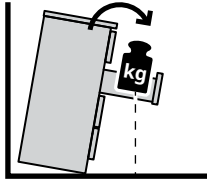 


GULLABERG

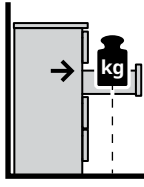

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

NEVER put a TV on this product.

NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

 
 
 
NEVER open more than one drawer at a time.

 
 
 
DO NOT defeat or remove the drawer interlock system; it is an important stability and safety system.

Place heaviest items in the lowest drawers.

English



Read and follow each step of the instruction carefully.

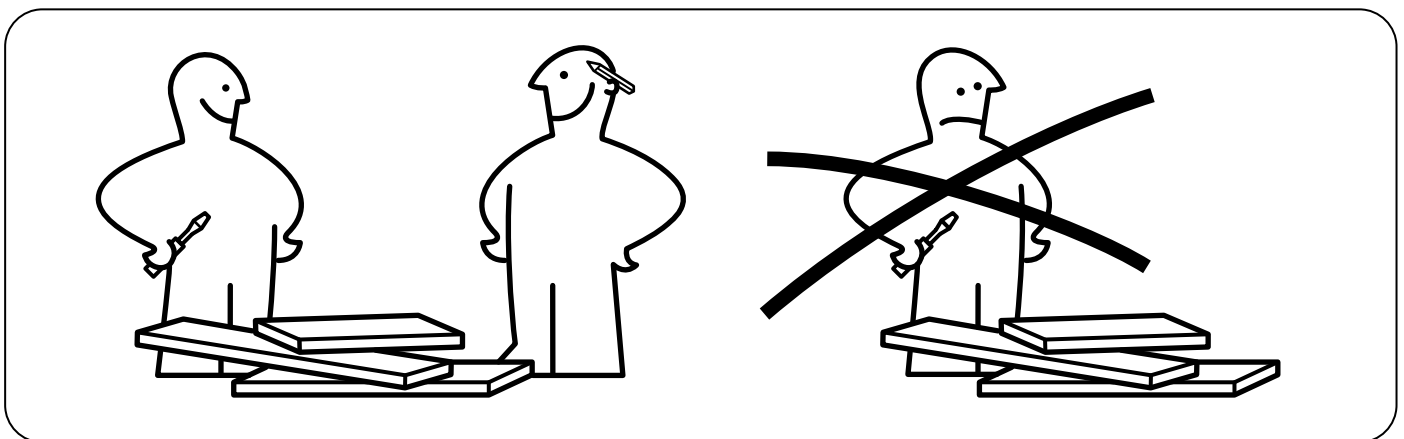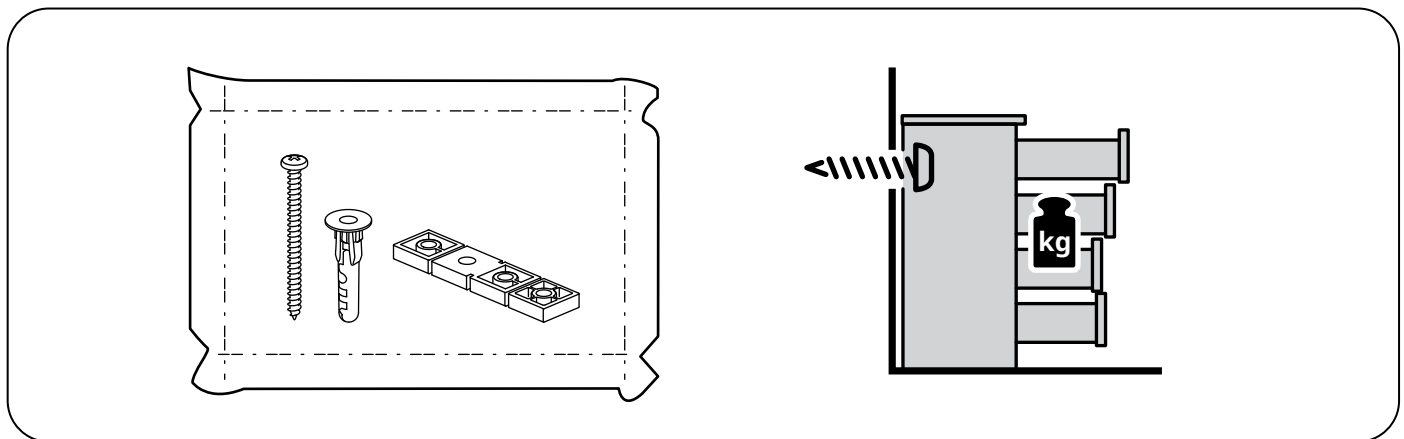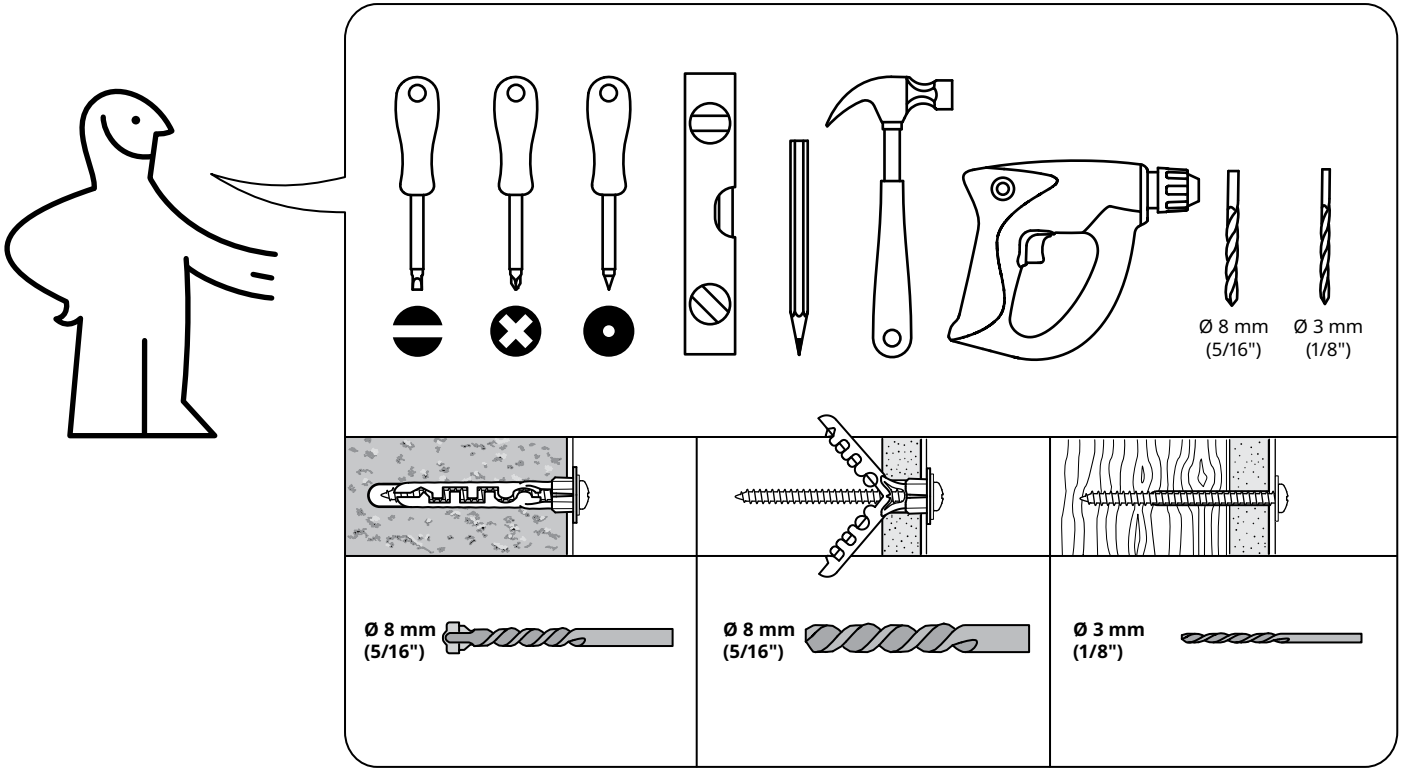

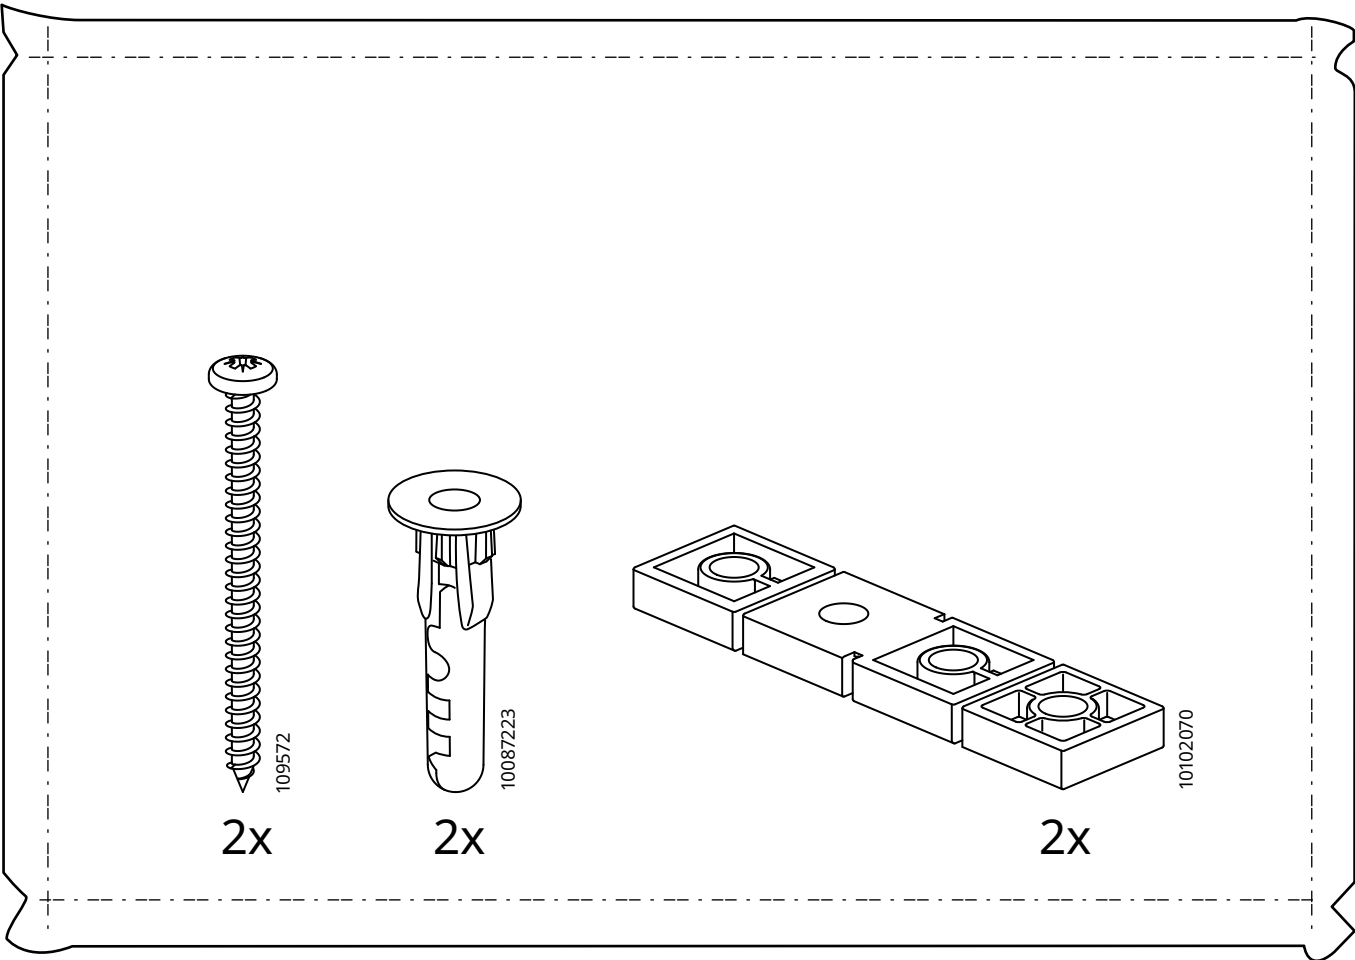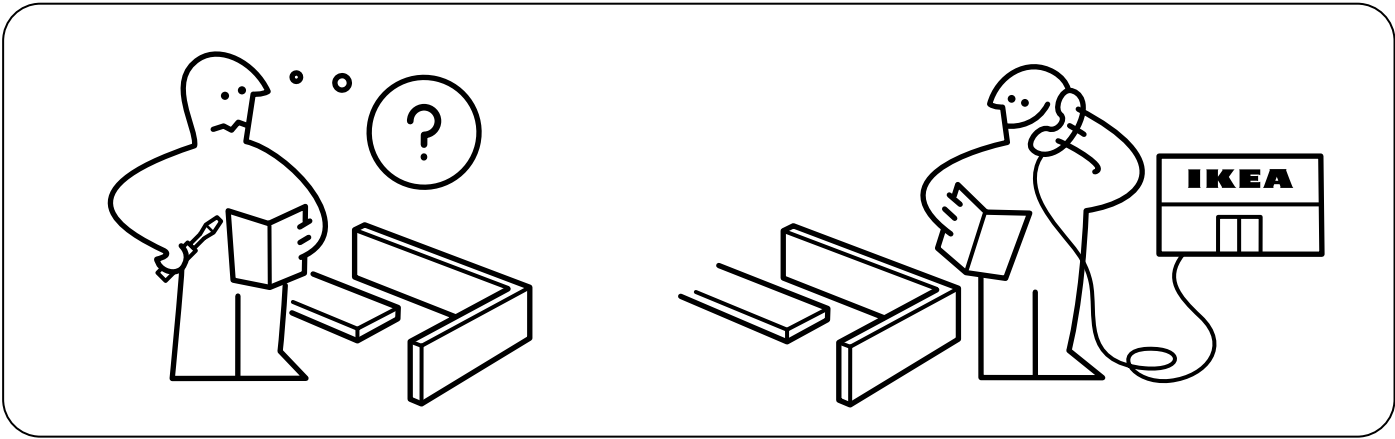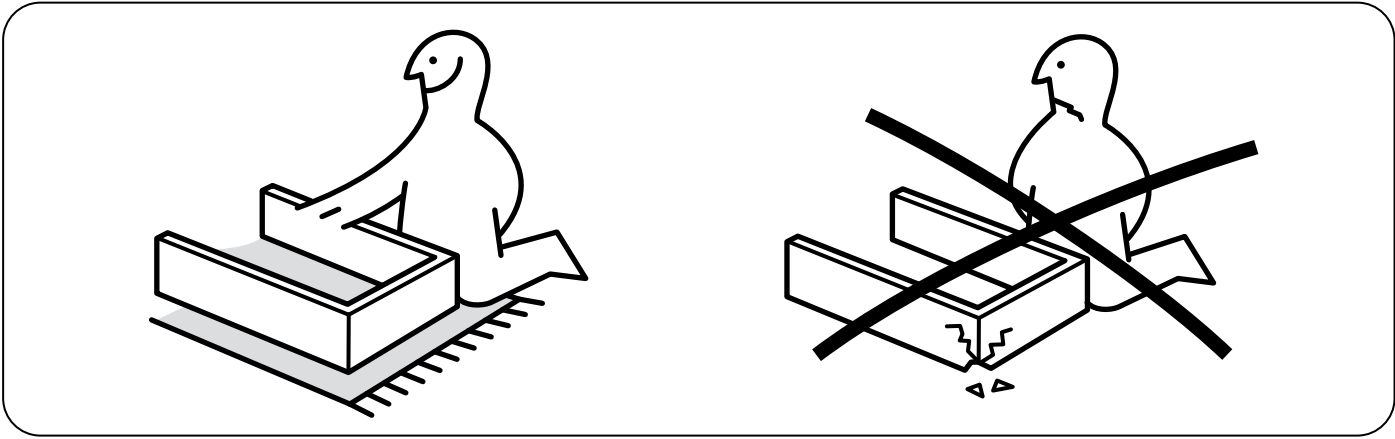


370172

  1

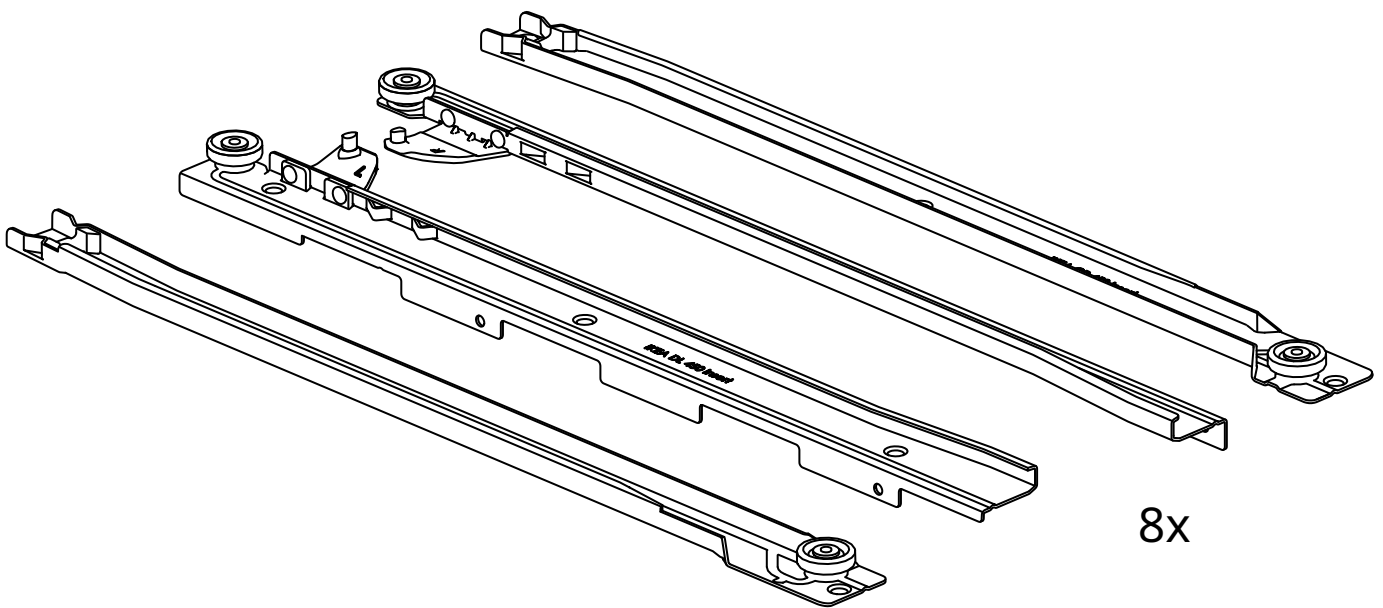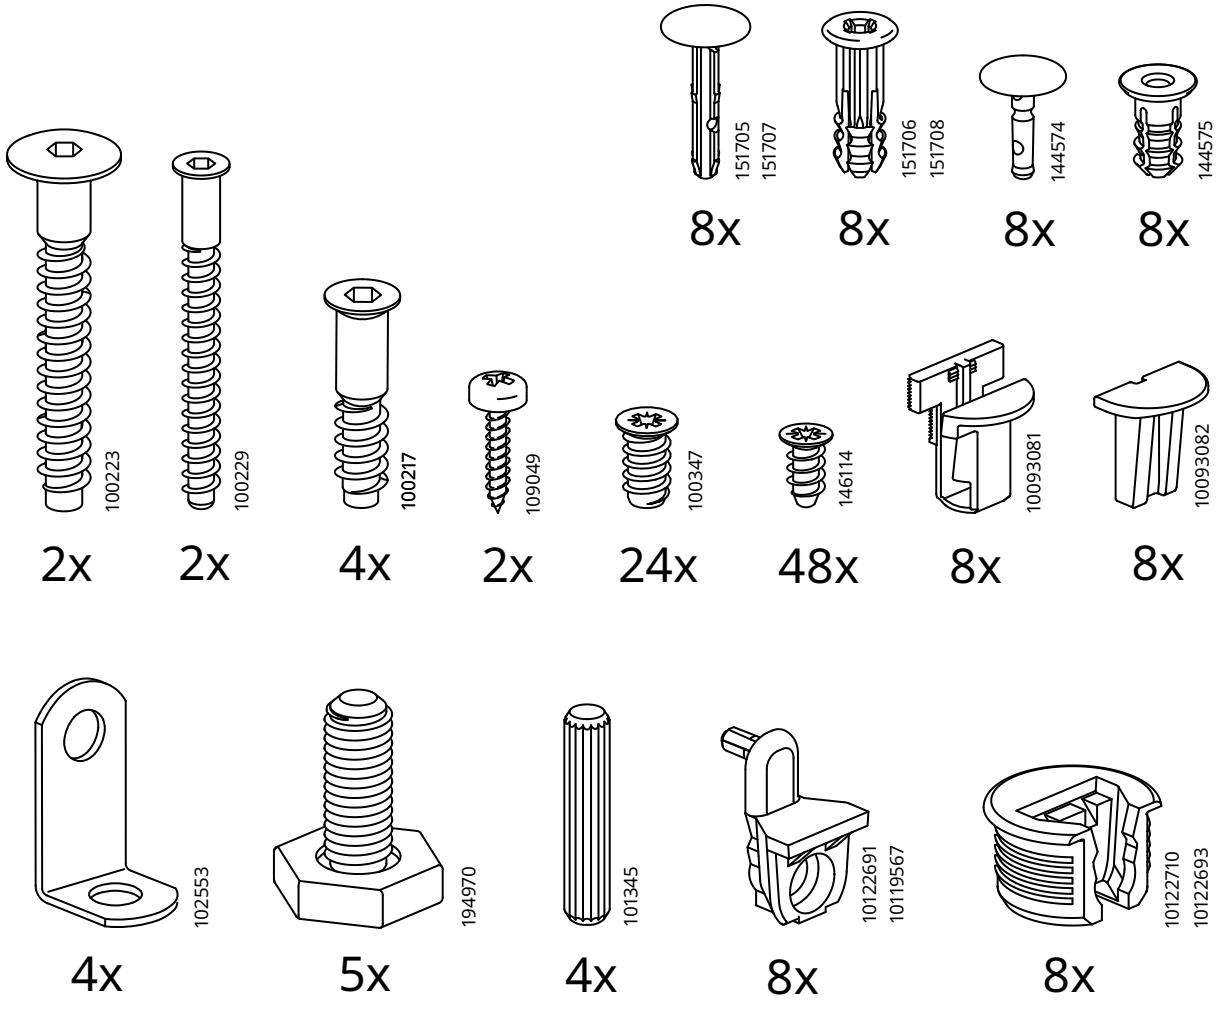


10108520

 2



145718

 32x




106603

12x



146114

 
48x

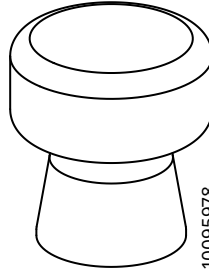

10095978


10096248

 12x

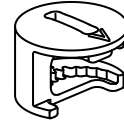


131361

 32x

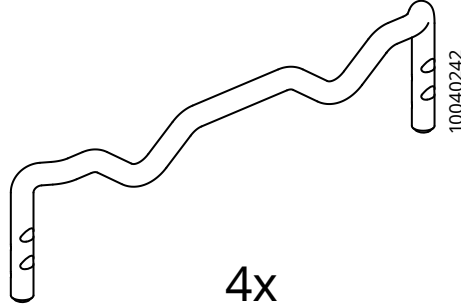


10040242

 4x

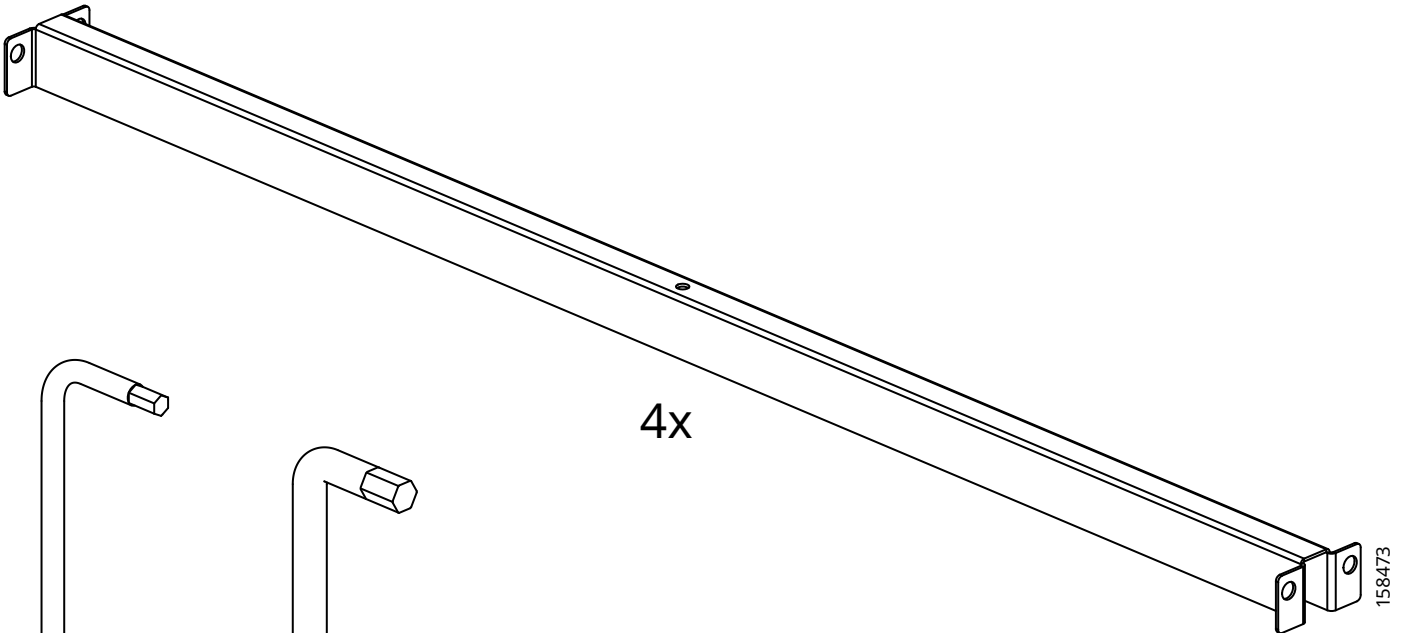


158473

 4x

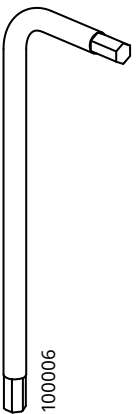

100006

 
1x

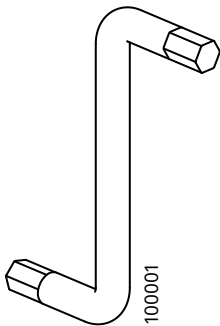



100001

1x


 
1

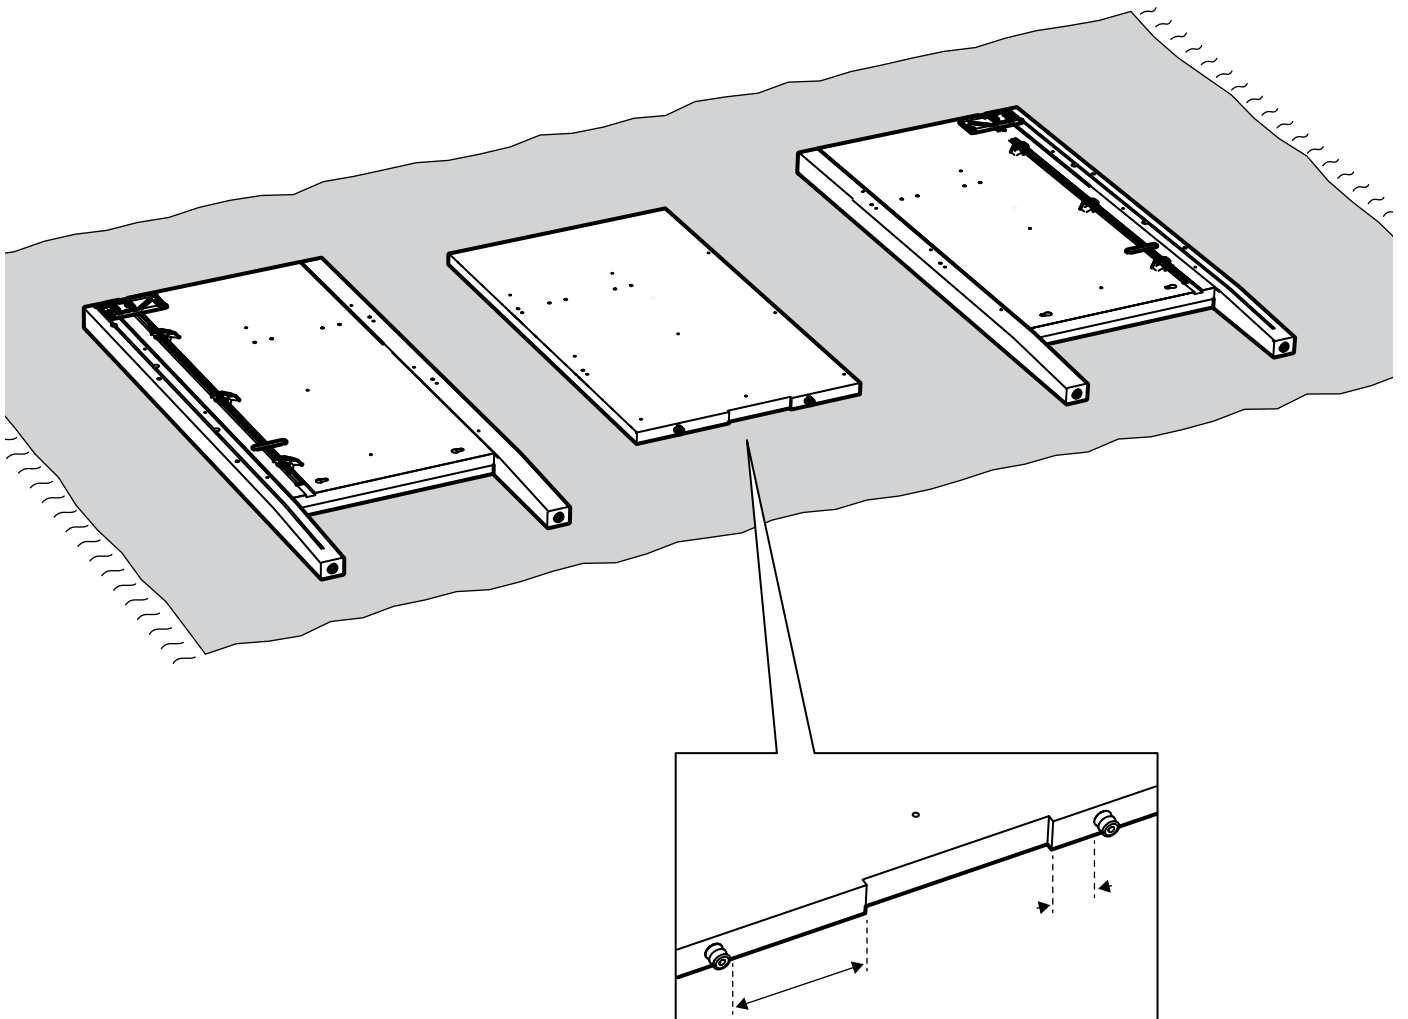



2

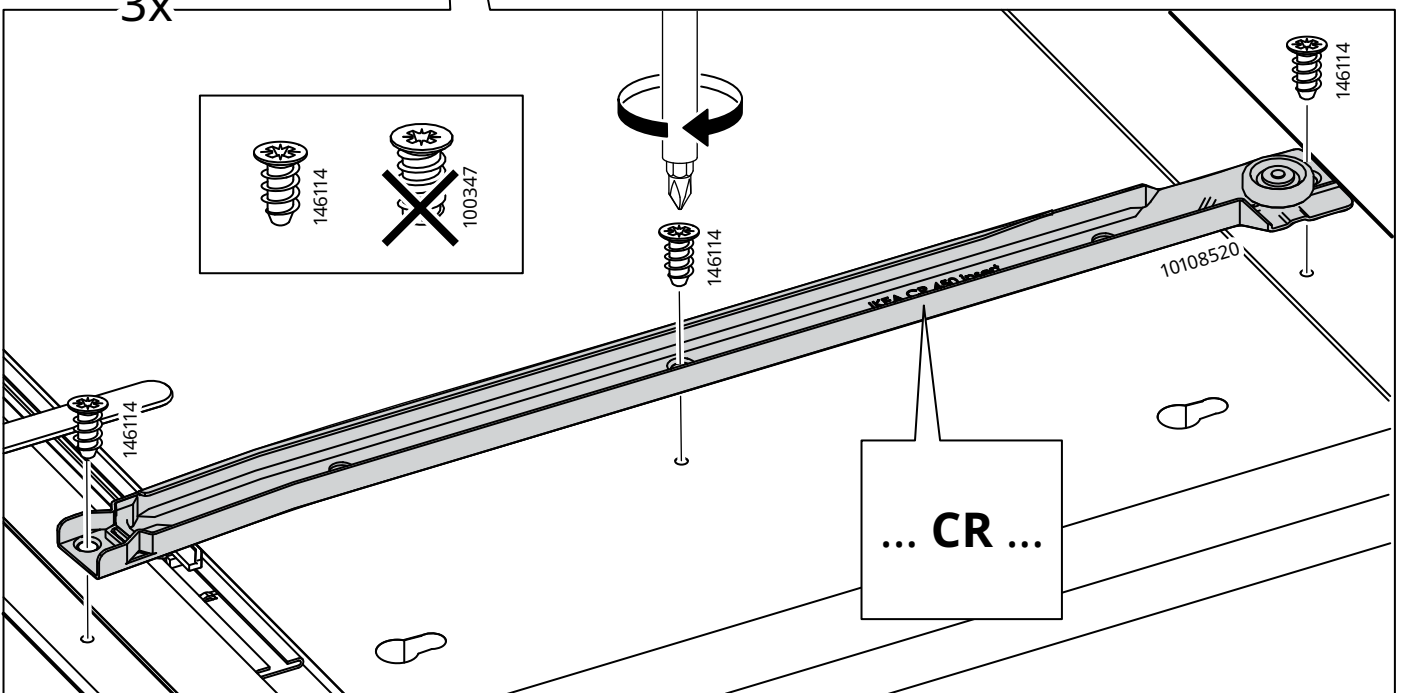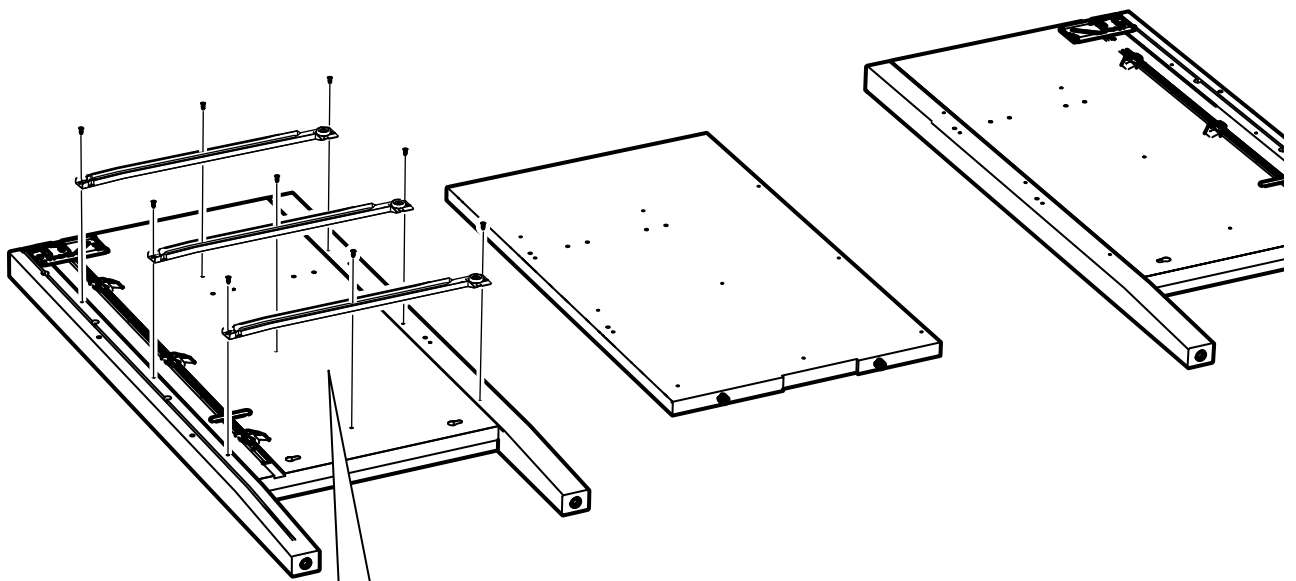  



3

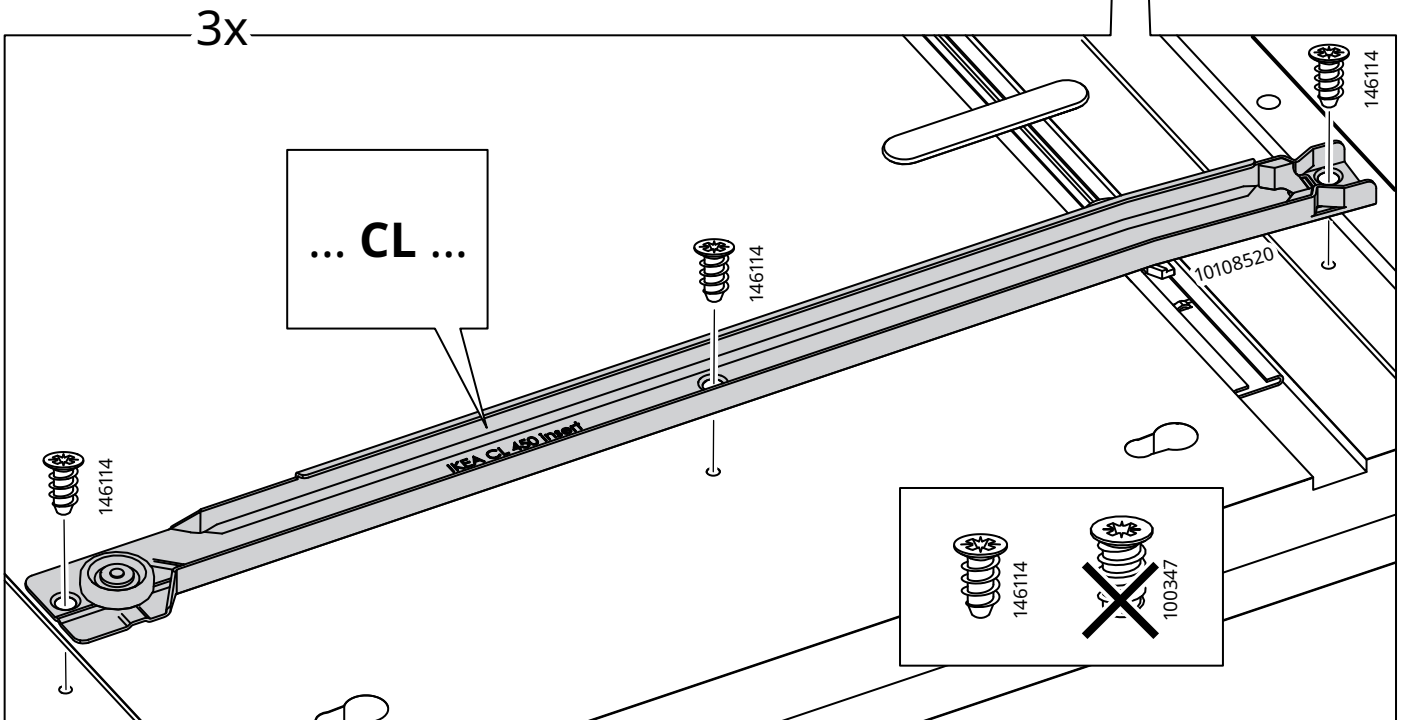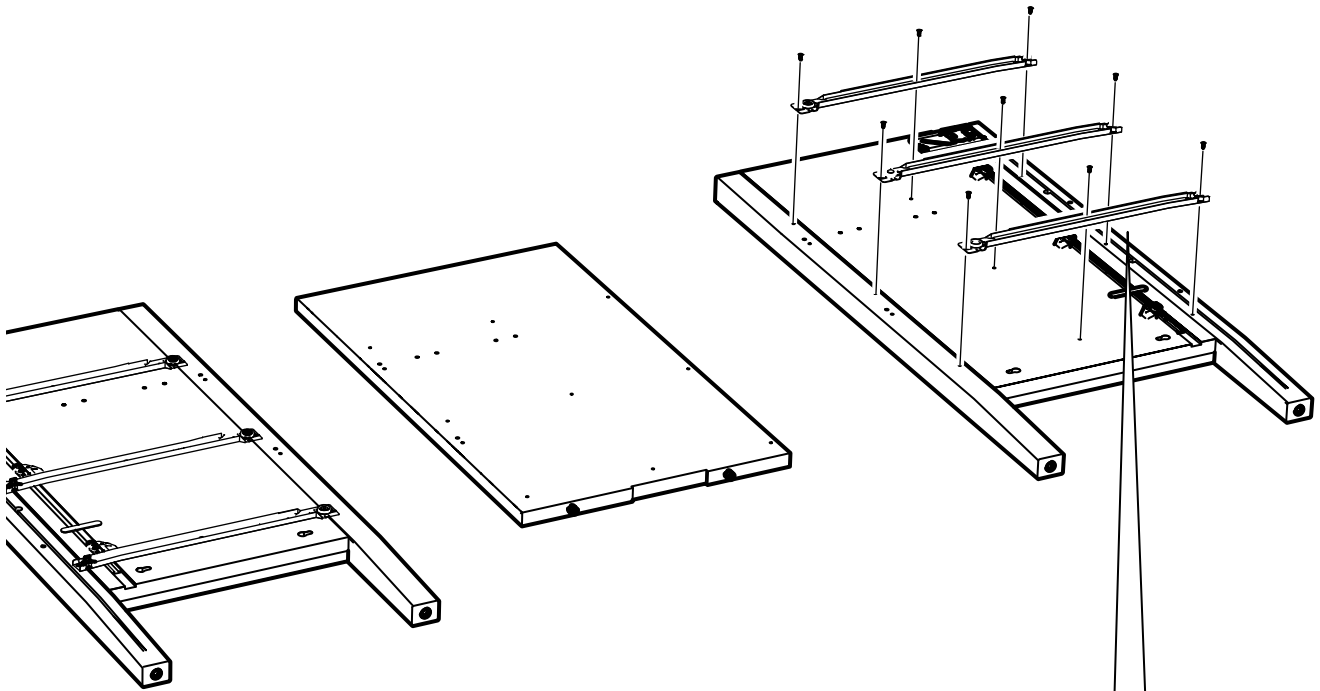  


4

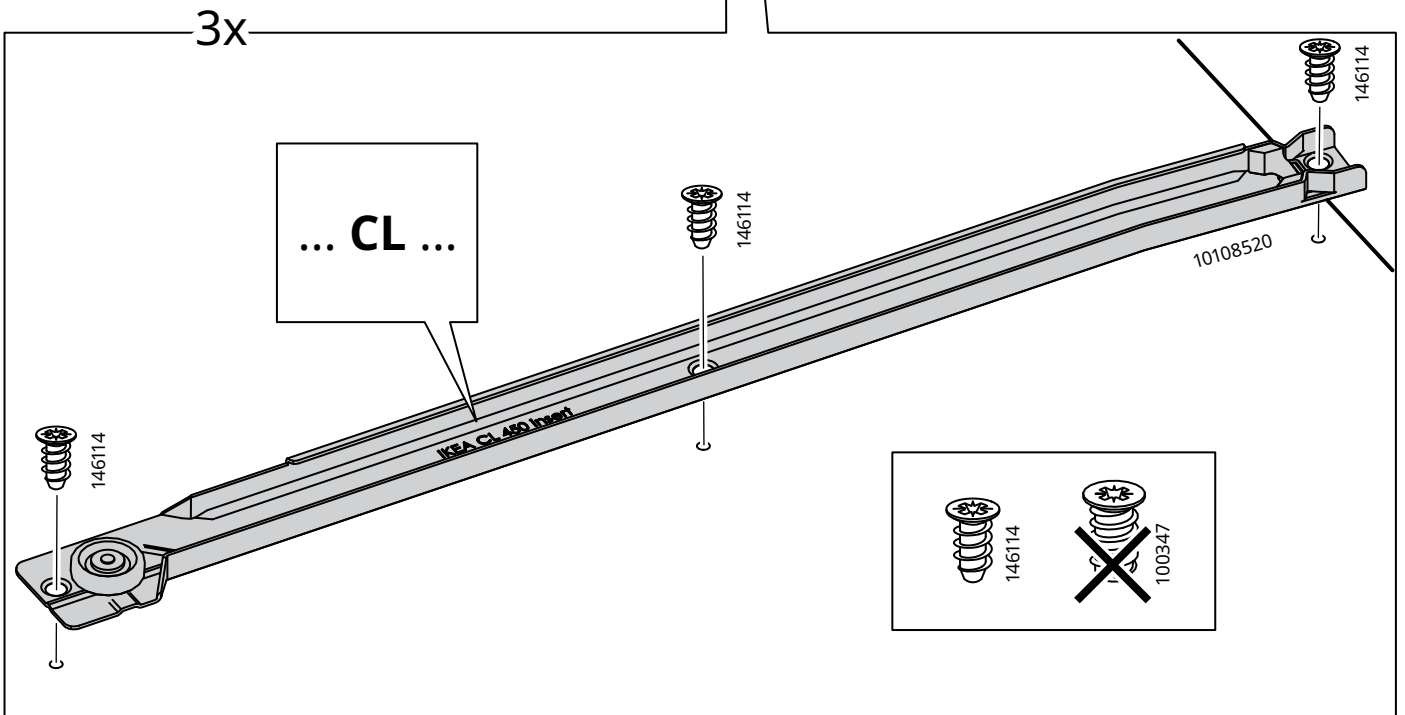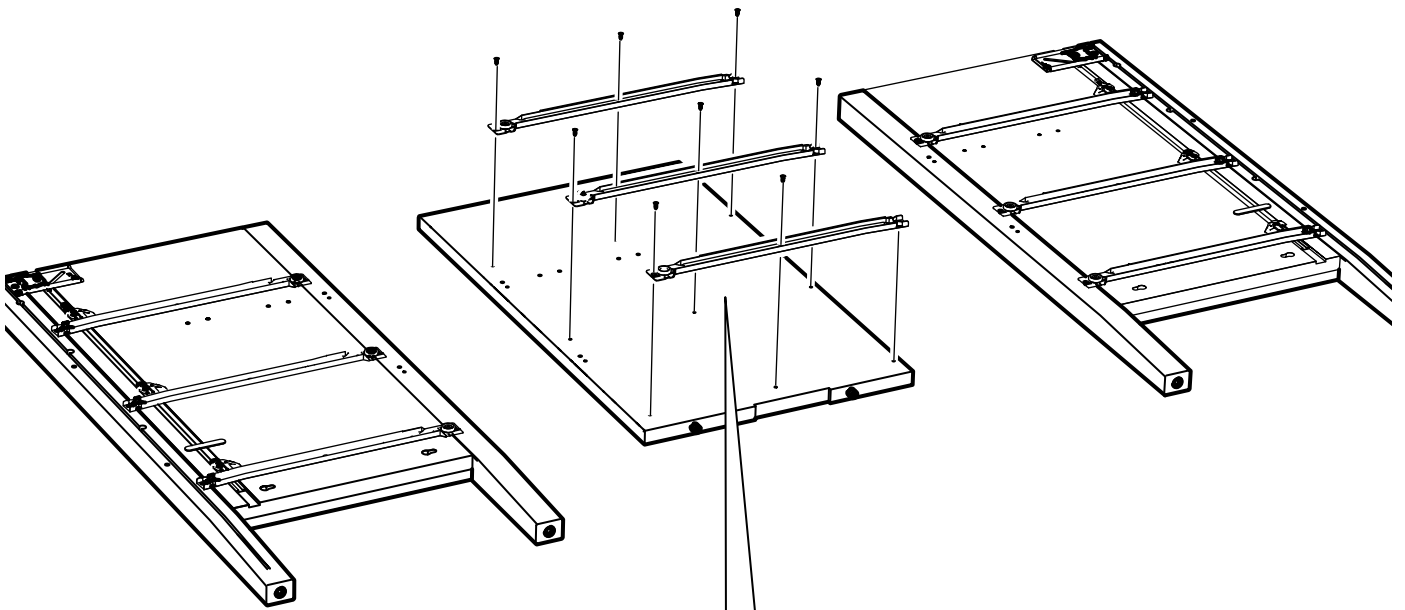  





5

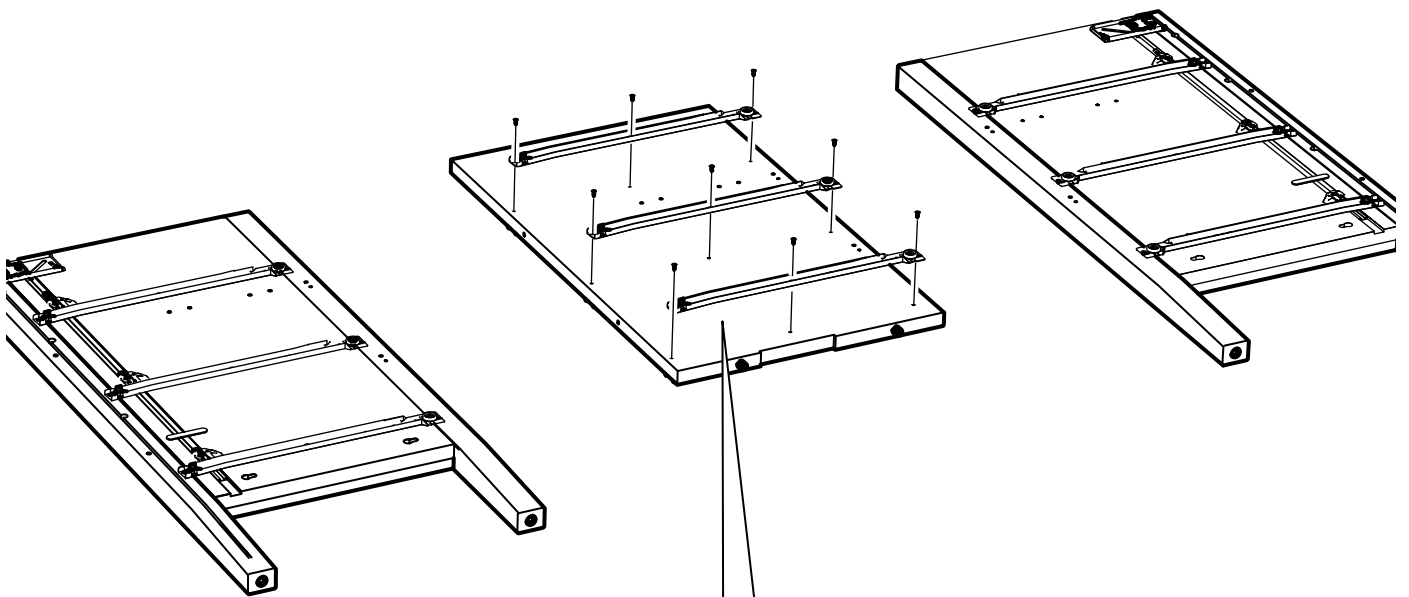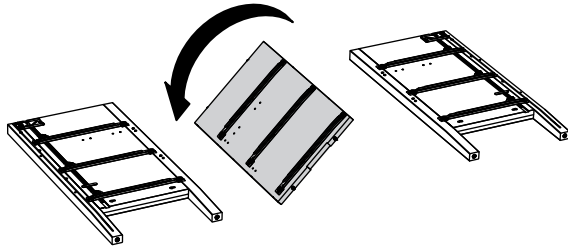  





3x

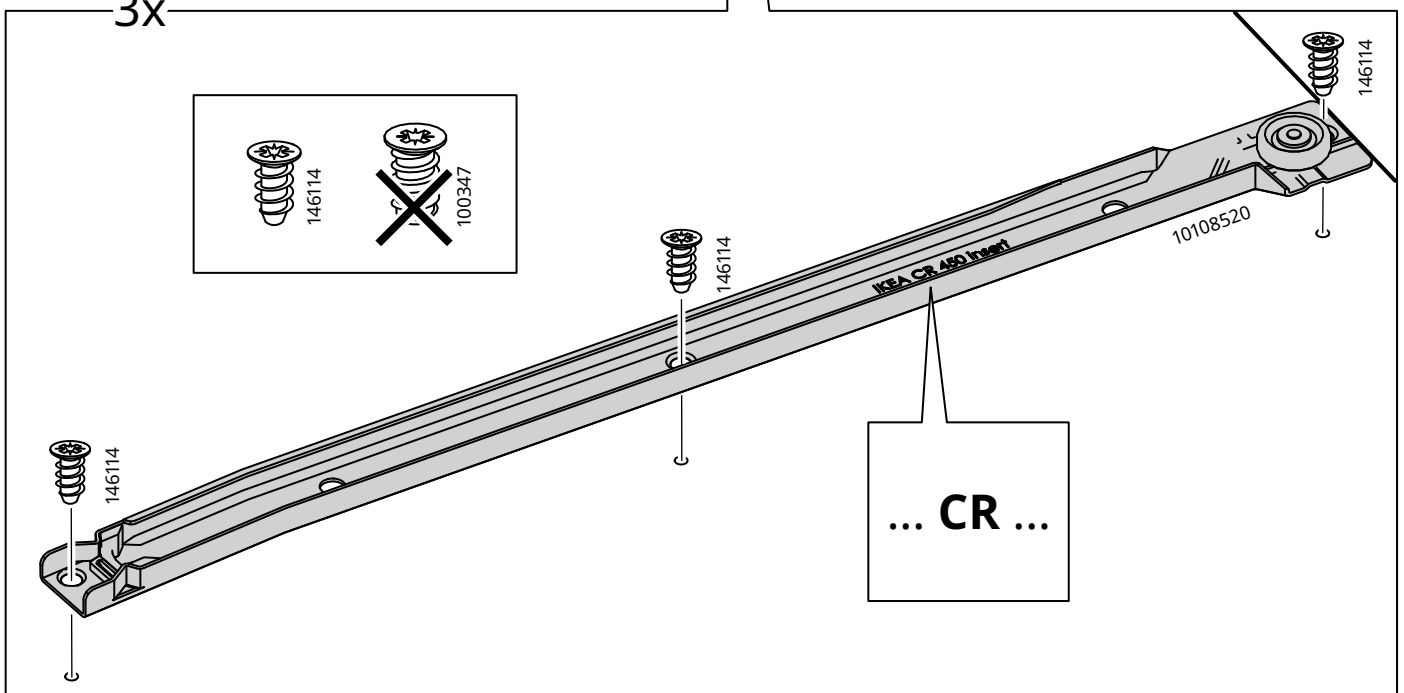 


6

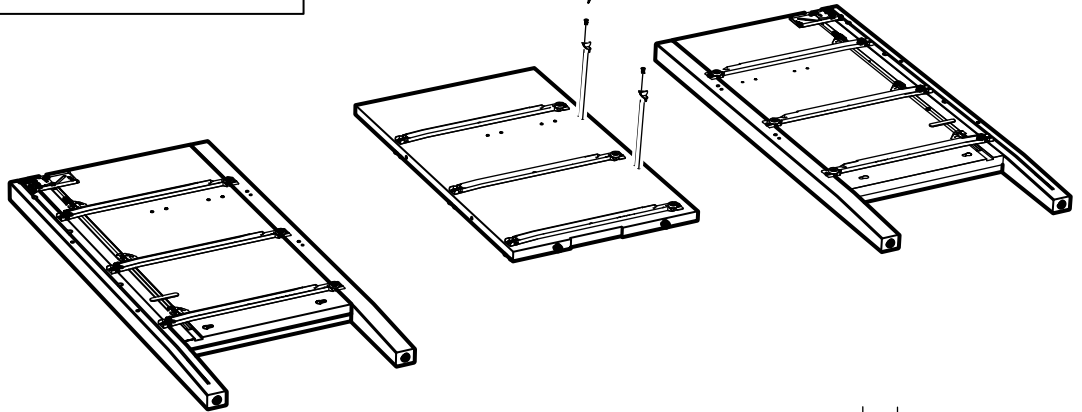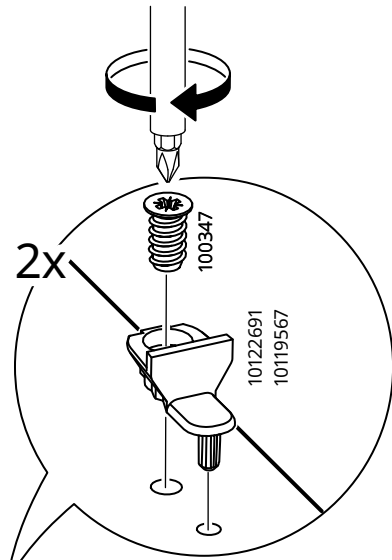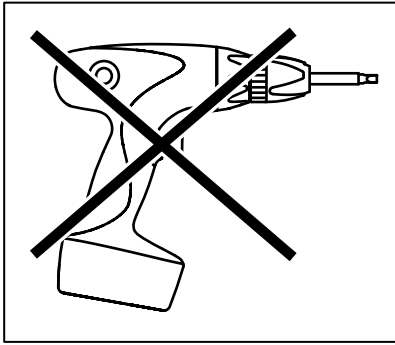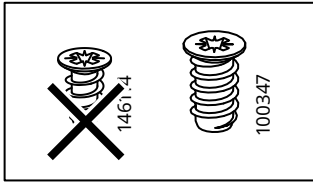    


7

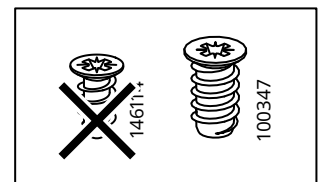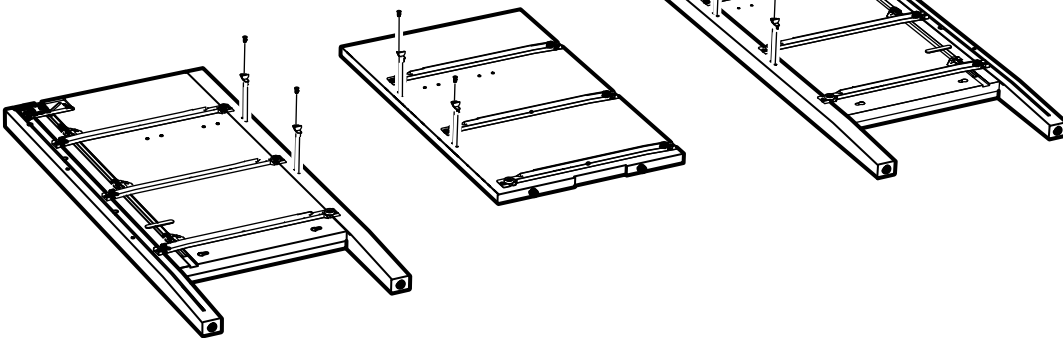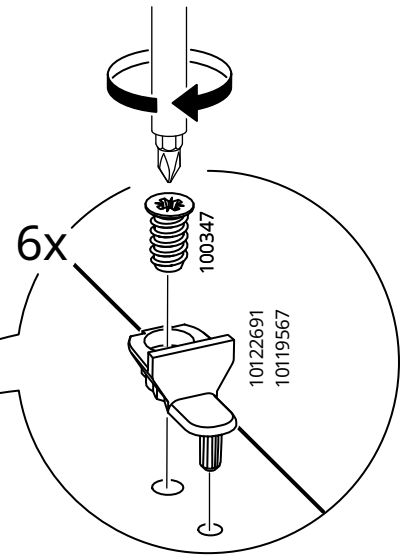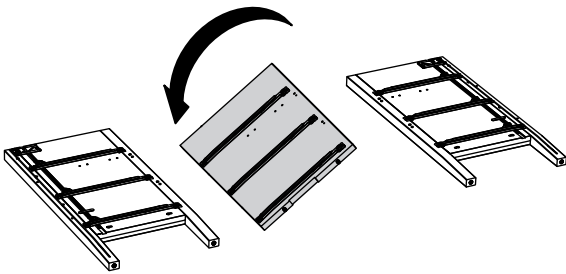    


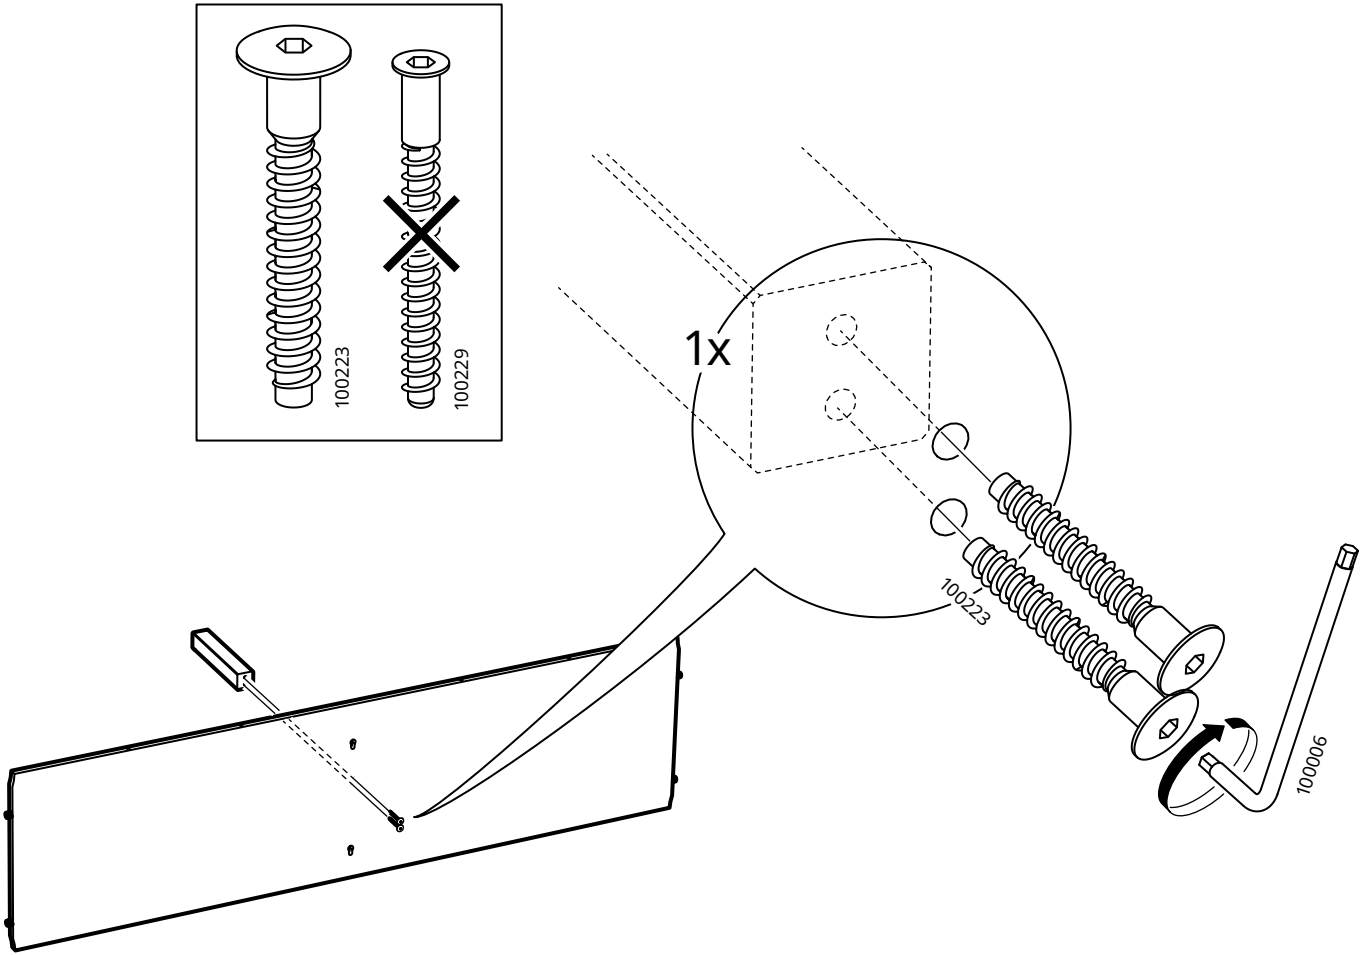 


9

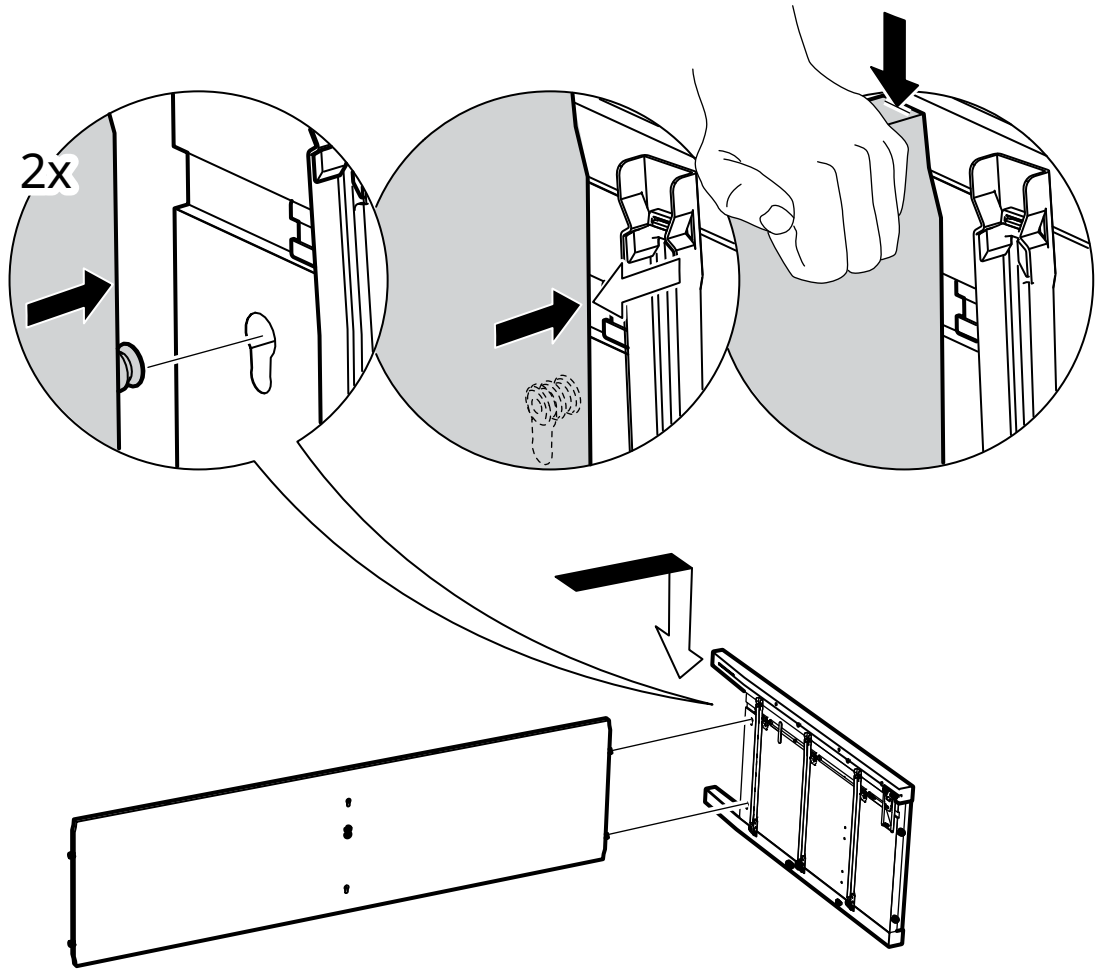 





10

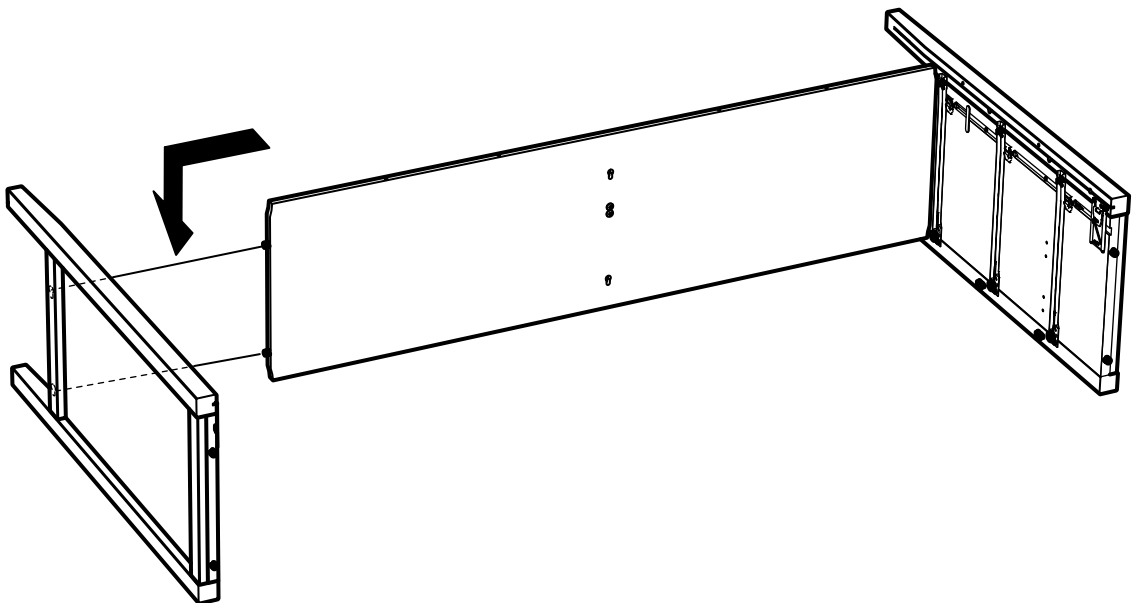 


11

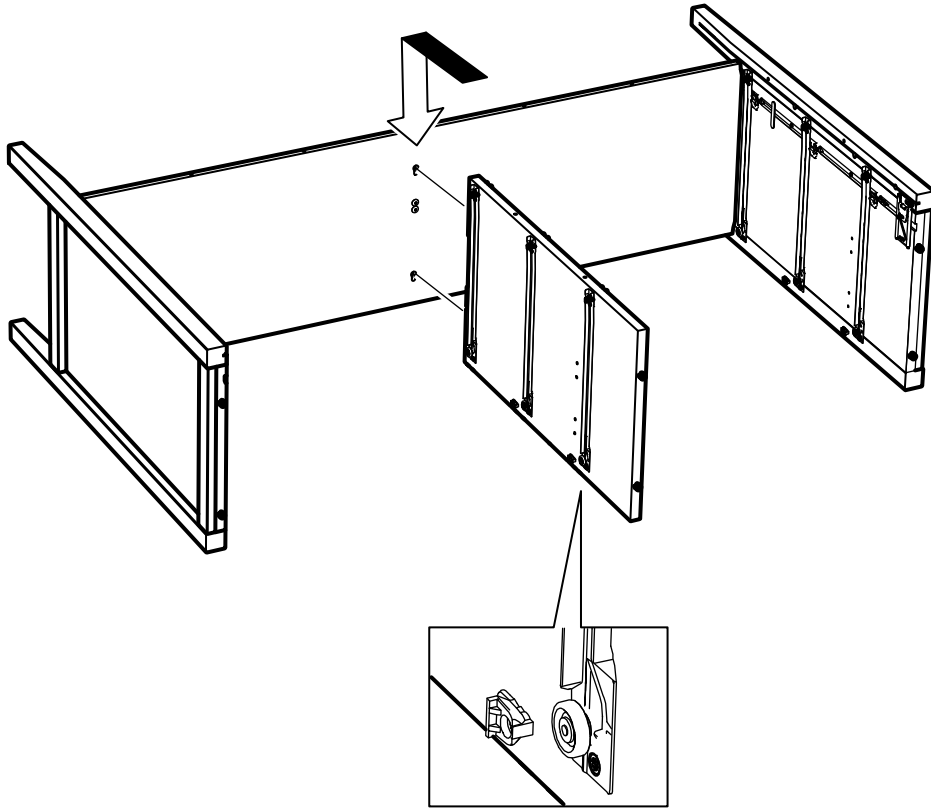 


12

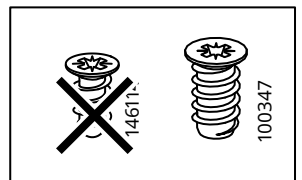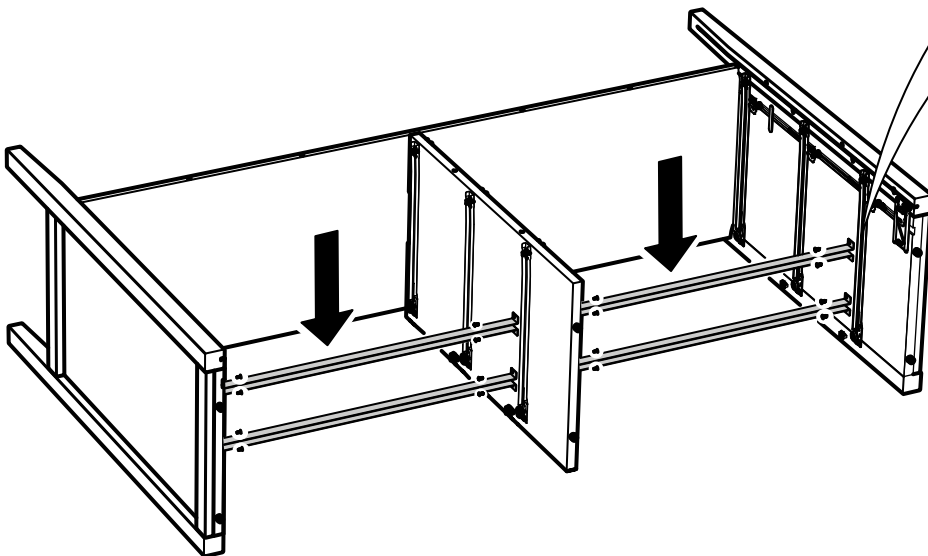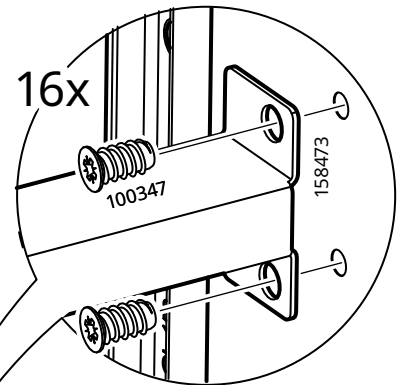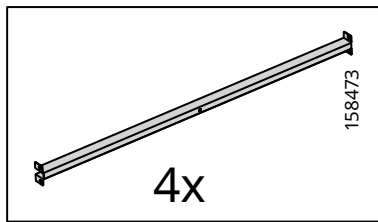    



13

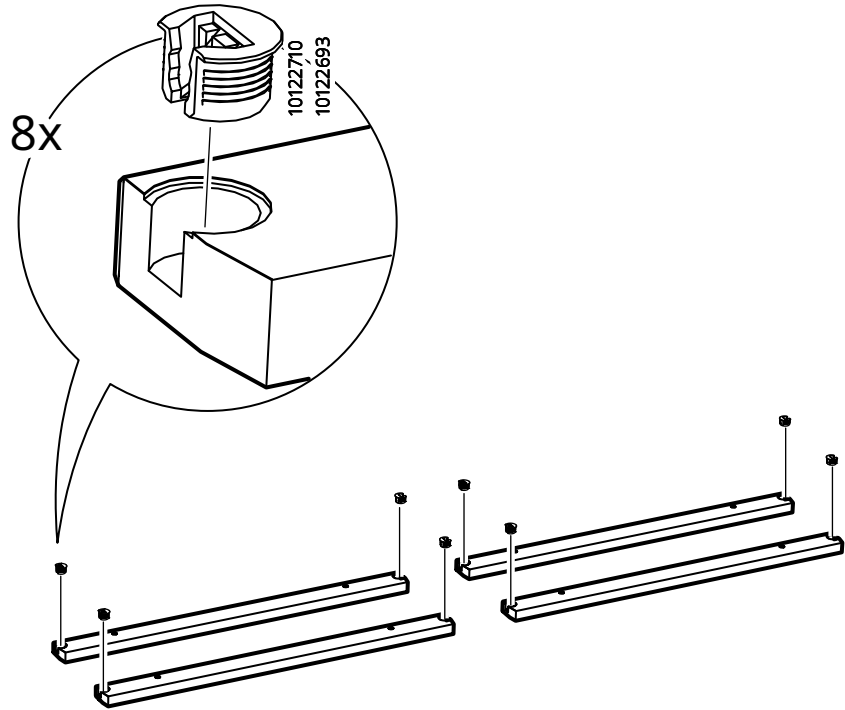 




14

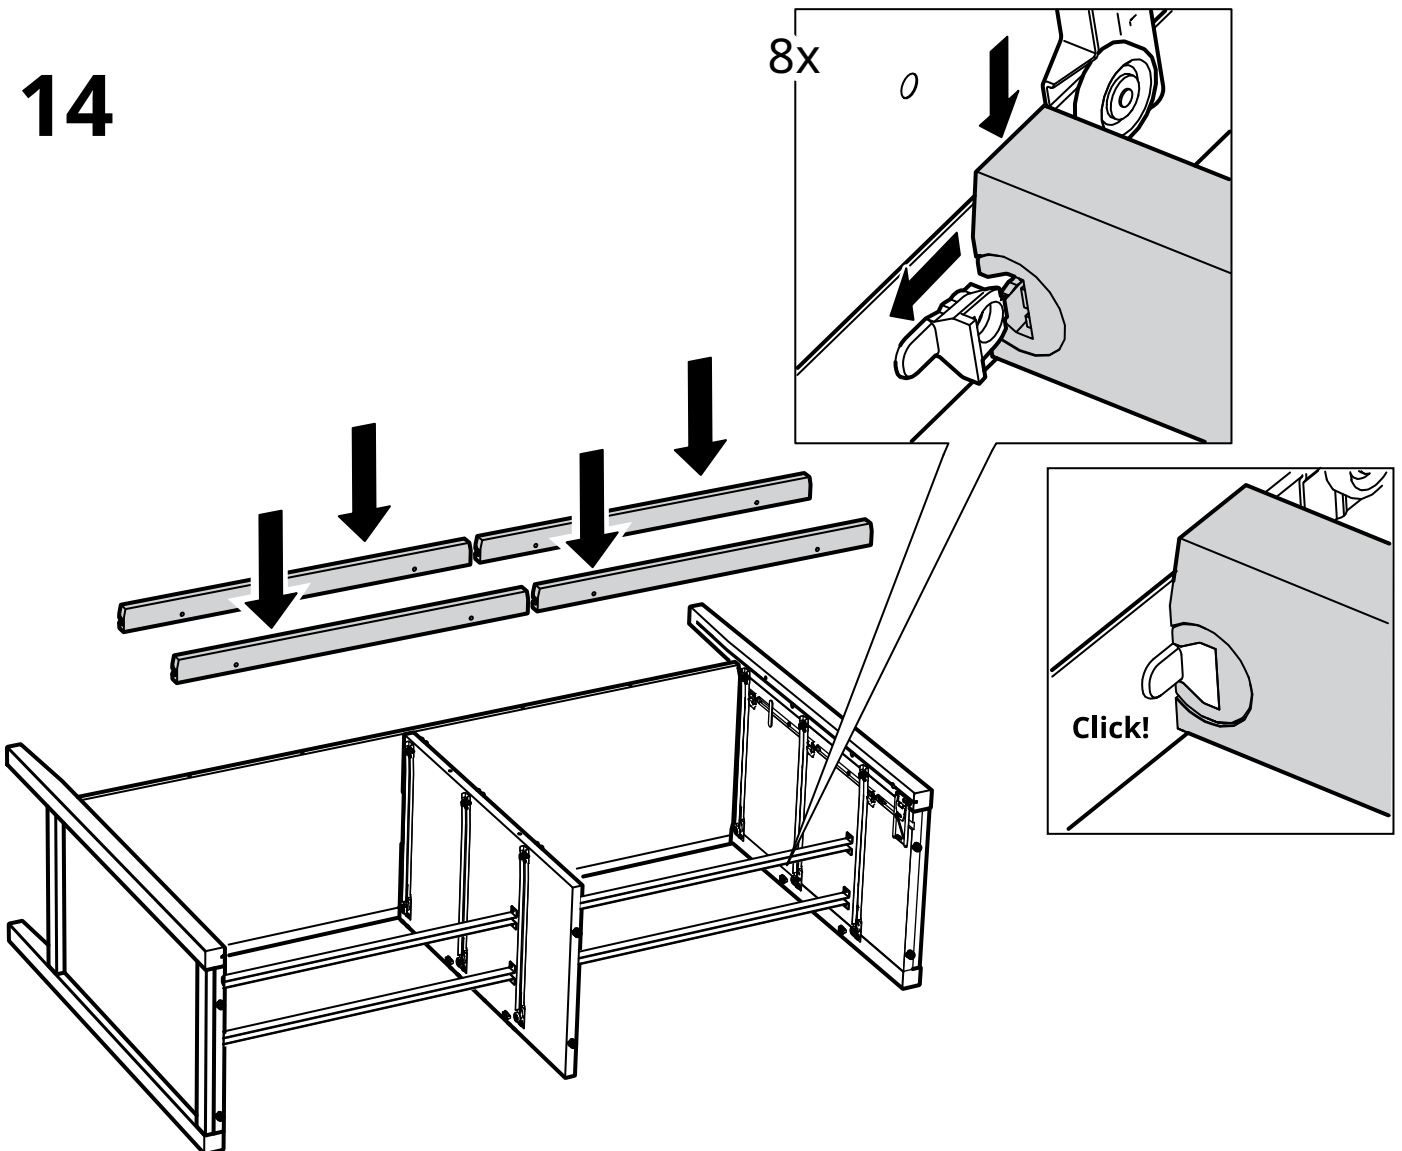 


15

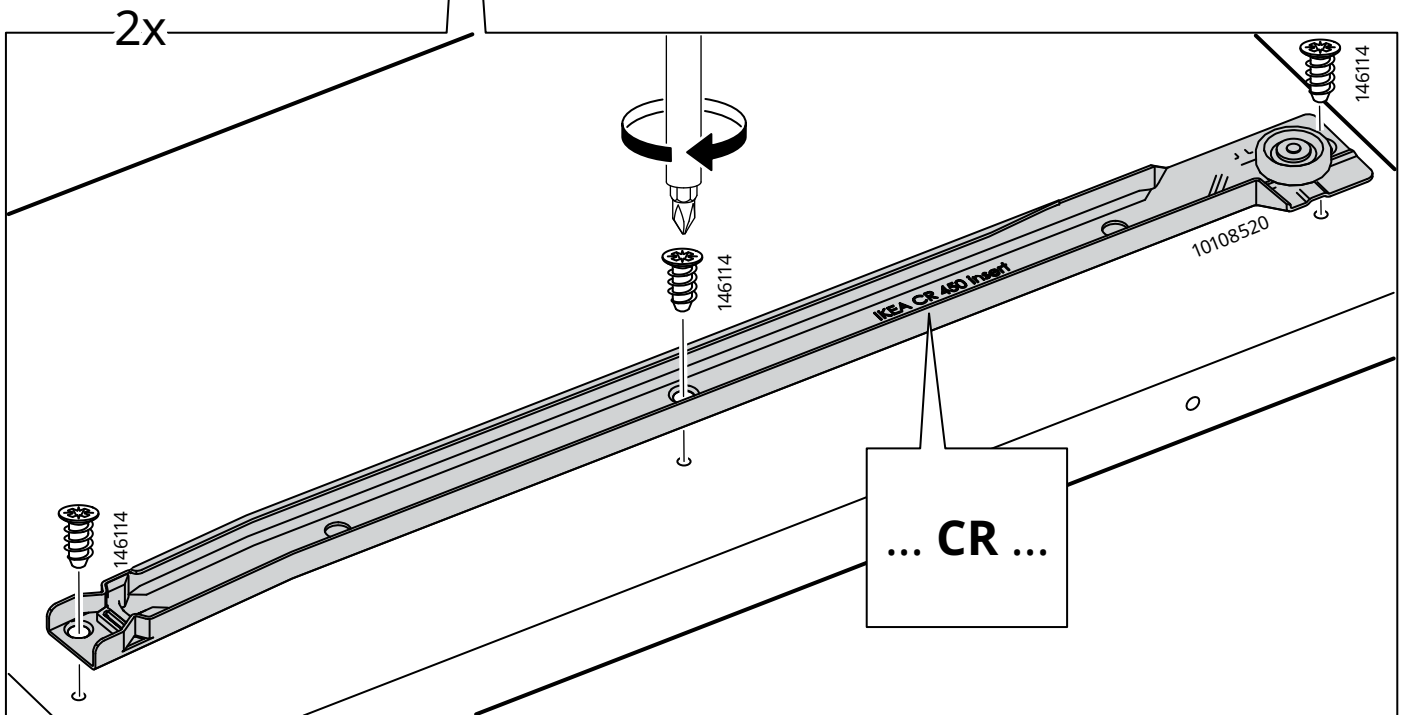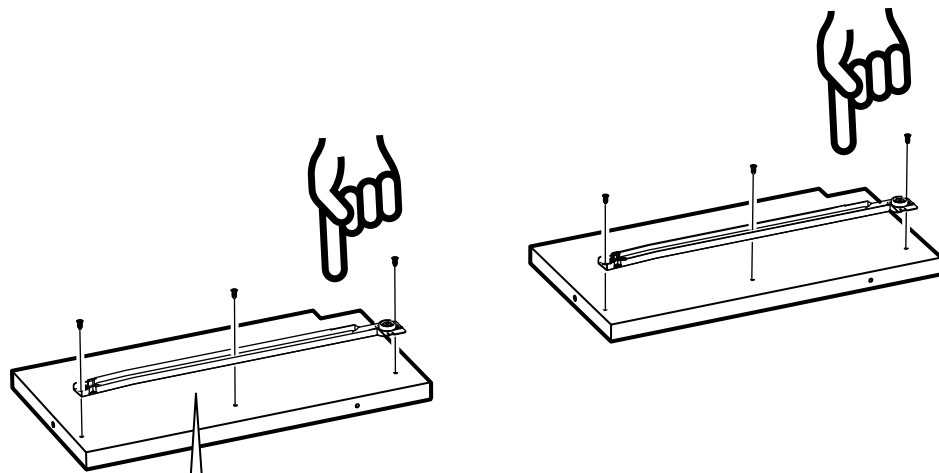  


16

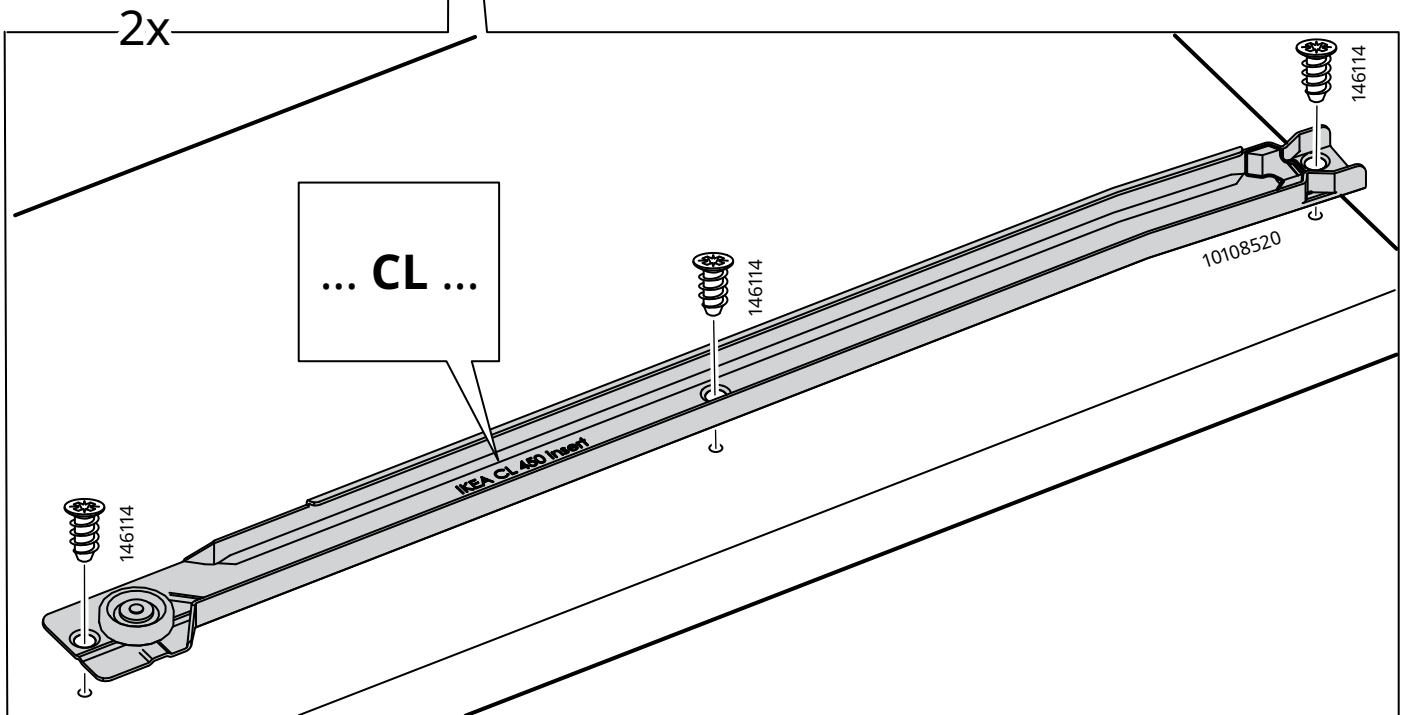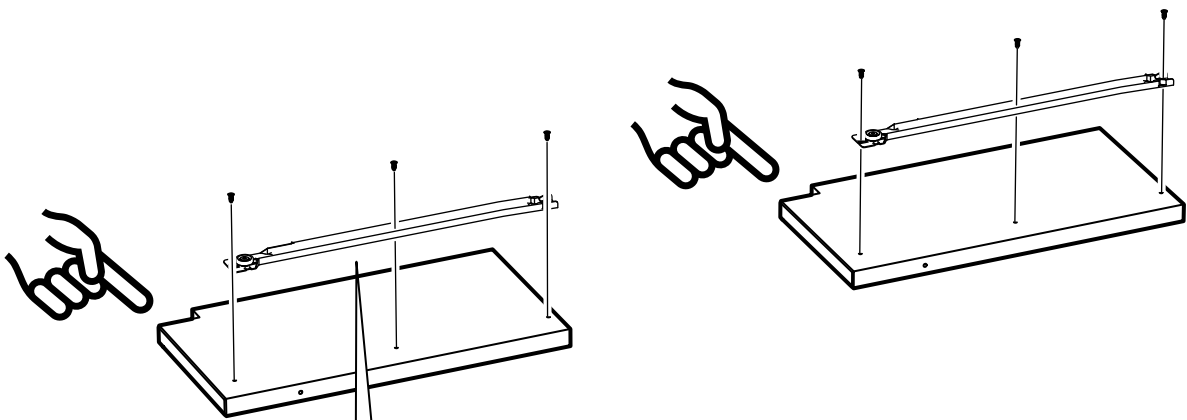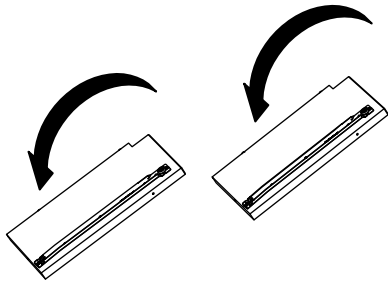   


17

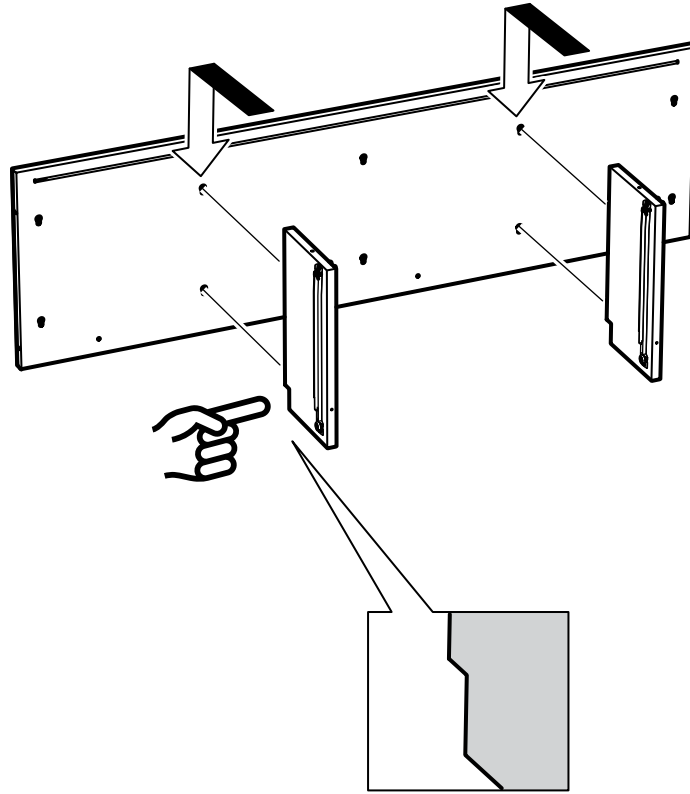 


18

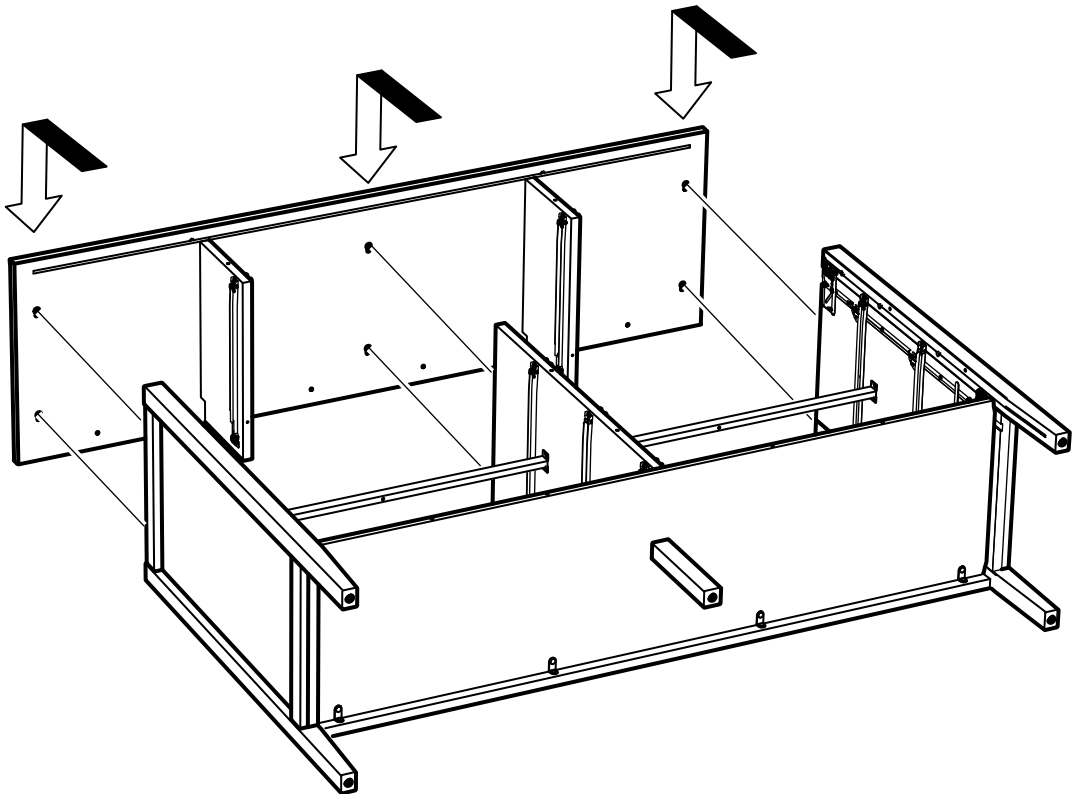 


19

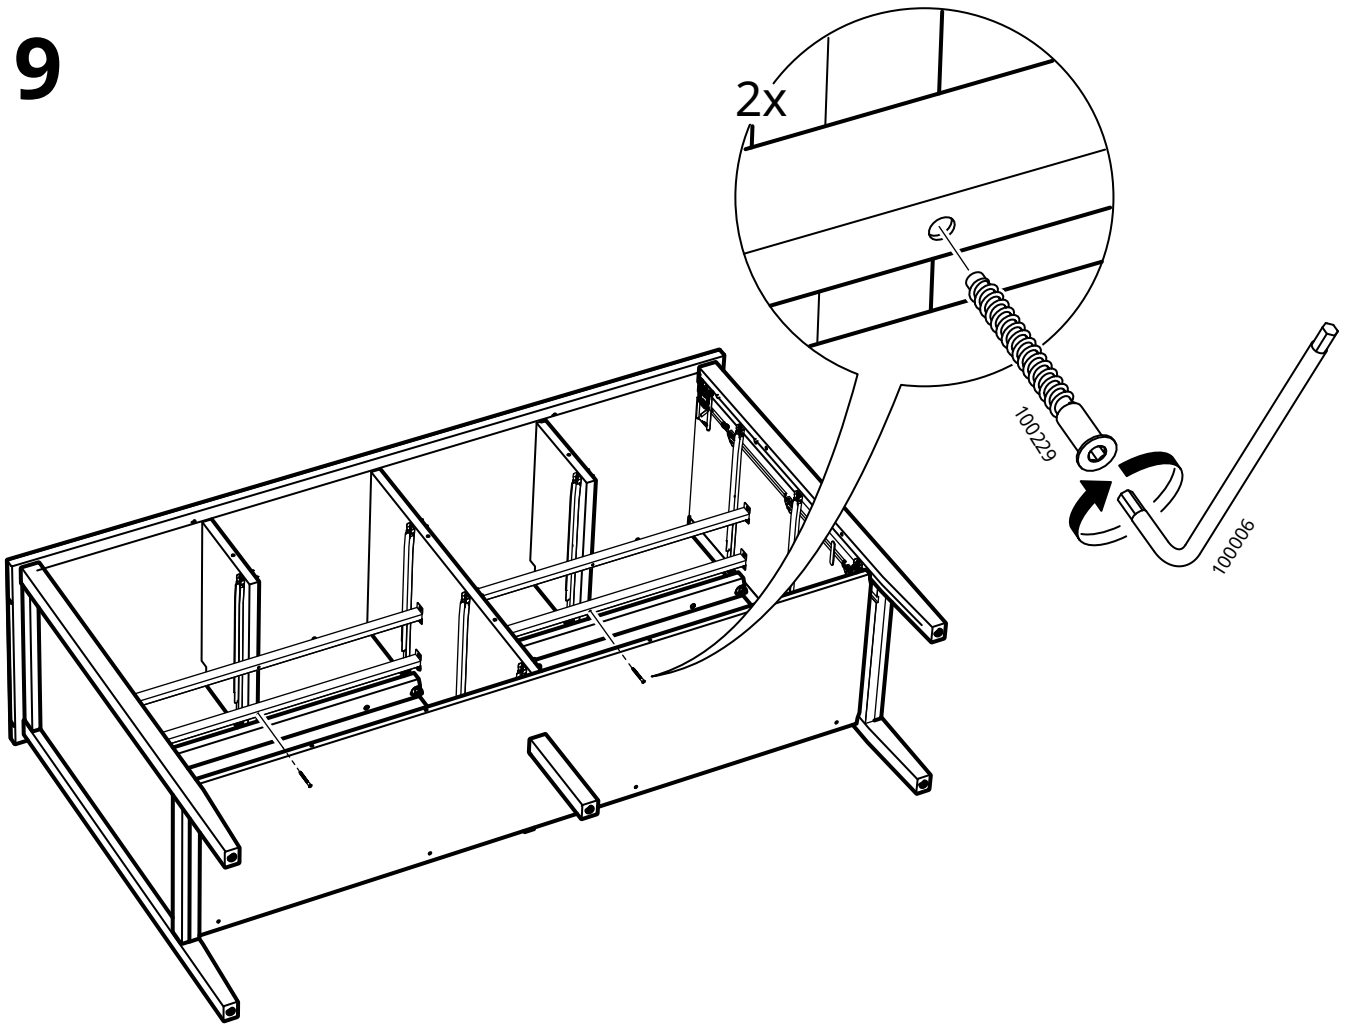 


20

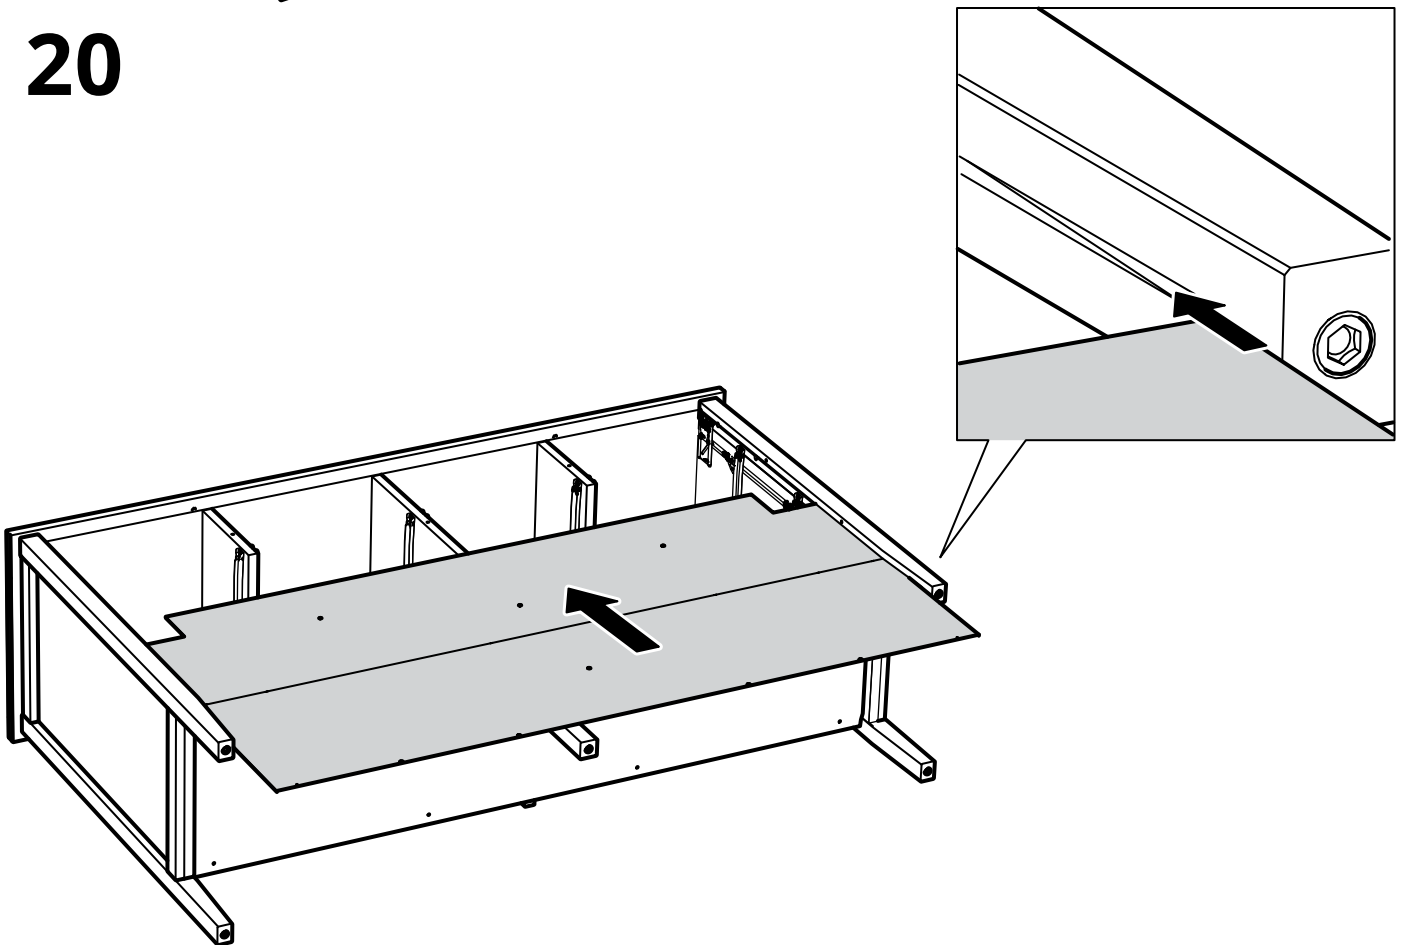 


21

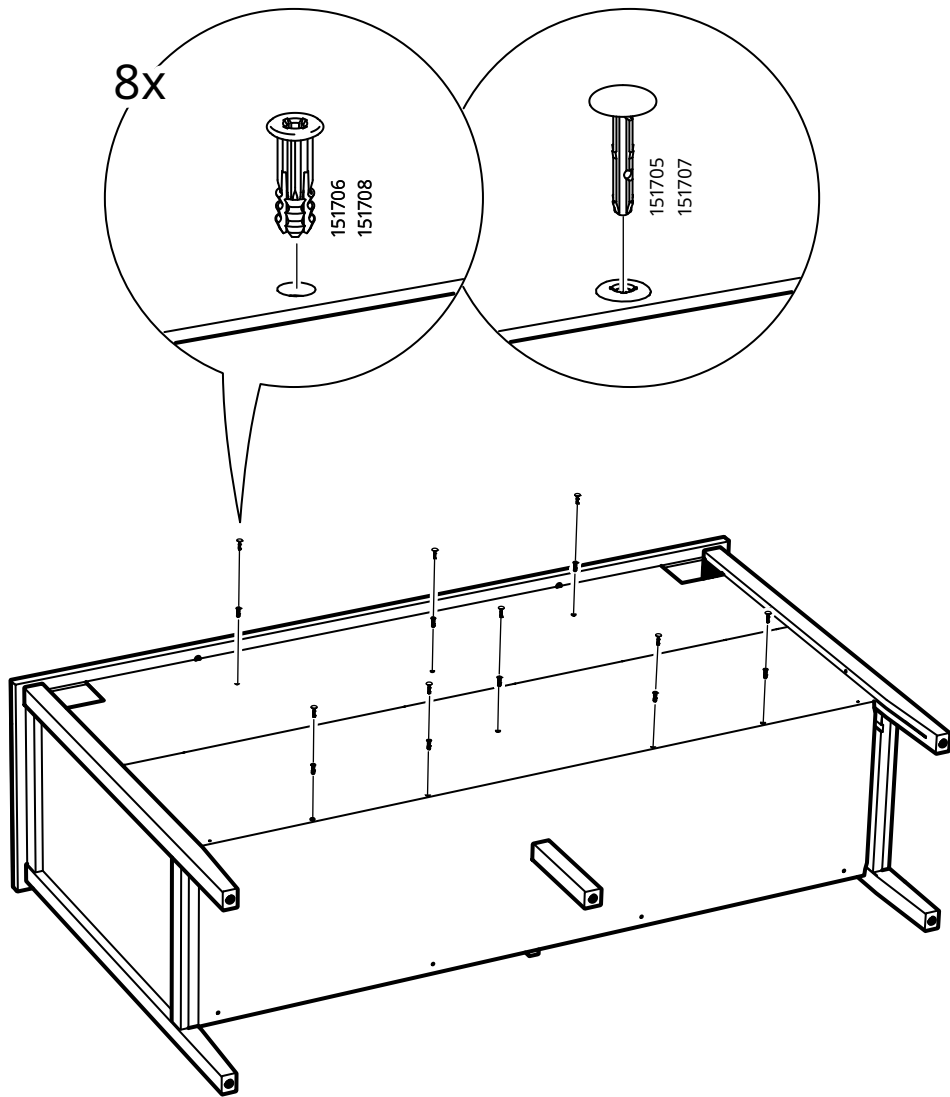 


22

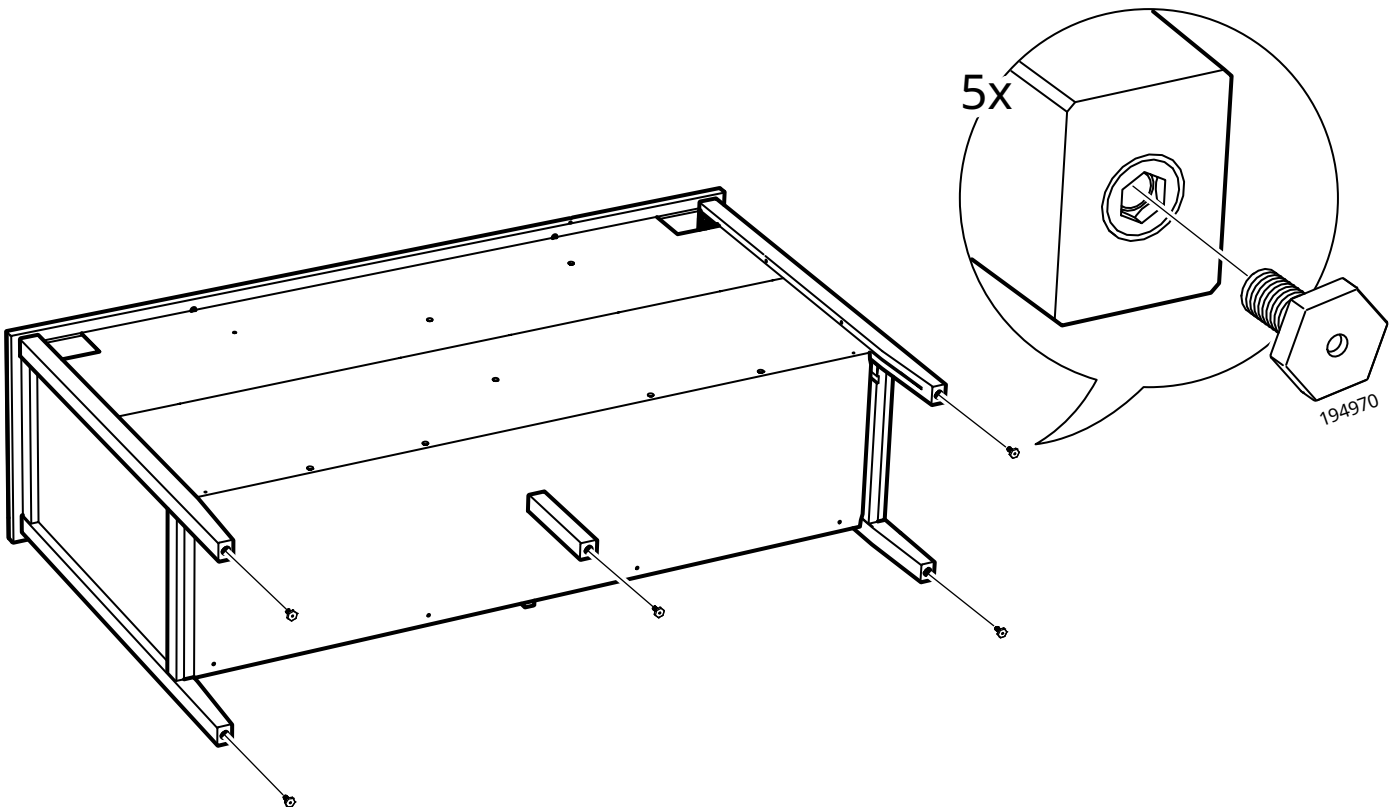 


23

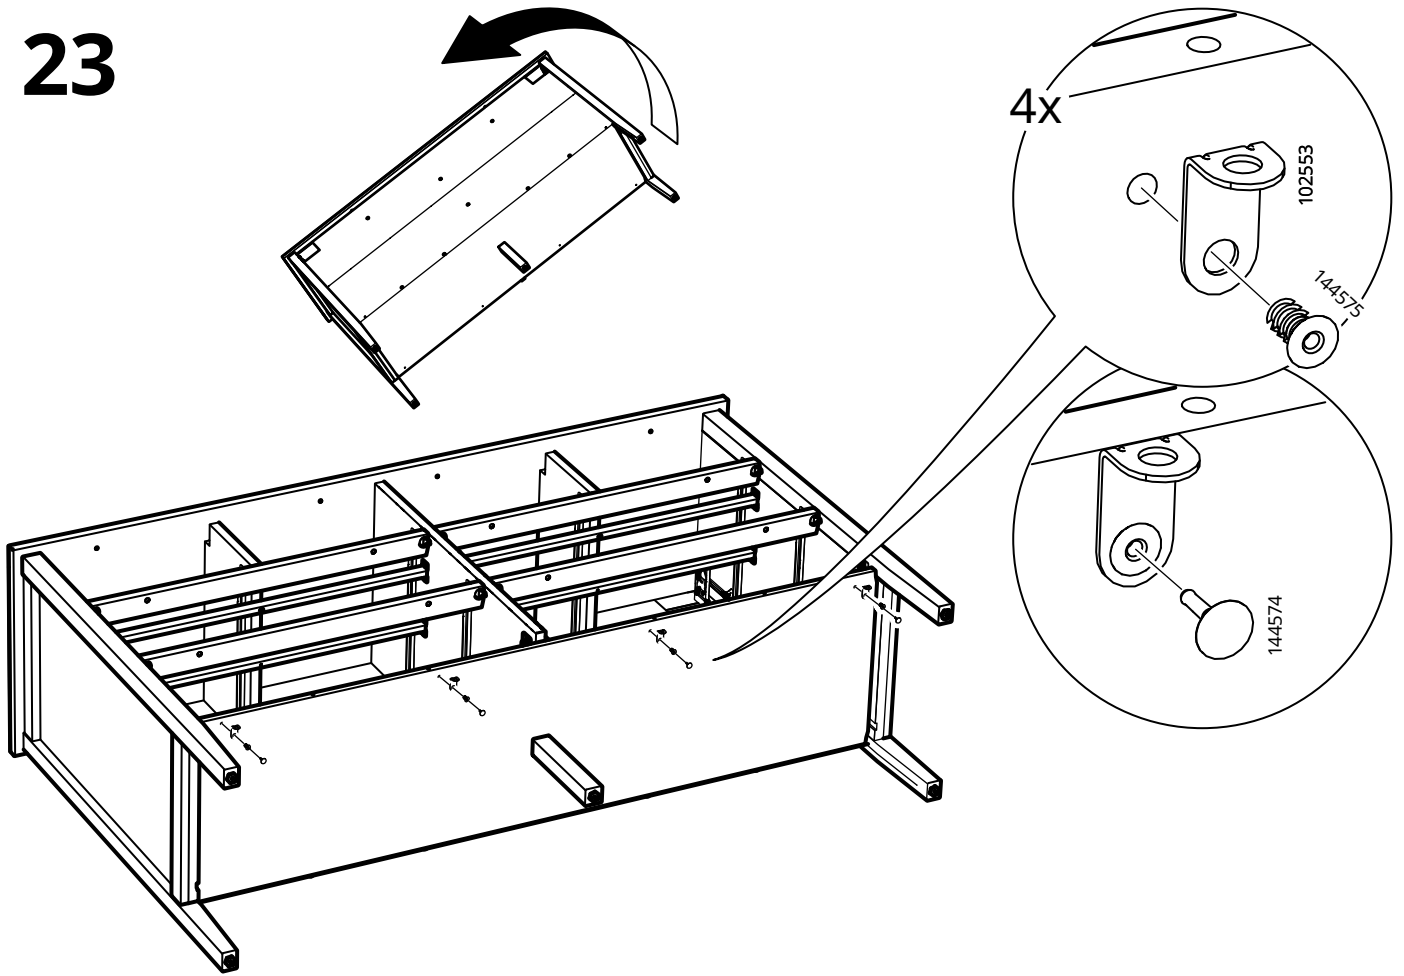 









24

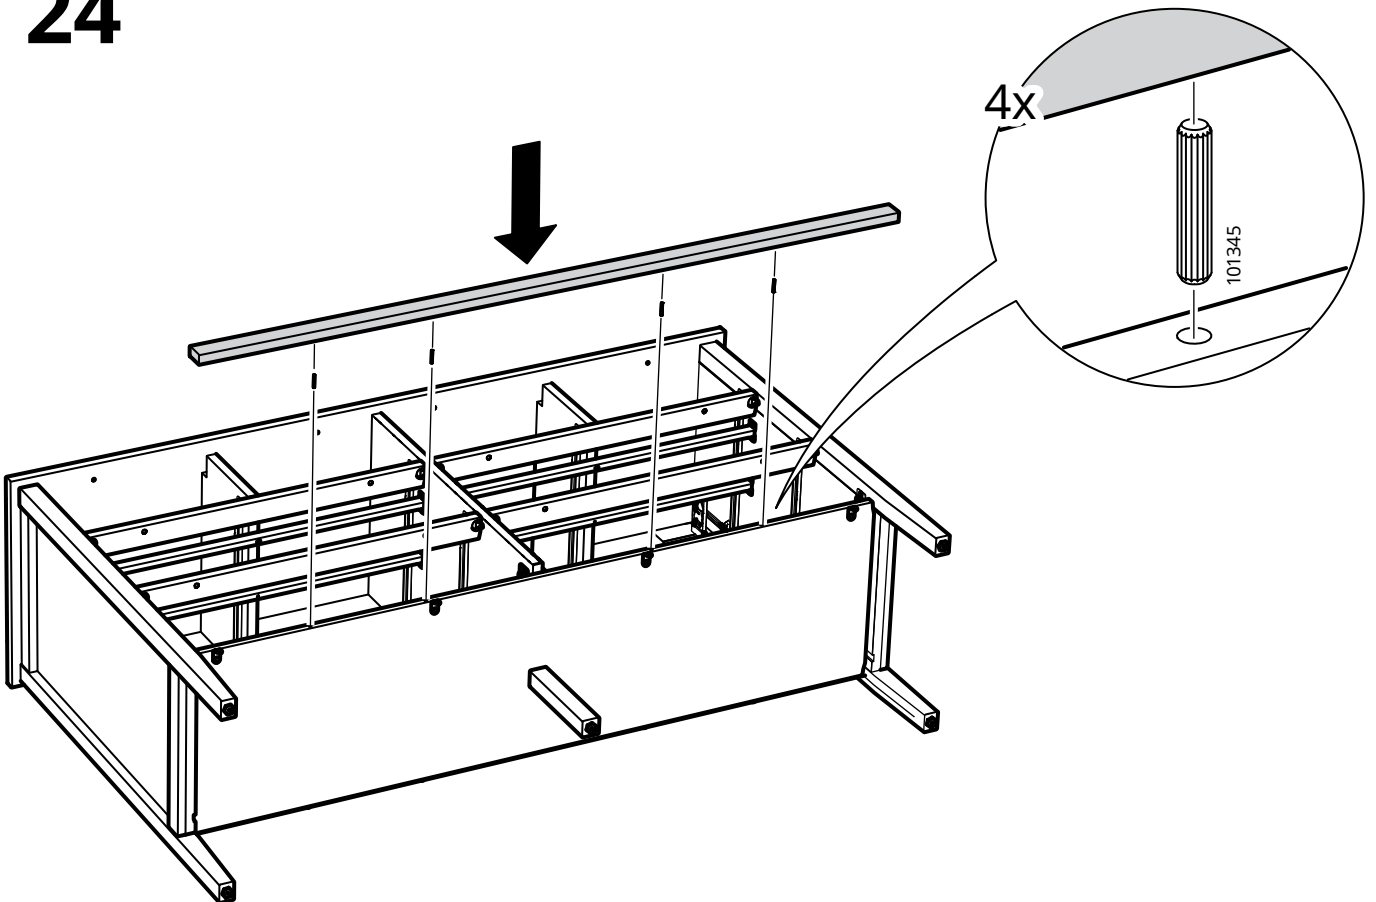 


25

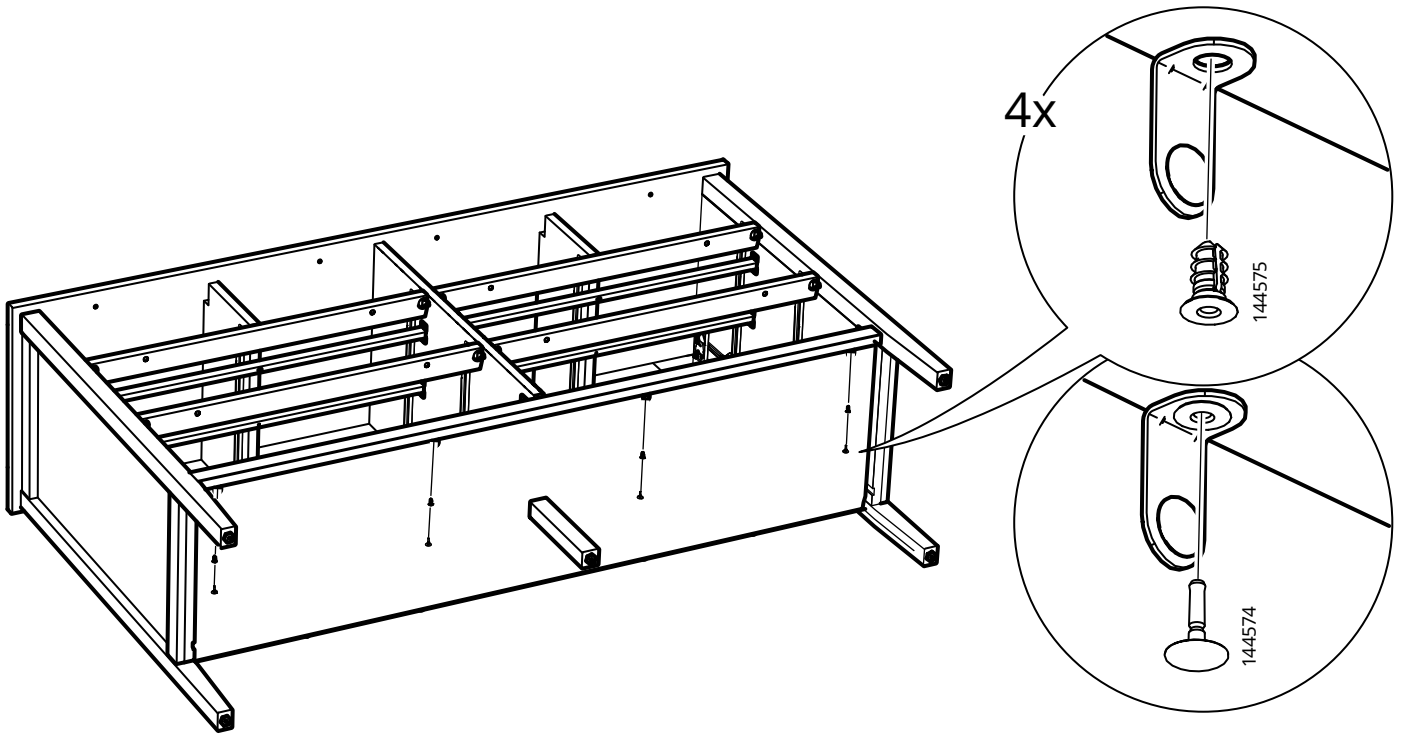 


26

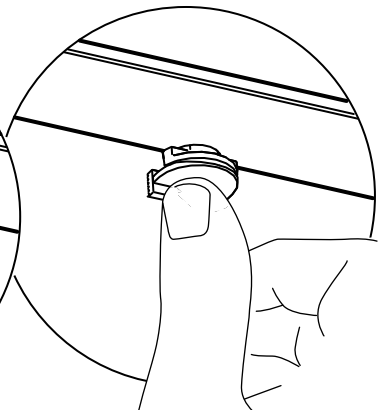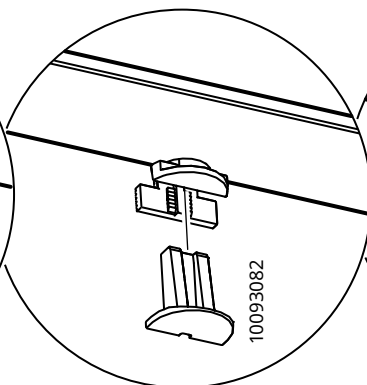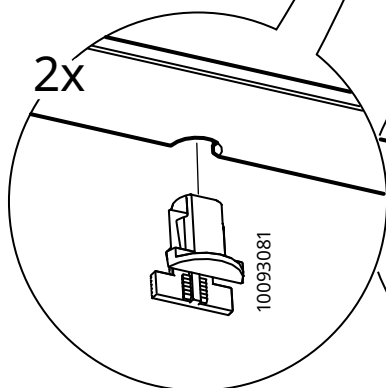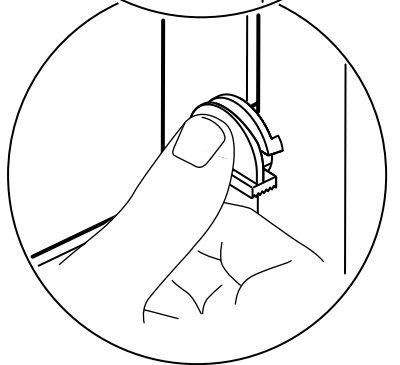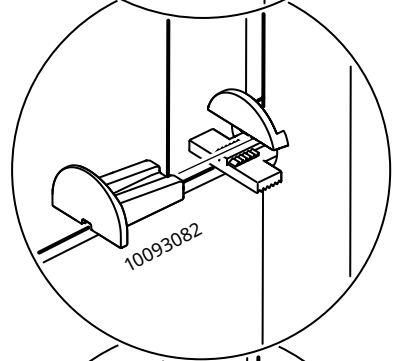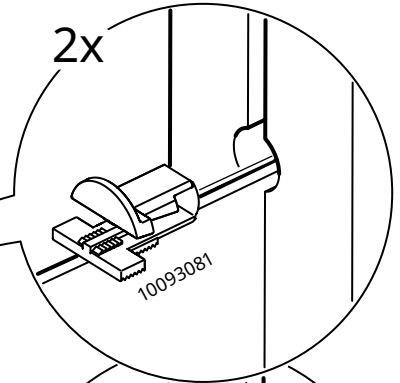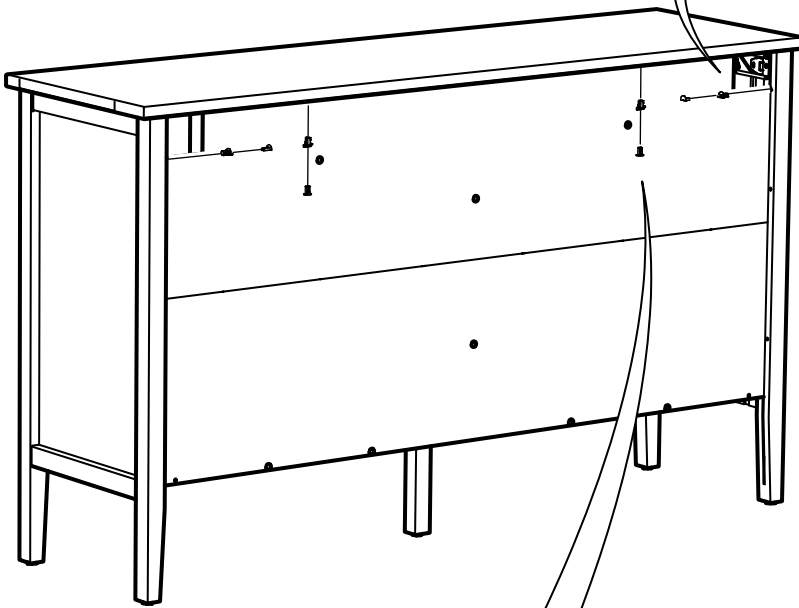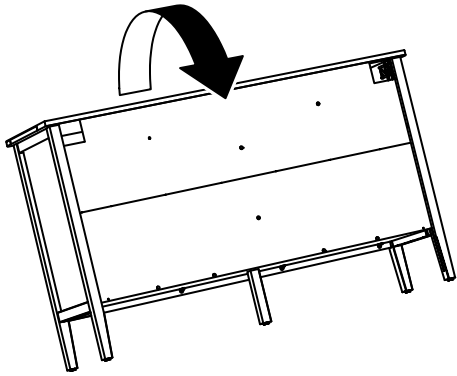        



27

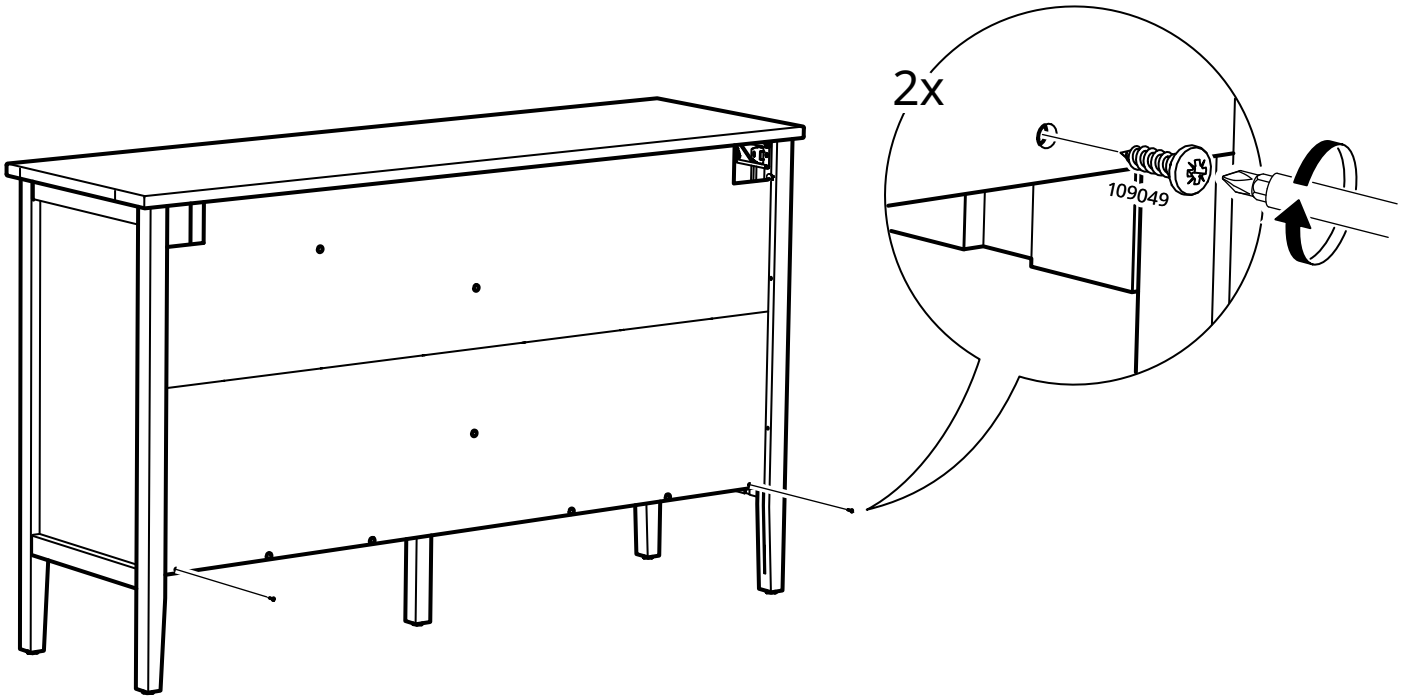 



28

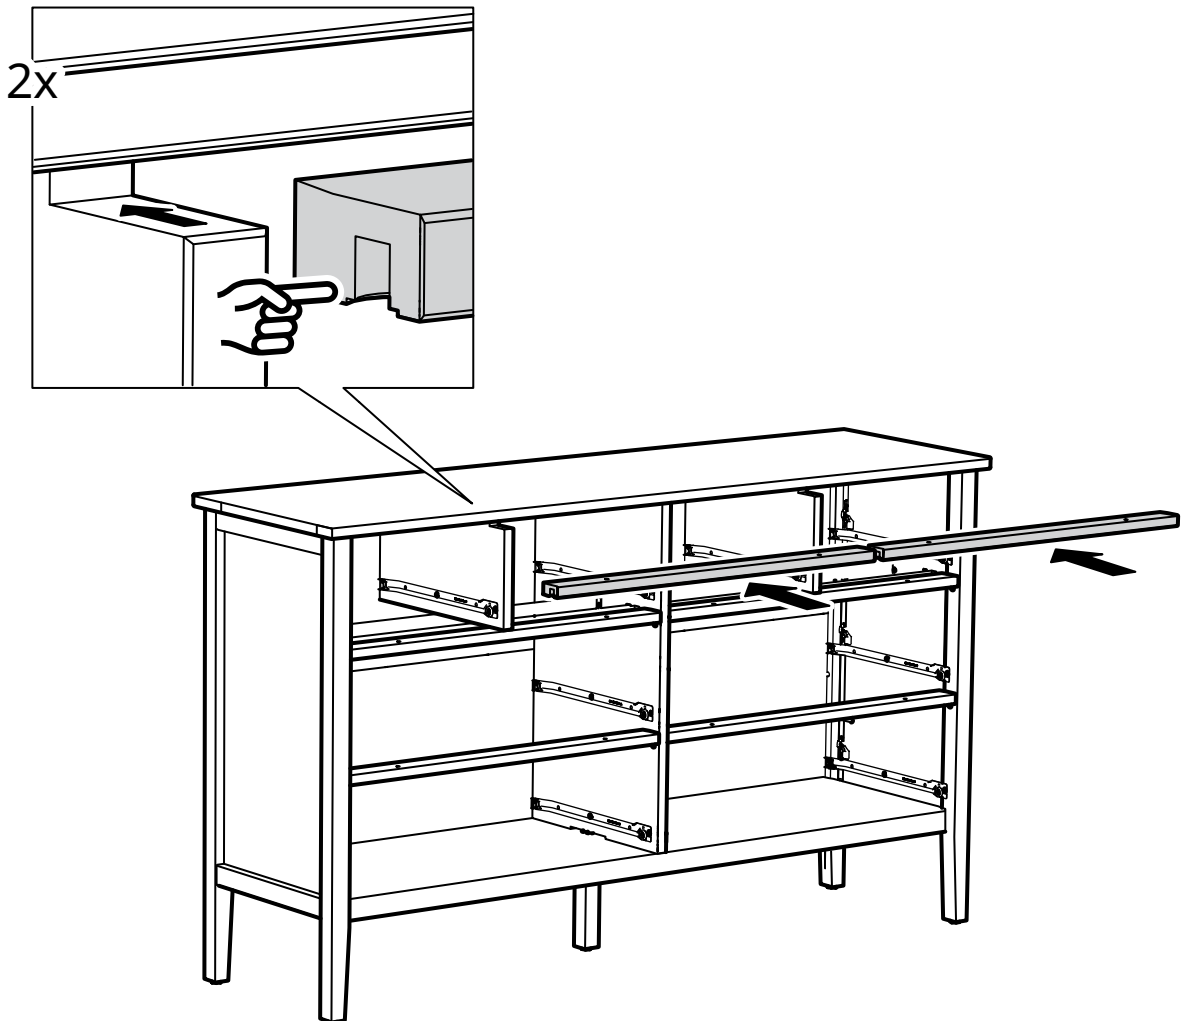 



29


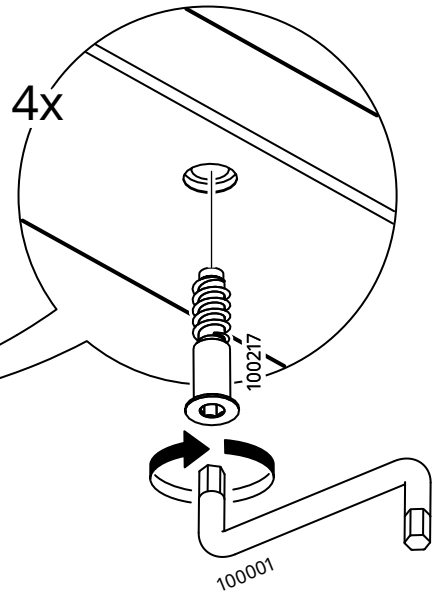 
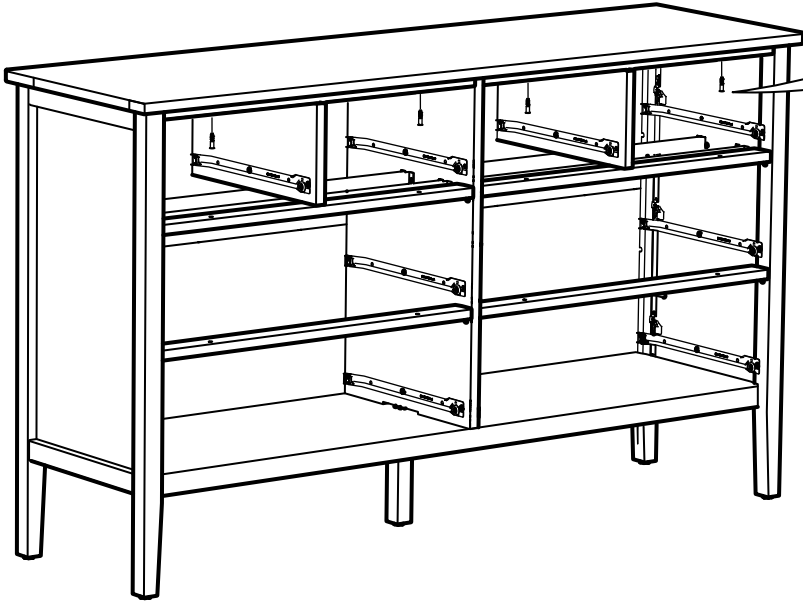 


30



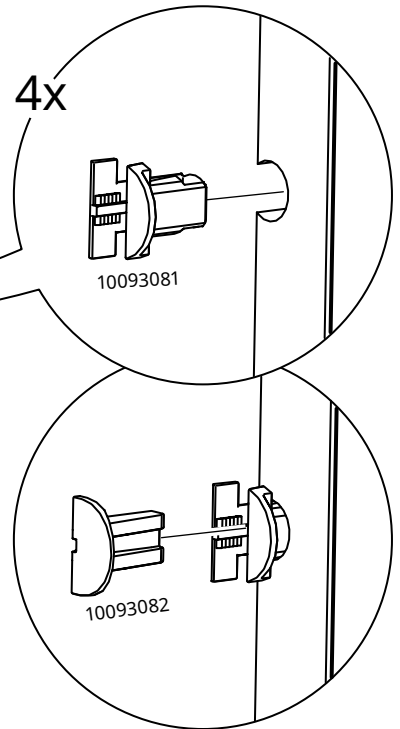 
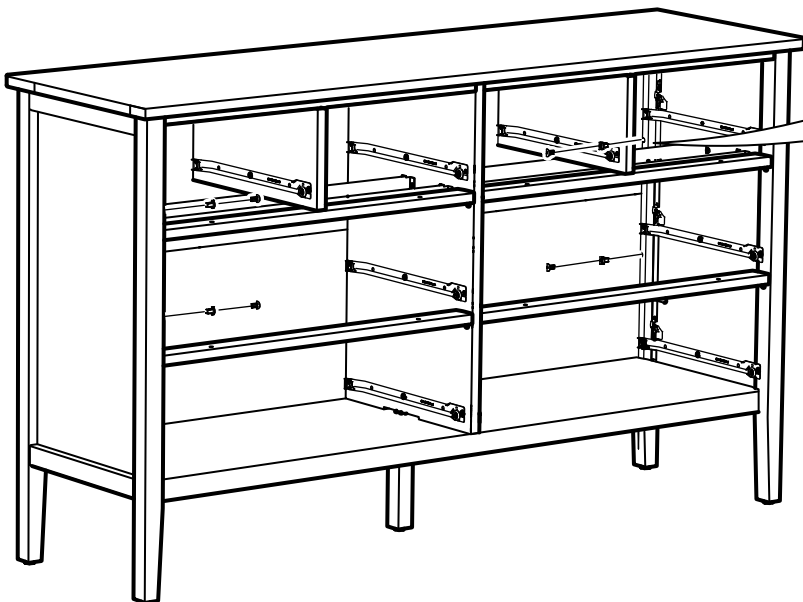 



31

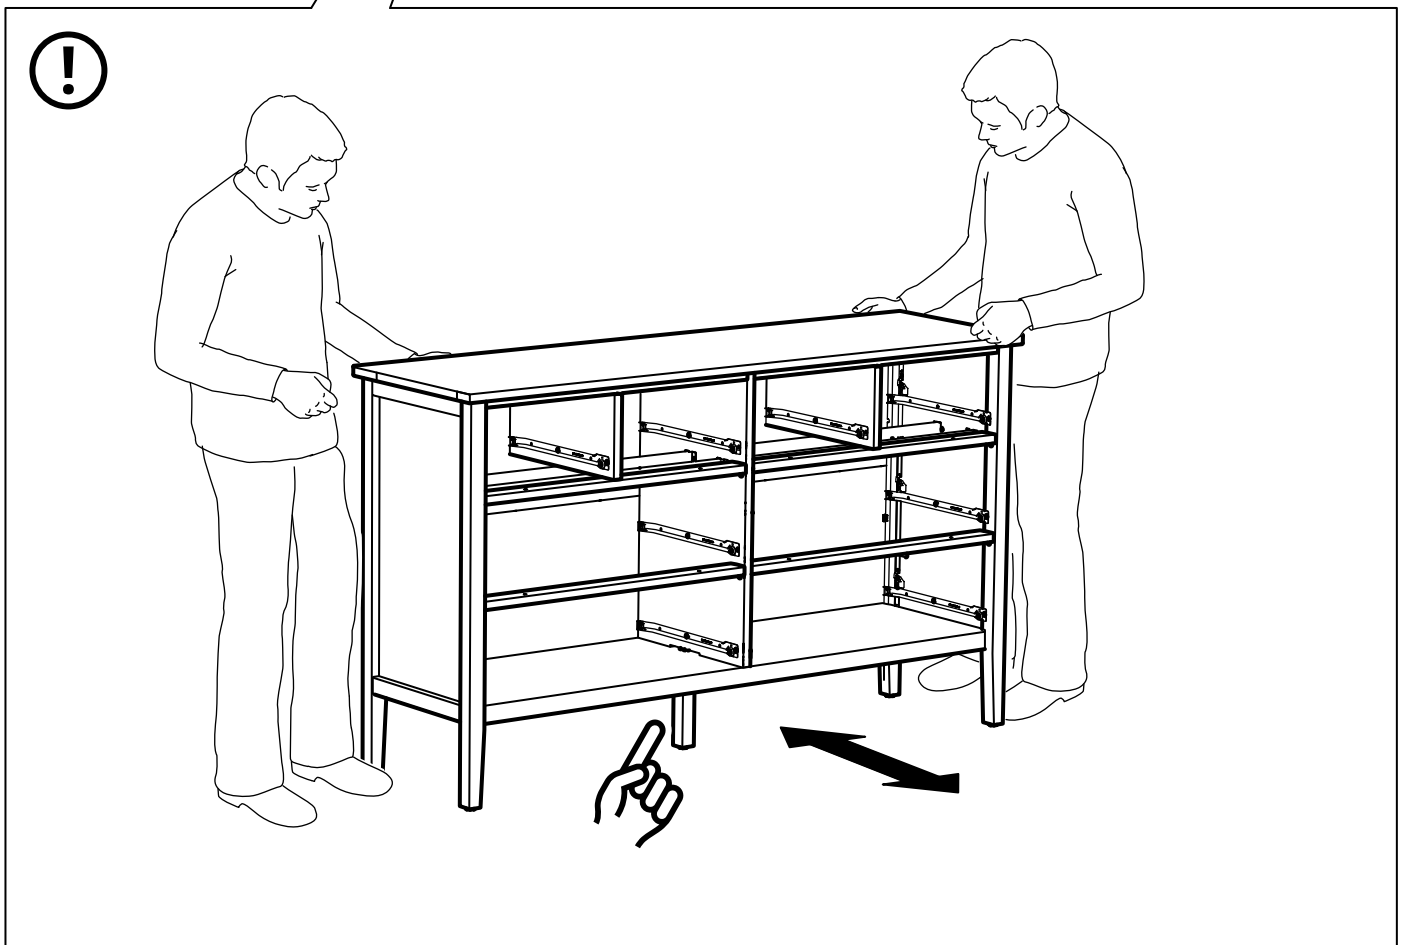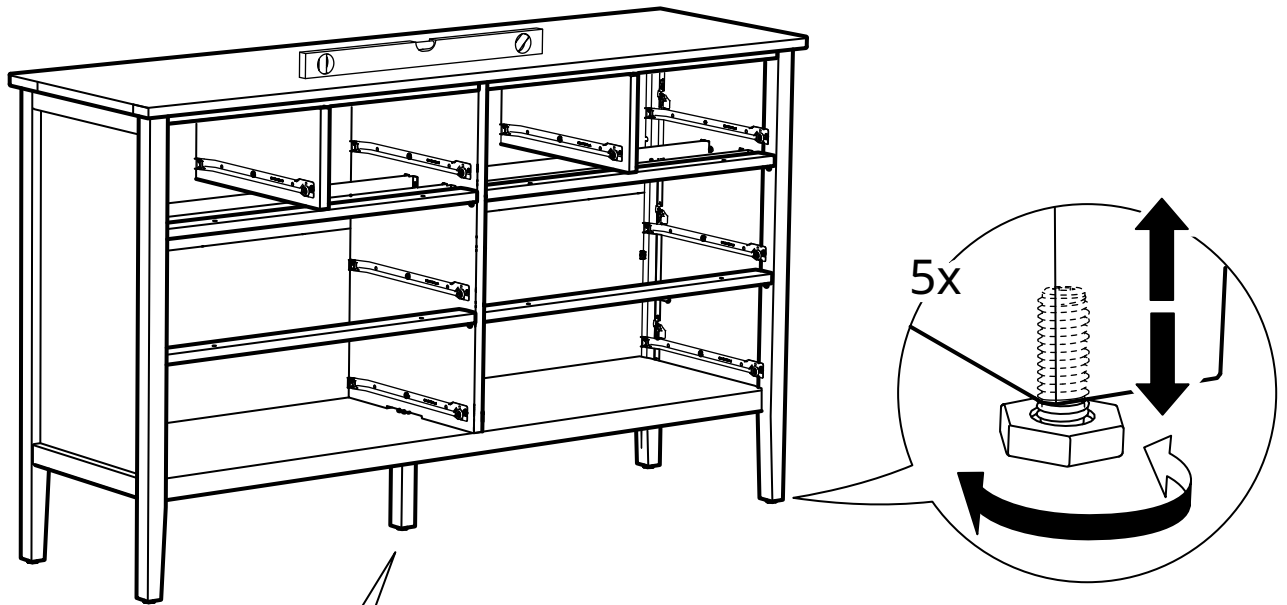  

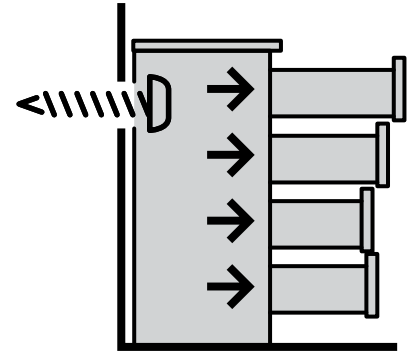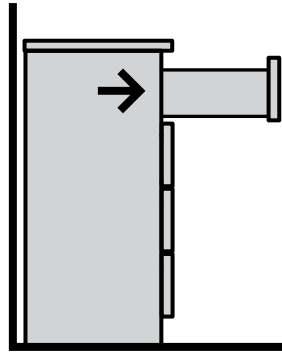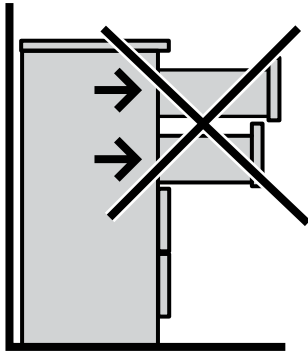   


32

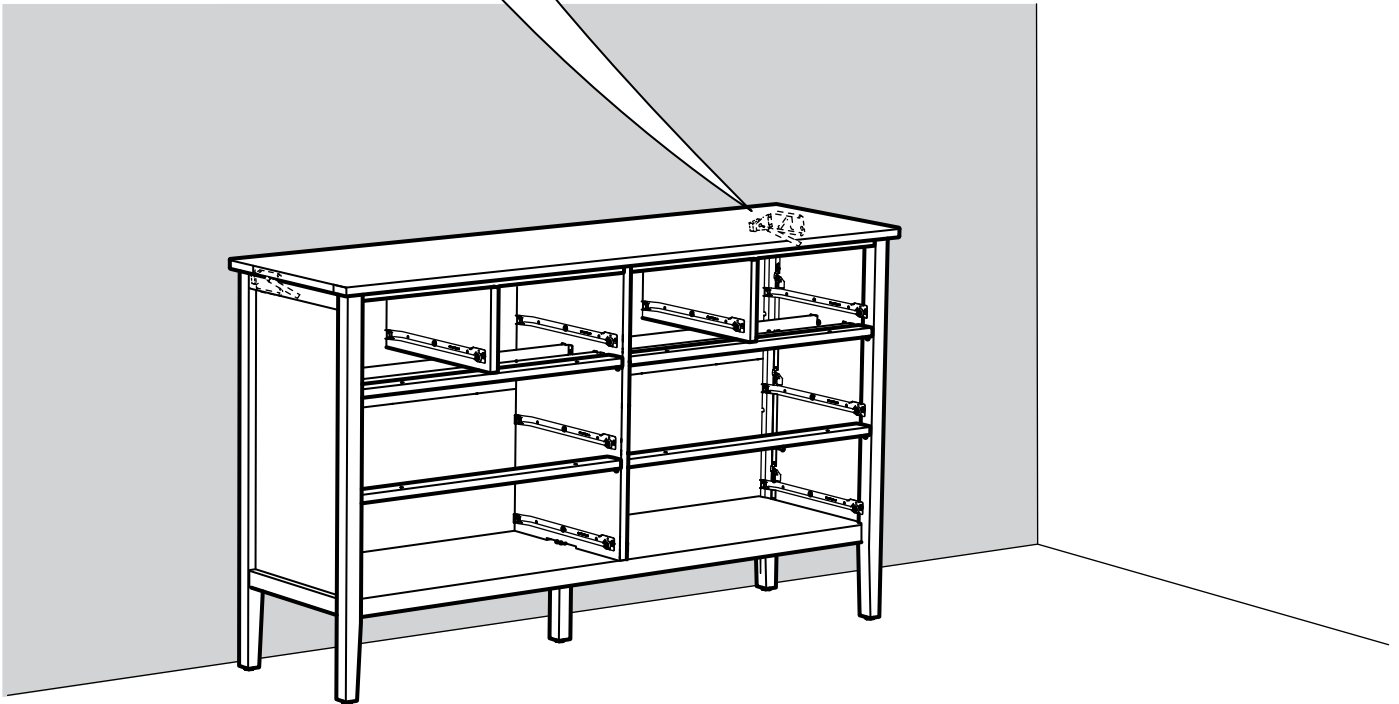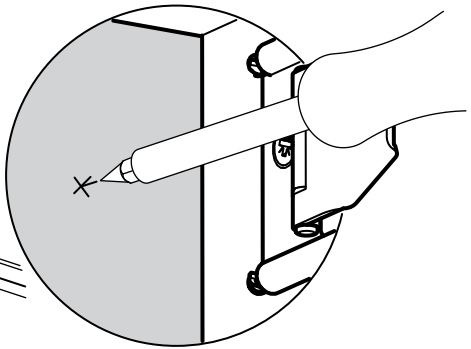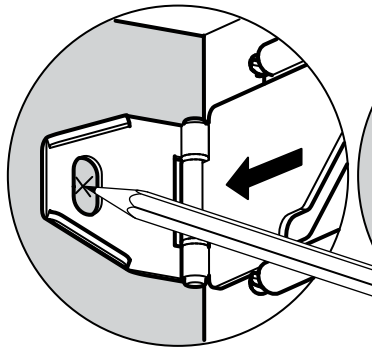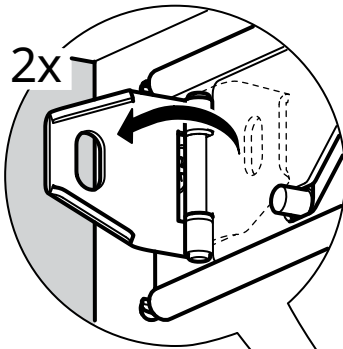    

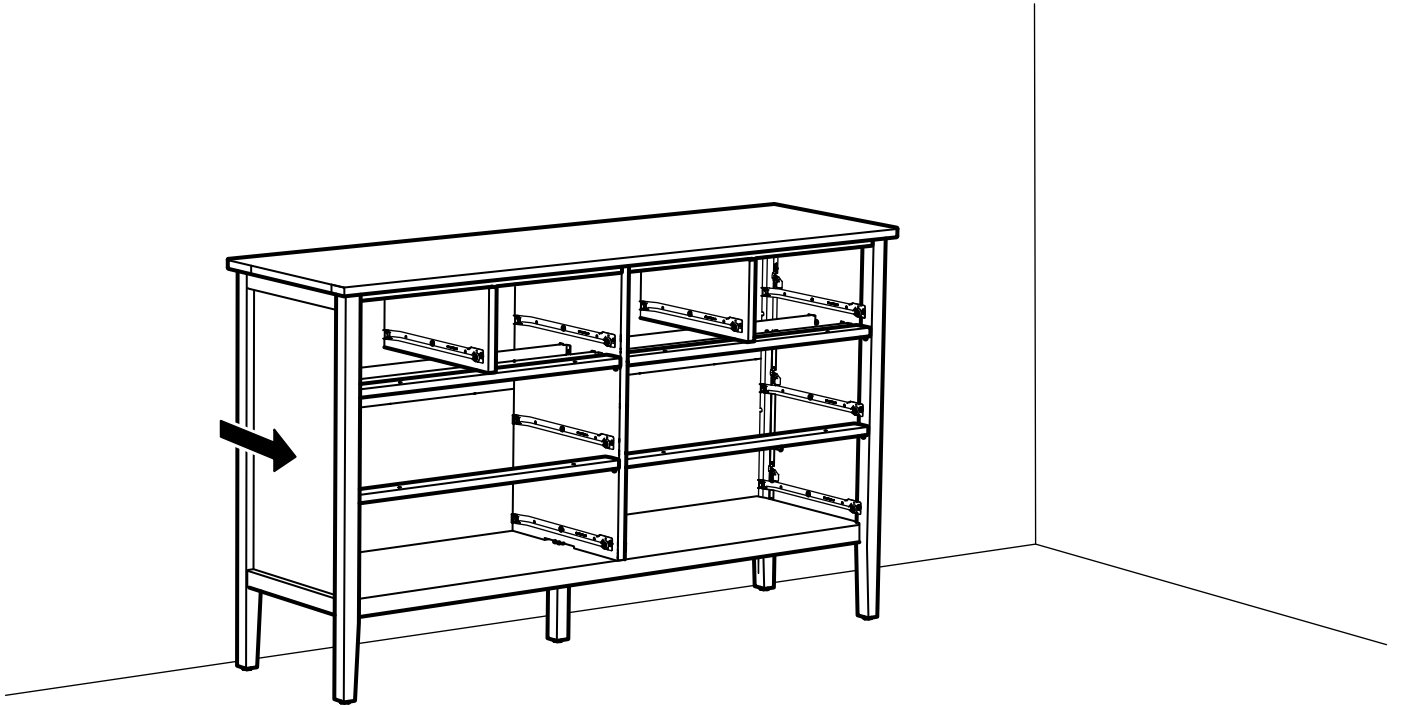 




www.IKEA.com/secure-it

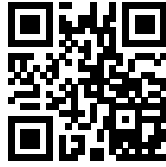 

www.IKEA.cn/secure-it

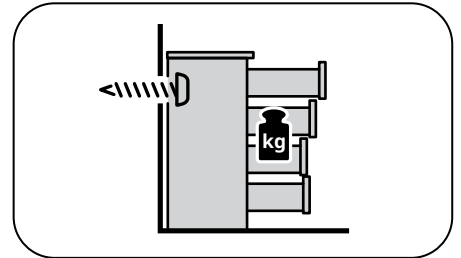 

34

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

A

Ø 8 mm (5/16")

- 1**
- 2** 70 mm (2 3/4")
- 3**

B

Ø 8 mm (5/16")

 
 
 
 
 
 
 
- 1**
- 2** ≈ 30 mm (≈ 1 1/4")
- 3**

C


Ø 3 mm (1/8")


- 1**
- 2** ≈ 30 mm (≈ 1 1/4")
- 3**

35

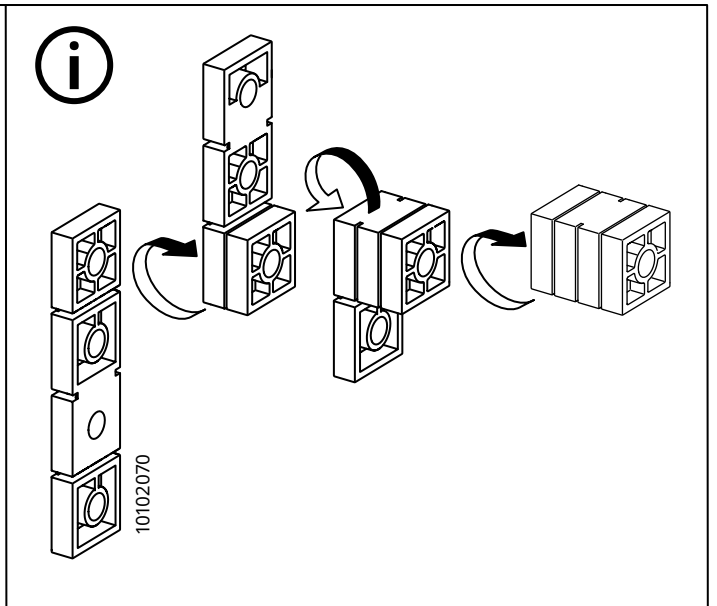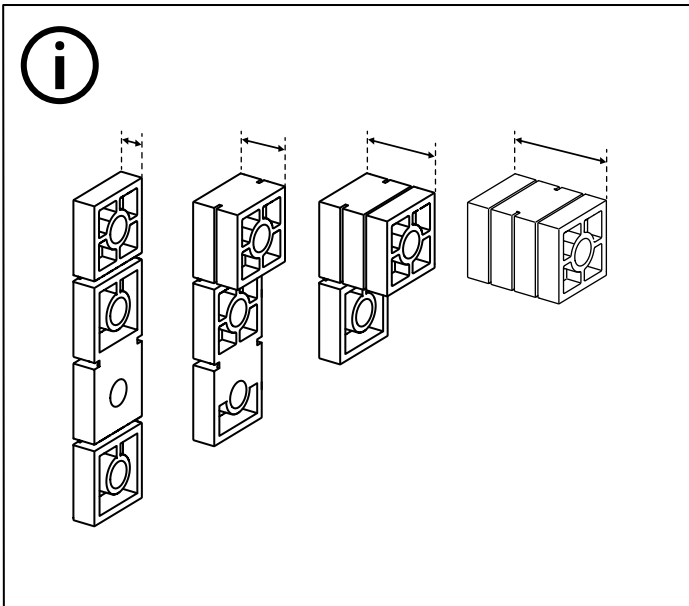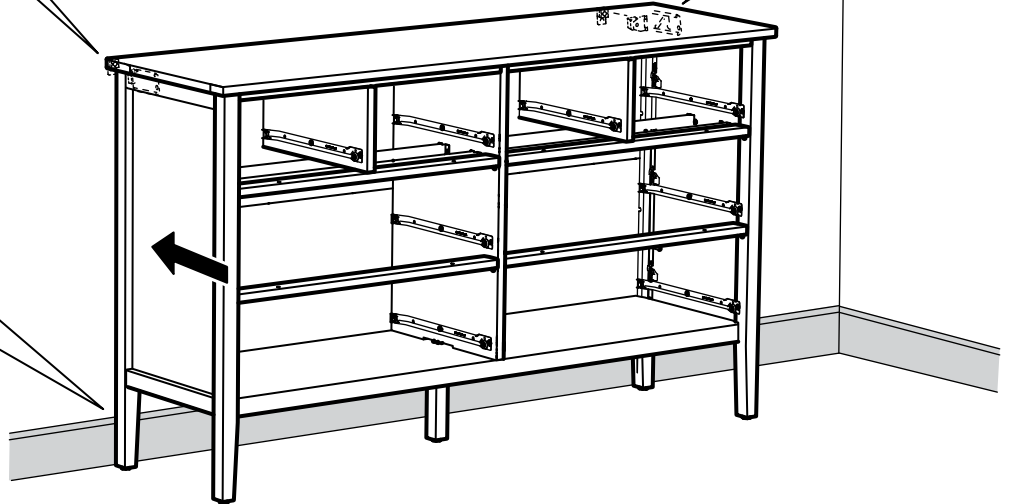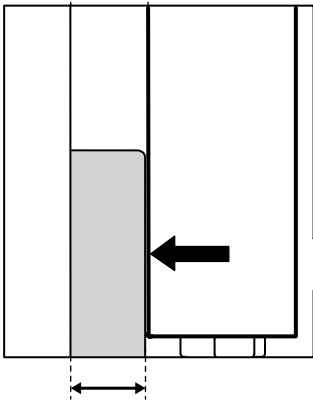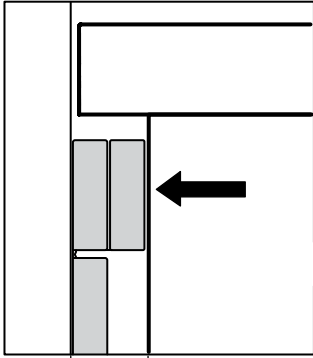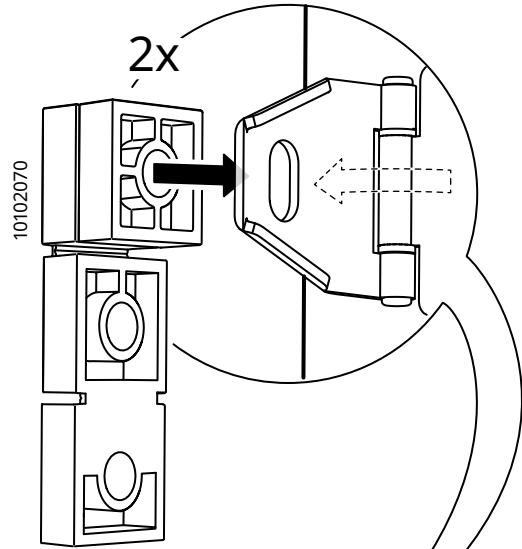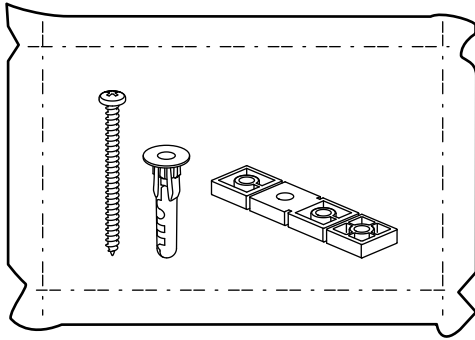


36

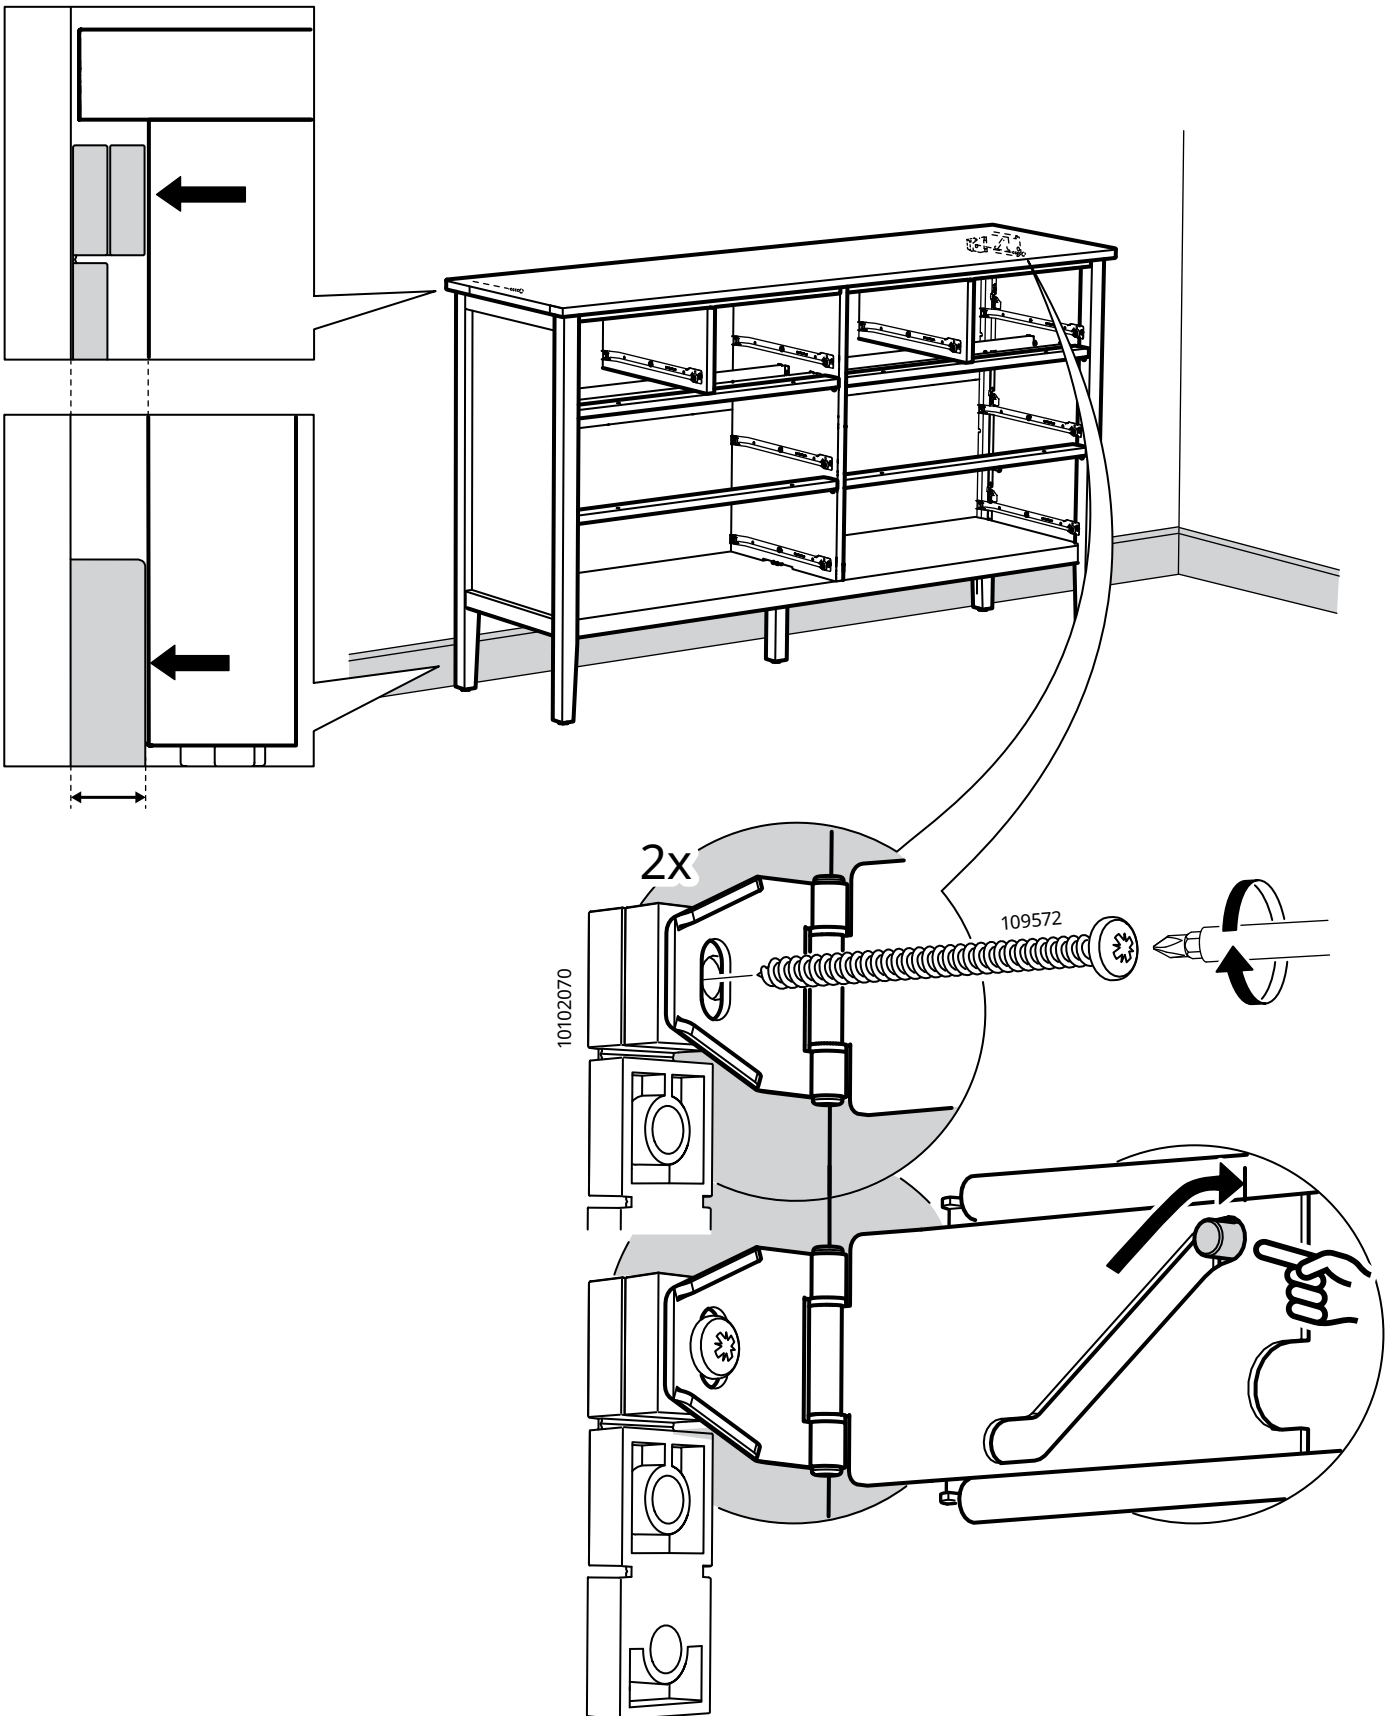 



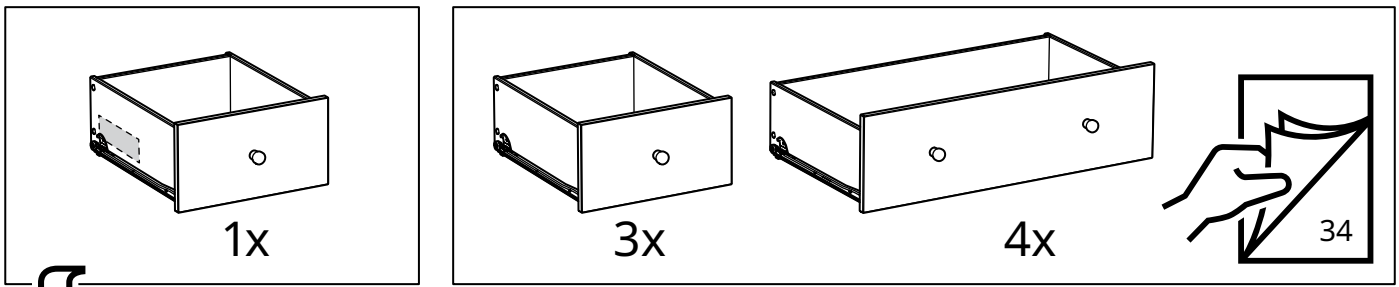 


↓
37

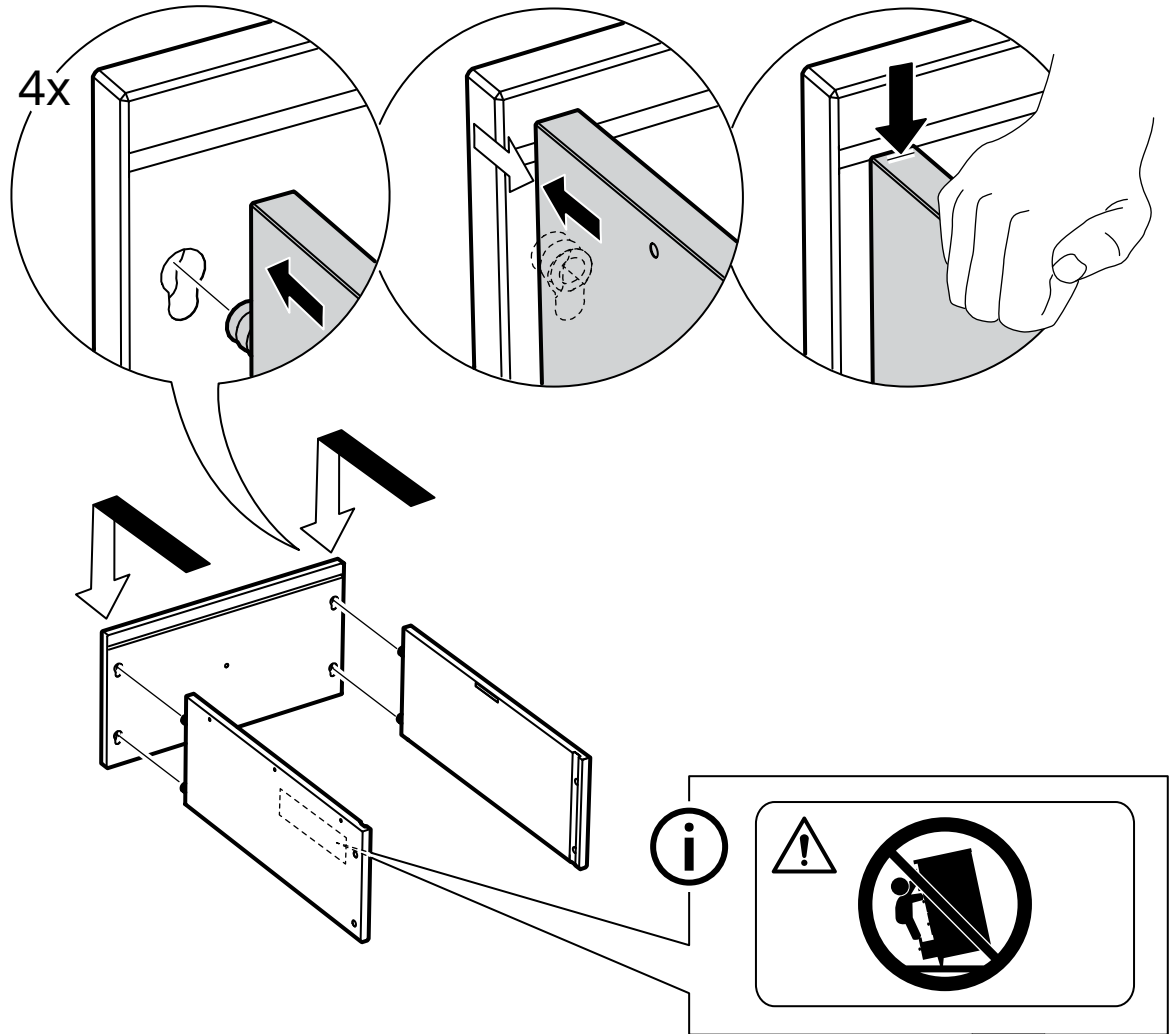 


38



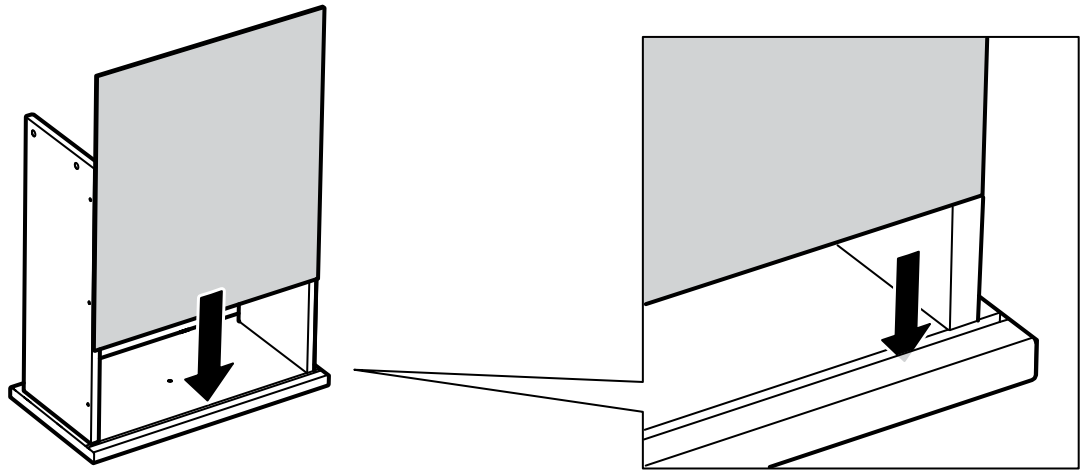 


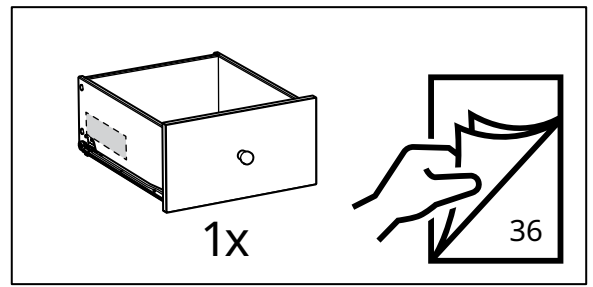 
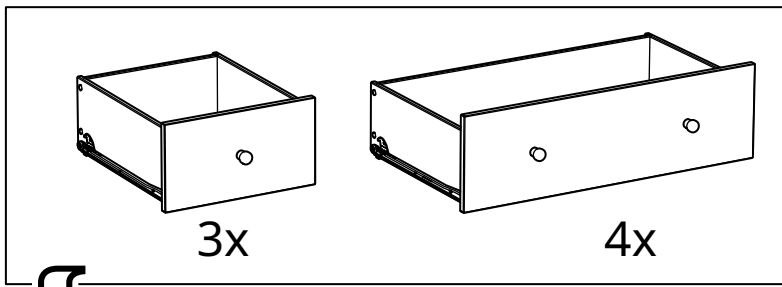 


↓
35



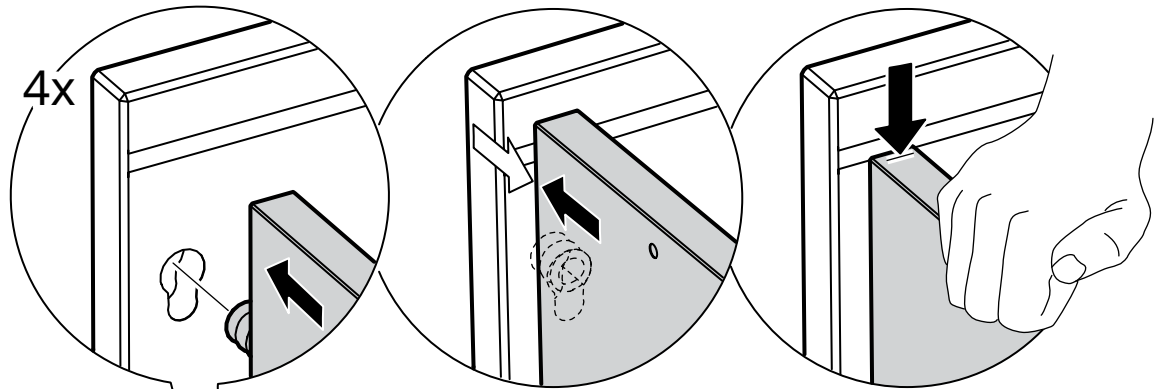 



36

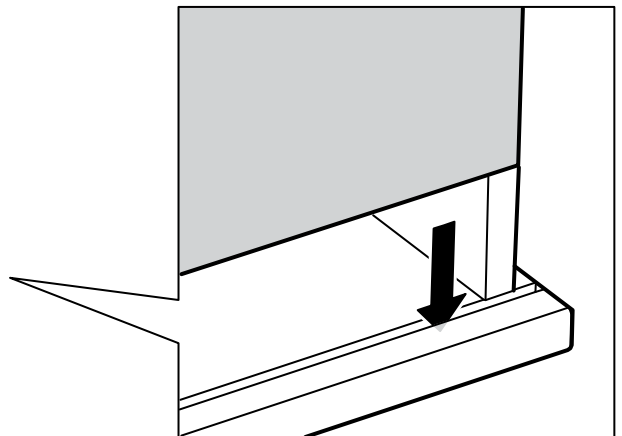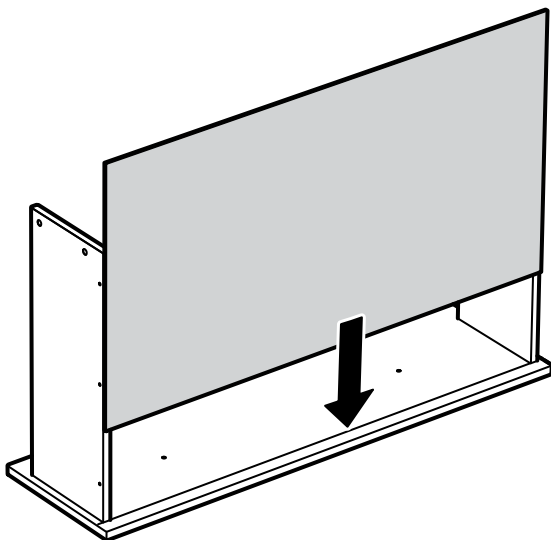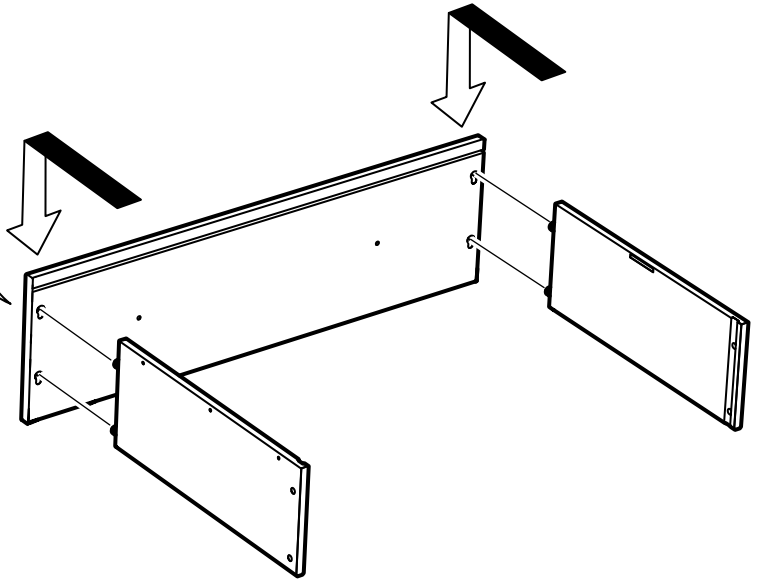   

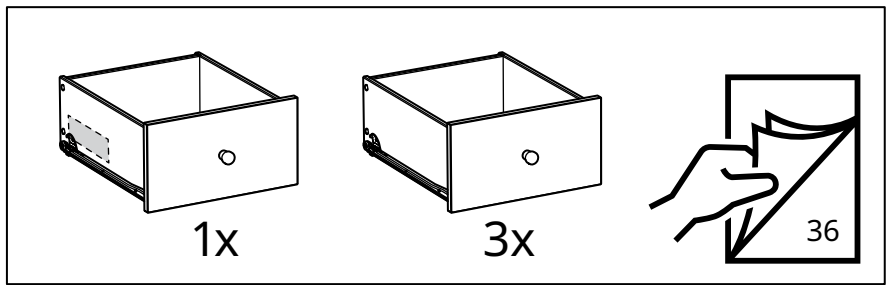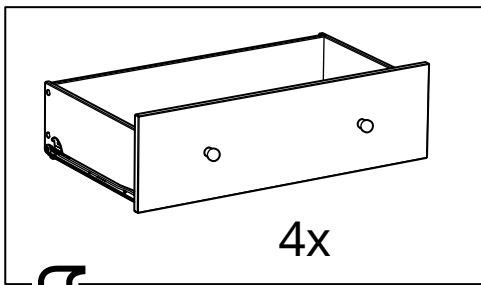  


37

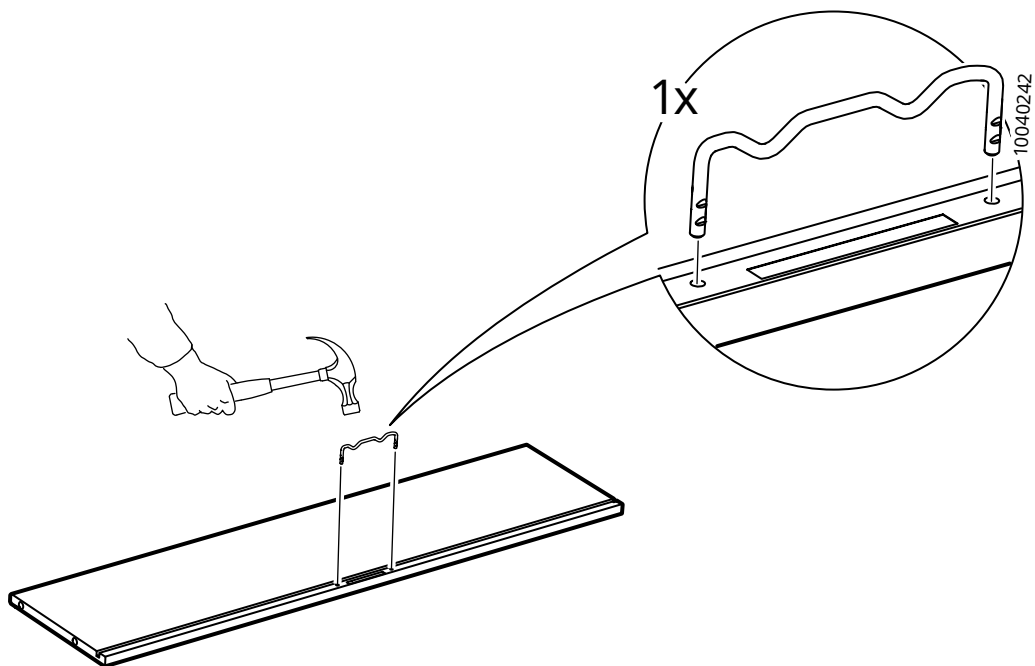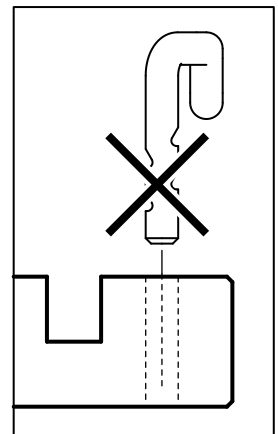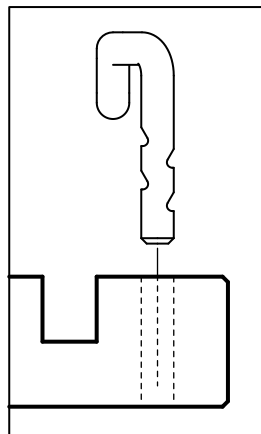   


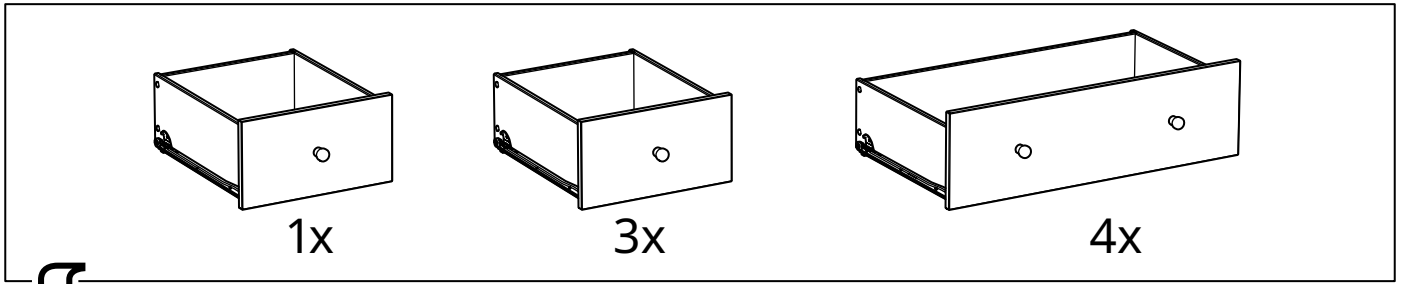 


39

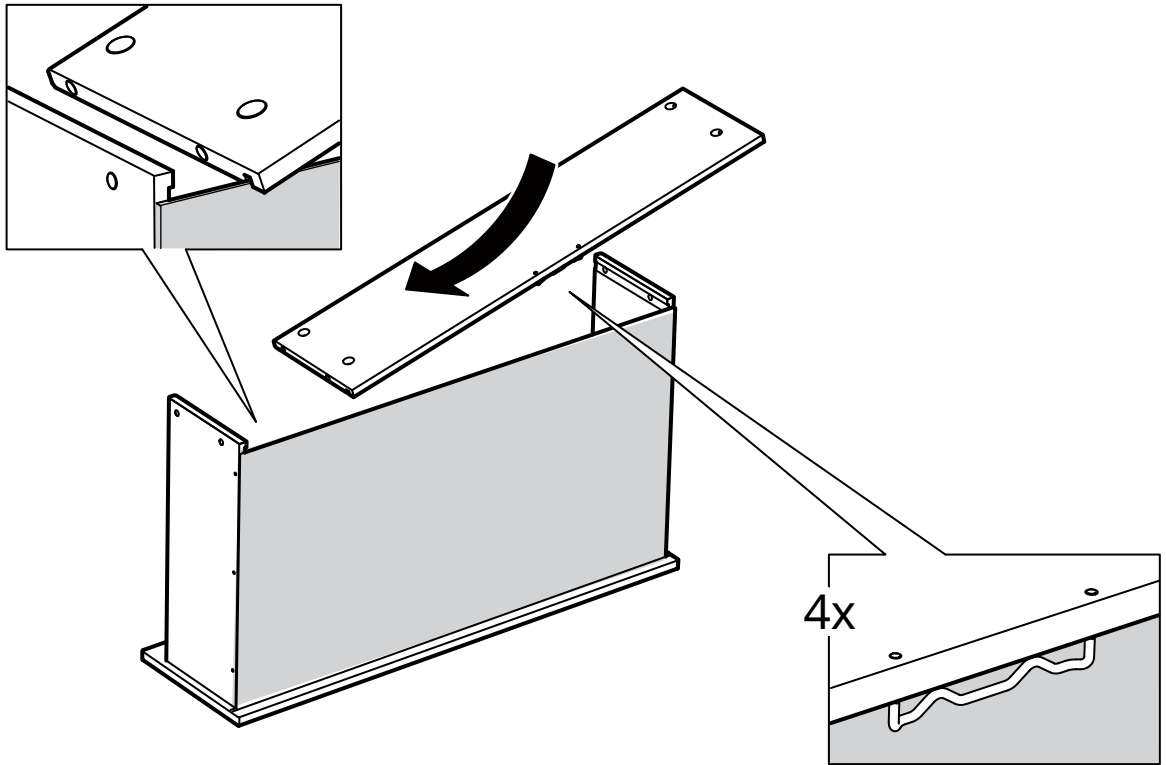 


40

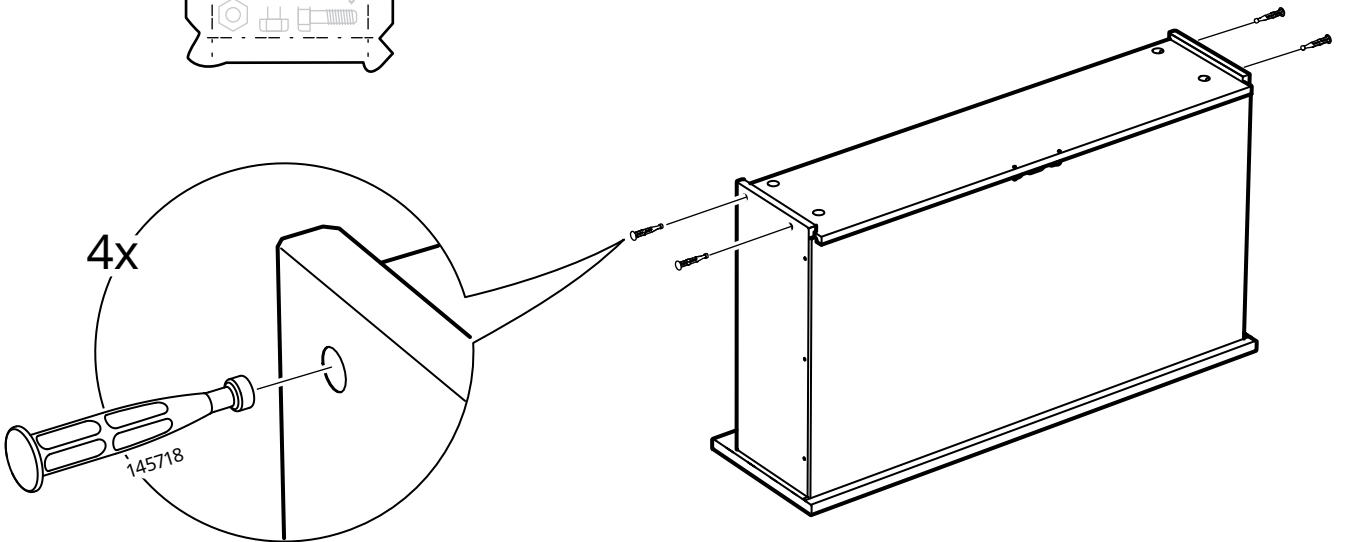 


41

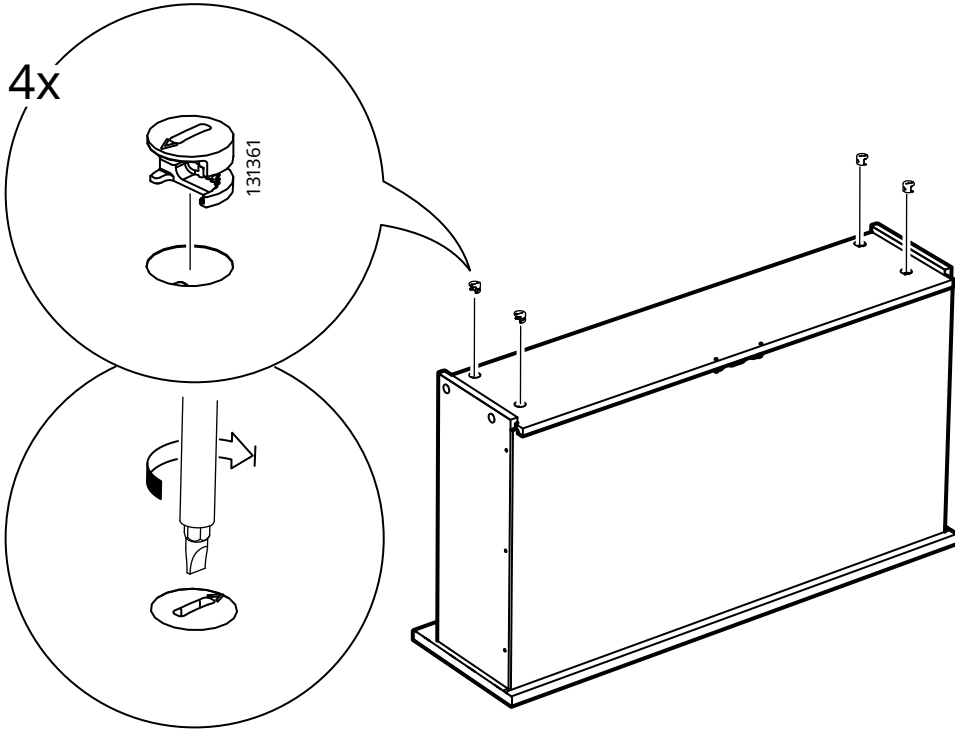 


42

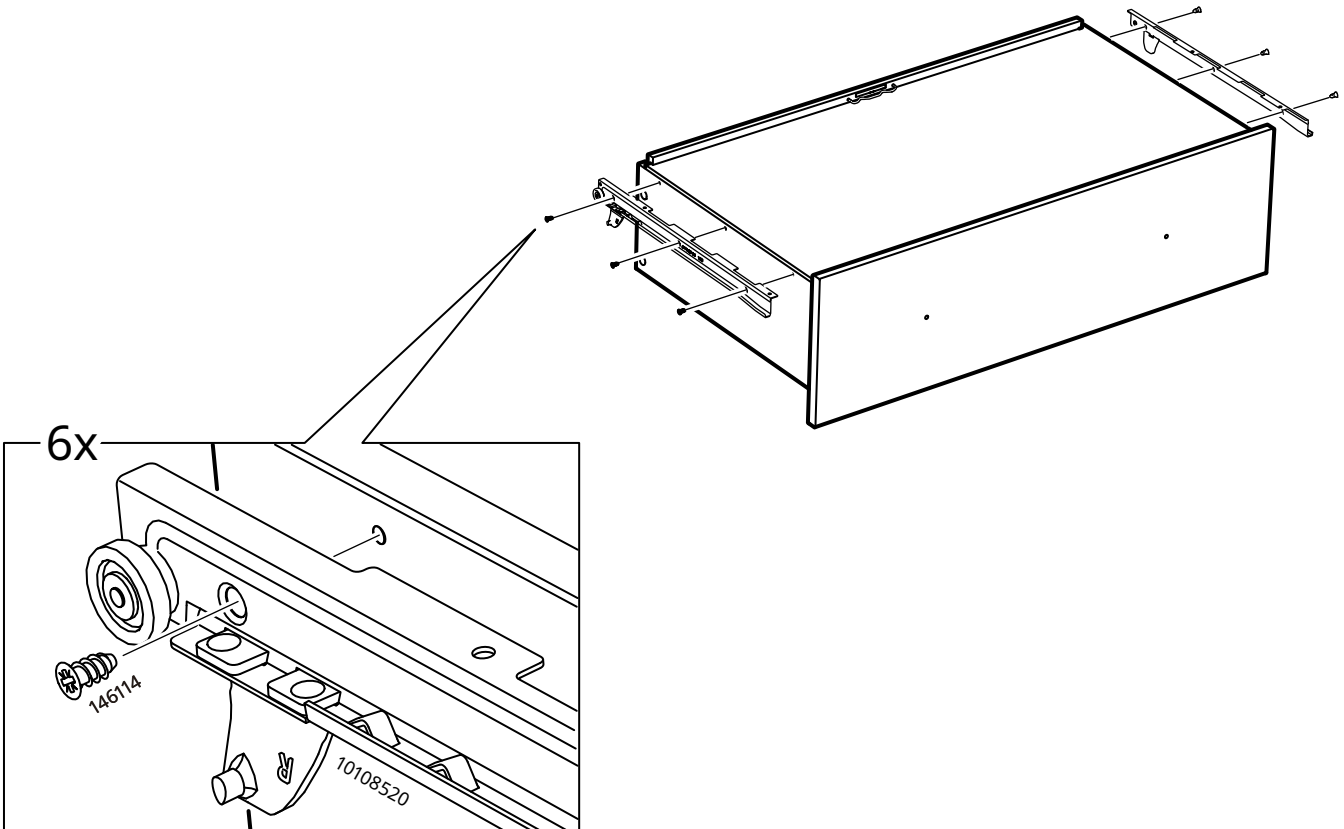 



43

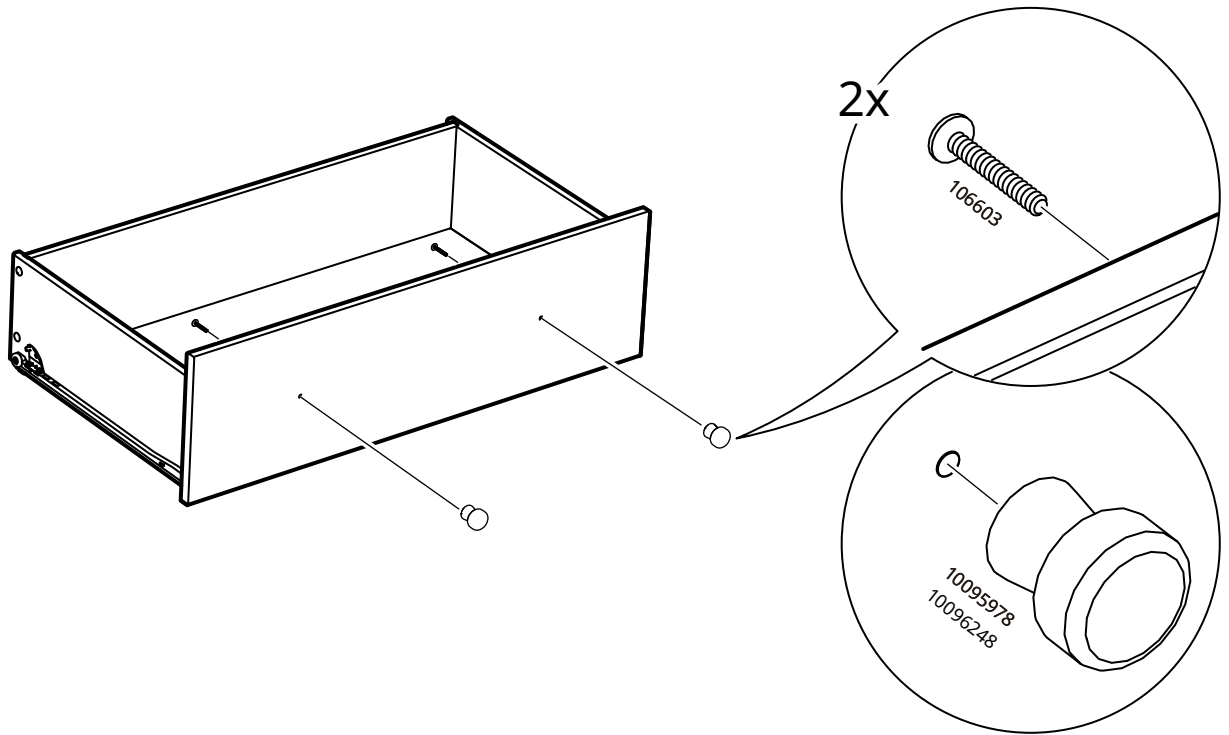 

44

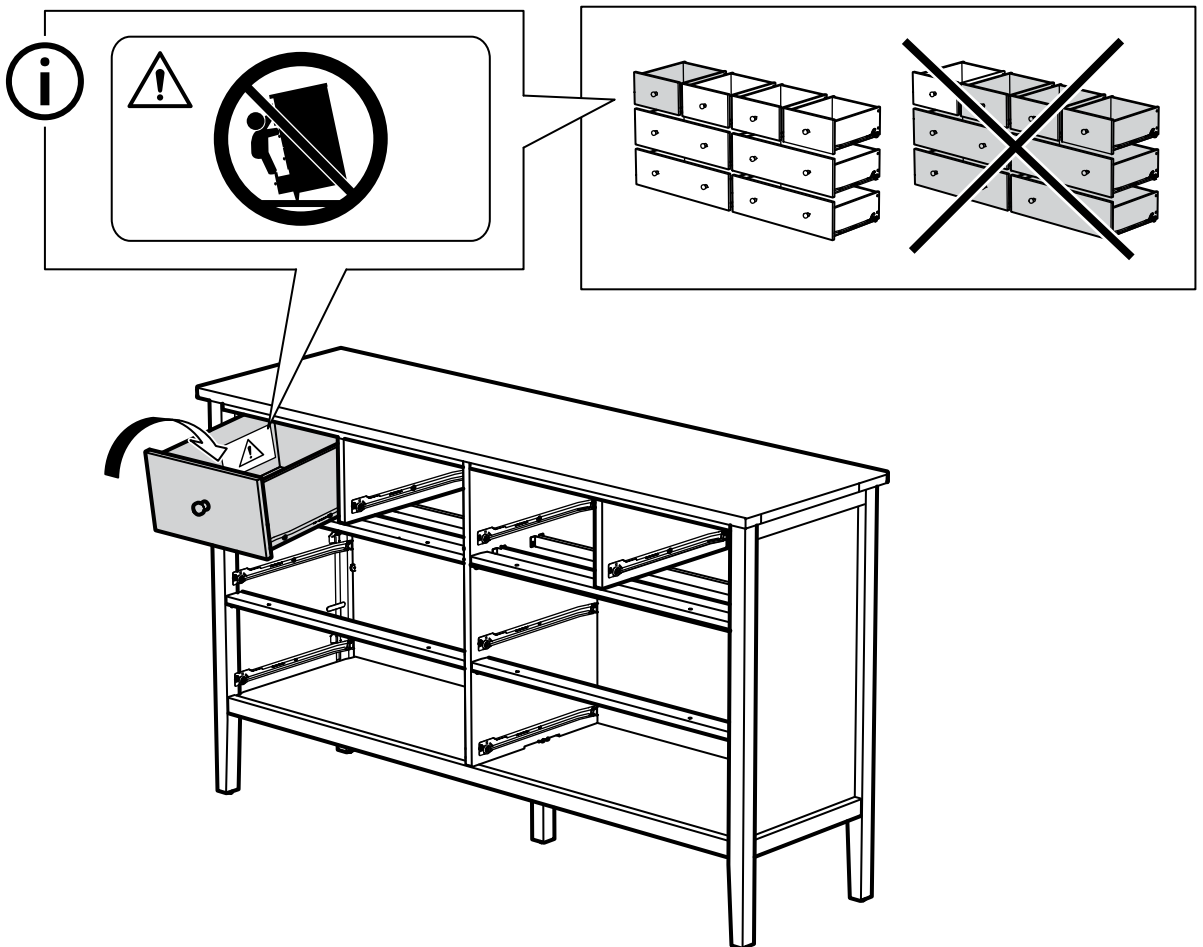 

45

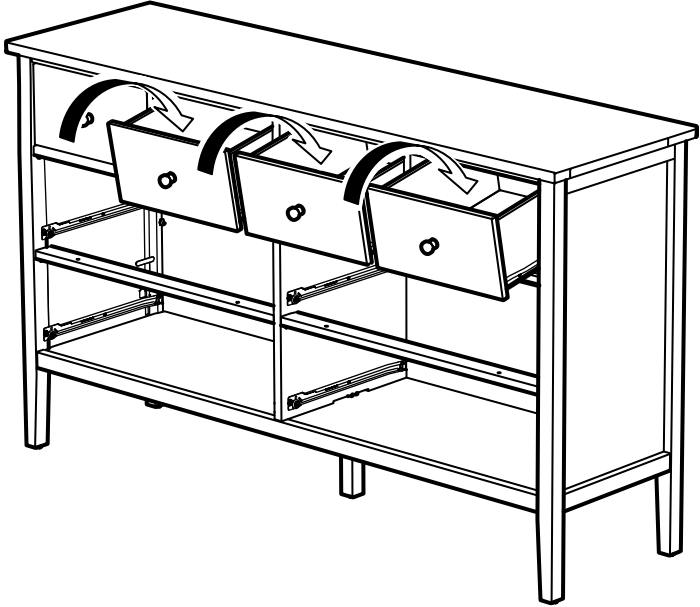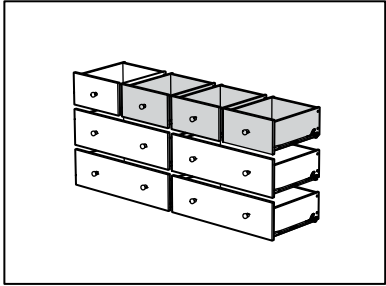  

46

