 
 
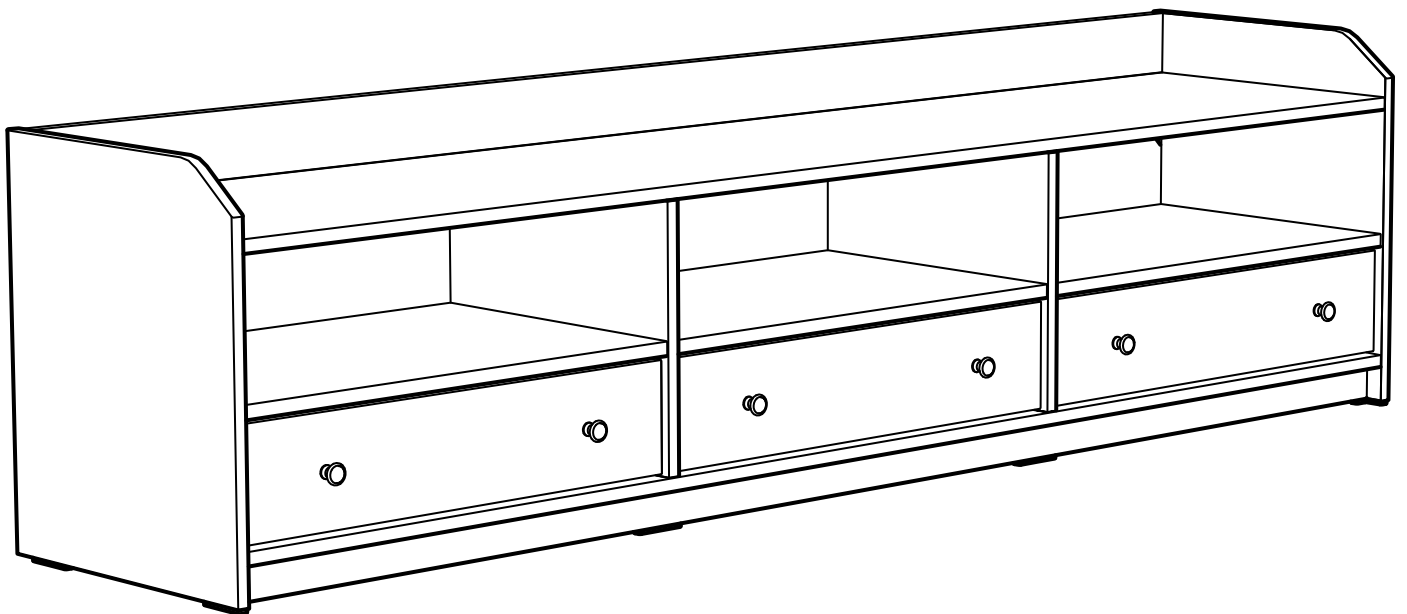 
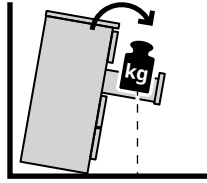 


HAUGA

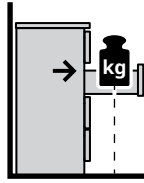

Design and Quality
IKEA of Sweden



English

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

 
 
 
ALWAYS install anti-tip device provided.

 
 
 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

ALWAYS secure your television with an anchor device.

English


Read and follow each step of the instruction carefully.

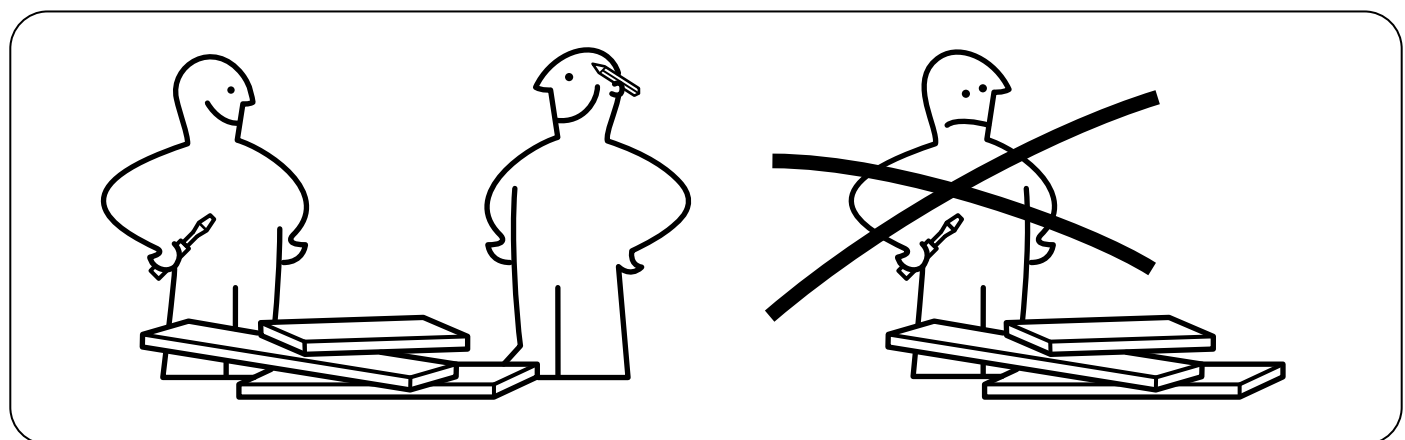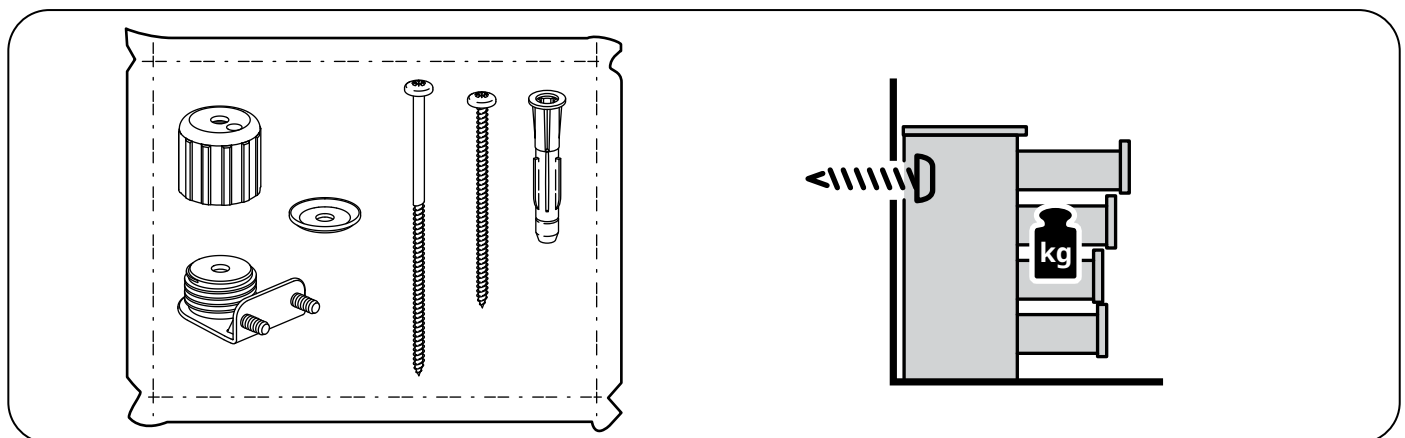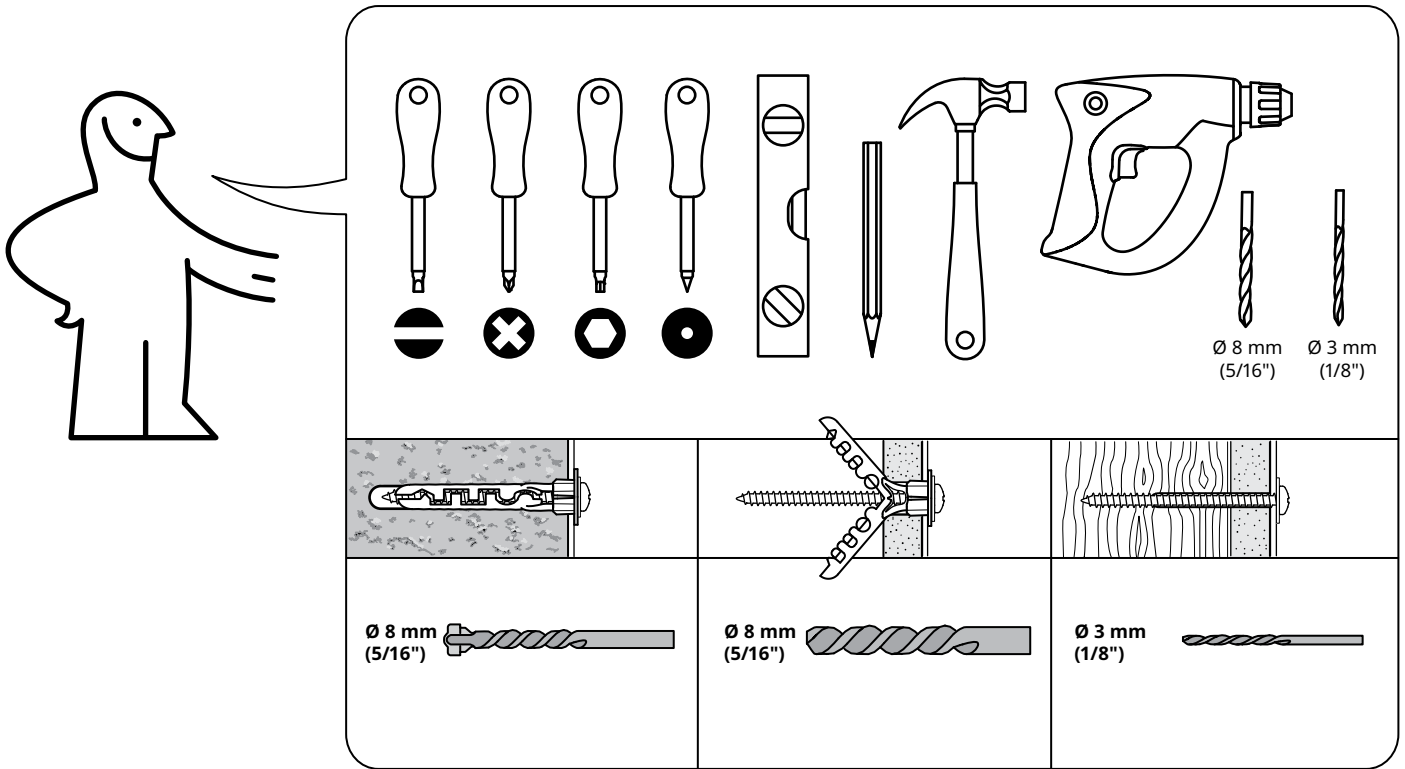

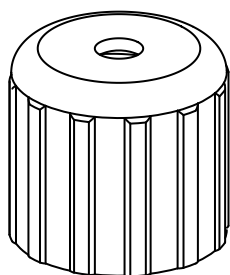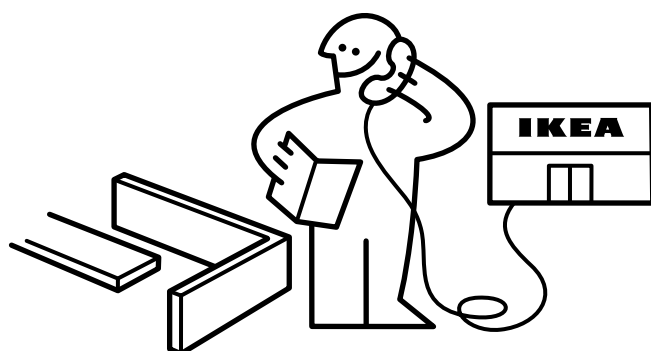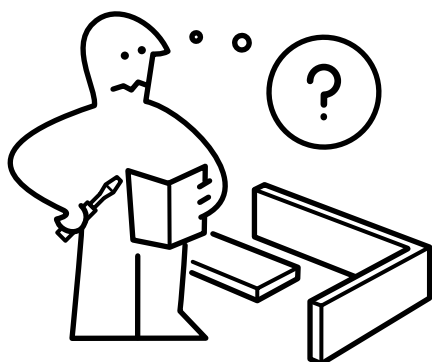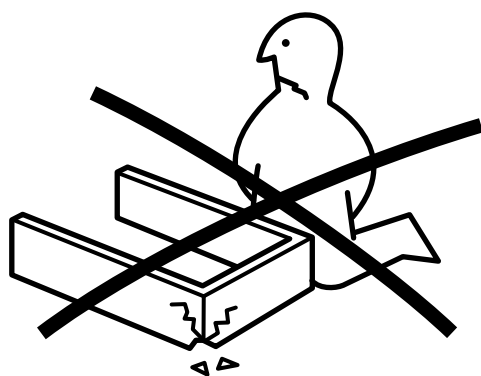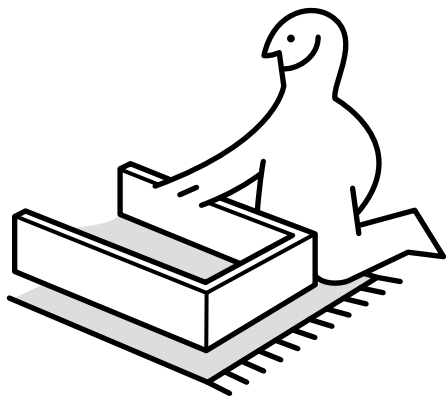


150689

 2x




126916

 2x

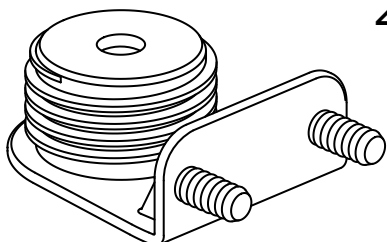


150688

 2x




147968

 2x



158469

 
2x



121714


2x

 1

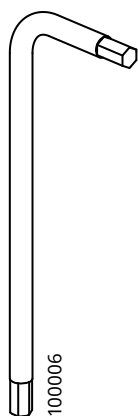

100006

 1x




100229

3x




101345

 16x




151705
151707

 16x



151706
151708

 16x

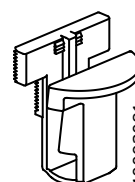

10093081
10095326

6x



 
146114

18x




10093082
10095315

6x

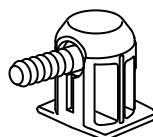


10051660
10051650

 12x

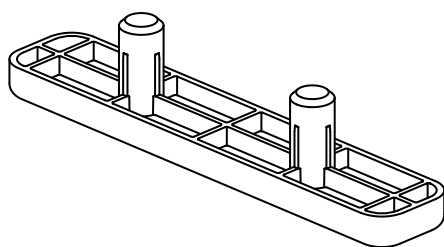


153548
158568

 4x

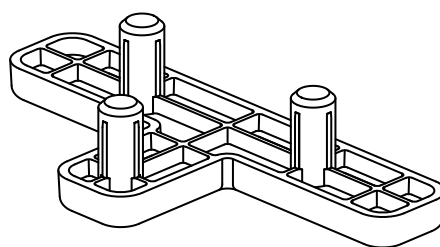

10040039
10051022

 4x

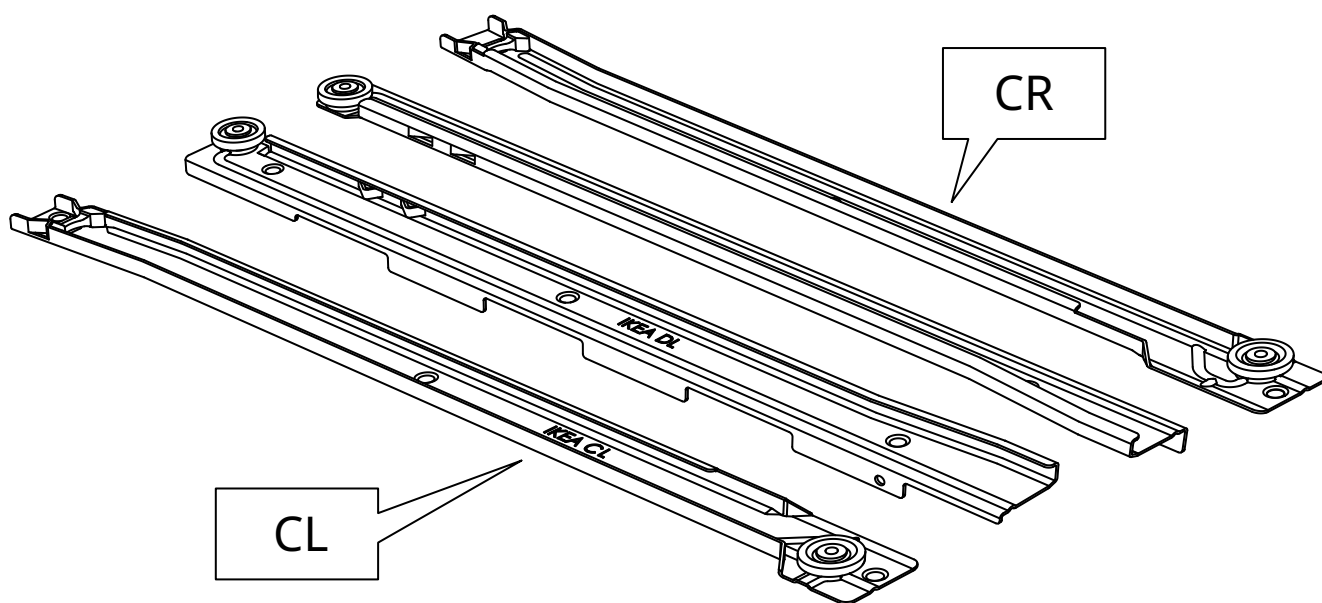


CL

CR

3x


10123855
10050475
10043622

 A




159553
10096669
145718

 12x




118331

 12x




101345

 6x




119976

 6x




118224
119030
120076

 24x

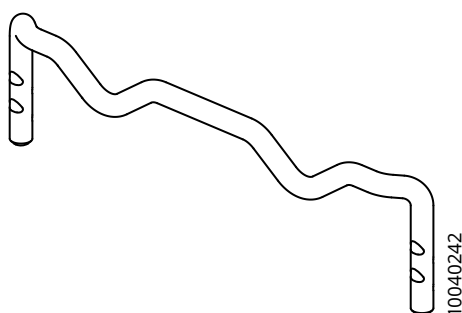

10040242

 3x

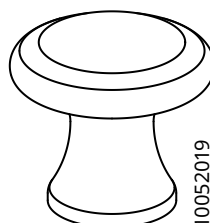

10052019

6x

 


146114


18x

[illegible]


3

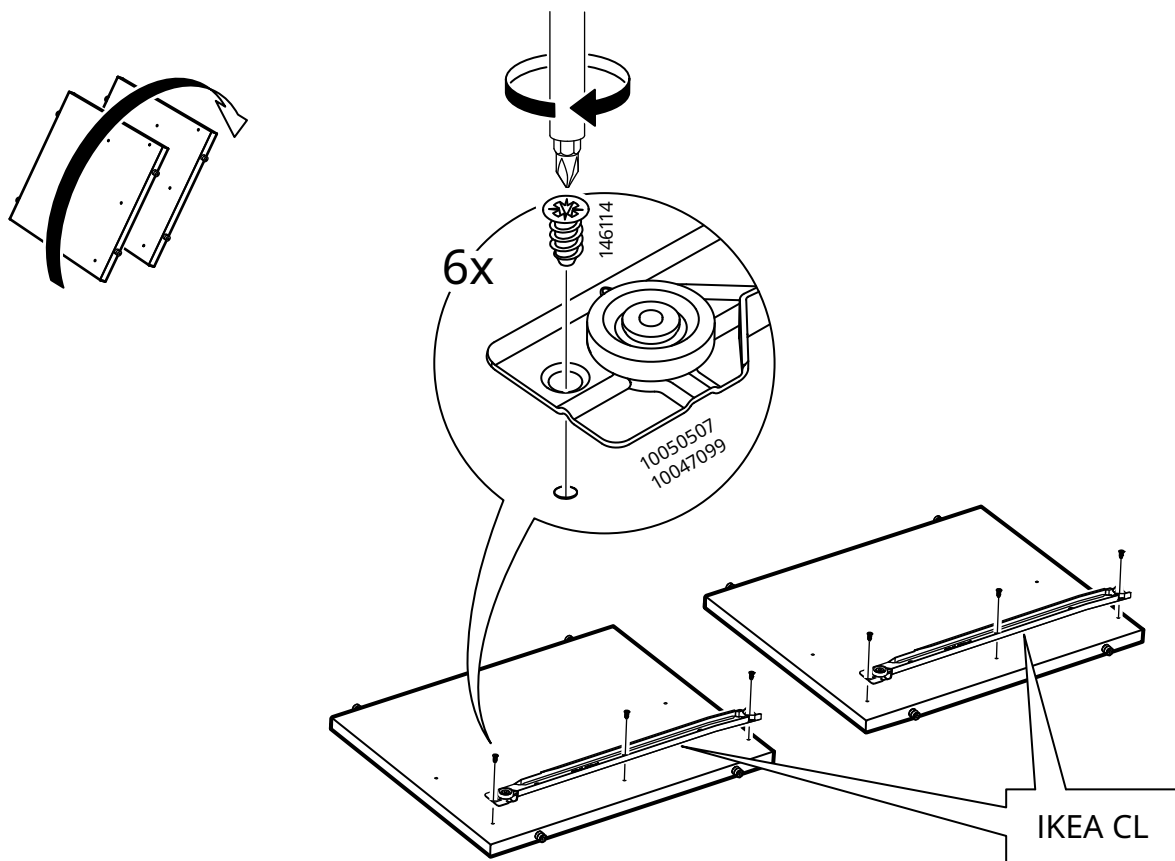


4

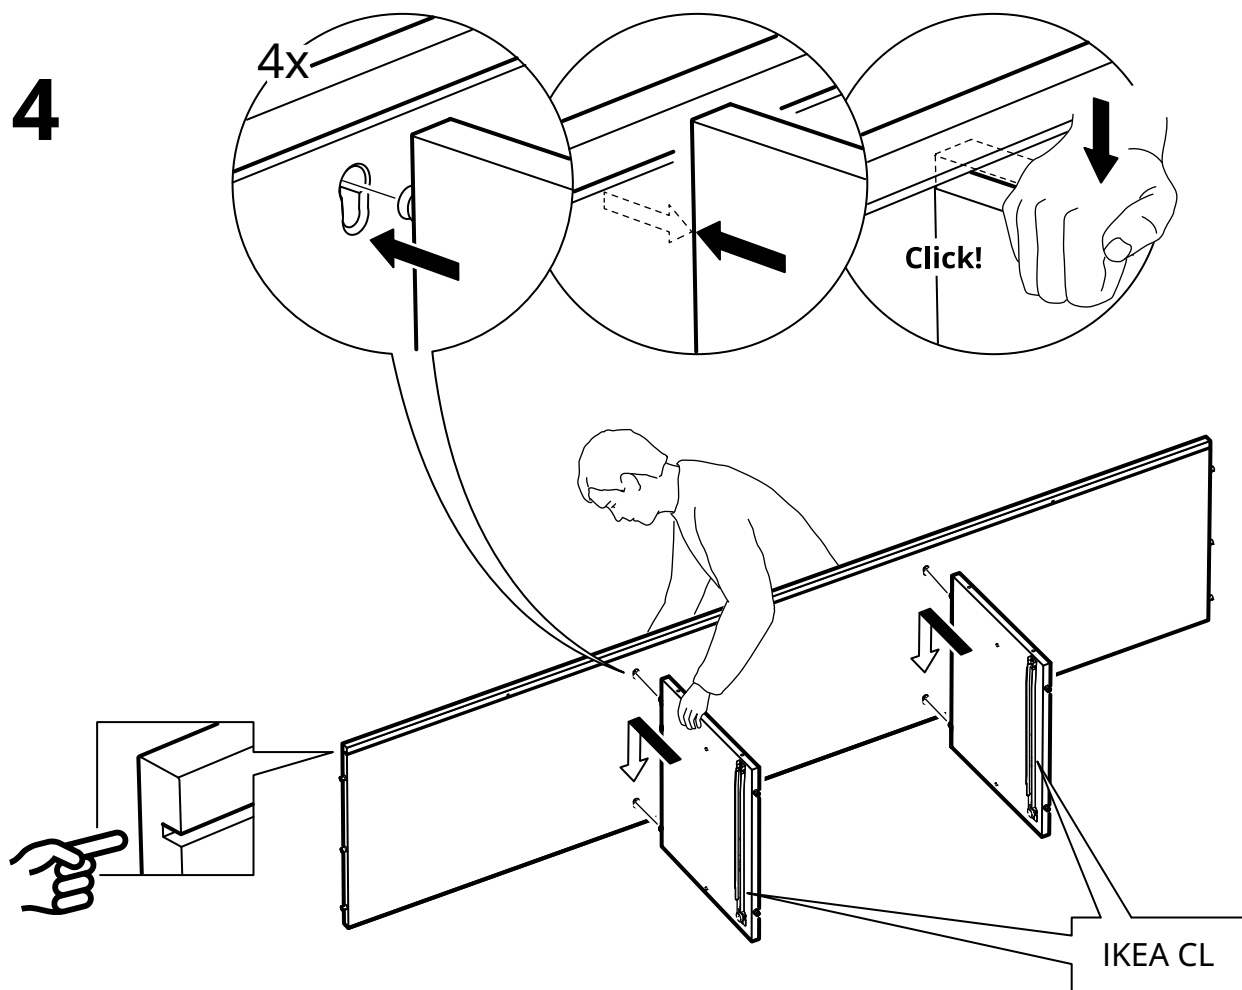 


5

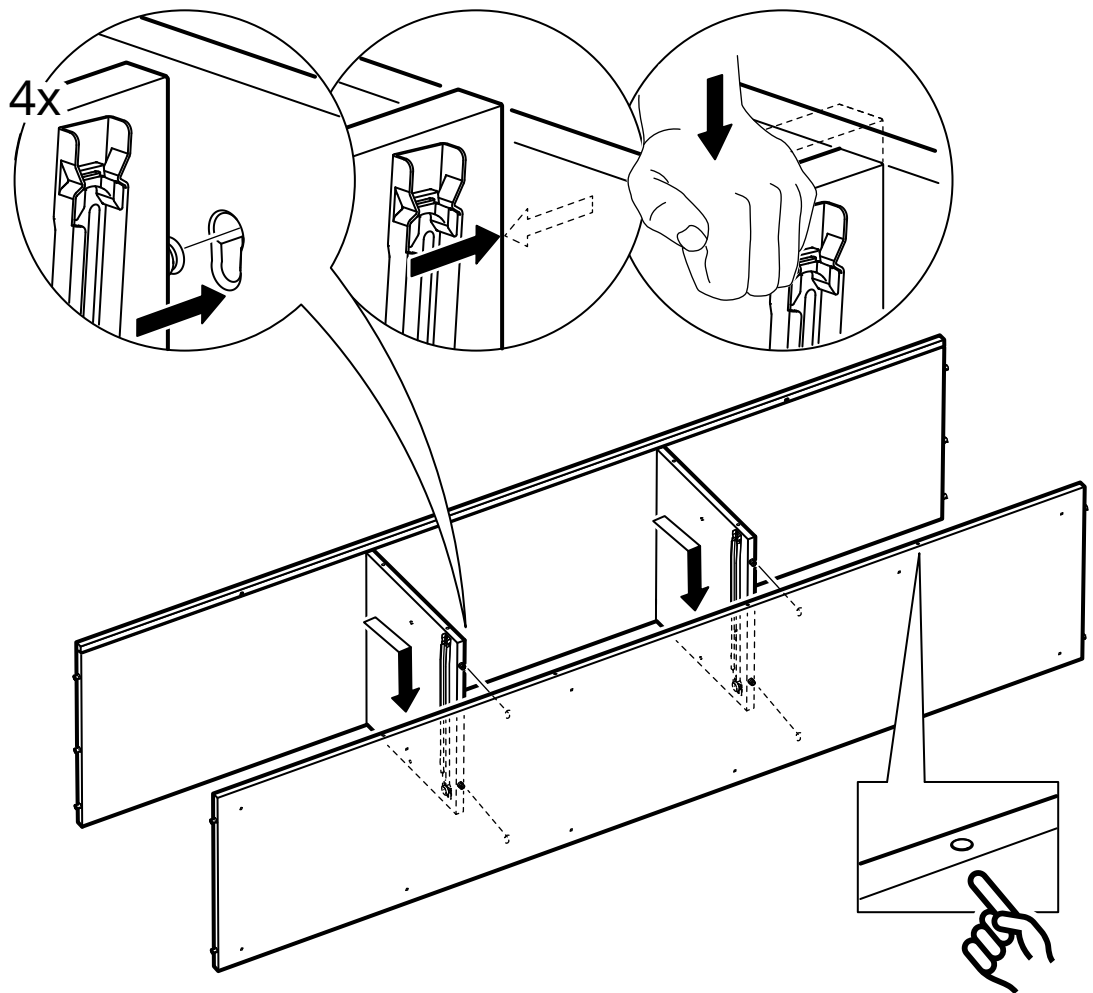 


6

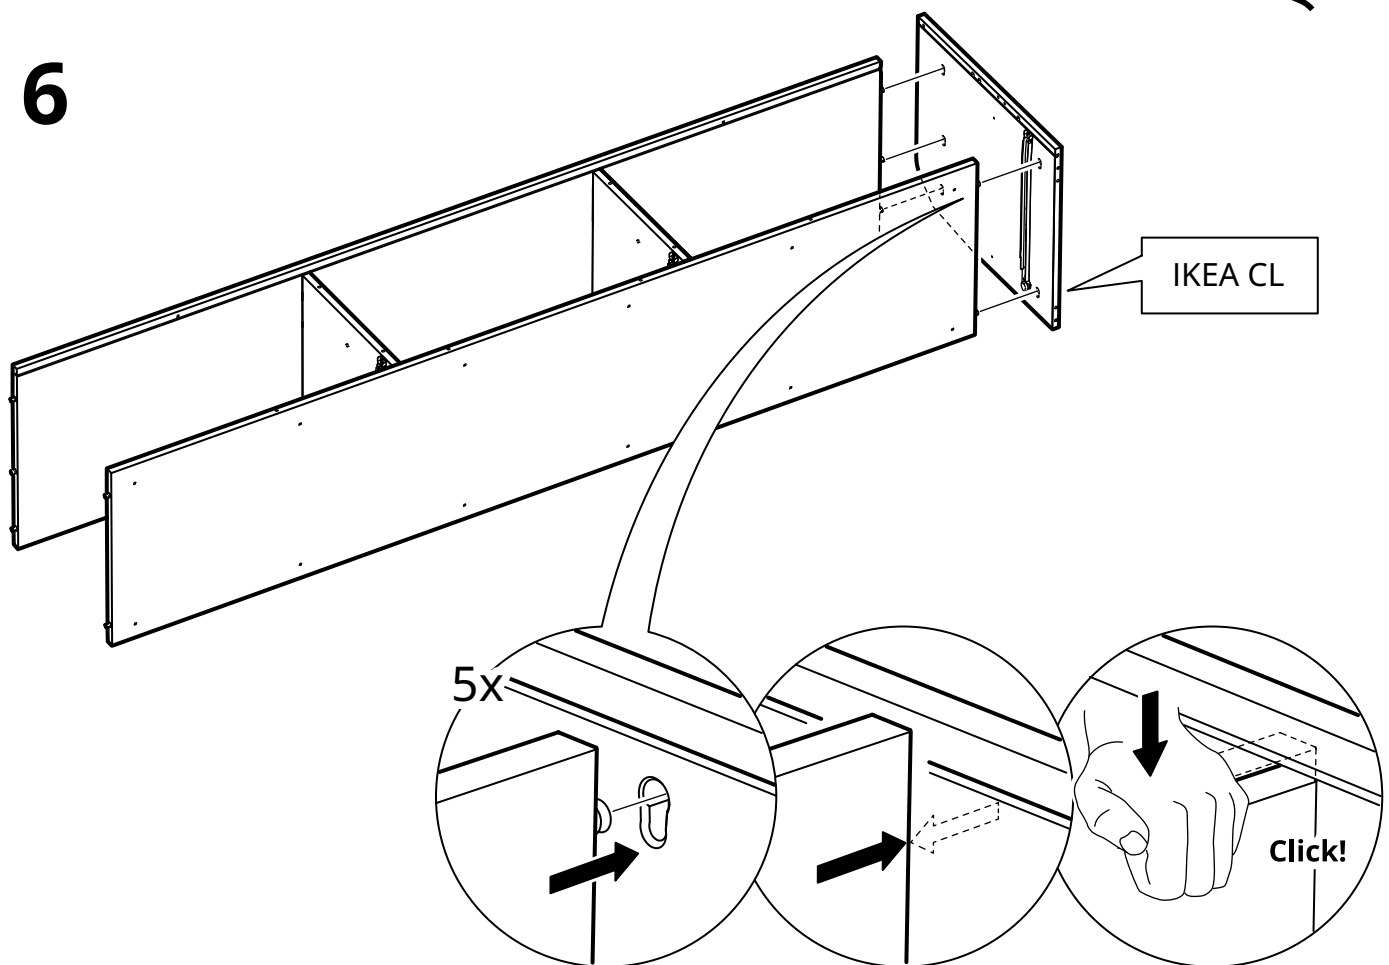 


7

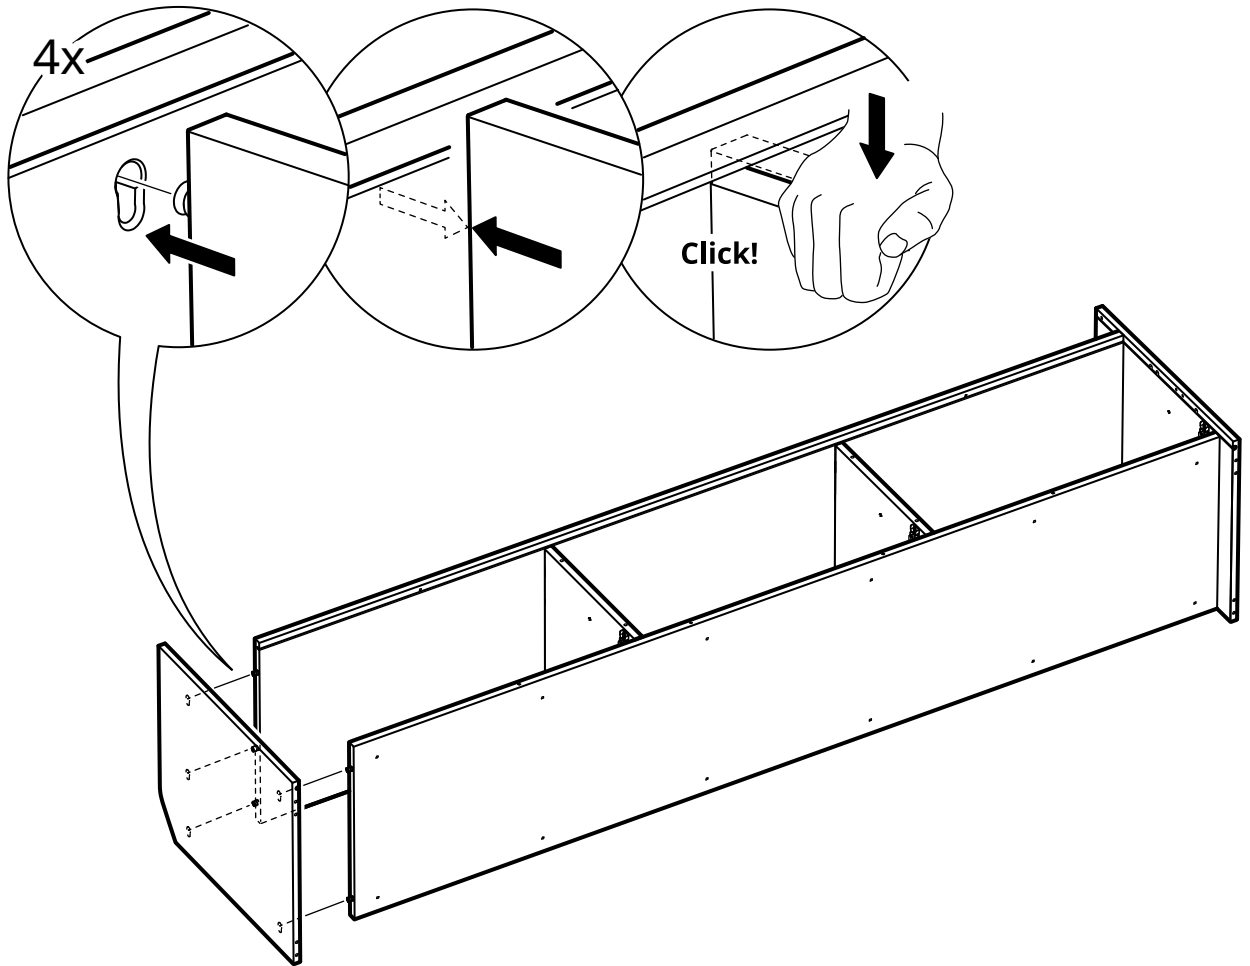 


8

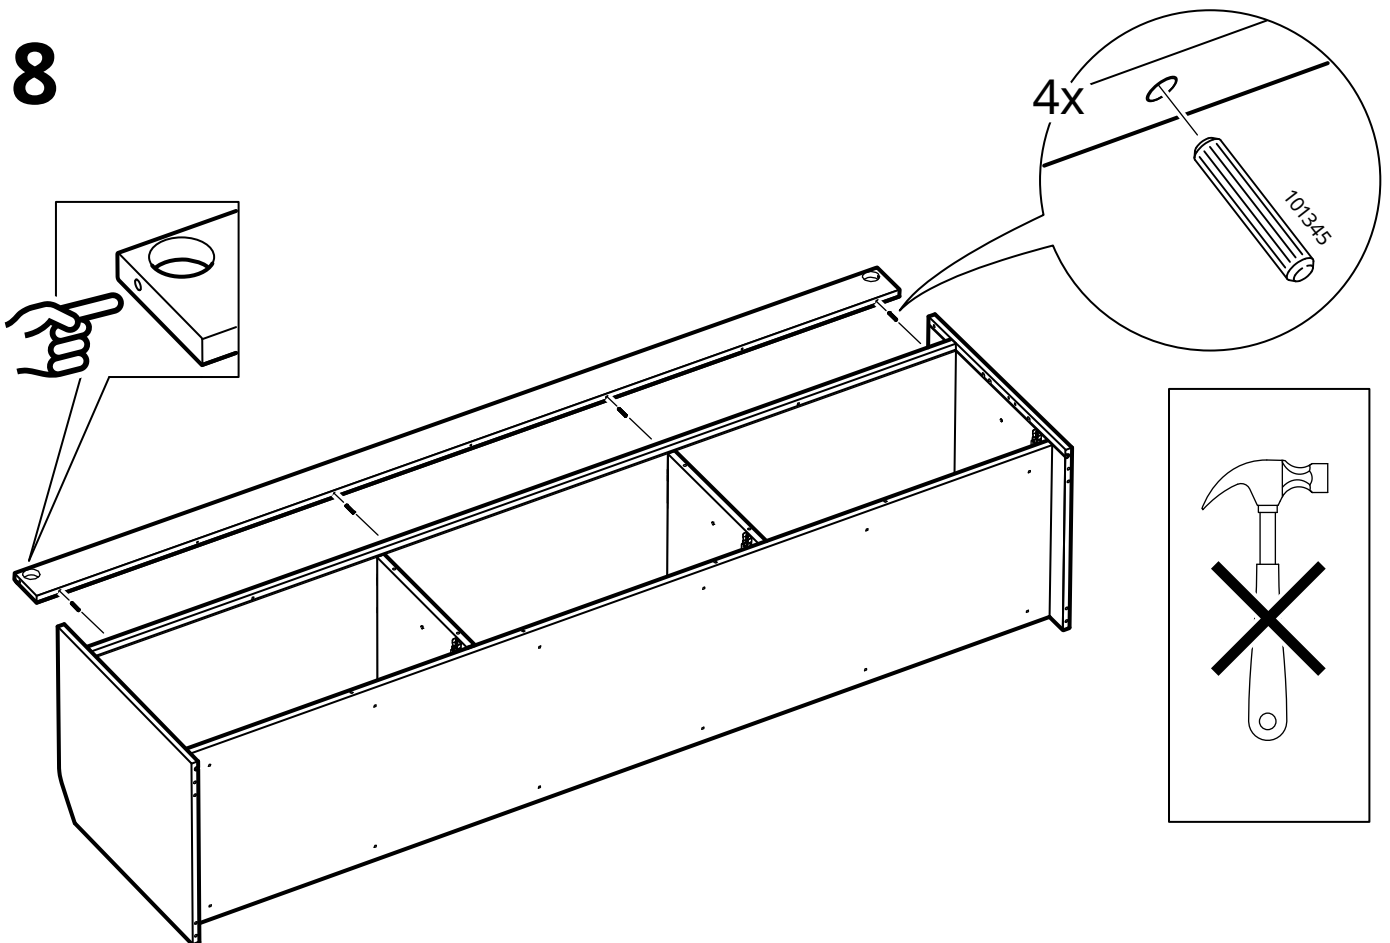 


9

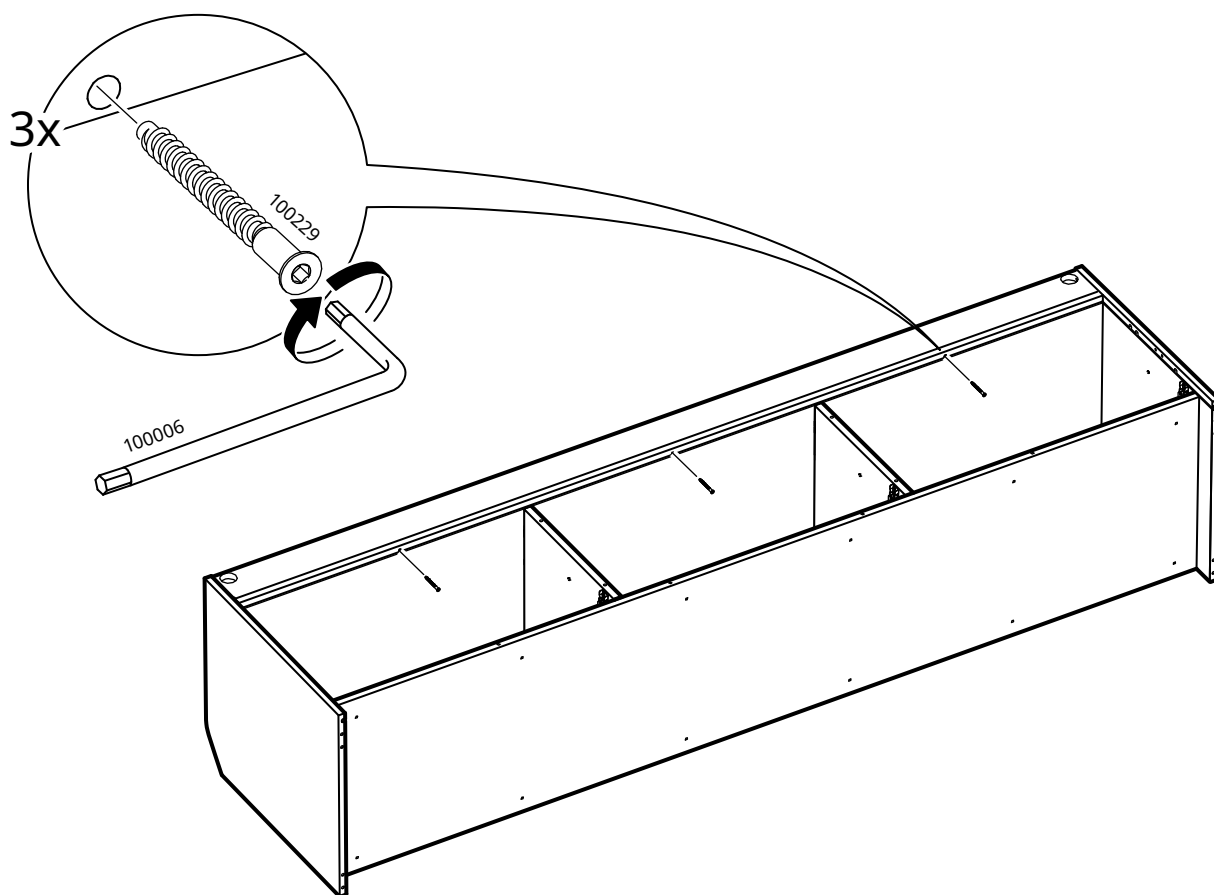 


10

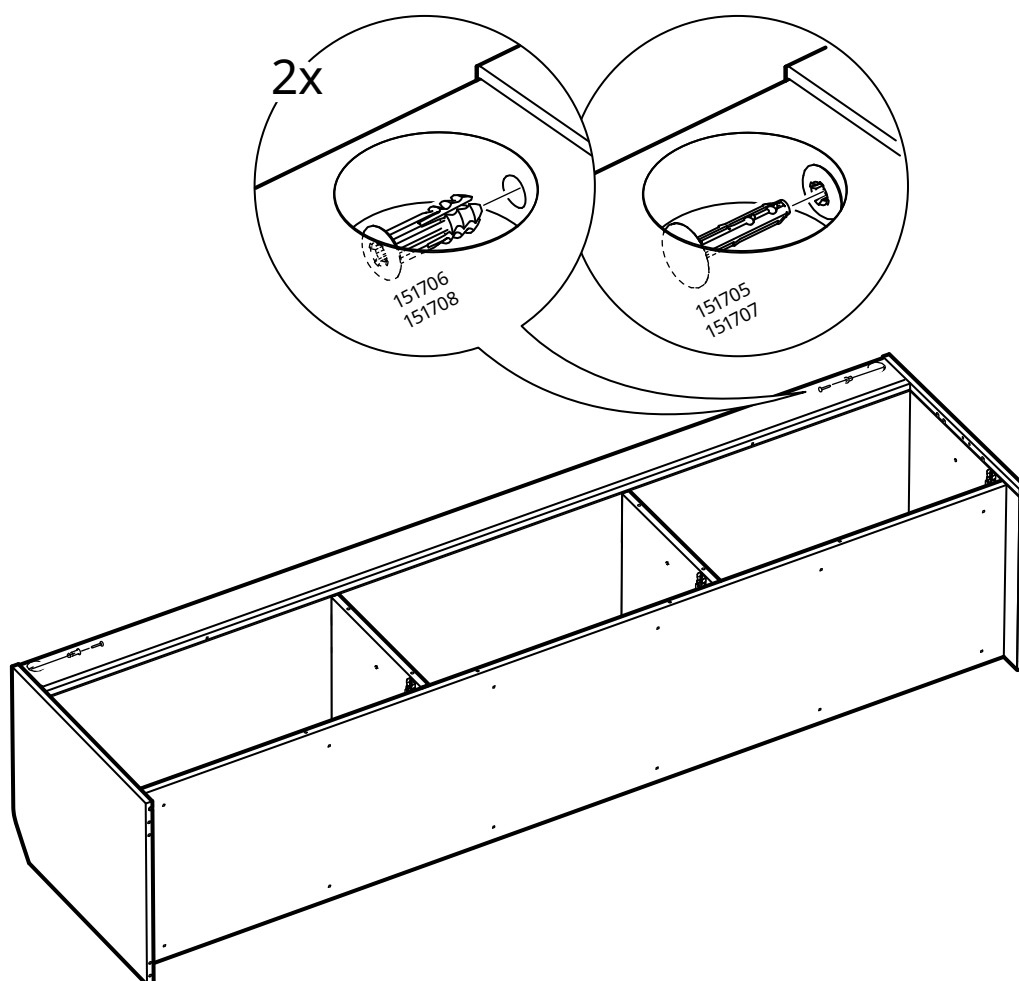 


11

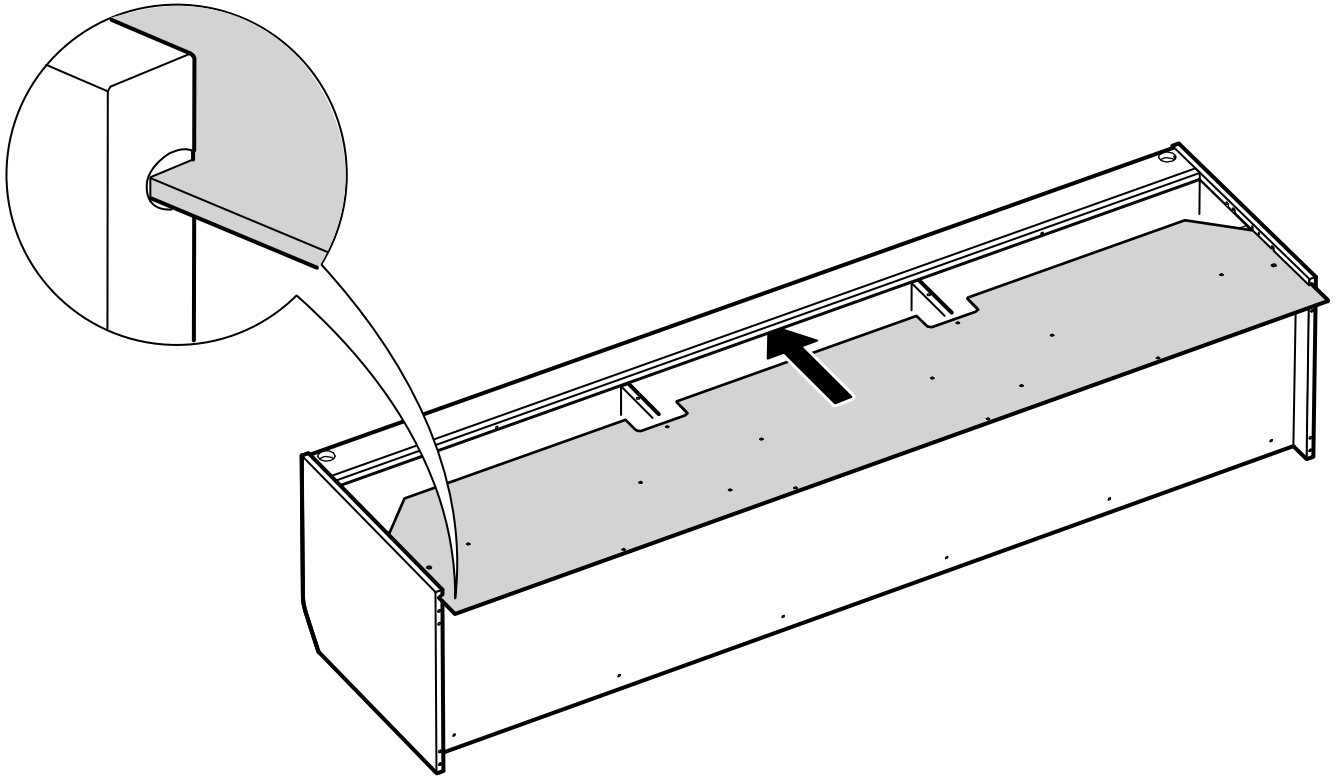 


12

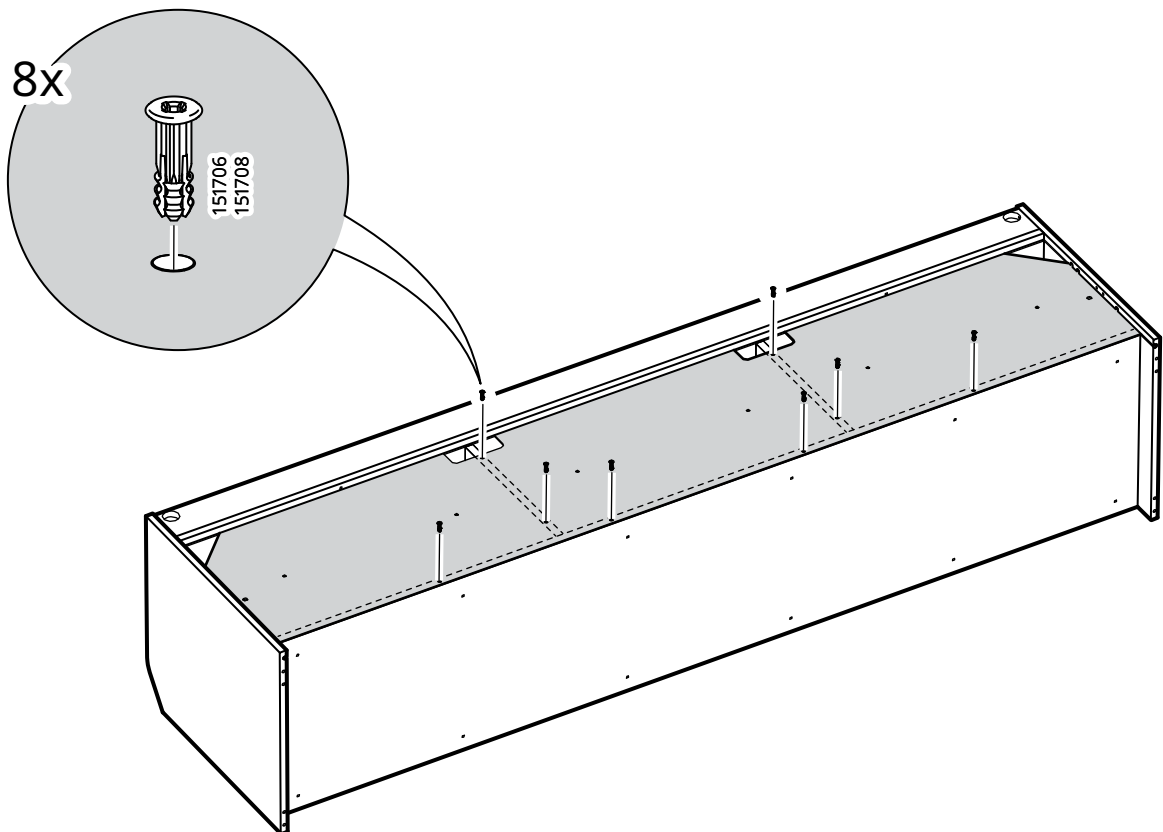 


13

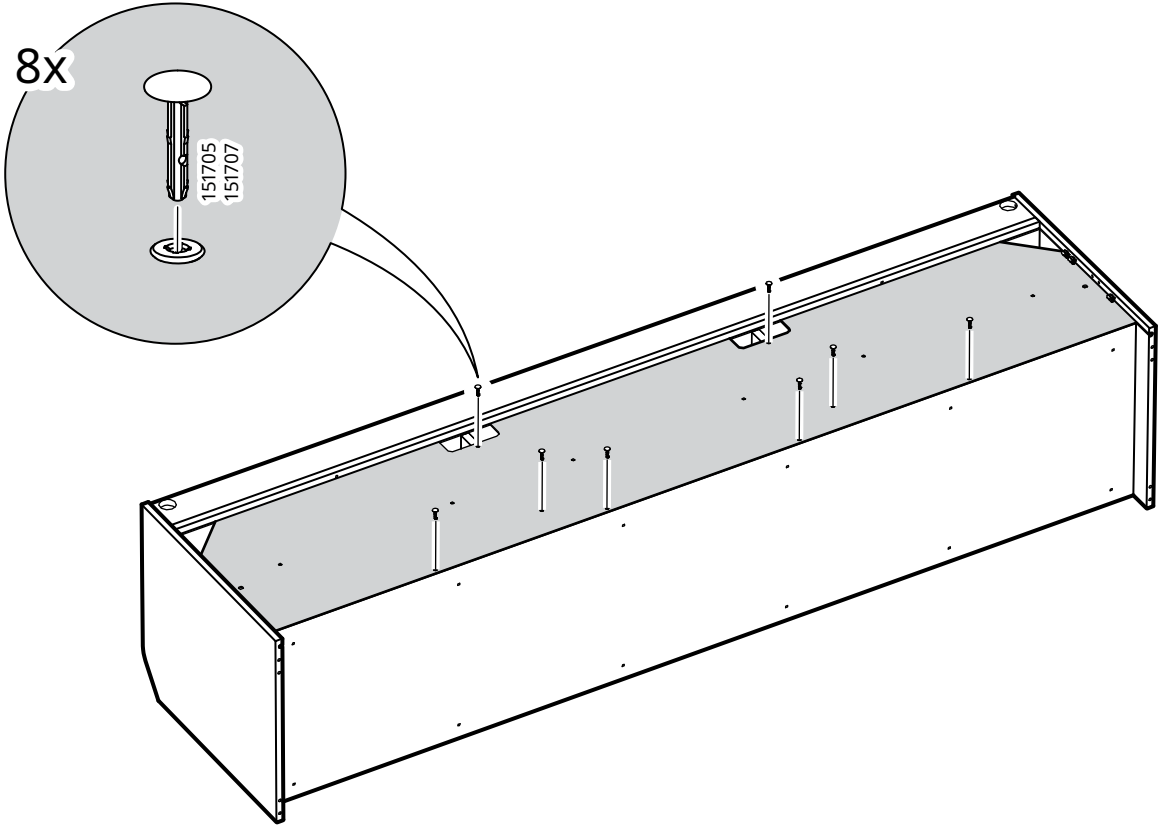 


14

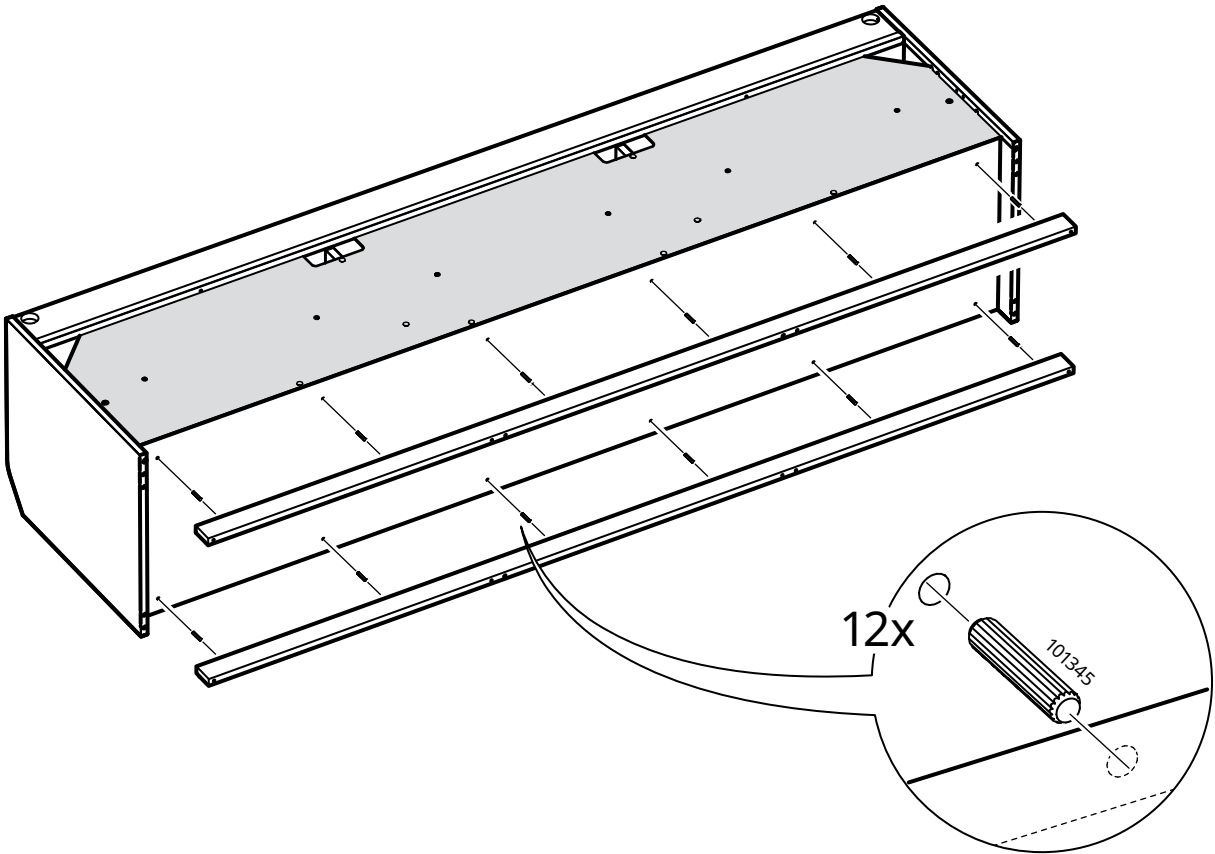 



15

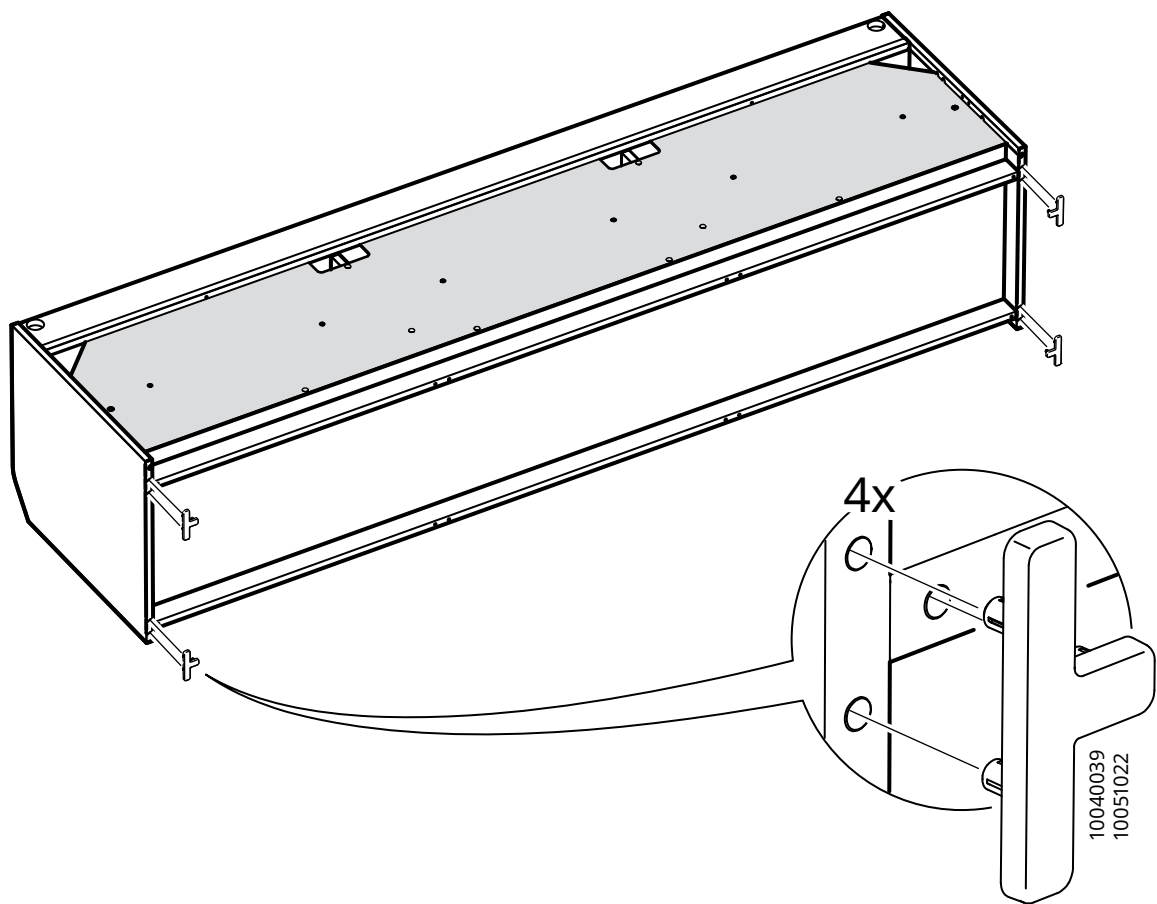 


16

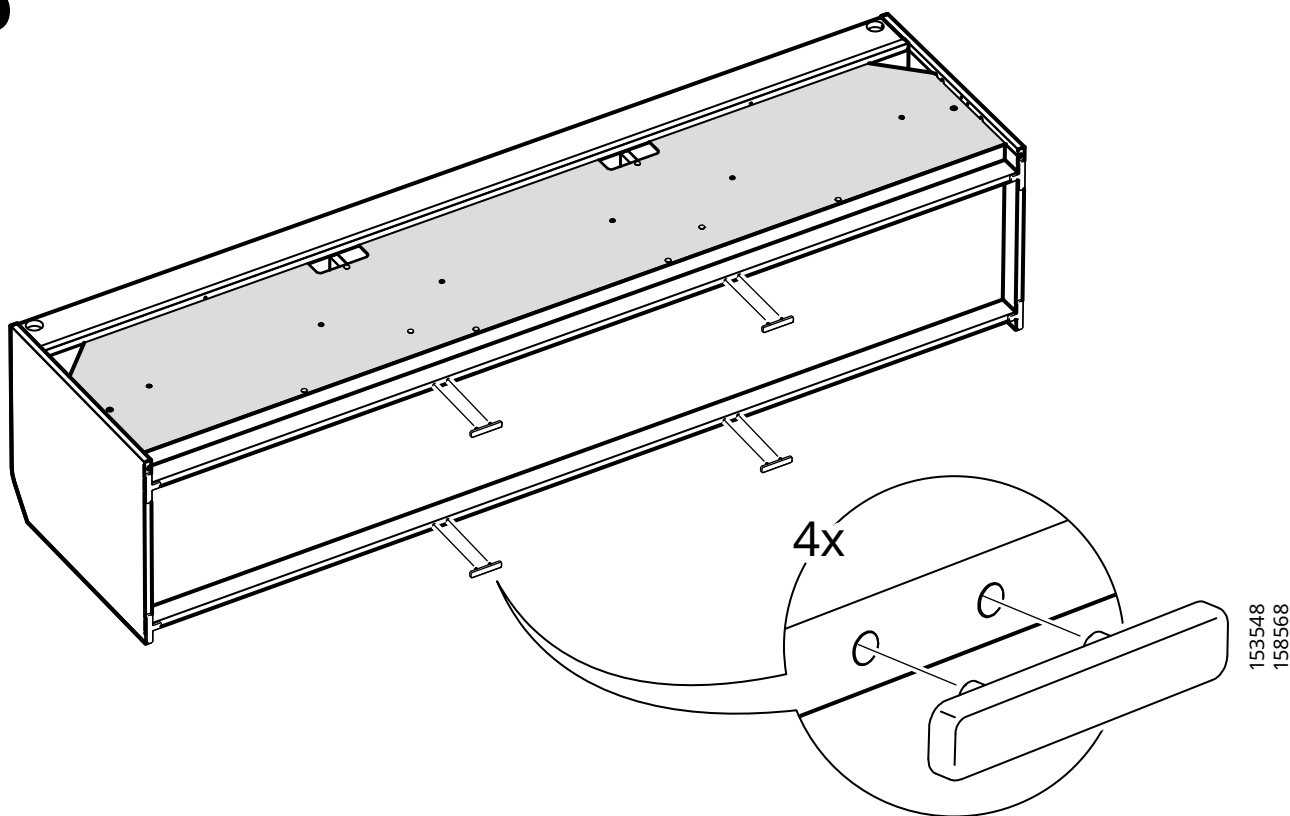 


17

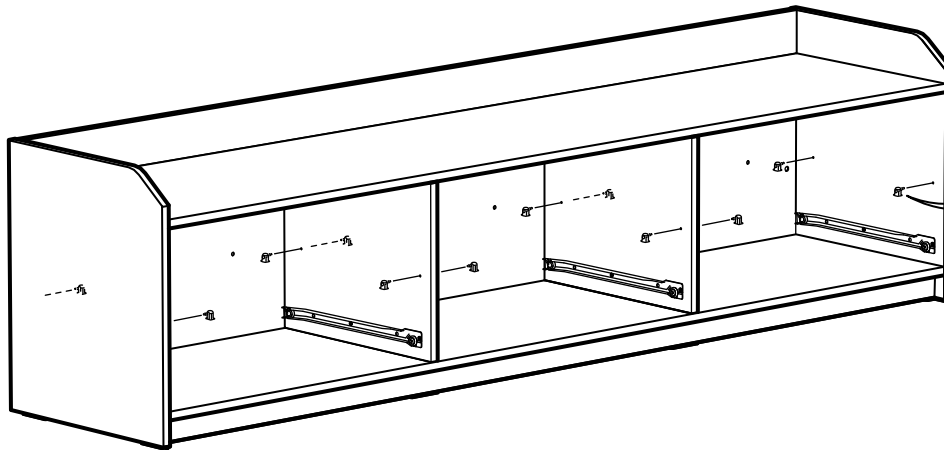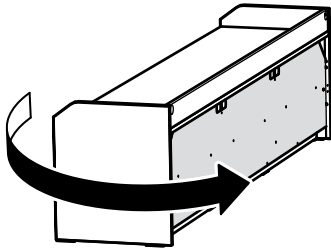  




12x

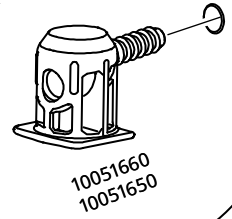 


18

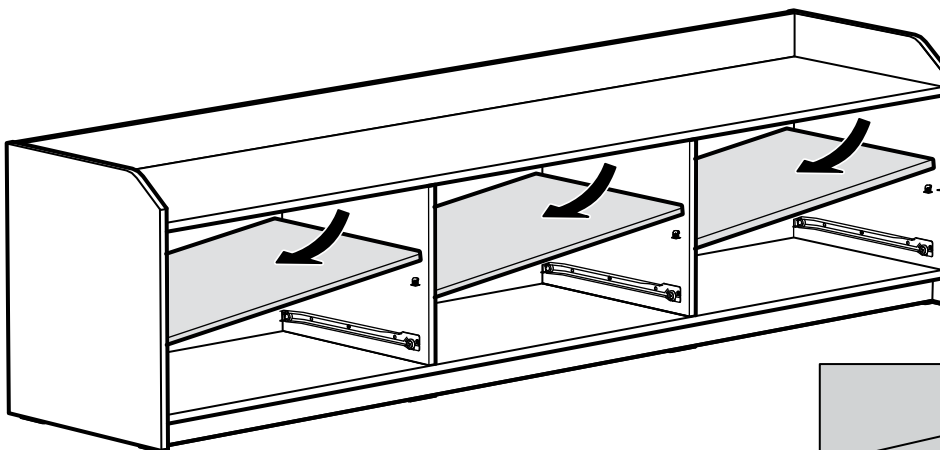 


12x

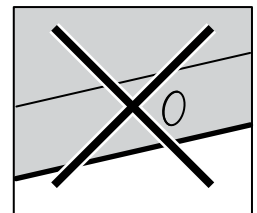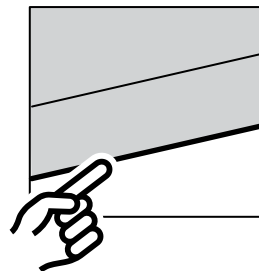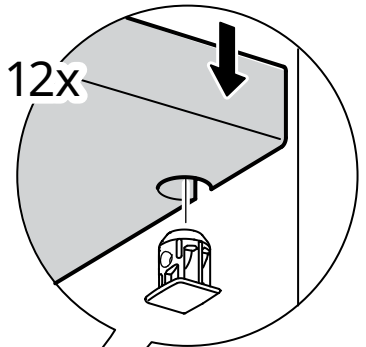   



19



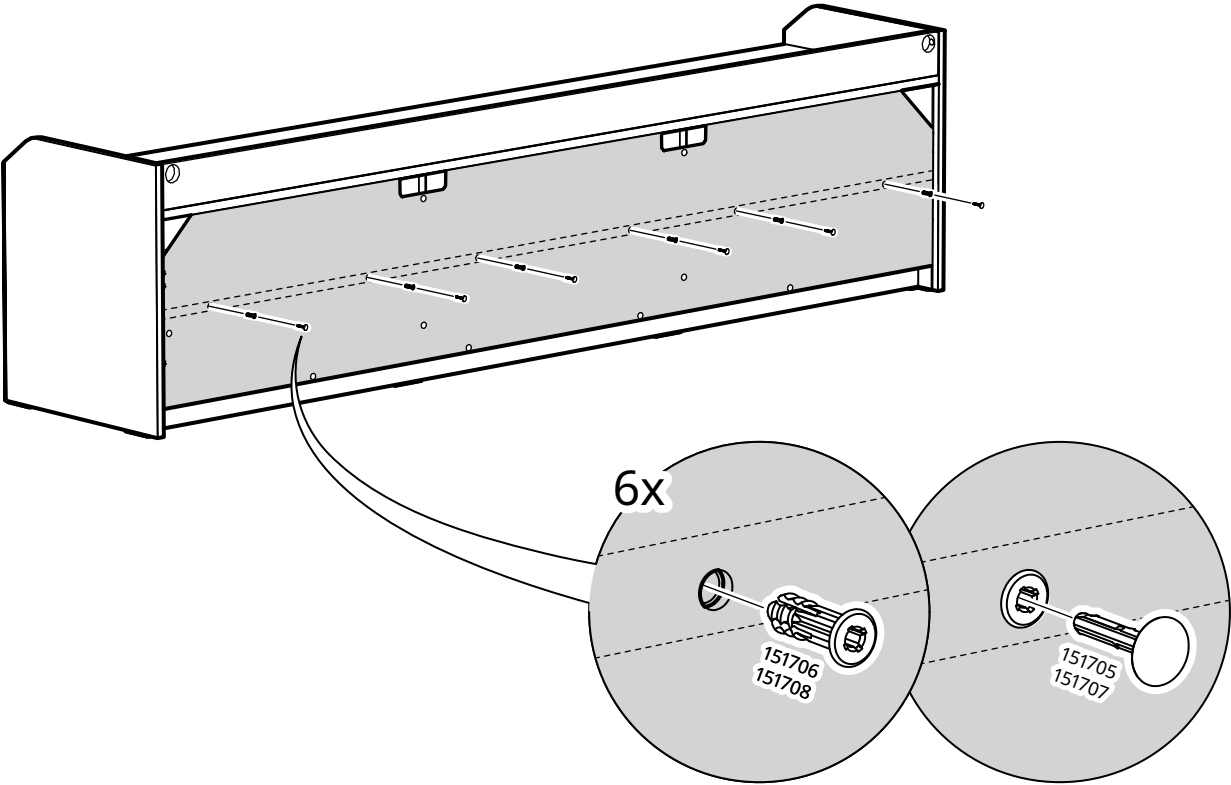 


20





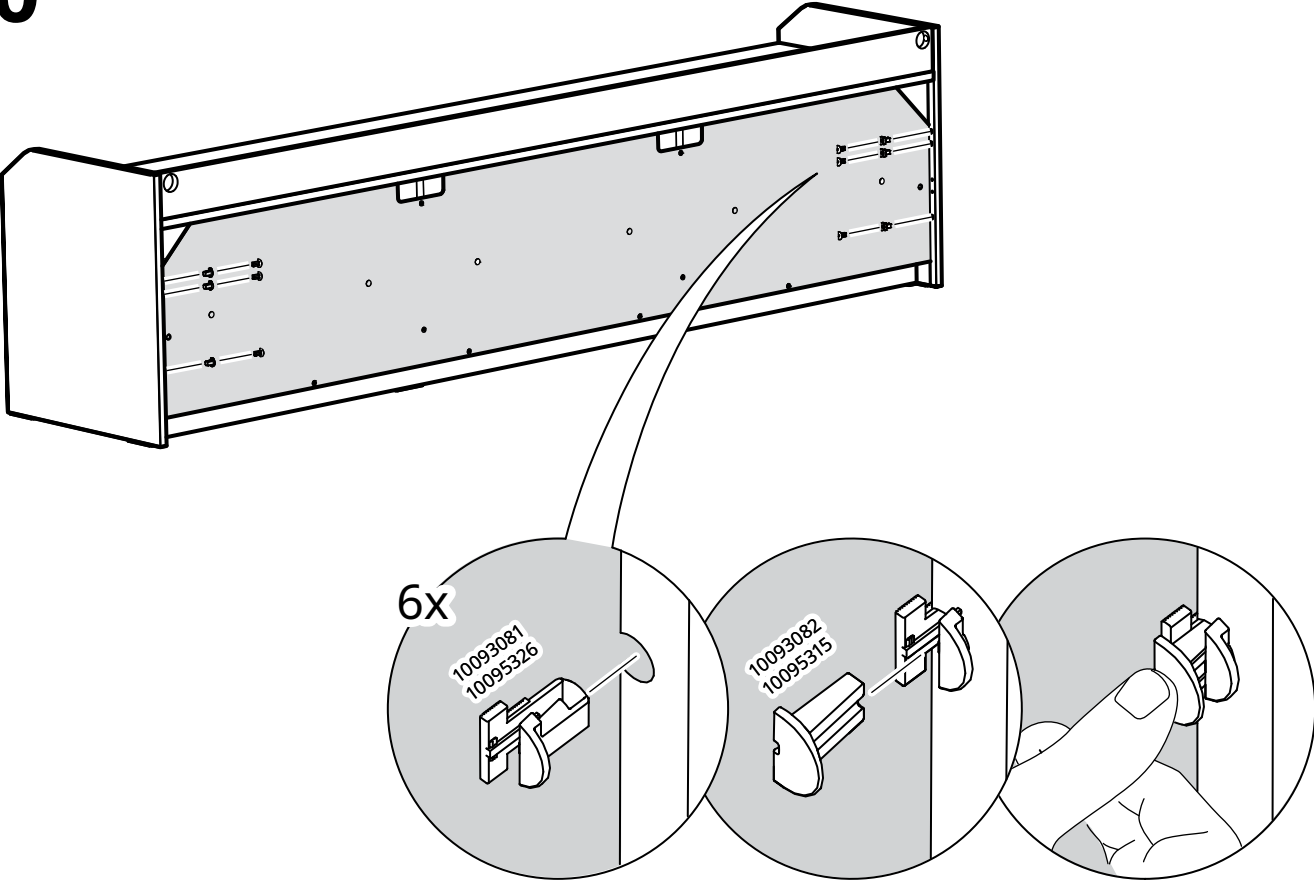 



21

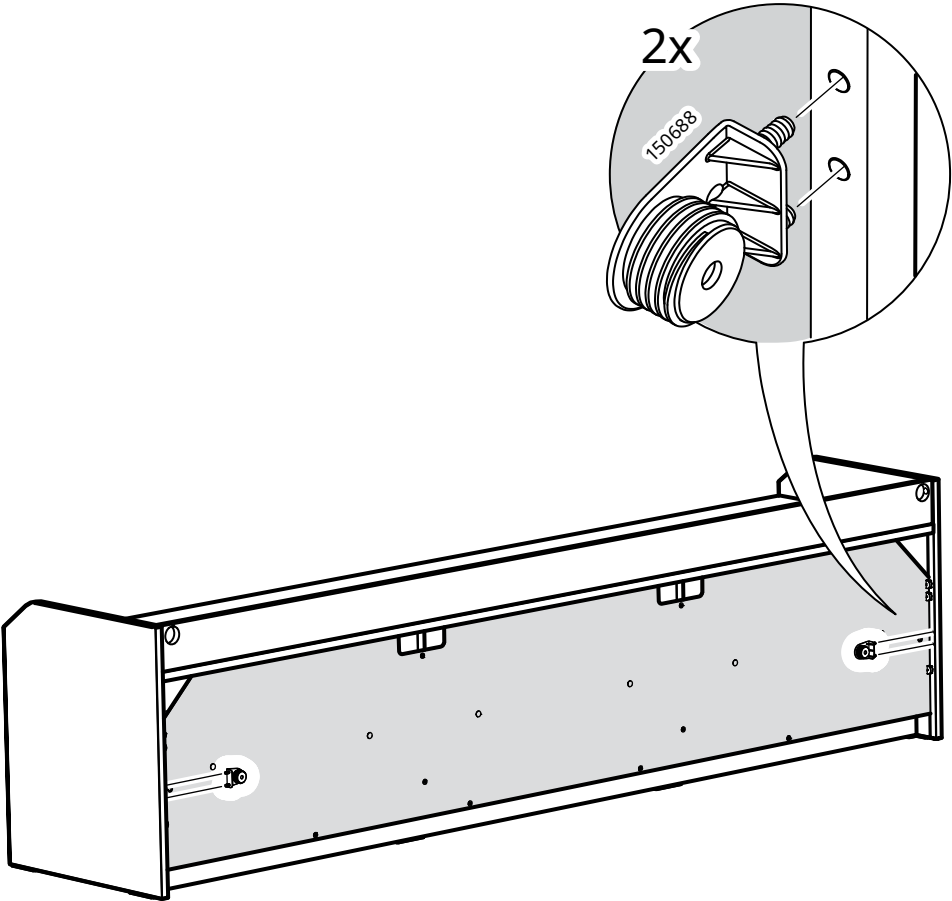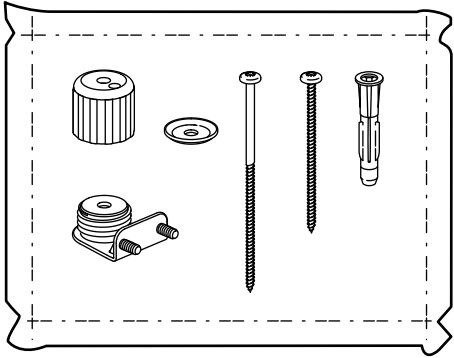  

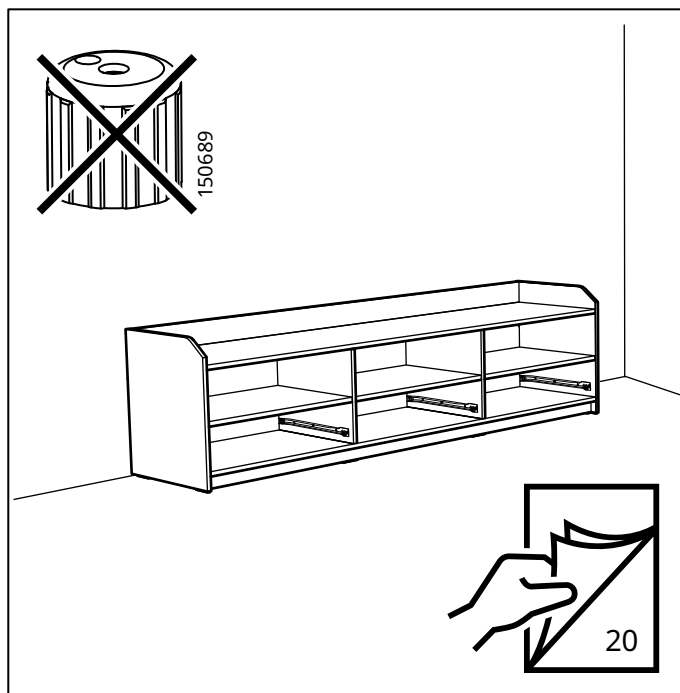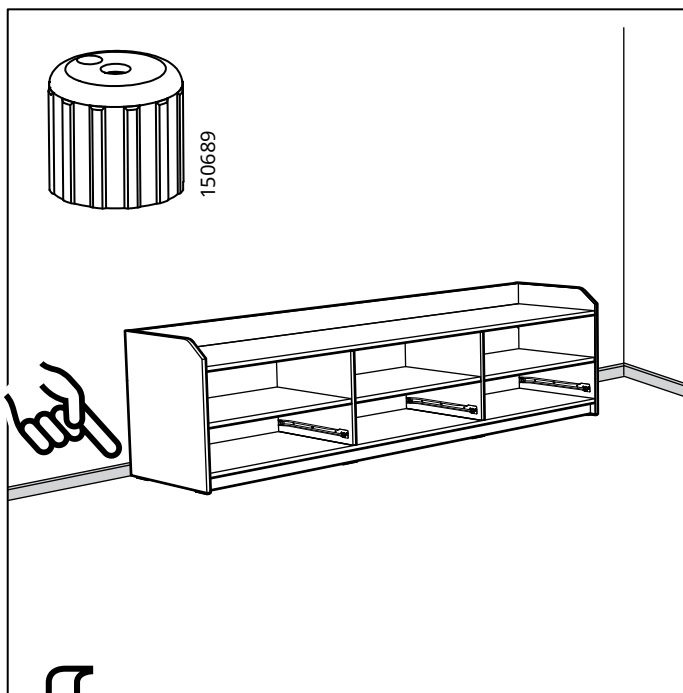   


22

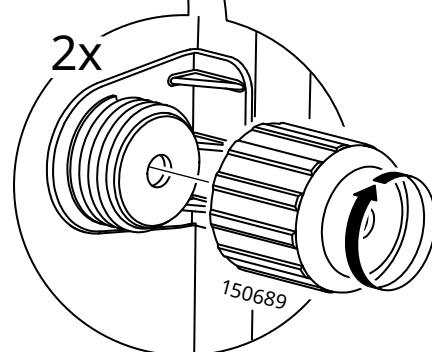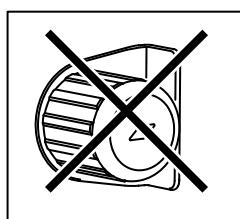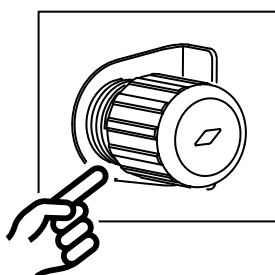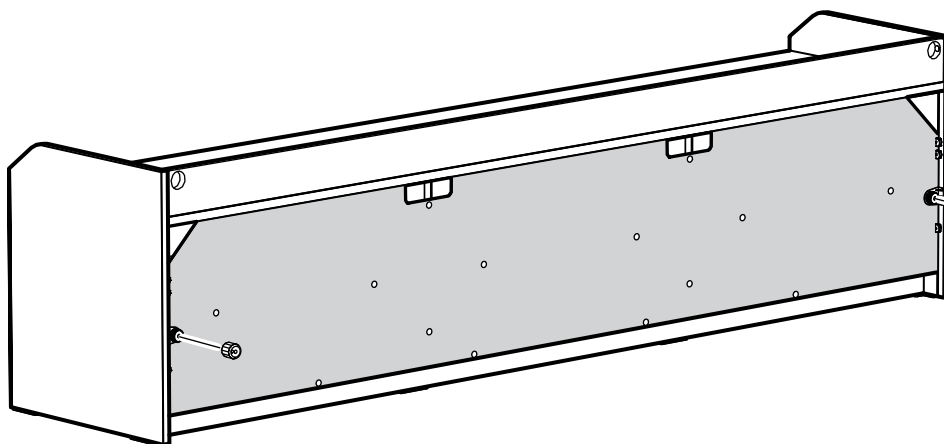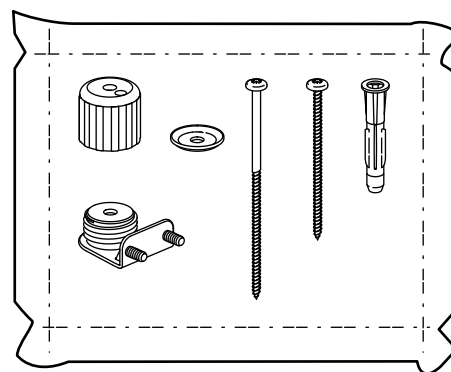     


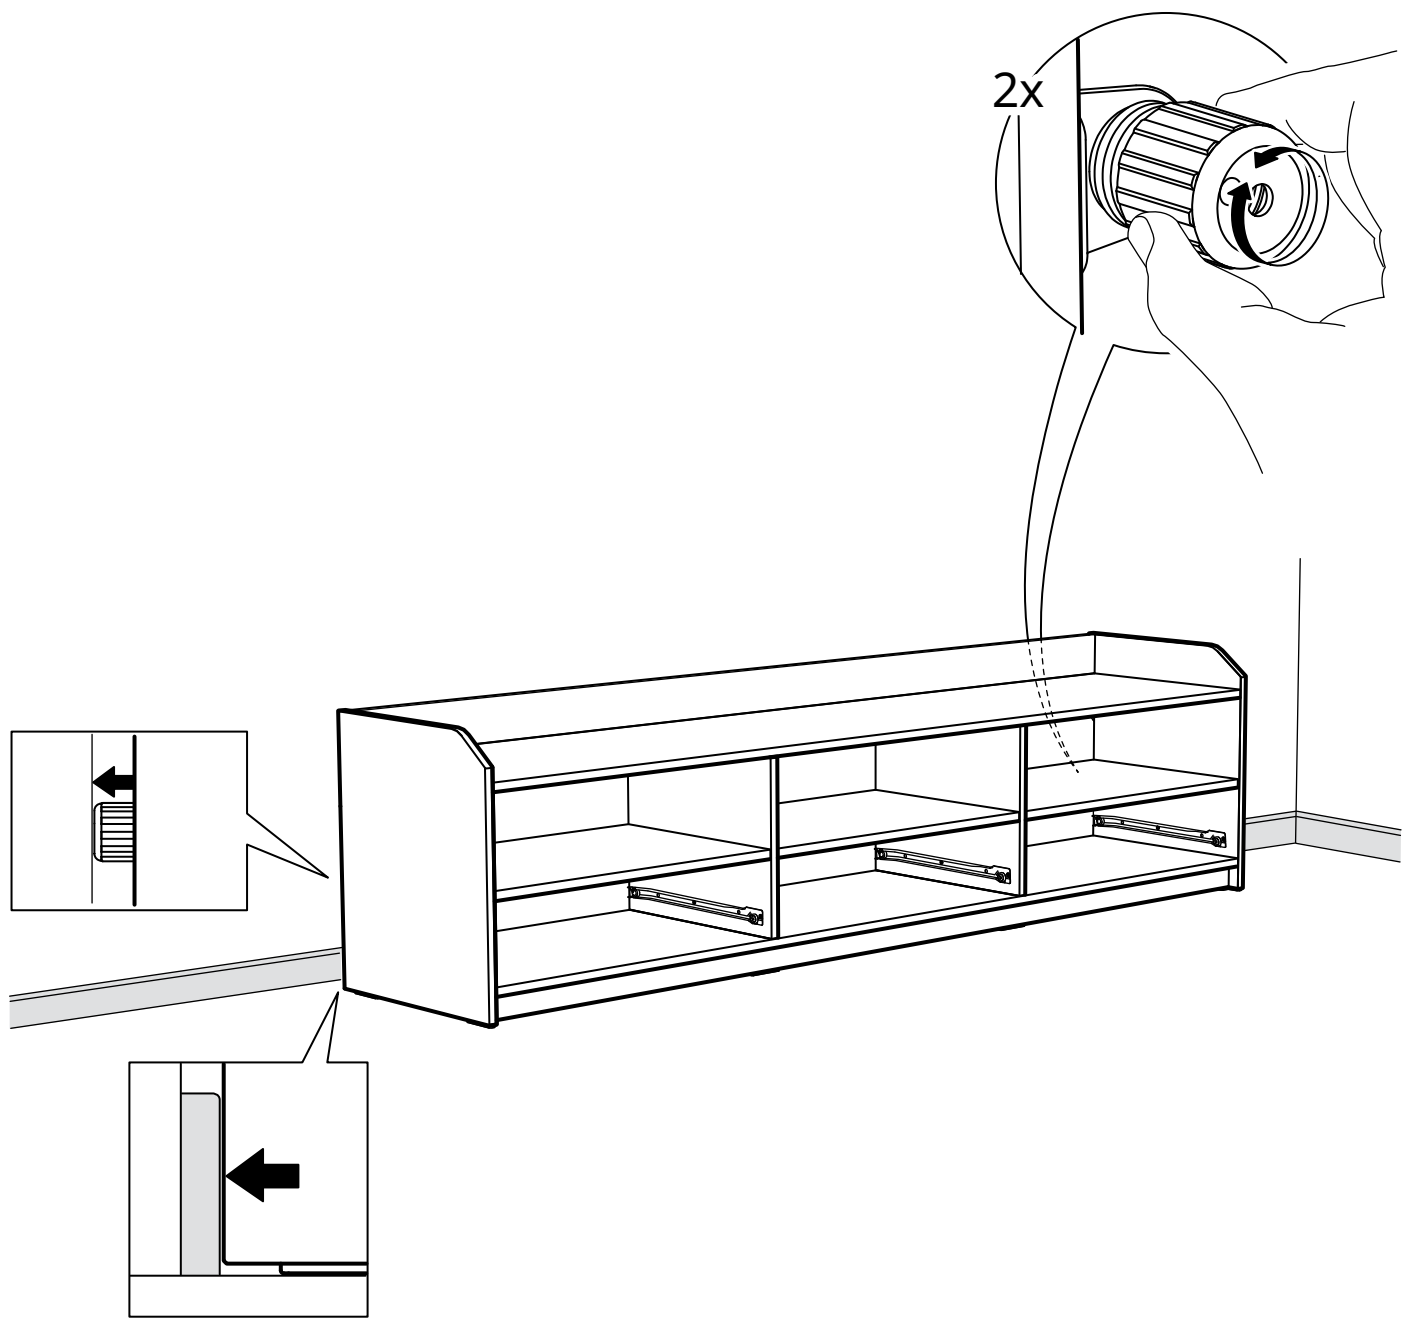 

24

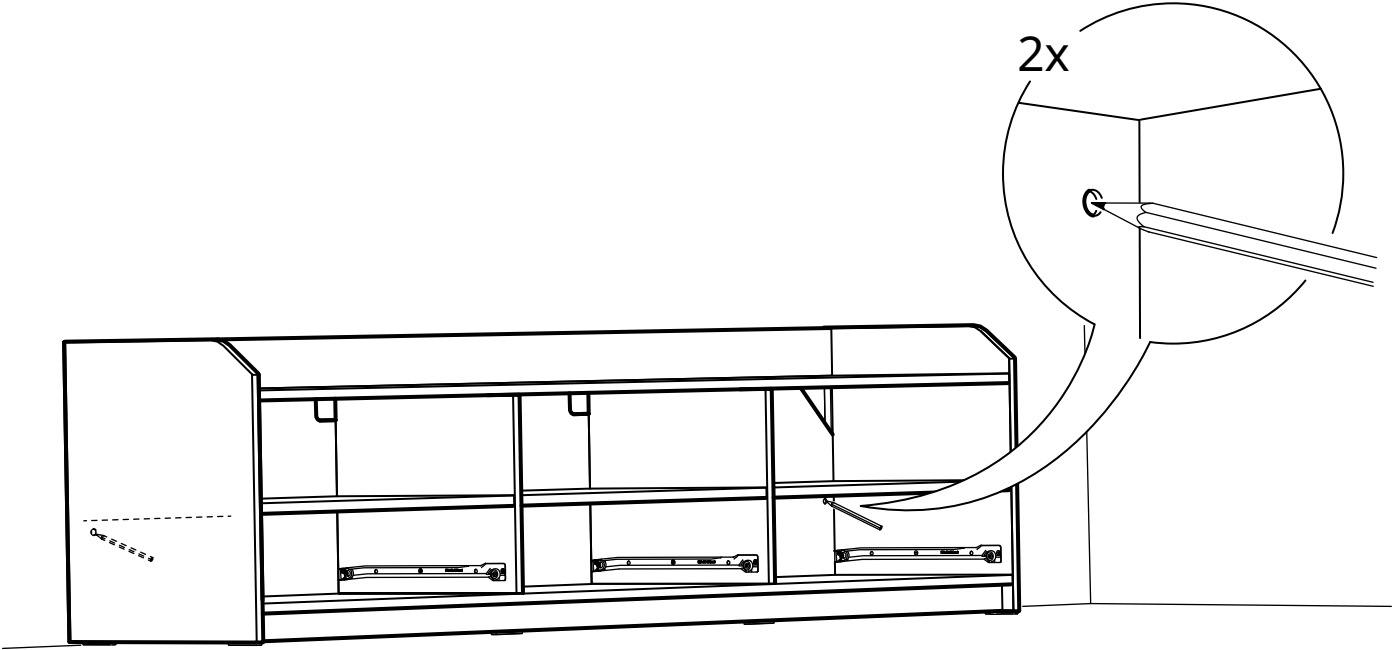 

25

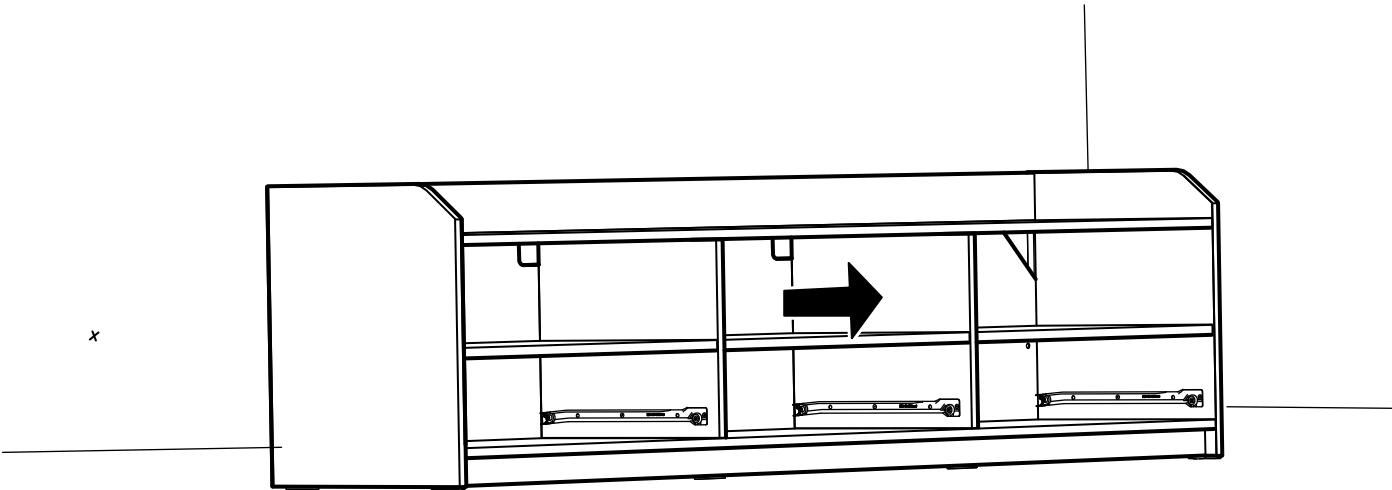 




www.IKEA.com/secure-it



 www.IKEA.cn/secure-it

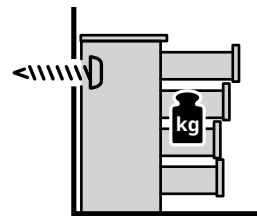

26

English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

A

Ø 8 mm (5/16")

1

2

3

B

Ø 8 mm (5/16")

1

2

3

 
 
C

Ø 3 mm (1/8")




1



2

3


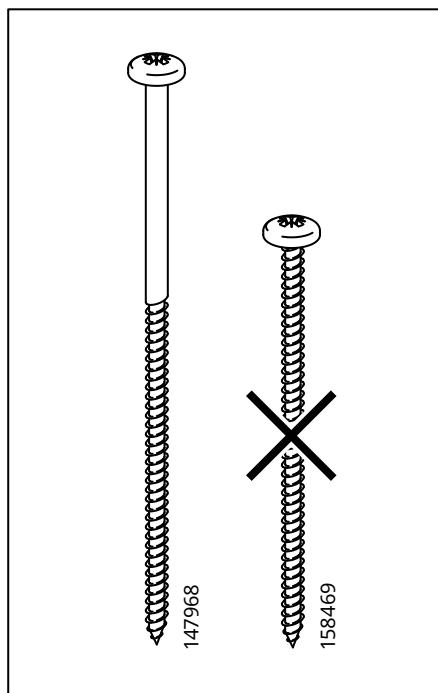
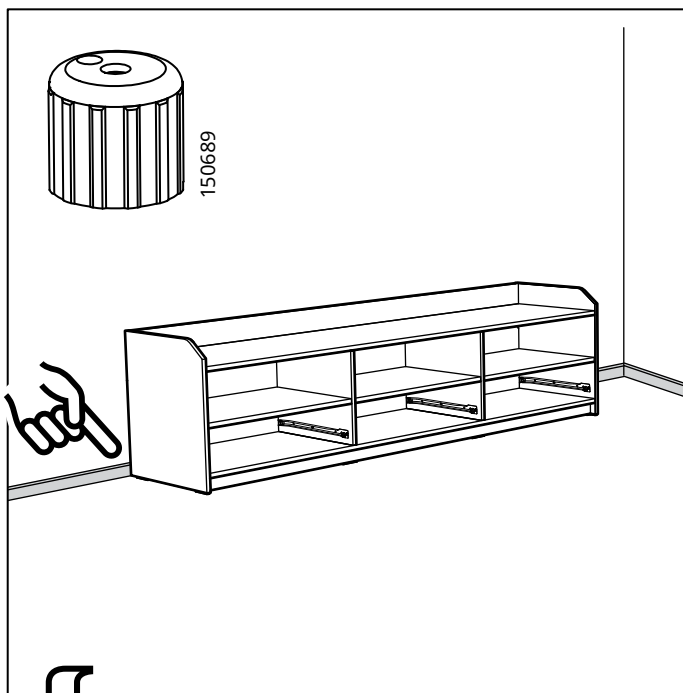



27

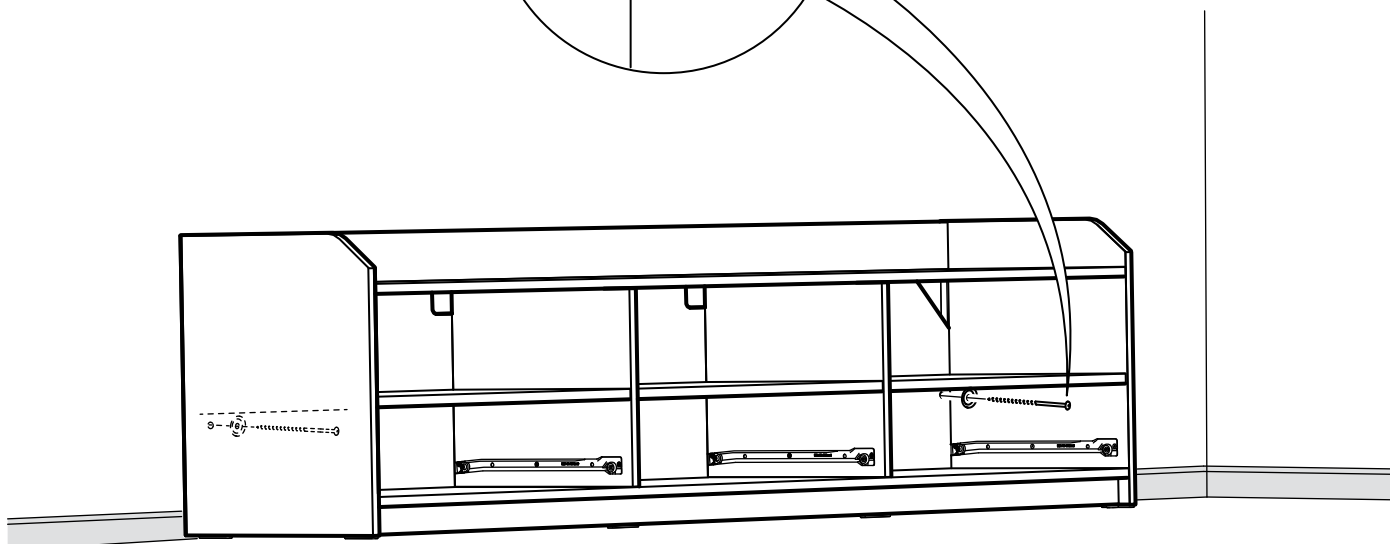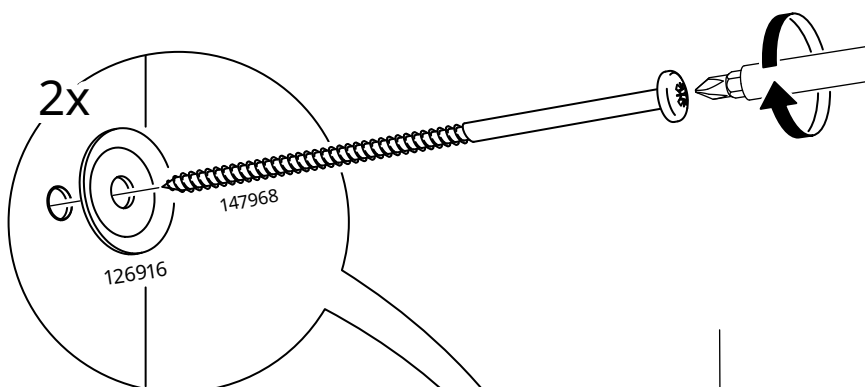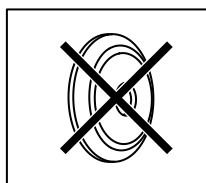   

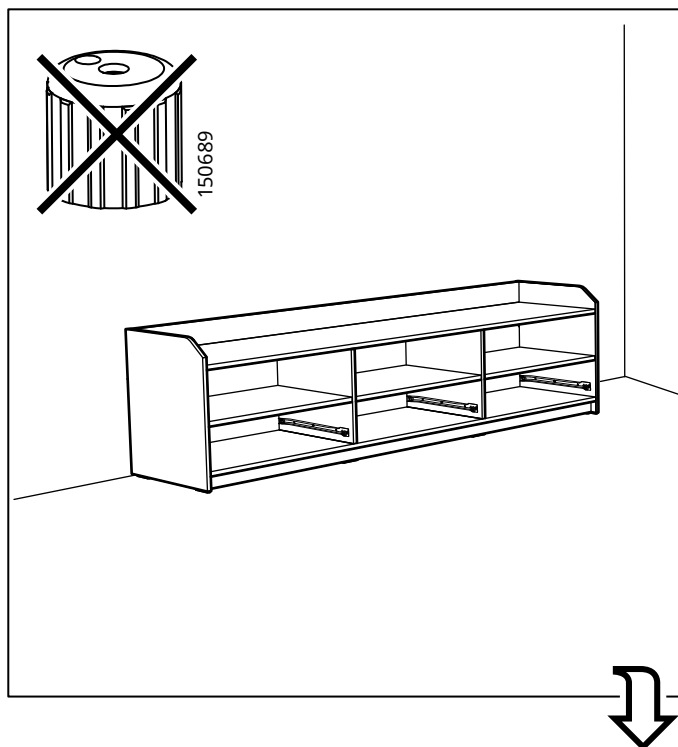 
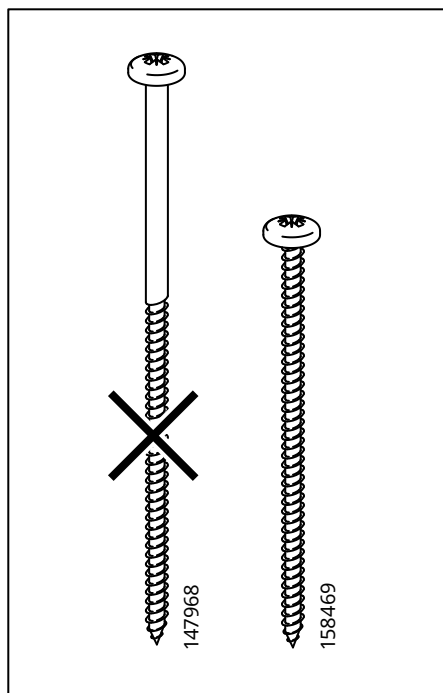 


27

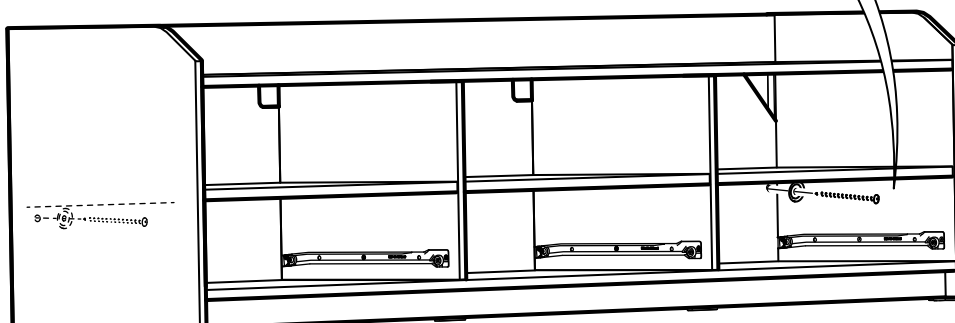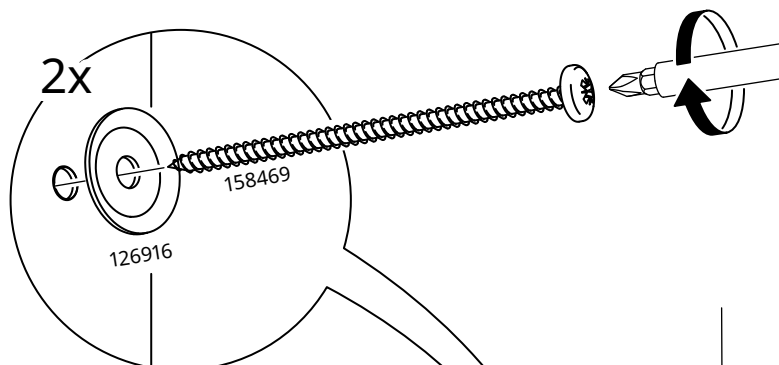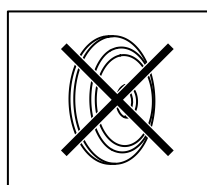   


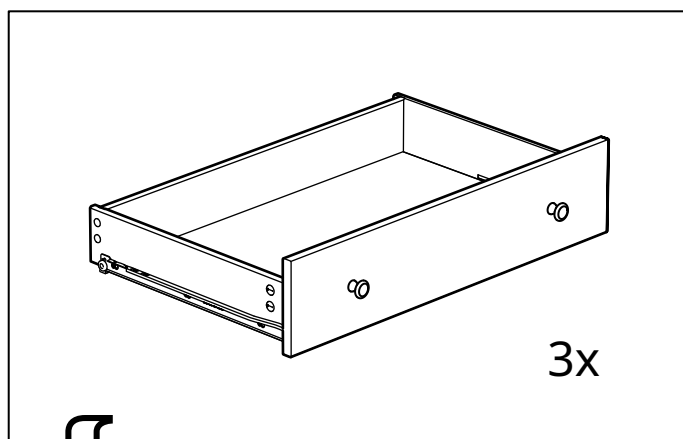 


28

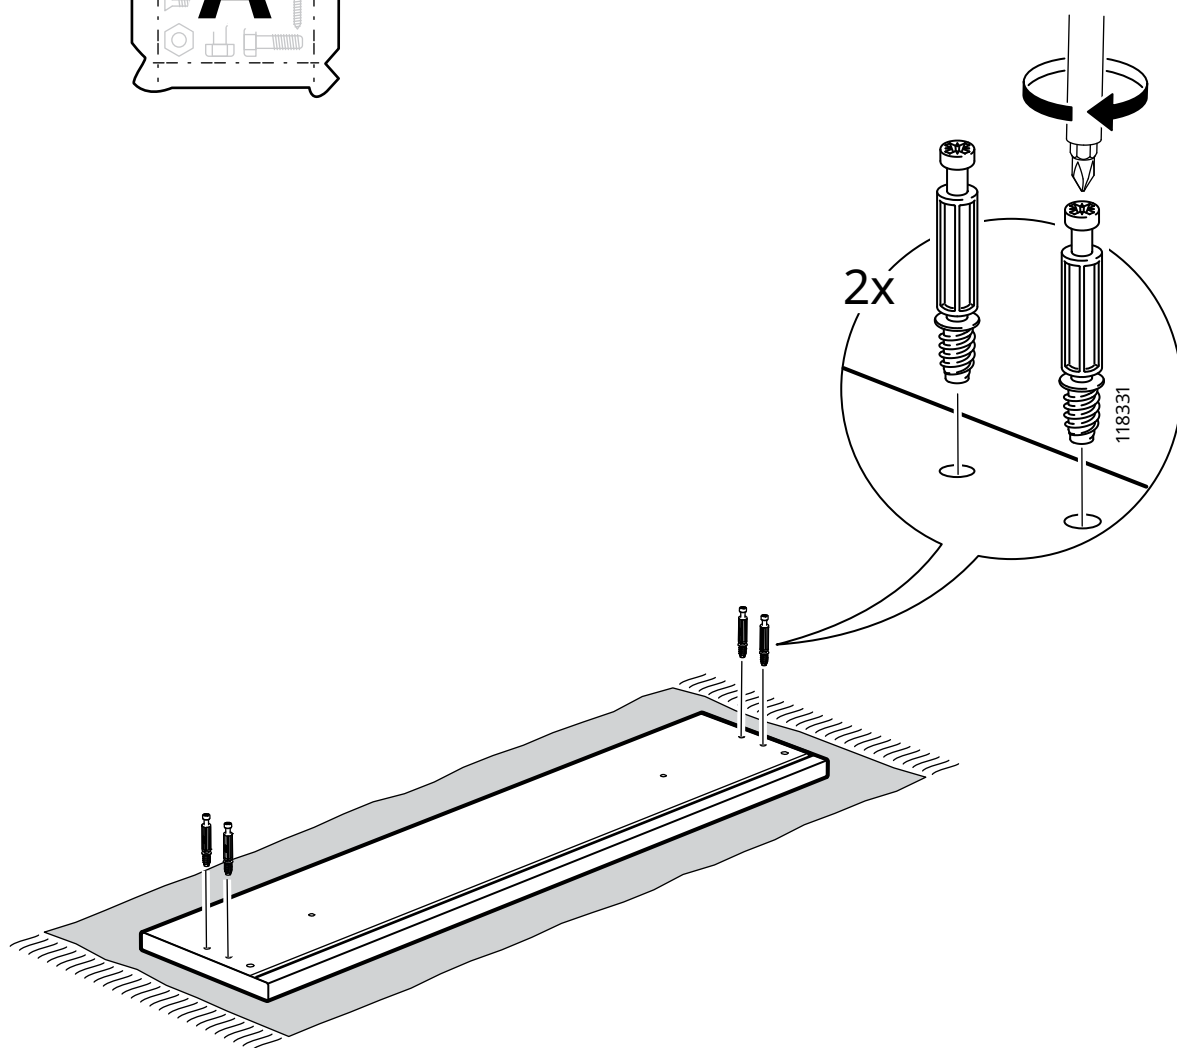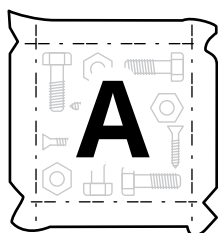  


29

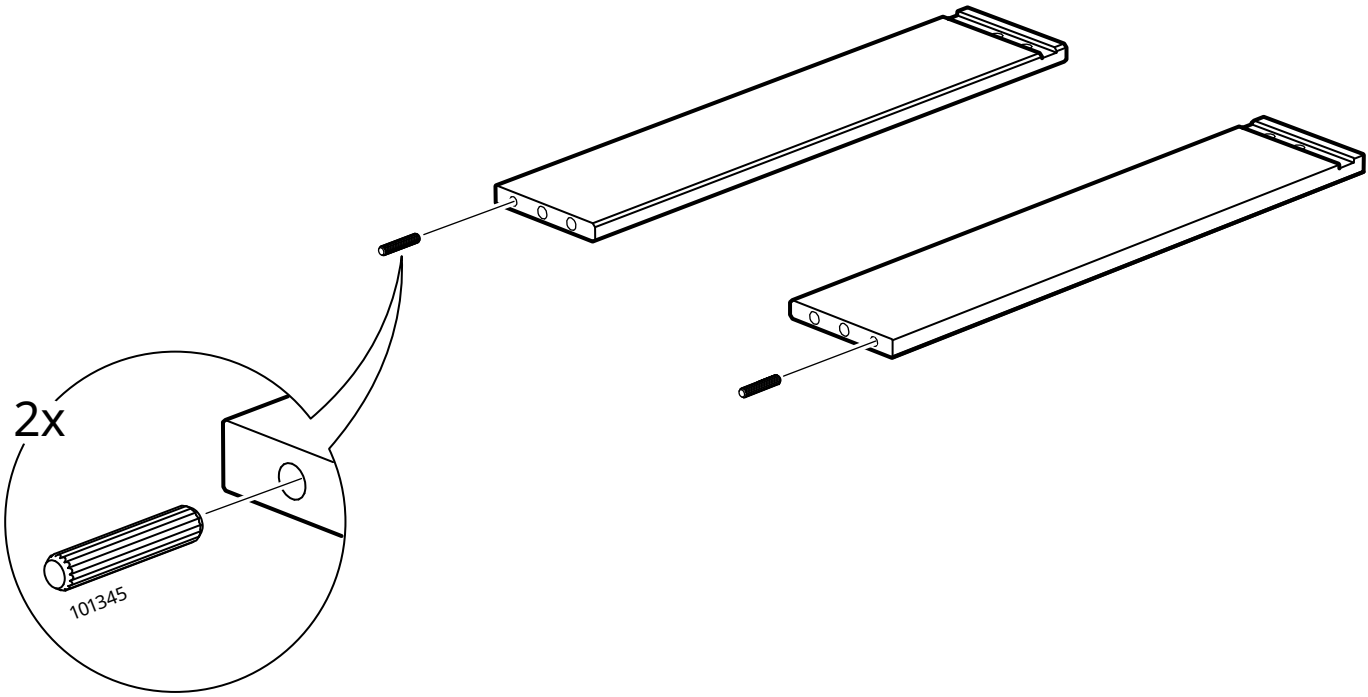 


30

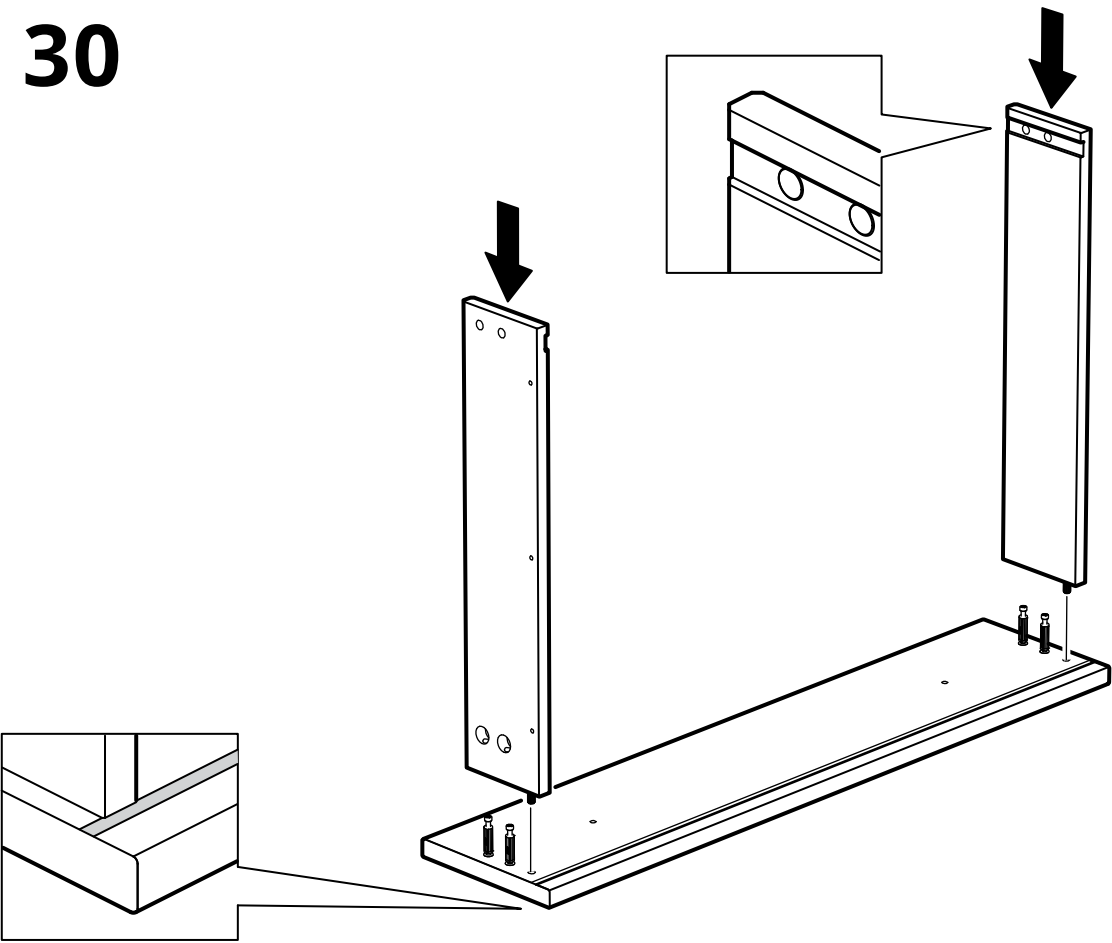 


31

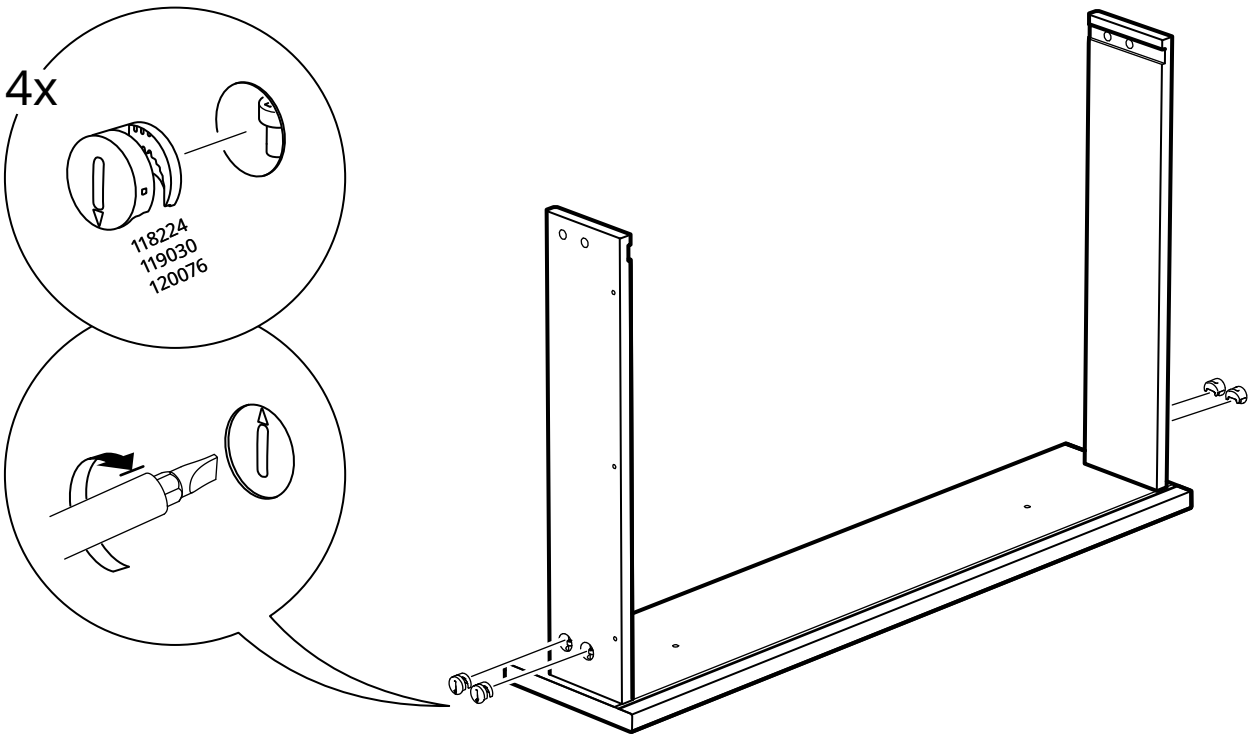 


32

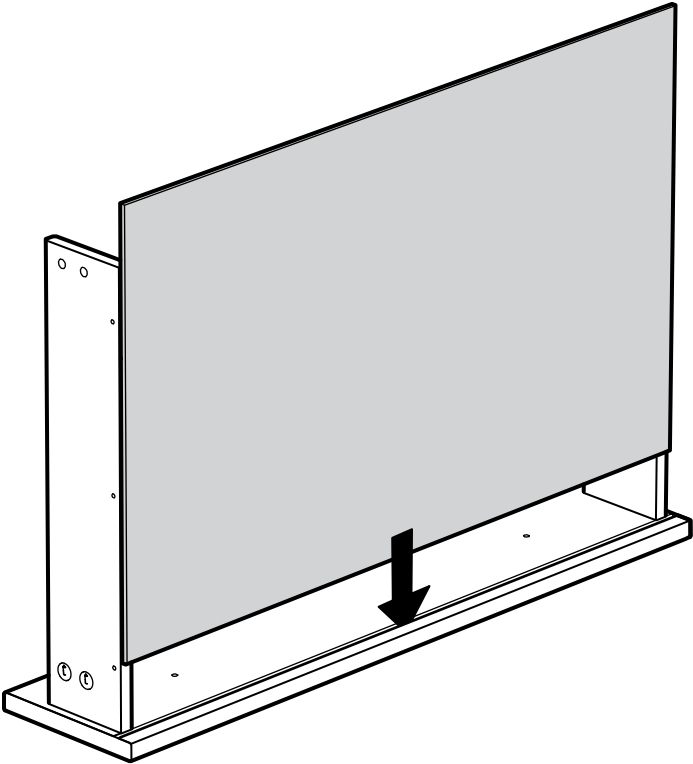 


33

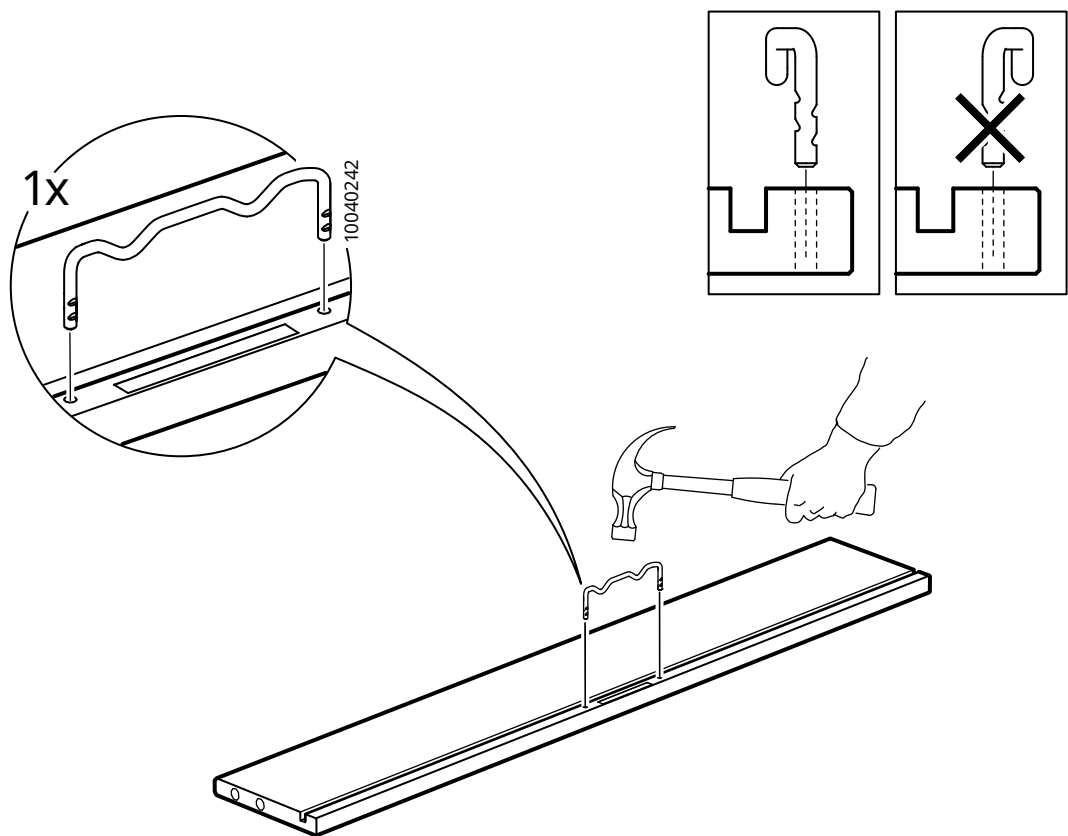 


34

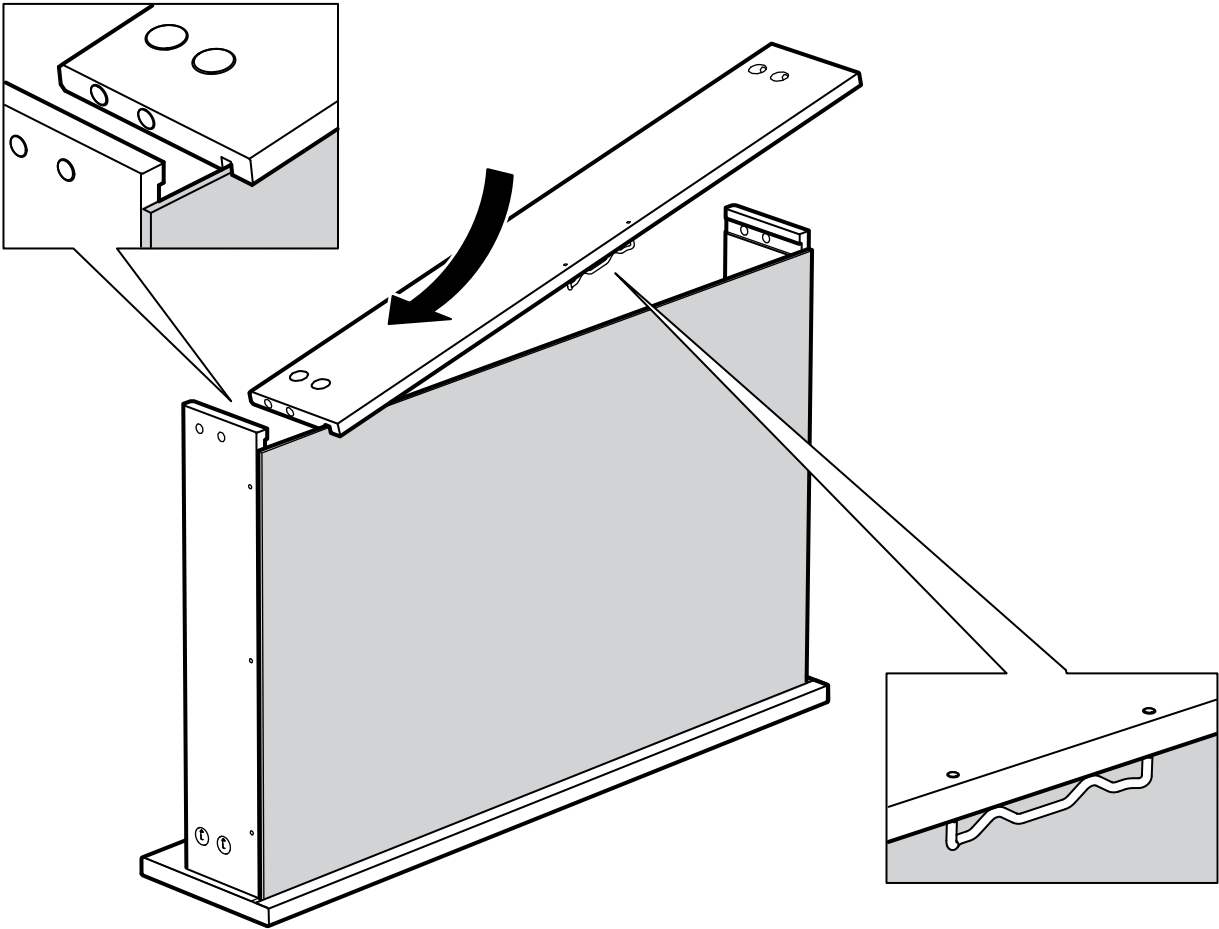 


35

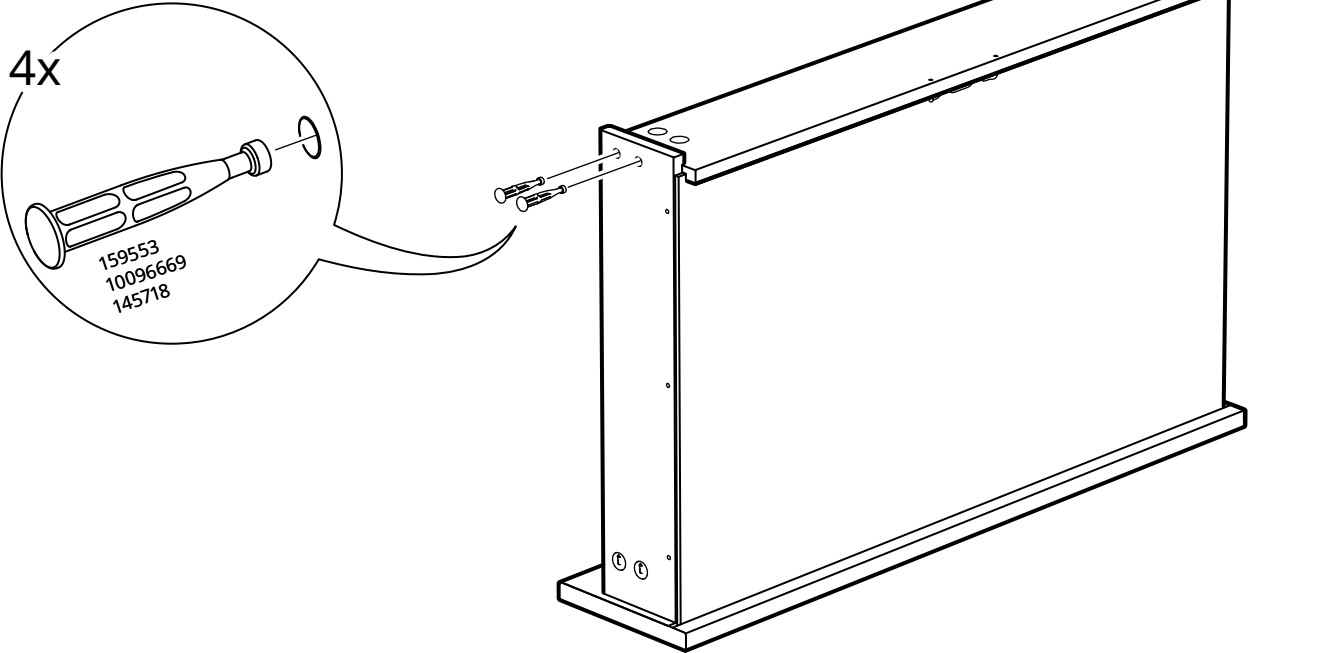 

36

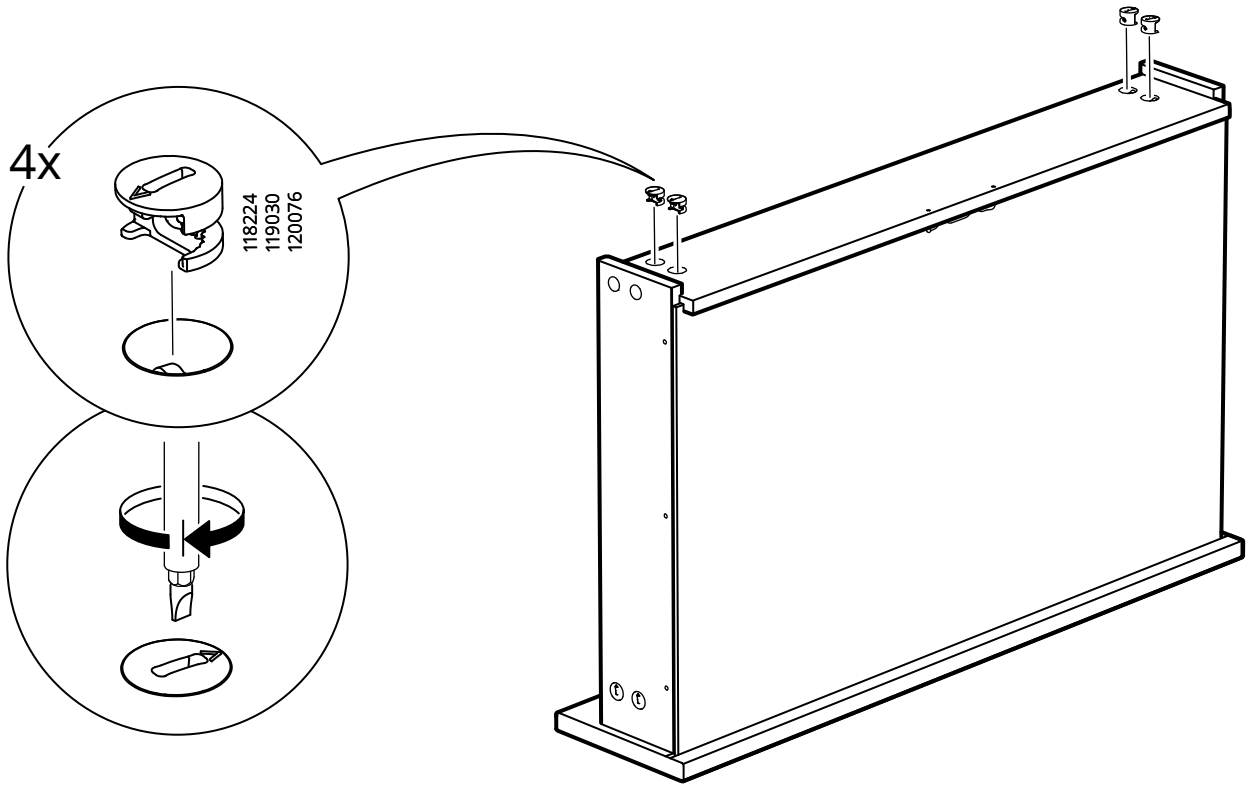 

37

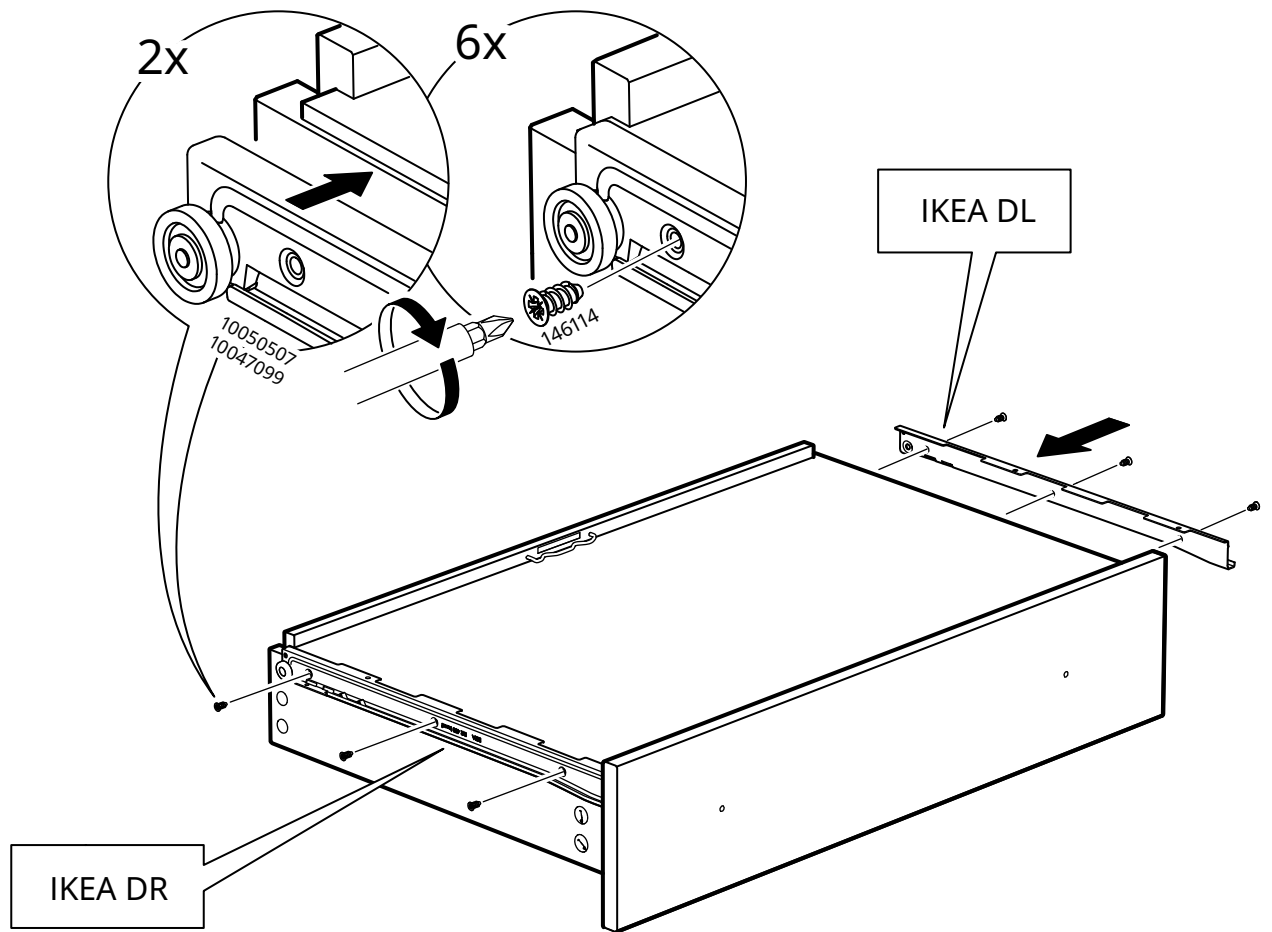 

38

