 
 
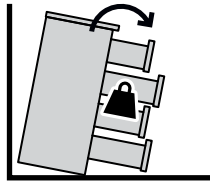 


TONSTAD

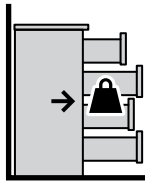

Design and Quality
IKEA of Sweden



English

WARNING!

Children have died from furniture tipover.

To reduce the risk of furniture tipover:

ALWAYS install anti-tip device provided.

 
 
 
 
 
 
NEVER put a TV on this product.

 
 
 
 
 
NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.

NEVER open more than one drawer at a time.

Place heaviest items in the lowest drawers.


Read and follow each step of the instruction carefully.

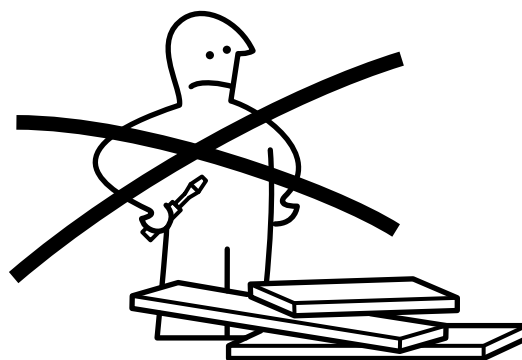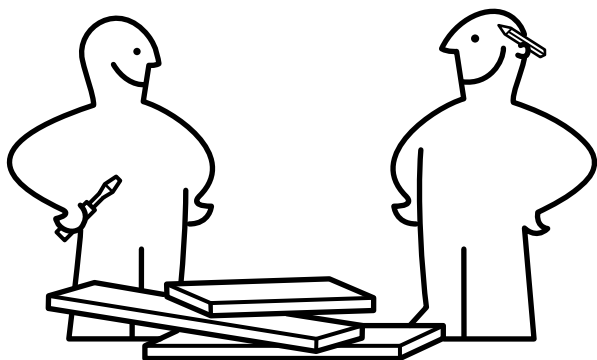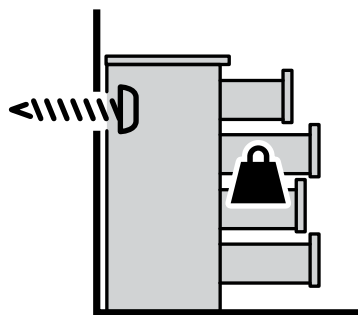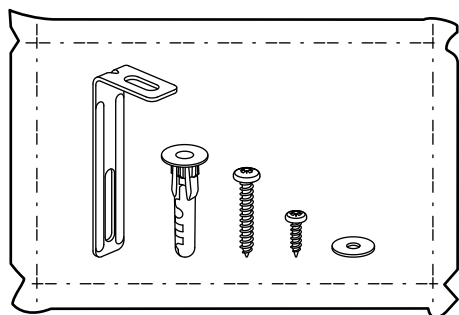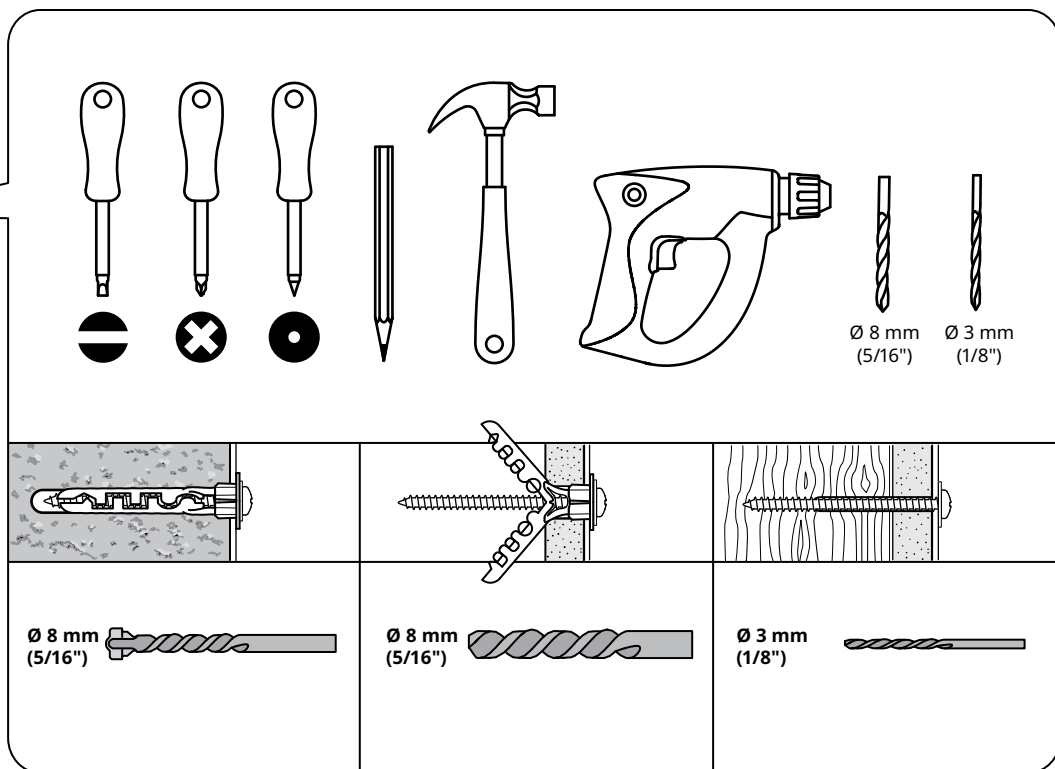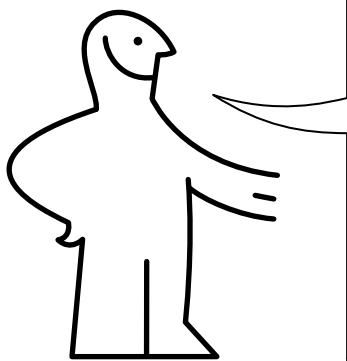

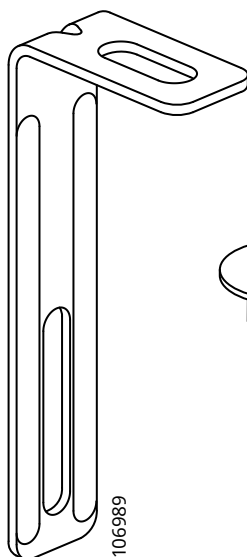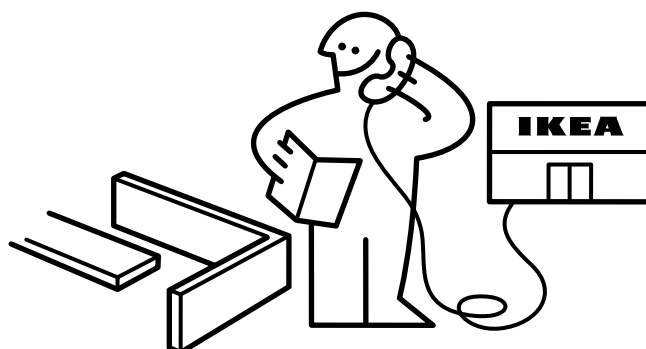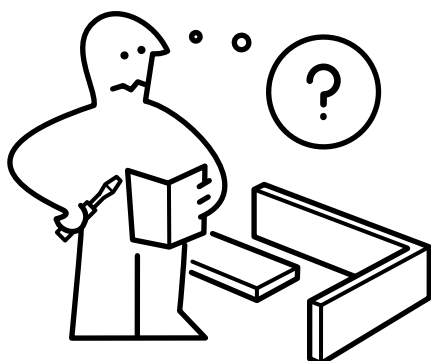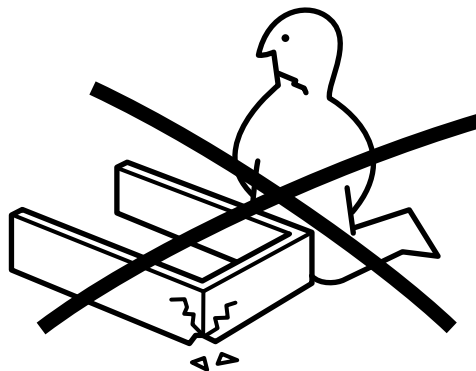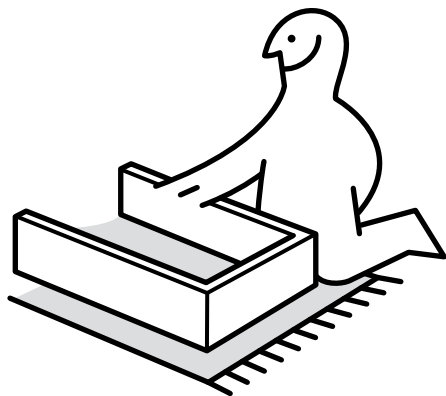


106989

 2x

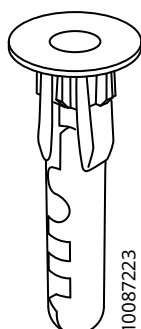

10087223

 2x



109567

2x



109049

 
2x



100823

4x

1

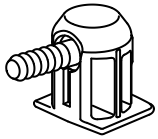


10046078

8x




113434

 6x

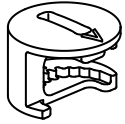

120076

 16x

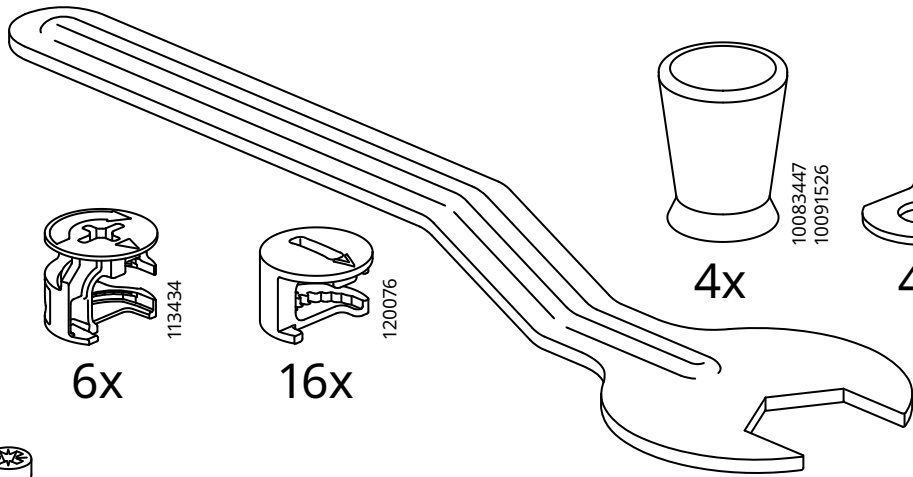


190459

1x




10083447
10091526

 4x

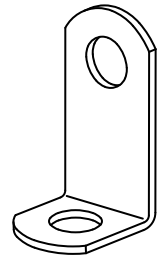

102553

 4x



10096669

16x



 
118331

6x




101350

15x




106603

 4x




151705

 8x




151706

 8x

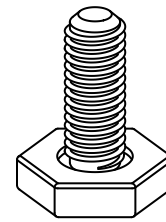

159991

 4x



10048881

 
16x

2



105811

4x

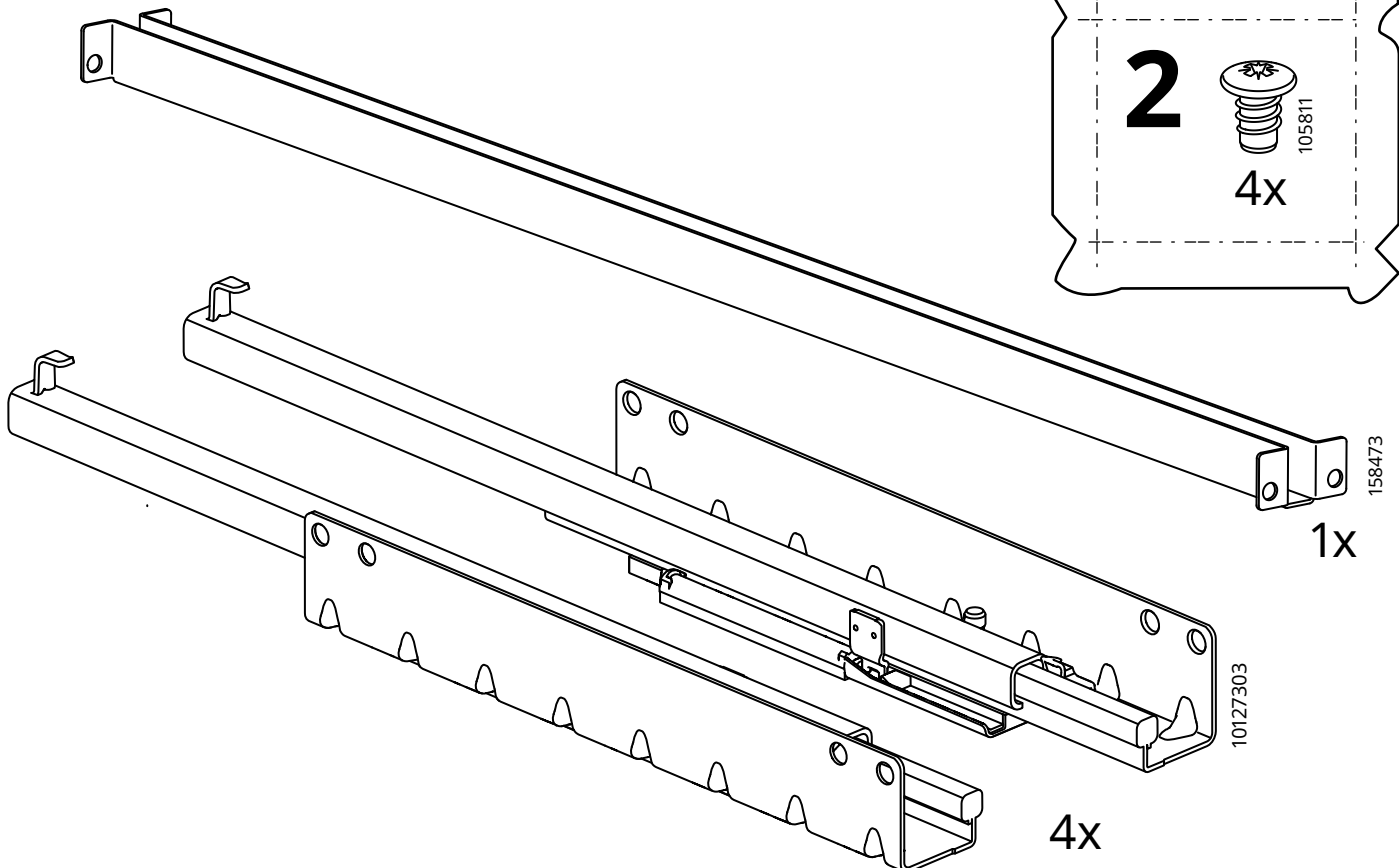


158473

1x



10127303

4x

 
1

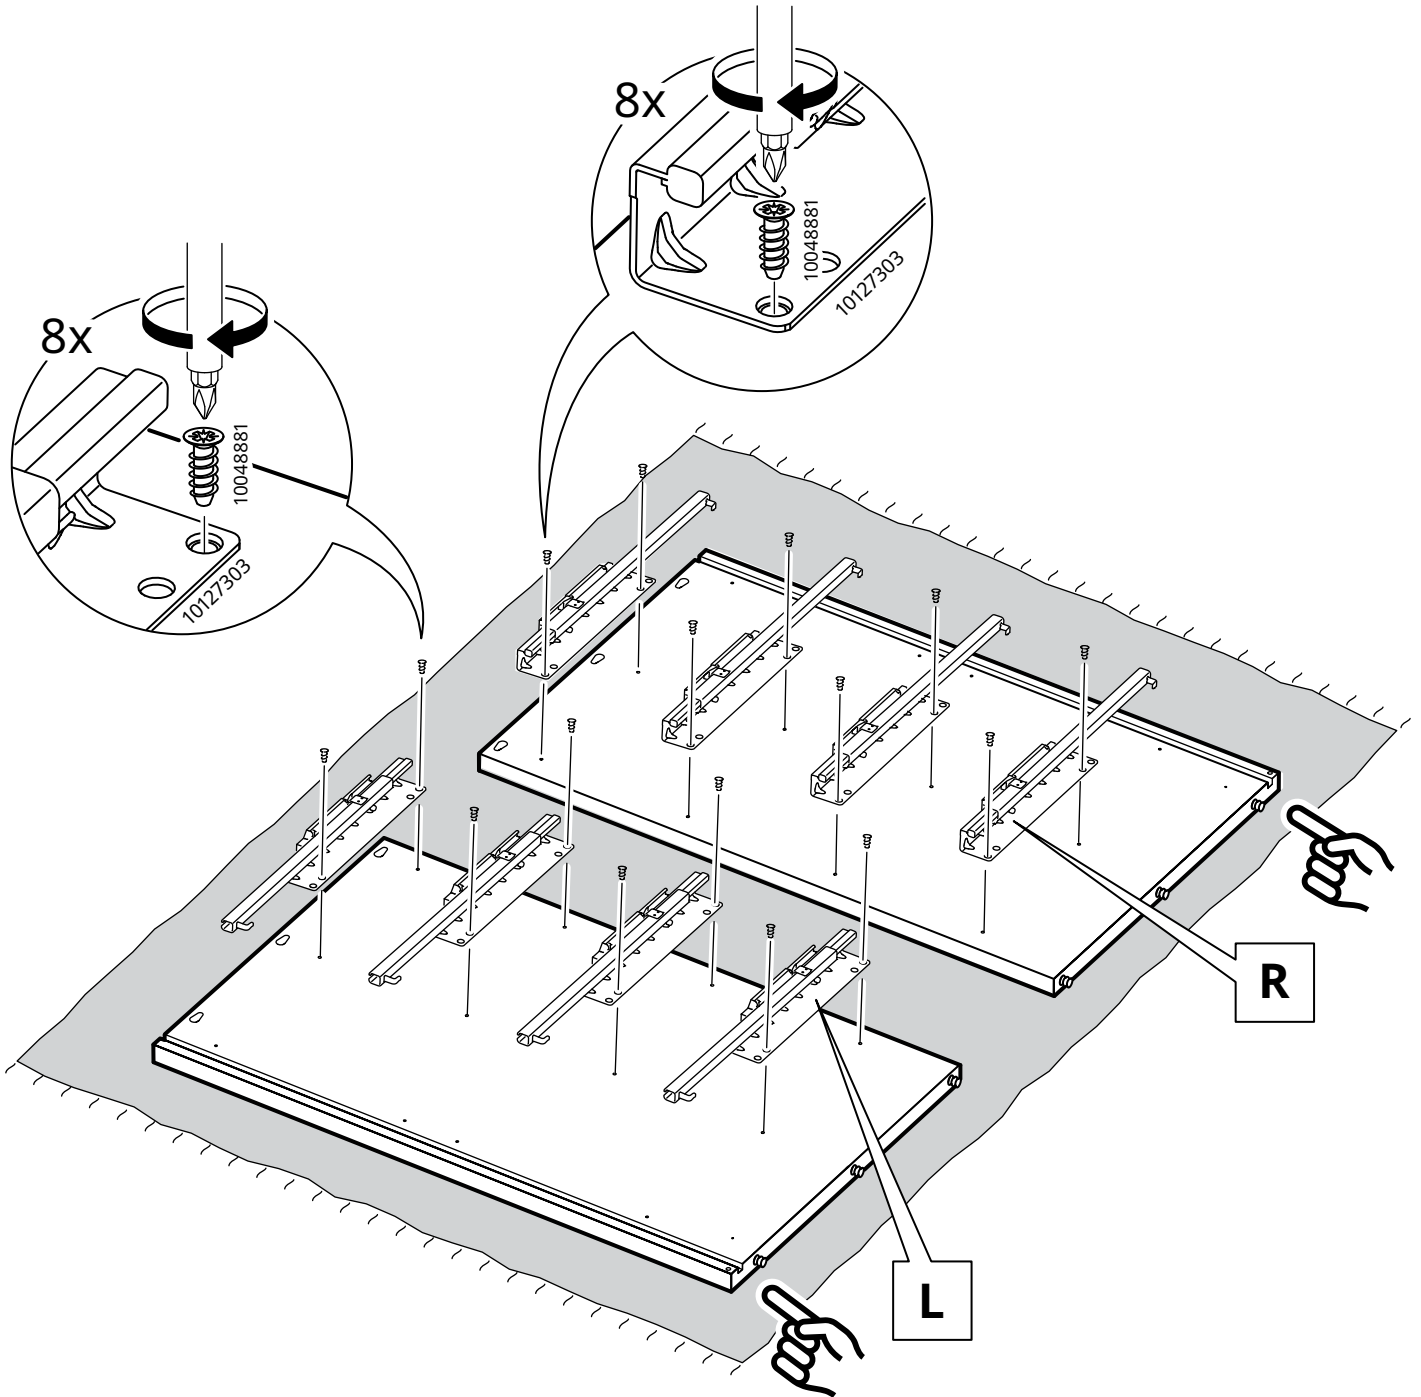


2

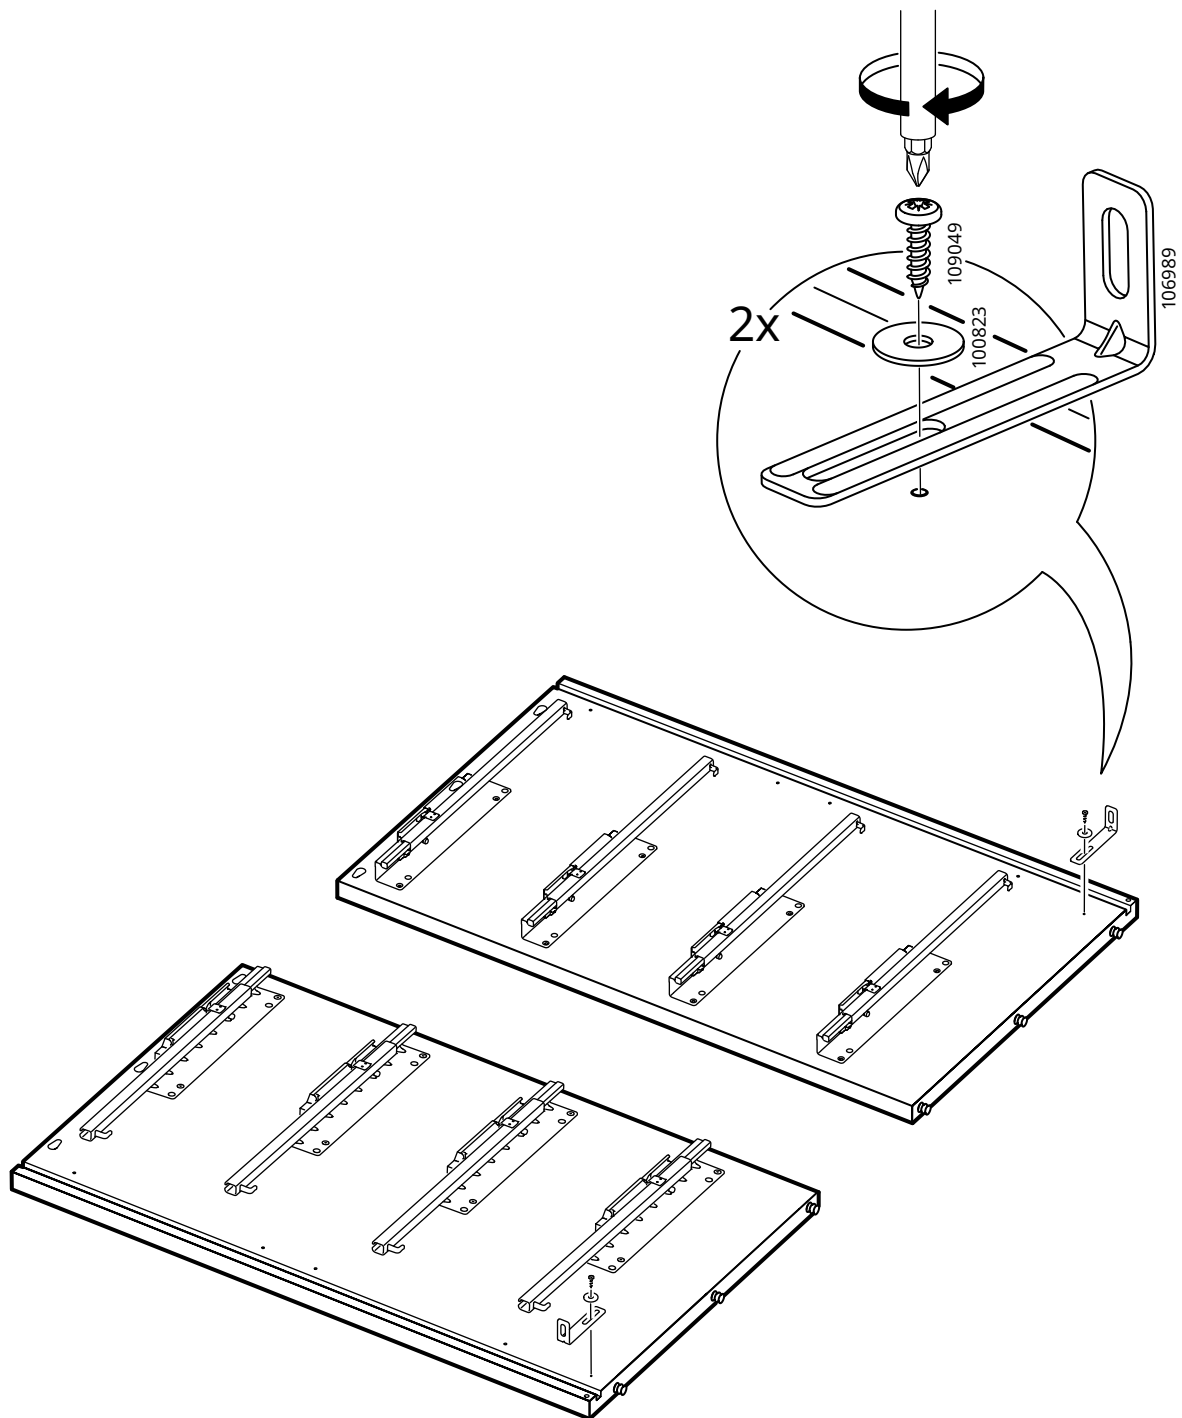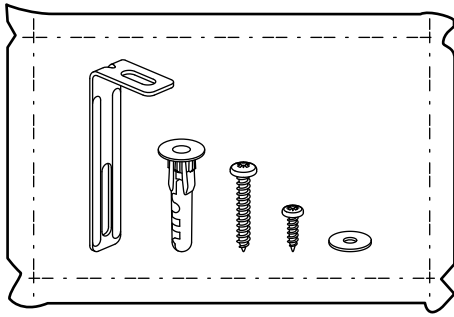  





3

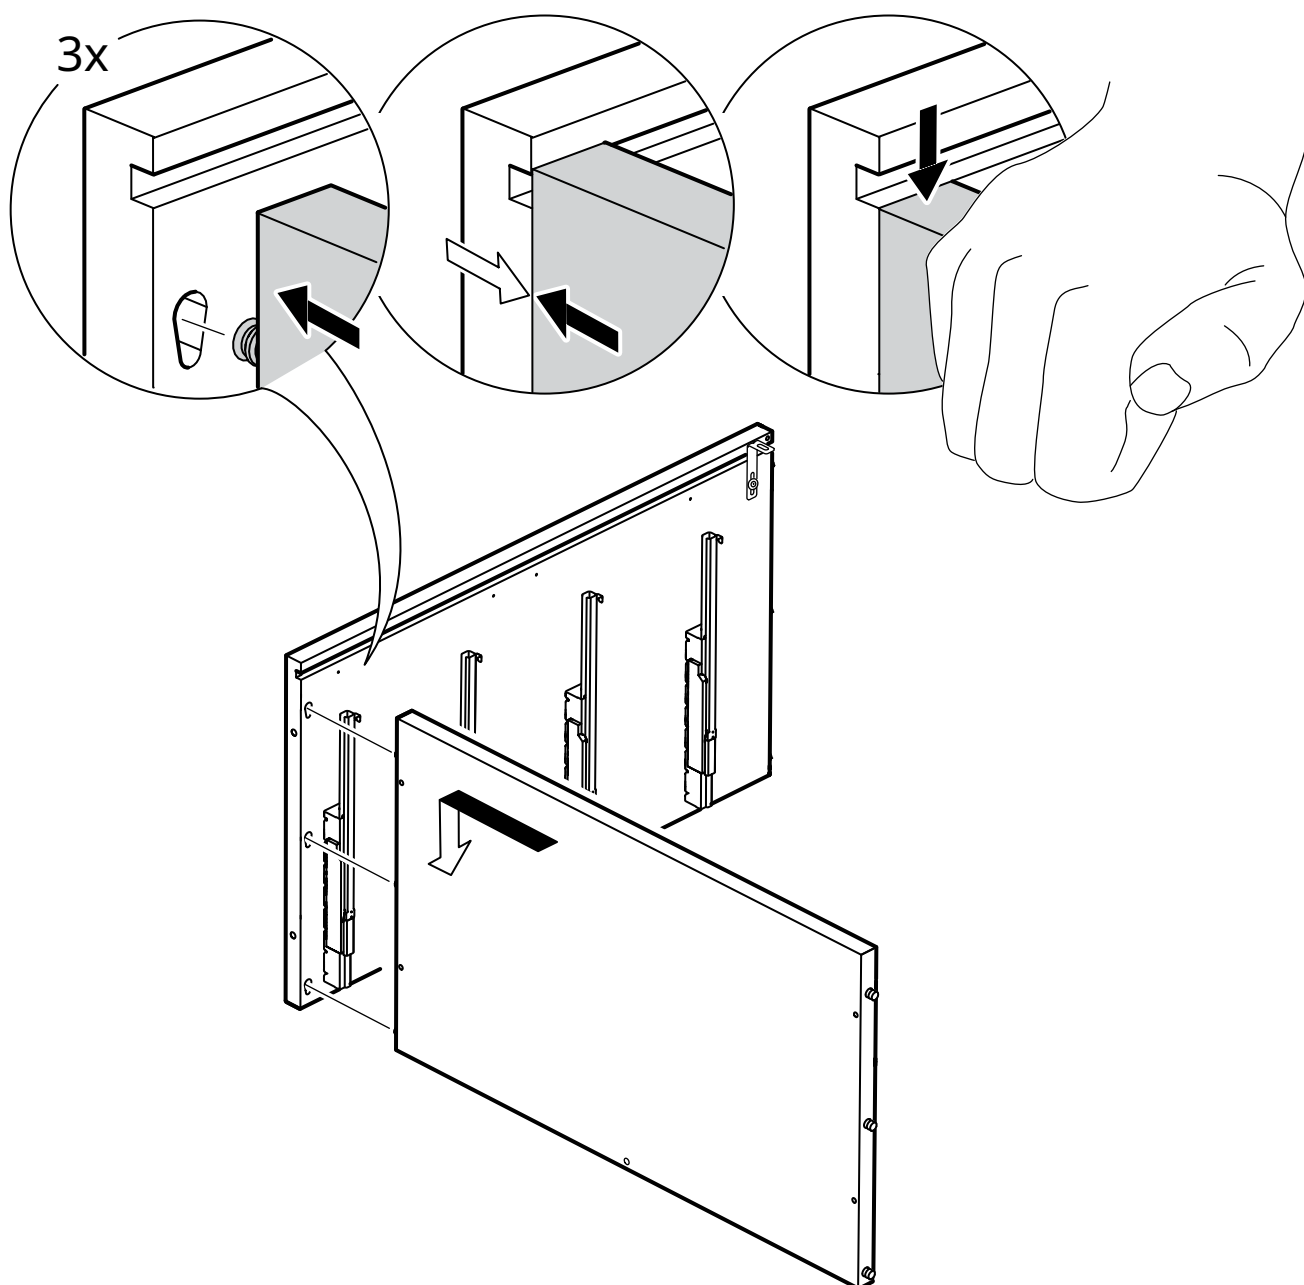 


4

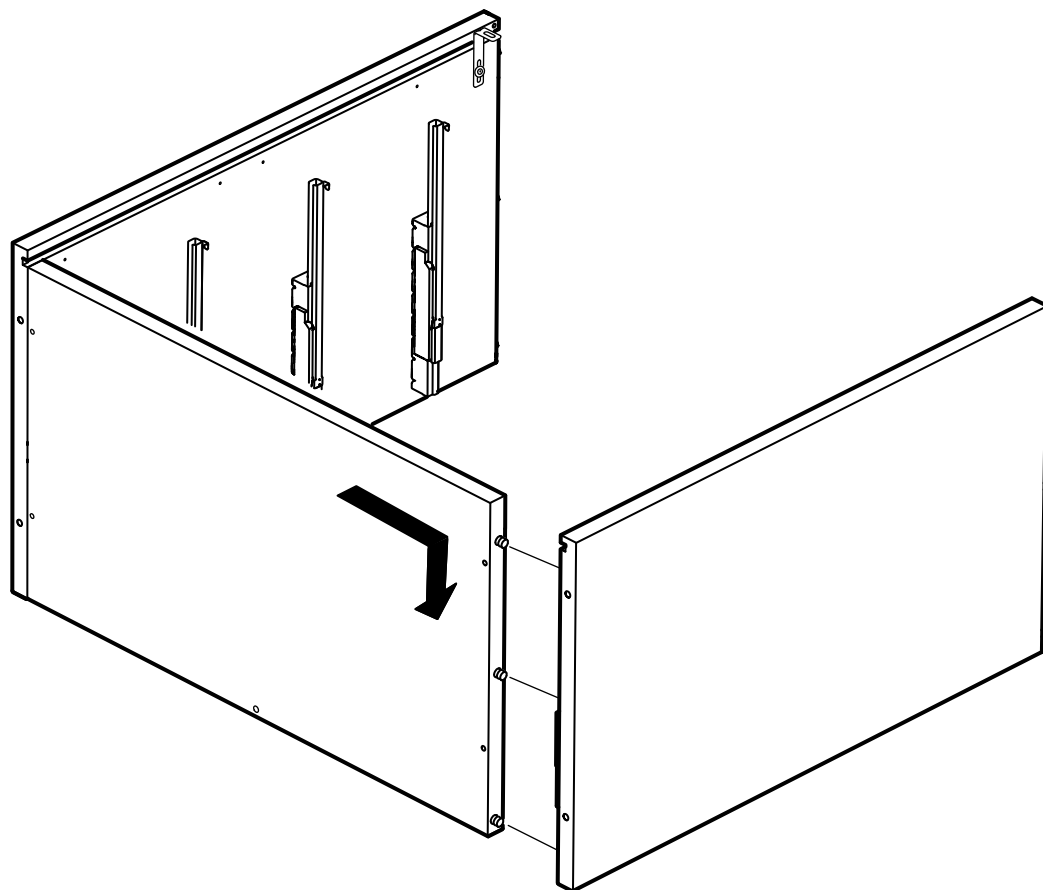 


5

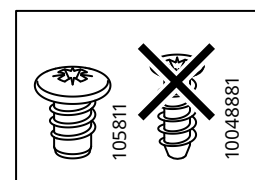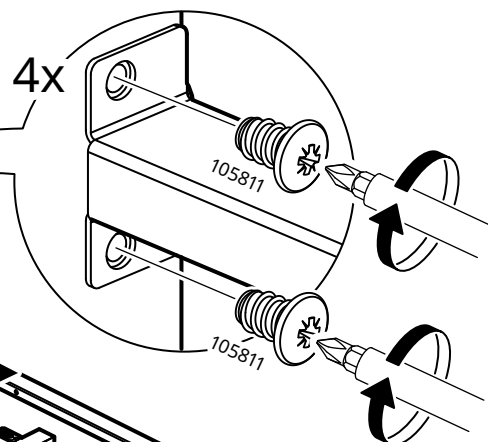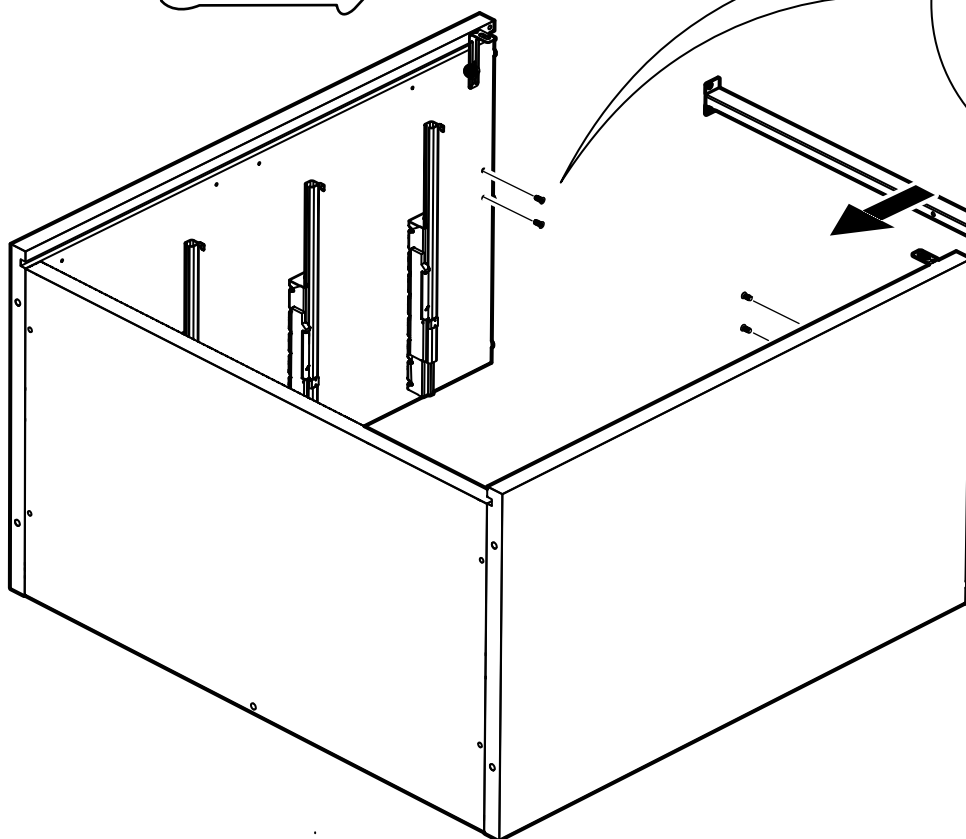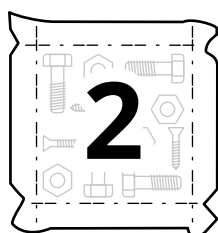    


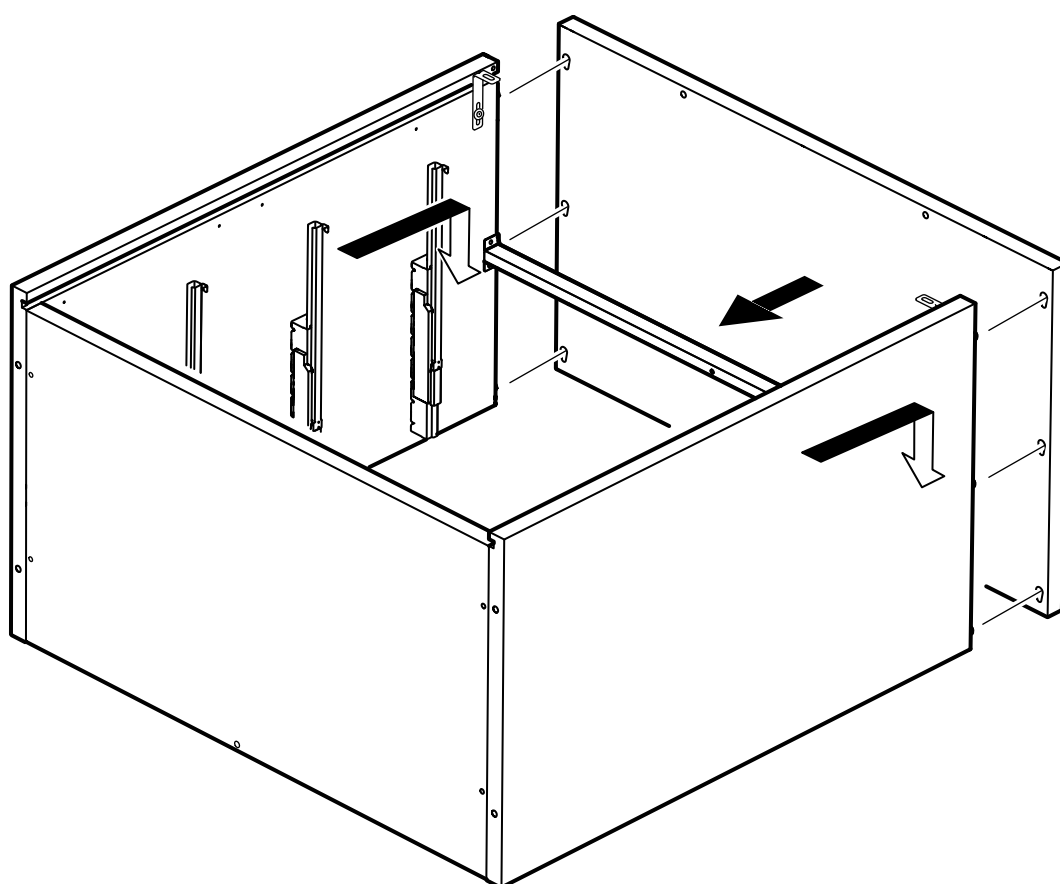 


7

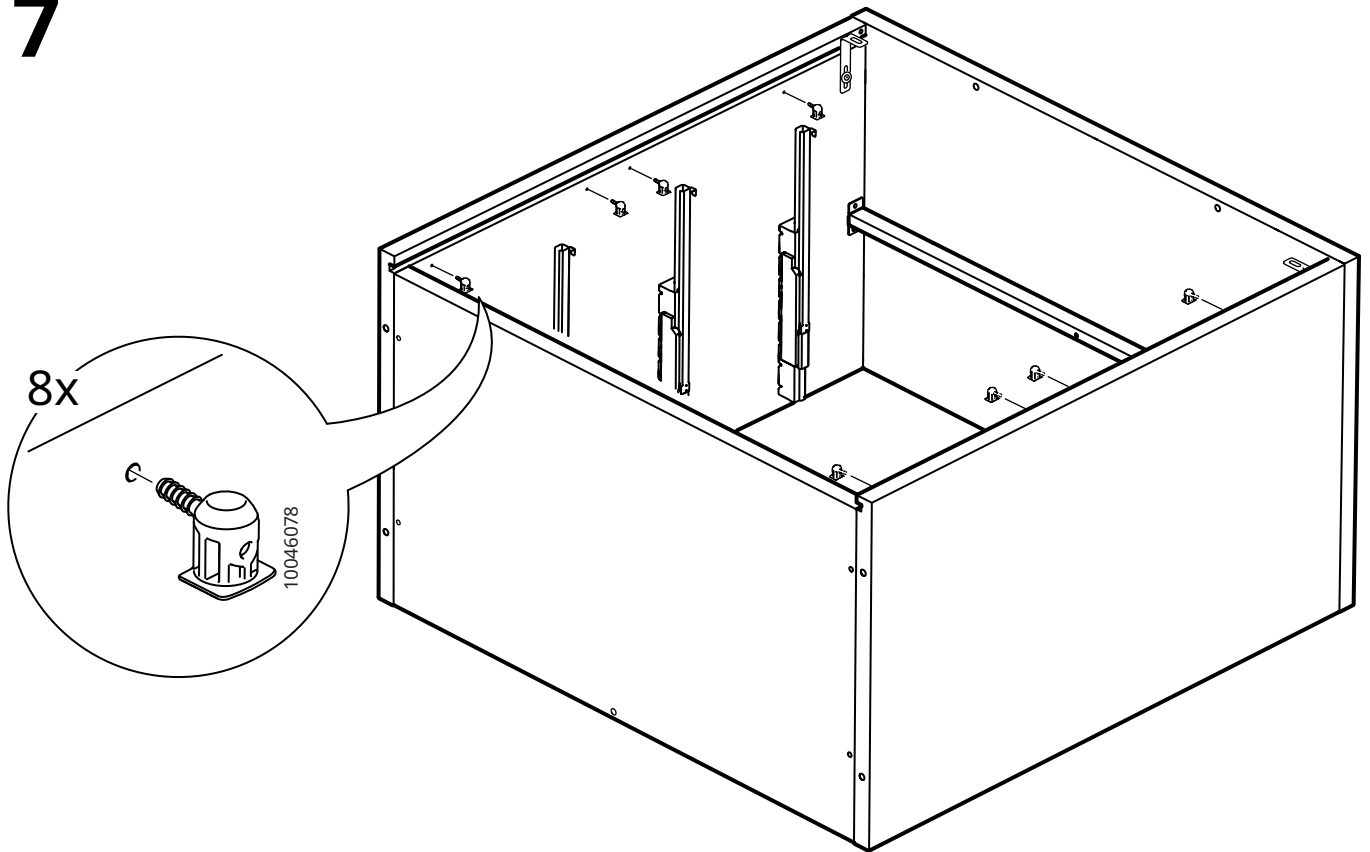 


8

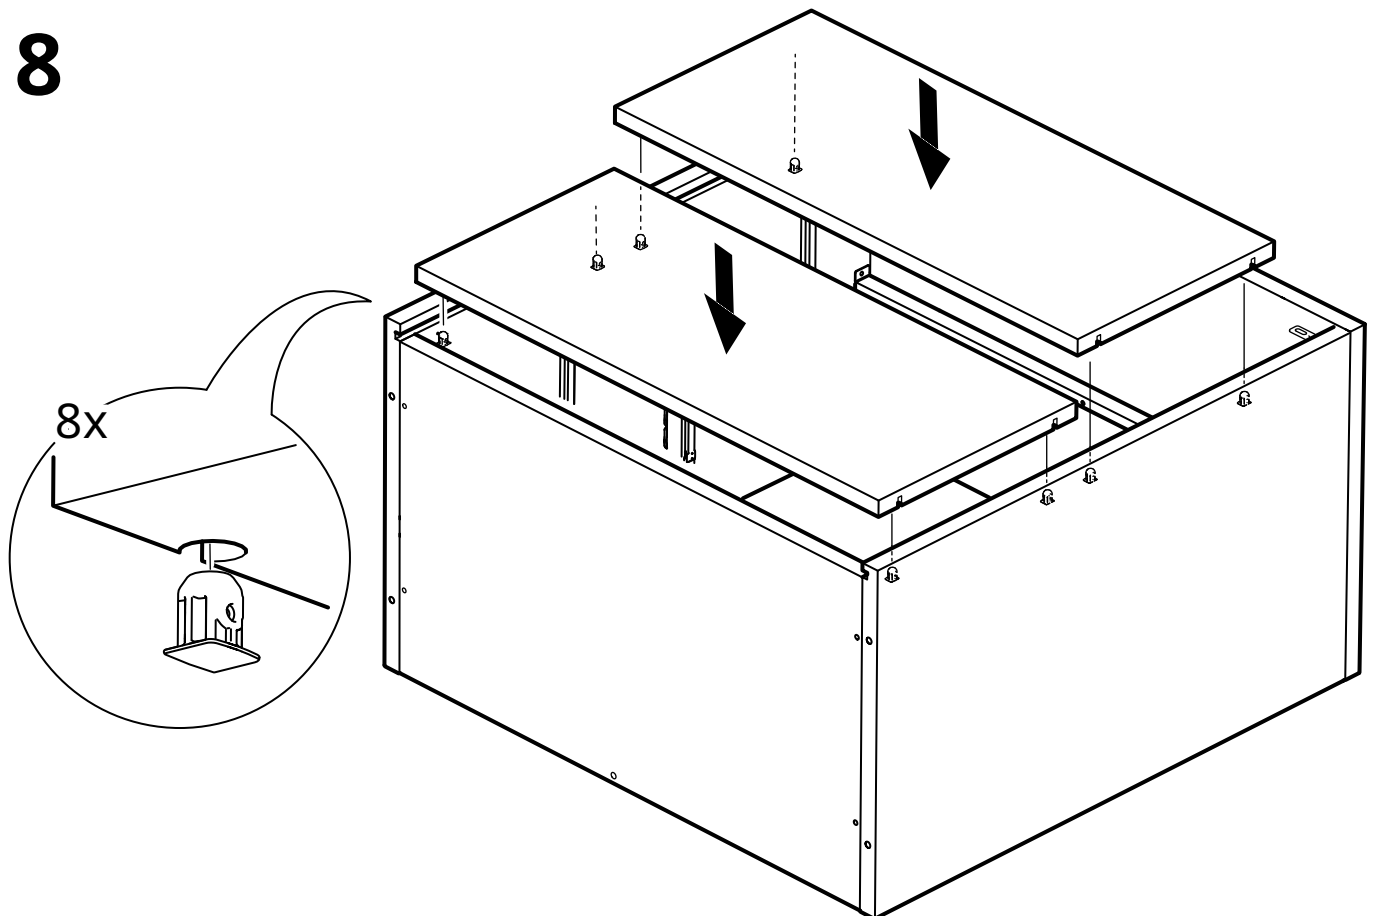 


9

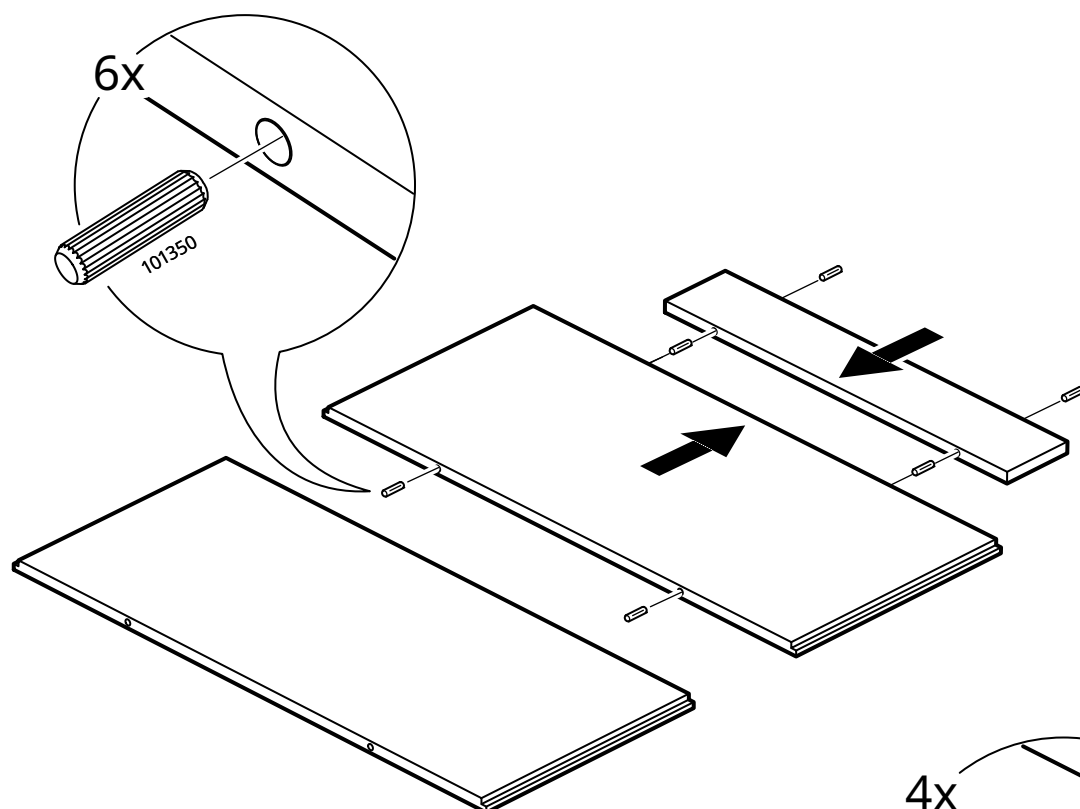 


10

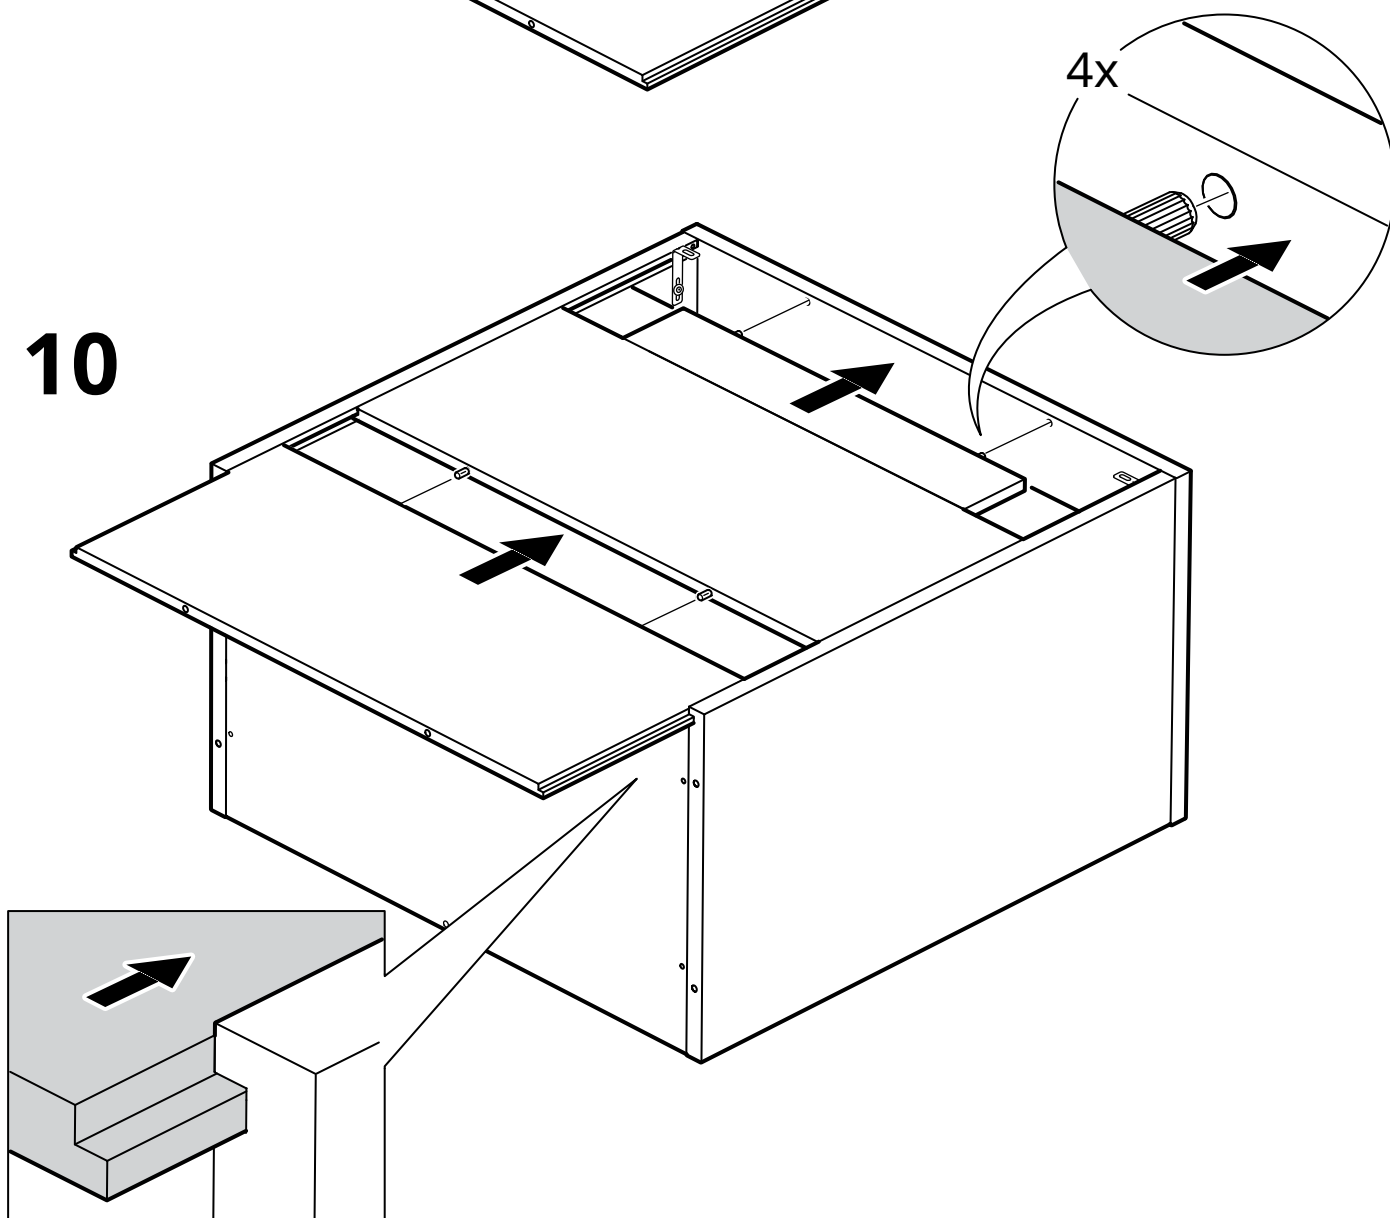 


11

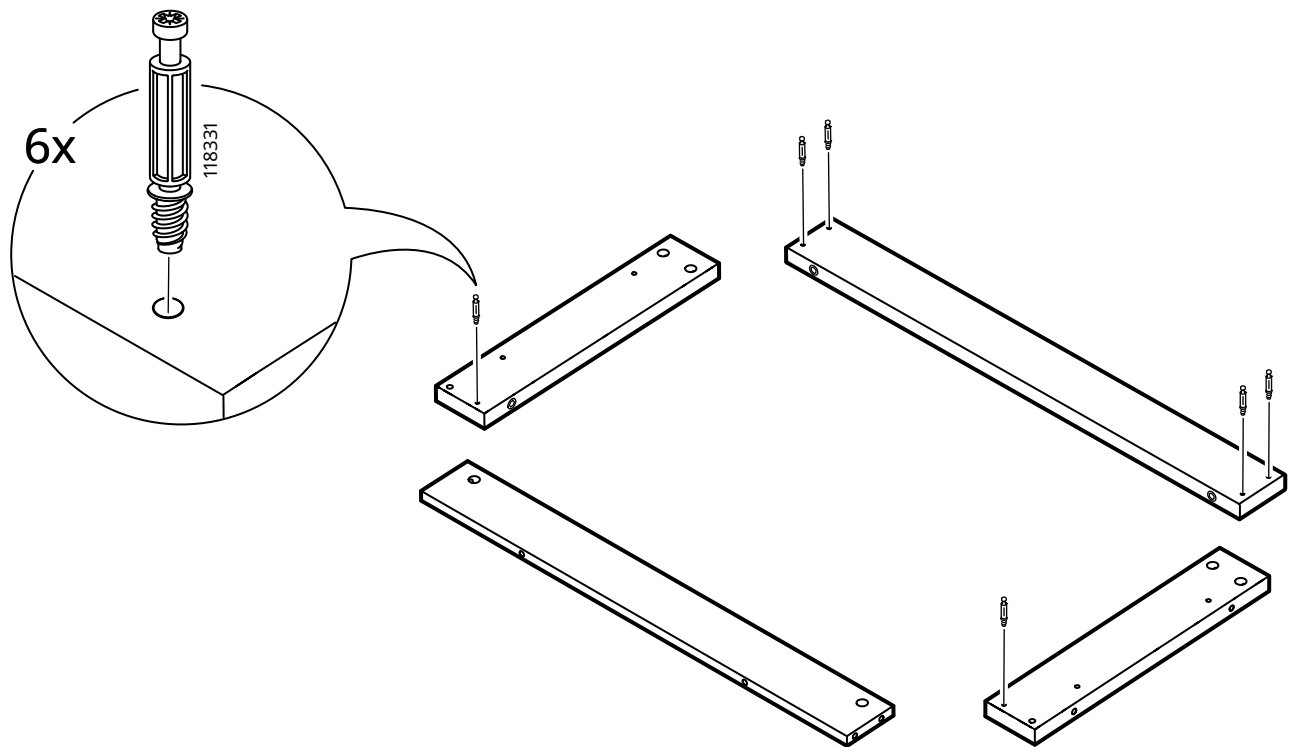 


12

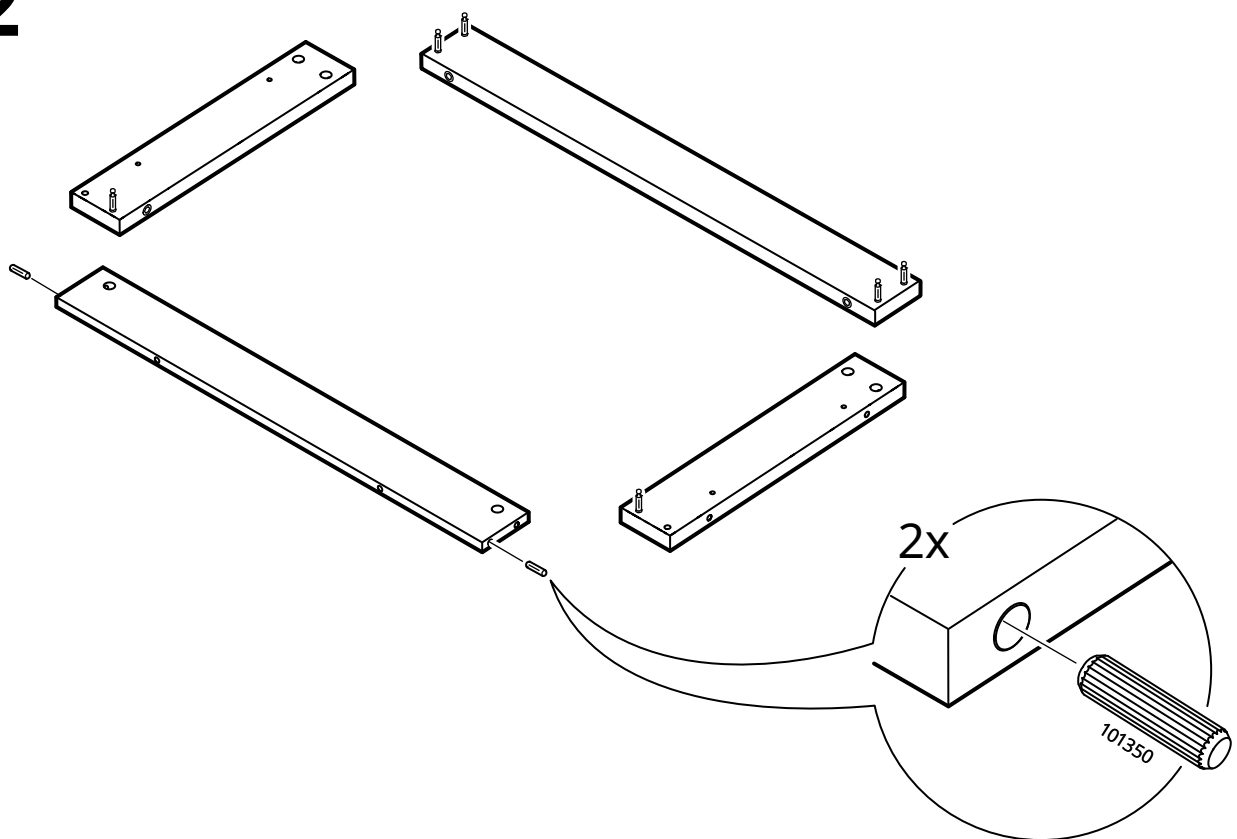 


13

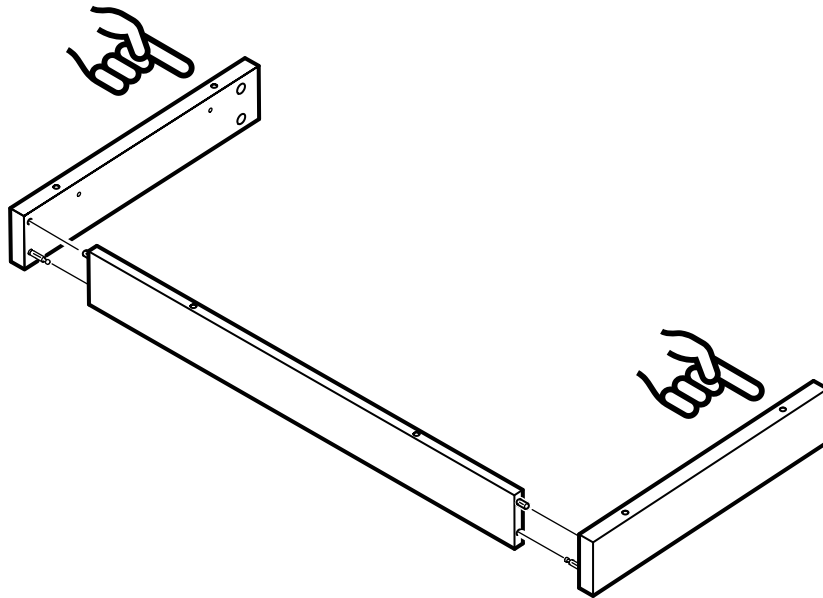 


14

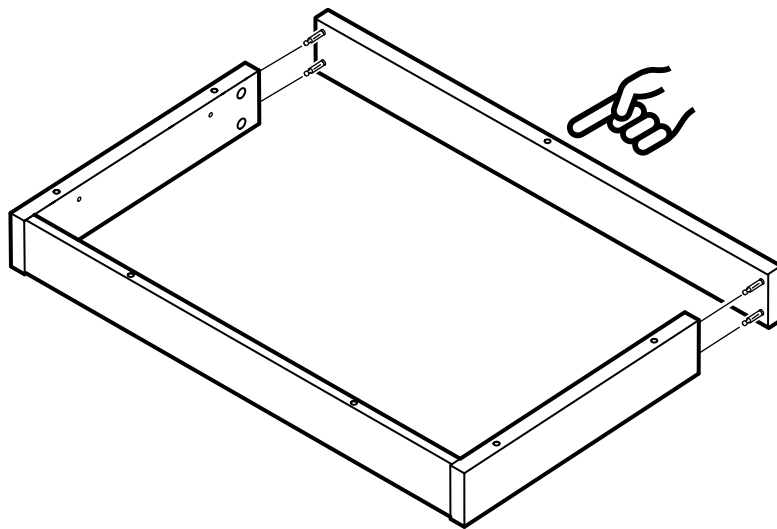 


15

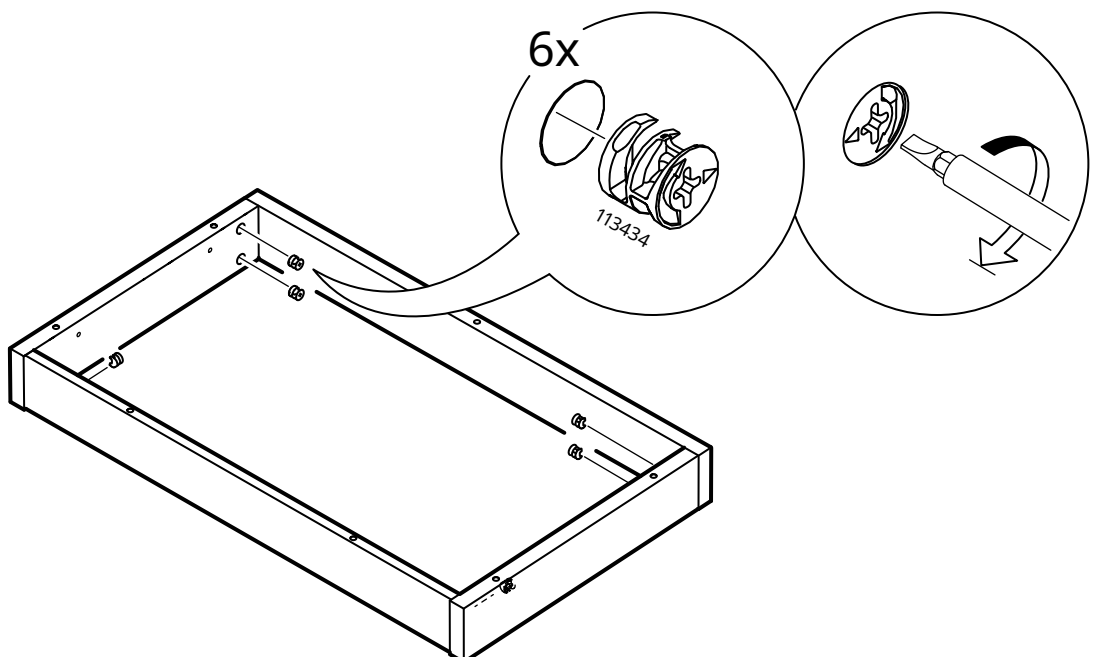 

16

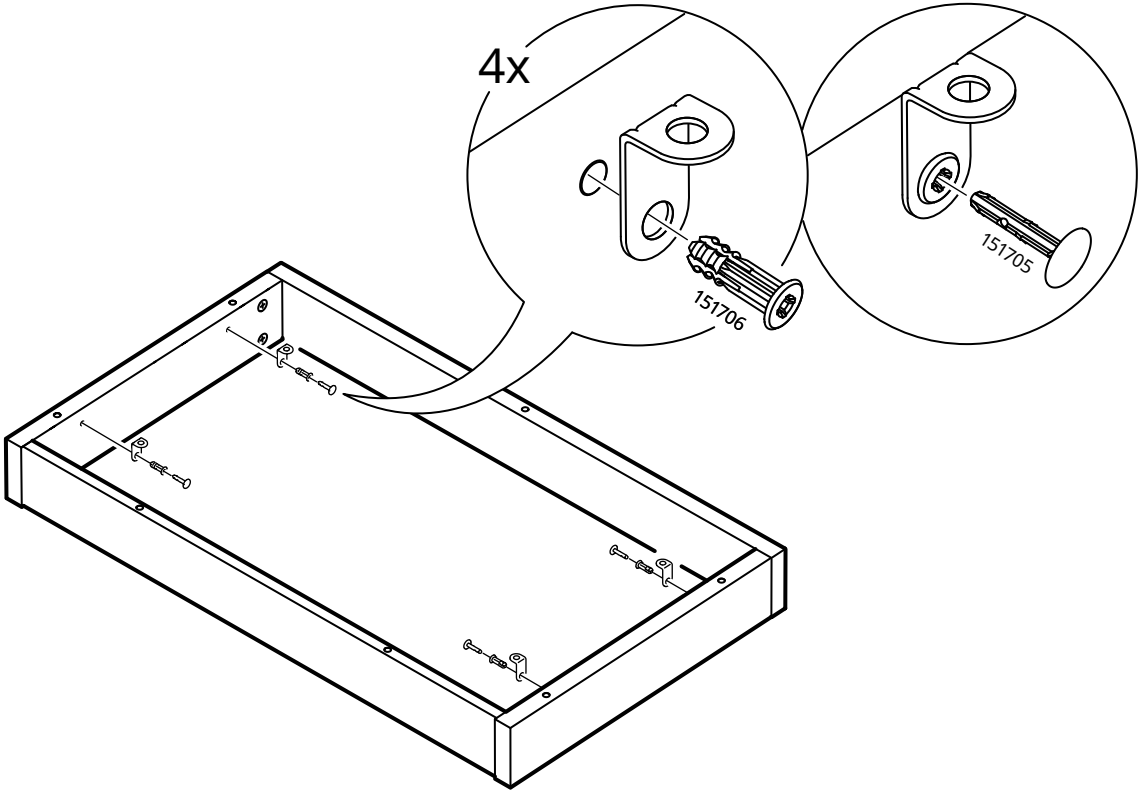 


17

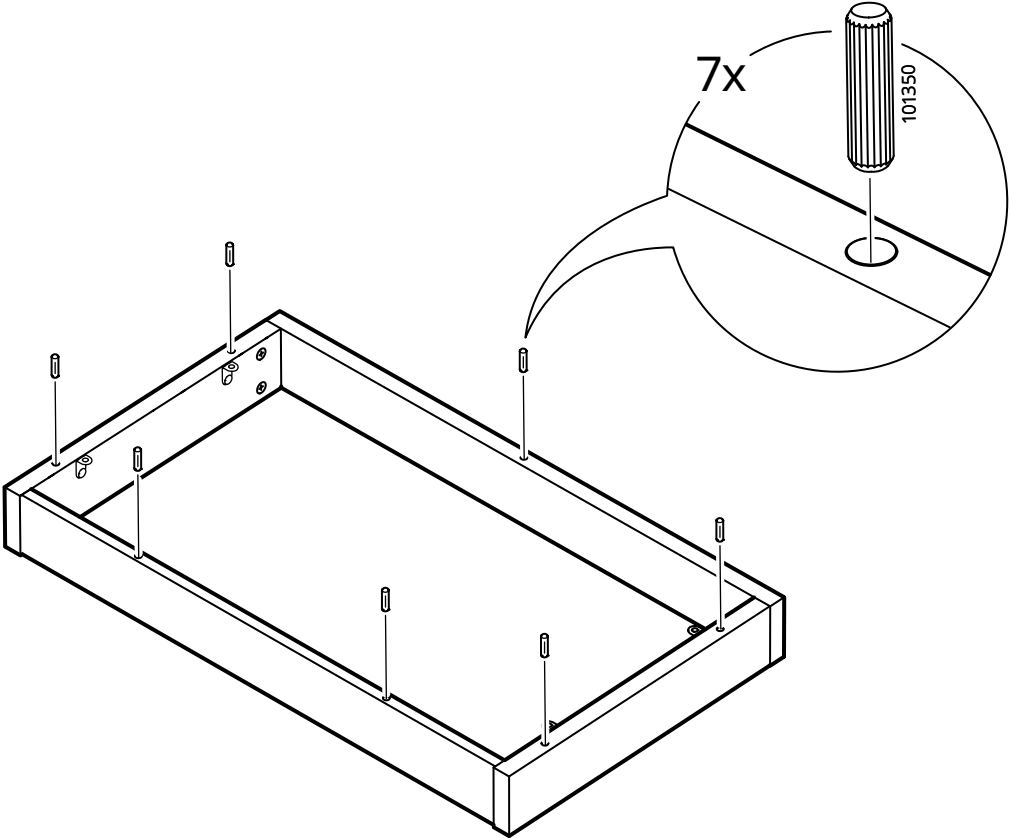 


18

 
4x

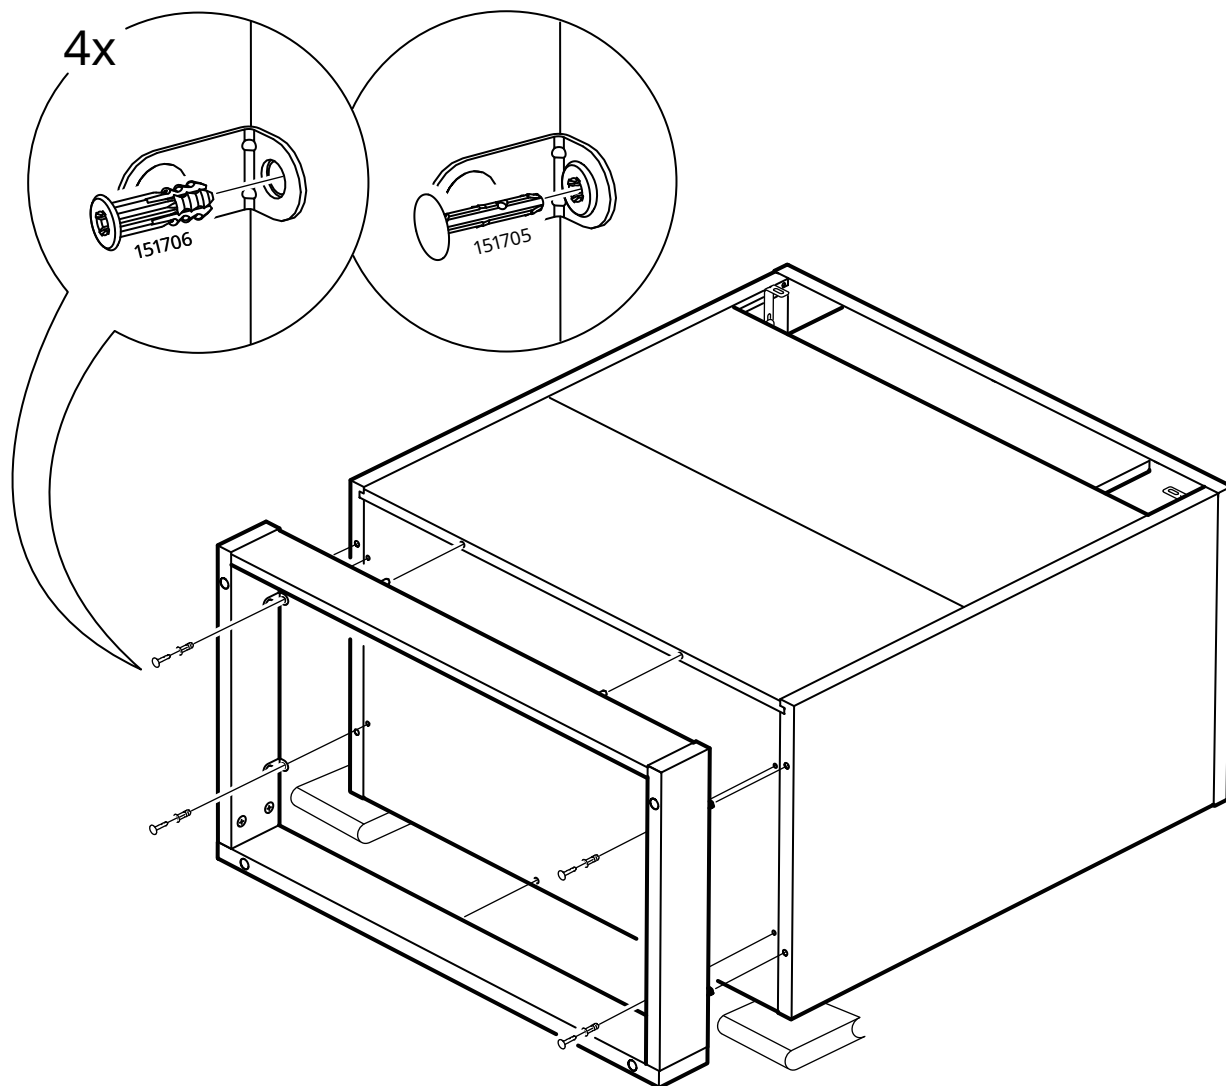


19

  4x

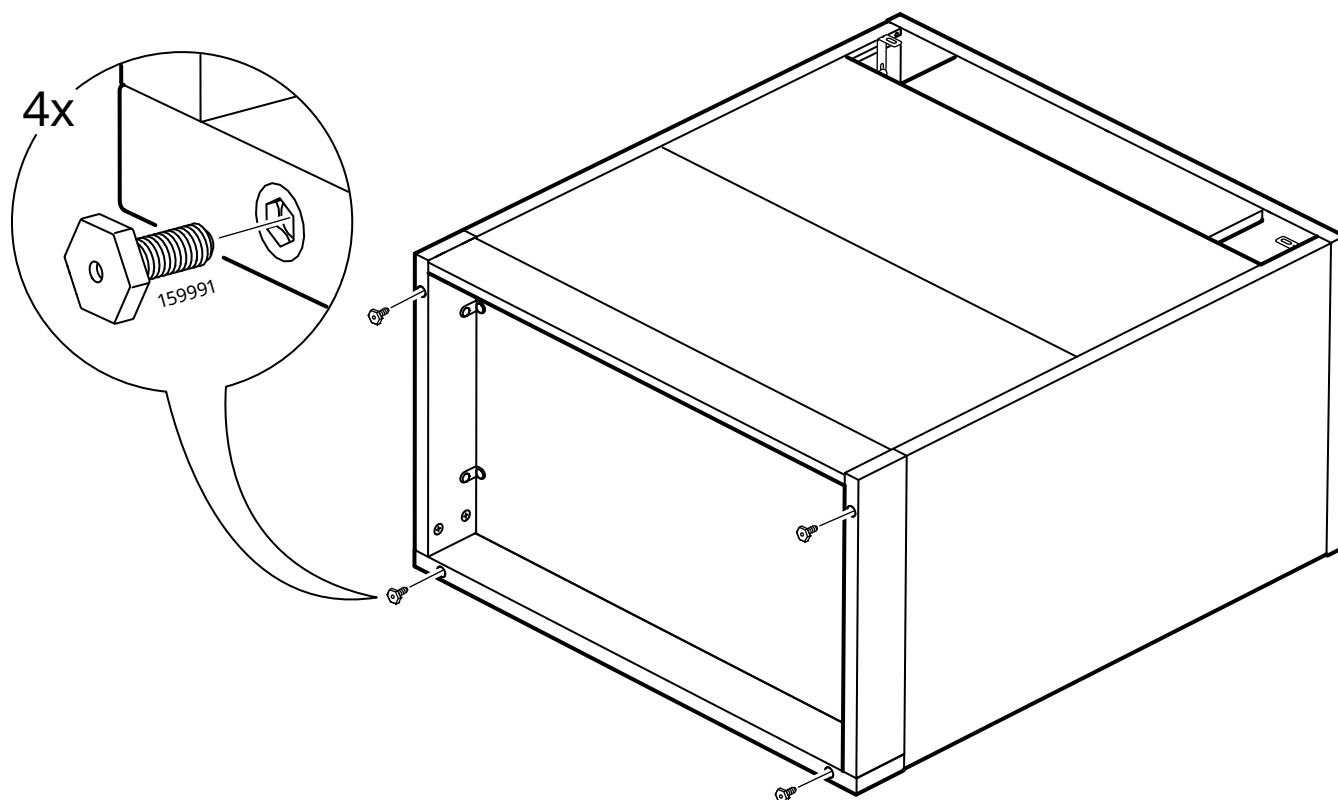


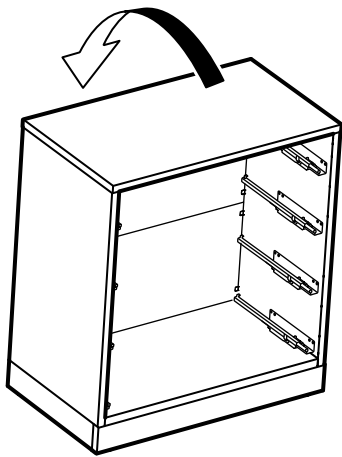


20

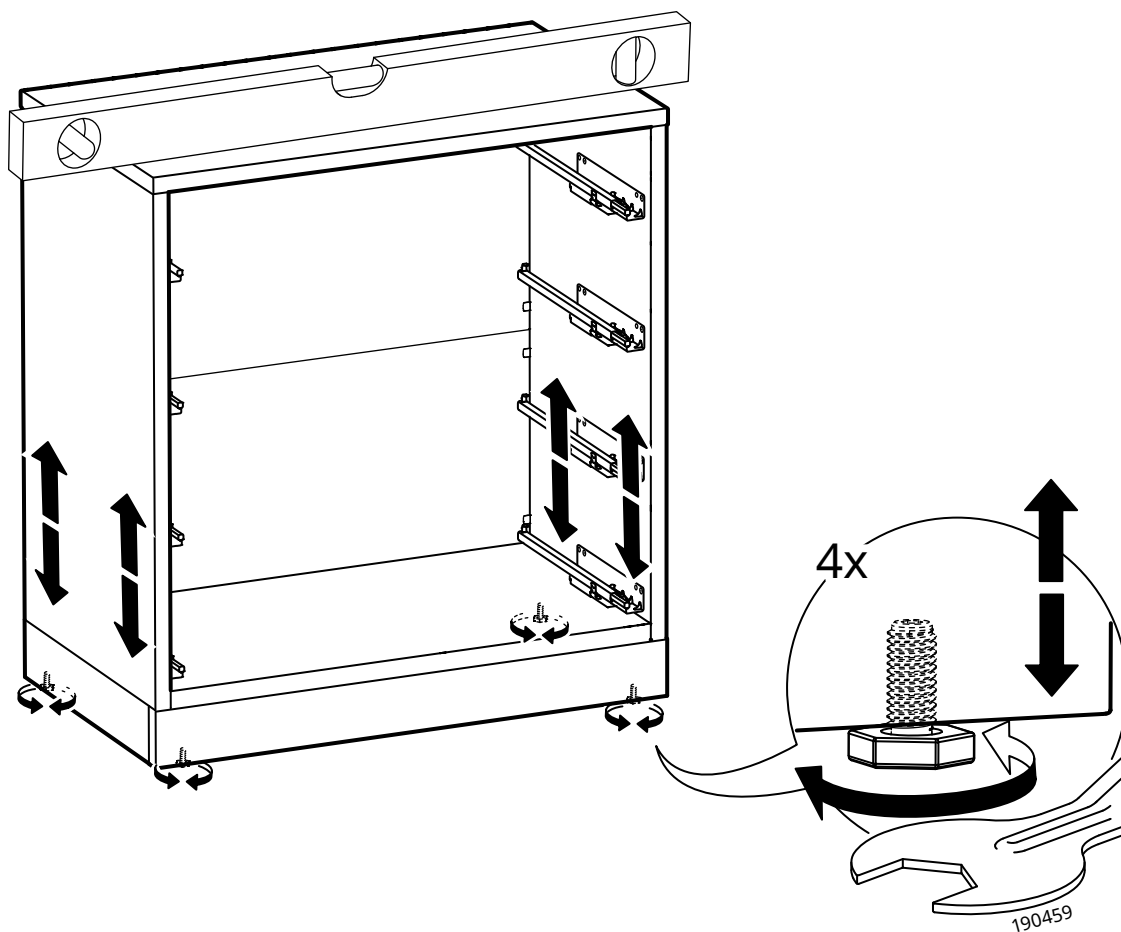 

21

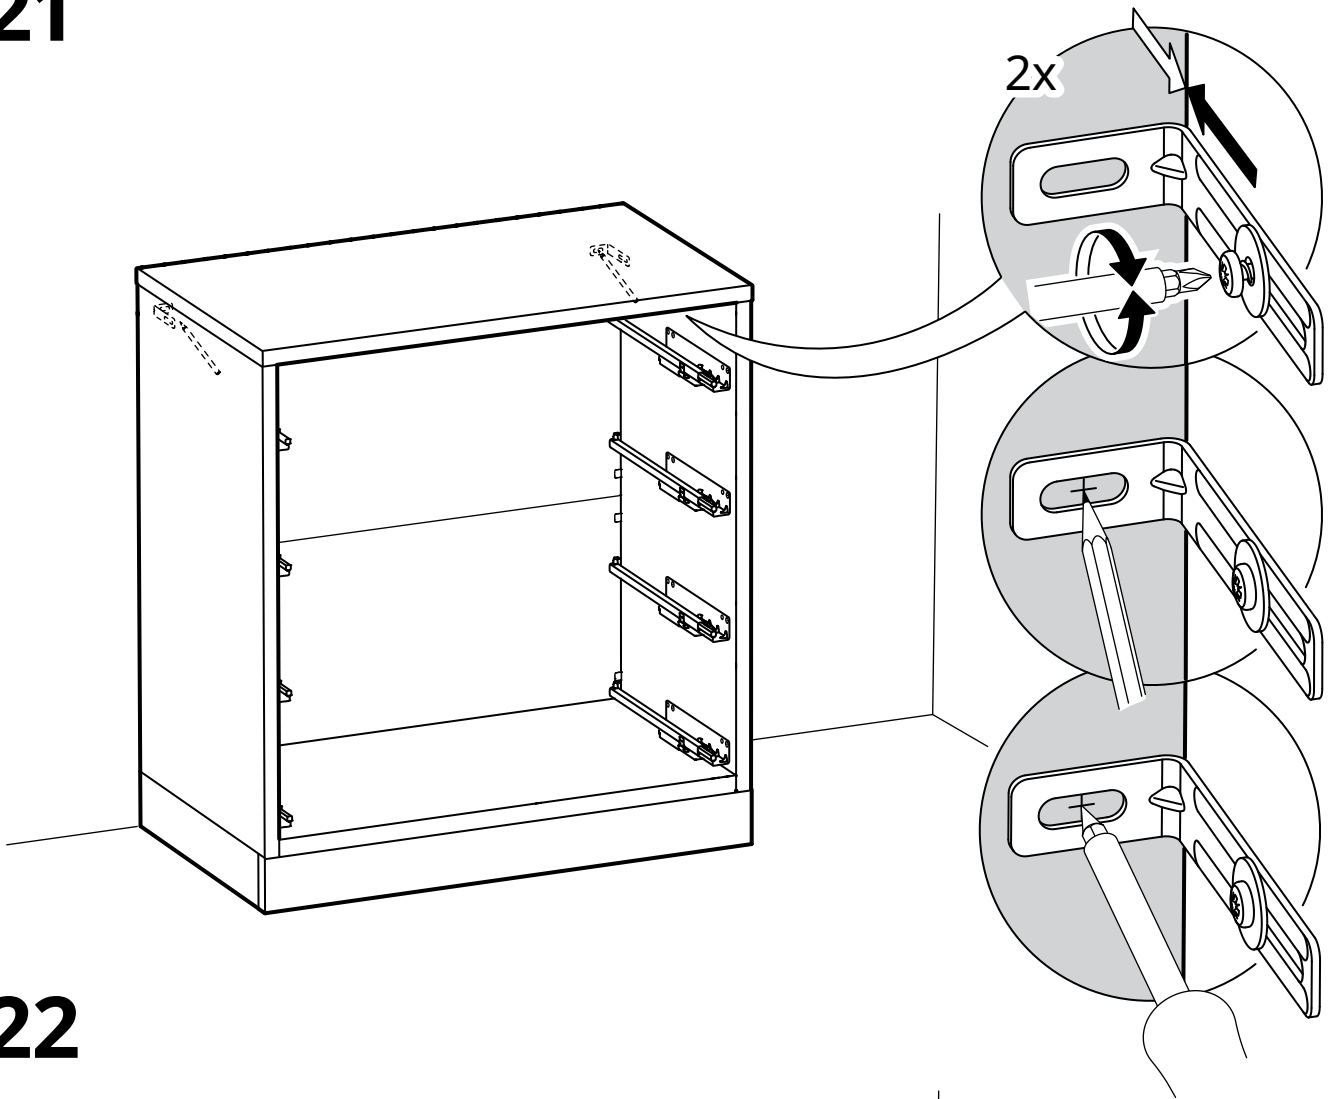 


22

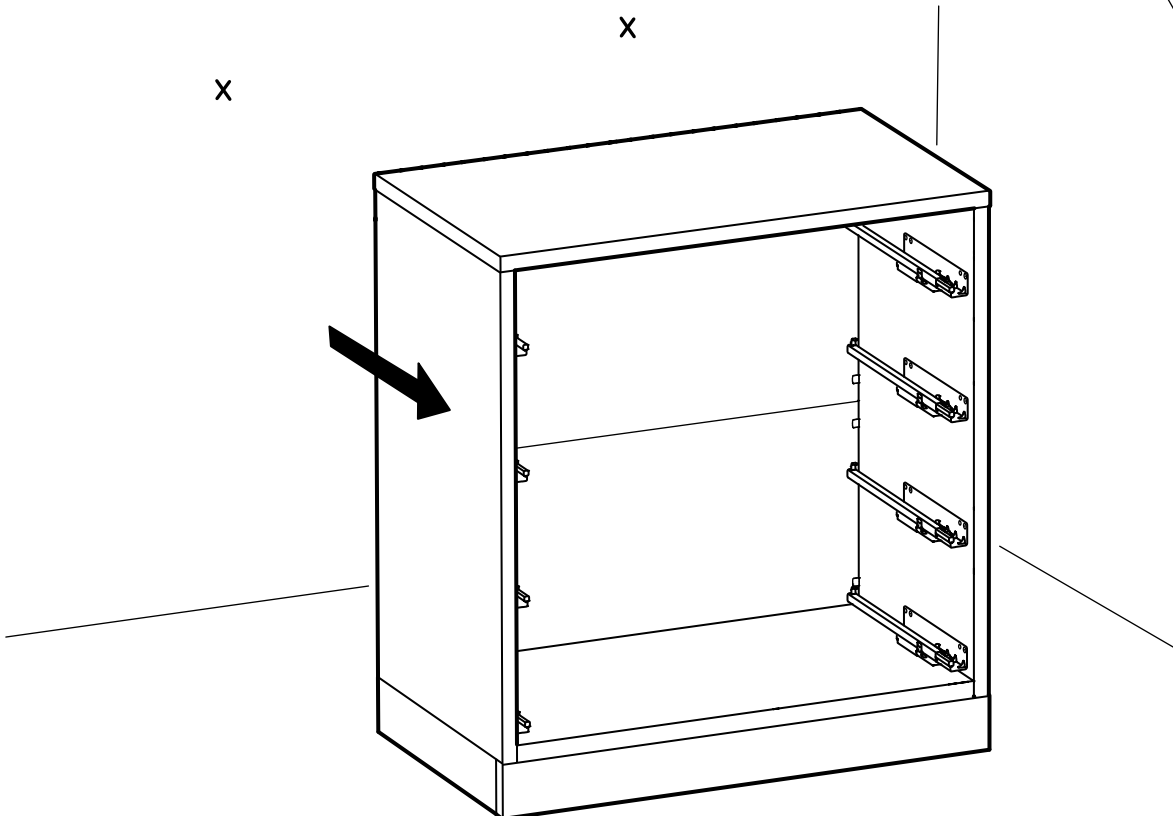 




www.IKEA.com/secure-it

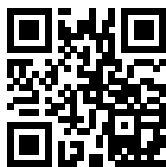 




www.IKEA.cn/secure-it

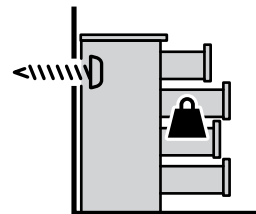 



23

English

    
 
The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

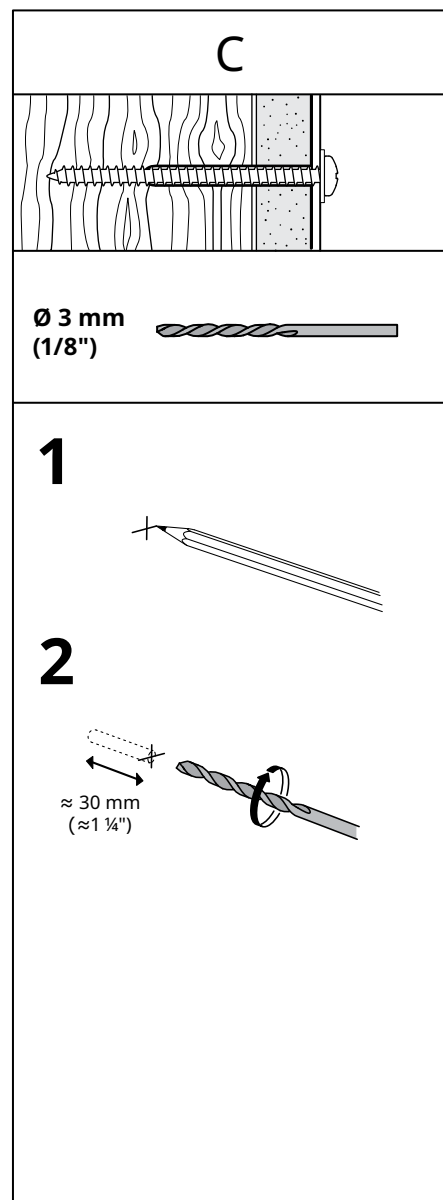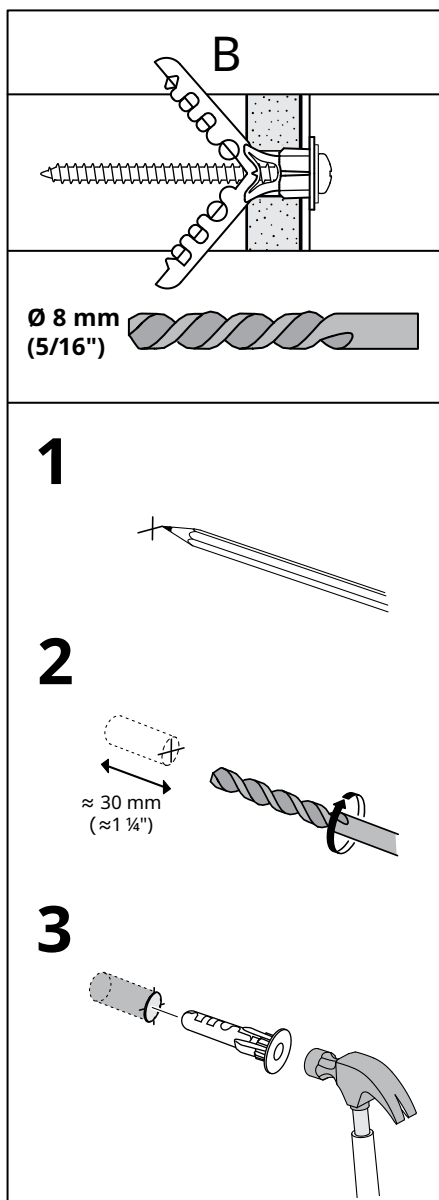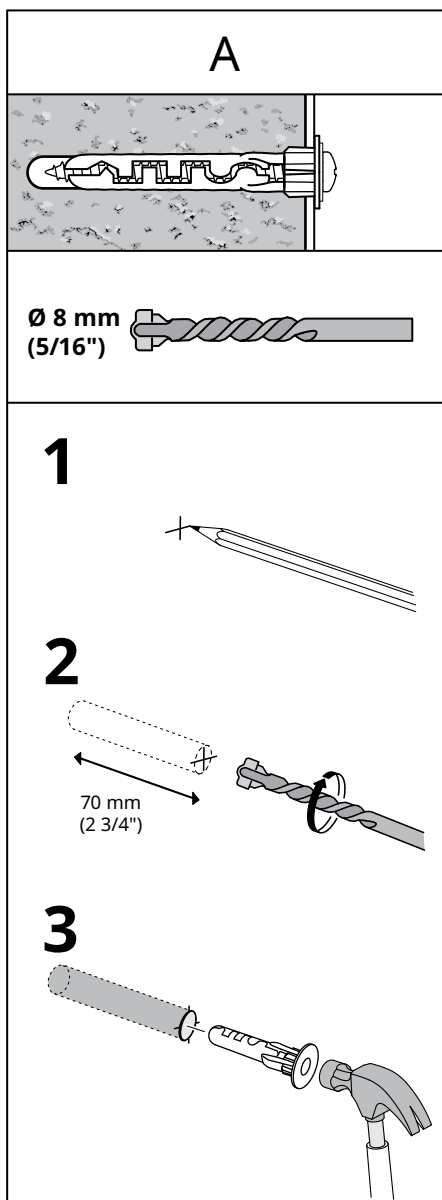

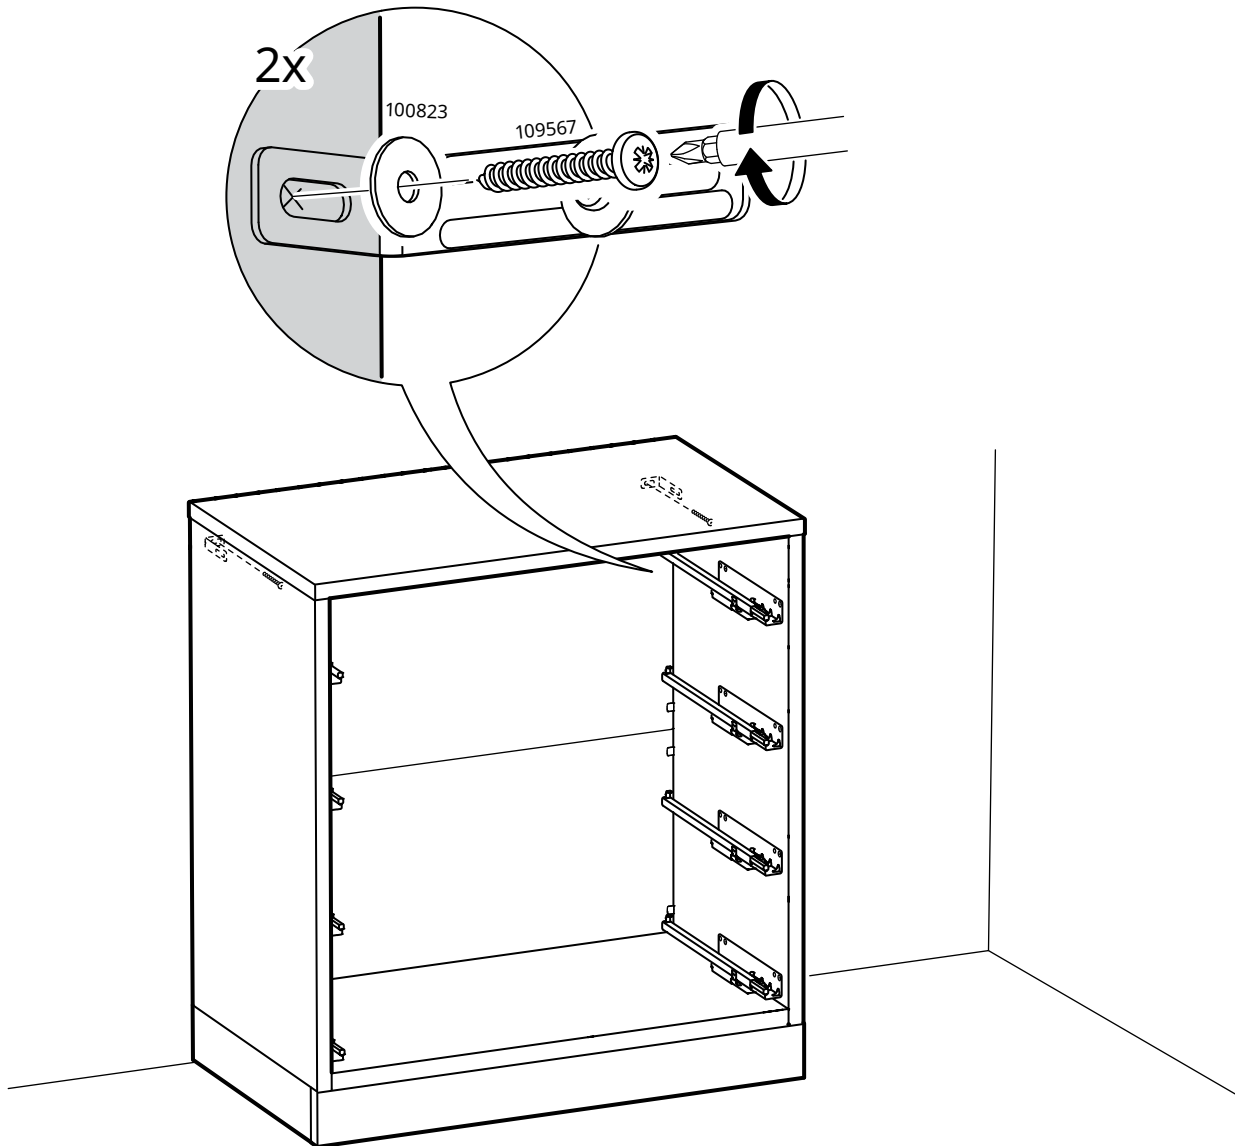


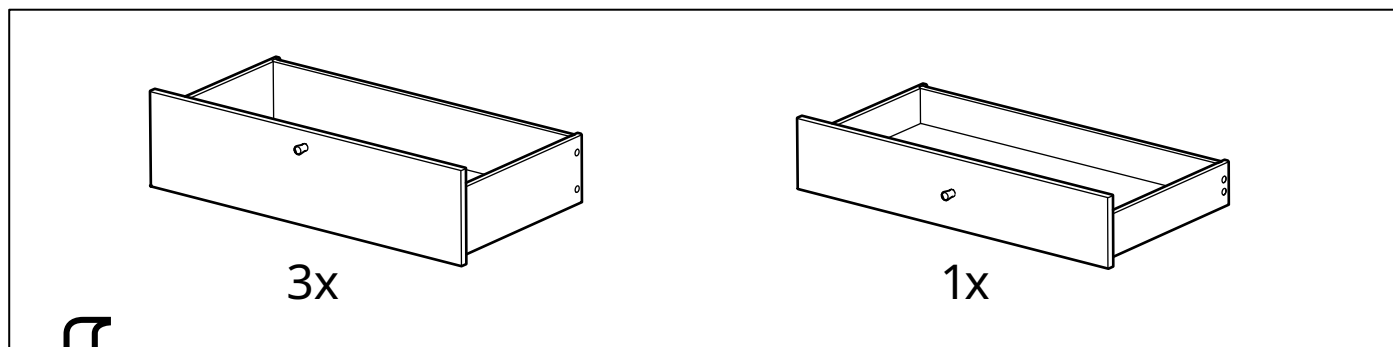


25

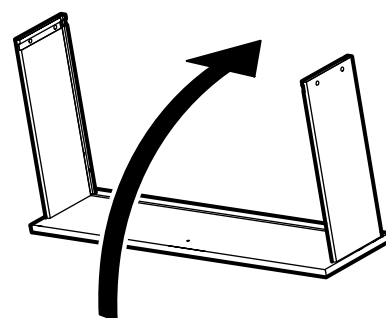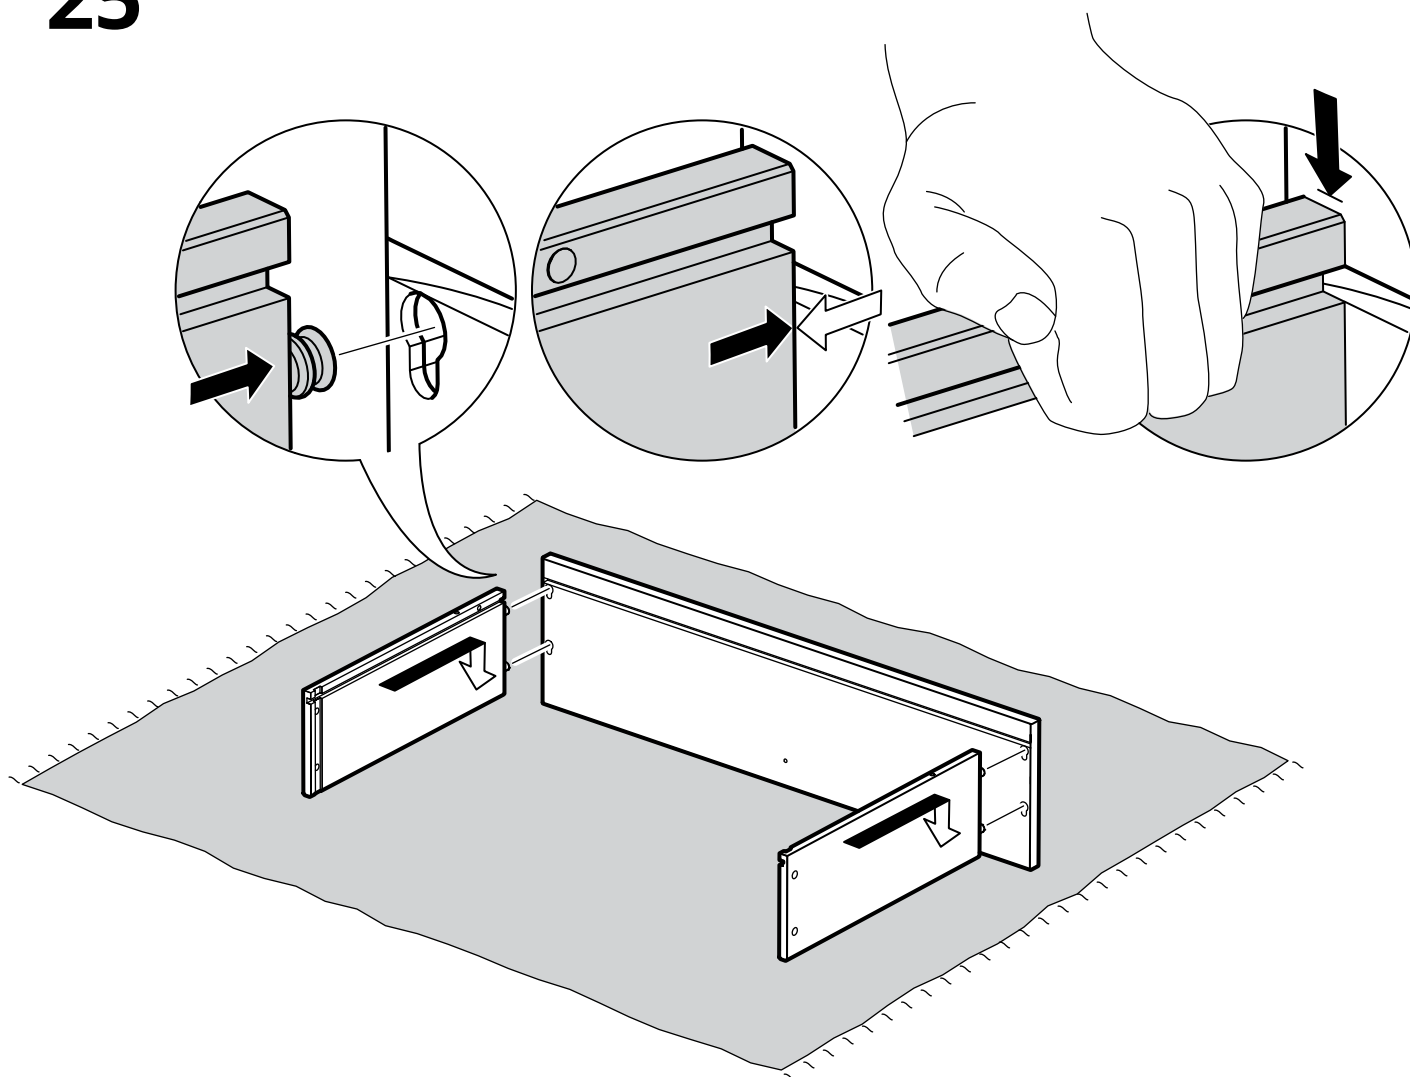  


26

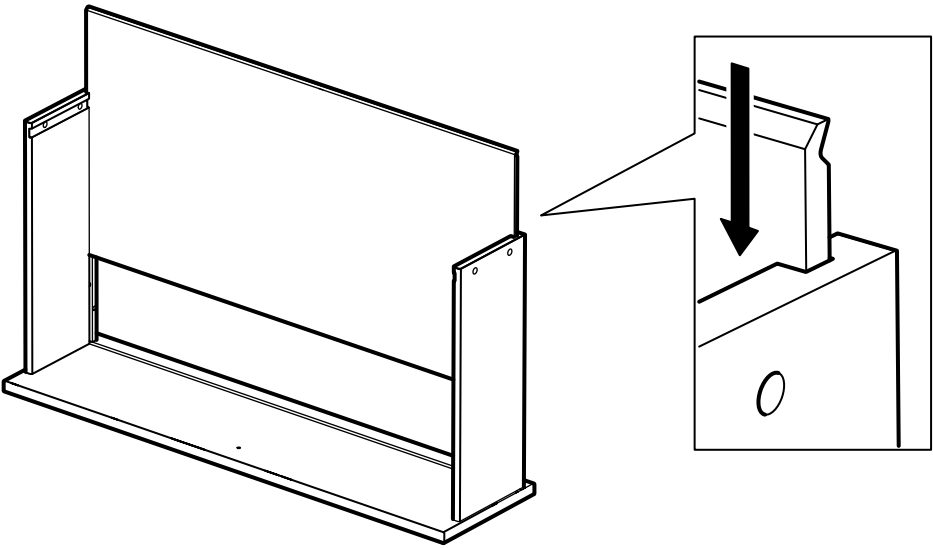 


27

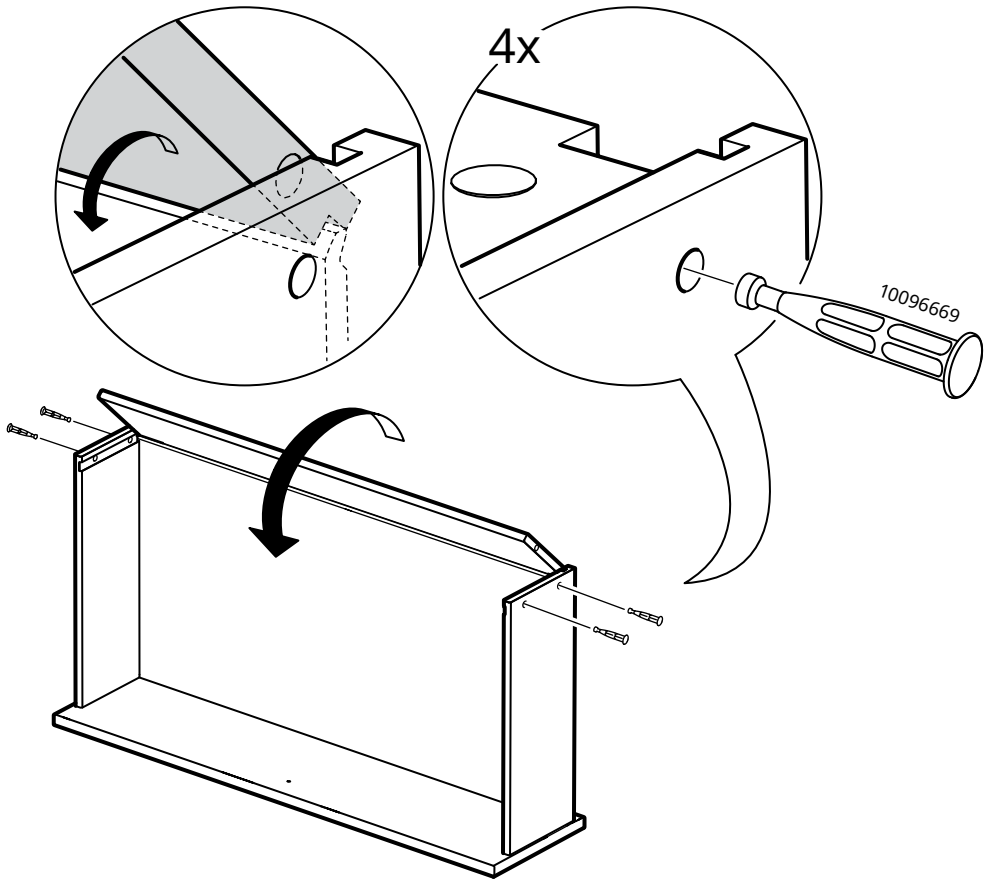 


28

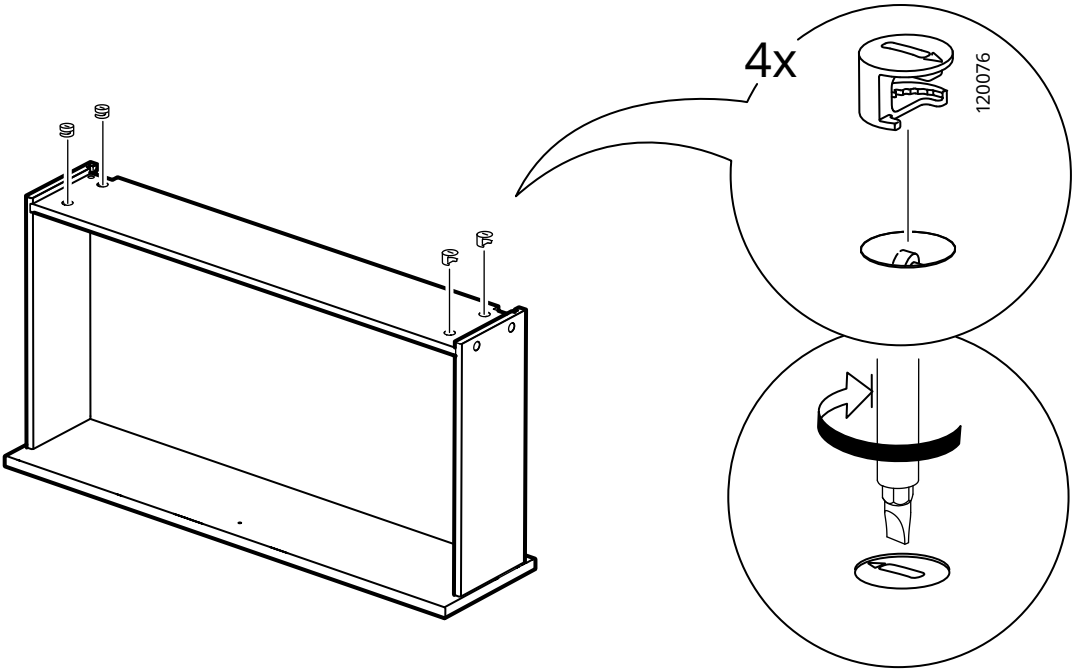 


29

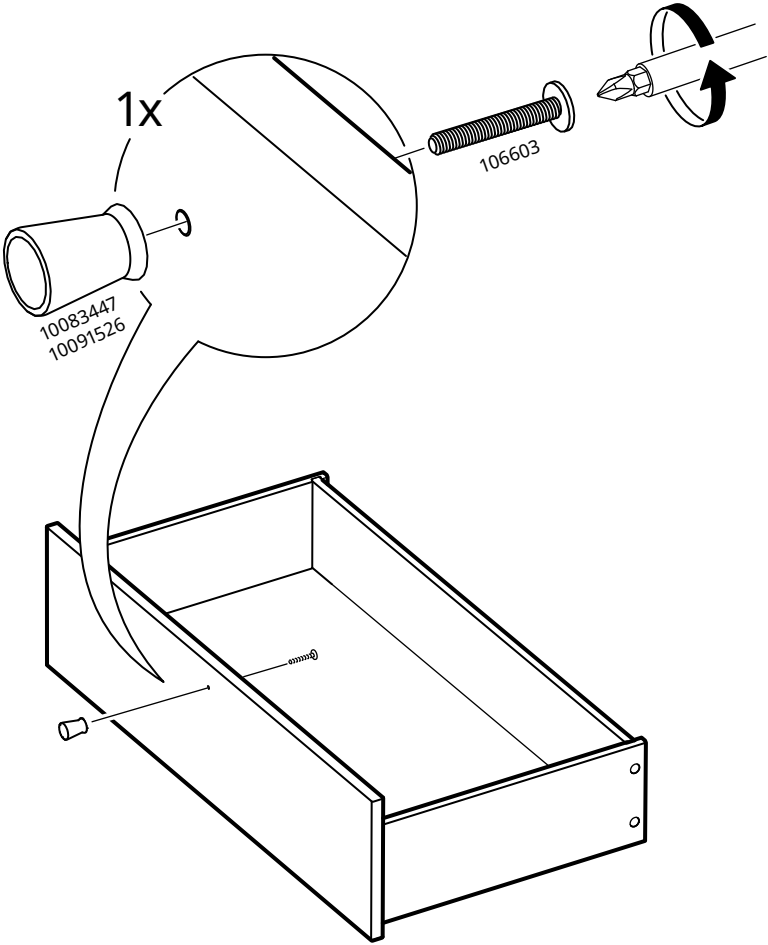 


30

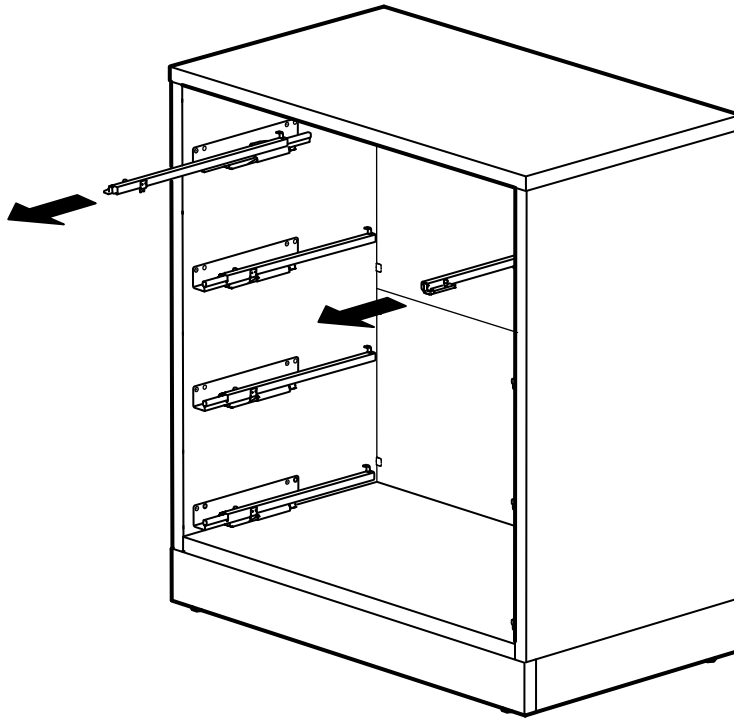 


31

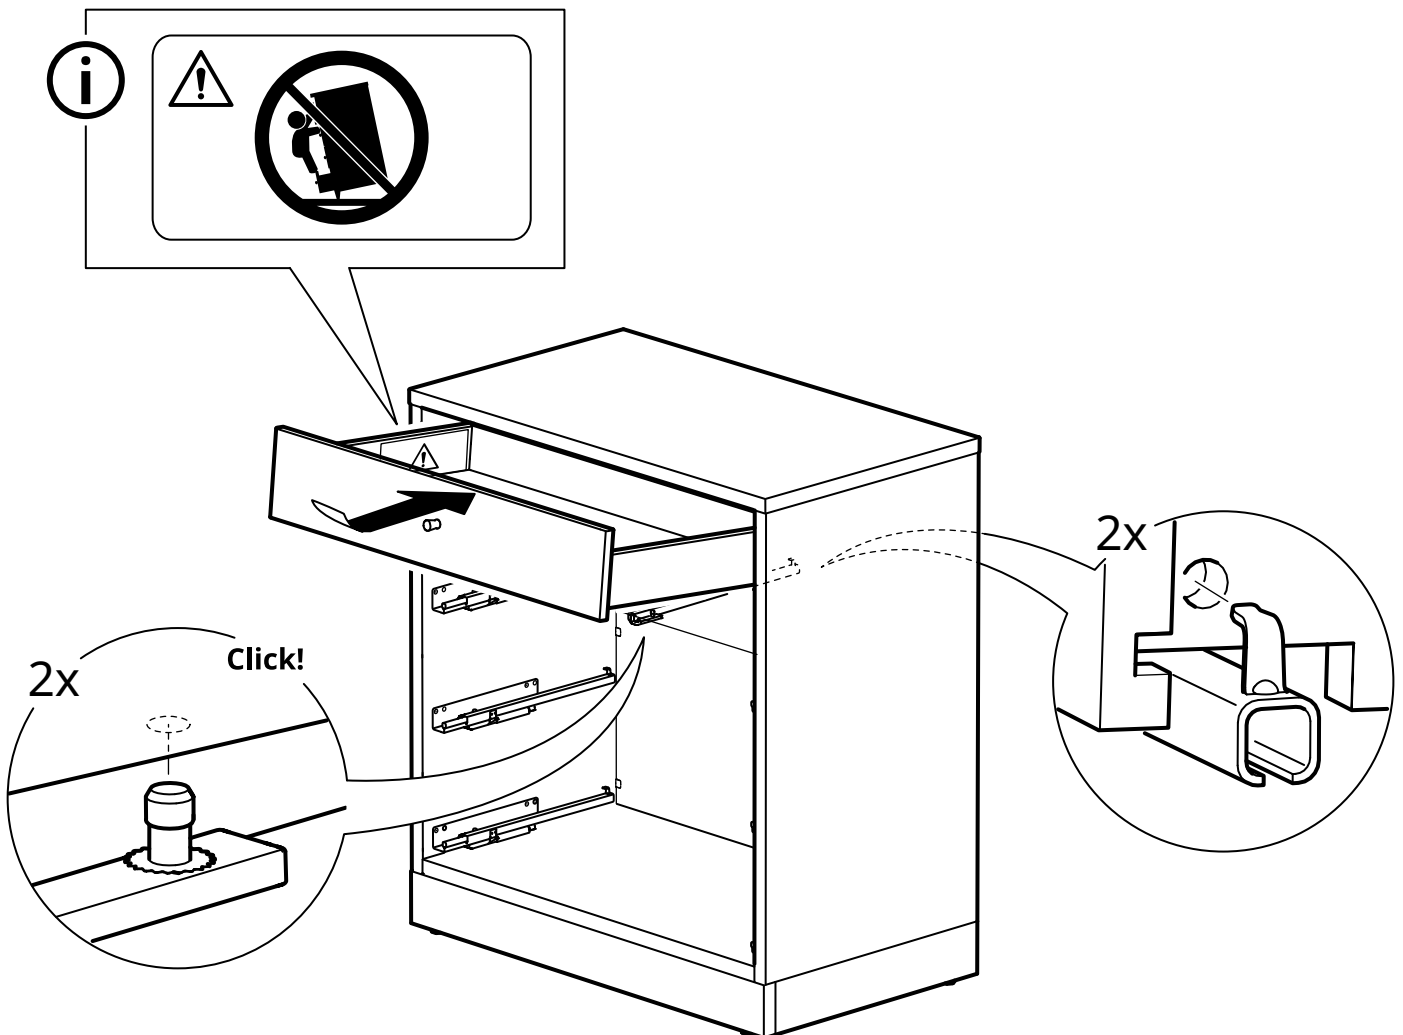 


32

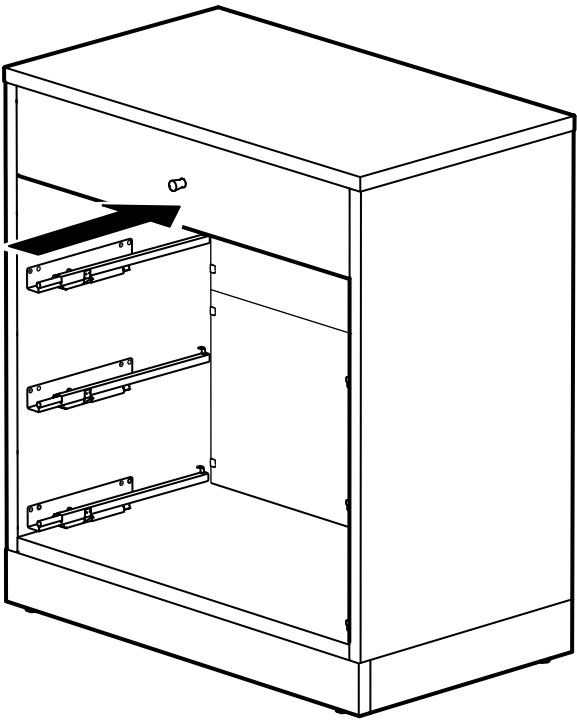 

33

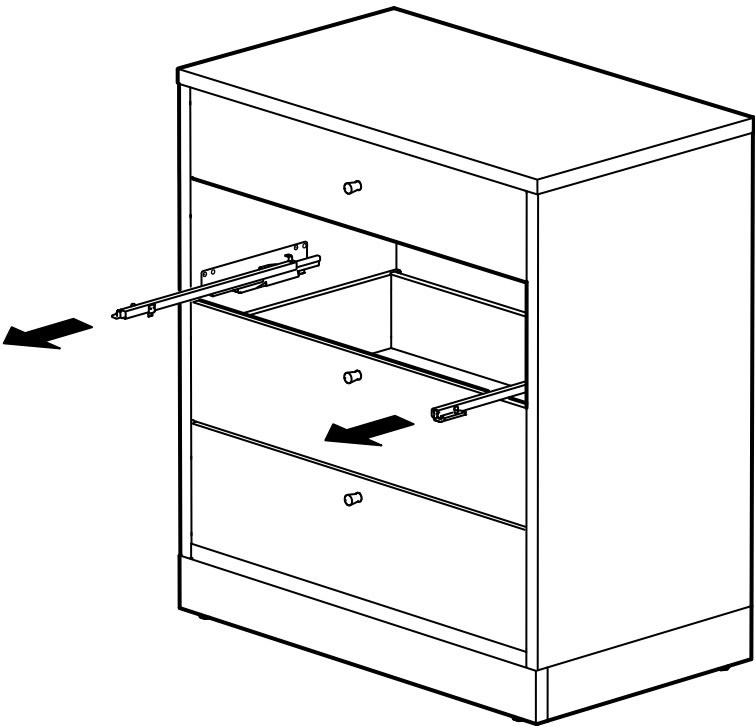 

34

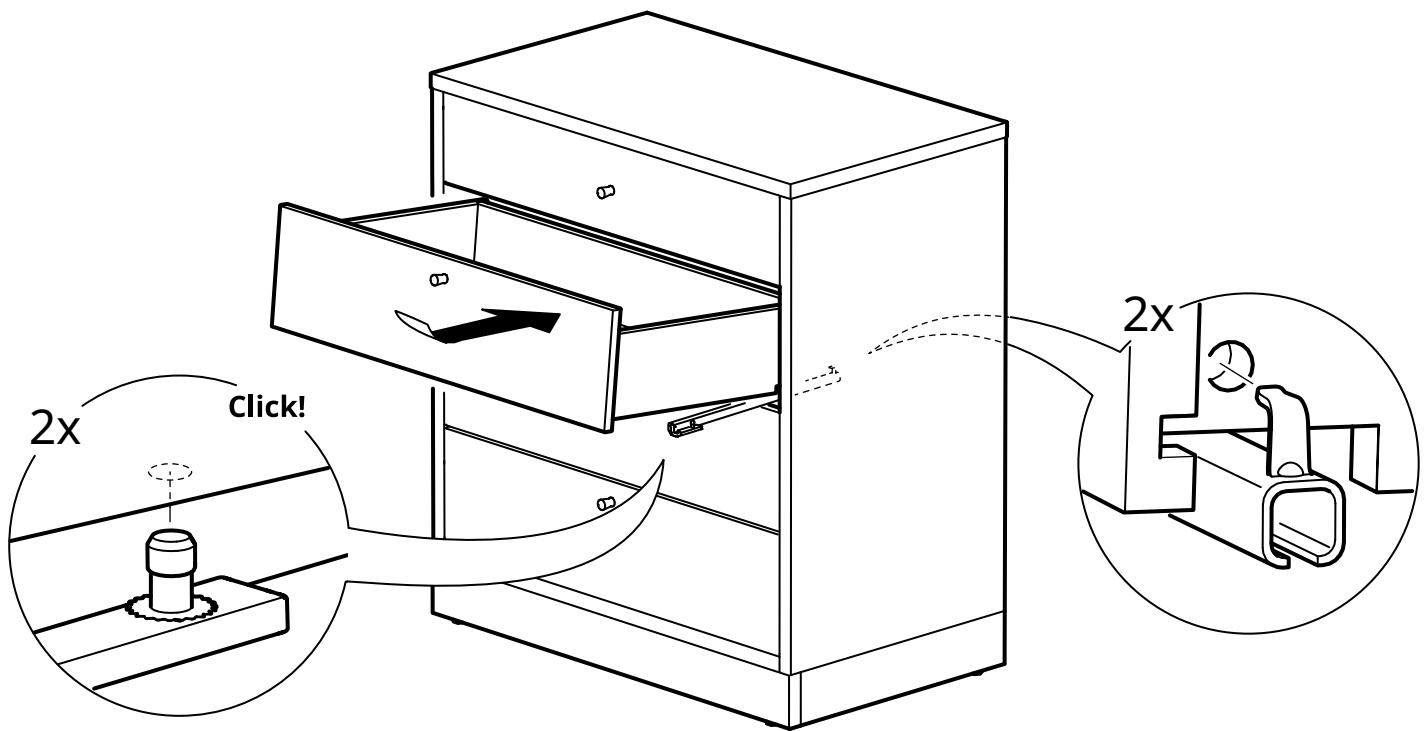 

35

