LAGAN











Please refer to the last page of this manual for the full list of IKEA appointed After Sales Service Provider and relative national phone numbers.

AE BH EG JO KW OM ENGLISH 4

QA

LANGUAGE

COUNTRY

| Contents | | | |
|---------------------|----|------------------------|----|
| Safety information | 4 | Troubleshooting | 13 |
| Safety instructions | 6 | Technical data | 14 |
| Installation | 9 | Electrical connection | 16 |
| Product description | 10 | Gas connection | 17 |
| Daily use | 11 | Environmental concerns | 20 |
| Hints and tips | 12 | IKEA guarantee | 20 |
| Care and cleaning | 13 | | |

Subject to change without notice.

A Safety information

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.

Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children between 3 and 8 years of age and persons with very extensive and complex disabilities shall be kept away unless continuously supervised.
- Children of less than 3 years of age should be kept away unless continuously supervised.
- Do not let children play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- Keep children and pets away from the appliance when it operates or when it cools down. Accessible parts are hot.

 If the appliance has a child safety device, it should be activated.

 Children shall not carry out cleaning and user maintenance of the appliance without supervision.

General Safety

- WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.
- Do not operate the appliance by means of an external timer or separate remote-control system.
- WARNING: Unattended cooking on a hob with fat or oil can be dangerous and may result in fire.
- NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
- CAUTION: The cooking process has to be supervised. A short term cooking process has to be supervised continuously.
- WARNING: Danger of fire: Do not store items on the cooking surfaces.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.
- Do not use a steam cleaner to clean the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, the Authorised Service Centre or similarly qualified persons in order to avoid a hazard.
- Where the appliance is directly connected to the power supply, an all-pole isolating switch with a contact gap is required. Complete disconnection in compliance with the conditions specified in overvoltage category III must be guaranteed. The earth cable is excluded from this.
- When you route the mains cable, make sure that the cable doesn't come into direct contact (for example using insulating

sleeving) with parts that can reach temperatures of more than 50°C above room temperature.

 WARNING: Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.

Safety instructions

Installation



Warning! The appliance must be installed by the authorised installer.

- · Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions supplied with the appliance.
- Keep the minimum distance from other appliances and units.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Seal the cut surfaces with a sealant to prevent moisture to cause swelling.
- Protect the bottom of the appliance from steam and moisture.
- Do not install the appliance adjacent to a door or under a window. This prevents hot cookware falling from the appliance when the door or the window is opened.
- If the appliance is installed above drawers make sure that the space, between the bottom of the appliance and the upper drawer, is sufficient for air circulation.
- The bottom of the appliance can get hot. Make sure to install a non-combustible separation panel under the appliance to prevent access to the bottom. Refer to the Assembly Instructions.

Electrical Connection



Warning! Risk of fire and electric shock.

- All electrical connections should be made by the authorised installer.
- The appliance must be earthed.
- Before carrying out any operation make sure that the appliance is disconnected from the power supply.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Make sure the appliance is installed correctly. Loose and incorrect electricity mains cable or plug (if applicable) can make the terminal become too hot.
- Use the correct electricity mains cable.
- Do not let the electricity mains cable tanale.
- Make sure that a shock protection is installed.
- Use the strain relief clamp on the cable.
- Make sure the mains cable or plug (if applicable) does not touch the hot appliance or hot cookware, when you connect the appliance to the near sockets.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug (if applicable) or to the mains cable. Contact our Authorised Service

- Centre or an electrician to change a damaged mains cable.
- · The shock protection of live and insulated parts must be fastened in such a way that it cannot be removed without tools.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- · If the mains socket is loose, do not connect the mains plug.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains pluq.
- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.
- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.

Gas connection



Warning! Risk of fire and explosion

- All gas connections should be made by the authorised installer.
- · Before installation, make sure that the local distribution conditions (nature of the gas and gas pressure) and the adjustment of the appliance are compatible.
- · Make sure that there is air circulation around the appliance.
- The information about the gas supply is on the rating plate.
- This appliance is not connected to a device, which evacuates the products of combustion. Make sure to connect the appliance according to current installation regulations. Pay attention to requirements regarding adequate ventilation.

Use



Warning! Risk of injury, burns and electric shock.

- Remove all the packaging, labelling and protective film (if applicable) before first use.
- This appliance is for household use only.
- Do not change the specification of this appliance.
- Make sure that the ventilation openings are not blocked.
- · Do not let the appliance stay unattended during operation.
- Set the cooking zone to "off" after each
- Do not put cutlery or saucepan lids on the cooking zones. They can become hot.
- Do not operate the appliance with wet hands or when it has contact with water.
- Do not use the appliance as a work surface or as a storage surface.
- When you place food into hot oil, it may splash.



Warning! Risk of fire and explosion

- Fats and oil when heated can release flammable vapours. Keep flames or heated objects away from fats and oils when you cook with them.
- The vapours that very hot oil releases can cause spontaneous combustion.
- Used oil, that can contain food remnants, can cause fire at a lower temperature than oil used for the first time.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.



Warning! Risk of damage to the appliance.

- Do not keep hot cookware on the control panel.
- Do not let cookware to boil dry.
- Be careful not to let objects or cookware fall on the appliance. The surface can be damaged.

- Do not activate the cooking zones with empty cookware or without cookware.
- Do not put aluminium foil on the appliance.
- Use only stable cookware with the correct shape and diameter larger than the dimensions of the burners.
- Make sure cookware is centrally positioned on the burners.
- Do not use large cookware that overlap the edges of the appliance. This can cause damage to the worktop surface.
- Make sure the flame does not go out when you quickly turn the knob from the maximum to the minimum position.
- Use only the accessories supplied with the appliance.
- Do not install a flame diffuser on the burner.
- The use of a gas cooking appliance results in the production of heat and moisture. Provide good ventilation in the room where the appliance is installed.
- Prolonged intensive use of the appliance may call for additional ventilation, for example opening of a window, or more effective ventilation, for example increasing the level of mechanical ventilation where present.
- This appliance is for cooking purposes only. It must not be used for other purposes, for example room heating.
- Do not let acid liquids, for example vinegar, lemon juice or limescale remover, touch the hob. This can cause matt patches.
- Discoloration of the enamel or stainless steel has no effect on the performance of the appliance.

Care and cleaning



Warning! Do not remove the buttons, knobs or gaskets from the control panel. Water may get inside the appliance and cause damage.

- Clean the appliance regularly to prevent the deterioration of the surface material.
- Deactivate the appliance and let it cool down before you clean it.
- Disconnect the appliance from the electrical supply before maintenance.
- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use any abrasive products, abrasive cleaning pads, solvents or metal objects.
- Do not clean the burners in the dishwasher.

Service

- To repair the appliance contact an Authorised Service Centre.
- Use original spare parts only.

Disposal



Warning! Risk of injury or suffocation.

- Contact your municipal authority for information on how to discard the appliance correctly.
- Disconnect the appliance from the mains supply.
- Cut off the mains electrical cable close to the appliance and dispose of it.
- Flat the external gas pipes.

Installation



Warning! Refer to Safety chapters.

General information



Warning! This appliance must be installed, connected or repaired only by a registered competent person to the relevant gas standard. Use only parts provided with the product. Use only original spare parts.

The manufacturer is not responsible for any injury to persons and pets or damage to property caused by a failure to comply the following requirements.



Caution! During the installation, you must refer to the Assembly Instructions.



Warning! Installation process must follow the laws, ordinances, directives, and standards, electrical safety rules, and regulations, proper recycling in accordance with the regulations, in force in the country of use.

- i Ensure that the local distribution conditions (nature of the gas and gas pressure) and the adjustment of the appliance are compatible before proceeding with the installation.
- The parameters of adjustment setting for this appliance are stated on the rating plate (refer to the Technical data chapter).



Warning! The appliance must be earthed.



Warning! Risk of injury from electrical current.

- The electrical mains terminal is under voltage.
- Make sure that the electrical mains terminal is free of voltage.
- Loose and inappropriate plug and socket connections. May overheat the terminal.
- Make sure that the clamping connections are correctly installed.
- Secure the cable with the strain relief clamp.





You must observe the minimum distances to other appliances and furniture cabinets or other units according to Assembly Instruction.

The minimum distance to be maintained from cut out edge to lateral wall must be 100 mm.

If there is no oven beneath the hob insert a dividing panel at a minimum distance of 5 mm from the bottom of the hob.

Protect the cut surfaces of the worktop against moisture using a suitable sealant included in the product in additional bag. Seal the appliance to the worktop with no gap. Do not use silicon sealant between the appliance and the worktop. Do not install the appliance next to the doors and under windows. Otherwise, the hot cookware may fall off the pan supports.

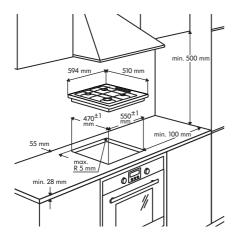


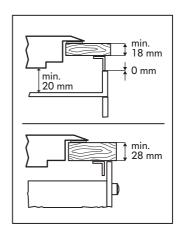

For further information on the installation refer to the Assembly Instruction.

Product description

Cooking surface layout

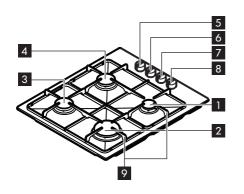

- 1 Auxiliary burner
- 2 Rapid burner
- 3 Semi Rapid burner
- 4 Semi Rapid burner
- 5 Semi Rapid burner control knob
- 6 Semi Rapid burner control knob
- 7 Rapid burner control knob
- 8 Auxiliary burner control knob
- 9 Removable pan supports

Burner control knob

The hob burner control knobs are on the right side of the hob.



| Symbol | Description | |
|--------|---------------------------------------|--|
| | there is no gas supply / off position | |

| Symbol | Description |
|--------|---|
| ۵ | there is maximum gas supply / ignition setting |
| ۵ | there is minimum gas sup- ply |
| 00 | to show the position of the burner |

Daily use

⚠


Warning! Refer to Safety chapters.

Ignition of the burner

Always ignite the burner before you place the pots or pans.


To ignite the burner:

- Push the control knob and turn it anticlockwise to the maximum position marked with ∅.
- 2. Keep the control knob pushed for about 5 sec. As a result thermocouple heats up, and the safety device switches off. If you do not push the knob, the gas supply is interrupted.
- **3.** When you light the flame, you can adjust it.
- if the burner does not ignite, after a few attempts, check if the crown and its cap are in correct positions.

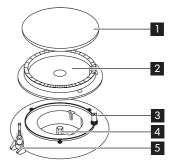

- Burner cap
- 2 Burner crown
- 3 Ignition candle
- 4 Injector
- 5 Thermocouple

burner again.

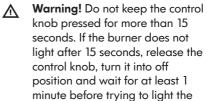

- if there is no electricity, you can ignite the burner without an electrical device. In this case, approach the burner with flame, push the relevant knob and turn it anticlockwise to the maximum gas release position.
- Warning! Be careful when you use open fire in the kitchen environment. The manufacturer declines any responsibility in case of misusing the flame.
- if the burner accidentally goes out, turn the control knob to the off position and wait for at least 1 minute before trying to light it again.

- When you switch on the mains after installation or a power cut, the spark generator activates automatically.
- The hob is supplied with the progressive valves. They make the flame regulation more precise.

Turning the burner off

To put the flame out, turn the relevant control knob to the symbol lacktriangle.



Warning! Always turn the flame down or switch it off before you remove the pans from the burner.

Hints and tips



Warning! Refer to Safety chapters.

Energy saving

- If it is possible, always put the lids on the cookware.
- When the liquid starts to boil, turn down the flame to barely simmer the liquid.

Diameters of cookware

Use pots and pans with bottom fitting the size of burner used.

| Burner | Minimum di- ameter of pots and pans | ameter of pots | |
|-----------------------|---|----------------|--|
| Front left (Rapid) | 180 | 260 | |

| Burner | | Maximum di- ameter of pots and pans |
|---------------------------------|-----|---|
| Front right (Auxiliary) | 80 | 180 |
| Back left (Semi-rap- id) | 120 | 220 |
| Back right (Semi-rap- id) | 120 | 220 |

The bottom of the cookware should be as thick and flat as possible.

Care and cleaning

Warning! Refer to Safety chapters.

General information



Warning! Switch the appliance off and let it cool down before vou clean it.



Warning! Do not clean the appliance with steam blasters or high-pressure cleaners.



★ Warning! Do not use abrasive cleaners, steel wool pads or acids. They damage the appliance.

To remove any food remains, wash the enamelled elements, caps and crowns, with warm soapy water.

Wash stainless steel elements with water. and dry with a soft cloth.

This model is equipped with an electrical ignition. To avoid problems with lightning, keep the ceramic "candle" with electrode clean.

- Do not put the pan supports in a \bigcirc dishwasher. Wash them manually and dry with a soft cloth. After cleaning, make sure that the pan
- To check the conditions of the gas \bigcirc supply pipe and the pressure adjuster, contact the After Sales Service Provider. The service is not free of charae.

supports are in correct position.

After cleaning, be sure to wipe dry with a soft cloth.

Troubleshooting



Warning! Refer to Safety chapters.

What to do if...

| Problem | Possible cause | Remedy |
|--|--|---|
| There is no spark when light- ning the gas. | There is no electrical supply. | Check if the unit is plugged in and the electrical supply is switched on. |
| | There is no electrical supply. | Check the house electric installation fuse. |
| | Burner cap and crown are placed incorrectly. | Check if the burner cap and crown are placed correctly. |

| Problem | Possible cause | Remedy | |
|--|---|--|--|
| The flame is extinguishes immediately after lightning. | Thermocouple is not heated enough. | After lightning the flame, keep the knob pushed for about 5 seconds. | |
| The gas ring burns unevenly. | Burner crown is blocked with food residues. | Check if the main injector and the burner crown are not blocked with food remains. | |

If there is an error, first try to find a solution to the problem yourself. If you cannot find a solution to the problem yourself, contact your IKEA store call centre. You can find a full list of IKEA appointed contacts at the end of this manual.



If the appliance is misused wrongly or installed not by authorised technician, the service is not free of charge, even during the warranty period.

Technical data

Hob dimensions

| Width | 594 mm |
|-----------------|--------|
| Depth | 510 mm |
| Built in height | 44 mm |

Other technical data

①

Class Appliance: 3
Appliance Category: II2H3+;
II2H3B/P
Appliance gas supply: Liquid gas
G30/G31 (3+) 28-30/37 mbar;
G30/31 (3B/P) 30/30 mbar
This appliance is designed for
use with liquid gas but can be
converted for use with other gas
type according to table below.

| TOTAL POWER | | | |
|------------------------|--|--|--|
| Gas original: | G30/G31 (3B/P) 30/30 mbar (AE KW QA JO OM) = 567g/h G30 (3+) 28-30 mbar (EG) = 567g/h G31 (3+) 37 mbar (EG) = 557g/h | | |
| Gas replacement: | G20 (2H) 20 mbar = 8.0 kW | | |
| Gas connection: R 1/2" | | | |

| | | | Nominal Flow g/h | | | |
|------------------------------|----------------------------|----------------------|------------------|---------------------|---------|----|
| Burner Injector type mark | Nominal Power kW | G30 28/30 mbar | G31 37 mbar | Reduced Power kW | by-pass | |
| | G30/G31 28-30/37 mbar (EG) | | | | | |
| Rapid (large) | 86 | 2.8 | 204 | 200 | 0.75 | 45 |
| Semi-rapid (medium) | 71 | 2.0 | 145 | 143 | 0.45 | 35 |
| Auxiliary (small) | 50 | 1.0 | 73 | 71 | 0.33 | 28 |

| Burner type | Injector mark | Nominal Pow- er kW | Nominal Flow g/h | Reduced Pow- er kW | by-pass | |
|------------------------|-------------------------------------|-----------------------|---------------------|-----------------------|---------|--|
| | G30/G31 30/30 mbar (AE KW QA JO OM) | | | | | |
| Rapid (large) | 86 | 2.8 | 204 | 0.75 | 45 | |
| Semi-rapid (medium) | 71 | 2.0 | 145 | 0.45 | 35 | |
| Auxiliary (small) | 50 | 1.0 | 73 | 0.33 | 28 | |
| | G20 20 mbar | | | | | |
| Rapid (large) | 119 | 3.0 | - | 0.75 | 45 | |
| Semi-rapid (medium) | 96 | 2.0 | - | 0.45 | 35 | |
| Auxiliary (small) | 70 | 1.0 | - | 0.33 | 28 | |

Rating Plate



The graphic above represents the rating plate of the appliance (without serial number which is generated dynamically during the production process), which is located at its underneath surface of the casing.

Dear Customer, please apply here aside the sticker you can find in the dedicate plastic

bag inserted inside the hob packaging. This will allow us to assist you better, by identifying precisely your hob, in case you will need in future our assistance. Thank you for your help!



Electrical connection



Warning! Refer to Safety chapters.

Connection cable



Caution! Information for authorised installer only.



Warning!

The appliance must be earthed.



Warning!

Risk of injury from electrical

 The electrical mains terminal is under voltage.

- Make sure that the electrical mains terminal is free of voltage.
- Loose and inappropriate plug and socket connections. May overheat the terminal.
- Make sure that the clamping connections are installed correctly.
- Secure the cable with the strain relief clamp.

Before connecting, check that the nominal voltage of the appliance stated on the rating plate, corresponds to the available supply voltage. Also, check the power rating of the appliance and make sure that the wire is suitably sized to suit the appliance

power rating. Refer to the Technical data chapter.

The rating plate is located below the surface of the casing.

The appliance is supplied with a connection cable. The cable must be provided with a proper plug, which supports the load marked on the identification plate. Refer to the Technical data chapter.

The plug has to be fitted in a proper socket. If connecting the appliance directly to the electric system, it is necessary that you install a double pole switch between the appliance and the electricity supply, with a minimum gap of 3 mm between the switch contacts. The double pole has to be of a type suitable for the required load in compliance with the current rules.

The connection cable has to be placed in order that, in each part, it cannot reach a 90 °C temperature. The blue neutral cable must be connected to the terminal block marked with "N". The brown or black phase cable, fitted in the terminal block contact marked with "L", must always be connected to the live phase.

Electrical Requirements

You can check the parameters of (i)adjustment setting for this appliance on the rating plate. Refer to the Technical data chapter.

The manufacturer declines any liability if these safety measures are not observed.

This hob is designed to be connected to a 220-240 V 50-60 Hz AC electrical supply.

Before switching on, make sure the electricity supply voltage is the same as that indicated on the hob rating plate. The rating plate is located below the surface of the casina.


The hob is supplied with a 3 core flexible supply cord.

Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

Replacement of the connection cable

Warning! To replace the connection cable, the technician must have a specific equipment.

In this case, only cable type H03V2V2-F T90 must be used. The cable section must be suitable to the voltage and the working temperature. The yellow and green earth wire 2 must be approximately 2 cm longer than the brown or black phase wire 1.

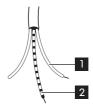

Gas connection



★ Warning! Refer to Safety chapters.



Caution! Information for authorised installer only.

Connection to main pipe



Warning! This appliance is not connected to a combustion products evacuation device.

The installation must be compatible with the current local regulations. Complying with the local regulations, the connection of the cooktop to the gas pipe network or gas cylinder must be made by means of a rigid copper or steel pipe with fittings, or by means of a continuous surface stainless steel hose.

if there is a problem with the pipe, do not repair it yourself.
Contact the local After Sales
Service Provider. Refer to the Service chapter.

The connection must be installed correctly and fixed into the hob connection pipe. Otherwise, gas may leak from the connection pipe.



Warning! When you finish the installation, check the sealing and pipe fixing. To check the installation, use soapy water. Do not use the flame.

Gas setting conversion

You can use this model with natural gas. However, you can convert it for use with other gases, providing the correct injectors.

For more information on injector replacement, refer to the Technical data chapter.



Warning! Conversion or replacement can only be performed by a authorised technician.

To replace injectors:


- 1. Remove pan support.
- 2. Remove burner cap and crown.
- Using a socket spanner 7, unscrew and remove the injectors, and replace them with the ones required for the type of gas in use.
- **4.** Reassemble the parts, following the same procedure backwards.
- Place the label with relevant information for new type of gas close to the supply pipe before sealing the appliance. If the appliance is already sealed please stick it directly on the user manual booklet, after Technical data chapter, and close to the rating plate drawing.
- You can find this label in package supplied with appliance.
- if the feeding gas pressure is different or variable from the required one, you must install an appropriate pressure adjuster, which is not supplied with the product. If needed, it must be ordered separately from the local After Sales Service Provider, refer to the Service chapter. The pressure adjuster must be fitted on gas supply pipe, in compliance with the rules of the force.

The rating plate is located below the surface of the casing.


Adjusting flame level

When you install the hob, it is necessary to check the minimum flame setting:


- 1. Turn the gas tap to the maximum position and ignite.
- Set the gas tap to the minimum flame position and turn the control knob from minimum to maximum several times. If the flame is unstable or extinguished, follow the procedure further.
- Re-ignite the burner and set to minimum.
- **4.** Remove the control knob and the gasket.

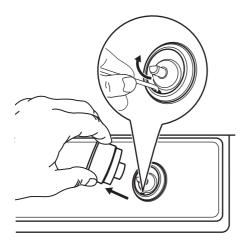

Warning! Pay attention not to damage the gasket. Do not use sharp tool to remove it. 5. To adjust, use a thin bladed screwdriver and turn the adjustment screw until the flame is steady and does not extinguish when the knob is turned from minimum to maximum, and vice versa (see following picture).

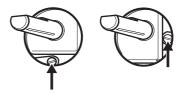

- 6. Repeat this procedure for all burners.
- 7. Reassemble the gasket and the knobs.

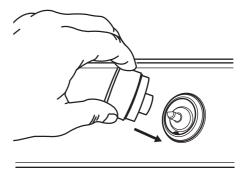

⚠

Warning! Make sure to place the gasket exactly in the original position.

 \triangle

Warning! If the appliance is connected to liquid gas (G31 propane or G30 butane), the regulation screw must be fastened as tightly as possible.

i If the gasket is damaged, it must be ordered from the After Sales Service Provider.

Environmental concerns

Recycle materials with the symbol 🖒. Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of appliances marked with the symbol Ξ with the household waste. Return the product to your local recycling facility or contact your municipal office.

IKEA guarantee

How long is the IKEA guarantee valid?

This guarantee is valid for five (5) years - two (2) years if the appliance is named LAGAN or TILLREDA - from the original date of purchase of your appliance at IKEA or from the installation date with maximum limit of three months from the purchase date. The original sales receipt, is required as proof of purchase. If service work is carried out under guarantee, this will not extend the guarantee period for the appliance. Once a warranted product has been replaced, the replaced product warranty will be valid for the balance period from date of original purchase invoice.

Who will execute the service?

IKEA service provider will provide the service through its own service operations or authorized service partner network.

What does this quarantee cover?

- The guarantee covers faults of the appliance, which have been caused by faulty construction or material faults from the date of purchase from IKEA or from the installation date with maximum limit of three months from the purchase date.
- This guarantee applies to domestic use only.
- The exceptions are specified under the headline "What is not covered under this

- guarantee?" Within the guarantee period.
- The costs to remedy the fault e.g. repairs, parts, labour and travel will be covered, provided that the appliance is accessible for repair without special expenditure.
 On these conditions the respective local regulations are applicable.
- Replaced parts become the property of IKEA.
- In case of non-repairable product, the retail value of the replacement will not exceed the purchase price that was paid by the customer

What will IKEA do to correct the problem?

 IKEA appointed Service Provider will examine the product and decide, at its sole discretion, if it is covered under this guarantee. If considered covered, IKEA Service Provider or its authorized service partner through its own service operations, will then, at its sole discretion, either repair the defective product or replace it with the same or a comparable product.

What is not covered under this guarantee?

- Normal wear and tear.
- Deliberate or negligent damage, damage caused by failure to observe operating instructions, incorrect installation or by connection to the wrong voltage, damage caused by chemical or electro-chemical reaction, rust, corrosion or water damage including but not limited to damage caused by excessive

lime in the water supply, damage caused by abnormal environmental conditions.

- Consumable parts including batteries and lamps.
- Non-functional and decorative parts which do not affect normal use of the appliance, including any scratches and possible colour differences.
- Accidental damage caused by foreign objects or substances and cleaning or unblocking of filters, drainage systems or soap drawers.
- Damage to the following parts: ceramic glass, accessories, crockery and cutlery baskets, feed and drainage pipes, seals, lamps and lamp covers, screens, knobs, casings and parts of casings. Unless such damages can be proved to have been caused by production faults.
- Cases where no fault could be found during a technician's visit.
- Repairs not carried out by our appointed service providers and/or an authorized service contractual partner or where non-original parts have been used.
- Repairs caused by installation which is faulty or not according to specification.
- The use of the appliance in a nondomestic environment i.e. professional use.
- Damage resulting from power outage, power surges or dips, fluctuating voltage or improper voltage All workout parts are not covered by the guarantee e.g.: filters and cleanliness.
- Transportation damages. If a customer transports the product to his home or another address, IKEA is not liable for any damage that may occur during transport. However, if IKEA delivers the product to the customer's delivery address, then damage to the product that occurs during this delivery will be covered by IKEA.
- Cost for carrying out the initial installation of the IKEA appliance.
 However, if an IKEA service provider or its authorized service partner repairs or

- replaces the appliance under the terms of this guarantee, the service provider or its authorized service partner will reinstall the repaired appliance or install the replacement, if necessary.
- All plumping and electrical installation, are not the responsibility of IKEA, and customer must complete these work before the execution work.

How country law applies

The IKEA guarantee gives you specific legal rights, which covers or exceed local demands. However these conditions do not limit in any way consumer rights described in the local legislation.

Area of validity

This warranty is valid only in the country where the product has been purchased; the services will be provided in the framework of the guarantee conditions.

An obligation to carry out services in the framework of the guarantee exists only if the appliance complies and is installed in accordance with:

- the technical specifications of the country in which the guarantee claim is made;
- the Assembly Instructions and User Manual Safety Information;

The dedicated After Sales Service for IKEA appliances:

Please don't hesitate to contact IKEA appointed After Sales Service Provider to:

- make a service request under this guarantee;
- ask for clarifications on installation of the IKEA appliance in the dedicated IKEA kitchen furniture;
- ask for clarification on functions of IKEA appliances.

To ensure that we provide you with the best assistance, please read carefully the Assembly Instructions and/or the User Manual before contacting us.

How to reach us if you need our service



Please refer to the last page of this manual for the full list of IKEA appointed contacts and relative national phone numbers.

- In order to provide you with a \bigcirc quicker service, we recommend that you use the specific phone numbers listed at the end of this manual. Always refer to the numbers listed in the booklet of the specific appliance you need an assistance for. Before calling us, assure that you have to hand the IKEA article number (8 digit code) and the Serial Number (8 digit code that can be found on the rating plate) for the appliance of which you need our assistance.
- SAVE THE SALES RECEIPT! It is your proof of purchase and required for the guarantee to apply. The sales receipt also reports the IKEA name and article number (8 digit code) for each of the appliances you have purchased.



UNITED ARAB EMIRATES & OMAN

Toll free: 8 004 532

رقم مجانی : Web: www.IKEA.com موقع الإنترنت :

QATAR

رقم مجانی: Toll free: 8 004 532

موقع الإنترنت : Web: www.IKEA.ga

البريد الإلكتروني: e-mail: Ikea gatar@alfuttaim.com

EGYPT

Hotline: 16576 الخط الساخن:

Web: موقع الإنترنت: www.IKEA.eg

البريد الإلكتروني: e-mail: IkeaCairo.customerservice@alfuttaim.com

STATE OF KUWAIT

مركز الاتصال: Contact centre: +965 18 40 40 8

> Web: www.IKEA.com.kw موقع الإنترنت:

> info@IKEA.com.kw البريد الإلكتروني: e-mail:

JORDAN

مركز الاتصال: Contact centre: +962 6 400 1000

> Web: www.IKEA.jo موقع الإنترنت :

KINGDOM OF SAUDI ARABIA

Contact centre: 92000-4532 مركز الاتصال: Our phone lines are

خطوط الهاتف لدينا مفتوحة: open:

السبت - الخميس Saturday - Thursday 09:00 AM - 10:00 PM

Friday 2:00 PM - 10:00 PM يوم الجمعة

BAHRAIN

Contact centre: 80001120 مركز الاتصال:

خطوط الهاتف لدينا مفتوحة Our telephone lines 09:00 AM - 10:00 PM

are open all day طوال اليوم

