


CREATING Safer homes together

We all want our homes to be a safe place. But in our homes, accidents can put children at risk.

Working together, we can help prevent these accidents and make the home a safer place.

- Secure it! Use the tip-over restraint provided with the product and the right hardware for your wall type. Consult the enclosed guide for help with hardware.
- Never put a TV or other heavy objects on top of a chest of drawers or any furniture not intended for use with a TV.
- Place heavy objects in the lowest drawers.
- Never let children climb or hang on drawers, doors or shelves.

For more information or to view a tip-over prevention video, visit www.ikea.com

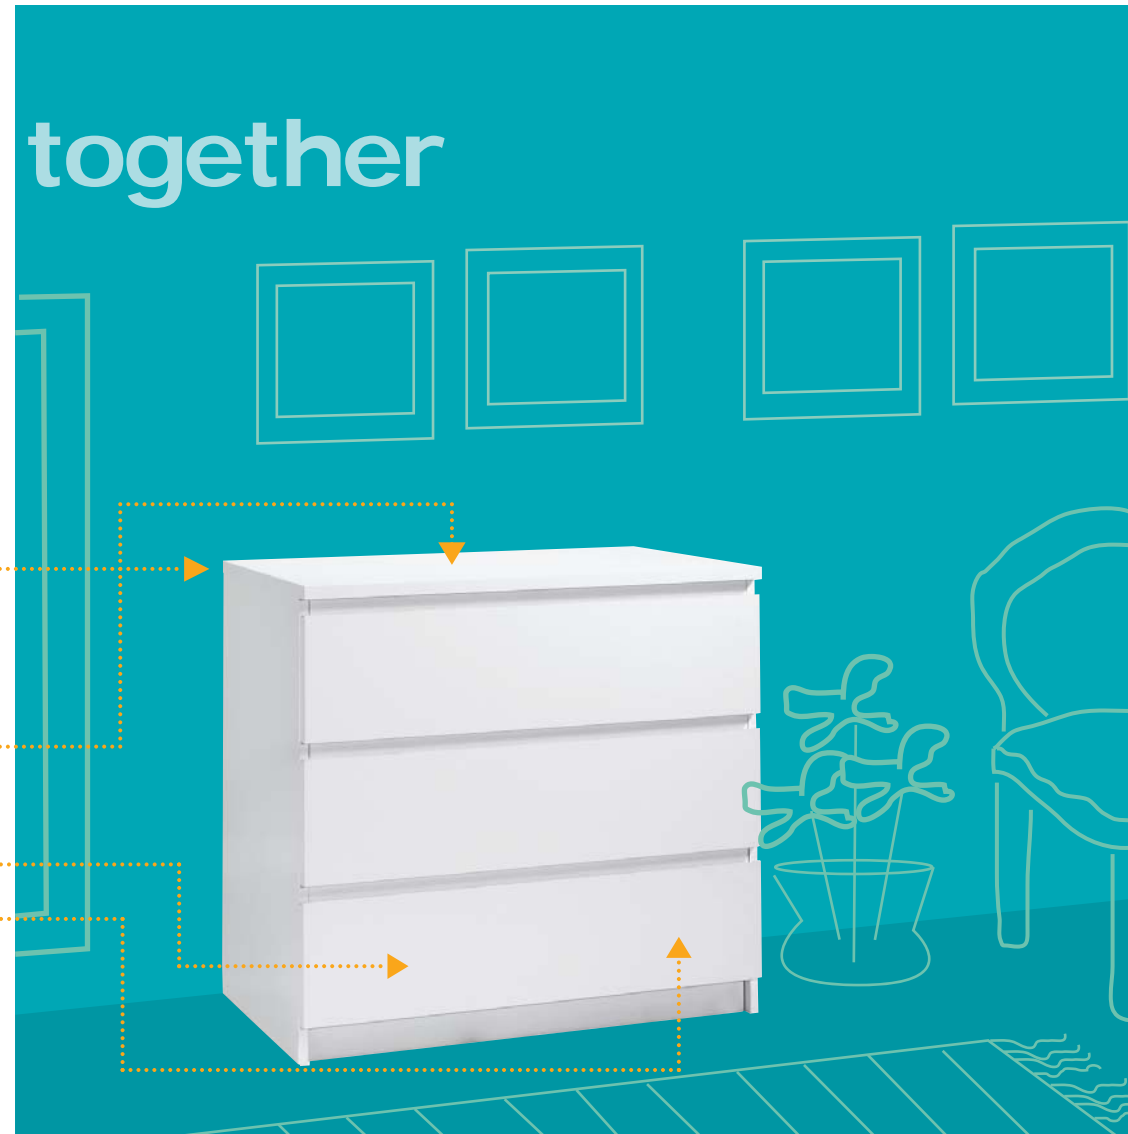

WALL ANCHORING GUIDE

IF YOUR WALL MATERIAL IS NOT LISTED OR IF YOU HAVE QUESTIONS, CONSULT WITH A LOCAL HARDWARE RETAILER.

WALL MATERIAL

Drywall or plaster with available wood stud

ANCHORING DEVICE

Screw inserted directly into stud. For example, a 5 mm wood screw provided with IKEA FIXA plug and screw set (Figure 1)



FIGURE 1

WALL MATERIAL

Drywall without available wood stud

ANCHORING DEVICE

Plug with screw. For example, an 8 mm plug provided with IKEA FIXA plug and screw set (Figure 2)



FIGURE 2

WALL MATERIAL

Masonry

ANCHORING DEVICE

Solid Wall: Plug with screw. For example, an 8 mm plug provided with IKEA FIXA plug and screw set (Figure 3A)



FIGURE 3A

Hollow Wall: Toggle-style (Figure 3B)



FIGURE 3B



it!

PREVENTING
FURNITURE
TIP-OVER
ACCIDENTS

Safer homes together



© Inter IKEA Systems B.V. 2015



Secure