 
 


GREÅKER

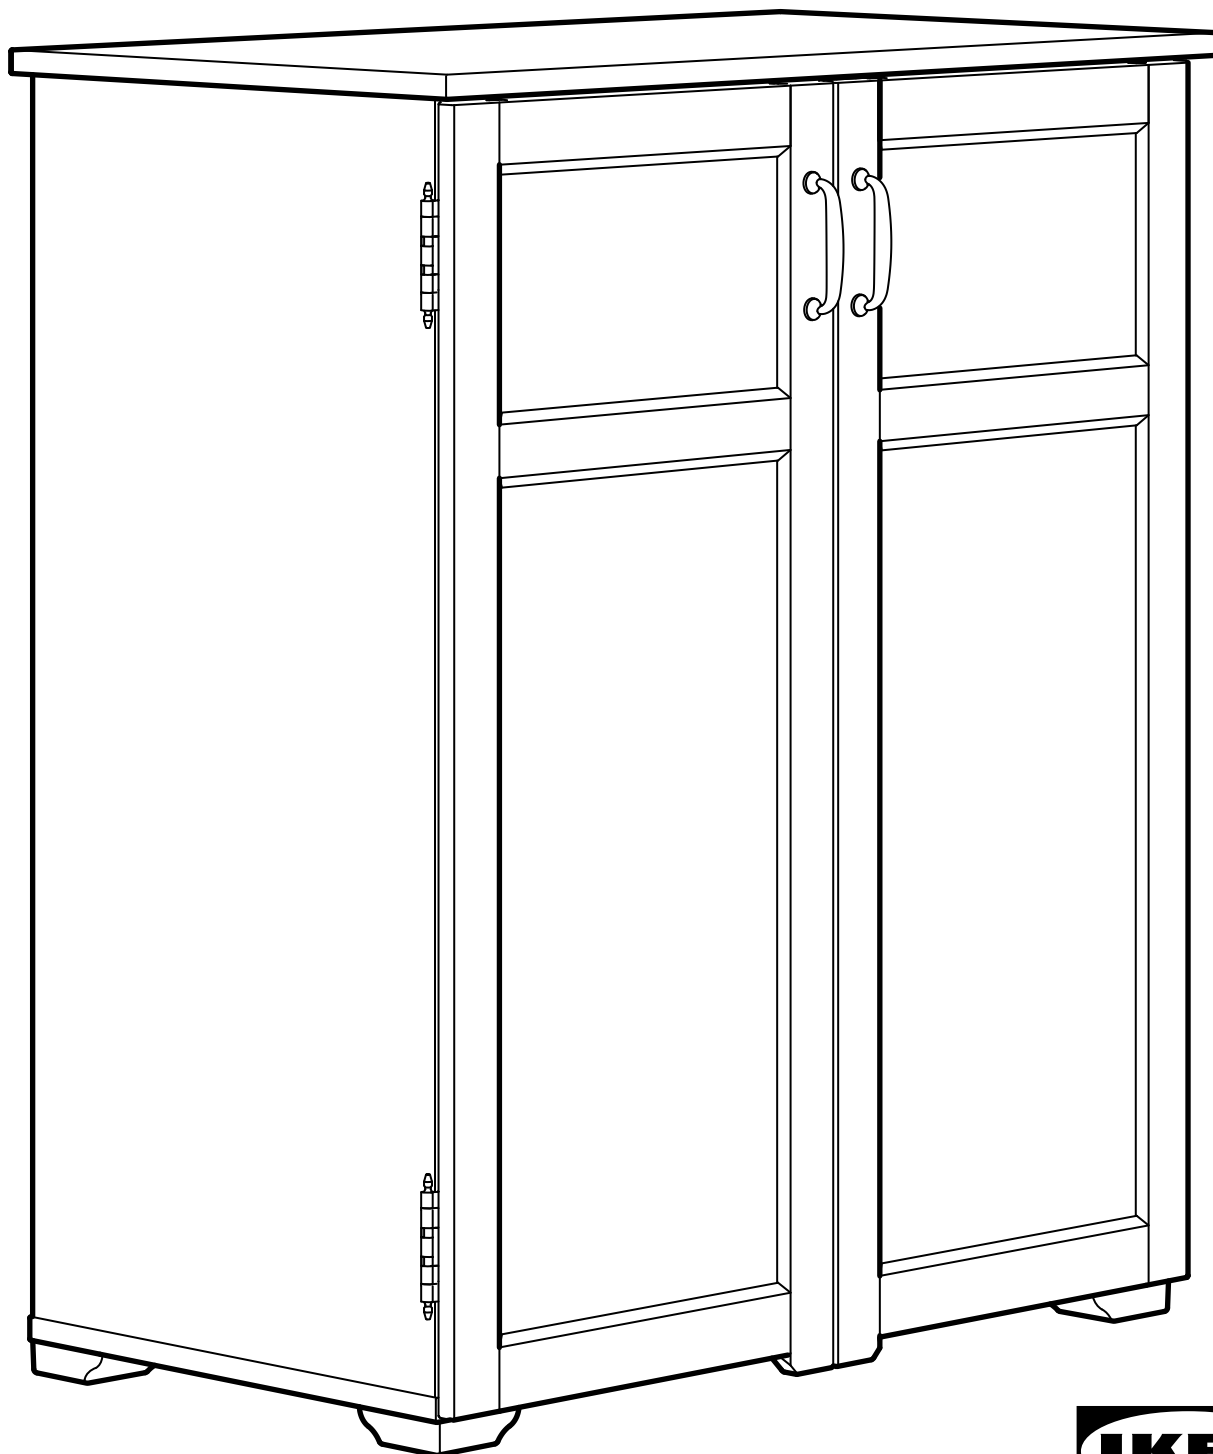

Design and Quality
IKEA of Sweden

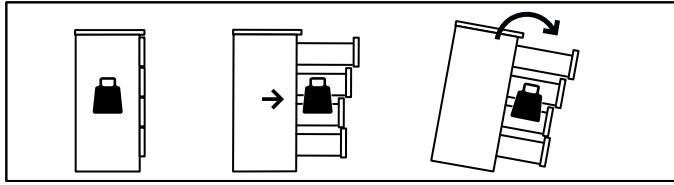

English

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, or shelves.

עברית

אזהרה

נפילת הרהיט עלולה לגרום לפגיעה גופנית חמורה או קטלנית.

 
יש לקבע את הרהיט לקיר באמצעות אבזרי הקיבוע המצורפים.

 
על-מנת למזער את סכנת הפגיעה הגופנית או המוות מנפילת רהיטים:

 
מקמו את הפריטים הכבדים ביותר במגירה התחתונה.

 
הימנעו מלהניח טלוויזיות או פריטים כבדים אחרים על מוצר זה.

אין לאפשר לילדים לטפס על המגירות, הדלתות או המדפים.








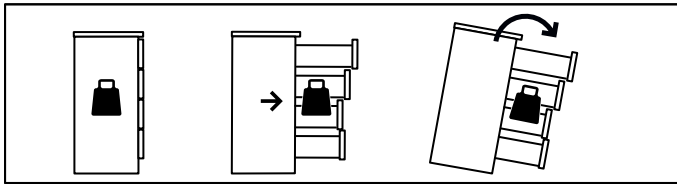




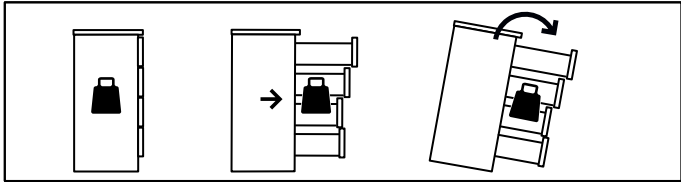


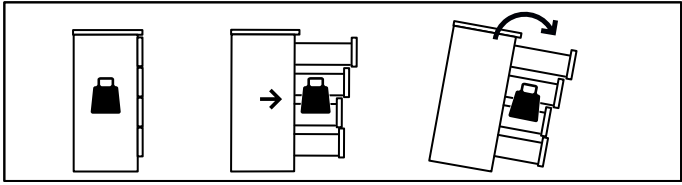

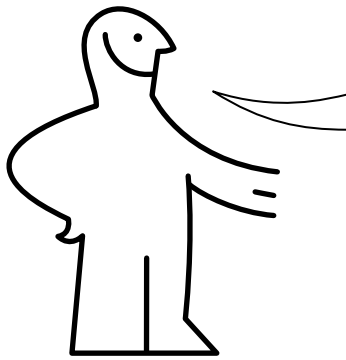


Ø 8 mm (5/16'')	Ø 8 mm (5/16'')	Ø 3 mm (1/8'')					

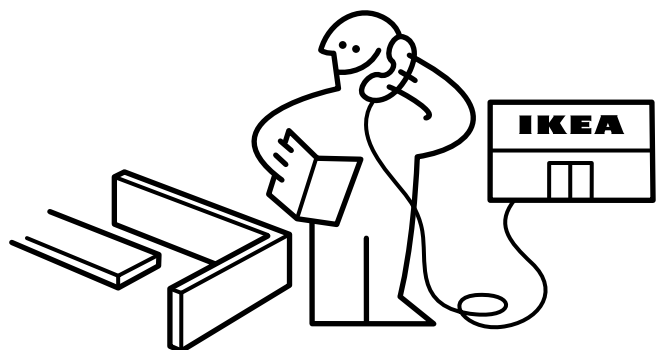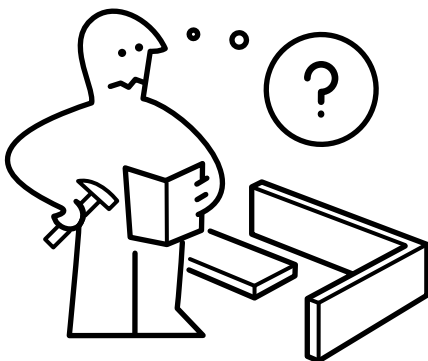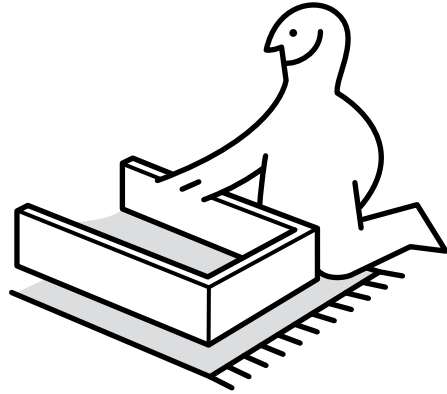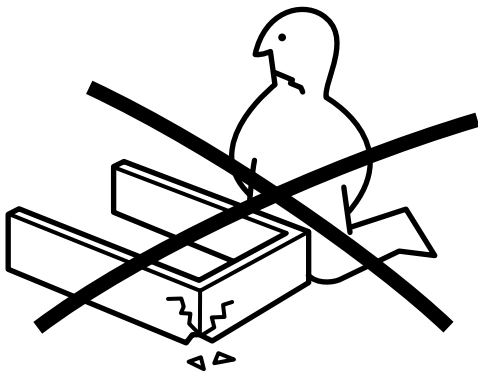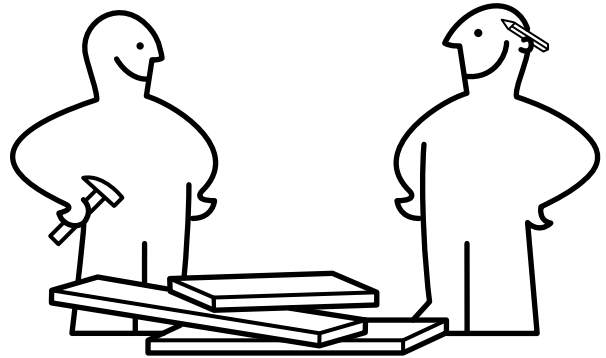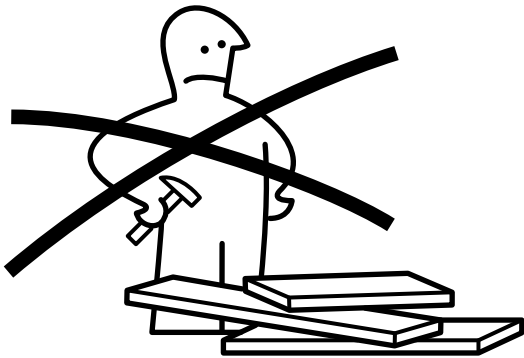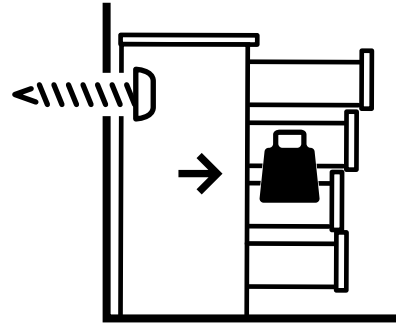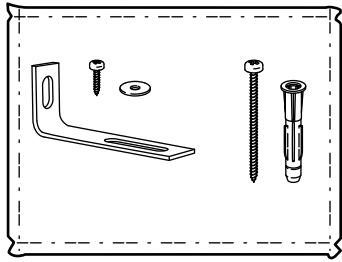        

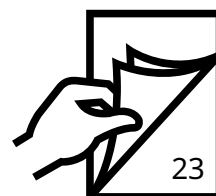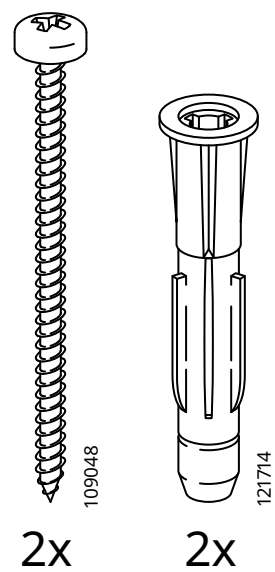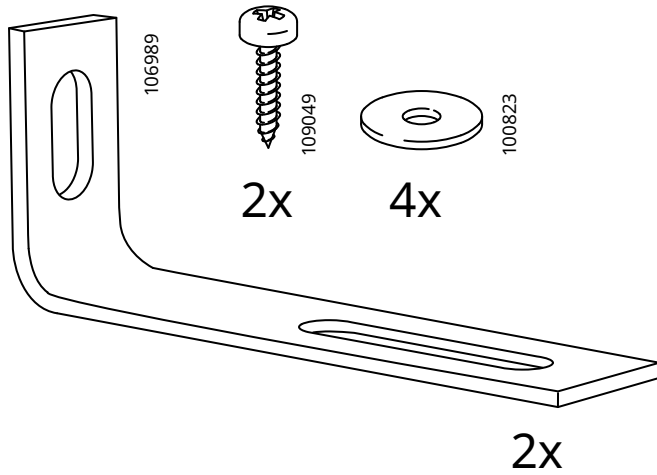   


326949

 
1



12x

 

4x

 


4x




24x



 
18x




4x

 


2x

 


4x

 


12x

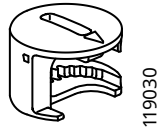 


12x

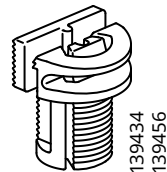 


14x

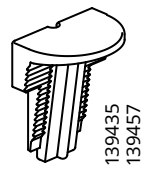 


14x

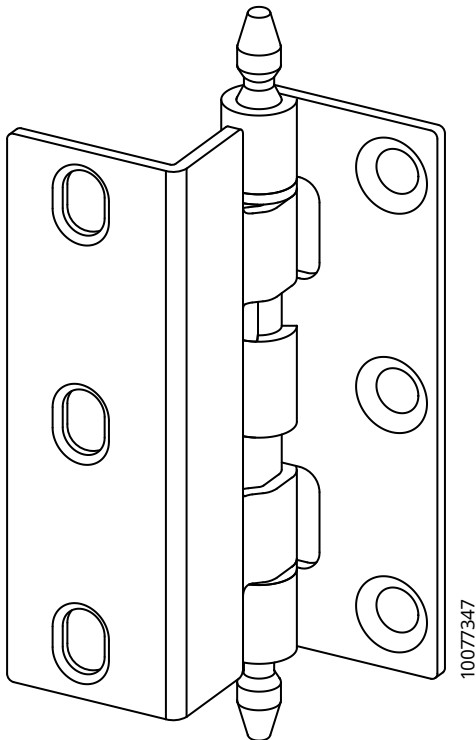 


4x

 

2x

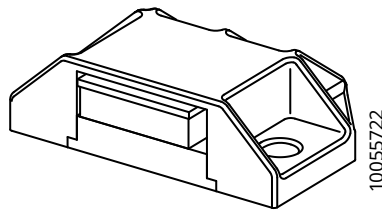 

2x

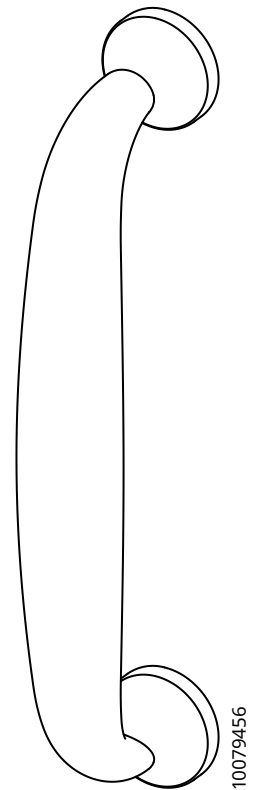 

2x

2



 
118331

12x



146114

18x




145718
159553

12x




101345

 12x

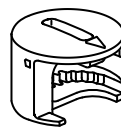


119030
118224
120076

 24x




104663

 1x

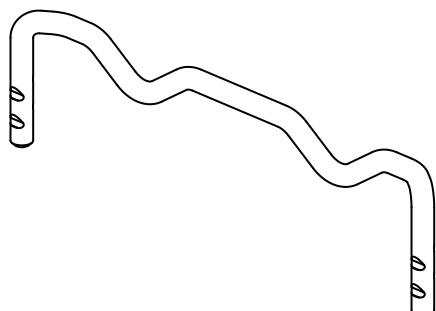


10040242

 3x

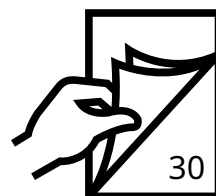


30

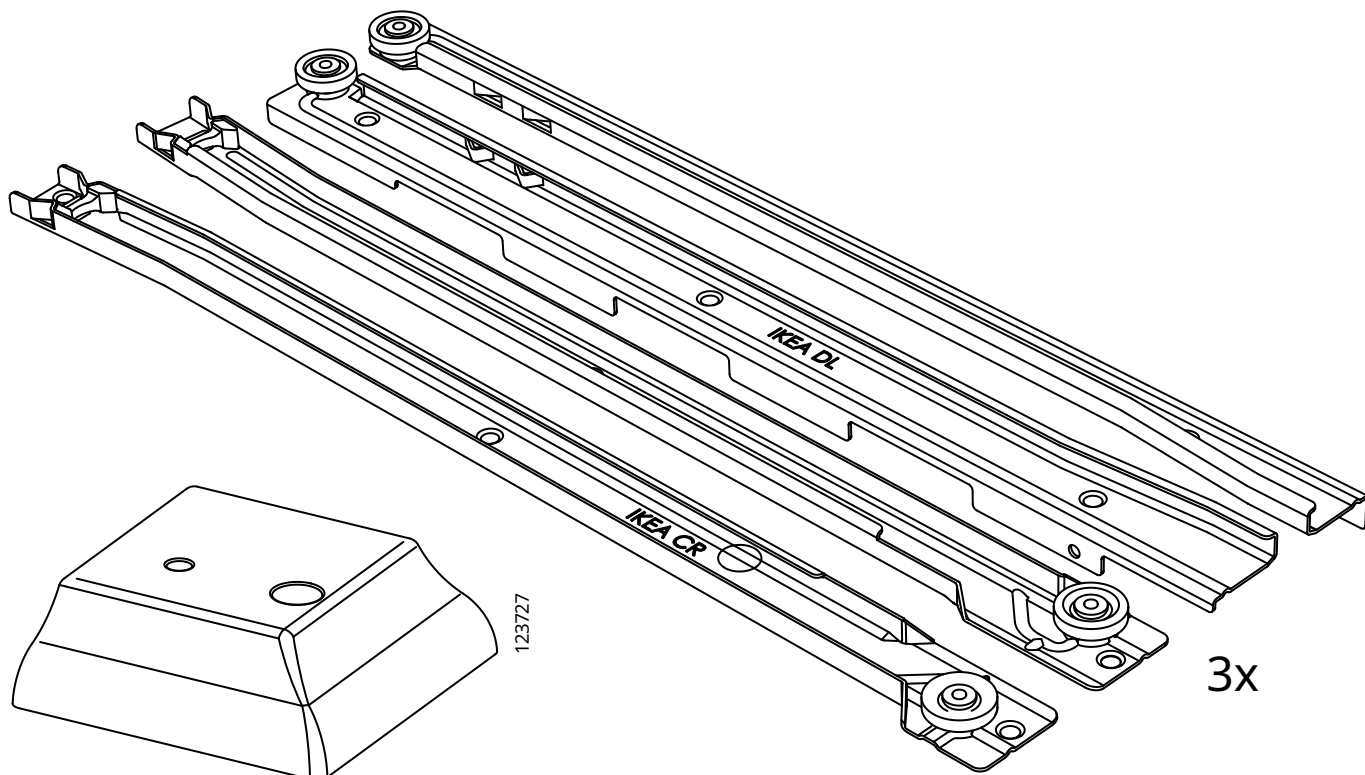 

10043622
10050475


 
3x

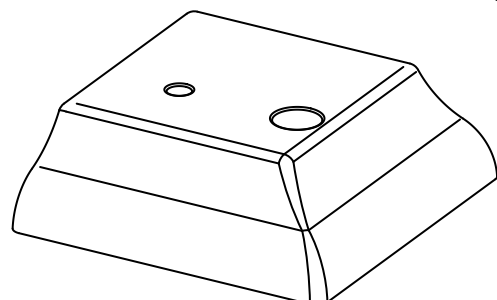


123727

4x

  
1

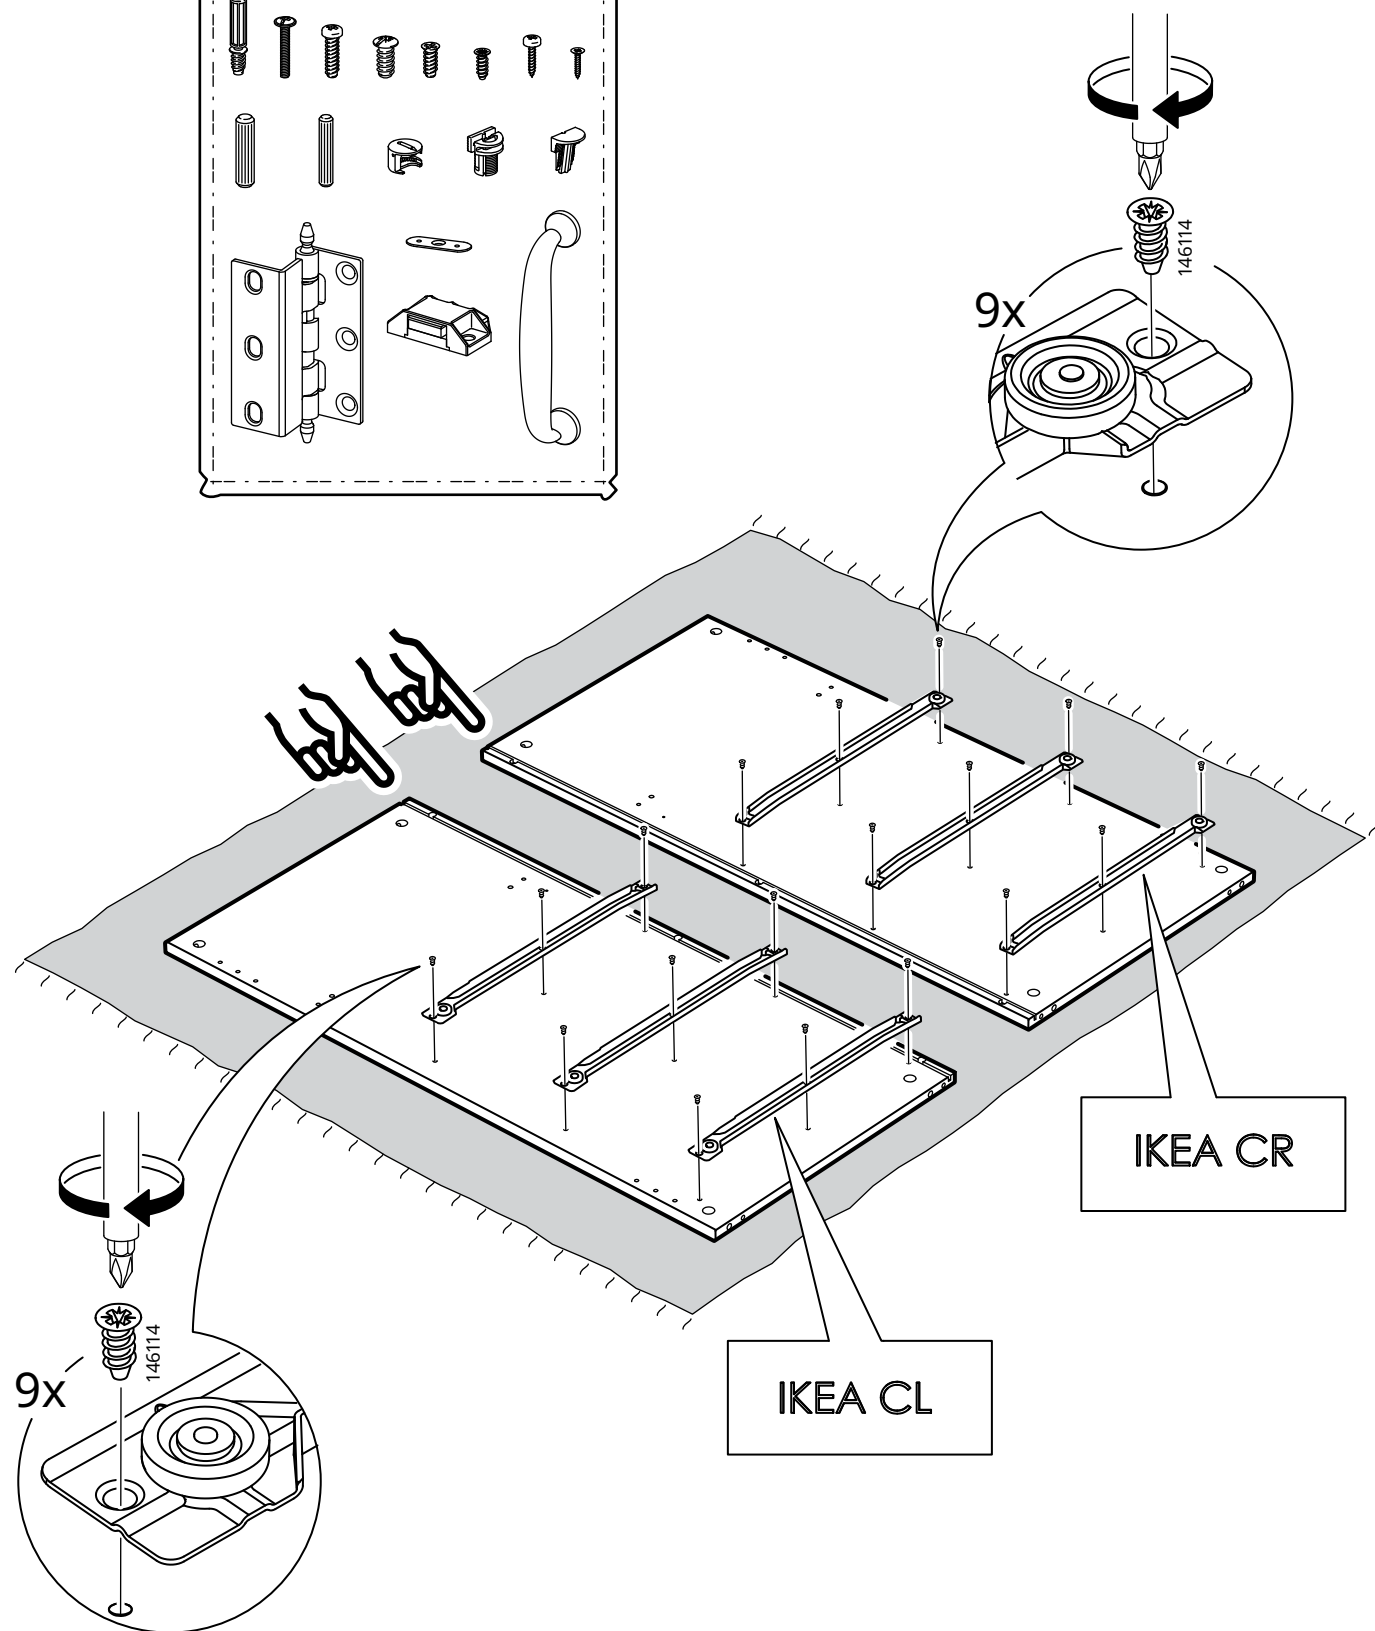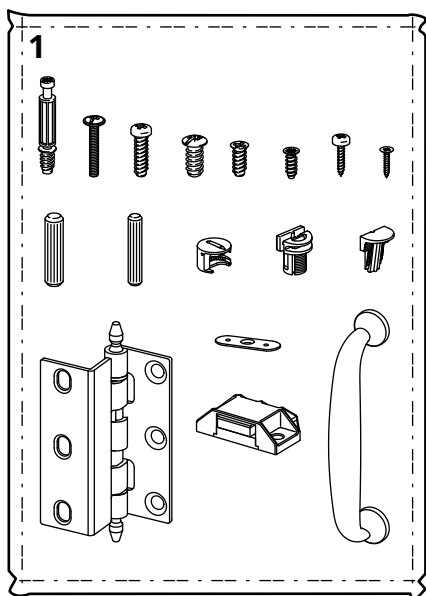


2

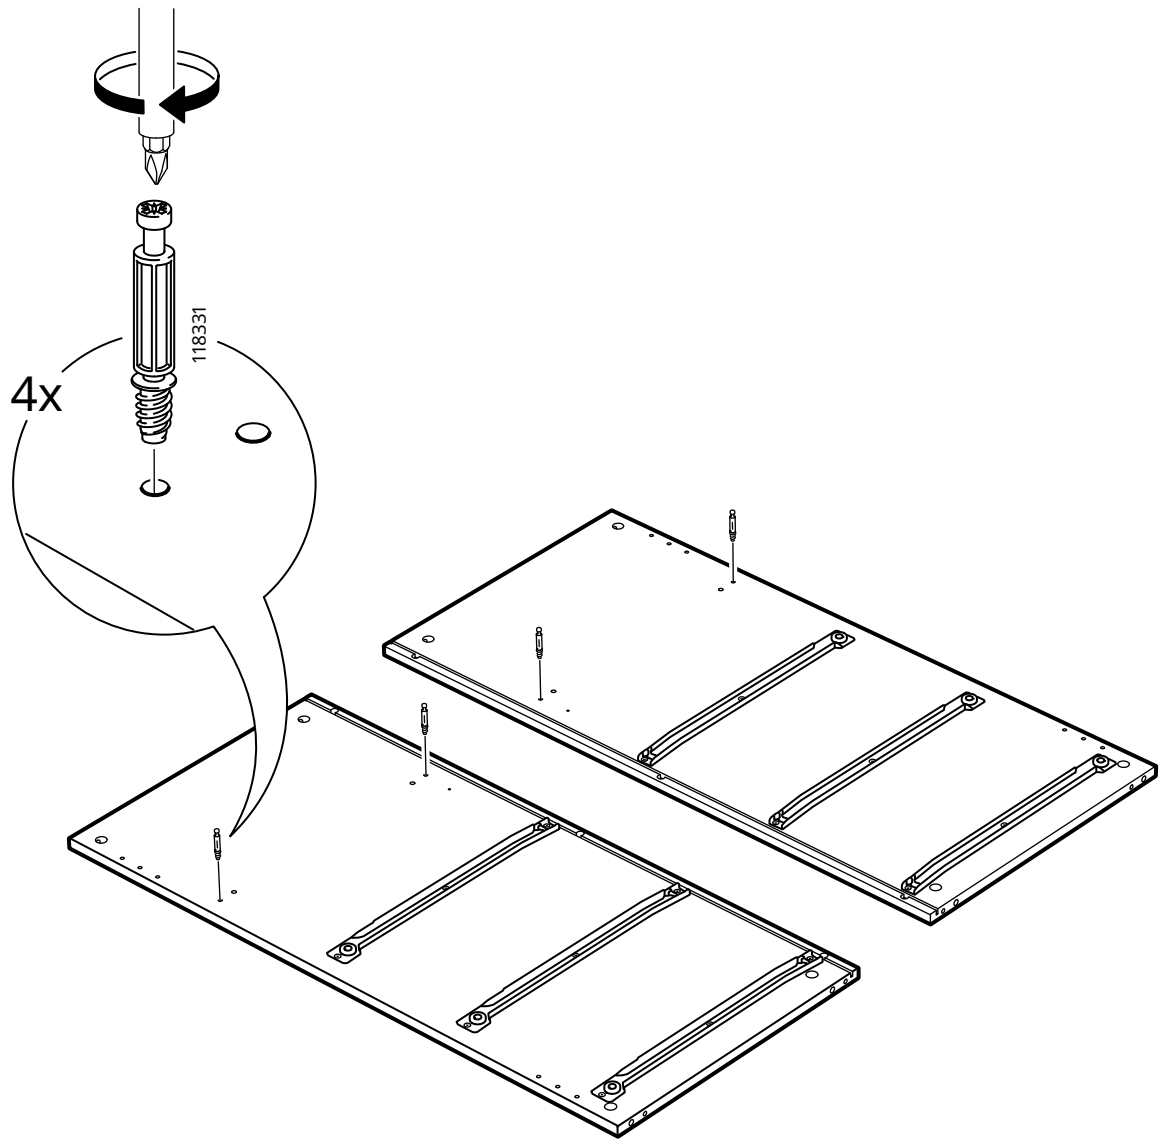 


3

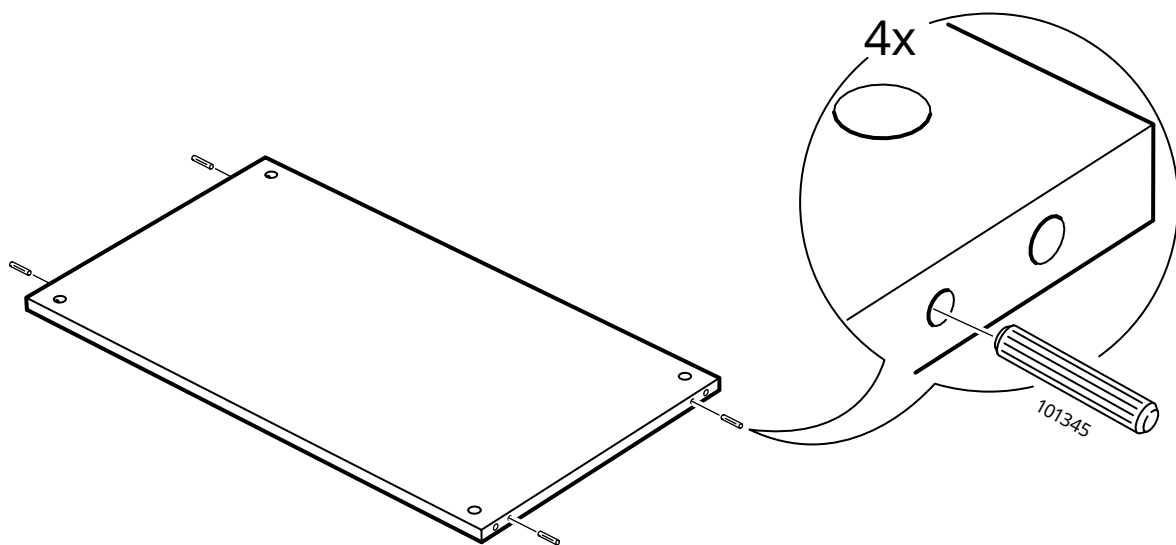 


4

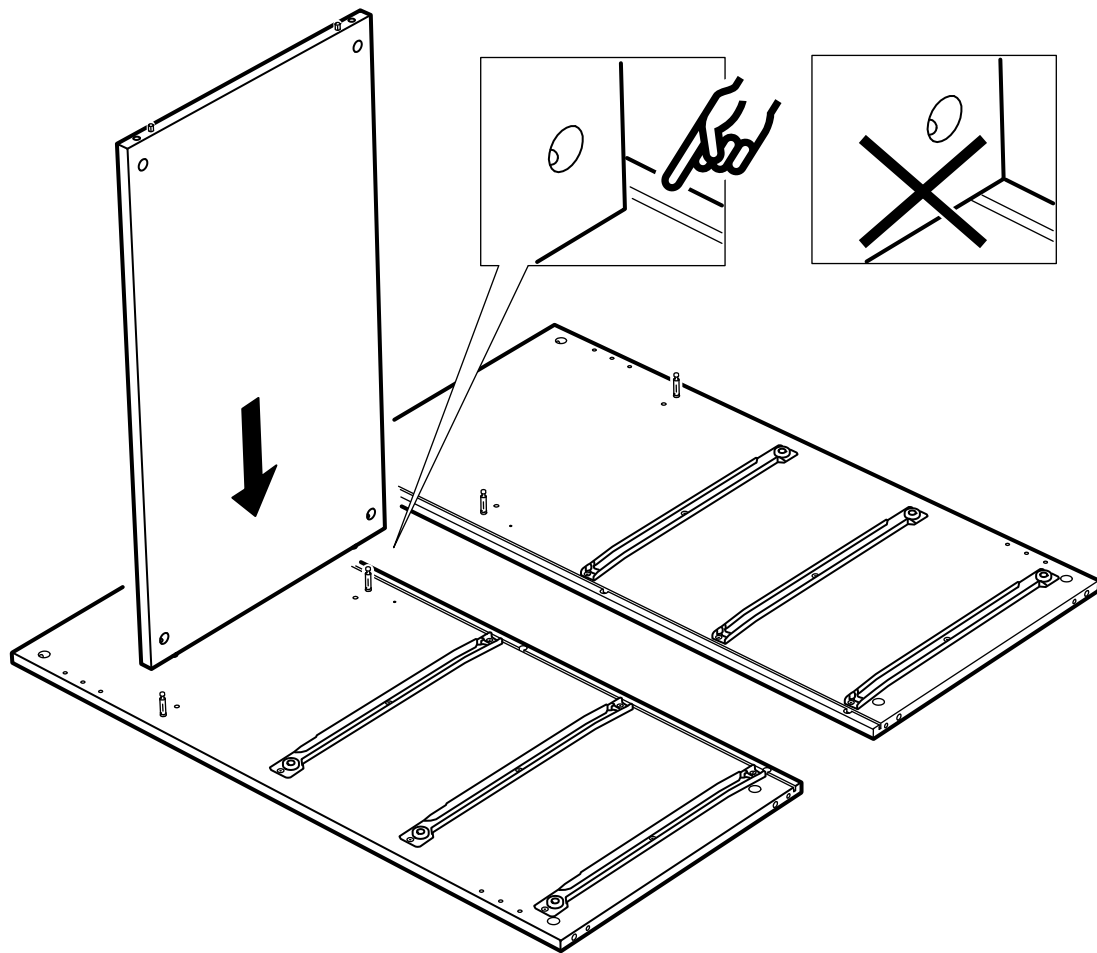 


5

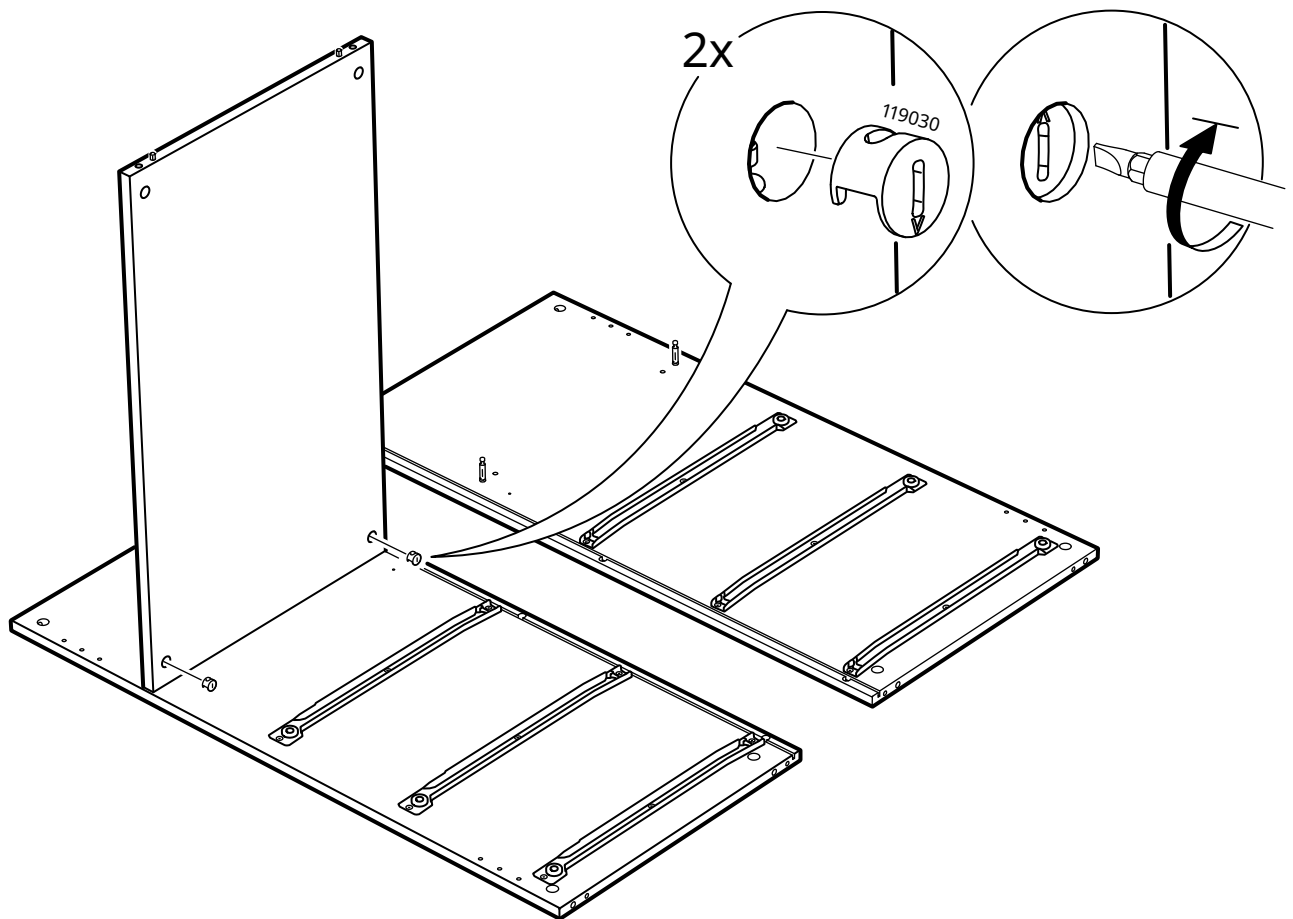 


6

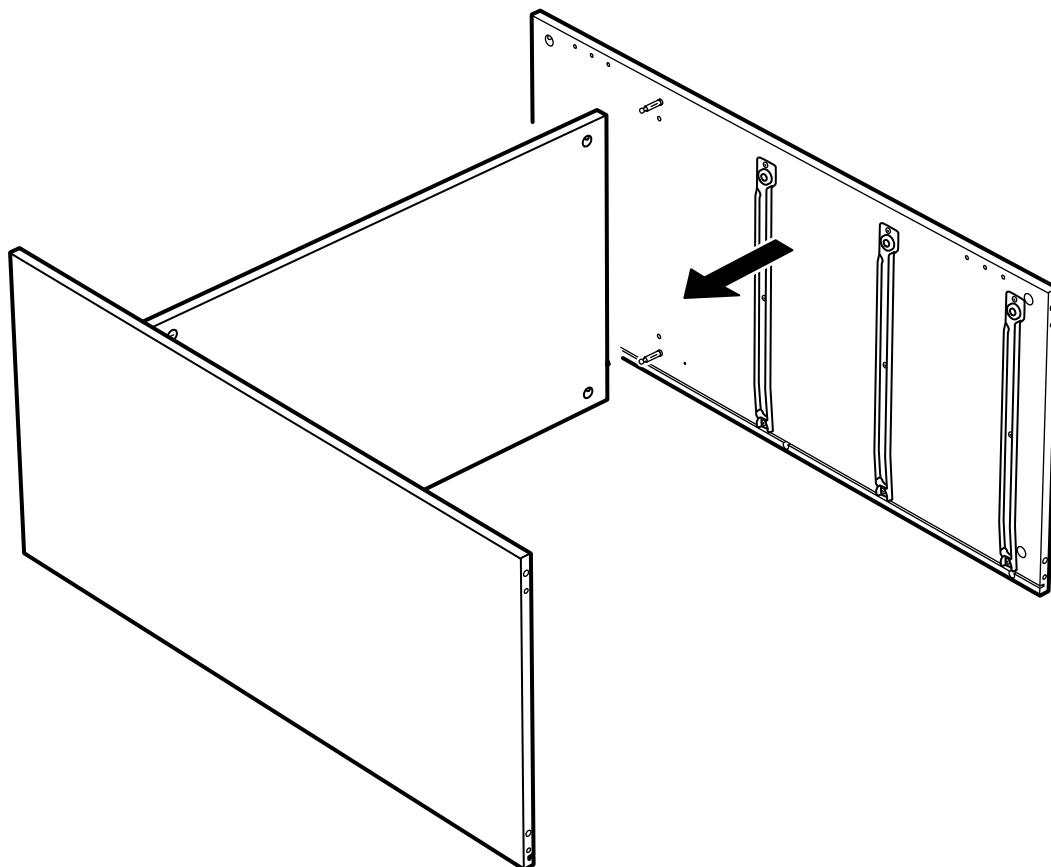 


7

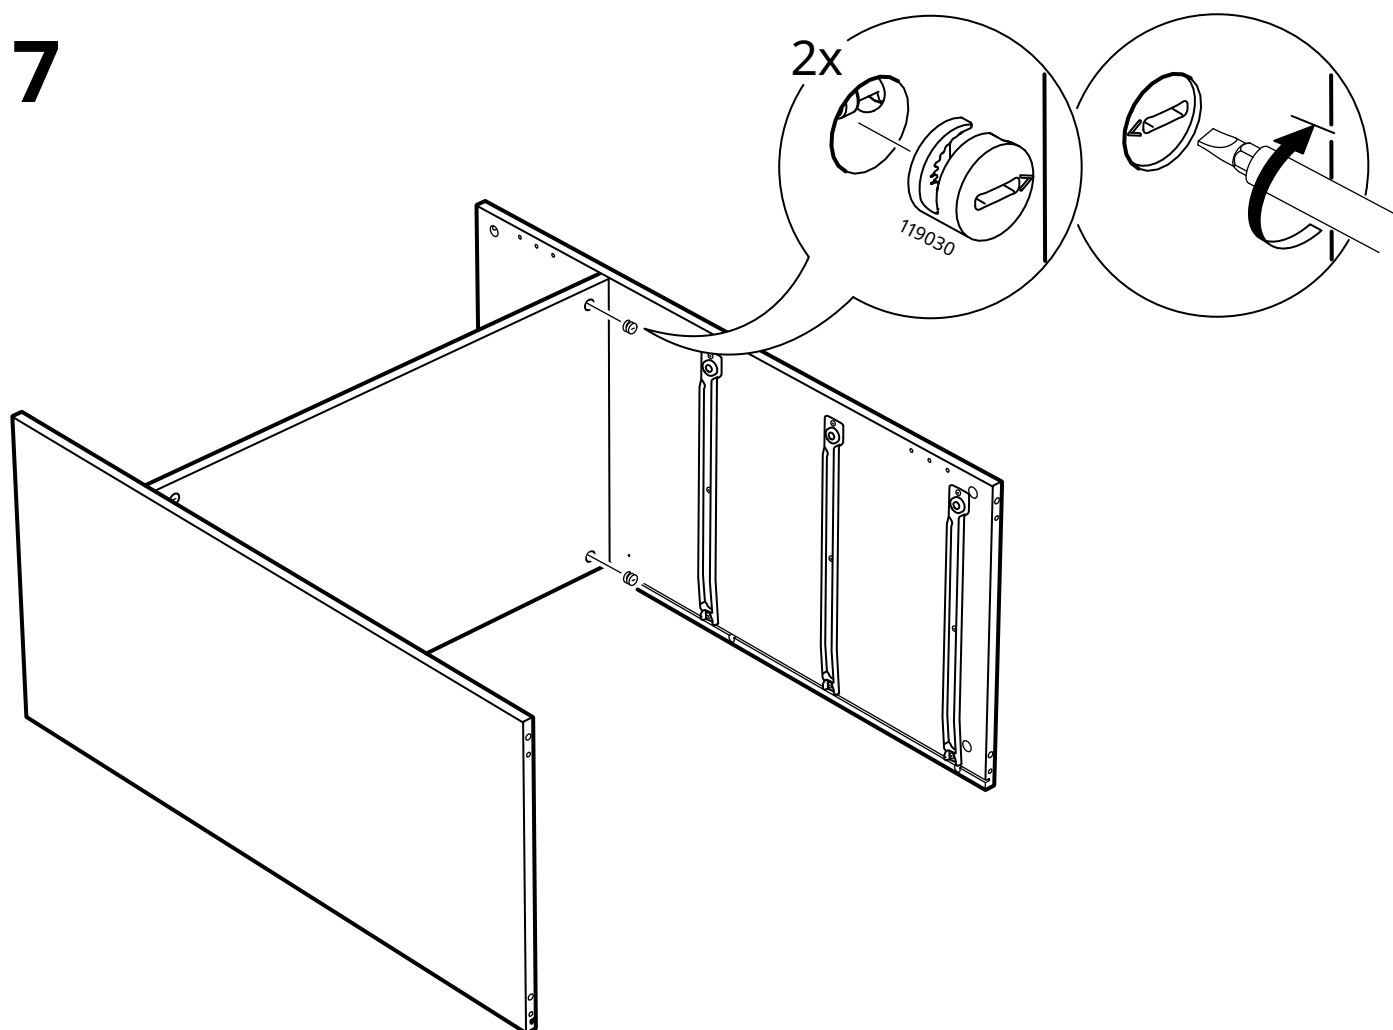 


8

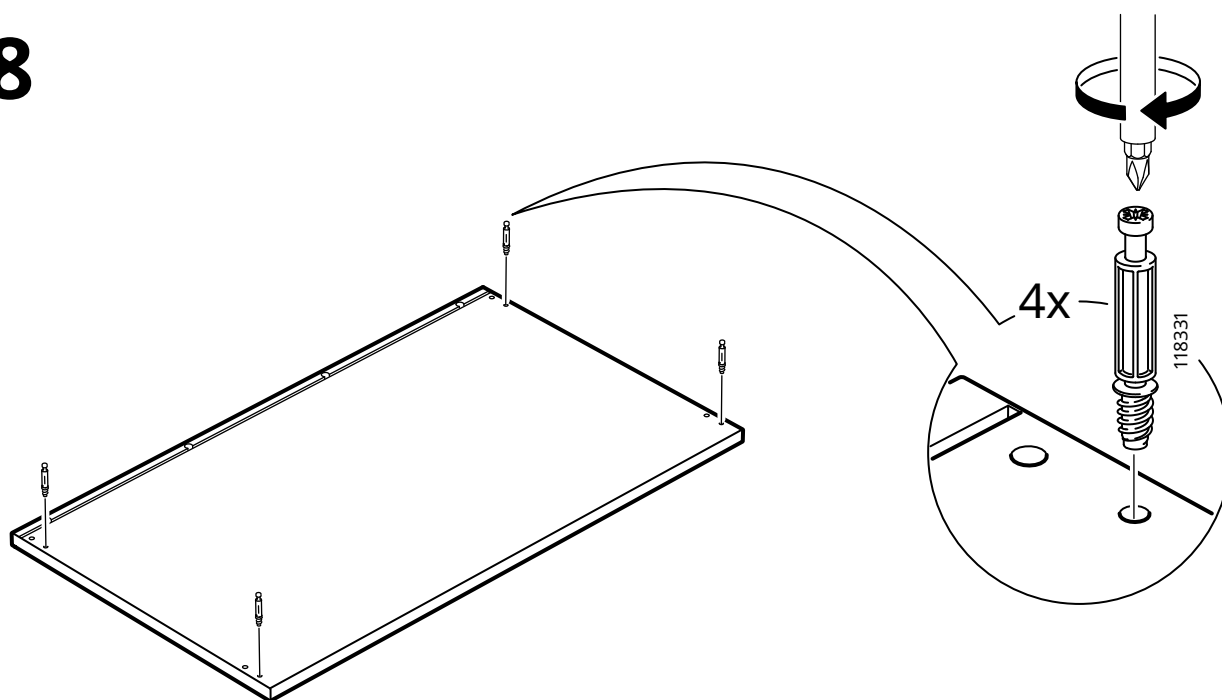 


9

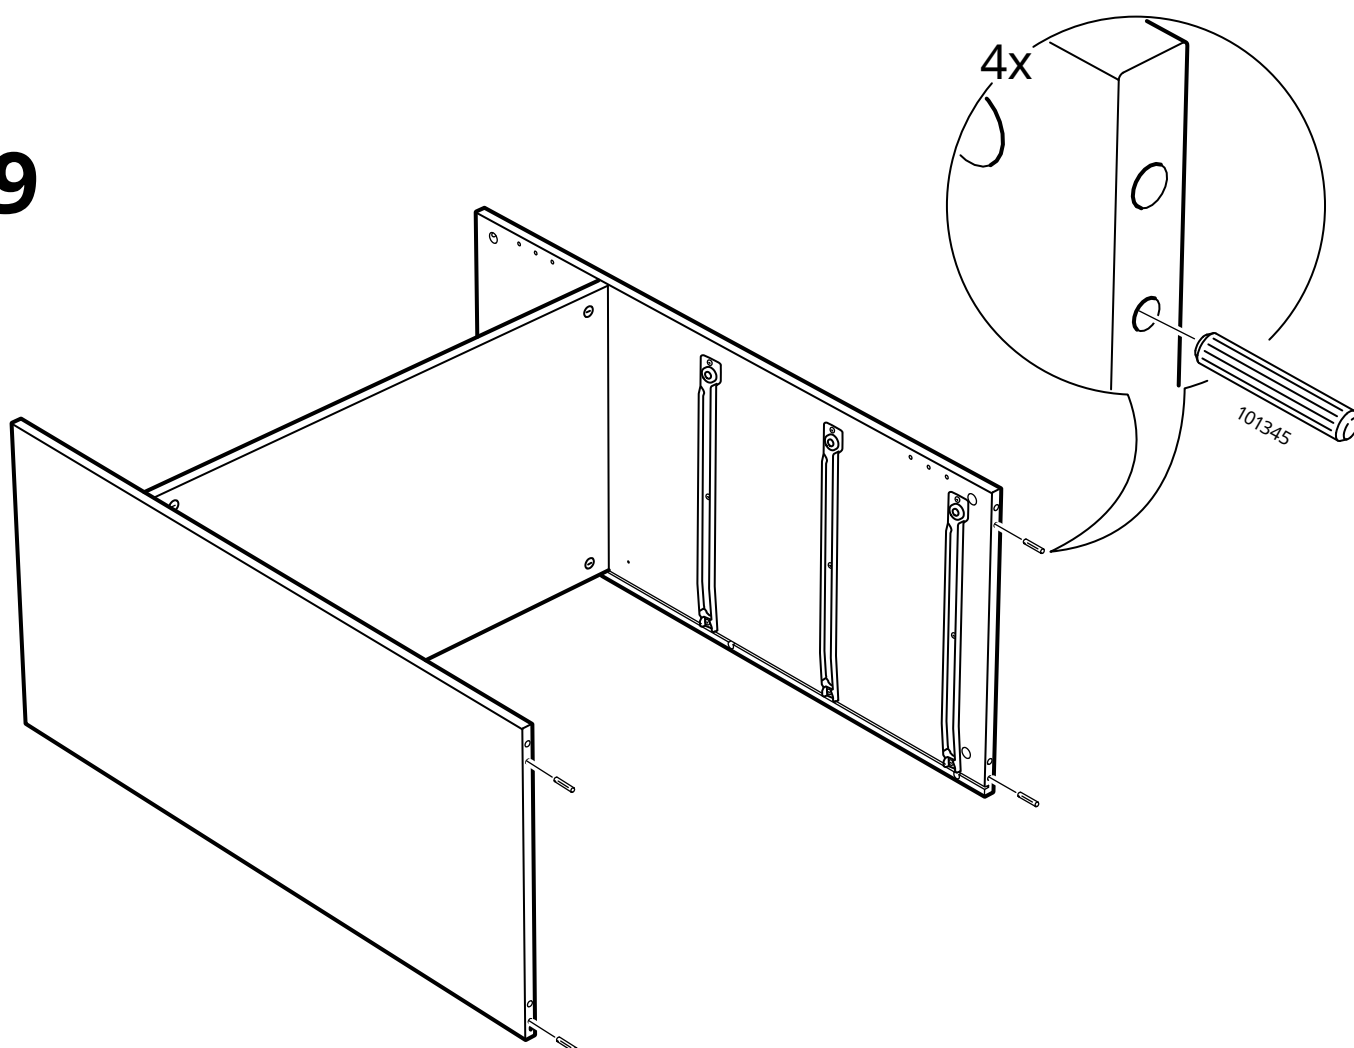 



10

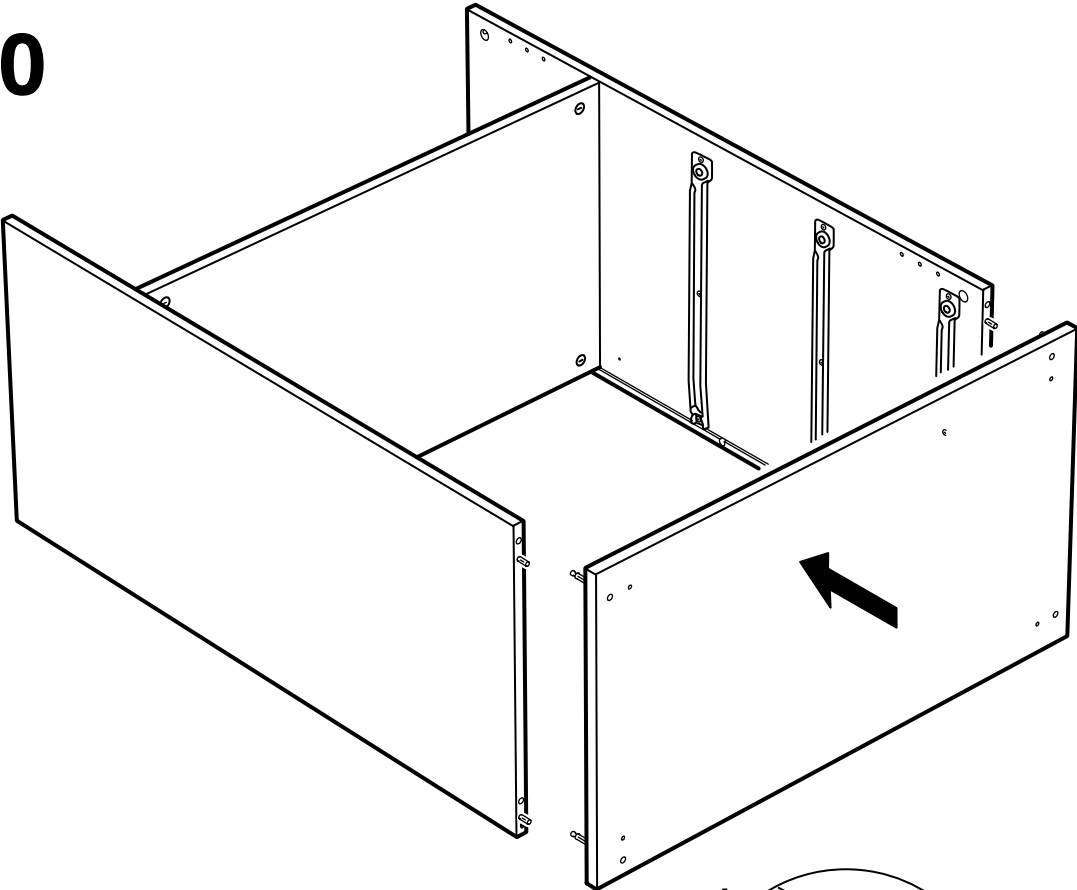 


11

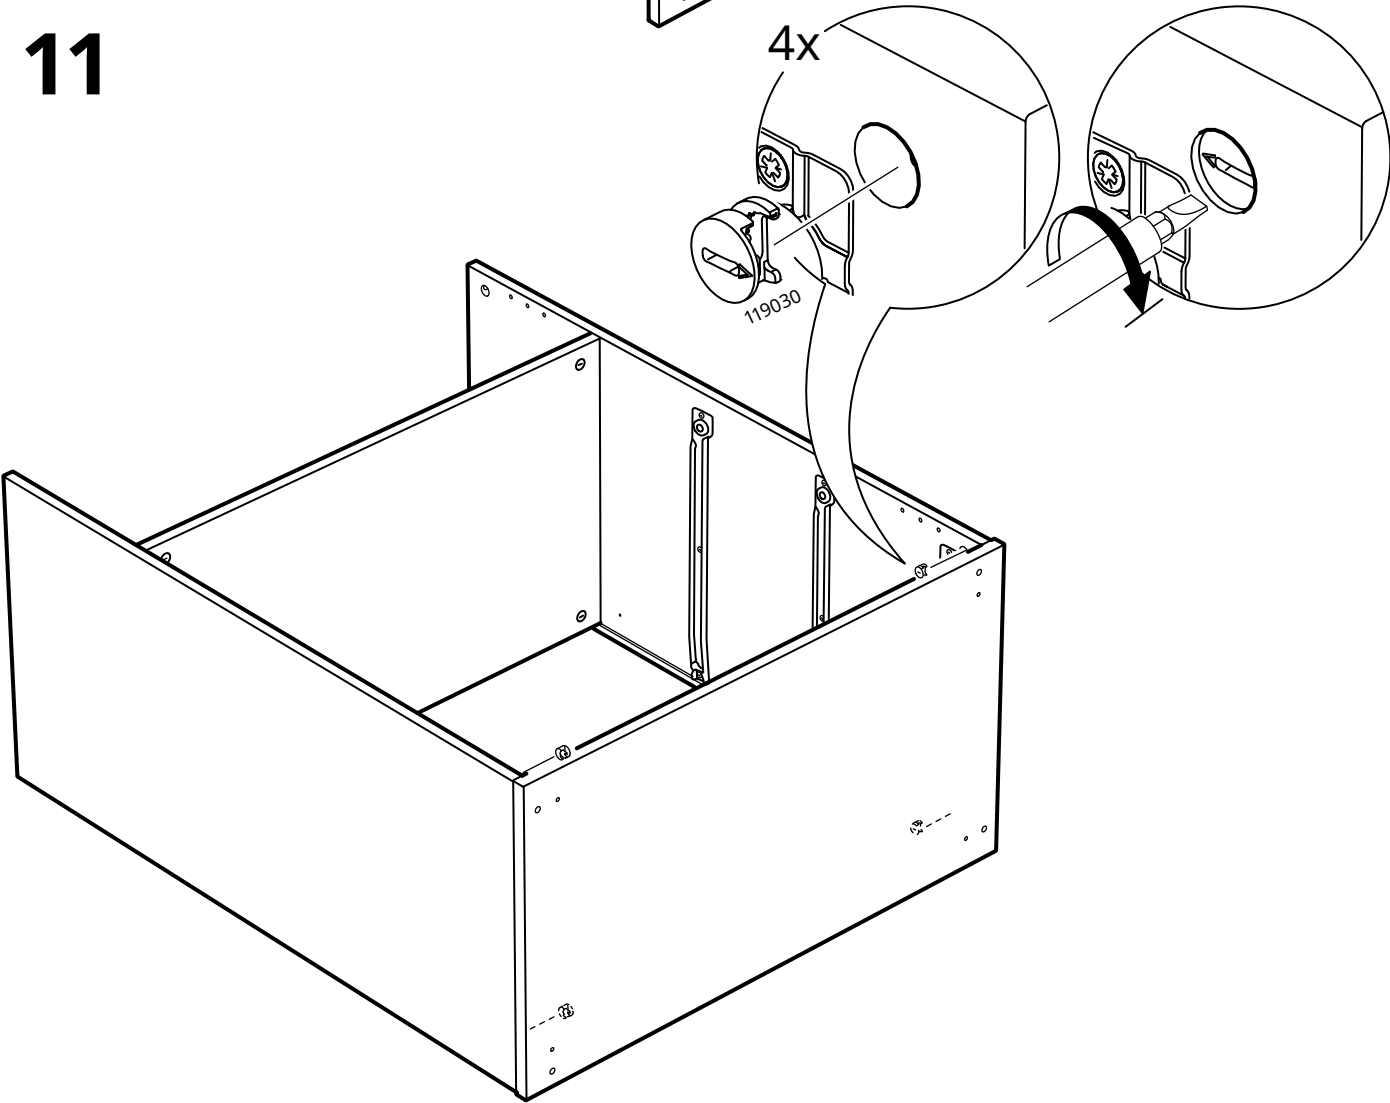 

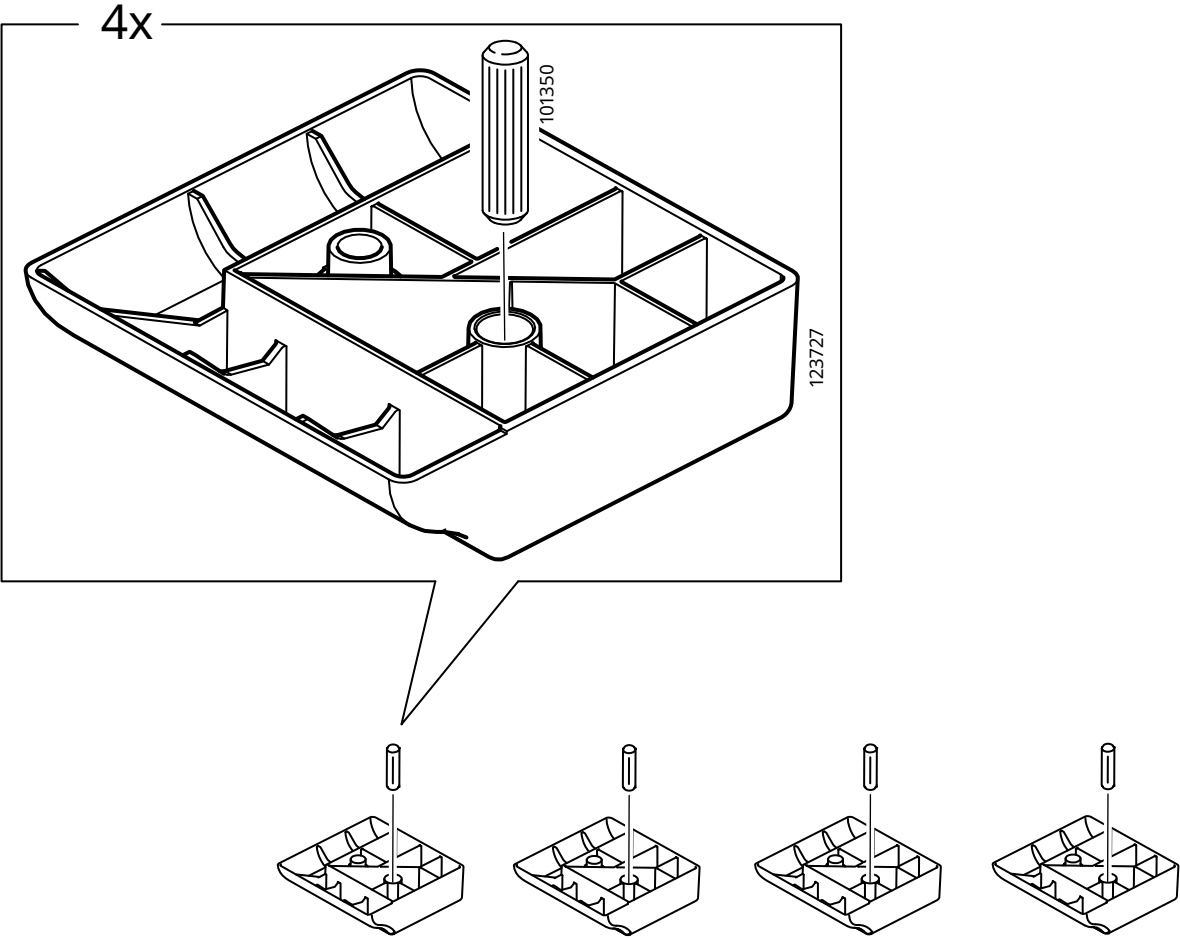 


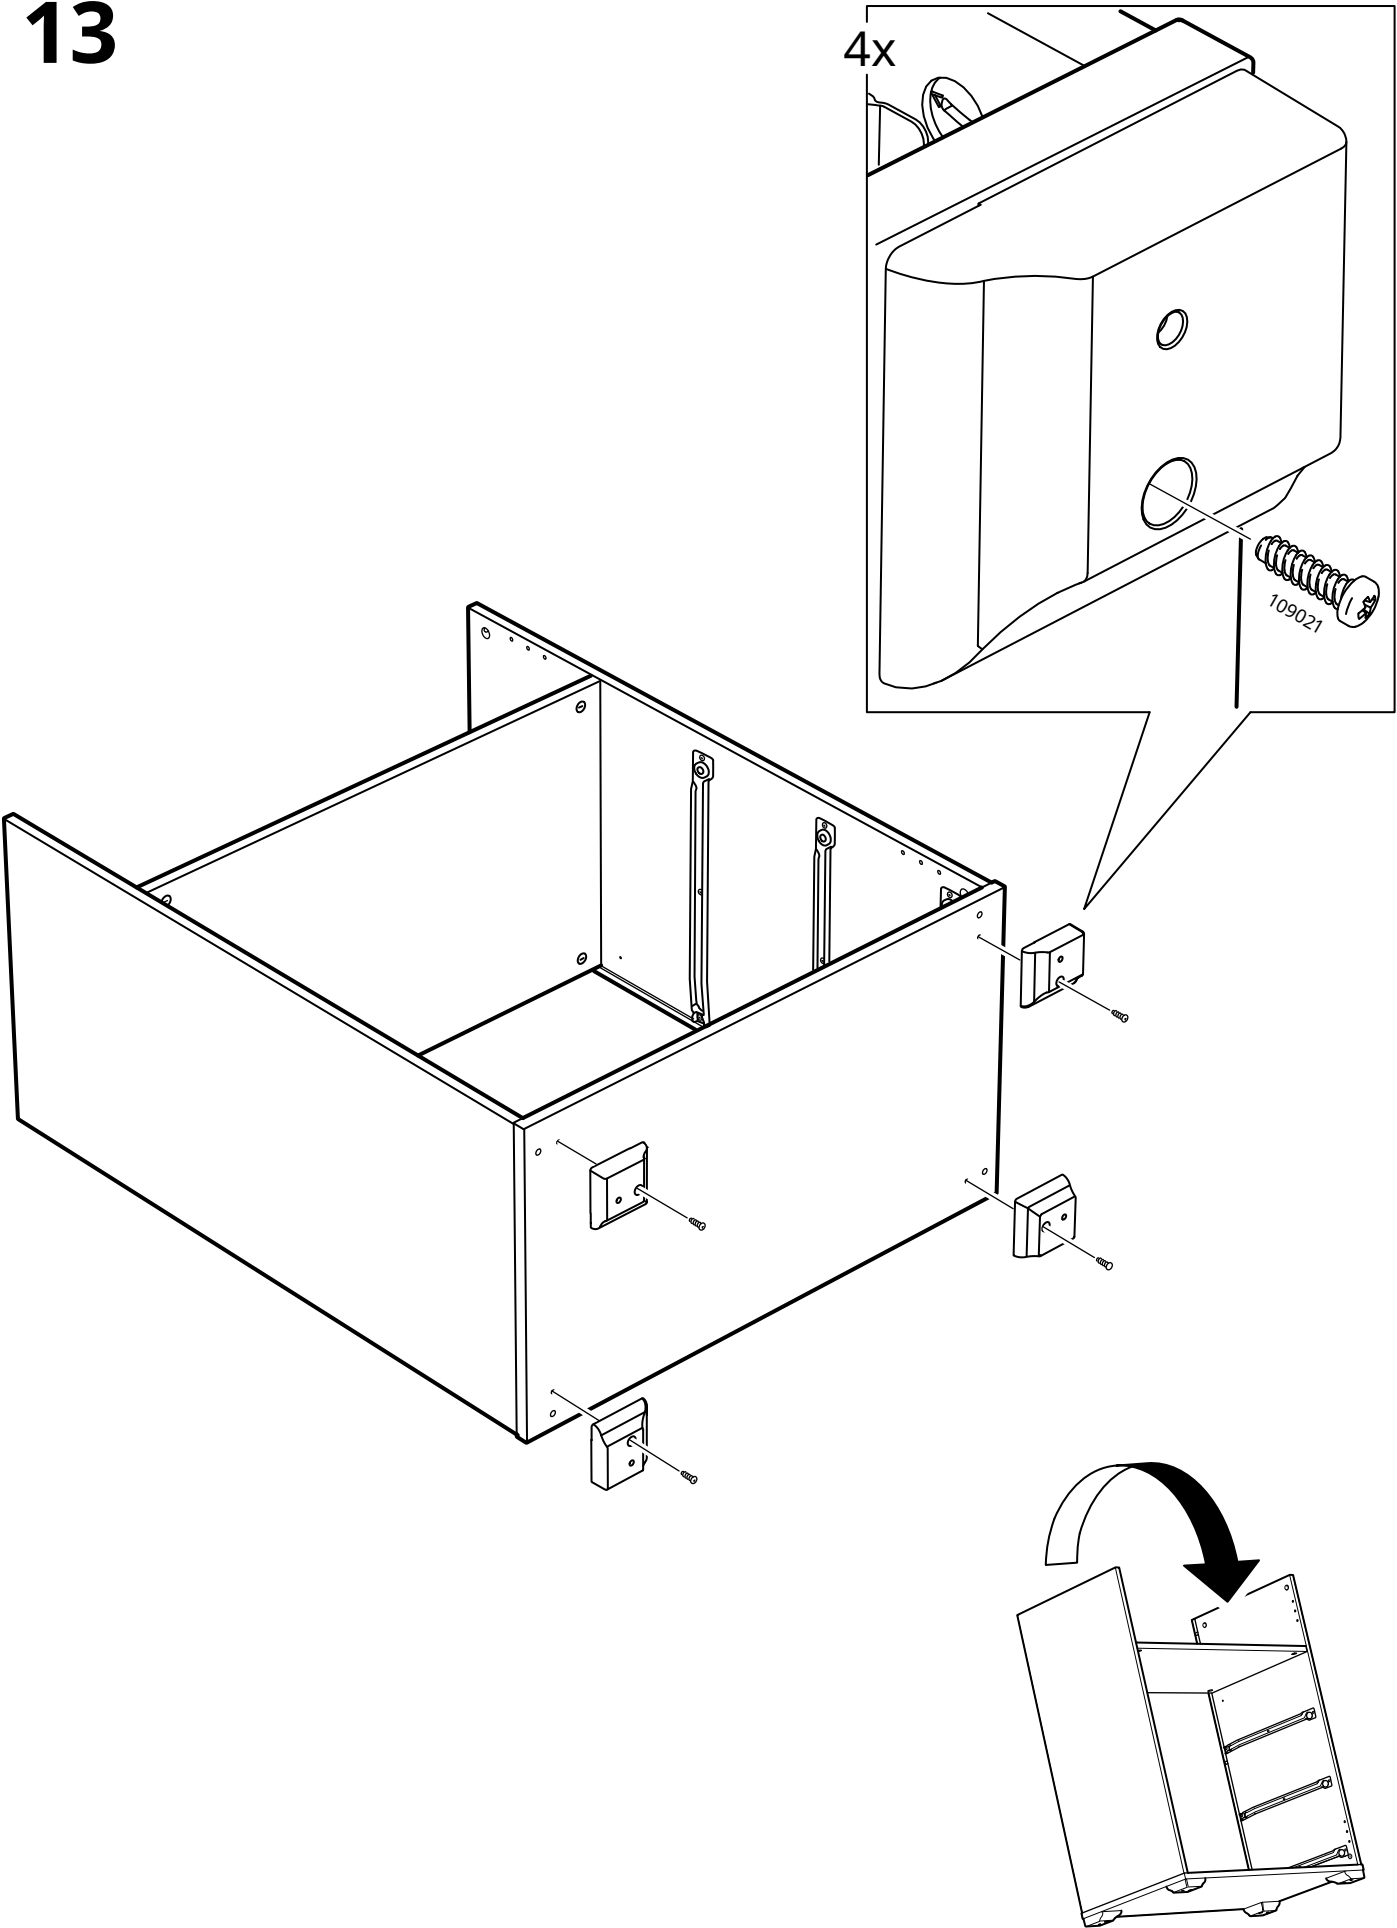 


14

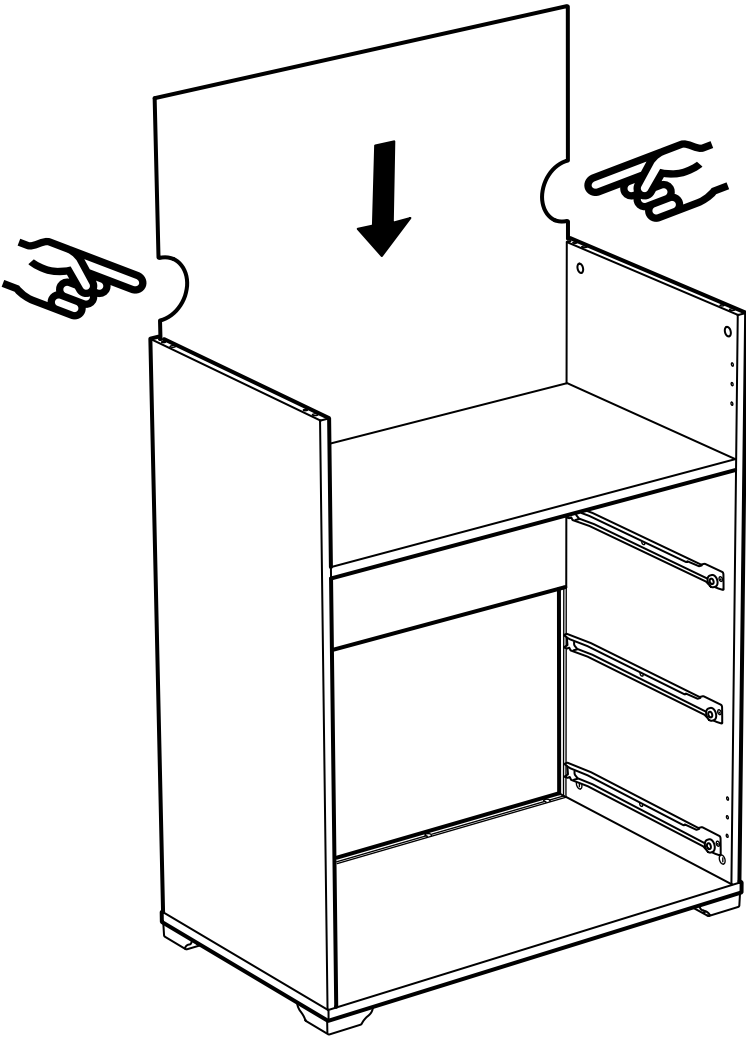 


15

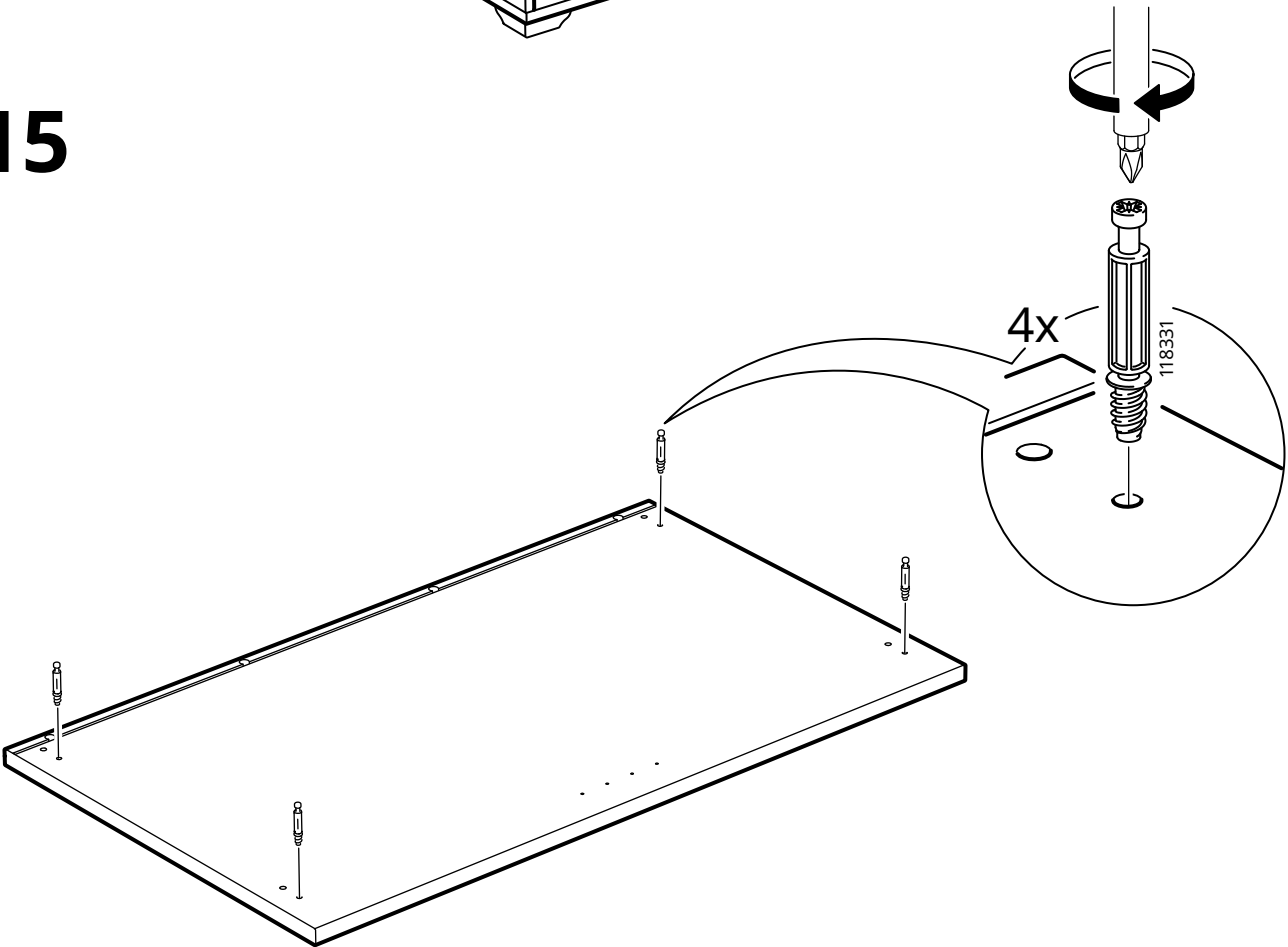 


16

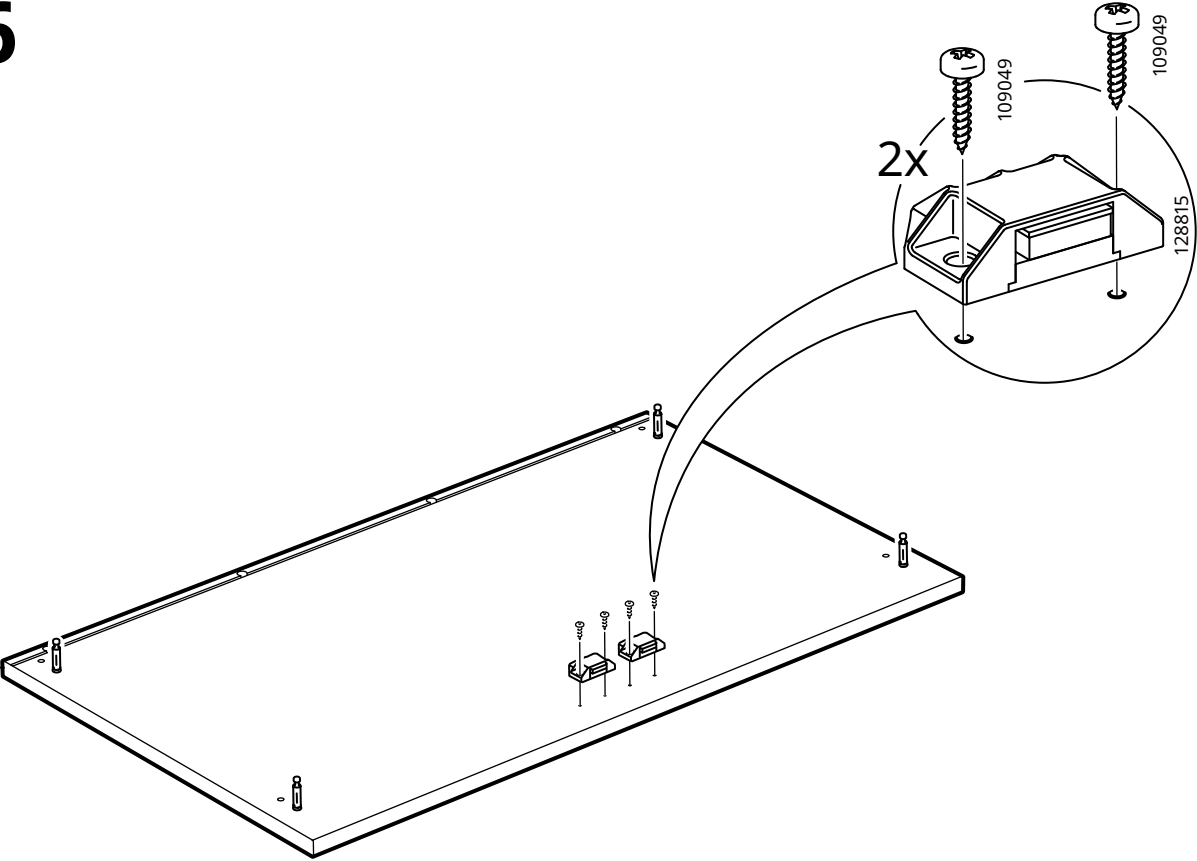 


17

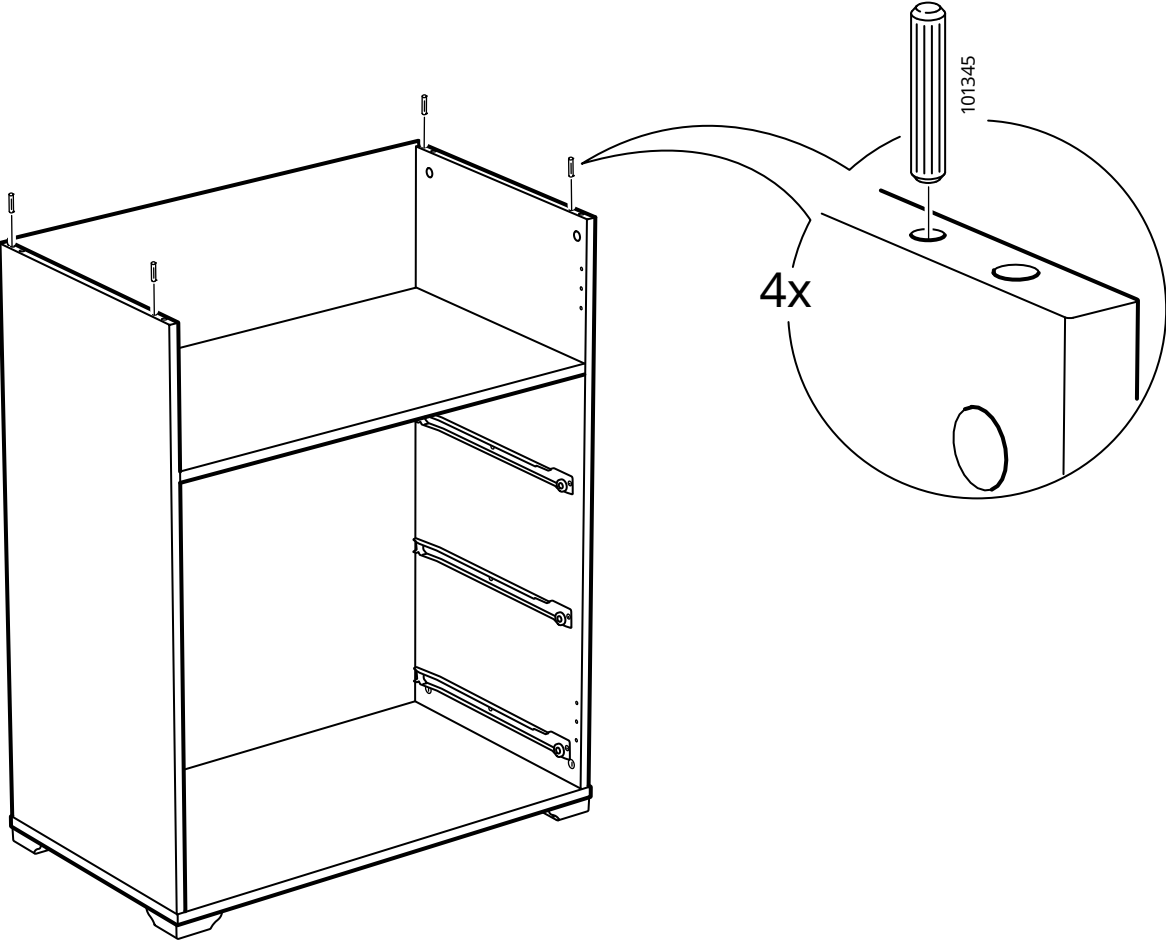 


18

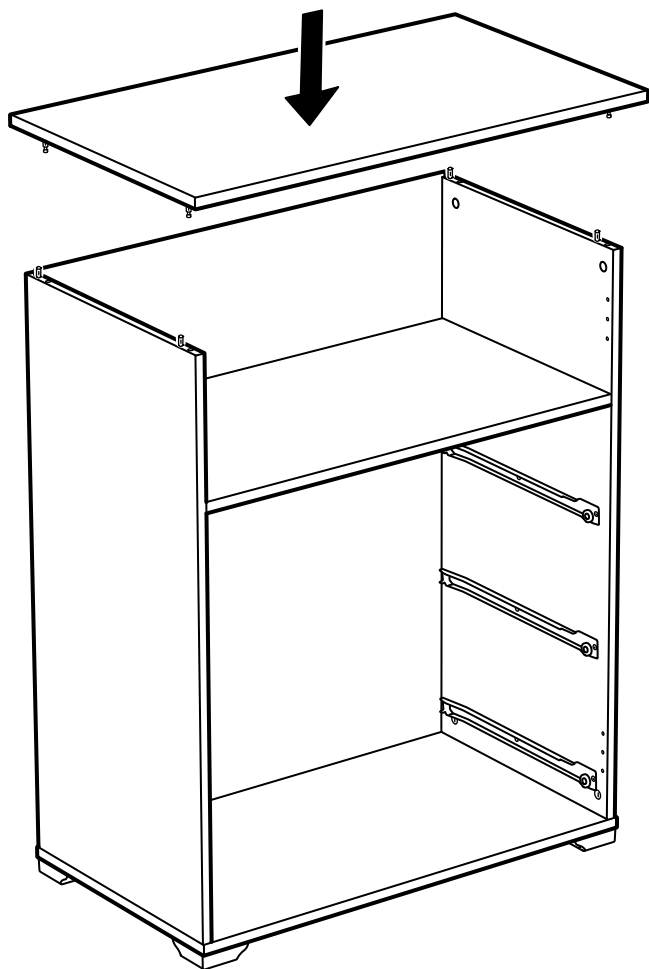 


19

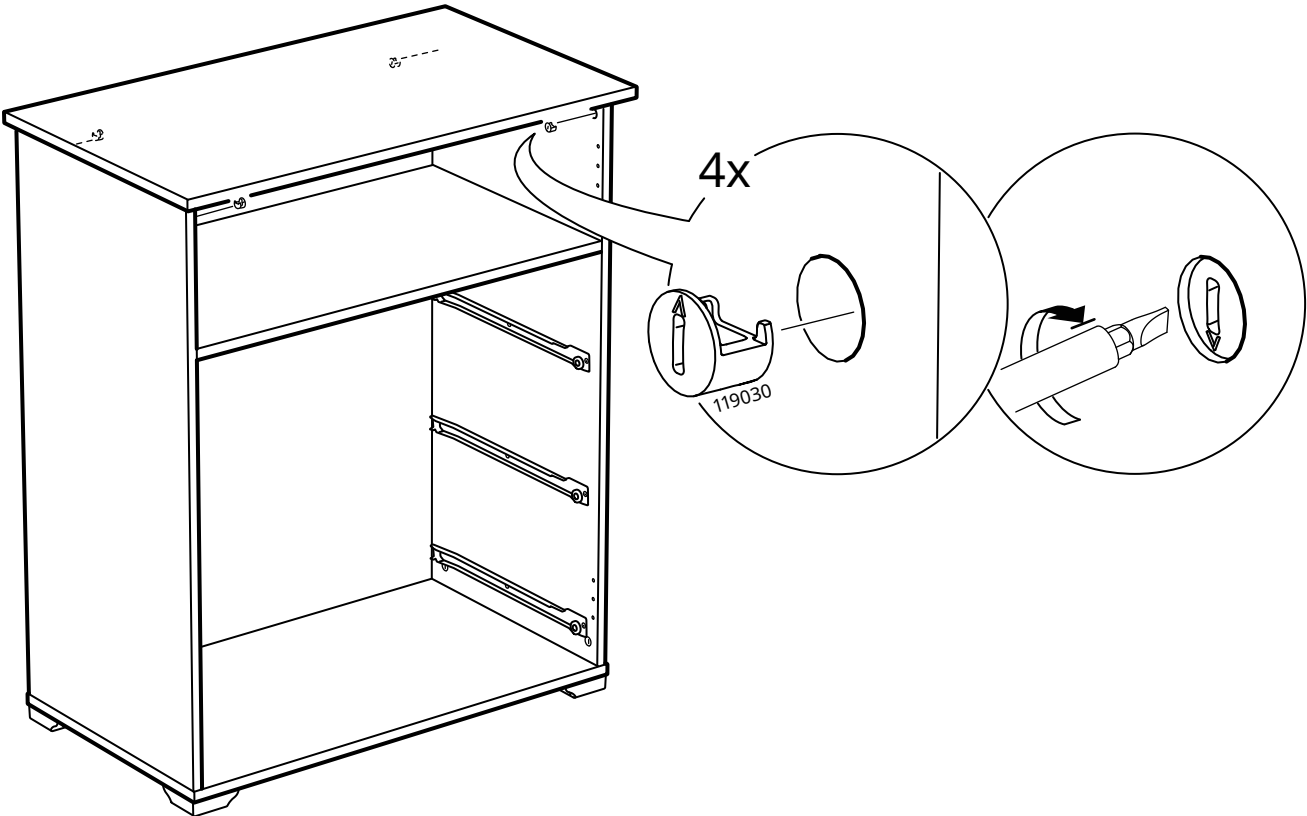 


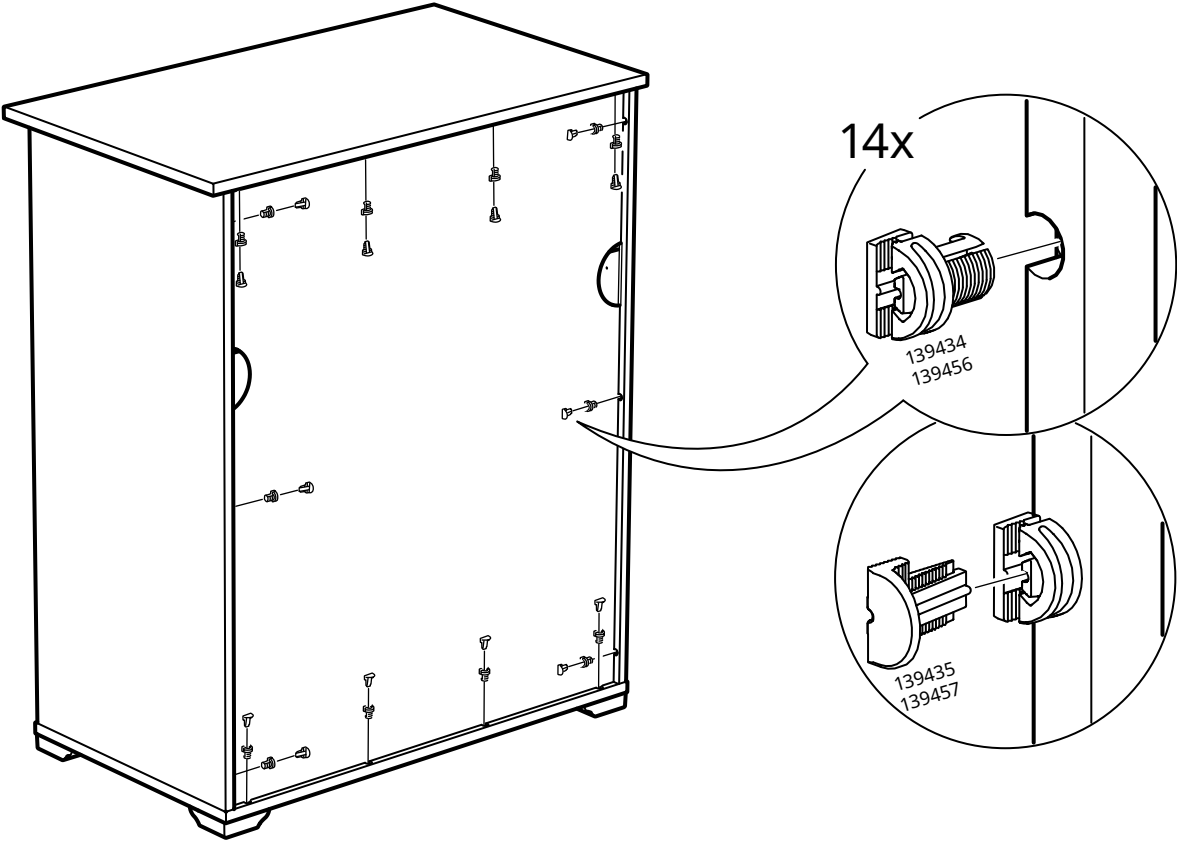 


21

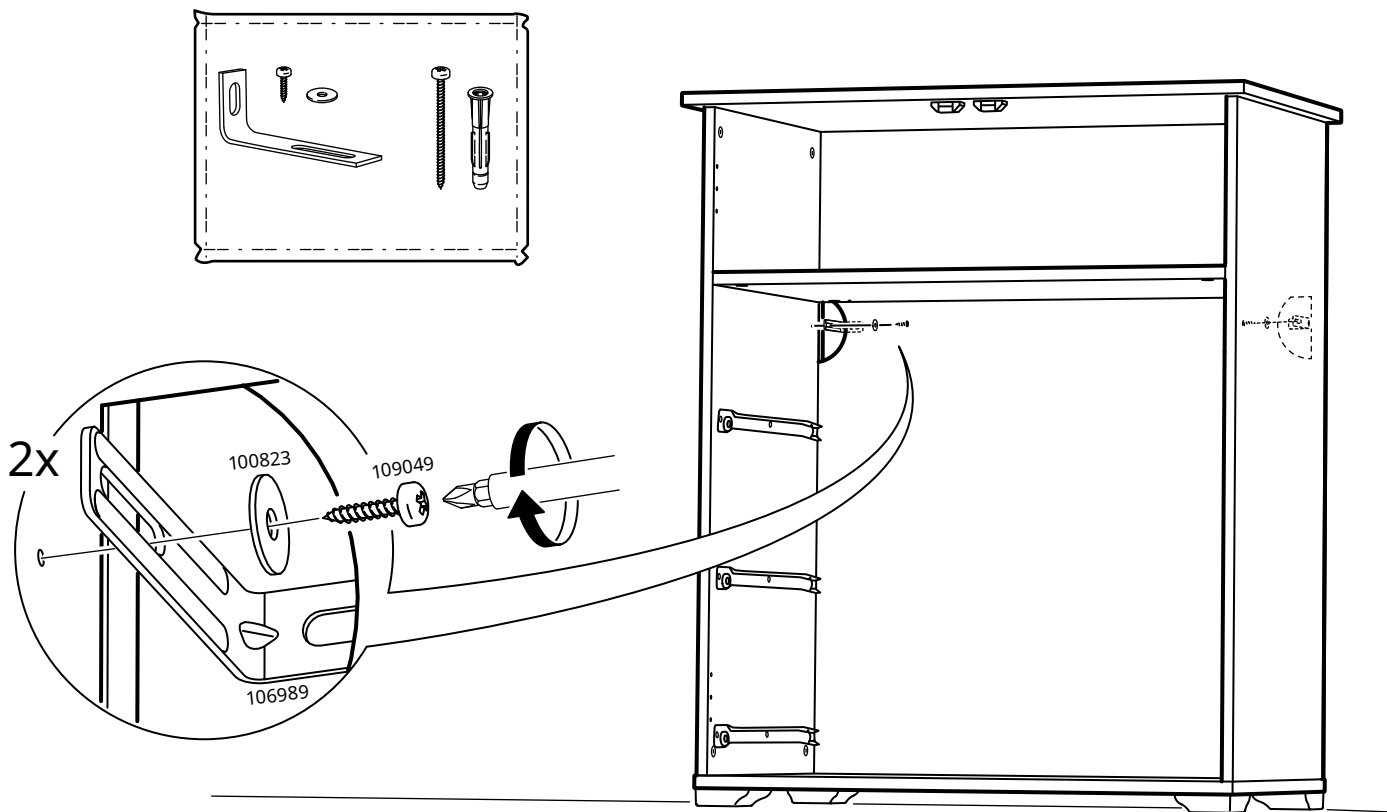 


22

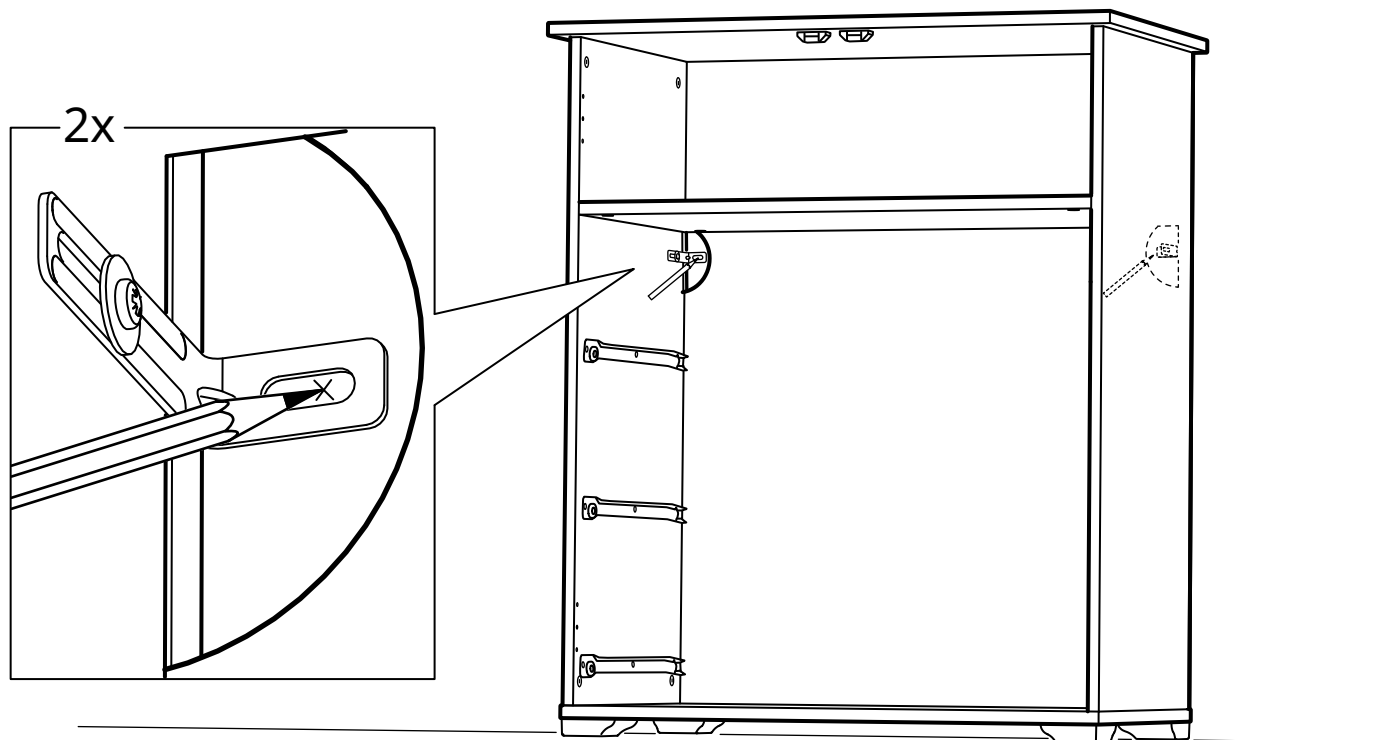 

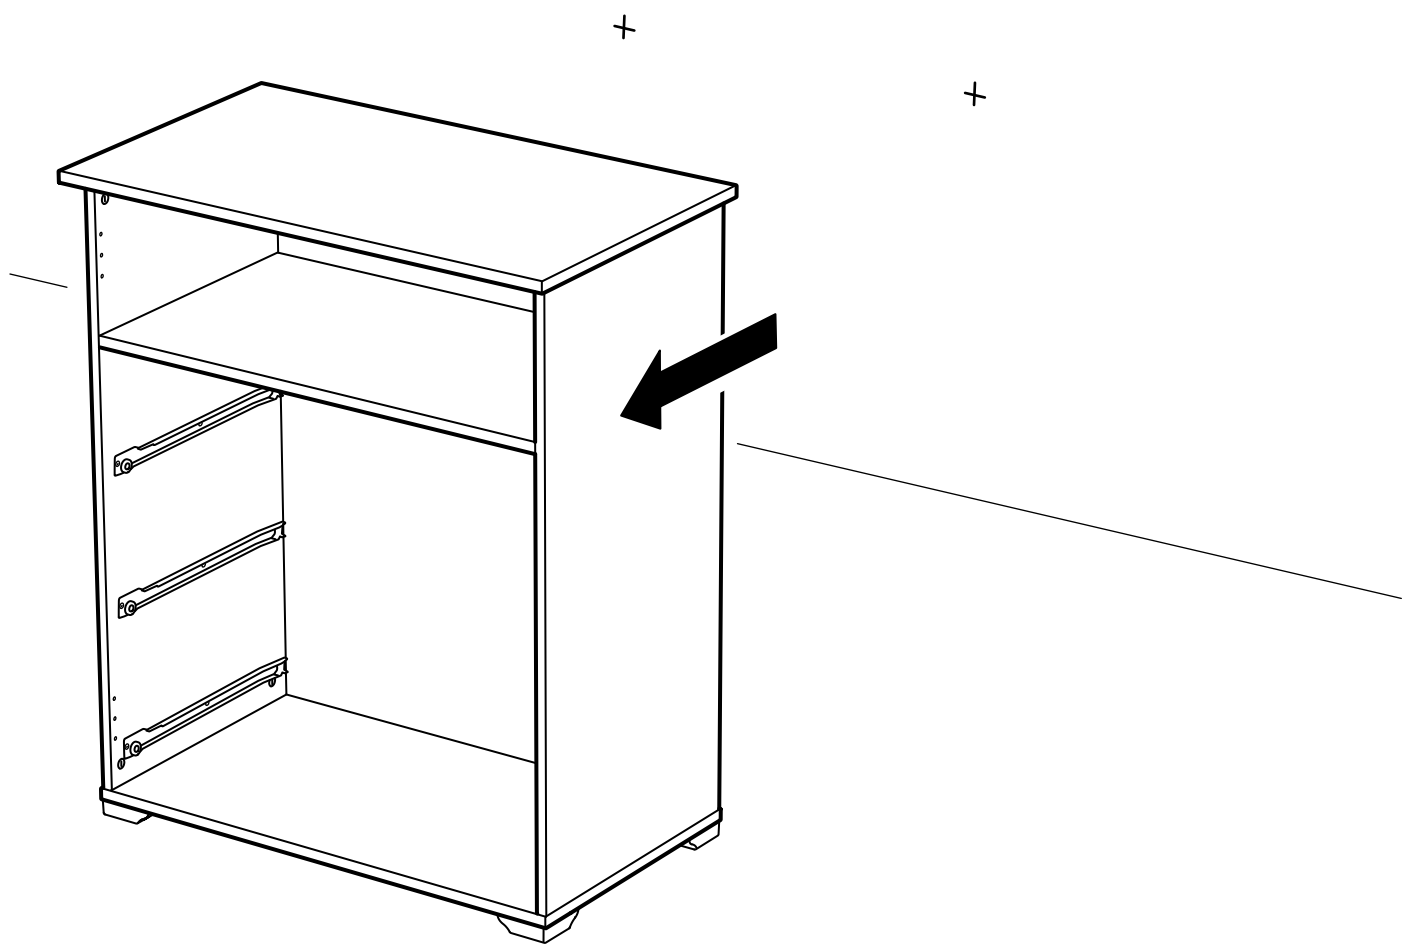 




www.IKEA.com/secure-it

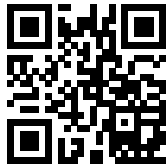 

www.IKEA.cn/secure-it

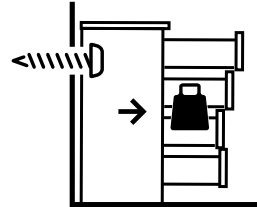 


English

The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

עברית

הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.

 
A

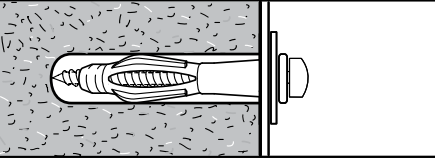


Ø 8 mm
(5/16")



 1




2

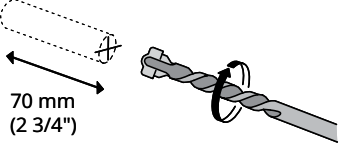 


70 mm
(2 3/4")

 3

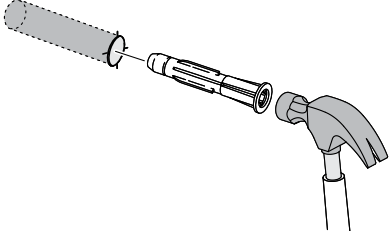


B

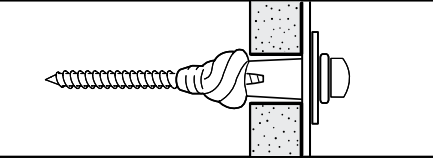 


Ø 8 mm
(5/16")



 1




2

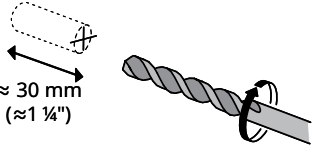 


≈ 30 mm
(≈ 1 1/4")

 3

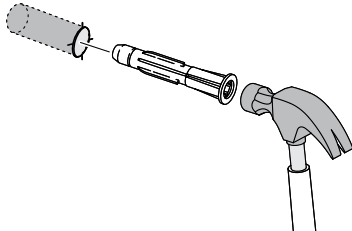

C

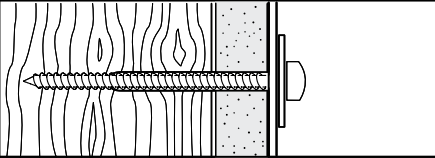 


Ø 3 mm
(1/8")



1




 
2

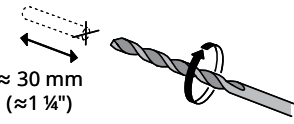


≈ 30 mm
(≈ 1 1/4")

  3




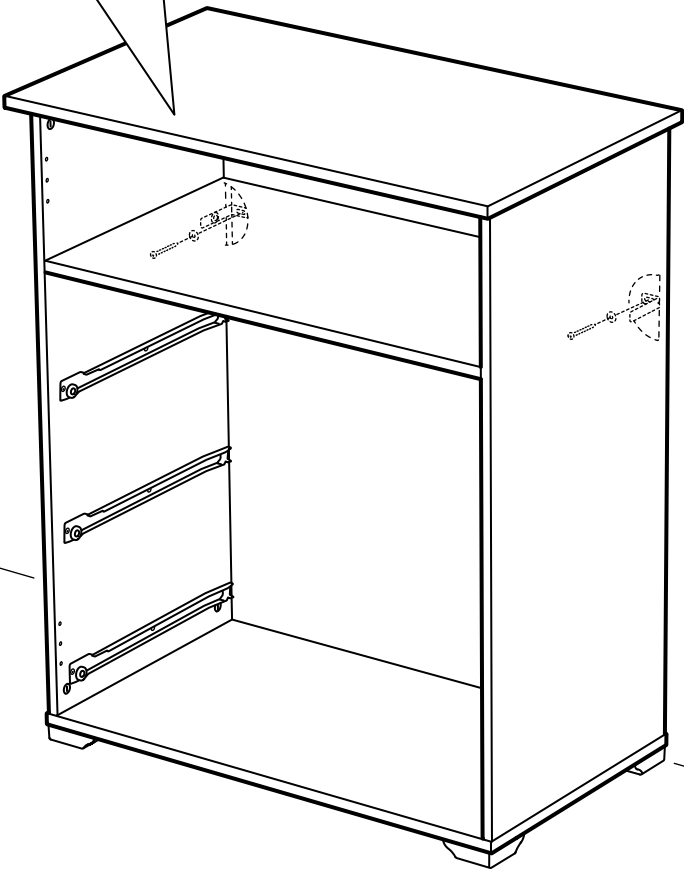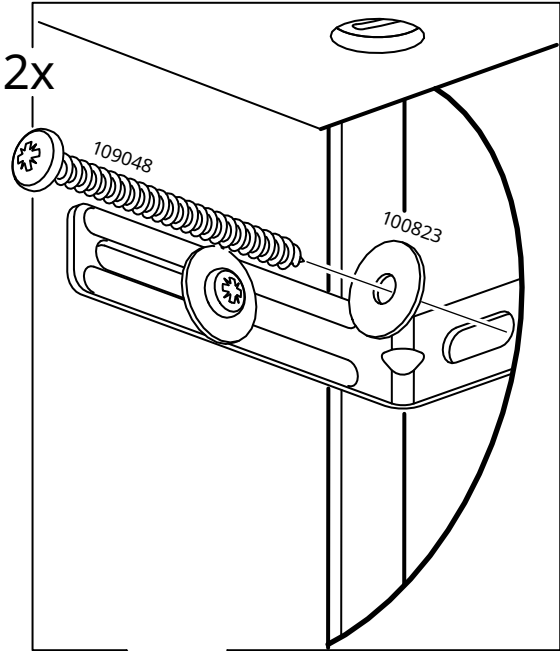


25


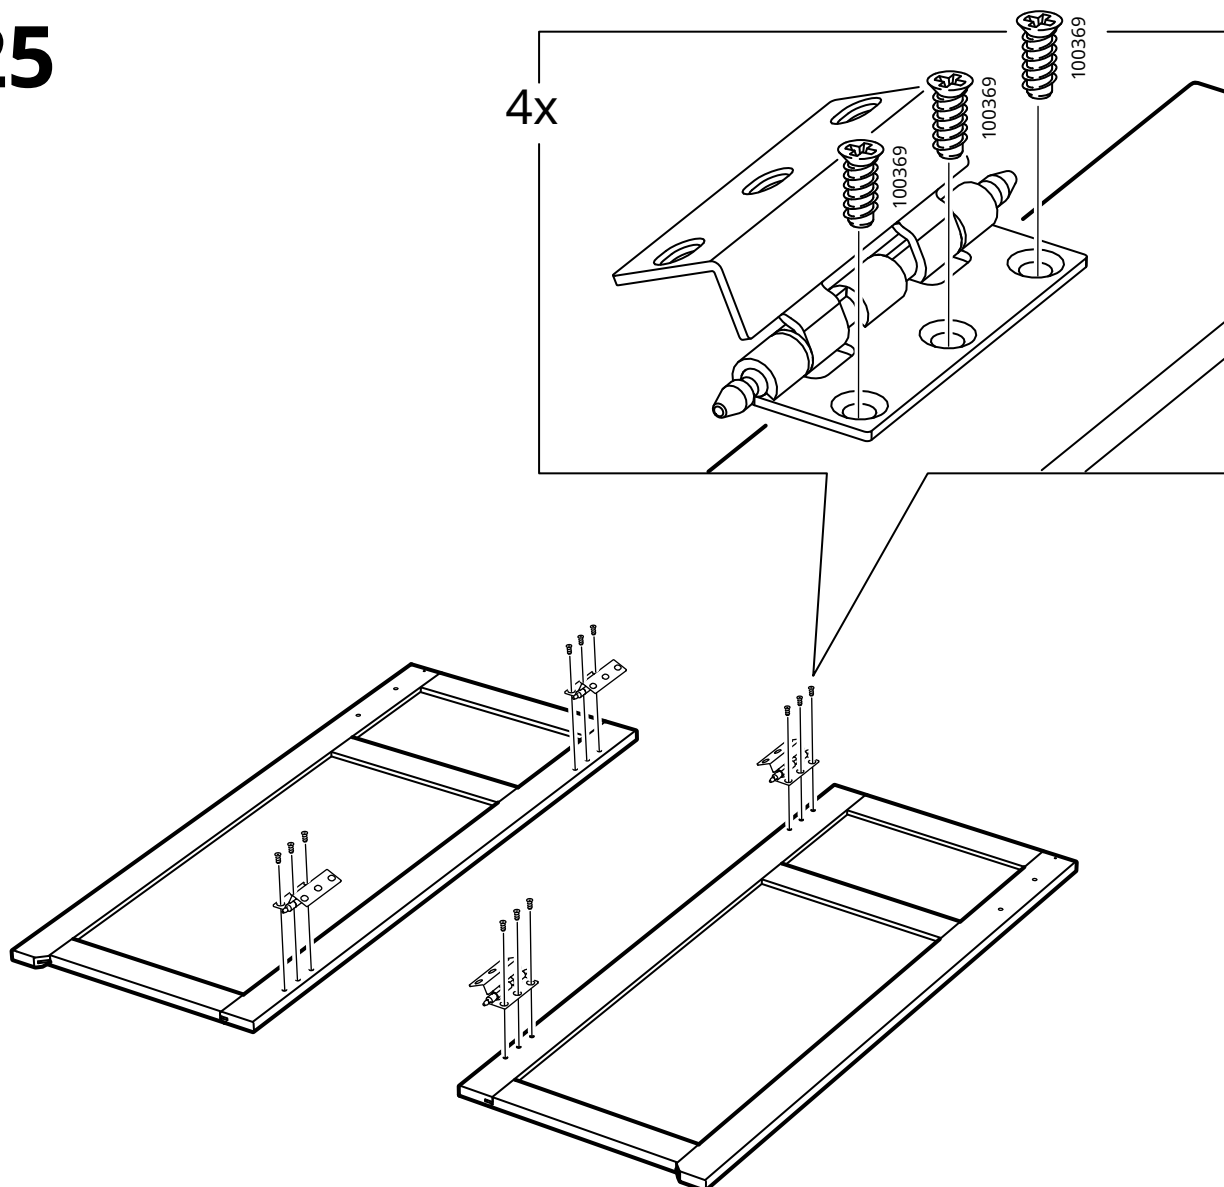 




26

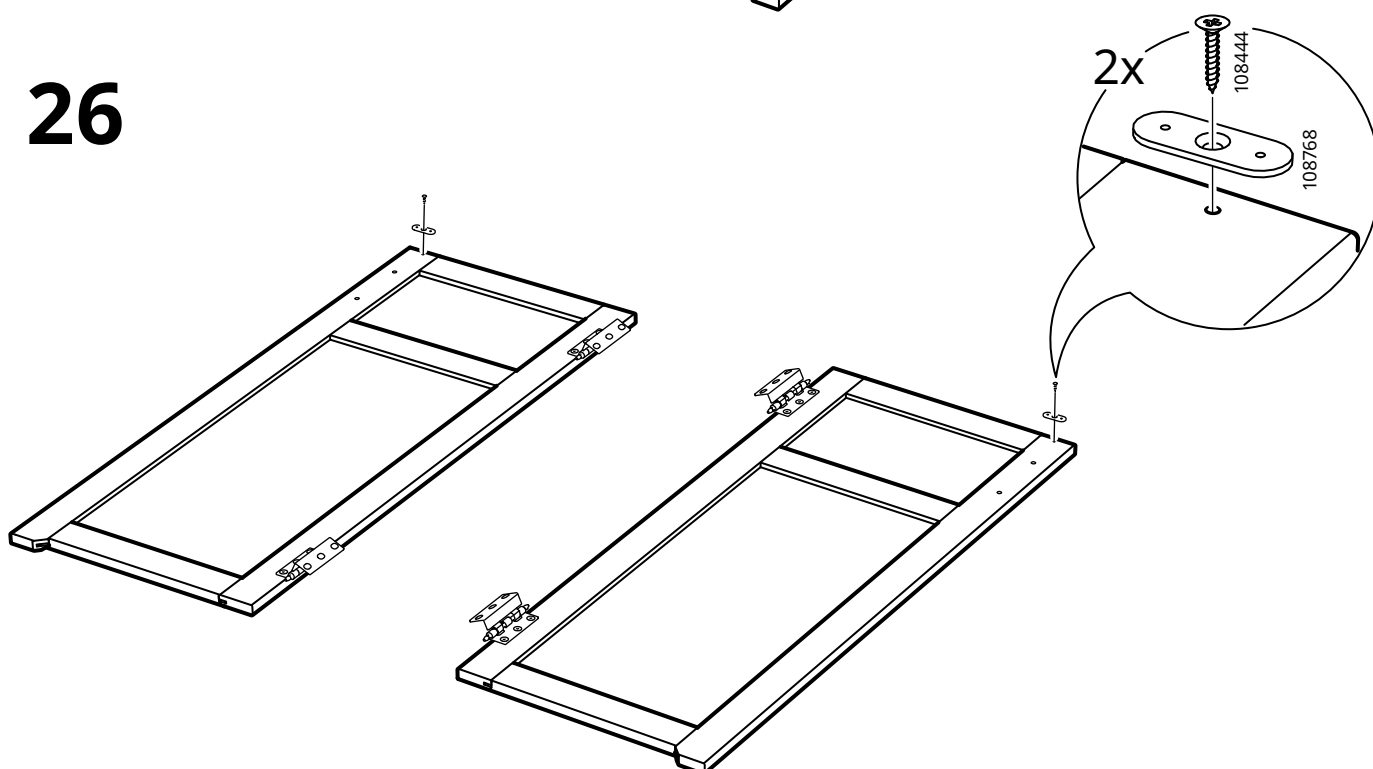 

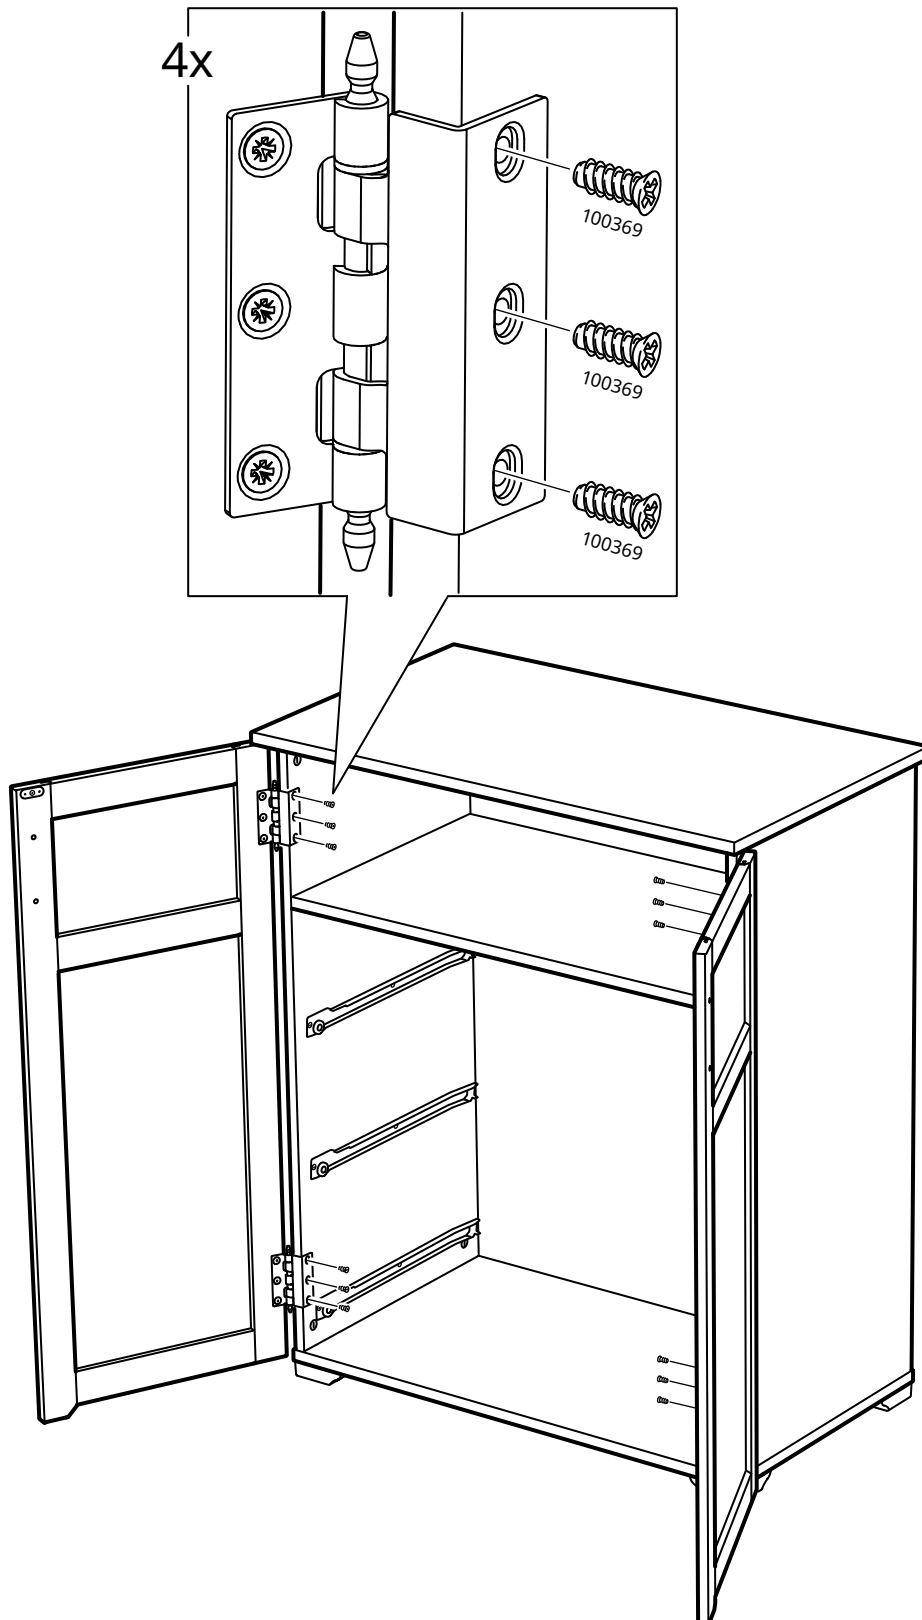 


28

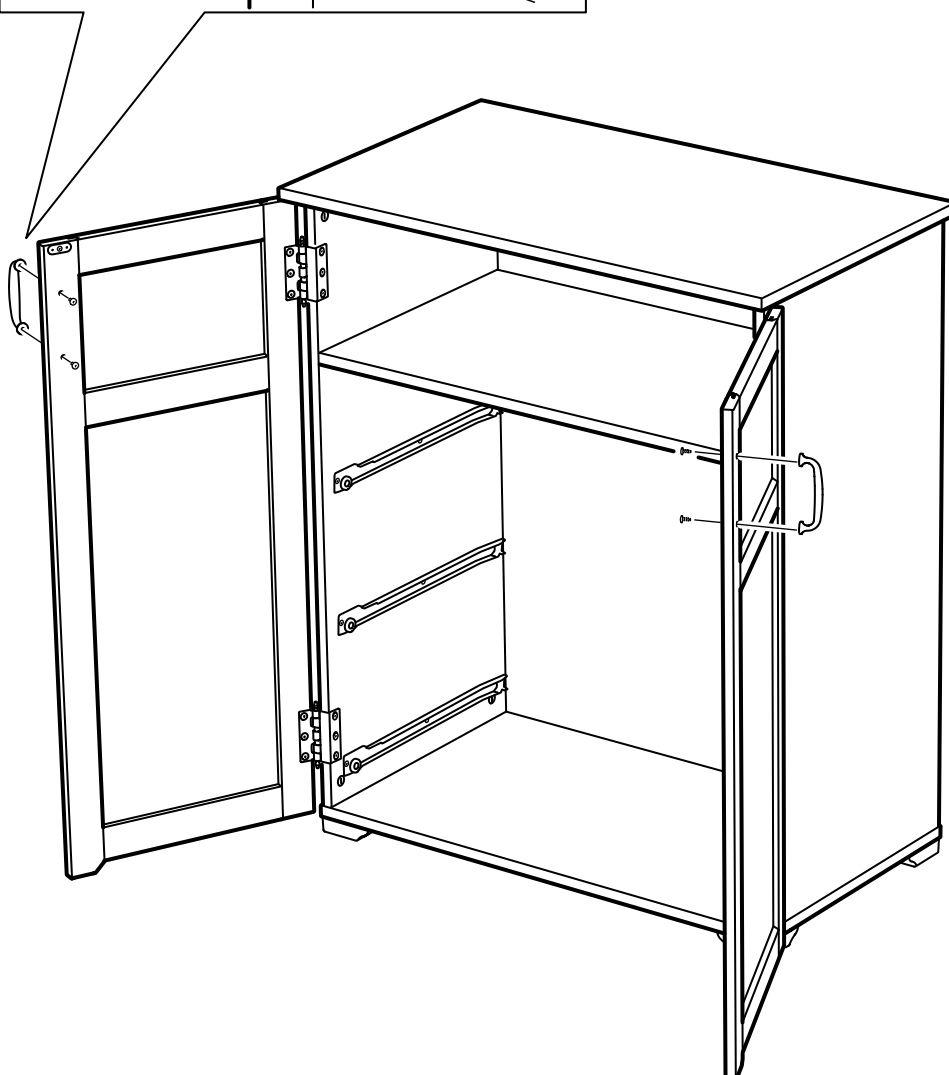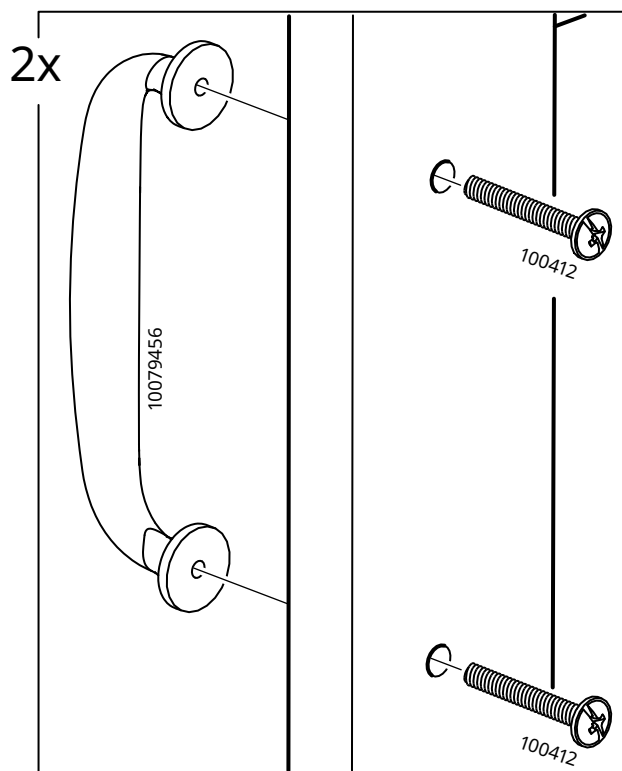  


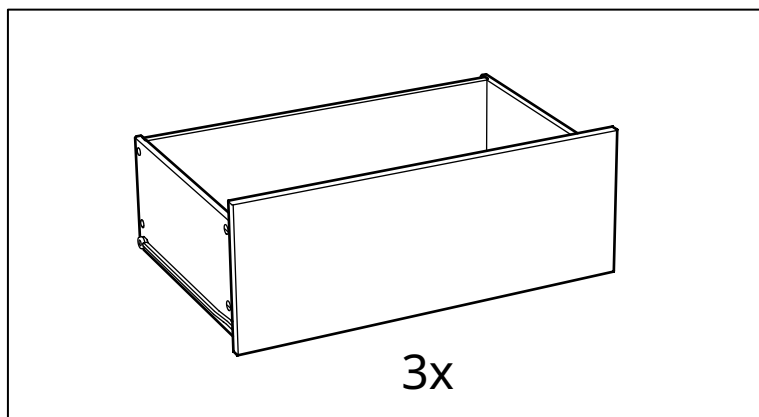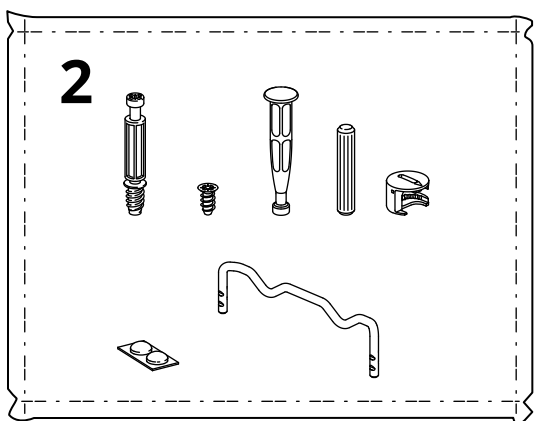  


29

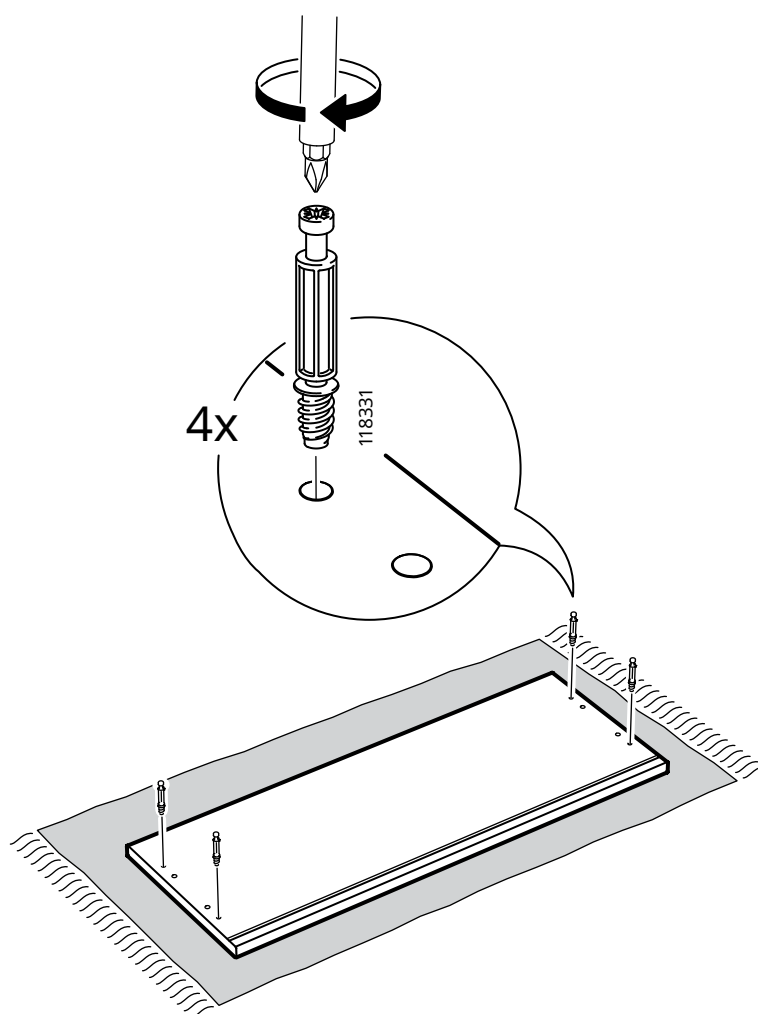 


30

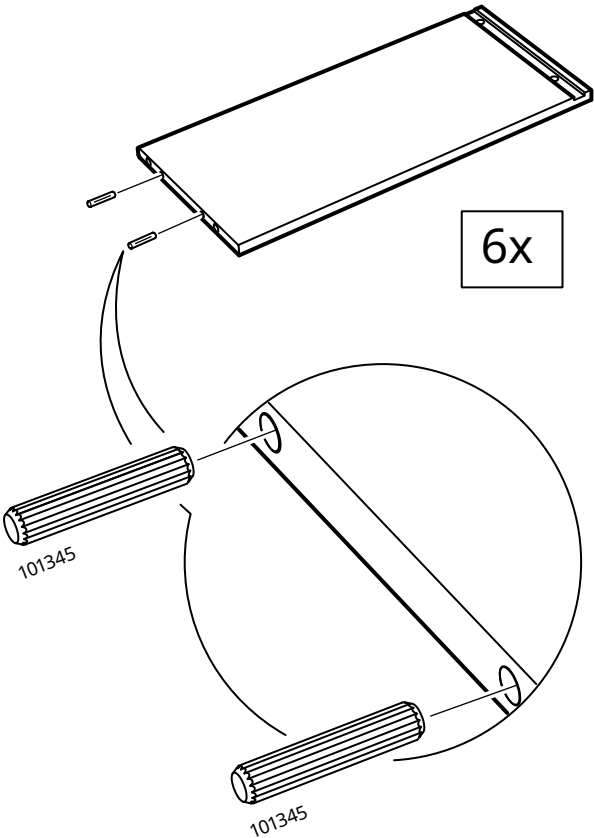 


31

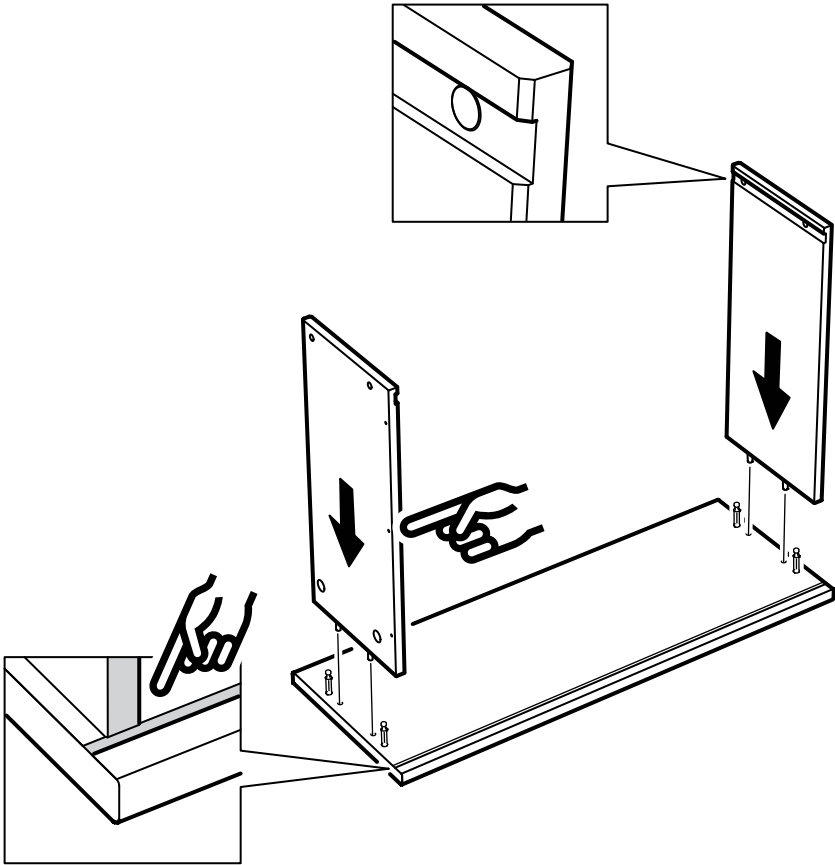 


32

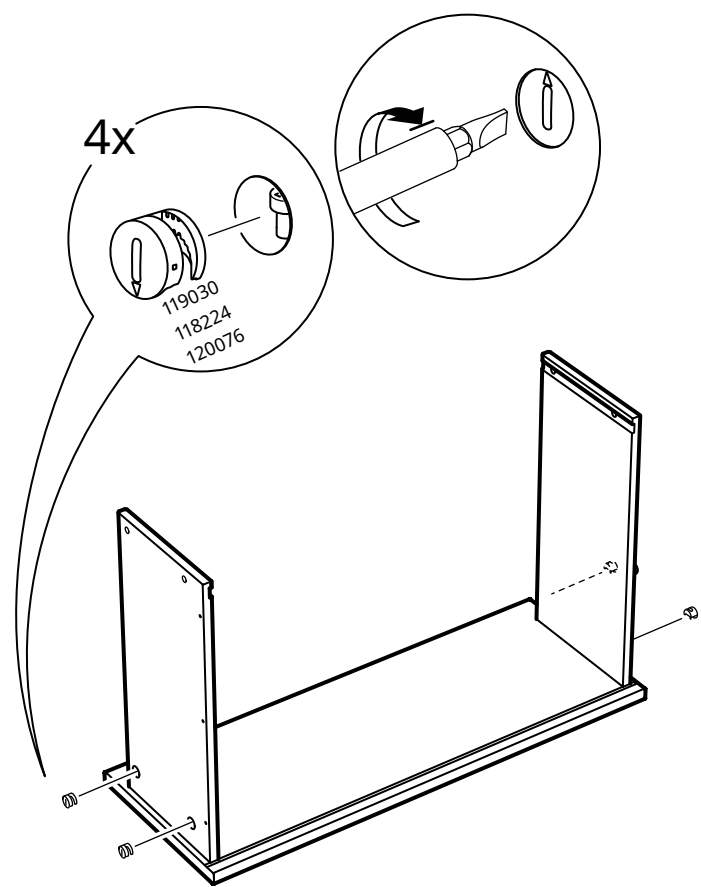 


33

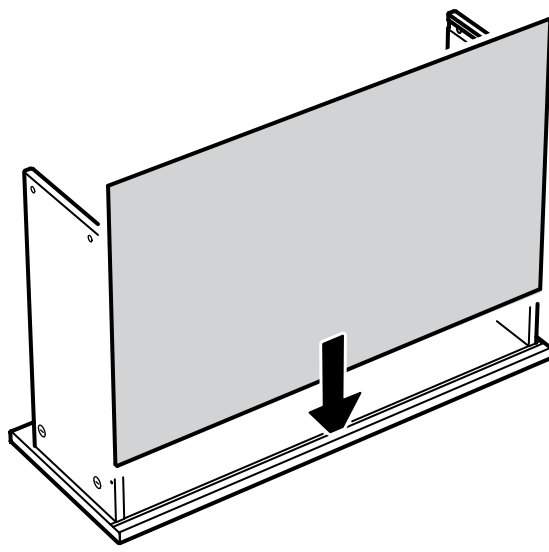 


34

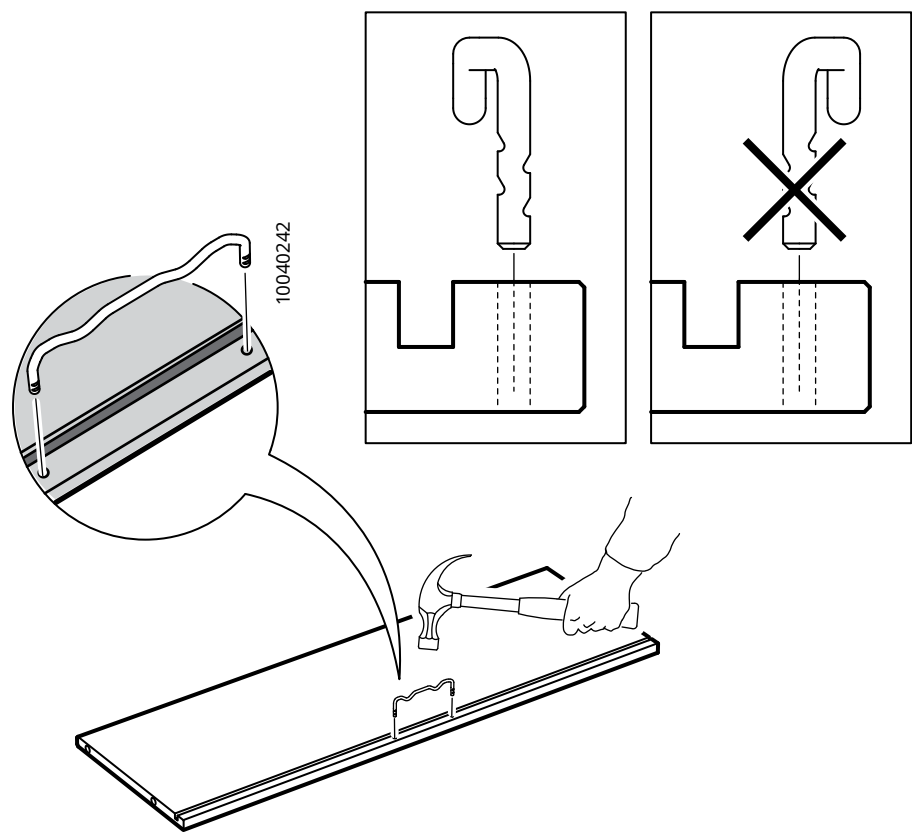 


35

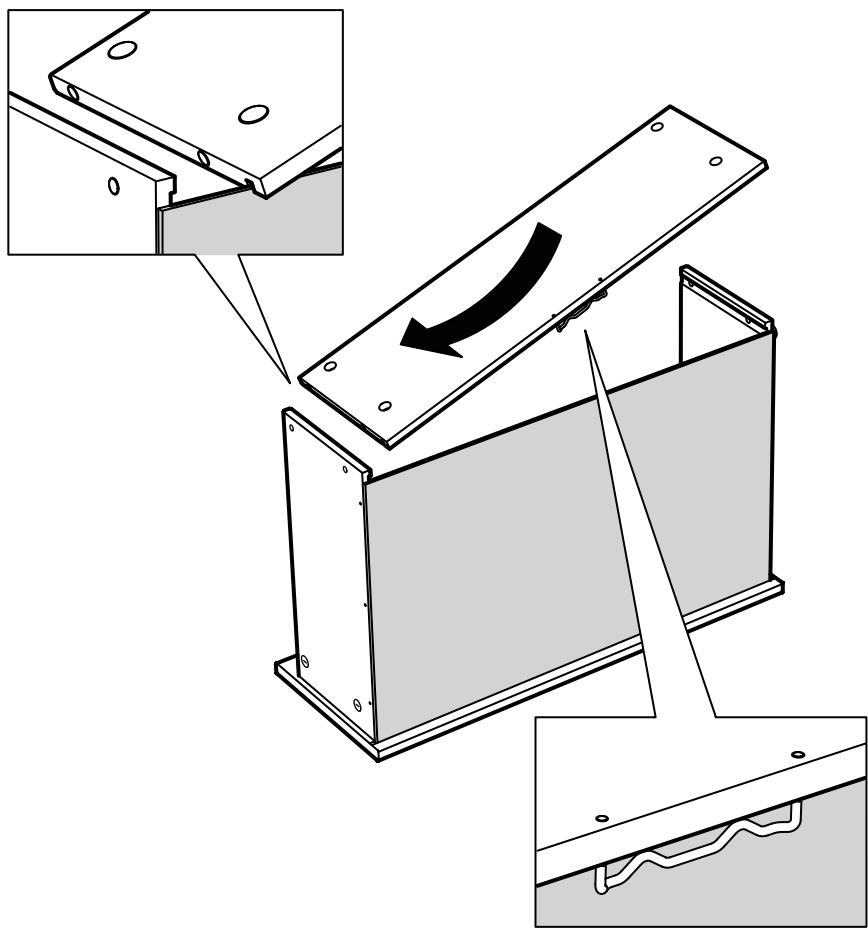 


36

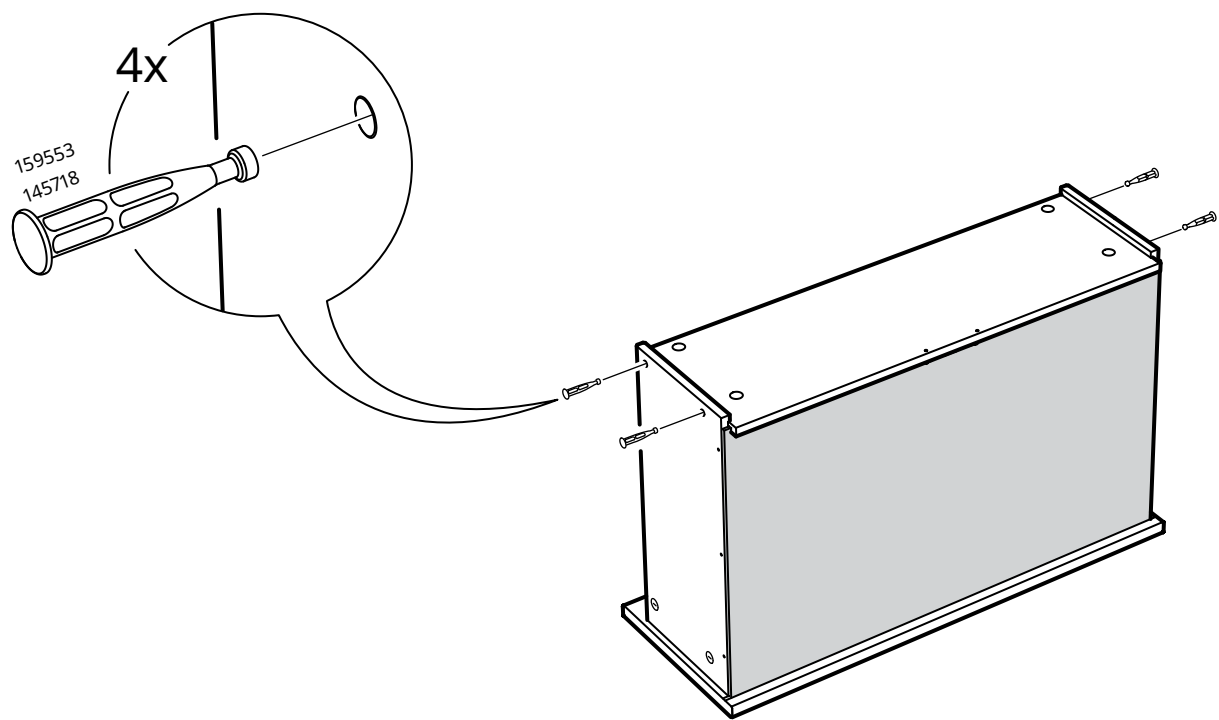 


37

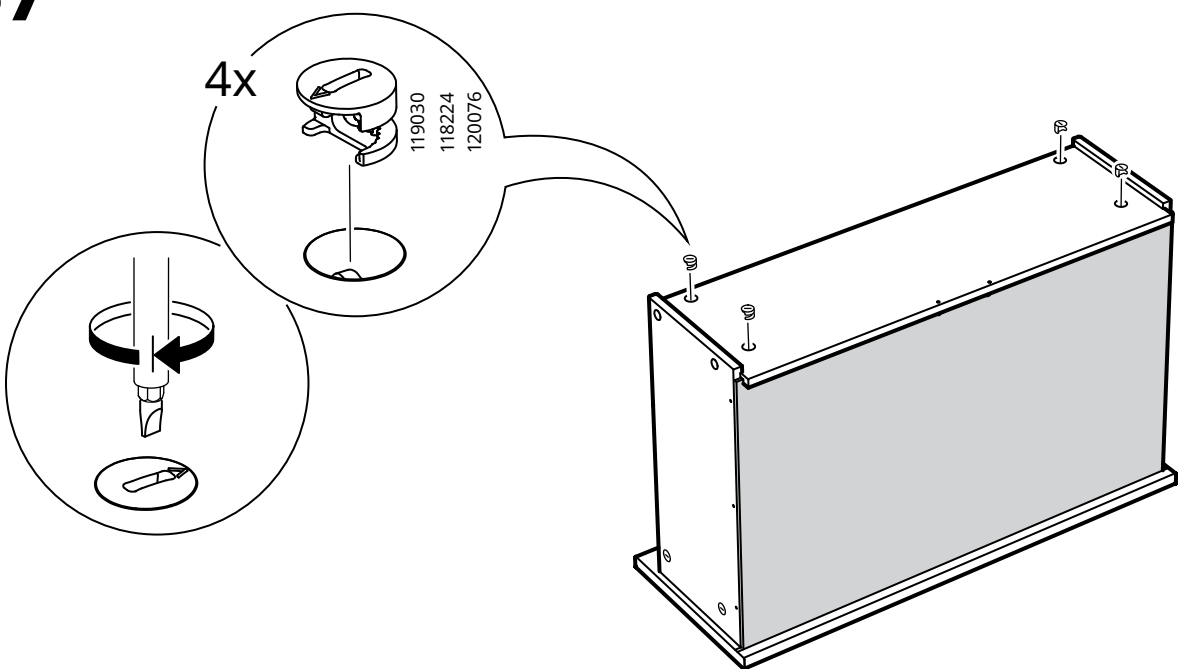 


38

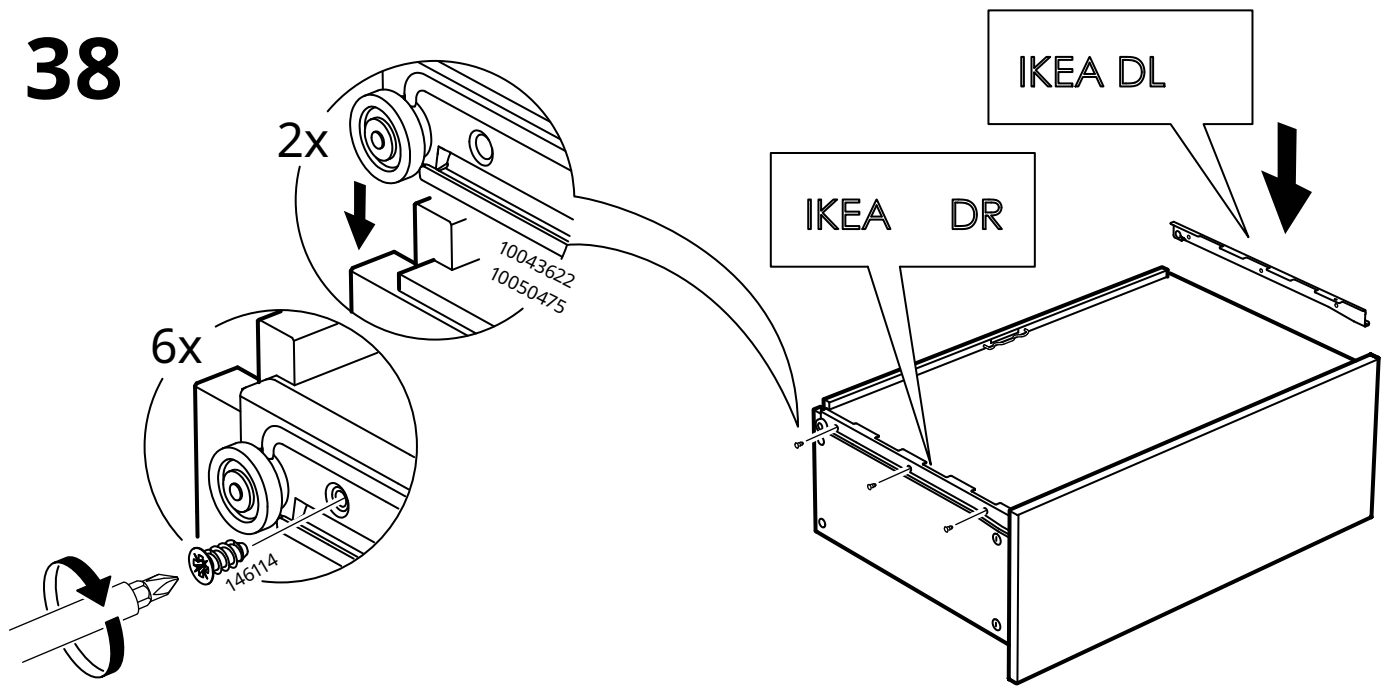 

39

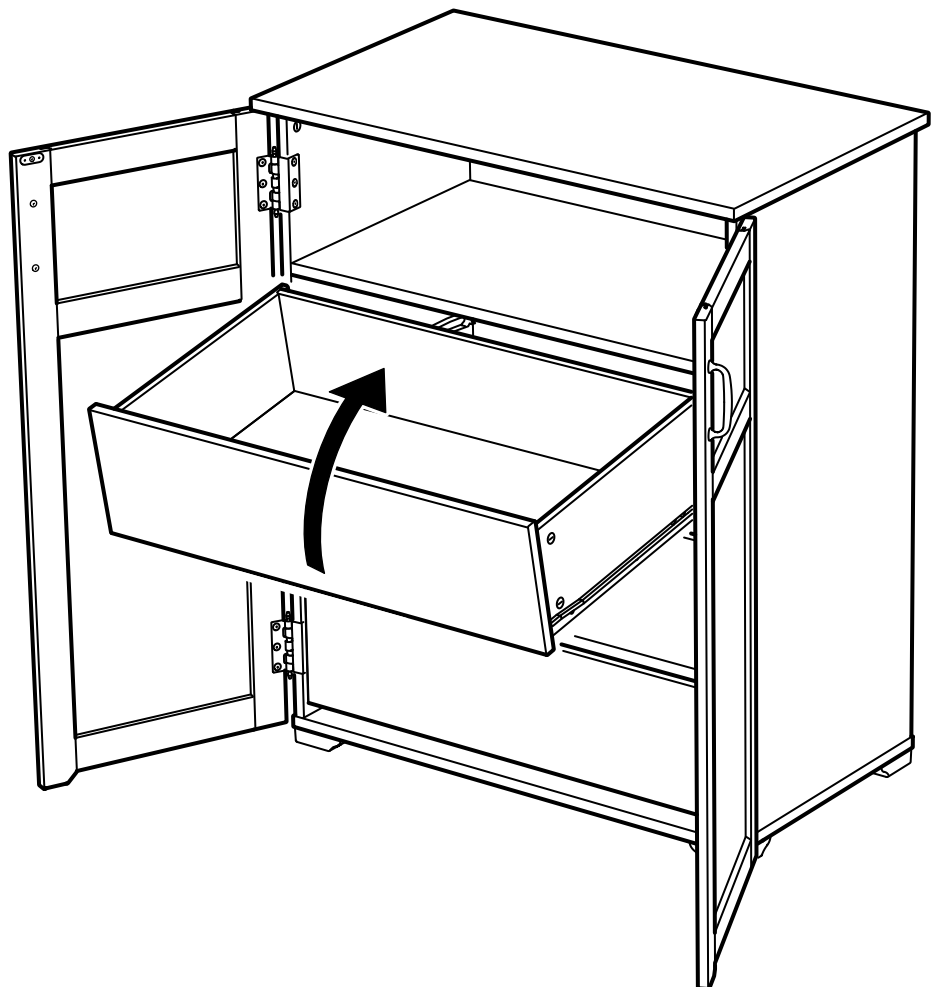 

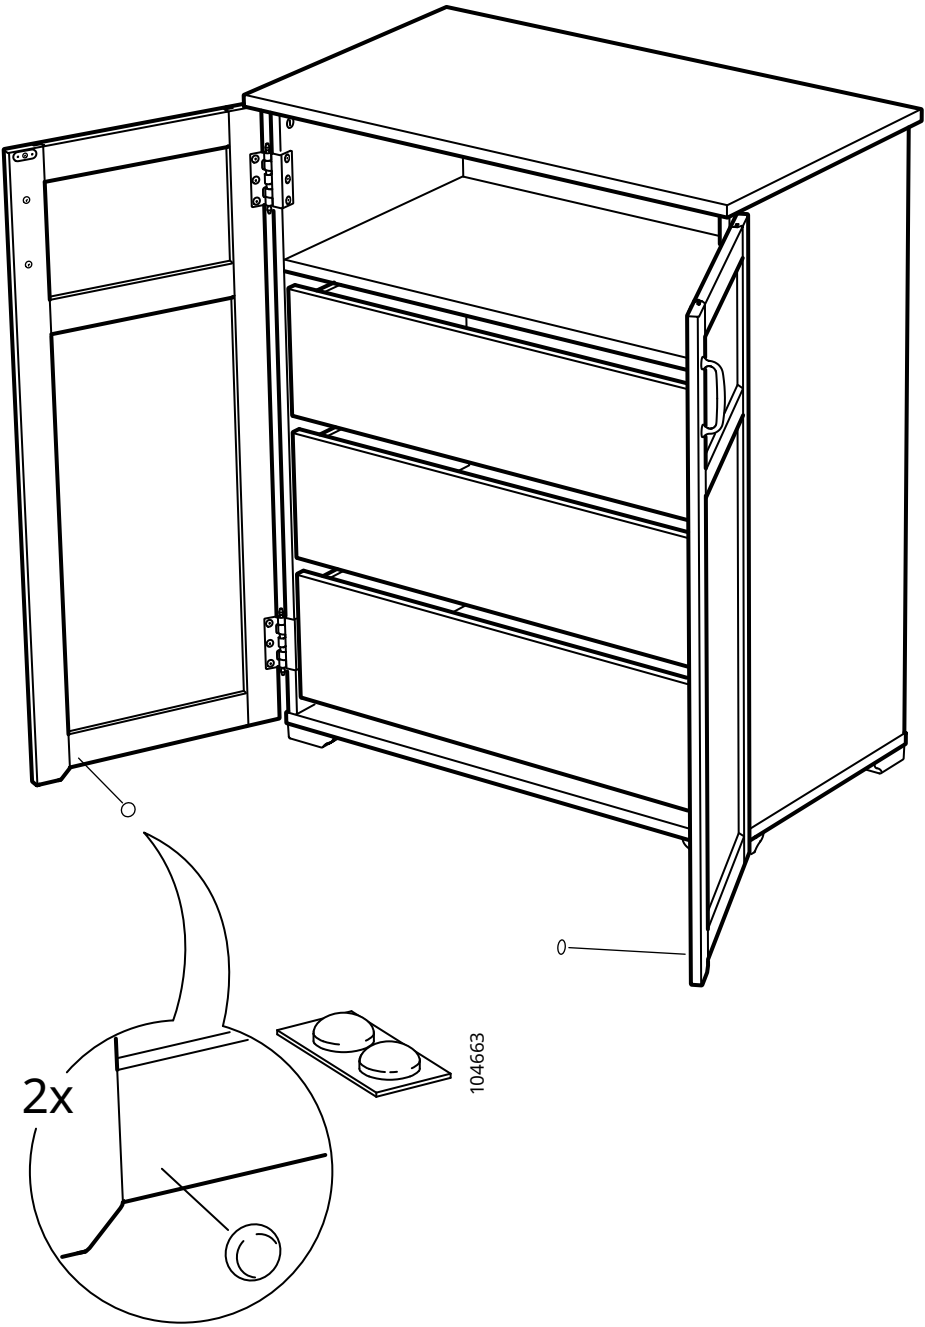 

English

Care and cleaning

Wipe clean with a cloth dampened in a mild cleaner.

Wipe dry with a clean cloth.

עברית

הוראות טיפול וניקוי

נקו בעזרת מטלית וחומר ניקוי נוזלי.

נגבו לייבוש בעזרת מטלית רכה.

