




SYMFONISK

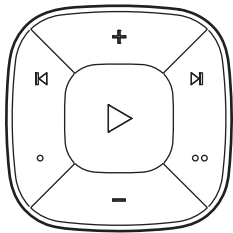


Design and Quality
IKEA of Sweden

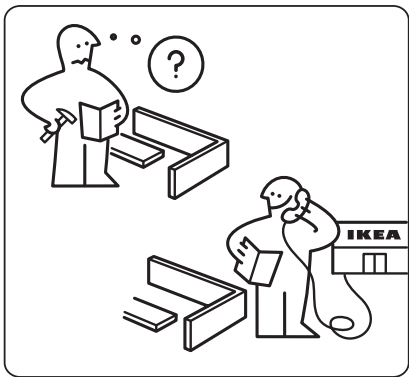

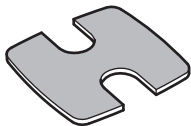


1x

10071830

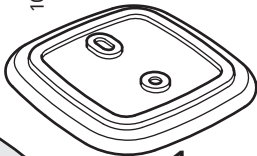

1x

10071829

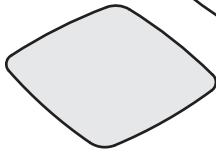

1x



Works with
IKEA Home smart

SYMFONISK



+

DIRIGERA



+

SYMFONISK



Download on the
App Store




GET IT ON
Google Play




Works with
IKEA Home smart

1

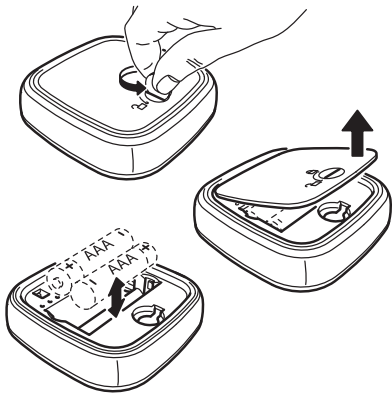




2

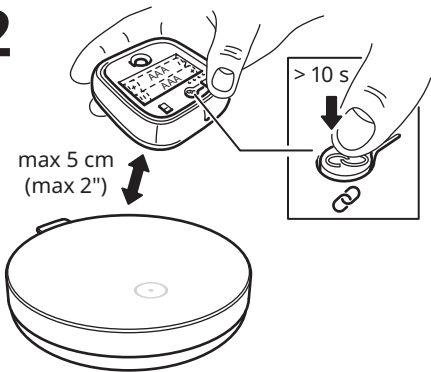


6



3

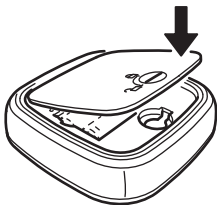

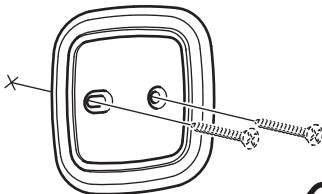



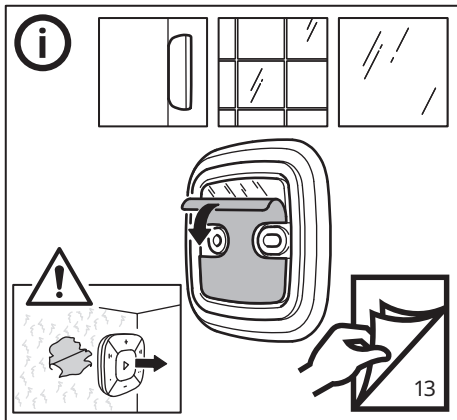


4

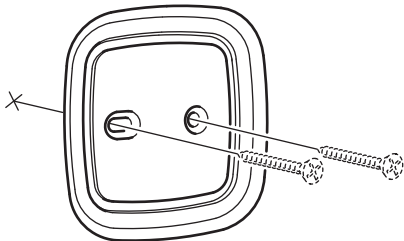

5

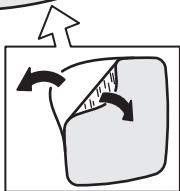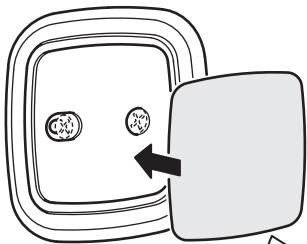


6

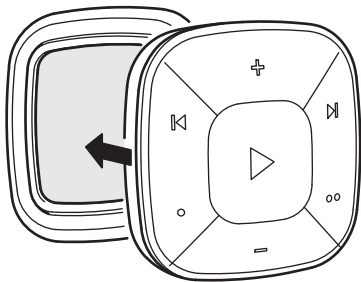

4




5

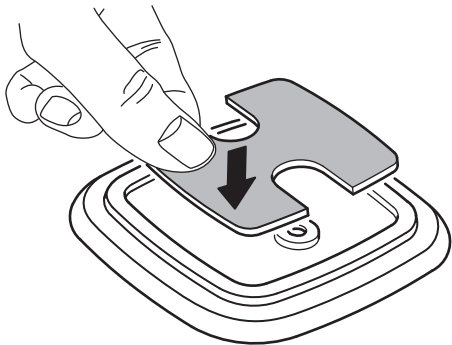


6




7

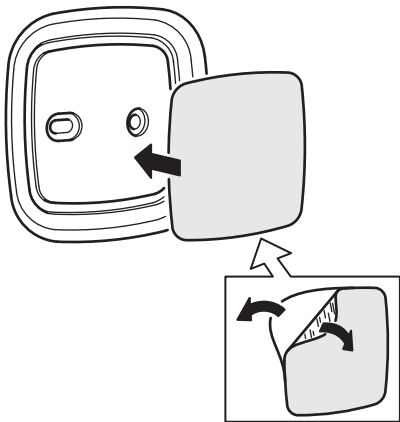



8

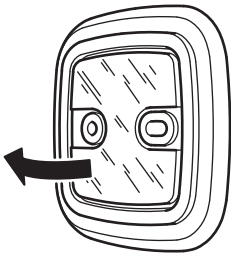



9

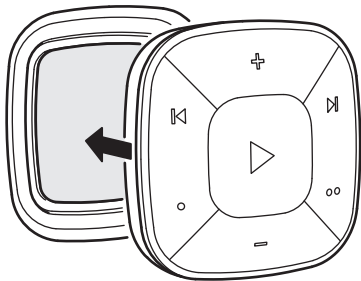


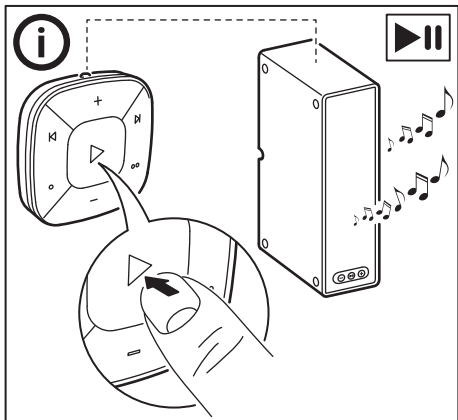


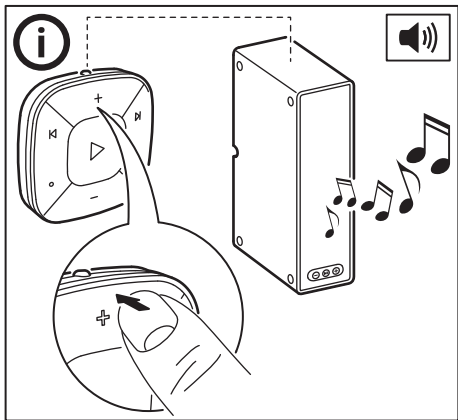

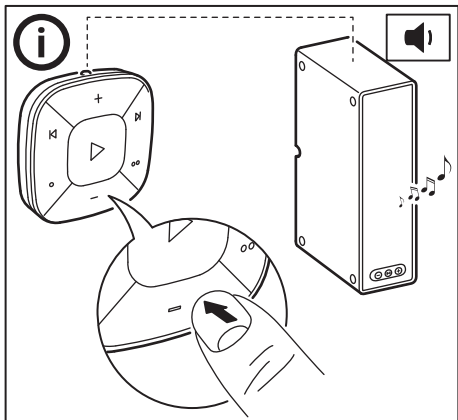

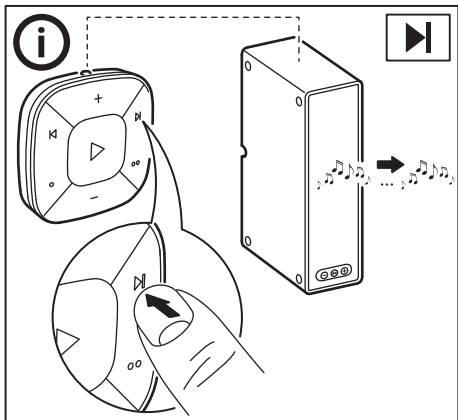

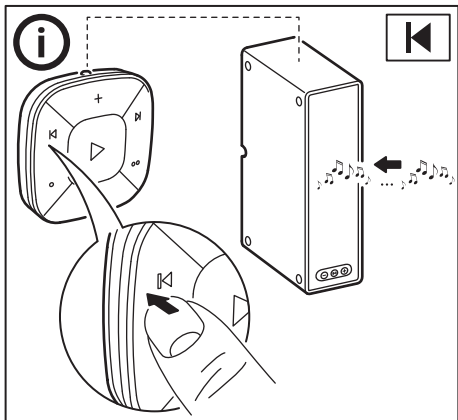

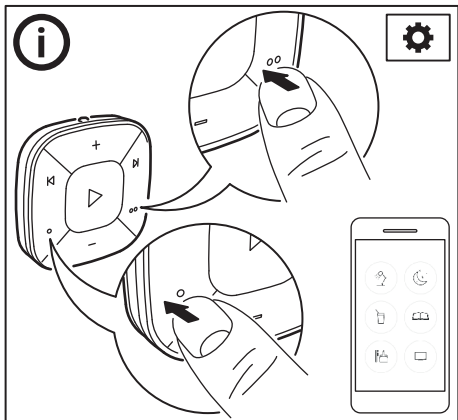

English

26

عربي

33

English

IMPORTANT

SYMFONISK sound remote is made to work together with IKEA gateway or hub and control your SYMFONISK speakers.

Use the IKEA Home smart app to add more functions to your sound remote. You cannot add "Works with IKEA Home smart" marked products directly to your sound remote.

If you have an Apple device

Go to the App Store and download the IKEA Home smart app. The app will take you through the process of installing your SYMFONISK sound remote and other "Works with IKEA Home smart" devices.

If you have an Android device

Go to the Google Play store and download the IKEA Home smart app. The app will take you through the process of installing your SYMFONISK sound remote and other "Works with IKEA Home smart" devices.

Getting started

Insert 2 HR03 AAA 1.2V batteries with correct polarity. Start the IKEA Home smart app and follow the instructions in the app on how to set up your device and add scenes to the shortcut buttons. Close the battery lid and your sound remote is now ready for use.

Sound remote functions



Play/pause

Press once to start or stop the music.



Repeat

Press once to repeat the most recently played music.



Skip

Press once to skip to the next track.



Raise and lower volume

Press and hold to change the volume rapidly.



Shortcut buttons

Used to change the playlist being streamed to the speakers.

Care instructions

EnglishTo clean the sound remote, wipe with a soft moistened cloth, Use another soft, dry cloth to wipe dry.

Changing the batteries

When SYMFONISK sound remote is used regularly and as intended, the batteries will last for approximately 2 years.

When it's time to replace the batteries, the red LED indicator on the back of the sound remote will flash when you use it. Open the battery lid and replace the batteries with 2 new HR03 AAA 1.2V batteries.

WARNING!

Risk of explosion if either battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

IMPORTANT!

- SYMFONISK sound remote is for indoor use only and can be used in temperatures ranging from 0 °C to 40 °C.
- Do not leave SYMFONISK sound remote in direct sunlight or near any heat source, as it may overheat.
- The range between SYMFONISK sound remote and the receiver is measured in open air. Different building materials and placement of the units can affect the wireless connectivity range.

Recommended batteries:

Batteries are sold separately. We recommend 2 x LADDA rechargeable batteries HR03 AAA 1.2V
Do not mix batteries of different capacities, types or date stamps. Save these instructions for future use.

Technical data

Model: SYMFONISK sound remote gen 2

Type: E2123

Input: 2.4V, 2 x LADDA batteries HR03 AAA 1.2V

Range: 10 m unobstructed

For indoor use only

Operating frequency: 2400-2483.5 Mhz

Output power: 3 dBm (EIRP)

Manufacturer: IKEA of Sweden AB

Address: Box 702, SE-343 81 Älmhult, SWEDEN



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

عربي

هام

تم تصميم جهاز التحكم عن بعد الصوتي SYMFONISK للعمل مع وحدة الاتصال أو موزع IKEA والتحكم في سماعات الصوت SYMFONISK الخاصة بك.

استخدم تطبيق IKEA Home smart لإضافة المزيد من الوظائف إلى جهاز التحكم عن بعد الصوتي. لا يمكنك إضافة منتجات تحمل علامة "Works with IKEA Home smart" مباشرة إلى جهاز التحكم عن بعد الصوتي.

إذا كان لديك جهاز أبل

أذهب إلى متجر التطبيقات وقم بتنزيل تطبيق IKEA Home smart. سيرشدك التطبيق خلال عملية تثبيت جهاز التحكم عن بعد الصوتي SYMFONISK وغيره من الأجهزة التي تعمل مع تطبيق إيكيا "Works with IKEA Home smart".

وظائف جهاز التحكم عن بعد الصوتي

تشغيل/إيقاف مؤقت 
اضغط مرة واحدة لبدء أو إيقاف الموسيقى.

كرر العملية 
اضغط مرة واحدة لتكرار أحدث موسيقى تم تشغيلها.

تخطي 
اضغط مرتين للتخطي إلى المسار التالي

رفع الصوت وخفضه 
اضغط مع الاستمرار لتغيير مستوى الصوت بسرعة.

أزرار الاختصار 
تُستخدم لتغيير قائمة التشغيل التي يتم بثها إلى السماعات.

إذا كان لديك جهاز Android

انتقل إلى متجر التطبيقات Google Play وقم بتنزيل تطبيق IKEA Home smart. سيرشدك التطبيق خلال عملية تثبيت جهاز التحكم عن بعد الصوتي SYMFONISK وغيره من الأجهزة التي تعمل مع تطبيق ايكيا "Works with IKEA Home smart".

البدء

أدخل بطاريتين 1.2 AAA HR03 فولط مع مراعاة القطبية الصحيحة. ابدأ تطبيق IKEA Home smart واتبع التعليمات الموجودة في التطبيق حول كيفية إعداد جهازك وإضافة مشاهد إلى أزرار الاختصارات. أغلق غطاء البطارية، سيكون جهاز التحكم عن بعد الصوتي جاهز للاستخدام الآن.

تحذير!

عريخطر حدوث انفجار إذا تم استبدال أي من البطاريتين بنوع غير صحيح. تخلص من البطاريات المستعملة حسب التعليمات.

هام!

- جهاز التحكم عن بعد الصوتي SYMFONISK مخصص للاستخدام الداخلي فقط ويمكن استخدامه في درجات حرارة تتراوح من 0 درجة مئوية إلى 40 درجة مئوية.
- لا تترك جهاز التحكم SYMFONISK تحت ضوء الشمس المباشر أو بالقرب من أي مصدر حرارة، لأنه قد يسخن.
- يقاس النطاق بين جهاز التحكم عن بعد الصوتي SYMFONISK وجهاز الاستقبال في الهواء الطلق. يمكن أن تؤثر مواد البناء المختلفة ومكان الوحدات على نطاق الاتصال اللاسلكي.

تم إعداد المشاهد في تطبيق IKEA Home smart على جهازك الذكي.

تعليمات العناية

عري لتتنظيف جهاز التحكم عن بعد الصوتي، امسح بقطعة قماش ناعمة ومبللة، استخدم قطعة قماش أخرى ناعمة وجافة للتنشيف.

تغيير البطاريات

عند استخدام جهاز التحكم عن بعد الصوتي SYMFONISK بانتظام وكما هو مقصود، ستستمر البطاريات لمدة عامين تقريبًا.

عندما يحين وقت استبدال البطاريات، سيومض مؤشر LED الأحمر في الجزء الخلفي من جهاز التحكم عن بُعد عند استخدامه. افتح غطاء البطارية واستبدل البطاريات ببطاريتين جديدتين AAA HR03 بقوة 1,2 فولط.

الشركة المصنعة: ايكيا السويد AB

العنوان: Box 702, SE-343 81 Älmhult, SWEDEN



عربيالرمز الذي يُظهر حاوية نفايات مشطوبة يشير إلى أنه يجب التخلص من المنتج بشكل منفصل عن النفايات المنزلية. ينبغي تسليم هذا المنتج لإعادة تدويره وفقاً للأنظمة البيئية المحلية للتخلص من النفايات. من خلال قيامك بفصل منتج يحمل هذه العلامة من النفايات المنزلية، فسوف تساعد على تقليل حجم النفايات التي ترسل إلى المحارق أو تدفن في الأرض وبالتالي تقللي من أي تأثير سلبي محتمل على صحة الإنسان والبيئة. لمزيد من المعلومات، يرجى الاتصال على معرض ايكيا.

البطاريات الموصى بها:

تباع البطاريات على حدة. نوصي باستخدام بطاريتين LADDA قابلتين لإعادة الشحن HR03 AAA 1.2V لا تَخلط بطاريات جديدة وقديمة أو أنواع مختلفة من البطاريات معاً.

احفظ هذه التعليمات لاستخدامها في المستقبل.

البيانات الفنية

الطراز: SYMFONISK جهاز تحكم صوتي الجيل الثاني

النوع: E2123

الدخل: 2.4 فولط، 2 × بطاريات LADDA HR03 AAA 1.2V

النطاق: 10 م دون عائق

للاستخدام الداخلي فقط

تردد التشغيل: 2400-2483.5 ميجاهرتز

طاقة الخرج: 3 ديسيبل (EIRP)

