


# GETKÅL

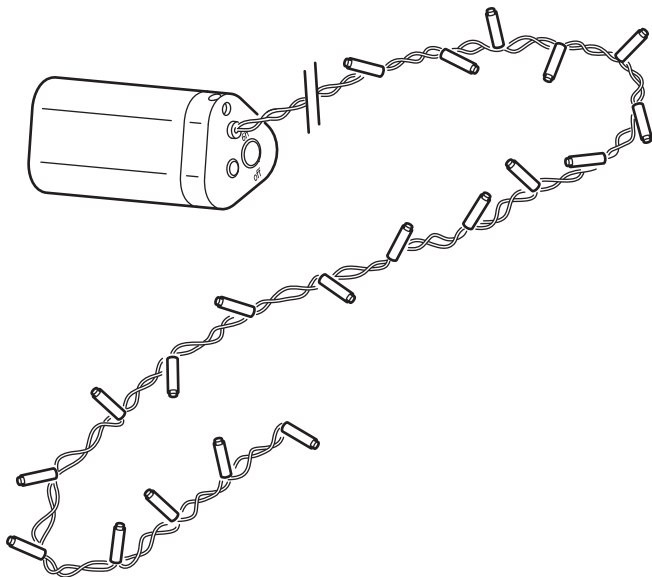

Design and Quality  
IKEA of Sweden

**English**

ALWAYS REMOVE THE BATTERIES BEFORE STORING.

**English**

WARNING – THIS LIGHTING CHAIN MUST NOT BE USED WITHOUT ALL GASKETS BEING IN PLACE.

**English**

CAUTION! Strangulation hazard. Hang out of reach of young children.

**English**

The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

**English**

The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.

**English**

Only use batteries that are intended for the product. Do not mix old and new batteries, different brands or types.

**עברית**

הקפידו להוציא את הסוללות לפני האחסון.

**עברית**

אזהרה - אין להשתמש בשרשרת תאורה זו מבלי שכל האטמים יהיו מאובטחים כראוי.

**עברית**

אזהרה! סכנת חנק. תלו הרחק מהישג ידם של ילדים.

**עברית**


נורת המנורה אינה ניתנת להחלפה; יש להחליף את המנורה כולה כאשר הנורה מגיעה לסוף חייה.

**עברית**


הכבל המחובר לגוף תאורה זה אינו ניתן להחלפה; במידה ונגרם נזק לכבל, יש להשליך את המוצר כולו.

**עברית**


השתמשו רק בסוג הסוללה שצוין עבור מוצר זה. אין לערבב סוללות ישנות וחדשות או סוללות מסוגים או מותגים שונים.

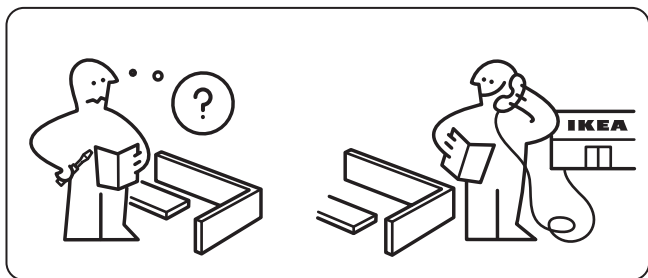




1

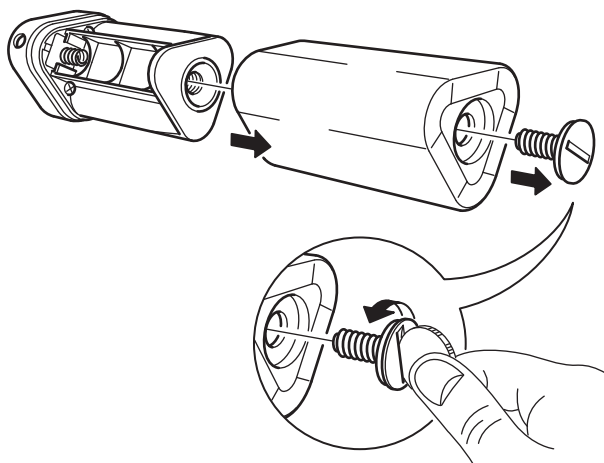


2

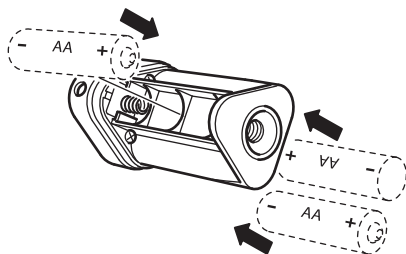

3

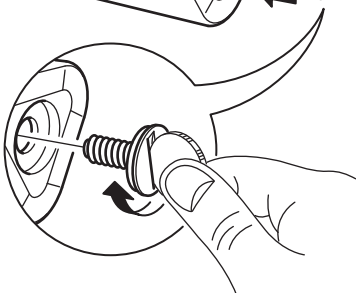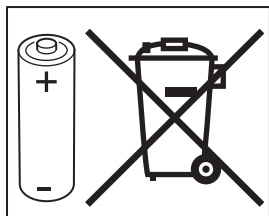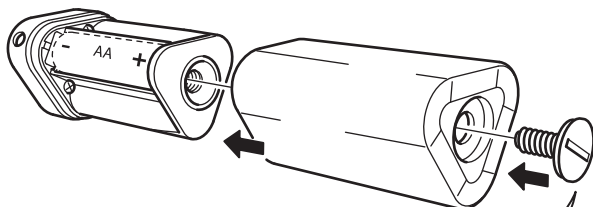

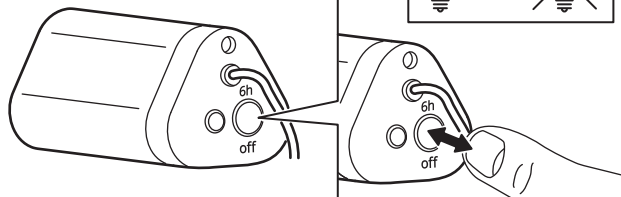

### English

The timer switches the light off automatically after 6 hours, and switches it back on at the same time next day.

### עברית

הטיימר מכבה את האור באופן אוטומטי לאחר 6 שעות ומדליק אותו שוב למחרת באותה השעה.

