


GETKÅL

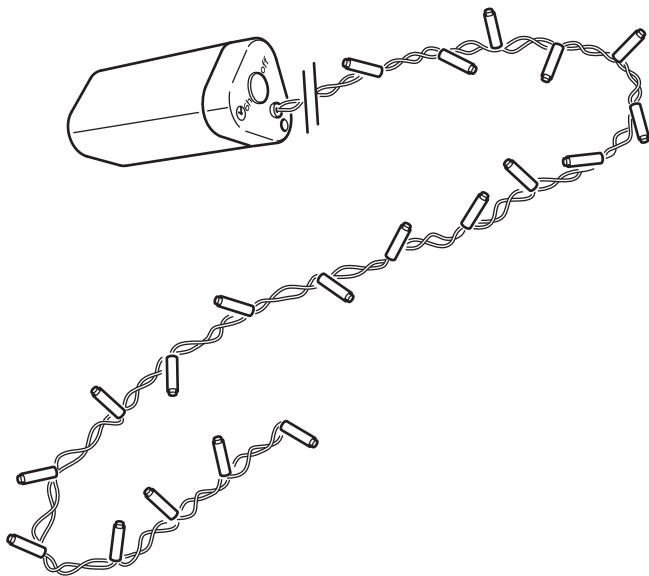

Design and Quality
IKEA of Sweden

**English**

ALWAYS REMOVE THE BATTERIES
BEFORE STORING.

English

WARNING – THIS LIGHTING CHAIN
MUST NOT BE USED WITHOUT ALL
GASKETS BEING IN PLACE.

English

CAUTION! Strangulation hazard.
Hang out of reach of young
children.

English

The light source of this luminaire
is not replaceable; when the light
source reaches its end of life the
whole luminaire shall be replaced.

English

The external flexible cable or
cord of this luminaire cannot be
replaced; if the cord is damaged,
the luminaire shall be destroyed.

English

Only use batteries that are
intended for the product. Do
not mix old and new batteries,
different brands or types.

עברית

הקפידו להוציא את הסוללות לפני
האחסון.

עברית

אזהרה - אין להשתמש בשרשרת תאורה
זו מבלי שכל האטמים יהיו מאובטחים
כראוי.

עברית

אזהרה! סכנת חנק. תלו הרחק מהישג
ידם של ילדים.

עברית


נורת המנורה אינה ניתנת להחלפה; יש
להחליף את המנורה כולה כאשר הנורה
מגיעה לסוף חייה.

עברית


הכבל המחובר לגוף תאורה זה אינו ניתן
להחלפה; במידה ונגרם נזק לכבל, יש
להשליך את המוצר כולו.

עברית


השתמשו רק בסוג הסוללה שצוין עבור
מוצר זה. אין לערבב סוללות ישנות
וחדשות או סוללות מסוגים או מותגים
שונים.

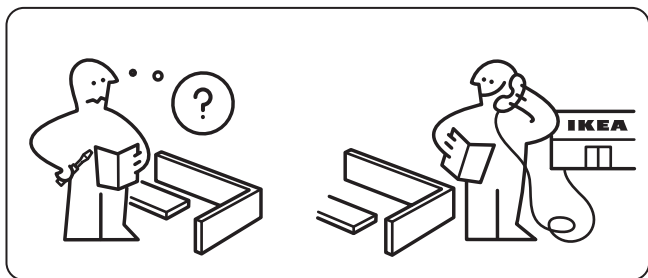




1


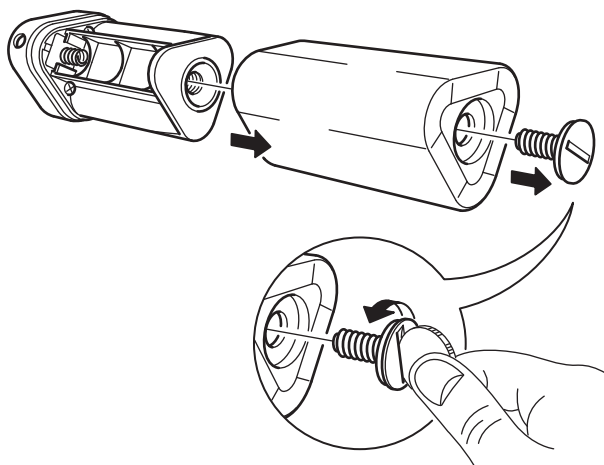


2

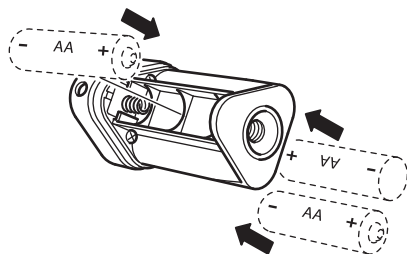

3

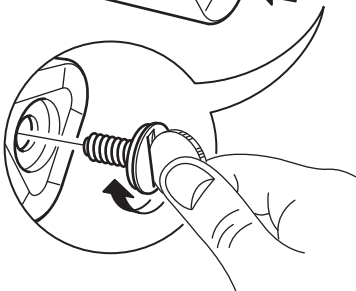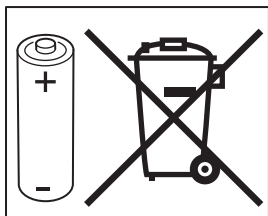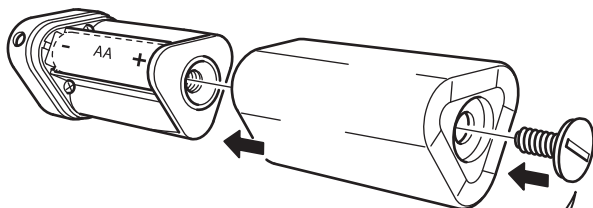

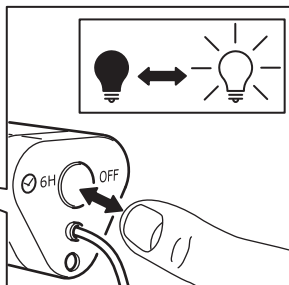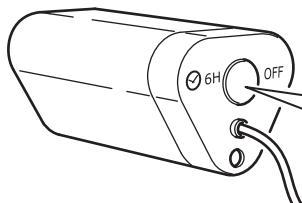

English

The timer switches the light off automatically after 6 hours, and switches it back on at the same time next day.

עברית

הטיימר מכבה את האור באופן אוטומטי לאחר 6 שעות ומדליק אותו שוב למחרת באותה השעה.

