


KNÖLTÅNG

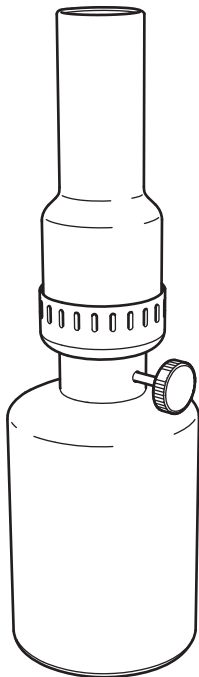

Design and Quality
IKEA of Sweden

**English**

For indoor use only.

English

ALWAYS REMOVE THE BATTERIES BEFORE STORING.

English

The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

English

Only use batteries that are intended for the product. Do not mix old and new batteries, different brands or types.

English

Keep away from children.

עברית

מתאים לשימוש בתוך הבית בלבד.

עברית

הקפידו להוציא את הסוללות לפני האחסון.

עברית



נורת המנורה אינה ניתנת להחלפה; יש להחליף את המנורה כולה כאשר הנורה מגיעה לסוף חייה.


עברית

השתמשו רק בסוג הסוללה שצוין עבור מוצר זה. אין לערבב סוללות ישנות וחדשות או סוללות מסוגים או מותגים שונים.

עברית

הרחיקו מהישג ידם של ילדים.

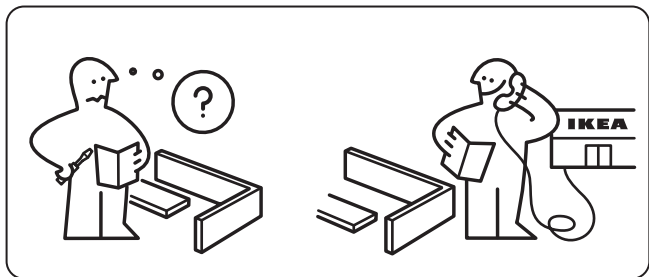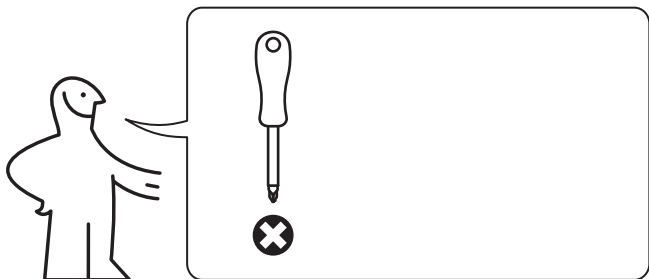

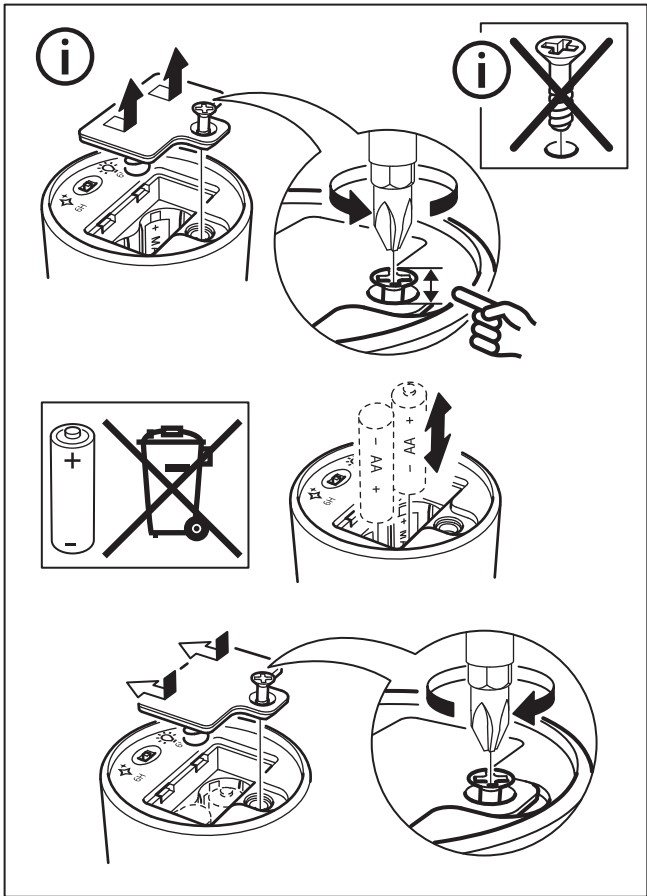




English





Batteries are sold separately. IKEA recommends LADDA rechargeable battery 2450 mAh HR6 AA 1.2V. 2 pieces required.




עברית





סוללות נמכרות בנפרד. איקאה ממליצה על סוללה נטענת LADDA מסוג HR6 AA 1.2V 2450 mAh. נדרשות 2 סוללות.

1

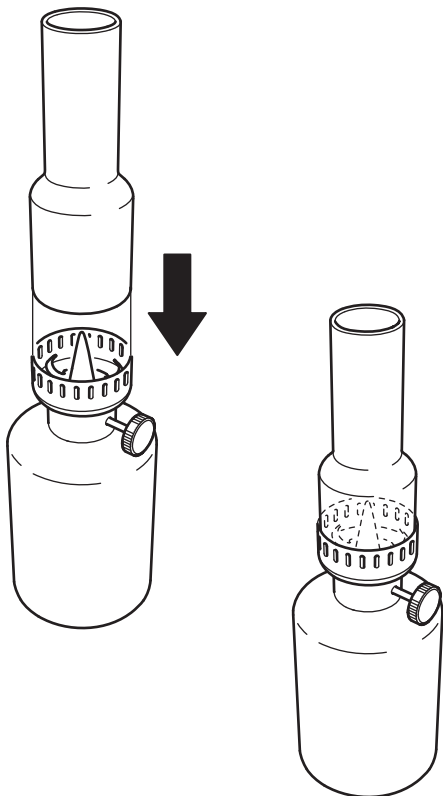

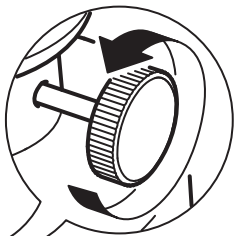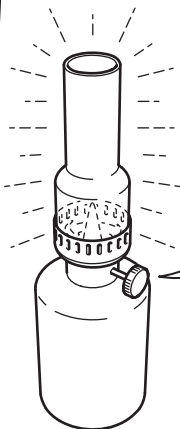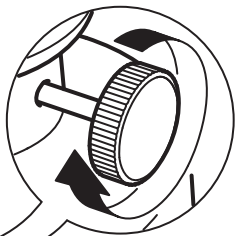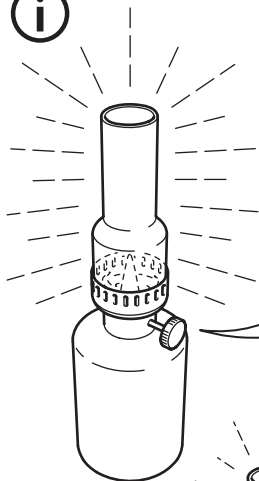

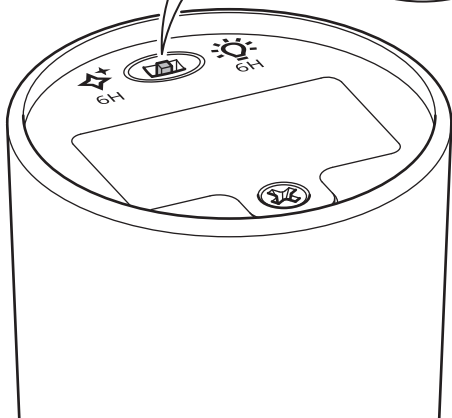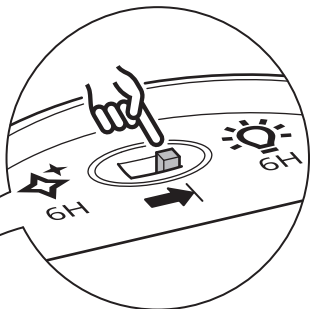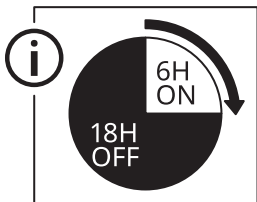

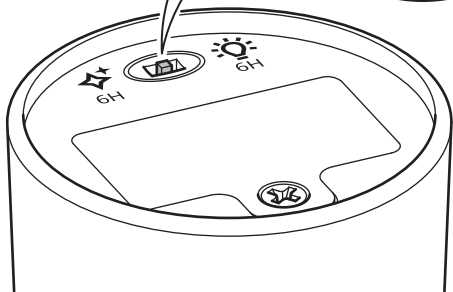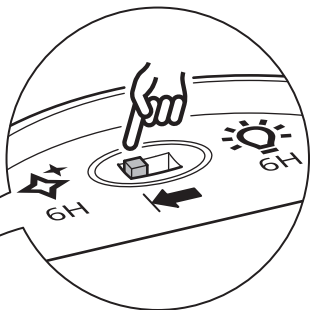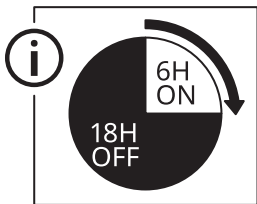



English

The built-in timer is pre-set for the light to stay on for 6 hours. It will then automatically turn off for 18 hours before it turns back on again.

עברית

טיימר המובנה מוגדר להפעיל את התאורה ל-6 שעות. לאחר מכן האור יכבה אוטומטית ל-18 שעות, ויידלק שוב מחדש ביום שלמחרת.