


KUSTFYR

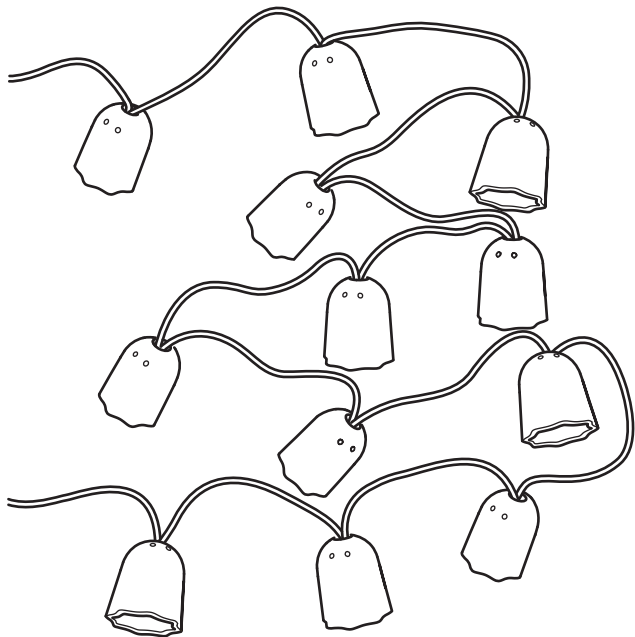

Design and Quality
IKEA of Sweden

**English**

FOR INDOOR & OUTDOOR USE!

English

ALWAYS REMOVE THE BATTERIES
BEFORE STORING.

English

CAUTION! Strangulation hazard.
Hang out of reach of young
children.

English

For lighting chains which rely on
gaskets to provide the specified
degree of protection against dust,
solid objects and moisture:
Warning – this lighting chain must
not be used without all gaskets
being in place.

English

The light source of this luminaire
is not replaceable; when the light
source reaches its end of life the
whole luminaire shall be replaced.

English

The external flexible cable or
cord of this luminaire cannot be
replaced; if the cord is damaged,
the luminaire shall be destroyed.

English

Warning! The supply terminals
must not be short-circuited.

English

Non-rechargeable batteries are
not to be recharged.

English

Keep batteries out of reach of
children and animals.

English

Fire or explosion can result from
the use of the incorrect battery.

English

Do not connect the chain to the
supply while it is in the packing.

English

Only use batteries that are
intended for the product. Do
not mix old and new batteries,
different brands or types.



עברית

לשימוש בתוך ומחוץ לבית!

עברית

הקפידו להוציא את הסוללות לפני האחסון.

עברית

אזהרה! סכנת חנק. תלו הרחק מהישג ידם של ילדים.

עברית

האטמים של שרשראות תאורה נועדו לספק רמת הגנה מסוימת מפני אבק, חפצים מוצקים ולחות:
אזהרה - אין להשתמש בשרשרת תאורה זו מבלי שכל האטמים יהיו מאובטחים כראוי.

עברית

נורת המנורה אינה ניתנת להחלפה; יש להחליף את המנורה כולה כאשר הנורה מגיעה לסוף חייה.

עברית

הכבל המחובר לגוף תאורה זה אינו ניתן להחלפה; במידה ונגרם נזק לכבל, יש להשליך את המוצר כולו.

עברית

אזהרה! אין לגרום לקצר מכון בנקודות החיבור.

עברית

אין לנסות ולטעון מחדש סוללות שאינן מיועדות לטעינה.

עברית

הרחיקו את הסוללות מהישג ידם של ילדים ובעלי חיים.

עברית


אזהרה - שימוש בסוללה מסוג שאינו מתאים עלול לגרום לפיצוץ או לשריפה.

עברית


אין לחבר את שרשרת התאורה לרשת החשמל כאשר היא עדיין באריזתה.

עברית


השתמשו רק בסוג הסוללה שצוין עבור מוצר זה. אין לערבב סוללות ישנות וחדשות או סוללות מסוגים או מותגים שונים.

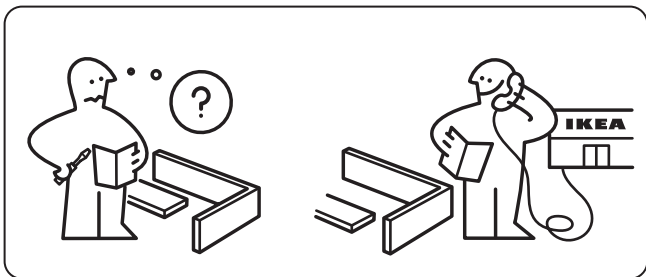




1

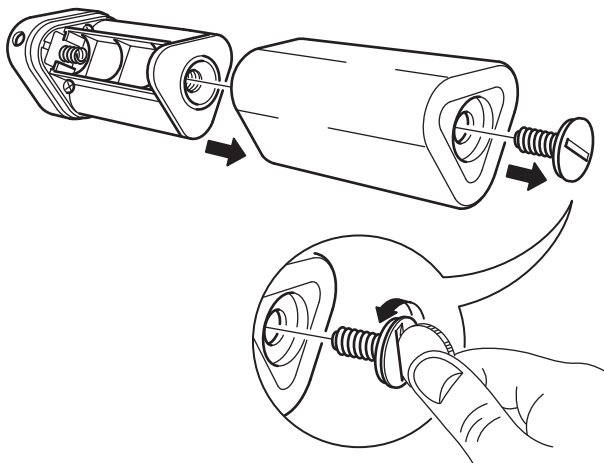


2

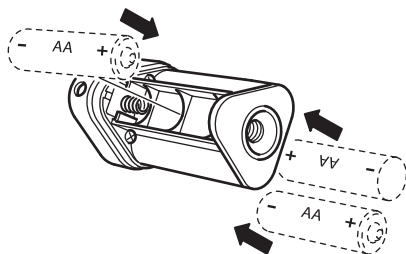

3

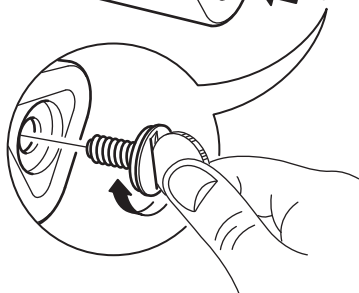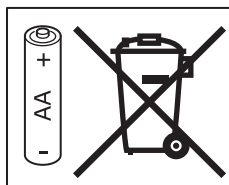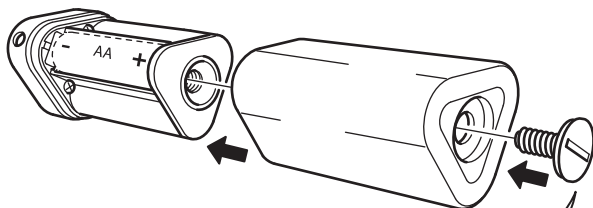

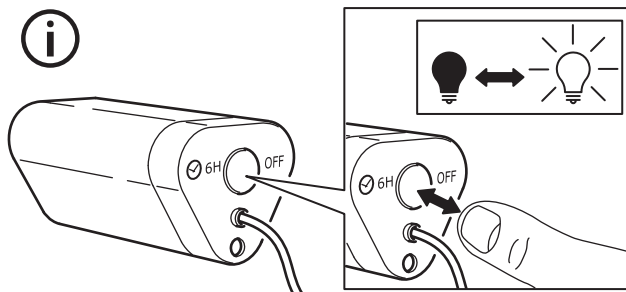

English

The timer switches the light off automatically after 6 hours, and switches it back on at the same time next day.

עברית

הטיימר מכבה את האור באופן אוטומטי לאחר 6 שעות ומדליק אותו שוב למחרת באותה השעה.