


# ICBL7.2-18-USBC-B1



Design and Quality  
IKEA of Sweden



1

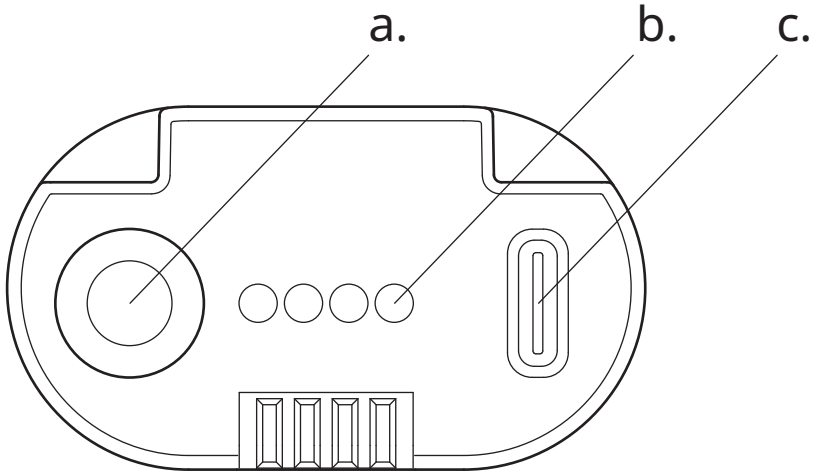

2

- ● ● ● 75% - 100%
- ● ● ○ 50% - 75%
- ● ○ ○ 25% - 50%
- ○ ○ ○ 0% - 25%

**English**

**5**

**עברית**

**6**

## English

**We recommend reading and keeping all documentation for future reference.**

### Product description

The rechargeable battery pack is designed to power battery-operated products from IKEA. The battery pack can be replaced with RÖDHAJ battery pack, available at IKEA.

### Charging instructions

Important! The battery pack needs to be charged if the main battery-operated product is used for the first time or hasn't been used for a long time.

The battery pack can be charged when it is inside the battery-operated product, or it can be taken out and charged separately:

- Connect the product to a power adapter with a USB-C cable.
- Remove the battery pack from the product and connect it to a power adapter with a USB-C cable (1c). The LED indicators (1b) light up when the battery pack is charging and turn off when the charging is completed, or when the USB-C cable is disconnected. In case of error, the LED indicators will start flashing. Press the button on the battery pack (1a) to check the charge level. The LED indicators will display the battery level as shown in illustration no. 2.

Unplug the battery pack when fully charged.

Note! USB-C charger and USB-C cable are sold separately.

### Good to know

- The battery pack may get hot while charging and will gradually cool down once charging is complete.
- Charging may take longer if the battery pack is in use while it's being charged.
- Charging time may vary based on the remaining charge, battery age and ambient temperature.
- The battery pack may need to be charged and discharged a few times for best performance.
- Avoid leaving the battery pack discharged for an extended period of time.
- Built-in safety features protect the battery pack from short-circuiting, overheating, overcharging and over-discharging.

- Operating temperature (charging):  
0° C – 45° C (32° F – 113° F).
- Operating temperature (discharging):  
-20° C – (+)55° C (-4° F – 131° F).

### Warning

- Only use the battery pack for its intended purpose.
- Discard if it is damaged.
- Never submerge in water or other liquids.
- Do not modify, disassemble, open, drop, crush, puncture or shred as this can lead to safety hazards.
- Risk of fires and burns. Do not open, crush, heat above 55° C (131° F), or incinerate.
- In case of a leakage – do not allow the liquid to come in contact with skin or eyes.
- Do not short-circuit the battery pack or its cells.
- For adult use only. This is not a toy and should not be used by children.

### TECHNICAL DATA

**Type:** ICBL7.2-18-USB-C-B1

**Capacity:** 2600 mAh/18.72 Wh

#### Input:

DC 5.0 V, 2.0 A (USB-C)

DC 8.4 V, 2.0 A (4 pin connector)

**Output:** DC 7.2 V, 2.0 A

This product conforms to UL STD. 2054


**Manufacturer: IKEA of Sweden AB**

**Address: Box 702, SE-343 81 Älmhult, SWEDEN**



For indoor use only



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The  item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

## עברית

### אנו ממליצים לקרוא את כל המסמך ולשמור אותו בהישג יד לעיון עתידי.

#### תיאור המוצר

ערכת הסוללות ייעודית למוצרים המופעלים על ידי סוללה ממגוון איקאה. ניתן להחליף את ערכת הסוללות בערכת הסוללות RÖDHAJ, הזמינה באיקאה.

#### הוראות טעינה

חשוב! יש לטעון את ערכת הסוללה במידה ונעשה שימוש ראשוני במוצר או שהמוצר אינו בשימוש במשך זמן רב.

ניתן לטעון את ערכת הסוללות בתוך במוצר המופעל או להוציאה ולהטעינה בנפרד.

- חברו את המוצר למתאם באמצעות כבל USB-C.
- הסירו את ערכת הסוללות מהמוצר וחברו אותה למתאם באמצעות כבל USB-C (1c). נוריות חייווי הLED (1b) נדלקות בזמן הטעינה ונכבות לאחר השלמת הטעינה או כאשר כבל ה-USB-C מנותק. במקרה של שגיאה, נוריות הLED יחלו להבהב. לחצו על הכפתור בערכת הסוללות (1a) כדי לבדוק את רמת הטעינה. נוריות הLED יציגו את סטטוס הטעינה כפי שמוצג באיור מס' 2.

נתקן את ערכת הסוללות לאחר שהטעינה הושלמה.

שימו לב! מטען USB-C וכבל USB-C נמכרים בנפרד.

#### טוב לדעת

- ערכת הסוללות עשויה להתחמם במהלך הטעינה ותקרר בהדרגתיות לאחר הטעינה.
- תהליך הטעינה עשוי להימשך זמן רב יותר אם הסוללה נמצאת בשימוש בזמן הטעינה.
- זמן הטעינה עשוי להשתנות בהתאם לשארית המטען בסוללה, גיל הסוללה וטמפרטורת החדר.
- יש לטעון את הסוללה מספר פעמים, לקבלת ביצועים מיטביים.
- אין להשאיר את הסוללה ריקה למשך זמן רב.
- פונקציית בטיחות מובנית המגינה על ערכת הסוללות מפני קצר חשמלי, חימום יתר ועומס יתר.
- טמפרטורות הפעלה (במצב טעינה): 0°C עד 45°C
- טמפרטורות הפעלה (ללא טעינה): 20°C עד 55°C.

#### אזהרה

- יש להשתמש במוצר רק למטרה לשמה הוא נועד.
- יש להשליך את המוצר במידה ופגום.
- אין להרטיב במים או בכל נוזל אחר.
- אין לבצע שינויים, לפרק, לפתוח, לזרוק, למעוך, לנקב או לגרוס את המוצר.
- סכנת שריפות וכוויות. אין לפתוח, למעוך, לחמם מעל 55°C (131°F) מעלות, או לשרוף.
- במצב של דליפה, אין לאפשר לנוזל מגע עם העור או העיניים.
- אין לקצר את ערכת הסוללה או את התאים בה.
- לשימוש מבוגרים בלבד. זהו אינו צעצוע ואין לאפשר לילדים להשתמש בו.

#### מידע טכני

סוג: ICBL7.2-18-USBC-B1

קיבולת: 2600mAh / 18.72Wh

#### מתח כניסה:

DC 5.0V, 2.0A (USB-C)

DC 8.4V, 2.0A (מחבר 4 פינים)

זרם יציאה: DC 7.2V, 2.0A

התקן זה תואם ל- UL STD. 2054

יצרן: IKEA of Sweden AB

כתובת: Box 702, SE-343 81 Älmhult, SWEDEN



לשימוש בתוך הבית בלבד

סימן המחזור מראה שיש להשליך את המוצר בנפרד מהפסולת הביתית. יש להעביר אותו למחזור בהתאם לחוקים המקומיים. באמצעות הפרדת מוצר זה מן הפסולת הביתית, תעזרו להפחית את כמות הפסולת המועברת למשפחות או מטמנות ולמזער את ההשפעה השלילית על בריאות האנשים והסביבה. לקבלת מידע נוסף, אנא צרו קשר עם חנות איקאה הקרובה לביתכם.