



DIRIGERA

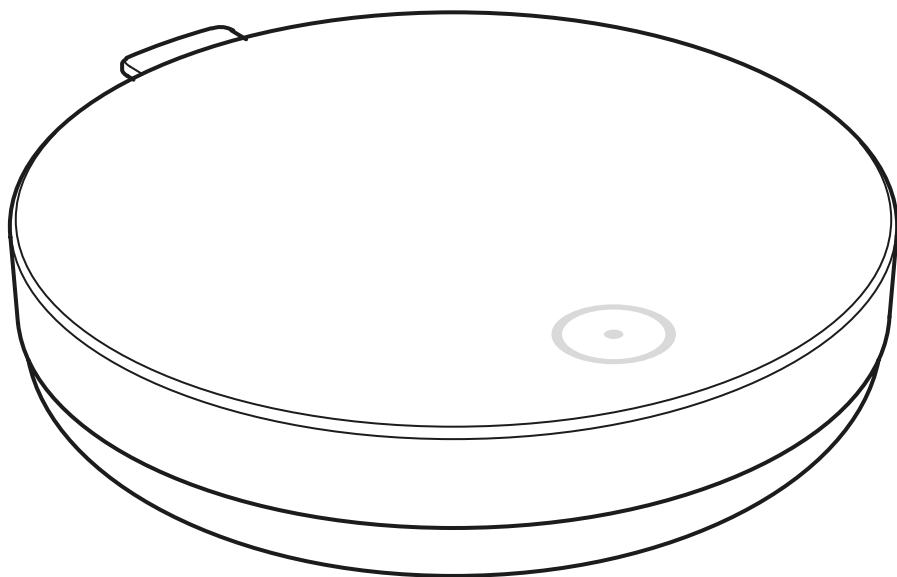

Design and Quality
IKEA of Sweden

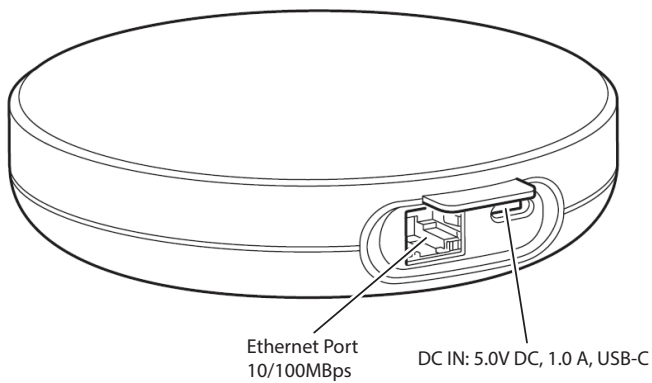

English	4
עברית	7

English

Read instructions carefully and keep for future reference.

Product description

DIRIGERA is a Matter-certified hub that enables the connection and control of smart products in the IKEA Home smart app.

Getting started

Connect the USB cable to the power supply unit and your hub. Then plug the power supply unit into the wall socket.


If you have an Apple device

Go to the App Store and download the IKEA Home smart app. The app will take you through the process of installing your hub and other devices.

If you have an Android device

Go to the Google Play store and download the IKEA Home smart app. The app will take you through the process of installing your hub and other devices.

Your hub's status lights

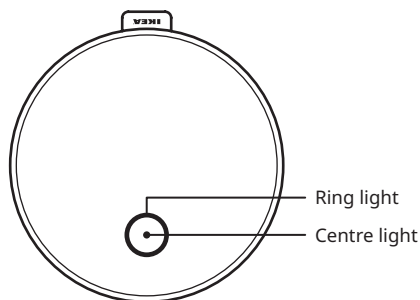

Understanding your hub's status lights



Ring light - loading

Shown when the hub is connected to power and is starting up. Wait for the light to fill the ring before proceeding with connecting the hub to the app.



Ring light softly pulsing white

This is shown once your hub has finished starting up. You can now follow the instructions in the app to connect your hub.



Centre light constant white

Shown when the hub is connected to the internet and everything is OK.



Centre light double-blinking white

Shown when the hub is disconnected from the internet. You can continue to control your devices through the app and your home WiFi network.



Ring light - spinning white

When your hub is updating or busy processing a large amount of information.



Rebooting your hub

Disconnect and reconnect the power to your hub to reboot it. The ring light fills to symbolise loading while starting up. This will not delete information on your hub.



Factory resetting

Push a pin into the pinhole on the underside of the hub until the status lights turn off. The centre light will then blink red 4 times when the hub is ready. Note – this deletes all previous hub information.

Adding IKEA Home smart products to your hub

Follow the instructions in the app to add "Works with IKEA Home smart" devices to the hub.

IMPORTANT SAFETY INSTRUCTIONS

Unplug the power supply unit from the power source before cleaning and when the hub is not in use.

To clean the hub and the power supply unit, wipe with a soft cloth moistened with a small amount of mild cleaning agent. Use another soft, dry cloth to wipe dry. Never use abrasive cleaners or chemical solvents as this can damage the products.

IMPORTANT!

- For indoor use only.
- Discard if it is damaged.
- Never submerge in water or other liquids.
- The wall socket must be located near the equipment and must be easily accessible.
- Storage temperature: -20° C to 25° C.
- Operating temperature: 0° C to 40° C.
- Do not leave the hub in direct sunlight or near any heat source, as it may overheat.
- Do not subject the hub or power supply unit to wet, damp or excessively dusty environments, as this may cause damage.
- The range between the hub and the receiver is measured in open air.
- Perform factory reset to delete information from the hub.
- Different building materials and placement of the units can affect the wireless connectivity range.
- For adult use only. This is not a toy and is not intended for use by children.
- This equipment is only suitable for mounting at heights up to 2 m.

Technical data

Model: DIRIGERA hub for smart products

Type: E2003, E2315

Input: 5.0 V DC

Range: 10 m in open air

Operating frequency:	Output power:
2400 - 2483.5 MHz	11.8 dBm

Power supply unit:

Type: ICPSW5-5NA-1, ICPSW5-5EU-1, ICPSW5-5AU-1

Input: 100 - 240 V~, 50/60 Hz

Output: 5.0 V DC, 1.0 A, 5.0W

Average active efficiency: 76.8%

No load power consumption: 0.03 W

Power supply unit:

Type: ICPSW5-10EU-1, ICPSW5-10NA-1, ICPSW5-10IN-1,
ICPSW5-10KR-1, ICPSW5-10AU-1, ICPSW5-10GB-1

Input: 100 - 240 V~, 50/60 Hz

Output: 5.0 V DC, 2.0 A, 10.0W

Average active efficiency: 87.0%

Efficiency at low load (10%): 79.6%

No load power consumption: 0.03 W

For important markings, check the bottom side of the product.

Manufacturer: IKEA of Sweden AB

(commercial registration number: 556074-7551)

Address: Box 702, SE-343 81 Älmhult, SWEDEN



Indoor use only



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by IKEA is under license. Other trademarks and trade names are those of their respective owners.

RF EXPOSURE INFORMATION

According to RF exposure regulations, under normal operations the end user shall refrain from being closer than 20 cm from the device.



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

קראו את ההוראות בעיון ושמרו לשימוש עתידי.

תיאור המוצר

DIRIGERA הינה רשת העומדת בתקן Matter שמאפשר לכם להוסיף ולשלט במוצרים מחוברים לאפליקציית IKEA Home smart.

הפעלה

חברו את כבל ה-USB ליחידת ספק הכוח ולרכזת שלכם. אחר כך, חברו את ספק הכוח לשקע קיר.


אם ברשותכם מכשיר של Apple

גשו ל-App Store והורידו את אפליקציית IKEA Home smart. האפליקציה תדריך אתכם כיצד להתקין את הרכזת שלכם ומכשירים נוספים.

אם יש לכם מכשיר Android

גשו לחנות Google Play והורידו את אפליקציית IKEA Home smart. האפליקציה תדריך אתכם כיצד להתקין את הרכזת שלכם ומכשירים נוספים.

נוריות החיווי ברכזת רשת (HUB)

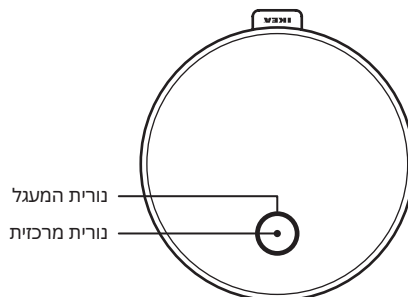

פירוט נוריות הסטטוס של רכזת הרשת (HUB)

נורית המעגל - נטענת

מוצג כאשר הרכזת הרשת (HUB) מחוברת לחשמל ומתחילה לפעול. המתינו עד שהמעגל כולו יואר לפני שתחברו את הרכזת לאפליקציה..



נורית המעגל מהבהבת בלבן בהיר

מוצג לאחר שהרכזת הרשת (HUB) סיימה את תהליך ההפעלה. תוכלו לפעול לפי ההוראות שבאפליקציה כדי לחבר את הרכזת.



נורית מרכזית מאירה באופן קבוע בלבן

מוצג כאשר רכזת הרשת (HUB) מחוברת לאינטרנט והכל פועל כשורה.



נורית מרכזית מהבהבת פעמיים בלבן

מוצג כאשר רכזת הרשת (HUB) מנותקת מהאינטרנט. תוכלו להמשיך לשלוט במכשירים באמצעות האפליקציה ורשת ה-WiFi שבביתכם..



רית המעגל - לבן מסתובב

כאשר הרכזת מבצעת עדכון או מעבדת מידע רב.



לסימונים חשובים, בדקו את הצד התחתון של המוצר.

יצרן: **IKEA of Sweden AB**
(מספר ח.פ.: 556074-7551)
כתובת: **Box 702, SE-343 81, אלמהולט, שבדיה**



הסימן והלוגו של Bluetooth® הם סימנים מסחריים רשומים בבעלות BluetoothSIG, Inc. וכל שימוש בסימנים כאלה על ידי איקאה נמצא תחת רישיון. סימנים מסחריים אחרים ושמות מסחריים הם אלה של בעליהם.

חשיפה RE מידע

על פי רגולציות החשיפה של RF, בזמן פעילות רגילה, על משתמש הקצה לשמור על מרחק של 20 ס"מ לפחות מהמכשיר.



סימן המיחזור מראה שיש להשליך את המוצר בנפרד מהפסולת הביתית. יש להעביר אותו למיחזור בהתאם לחוקים המקומיים. כשאתם ממיינים פסולת, אתם עוזרים להפחית את כמות האשפה המצטברת ולהקטין את ההשפעות המזיקות על האדם והסביבה. לקבלת מידע נוסף, פנו לחנות איקאה.



אתחול מחדש של רכזת הרשת (HUB)

נתקו את רכזת הרשת (HUB) מהחשמל וחברו אותה שוב כדי לאתחול. נורית המעגל תתחיל להתמלא כדי לאותות על טעינה בעת תהליך ההפעלה. האתחול לא ימחק את המידע שברכזת הרשת..



שחזור הגדרות יצרן

הכניסו סיכה לתוך החרוץ הייעודי שבתחתית רכזת הרשת (HUB) ולחצו עד לכיבוי נוריות החיווי. כאשר רכזת הרשת תהיה מוכנה, הנורית המרכזית תהבהב 4 פעמים בצבע אדום. הערה – הפעולה תמחק את כל המידע הקיים ברכזת הרשת (HUB)..

הוספת IKEA Home smart לרכזת הרשת

פעלו לפי ההוראות שבאפליקציה כדי להוסיף התקנים מסוג Works with IKEA Home Smart (התקנים שעובדים עם IKEA Home Smart) לרכזת הרשת.

הוראות בטיחות

נתקו את ספק הכוח מהחשמל לפני הניקוי וכשרכזת הרשת (HUB) אינה בשימוש. כדי לנקות את הרכזת ואת ספק הכוח, נגבו במטלית רכה עם כמות קטנה של חומר ניקוי עדין. השתמשו במטלית רכה ויבשה אחרת לצורך ייבוש. אין להשתמש בחומרי ניקוי עוצמתיים או בממסים כימיים, שכן הם עלולים לפגוע במוצרים.

מידע חשוב!

- לשימוש בתוך הבית בלבד.
- יש להשתמש במוצר רק למטרה לשמה הוא נועד.
- אין להרטיב במים או בכל נוזל אחר.
- על השקע להיות ממוקם ליד הציוד ועל הגישה אליו להיות קלה.
- טמפרטורת אחסון: 20°C עד 25°C.
- טמפרטורת הפעלה: 0°C עד 40°C.
- אין להשאיר את רכזת הרשת (HUB) באור שמש ישיר או ליד כל מקור חום, שכן דבר זה עלול להוביל להתחממות יתר.
- אין לאחסן את הרכזת הרשת (HUB) או את יחידת ספק הכוח בסביבה רטובה, לחה או מאובקת מאוד, שכן סביבה כזאת עלולה לגרום לנזקים.
- הטווח שבין רכזת הרשת (HUB) לרסיבר נמדד באוויר הפתוח.
- בצעו איפוס כדי למחוק את הנתונים מרכזת הרשת.
- חומרים שונים ומיקום היחידות יכולים להשפיע על טווח הקליטה האלחוטי.
- לשימוש מבוגרים בלבד. המוצר אינו צעצוע ואינו מיועד לשימוש ילדים.
- ציוד זה מתאים רק לתלייה בגובה של עד 2 מ'.

מפרט טכני

דגם: רכזת DIRIGERA למוצרים חכמים

סוג: E2315, E2003

קלט: 5.0V DC

טווח: 10 מטר באוויר הפתוח

תדר פעולה:	הספק פלט:
MHz 2400-2483.5	dBm 11.8

ספק כוח:

סוג: ICPSW5-5NA-1, ICPSW5-5EU-1, ICPSW5-5AU-1

קלט: 100-240V~, 50/60 Hz

קלט: 5.0V DC, 1.0 A, 5.0W

יעילות פעולה ממוצעת: 76.8%
צריכת חשמל ללא עומס: W 0.03

ספק כוח:

סוג: ICPSW5-10AU-1, ICPSW5-10GB-1, ICPSW5-10EU-1, ICPSW5-10NA-1, ICPSW5-10IN-1, ICPSW5-10KR-1

קלט: 100-240V~, 50/60 Hz

קלט: 5.0V DC, 2.0 A, 10.0W

יעילות פעולה ממוצעת: 87.0%
יעילות בעומס נמוך (10%): 79.6%
צריכת חשמל ללא עומס: W 0.03

