


# HEKTAR




Design and Quality  
IKEA of Sweden


1

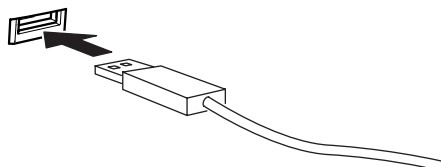


2

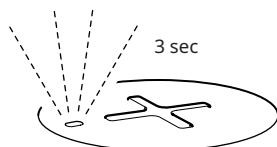


3

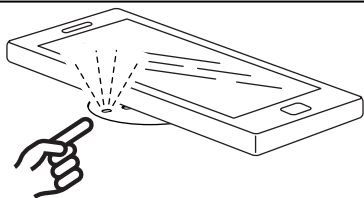

4

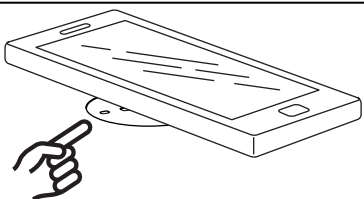

5

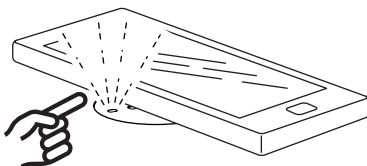

## English

### Charger features

- Wirelessly charges Qi-compatible devices.
- Compatible with Qi v1.2 specification.
- Charges 1 device via the USB port.
- Temperature and power monitor for safety.
- LED status indicator.

### Instructions for use

- Connect the charger cable to the power adapter and plug it into the wall socket.
- For wireless charging, place the device to be charged on top of the plus sign (+) on the charger. The device must be placed directly over the plus sign (+) on the charger for the charging function to work optimally. Note that on some devices you may have to activate wireless charging in settings.
- If your battery is completely discharged, it may take a few minutes before it starts charging. This is entirely normal. You can see that the battery has begun charging when the battery symbol appears on your phone.
- If you wish to charge from USB, insert the USB cable in the USB port (see illustration 1).

LED indicator (see illustrations):

2. Power on: LED lights up for 3 seconds.
3. Charging: LED on.
4. Charging completed: LED off.
5. Error: LED flashes.

### Good to know

- Devices may get warm during charging; this is completely normal and they will gradually cool down again after they are fully charged.
- Charging time may vary based on the device's battery capacity, charge level, the age of the battery and the temperature in the surrounding area.
- Charger storage temperature: -20°C to 25°C.
- Charger operating temperature: 0°C to 40°C.

Unplug the charger from the power source before cleaning and when it is not in use.

To clean the charger, wipe with a moist cloth. Never submerge the charger in water.

Recommended precautionary measures and technical data.

See the back of the charger.

**Save these instructions for future use.**

### WARNING:

Only charge devices that are Qi-compatible.

The wall socket must be located near the equipment and must be easily accessible.

Only use in dry locations.

Children should be supervised to ensure they do not play with the product.

If the cord is damaged the appliance shall be destroyed.

### Product servicing

Do not attempt to repair this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks.

### Technical data

**Type:** A1502 HEKTAR

**Input:** 19.0 V, 0.53 A

**Indoor use only**

**Operating frequency:** 110 - 205 KHz

**Output power:** -2 dBμA/m at 10m

**Manufacturer: IKEA of Sweden AB**

**Address: Box 702, SE-343 81 Älmhult, SWEDEN**



The 'Qi' symbol is a trademark of the Wireless Power Consortium



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

## מאפייני המטען

- טעינה אלחוטית של מכשירים העומדים בתקן Qi.
- עומד בתקן Qi v1.2.
- מטעין מכשיר אחד באמצעות כבל USB.
- מטעמי בטיחות, ישנה בקרת טמפרטורה וחשמל.
- סמן סוללה לד.

## הוראות שימוש

- חברו את כבל המטען למתאם ולאחר מכן לשקע החשמלי.
- לטעינה אלחוטית, מקמו את המכשיר המיועד לטעינה על גבי סימן הפלוס (+) של המטען. יש למקם את המכשיר ישירות מעל סימן הפלוס (+) של המטען על מנת שפונקציית הטעינה תפעל בצורה המיטבית. שימו לב לכך כי יש להפעיל את אופציית הטעינה האלחוטית בהגדרות של מכשירים מסוימים.
- במידה והסוללה ריקה לחלוטין, הטעינה עשויה להתחיל רק לאחר מספר דקות. מצב זה אינו חריג. תוכלו לראות שהסוללה החלה להיטען כאשר סמל הסוללה יופיע על הטלפון שלכם.
- לטעינה באמצעות USB, הכניסו את כבל ה-USB לשקע ה-USB (ראו איור 1).

סמן סוללה לד (ראה איורים):

1. מצב דלוק: אור הלב נדלק ל-3 שניות.
2. מטעין: אור הלב דלוק.
3. טעינה השלמה: אור הלב כבוי.
4. שגיאה: אור הלב מהבהב.

## טוב לדעת

- המכשירים עלולים להתחמם בזמן הטעינה; זוהי תופעה תקינה לחלוטין והמכשירים יתקררו בהדרגה לאחר הטעינה.
- משך הטעינה ישתנה בהתאם לקיבולת סוללת המכשיר, רמת הטעינה, גיל הסוללה וטמפרטורת הסביבה.
- טמפרטורת אחסון: 20°C עד 25°C.
- טמפרטורת הפעלה: 0°C עד 40°C.

יש לנתק את המטען מהחשמל לפני הניקוי וכאשר אינו בשימוש.

במידה ותרצו לנקות את המטען, נגבו אותו עם מטלית לחה. אין לשטוף את המטען במים. אמצעי זהירות מומלצים ונתונים טכניים. ראו על חלקו האחורי של המטען.

## שמרו הוראות אלה לשימוש עתידי.

## אזהרה:

הטעינו אך ורק מכשירים תואמי-Qi. על שקע הקיר להיות נגיש וממוקם בקרבת הציוד. השתמשו רק באיזורים יבשים. יש להשגיח על ילדים על מנת להבטיח שהם אינם משחקים עם המוצר. במידה והכבל פגום, יש להשמיד את המוצר.

## שירות

אל תנסו לתקן את המוצר בעצמכם. פתיחת או הסרת הכיסוי עלול לחשוף אתכם לנקודות מתח מסוכנות או סיכונים אחרים.

## מפרט טכני

**דגם:** A1502 HEKTAR

**מתח:** 19.0V, 0.53 A

**שימוש בתוך הבית בלבד**

**תדר הפעלה:** 110 - 205 KHz

**הספק:** 2- dBA/m -10 מטר

**יצרן:** IKEA of Sweden AB

**כתובת:** Box 702, SE-343 81 Älmhult, SWEDEN



סמל 'Qi' הוא הסימן המסחרי של Wireless Power Consortium.



סימן המחזור מראה שיש להשליך את המוצר בנפרד מהפסולת הביתית. יש להעביר אותו למחזור בהתאם לחוקים המקומיים. באמצעות הפרדת מוצר זה מן הפסולת הביתית, תעזרו להפחית את כמות הפסולת המועברת למשפחות או מטמנות ולמזער את ההשפעה השלילית על בריאות האנשים והסביבה. לקבלת מידע נוסף, אנא צרו קשר עם חנות איקאה הקרובה לביתכם.