




1

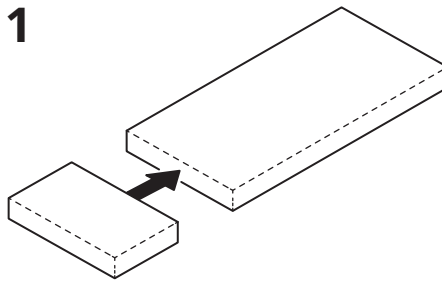


2

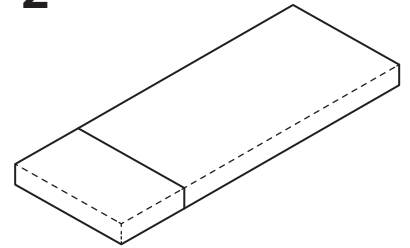


3

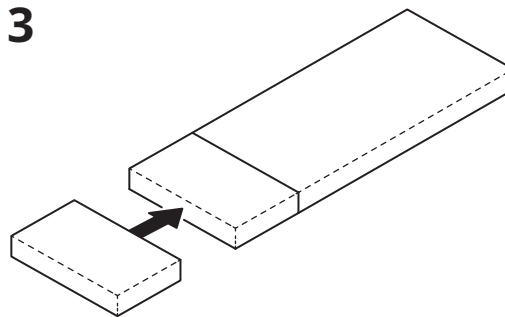


4

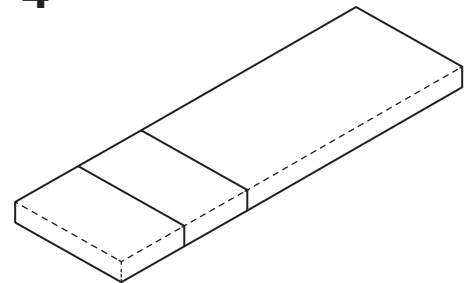


1




2

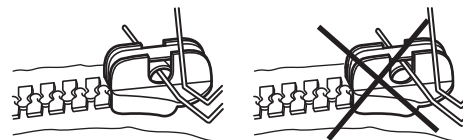


3



4

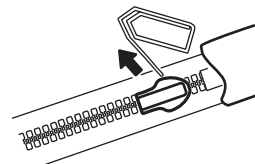

5

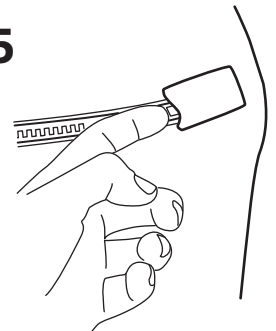

# Important - Read carefully - Save for future use

IKEA of Sweden, Box 702, S-343 81 Älmhult

- A compressed product assumes its proper shape and volume within 3-4 days. The material has a distinctive smell that may linger after unpacking. Airing the product will help to eliminate the smell.

## CARE INSTRUCTIONS

- Wipe clean with a damp cloth.

## Advice when drying

- Dry without use of a heat source (e.g. hairdryer or radiator).

## Child-safe zip

- The zip fastener has no tab. This is to prevent children from opening the cover and putting the contents in their mouth. Open and close the zip fastener by pushing, for example, a paper clip through the loop on the slide. Important! Make sure you always remove the paper clip afterwards.

# חשוב-קראו בתשומת לב- שמרו לעיון בעתיד

IKEA of Sweden, Box 702, S-343 81 Älmhult

- מזרנים דחוסים חוזרים לצורתם המקורית לאחר 3-4 ימי שימוש. החומר מפיק ריח אופייני שעלול להישאר גם לאחר פתיחת האריזה. אוורור המזרן וניקוי בעזרת שואב אבק יכול לסייע בסילוק הריח.

## הוראות שימוש

- נגבו במטלית לכה.

## עצה בזמן הייבוש

- יש לייבש ללא שימוש במקורות חום (כגון מייבש לשיער או רדיאטור).

## רוכסן בטיחותי לילדים

- הרוכסן הפנימי אינו כולל את פיסת המתכת המיועדת לאחיזה. הדבר נעשה כדי למנוע מהילדים לפתוח את הכיסוי, לפגוע במזרן ולבלוע פיסות מילוי. פתחו וסגרו את הרוכסן בעזרת הכנסת מהדק אל הלולאה. חשוב! וודאו תמיד כי הסרתם את מהדק הניירות לאחר מכן.