


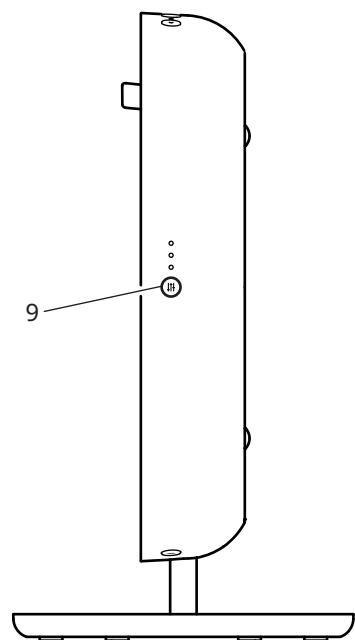


# SOLSKYDD

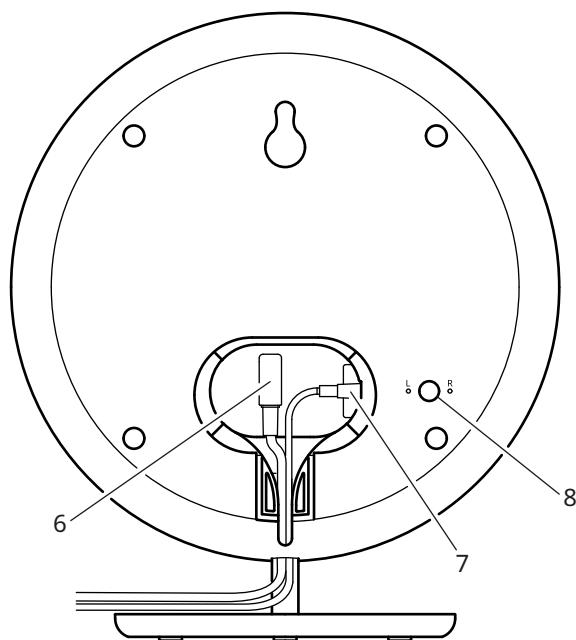

Design and Quality  
IKEA of Sweden

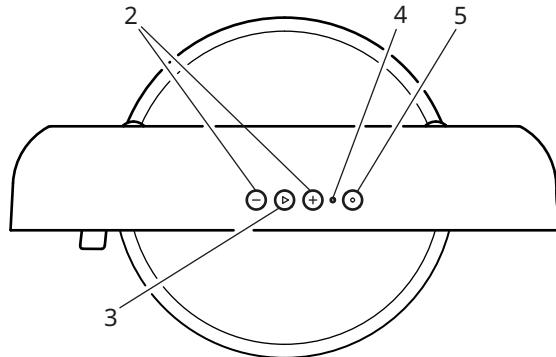

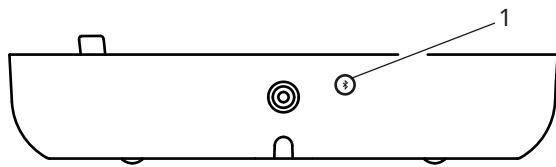

**English**

**5**

**עברית**

**7**

# English

1. System button
2. Volume up/down
3. Sound button
4. LED Status light
5. Spotify Tap™ button
6. AC power input
7. Aux/optical input
8. Channel selector L/R
9. EQ button

LED status (4)

**Pulsating white:** Bluetooth is searching for a device.  
**Steady white:** Speaker is on and ready to be used.  
**Blinking red continuously:** Factory reset is ongoing.

## Getting started:

1. Connect mains cord into (6) AC Power input and the other end to wall outlet.
2. Shortly press the System button (1) to turn the speaker ON. The LED is breathing white light while the speaker is in pairing mode, if the pairing mode is not started automatically, press and hold the System button (1).
3. Turn on Bluetooth on your device and pair it with SOLSKYDD. When you have paired the phone with the speaker a confirmation sound will play and the LED will blink twice.

## Adjusting the volume

Press the + symbol on top of the speaker to increase the volume. Press the - symbol to decrease the volume. You can also use your paired device to adjust the volume remotely.

## Changing the track

press the Sound button (3) to pause / play the track. Doublepress to skip track. Triplepress to play previous track.

## Connecting two SOLSKYDD in Stereo

The Output button (8) changes the speaker output mode from L (left), R (right) and Mono (both).

1. Turn on speaker A
2. If speaker A is on the left side, click the Output button (8) until "L" is glowing. If it is on the right side, click the button until "R" is glowing.
3. On speaker B, press and hold the Sound button (3) until a confirmation sound plays from both speakers.

Note: By default, speaker B will have the opposite output mode of speaker A when connecting the two.

## EQ modes

There are three built-in EQ modes for the speaker. Click the EQ button (9) to cycle through the modes.

1st mode: Bass reduction (Vocal enhancer)

2nd mode: flat EQ (Default)

3rd mode: Bass boost

## Connecting more speakers together (multi-speaker mode)

This speaker has a multi-speaker mode which means it can be connected with all our other speakers with the same functionality, so you can enjoy the same music from several speakers.

1. Connect your device to Speaker A via Bluetooth.
2. Turn on Speaker B.
3. Press and hold the Sound knob/button (3) on Speaker B. The LED (4) on Speaker B will double blink white, and a confirmation sound will play from both speakers. Now release the Sound knob/button (3).
4. Add Additional Speakers:  
Repeat the steps above (2 to 3) for every new speaker you want to add to your multi-speaker setup by treating each as "Speaker B".

## Disconnecting speakers from multi-speaker mode

Press and hold the System button (1) for more than 1.5 seconds on the speaker you want to disconnect in order to enter the pairing mode on that speaker.

## Spotify Tap™

Spotify Tap™ allows you to resume and change music directly from your Bluetooth speaker with the press of a button (5).

## Getting started (Spotify Tap™)

1. Start by downloading the Spotify app from the App Store (for iOS devices), or Google Play Store (for Android devices).
2. Make sure your device is paired via Bluetooth to your speaker.
3. Make sure the Spotify app is open. This will only be needed upon the first use.
4. Press the Spotify Tap™ -button (5) to start music.

## Changing music (Spotify Tap™)

While music is playing, press the Spotify Tap™ button (5) again to change what's playing to a recommended track based on your music taste.

## Unpairing Bluetooth devices

If you want to connect another device to your speaker, simply turn off Bluetooth on the device you had paired. The speaker should go into pairing mode automatically. If not, press and hold the system button (1) to enter pairing mode.

## Factory reset

If your speaker is not working properly, try factory resetting it. Press and hold the system button until the LED stops blinking red and the reset sound finishes.

## WARNING:

- Risk of overheating! Never install the product in a confined space. Always leave a space of at least 5 mm around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.
- Never place the product near open flames or other heat sources, including direct sunlight.
- Only use this product indoors. The apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Never place this product on other electrical equipment.
- If the supply cord is damaged, replace it with a new cord set which is type-approved for your country.
- No open flame sources, such as lit candles should be placed on the apparatus.
- The mains plug or an appliance coupler is to be used as a disconnect device, the disconnect device shall remain readily operable.

## IMPORTANT!

- Do not leave the speaker in direct sunlight or near any heat source, as it may overheat.
- Do not subject the speaker to wet, moist or excessively dusty environments, as this may cause damage.
- The range between the speaker and the receiver is measured in open air.
- Different building materials and placement of the units can affect the wireless connectivity range.
- Too high volume can damage your hearing.
- Do not touch the acoustic components.
- Do not use the product as a shelf or stand.
- For important markings, please check the bottom side of the product.
- The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

## Care instructions

To clean the speaker, wipe with a moist cloth. Never submerge the speaker in water.

## Note!

Never use abrasive cleaners or chemical solvents as this can damage the product.

## Product servicing

Do not attempt to repair this product yourself. If you open or remove parts, you may expose yourself to dangerous voltage points or other risks.

**Manufacturer: IKEA of Sweden AB**

**Address: Box 702, SE-343 81 Älmhult, SWEDEN**



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by IKEA is under license. Other trademarks and trade names are those of their respective owners.



Spotify Tap™ is a trademark owned by Spotify and any use of such marks by IKEA is under license. All other Spotify trademarks, service marks, trade names, logos, domain names, and any other features of the Spotify brand are the sole property of Spotify or its licensors.

## Technical data

**Model Name:** SOLSKYDD Bluetooth speaker 45

**Type number:** E2506

**Input:** 100 - 240 VAC, 50/60Hz, 1200 - 600 mA

**Standby Power Consumption:** 0.4 W

**Off-mode Power Consumption:** 0.2 W

**Auto Standby:** 1 min

**Operating temperatures:** 0° C to 40° C

**Operating humidity:** 0 to 95 % RH

**Wireless range (unobstructed):** 10 m

**Operating frequency:** 2400 - 2483.5 MHz

**Radio output power:**

Bluetooth classic: 10 dBm,

2.4 GHz proprietary: 10 dBm



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

## חיבור מספר רמקולים יחד

רמקול זה כולל ניבוב רביו רמקולים הנאפשר חיבור מספר רמקולים, כך שתוכלו להנות מאותה המוזיקה בכל הרמקולים.

1. חיבור את המכשיר שלכם לרמקול A דרך Bluetooth.

2. הפעלת רמקול B.

3. לחוץ והזזו את כפתור הולוים (3) ברמקול B. נורית חיווי הולוים.

4. תhabהב פעמיים באור לבן ולאחר מכך, ככל אישור ישמע מחרמקולים. עצת, ניתן לשחרר את כפתור הולוים (3).

4. הוסף דוברים נוספים:

חוור על השלבים לעל (3-2) עבור כל רמקול חדש שתרצה להוסף להגדלת רבי הרמקולים, על ידי התיחסות לכל אחד כל רמקול B".

## ניתוק רמקול מנצח ריבוי רמקולים

לחוץ והזזו את כפתור הפעלה (1) במשך 1.5 בראםוקול שברצונכם לנתק כדי להתחילה את תהליך היצמד.

## Spotify Tap™

Spotify Tap™ מאפשר לכם לחזור למוסיקה ולהחליף אותה ישירות מרמתוקול Bluetooth שלם בלחיצת כפתור (5).

## הפעלה (Tap™) Spotify

1. אראשית, הרודין את אפליקציית Spotify Google Play או App Store - בהתאם למכשיר הנידיע שברשותכם.

2. וודאו שהמכשיר שלכם Bluetooth מתחבר דרך רמקול.

3. וודאו שאפליקציית Spotify פתוחה. פעולה זו מתחבצת בשימוש הראשוני בלבד.

4. לחוץ על כפתור הולוים (5) כדי להפעיל את המוזיקה.

## ההנחת מוזיקה (Tap™) Spotify

לחוץ על כפתור (5) Spotify Tap™ שוב כדי להחליף את המוזיקה לשיר המומלץ.

## הסרת ציון התקן Bluetooth

כדי לחרב מציין אחר לרמקול, כבו את ה-Bluetooth במכשיר שהוזכר. הרמקול יכנס לתהליך הציון באופן אוטומטי. במידה ותהליך הציון אינם מתרחשים, לחוץ לחיצה ארוכה על הפעלה (1).

## איפוס להגדרות יציר

אם הרמקול אינו פועל כהלה, נסו לאפס אותו להגדרות יציר. לחוץ לחיצה ארוכה על כפתור הפעלה שונרת החיווי תפסוק להבב באודם וישמע צליל אפסום.

## ازהרה:

• סכנת התהומות יתרן אין להתקין מוצר זה בחיל סגור. השינוי רוח של לפחות 5 מ"מ סבב המוצר לאוורו. וכך כי וילונות או חפצם אחרים אינם מוכאים את פתיחת אוורור המוצר.

• אין להניח את המוצר בקרבת להבנה או מוקר חום אחר, לרבות אוור שמש שיר.

• מוצר זה מיועד לשימוש בתוך הבית בלבד. אין לחשוף את המוצר לגשם, טפטוף או המטב נזולים או התזה נזולים. אין להניח על המוצר מכך עם גודל כוונ אגטול.

• אין להניח את המוצר על ציוד חשמלי אחר. במידה ונורם נזק לכבל החזנה יש להחליפו בכבול חדש מותאם לתיקן רמקומני.

• אין להציב על המוצר מקרו אשר חשופה כגון נורת דולקם. יש לשטמץ בשקע המרכז או במכשירים אחרים בתוך מזון לפעולה. ניתוק, על ממכשיר הנזוק להיאיר במכשיר מזון לפעולה.

1. כפתור הפעלה.
2. כפתור ווילום.
3. כפתור ווילום.
4. נורית חיווי לד.
5. כפתור Tap™.
6. כנסת AC.
7. חיבור אופטי/Aux.
8. מכון טעונים R/L.
9. כפתור EQ.

נורית חיווי לד (4)

אור לבן מהבהב: ה-Bluetooth מוחפש ממכשיר להתחבר אליו.

אור לבן קבוע: רמקול מופעל ומוכן לשימוש.

אור אדום מהבהב: בתהילר אפסום להגדרות יציר.

## הפעלה:

1. חיבור את כל החשמל (6) לכוניסת AC ואת הקצה השני לשען החשמל.

2. לחוץ לחיצה ארוכה על כפתור הפעלה (1) כדי להידק את הרמקול. נורית חיווי הולד התחבב באור לבן בזמן שהרמקול נמצא בתהילר ציון, במידה והזמן איננו מחייב את הפעלה (1).

3. הפעליו את ה-Bluetooth במכשיר הנדי שלכם לרמקול SOLSKYDD. לאחר שהטלר ציון נורית חיווי שלם לרמקול יישלם בהצלחה, ככל אישור ישמע ונורית חיווי הולד התחבב פעמיים.

## התאמת עצמת השמע

לחוץ על סימון ה-+ בחלק העליון של הרמקול כדי להגברת עצמת השמע. לחוץ על סימון ה- - כדי להנמיך את עצמת השמע. מוכן גם להשתמש במכשיר המחבר כדי לكون את עצמת השמע מרווח.

## ההנחת רשותה השמעה

לחוץ על כפתור הולוים (3) כדי להשוחות/הפעיל את רשותה השמעה. לחוץ פעמיים כדי לדלג לשיר הבא. לחוץ 3 פעמיים כדי לנגן את השיר הנוכחי.

ההנחת רשותה השמעה

כפתור ברקטר השמע (8) משנה את הגדרות פלט השמע מרמתוקול שמאל (L), ימין (R) או שניים (mono).

## הפעיל את רמקול A.

2. במידה ורמקול A מזוקם בצד שמאל, לחוץ על כפתור ברקטר השמע (8) עד-ש"L" מהבהב. במידה והוא מזוקם בצד ימין, לחוץ על הכפתור עד-ש"R" מהבהב.

3. בראםוקול B, לחוץ לחיצה ארוכה על כפתור הולוים (3) עד שמיינט צליל אישור משני הרמקולים.

הערה: כאשר אתם מזוקם את שני הרמקולים, כבירת מחדל, מצלב פלט השמע של רמקול B הופך מזה של רמקול A.

## מצבי EQ (אקווליזיר)

שבעם שלושה מצבים EQ (אקווליזיר) מוגנים בראםוקול. לחוץ על כפתור (9) EQ כדי לעבר בין המעצבים השונים.

מצב 1: הנמכת הבס (מאיצ' עצמת קול)

מצב 2: flat (בירית מוחדר)

מצב 3: הגברת הבס

