



SOLSKYDD

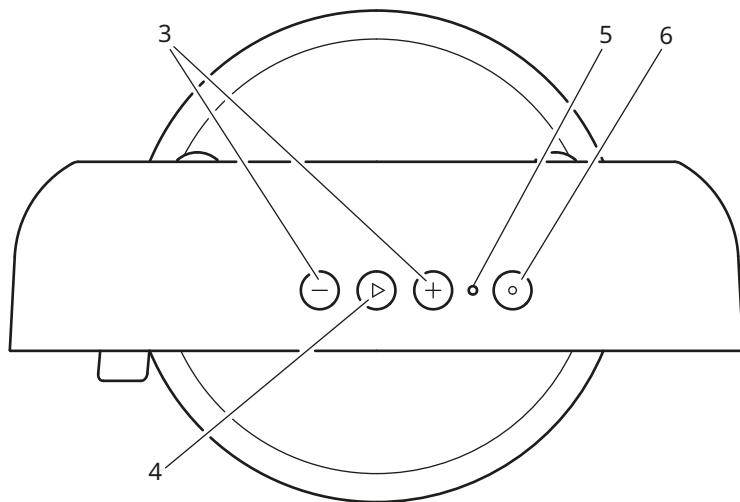

Design and Quality
IKEA of Sweden

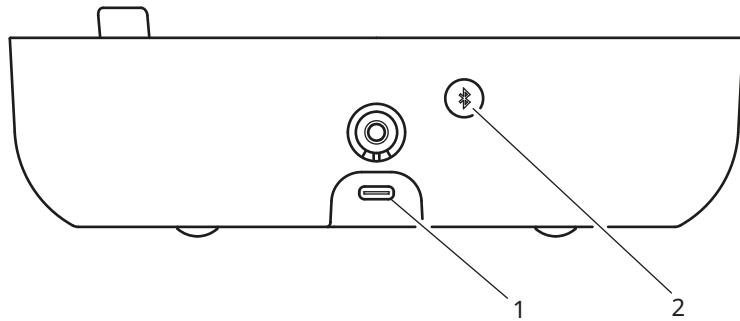

English

5

עברית

7

English

1. USB-C input
2. System button
3. Volume up/down
4. Play button
5. LED Status light
6. Spotify Tap™ button

LED status (5)

Pulsating white: Bluetooth is searching for a device.
Steady white: Speaker is on and ready to be used.
Blinking red twice: Low battery
Blinking red continuously: Factory reset is ongoing.

Getting started:

1. To charge the speaker, connect a USB-C cable to the USB-C input (1) on the speaker and plug the other end into a power adapter or a computer.
2. Shortly press the System button (2) to turn the speaker ON. The LED is breathing white light while the speaker is in pairing mode, if the pairing mode is not started automatically, press and hold the System button (2).
3. Turn on Bluetooth on your device and pair it with SOLSKYDD. When you have paired the phone with the speaker a confirmation sound will play and the LED will blink twice.

Adjusting the volume

Press the + symbol on top of the speaker to increase the volume. Press the - symbol to decrease the volume. You can also use your paired device to adjust the volume remotely.

Changing the track

press the Sound button (4) to pause / play the track. Doublepress to skip track. Triplepress to play previous track.

Connecting more speakers together (multi-speaker mode)

This speaker has a multi-speaker mode which means it can be connected with all our other speakers with the same functionality, so you can enjoy the same music from several speakers.

1. Connect your device to Speaker A via Bluetooth.
2. Turn on Speaker B.
3. Press and hold the Sound knob/button (4) on Speaker B. The LED (5) on Speaker B will double blink white, and a confirmation sound will play from both speakers. Now release the Sound knob/button (4).
4. Add Additional Speakers:
Repeat the steps above (2 to 3) for every new speaker you want to add to your multi-speaker setup by treating each as "Speaker B".

Disconnecting speakers from multi-speaker mode

Press and hold the System button (2) for more than 1.5 seconds on the speaker you want to disconnect to enter pairing mode on that speaker.

Getting started (Spotify Tap™)

1. Start by downloading the Spotify app from the App Store (for iOS devices), or Google Play Store (for Android devices).
2. Make sure your device is paired via Bluetooth to your speaker.
3. Make sure the Spotify app is open. This will only be needed upon the first use.
4. Press the Spotify Tap™ button (6) to start music. From now on, whenever you press the button (6), the music resumes anytime your device is paired.

Changing music (Spotify Tap™)

While music is playing, press the Spotify Tap™ button (6) again to change what's playing to a recommended track based on your music taste.

Unpairing Bluetooth devices

If you want to connect another device to your speaker, simply turn off Bluetooth on the device you had paired. The speaker should go into pairing mode automatically. If not, press and hold the system button (2) to enter pairing mode.

Factory reset

If your speaker is not working properly, try factory resetting it. Press and hold the system button until the LED stops blinking red and the reset sound finishes.

WARNING:

- Risk of overheating! Never install the product in a confined space. Always leave a space of at least 5 mm around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.
- Never place the product near open flames or other heat sources, including direct sunlight.
- Only use this product indoors. The apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Never place this product on other electrical equipment.
- If the supply cord is damaged, replace it with a new cord set which is type-approved for your country.
- No open flame sources, such as lit candles should be placed on the apparatus.
- The mains plug or an appliance coupler is to be used as a disconnect device, the disconnect device shall remain readily operable.

IMPORTANT!

- Do not leave the speaker in direct sunlight or near any heat source, as it may overheat.
- Do not subject the speaker to wet, moist or excessively dusty environments, as this may cause damage.
- The range between the speaker and the receiver is measured in open air.

- Different building materials and placement of the units can affect the wireless connectivity range.
- Too high volume can damage your hearing.
- Do not touch the acoustic components.
- Do not use the product as a shelf or stand.
- For important markings, please check the bottom side of the product.

CARE INSTRUCTIONS

To clean the speaker, firstly disconnect it from the power outlet. Then wipe with a slightly damp cloth. Never submerge the speaker in water. And wipe the speaker dry with a soft cloth before connecting the speaker to a power outlet again.

NOTE!

Never use abrasive cleaners or chemical solvents as this can damage the product.

Product servicing

Do not attempt to repair this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks.

Manufacturer: IKEA of Sweden AB

Address: Box 702, SE-343 81 Älmhult, SWEDEN

Technical data

Model Name: SOLSKYDD Portable Bluetooth speaker 19

Type Number: E2504

Input: 5.0 Vdc, 2.0 A, USB Type-C

Li-ion battery capacity: 7.2 V, 2600 mAh

Operating temperatures: 0° C to 40° C

Operating humidity: 0 to 95 %

Bluetooth Version: V 5.3

Wireless range (unobstructed): 10 m

Operating frequency: 2400 - 2483.5 MHz

Radio output power:

Bluetooth classic: 10 dBm,
2.4 GHz proprietary: 10 dBm



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by IKEA is under license. Other trademarks and trade names are those of their respective owners.



Spotify Tap™ is a trademark owned by Spotify and any use of such marks by IKEA is under license. All other Spotify trademarks, service marks, trade names, logos, domain names, and any other features of the Spotify brand are the sole property of Spotify or its licensors.

הפעלה (6)™ Spotify Tap

1. ראשית, הורידו את אפליקציית Spotify במכשיר Google Play או App Store - בהתאם למכשיר הנייד שברשותכם.
2. וدواו שהמכשיר שלם מחובר דרך Bluetooth למכשיר.
3. וدواו שאפליקציית Spotify פתוחה. פעולה זו מחייבת שימוש הראשון בלבד.
4. לחצו על כפתור ה-**(6)™ Spotify Tap** כדי להפעיל את המוזיקה. מנגינה ווילר, כשתלחצו על הפעלה (6), המנגינה תוחור לפועל בכל פעם שהמכשיר שלכם מחובר.

ההתקנת מוזיקה (6)™ Spotify Tap

1. לחצו על כפתור ה-**(6)™ Spotify Tap** שוב כדי להחליף את המוזיקה לשיר הנומינל.

הסרת ציון התקן

1. כדי להזכיר אחר למכשיר, כבו את ה-Bluetooth במכשיר שהמצמד. המכשיר יכנס להתקין הציגו אוטומטית. במידה ותהליך הציגו אינם מותרחש, לחצו להזיכת אורך על כפתור ההפעלה (2).

אפשרות להגדיר את יצרן

1. אם המכשיר אכן פועל כהכלה, נסו לאפס אותו להגדיר את יצרן. לחצו להזיכת אורך על כפתור הפעלה עד שኖרת החווית תפיסין להבהב באדים וישמע ציל אפס.

אזהרה:

1. סכנת המסתמה יתירה אין להתקין מוצר זה בחלל סגור. השיר או רוח של לפחות 5 מ"מ סיבוב המוציא לאוויר, וכך יוכלוות או חפצם אחרים אינם מסכימים את פתחן אוורור המוצהר.
2. אין להניח את המוצר בקרבת להבה או מקור חום אחר, לרבות אוור שמש שיר.
3. מוצר זה מיועד לשימוש בתחום הבית בלבד. אין להשוו את המוצר לשירות, טפסוף או מותם נולמים או התנתן נולמים. אין להניח על המוצר מכל עם נול או גוף ארגאלי.
4. אין להניח את המוצר על צוואר חם שמלי אחר.
5. במידה ונתקר במקומו נזק לבבל והזינה יש להחליפו במכשיר חדש מותאם לתיקן המזקמי.
6. אין להציב על המוצר תקופר או שעון דיגיטליים.
7. יש לשימוש בשקע המרכז או במכשירים אחרים בתוקן ניוקן, על מכשיר הניתוק להישאר במכבץ מוקן פועלה.

מידיעות

1. אין להניח את המכשיר כחום מכוון, מכיוון שהוא יתיר על התחממות יתר על המידה.
2. אל תמקמו את המכשיר בסביבה טובה, לחיה או מאובקית יתר על המידה, מכיוון שההדרב עלול לגרום נזק.
3. הטוויה בין המכשיר לבין המקלט נזدة במרקח שיר.
4. חומרם בביי' שונים ומייקוטים עשויים להשפיע על טווח הקישוריות האלחוטית.
5. ווילום בגבהה כדי עדול להזיך לשימושם.
6. אל תגעו ברכבים האקוסטיים.
7. אל תשתמש במוצר כמזרך או כמעמד.
8. לסייעים חשובים, בדקו את הצד התהתו של המוצר.

הוראות שימוש

1. ניקוי המכשיר, ראשית יש לנתקו מהחשמל. ולאחר מכן, לנגב אותו במילוי תחה. עלול אין לטבול את המכשיר במים. יש ליבש את המכשיר באמצעות נגיגות במטלולית רכה לפני חיבורו לחשמל.

שימוש בלבד

1. אין להשתמש בחומרם ניקוי חירפים או שוחקים אשר עלולים לגרזונכם לנתקן כדי להתחזיל את תהליכי יצירוף.

1. יצאת USB-C.
2. כפתור הפעלה.
3. כפתור ווילום.
4. כפתור הפעלה שמע.
5. נורית חוווי לד.
6. כפתור Spotify Tap.

נורית חוווי לד (5)

1. אוור לבן מהבהב: ה-Bluetooth מוחפש מכיר להתחבר אליו.
2. אוור לבן קבוק: רמקול מופעל ומוקן לשימוש.
3. אוור אודם מהבהב פונמיים: סוללה לששה.
4. אוור אודם מהבהב: בתהליך איפוס להגדירות יצירן.

הפעלה:

1. הטעם את המכשיר על ידי חיבור כזזה אחד של כבל-C USB-C לשברתתוקן (1) ואית הczza למחשב או לטלפון.
2. לחצו להזיכת אורך על כפתור הפעלה (2) כדי להציג את המכשיר. ווילם הדרבב באור לבן במנון שהתקין נמצוא בתהליך ציון, במידה ותהליך הציגו אינן מתחילה באופן אוטומטי, לחצו להזיכת אורך על כפתור הפעלה (2).
3. הפעלה (3) SOLSKYDD. לאחר שהתקין ציון מכיר הנדי שלם למכשיר ישלים בהצלחה, צילוי אישור ישמע ונורית חוווי הלד תבהב פעמיים.

התאמת עצמת השמע

1. לחצו על סימון+b בחולן העליון של המכשיר כדי להציג את עצמת השמע. לחצו על סימון-c כדי להציג את עצמת השמע. תוכל גם להשתמש במכשיר המחבר כדי לזכון את עצמת השמע מרוחק.

ההתקנת רשיית השימוש

1. לחצו על כפתור הווילום (4) כדי להציג/להפעיל את רישימת השימוש. לחצו פעמיים כדי לדלג לשיר הבא. לחצו 3 פעמיים ניגן את השיר הקודם.

חיבור מספור רמקולים ייחד

1. רמקול זה כולל מצלב ריבוי רמקולים המאפשר חיבור מספר רמקולים, כך שתוכלו ליהנות מאותה המוזיקה בכל המכשירים.
2. חיבור את המכשיר שלם למכשיר דרך Bluetooth A דרך B.
3. לחצו והזיכו את כפתור הווילום (4) במכשיר B. נורית חוווי הדרבב על המחבר (5) מהבהב פעמיים באור לבן ולאחר מכן, צילוי אישור ישמע מהמכשירים. כעת, ניתן לשחרר את כפתור הווילום (4).
4. הוסף דוברים נוספים:

הזרו על השלבם ליל (2-3) עברו כל רמקול חדש שתרצה להוסר להגדיר ריבוי רמקולים, על ידי התייחסות לכל אחד כאל "רמקול B".

יתוך רמקול מצלב ריבוי רמקולים

1. לחצו והזיכו את כפתור הפעלה (2) במכשיר 1.5 ברמקול שברצונכם לנתקן כדי להתחזיל את תהליכי יצירוף.

תיקון מוצר
אין לכטאות תיקון מוצר זה בעצמכם, מאחר וופייתה או הסרת המרכיבים עלולה להשפיע אתכם לרמות נמוכה מסוכנות או סוכנות אחרות.

יצרן: IKEA of Sweden AB
כתובת: Box 702, SE-343 81 Älmhult, SWEDEN



הסימן והלוגו של Bluetooth® הם סימנים מסחריים רשומים בבעלות SIG, Inc. וכל שימוש בסימנים כאלה על ידי איקאה נמצוא תחת רישיון. סימנים מסחריים אחרים ושמות מסחריים הם אלה של בעלייהם.



הסימן והלוגו של Spotify Tap הם סימנים מסחריים רשומים בבעלות Spotify וכל שימוש בסימנים כאלה, על ידי איקאה נמצוא תחת רישיון. סימנים מסחריים אחרים ושמות מסחריים הם אלה של בעלייהם.

מפורט טכני

דגם: רמקול נייד E2504
מספר דגם: 5.0Vdc, 2.0A, USB Type-C
קלטן: Li-ion 7.2 V, 2600 mAh
טמפרטורת הפעלה: 0°C עד 40°C
טווח לחות: 0-95%
Version Bluetooth: V 5.3
טוווח אלחוטי (לא הפרענות): 10 מ' MHz 2400-2483.5
תדר הפעלה:
עוצמת פלט רדיו: dBm 10 Bluetooth 2.4 GHz 10 dBm קילאס: GHz 2.4
קניני:



סימן המחוור מראה שש להשליך את המוצר בנפרד מהפסולת הבתית. לשלהעבר אותו למחוור בהתאם לחוקים המקומיים. באמצעות הפקת מוצר זה מן הפסולת הבתית, תערור להפחית את כמות הפסולת המועברת למשרפות או מטמונות ולמער את הרשפעה והשילית על בריאות האנשים והסביבה. לבלת מידע נוספת, אנא צורו קשר עם חנות איקאה הירובה בבעיתכם.