



# SOLSKYDD

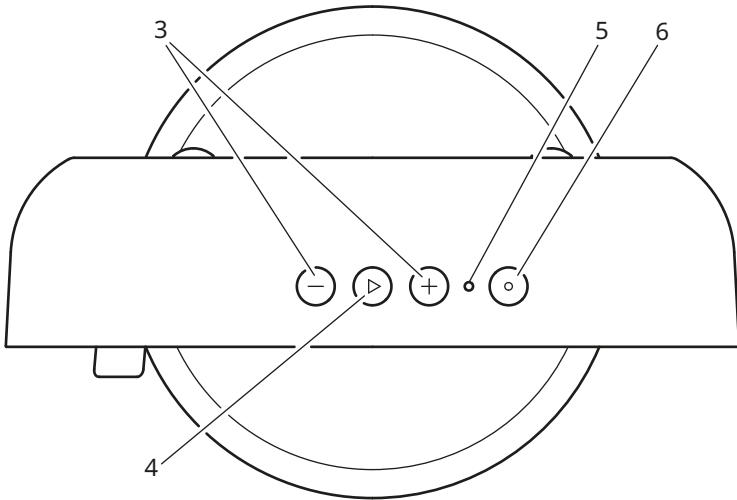

Design and Quality  
IKEA of Sweden

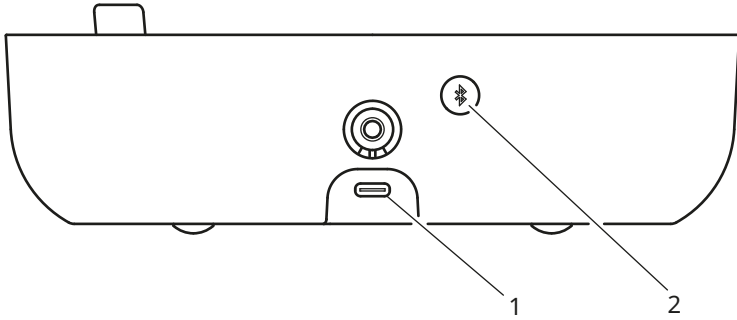

**English**

**4**

**עברית**

**5**

# English

1. USB-C input
2. System button
3. Volume up/down
4. Play button
5. LED Status light
6. Spotify Tap™ button

LED status (5)

**Pulsating white:** Bluetooth is searching for a device.

**Steady white:** Speaker is on and ready to be used.

**Blinking red twice:** Low battery

**Blinking red continuously:** Factory reset is ongoing.

## Getting started:

1. To charge the speaker, connect a USB-C cable to the USB-C input (1) on the speaker and plug the other end into a power adapter or a computer.
2. Shortly press the System button (2) to turn the speaker ON. The LED is breathing white light while the speaker is in pairing mode, if the pairing mode is not started automatically, press and hold the System button (2).
3. Turn on Bluetooth on your device and pair it with SOLSKYDD. When you have paired the phone with the speaker a confirmation sound will play and the LED will blink twice.

## Adjusting the volume

Press the + symbol on top of the speaker to increase the volume. Press the - symbol to decrease the volume. You can also use your paired device to adjust the volume remotely.

## Changing the track

press the Sound button (4) to pause / play the track. Doublepress to skip track. Triplepress to play previous track.

## Connecting more speakers together (multi-speaker mode)

This speaker has a multi-speaker mode which means it can be connected with all our other speakers with the same functionality, so you can enjoy the same music from several speakers.

1. Connect your device to Speaker A via Bluetooth.
2. Turn on Speaker B.
3. Press and hold the Sound knob/button (4) on Speaker B. The LED (5) on Speaker B will double blink white, and a confirmation sound will play from both speakers. Now release the Sound knob/button (4).
4. Add Additional Speakers:  
Repeat the steps above (2 to 3) for every new speaker you want to add to your multi-speaker setup by treating each as "Speaker B".

## Disconnecting speakers from multi-speaker mode

Press and hold the System button (2) for more than 1.5 seconds on the speaker you want to disconnect to enter pairing mode on that speaker.

## Getting started (Spotify Tap™)

1. Start by downloading the Spotify app from the App Store (for iOS devices), or Google Play Store (for Android devices).
2. Make sure your device is paired via Bluetooth to your speaker.
3. Make sure the Spotify app is open. This will only be needed upon the first use.
4. Press the Spotify Tap™ button (6) to start music. From now on, whenever you press the button (6), the music resumes anytime your device is paired.

## Changing music (Spotify Tap™)

While music is playing, press the Spotify Tap™ button (6) again to change what's playing to a recommended track based on your music taste.

## Unpairing Bluetooth devices

If you want to connect another device to your speaker, simply turn off Bluetooth on the device you had paired. The speaker should go into pairing mode automatically. If not, press and hold the system button (2) to enter pairing mode.

## Factory reset

If your speaker is not working properly, try factory resetting it. Press and hold the system button until the LED stops blinking red and the reset sound finishes.

## WARNING:

- Risk of overheating! Never install the product in a confined space. Always leave a space of at least 5 mm around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.
- Never place the product near open flames or other heat sources, including direct sunlight.
- Only use this product indoors. The apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Never place this product on other electrical equipment.
- If the supply cord is damaged, replace it with a new cord set which is type-approved for your country.
- No open flame sources, such as lit candles should be placed on the apparatus.
- The mains plug or an appliance coupler is to be used as a disconnect device, the disconnect device shall remain readily operable.

## IMPORTANT!

- Do not leave the speaker in direct sunlight or near any heat source, as it may overheat.
- Do not subject the speaker to wet, moist or excessively dusty environments, as this may cause damage.
- The range between the speaker and the receiver is measured in open air.

- Different building materials and placement of the units can affect the wireless connectivity range.
- Too high volume can damage your hearing.
- Do not touch the acoustic components.
- Do not use the product as a shelf or stand.
- For important markings, please check the bottom side of the product.

1. יציאת USB-C
2. כפתור הפעלה
3. כפתור ווליום
4. כפתור הפעלת שמע
5. נורית חייווי לד.
6. כפתור Spotify Tap™.

**CARE INSTRUCTIONS**

To clean the speaker, firstly disconnect it from the power outlet. Then wipe with a slightly damp cloth. Never submerge the speaker in water. And wipe the speaker dry with a soft cloth before connecting the speaker to a power outlet again.

- נורית חייווי לד (5)  
**אור לבן מהבהב:** ה-Bluetooth מחפש מכשיר להתחבר אליו.  
**אור לבן קבוע:** רמקול מופעל ומוכן לשימוש.  
**אור אדום מהבהב פעמיים:** סוללה חלשה  
**אור אדום מהבהב:** בתהליך איפוס להגדרות ייצרן.

**NOTE!**

Never use abrasive cleaners or chemical solvents as this can damage the product.

**Product servicing**

Do not attempt to repair this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks.

- הפעלה:**  
 1. הטעינו את הרמקול על ידי חיבור קצה אחד של כבל USB-C ליציאת ה-USB-C שברמקול (1) ואת הקצה השני למחשב או למתאם המחובר לשקע חשמל.  
 2. לחצו לחיצה ארוכה על כפתור ההפעלה (2) כדי להדליק את הרמקול. נורת חייווי הלהתבהב באור לבן בזמן שהרמקול נמצא בתהליך צימוד, במידה ותהליך הצימוד אינו מתחיל באופן אוטומטי, לחצו לחיצה ארוכה על כפתור ההפעלה (2).  
 3. הפעילו את ה-Bluetooth במכשירכם כדי לחבר אותו עם SOLSKYDD. לאחר שתהליך צימוד מכשיר הנייד שלכם לרמקול יושלם בהצלחה, צליל אישור יישמע ונורית חייווי הלהתבהב פעמיים.

**Manufacturer: IKEA of Sweden AB**  
**Address: Box 702, SE-343 81 Älmhult, SWEDEN**

**Technical data**

**Model Name:** SOLSKYDD Portable Bluetooth speaker 19  
**Type Number:** E2504  
**Input:** 5.0 Vdc, 2.0 A, USB Type-C  
**Li-ion battery capacity:** 7.2 V, 2600 mAh  
**Operating temperatures:** 0° C to 40° C  
**Operating humidity:** 0 to 95 %  
**Wireless range (unobstructed):** 10 m  
**Operating frequency:** 2400 - 2483.5 MHz  
**Radio output power:**  
 Bluetooth classic: 10 dBm,  
 2.4 GHz proprietary: 10 dBm

**התאמת עוצמת השמע**

לחצו על סימון ה+ בחלק העליון של הרמקול כדי להגביר את עוצמת השמע. לחצו על סימון ה- כדי להנמיך את עוצמת השמע. תוכלו גם להשתמש במכשיר המחובר כדי לכוון את עוצמת השמע מרחוק.

**החלפת רשימת ההשמעה**

לחצו על כפתור הווליום (4) כדי להשהות/להפעיל את רשימת ההשמעה. לחצו פעמיים כדי לדלג לשייר הבא. לחצו 3 פעמים כדי לנגן את השייר הקודם.

**חיבור מספר רמקולים יחד**

רמקול זה כולל מצב ריבוי רמקולים המאפשר חיבור מספר רמקולים, כך שתוכלו ליהנות מאותה המוזיקה בכל הרמקולים.

1. חברו את המכשיר שלכם לרמקול A דרך Bluetooth.
2. הפעלת רמקול B.
3. לחצו והחזיקו את כפתור הווליום (4) ברמקול B. נורית חייווי הלהתבהב פעמיים באור לבן ולאחר מכן, צליל אישור יישמע מהרמקולים. כעת, ניתן לשחרר את כפתור הווליום (4).
4. הוסף דוברים נוספים:  
 חזרו על השלבים לעיל (2-3) עבור כל רמקול חדש שתרכשו להוסיף להגדרת ריבוי הרמקולים, על ידי התייחסות לכל אחד כאל "רמקול B".



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

**ניתוק רמקול ממצב ריבוי רמקולים**

לחצו והחזיקו את כפתור ההפעלה (2) במשך 1.5 ברמקול שבצרכונם לנתק כדי להתחיל את תהליך הצימוד.

## הפעלה (Spotify Tap™)

1. ראשית, הורידו את אפליקציית Spotify באמצעות Google Play או App Store - בהתאם למכשיר הנייד שברשותכם.
2. ודאו שהמכשיר שלכם מחובר דרך Bluetooth לרמקול.
3. ודאו שאפליקציית Spotify פתוחה. פעולה זו מתבצעת בשימוש הראשון בלבד.
4. לחצו על כפתור ה-Spotify Tap™ (6) כדי להפעיל את המוזיקה. מעתה ואילך, כשתלחצו על הכפתור (6), המוזיקה תחזור לפעול בכל פעם שהמכשיר שלכם מחובר.

## יצרן: IKEA of Sweden AB

כתובת: Box 702, SE-343 81 Älmhult, SWEDEN

## מפרט טכני

**דגם:** רמקול נייד Bluetooth 19 SOLSKYDD

**מספר דגם:** E2504

**קלט:** 5.0Vdc, 2.0A, USB Type-C

**קיבולת סוללה:** Li-ion 7.2 V, 2600 mAh

**טמפרטורות הפעלה:** 0°C עד 40°C

**טווח לחות:** 0-95%

**טווח אלחוטיות (ללא הפרעות):** 10 מ' מ'

**תדר הפעלה:** 2400-2483.5 MHz

**עוצמת פלט רדיו:**

Bluetooth קלאסי: 10 dBm

GHz קנייני: 10 dBm



סימן המחזור מראה שיש להשליך את המוצר בנפרד מהפסולת הביתית. יש להעביר אותו למחזור בהתאם לחוקים המקומיים. באמצעות הפרדת מוצר זה מן הפסולת הביתית, תעזרו להפחית את כמות הפסולת המועברת למשפחה או מטמנות ולמזער את ההשפעה השלילית על בריאות האנשים והסביבה. לקבלת מידע נוסף, אנא צרו קשר עם חנות איקאה הקרובה לביתכם.

## אזהרה:

- סכנת התחממות יתר! אין להתקין מוצר זה בחלל סגור. השאירו רווח של לפחות 5 מ"מ סביב המוצר לאוורור. ודאו כי וילונות או חפצים אחרים אינם מכסים את פתחי אוורור המוצר.
- אין להניח את המוצר בקרבת להבה או מקור חום אחר, לרבות אור שמש ישיר.
- מוצר זה מיועד לשימוש בתוך הבית בלבד. אין לחשוף את המוצר לגשם, טפטוף או התזת נוזלים או התזת נוזלים. אין להניח על המוצר מכל עם נוזל כגון אגרטל.
- אין להניח את המוצר על ציוד חשמלי אחר.
- במידה ונגרם נזק לכבל ההזנה יש להחליפו בכבל חדש מותאם לתקן המקומי.
- אין להציב על המוצר מקור אש חשופה כגון נרות דולקים.
- יש להשתמש בשקע המרכזי או במחבר המכשירים בתור מכשיר ניתוק, על מכשיר הניתוק להישאר במצב מוכן לפעולה.

## מידע חשוב:

- אין להשאיר את הרמקול חשוף לאור שמש ישיר או בקרבת מקור חום כלשהו, מכיוון שהוא עלול להתחמם יתר על המידה.
- אל תמקמו את הרמקול בסביבה רטובה, לחה או מאובקת יתר על המידה, מכיוון שהדבר עלול לגרום נזק.
- הטווח בין הרמקול לבין המקלט נמדד במרחק ישיר.
- חומרי בניין שונים ומיקום עשויים להשפיע על טווח הקישוריות האלחוטית.
- ווליום גבוה מדי עלול להזיק לשמיעתכם.
- אל תיגעו ברכיבים האקוסטיים.
- אל תשתמשו במוצר כמדף או כמעמד.
- לסימונים חשובים, בדקו את הצד התחתון של המוצר.

## הוראות שימוש

לניקוי הרמקול, ראשית יש לנתקו מהחשמל. ולאחר מכן, לנגב אותו במטלית לחה. לעולם אין לטבול את הרמקול במים. יש לייבש את הרמקול באמצעות ניגוב במטלית רכה לפני חיבורו לחשמל.

## שימו לב!

אין להשתמש בחומרי ניקוי חריפים או שוחקים אשר עלולים לגרום נזק למוצר.

## English



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by IKEA is under license. Other trademarks and trade names are those of their respective owners.



Spotify and Spotify logos are registered trademarks of Spotify AB.\*  
\* Spotify service may not be available in some countries/regions. Please visit [support.spotify.com](https://support.spotify.com) for more information.

Use of the Made for Apple badges means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.