

SOMRIG



Design and Quality
IKEA of Sweden

English	4
---------	---

עברית	7
-------	---

English

SOMRIG shortcut button works with DIRIGERA hub and IKEA Home smart app to control smart products. Use the app to tell your smart products what to do and when to do it, then save it as a scene to be controlled by this shortcut button.

Note: this product does not function without the hub and app.

Get started

Download the IKEA Home smart app and follow the instructions on screen to add the product to your smart home system.




IKEA Home smart app

For Apple devices, download the app using the App Store. For Android devices, download the app using Google Play store.

Note: If you have a TRÅDFRI gateway please use IKEA Home smart 1 app.

Get to know your product

This product is designed to control scenes in a smart home system. Use Button 1 or Button 2 to control your scenes.

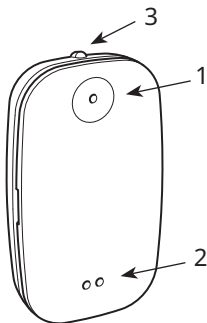

Button 1



Button 2



Pairing button

3. LED light

Controlling your scenes

Each button has a single, double and long-press so you can connect multiple scenes to one button. Connect up to 6 scenes to one shortcut button (3 scenes per button).

Connecting your scenes

Use the IKEA Home smart app to connect scenes to your shortcut button. Follow the instructions in the app to create a scene and assign a button press-type to it. The scene will start when you single, double or long-press the assigned button.

Battery care

When the battery gets low, a red LED light will blink when you press any button. DIRIGERA hub and IKEA Home smart app users can view battery status in the app and receive notifications when the battery starts to run out.

Changing the battery

Open the battery compartment using a flat object and replace the battery with a new AAA/HR03.

Safety information

Warning!

Risk of explosion if battery is replaced by an incorrect battery type. Dispose of used batteries according to the WEEE instructions at the end of this document.

Important

- This product is for indoor use only and can be used in temperatures ranging from 0°C to 40°C (32°F to 104°F).
- Do not leave this product in direct sunlight or near a heat source as it may overheat.
- Different building material and product location can affect wireless connectivity range.

Care instructions

To clean the remote control, wipe with a soft cloth moistened with a little mild detergent. Use another soft, dry cloth to wipe dry.

Note!

Never use abrasive cleaners or chemical solvents as this can damage the product.

Recommended battery type:

1 x IKEA LADDA 900 (AAA/HR03, 1.2V, 900mAh, Ni-MH) (not included)

Technical data

Model: SOMRIG shortcut button

Type: E2213

Input: 1.2 V, 1x AAA/HR03 LADDA battery

Range: 10 m in open air.

For indoor use only

Operating frequency: 2405-2480 MHz

Output power: 3 dBm (EIRP)

IP-class: IP44

Manufacturer: IKEA of Sweden AB

Address: Box 702, SE-343 81 Älmhult, SWEDEN



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

טיפול בסוללה

במידה והסוללה חלשה, נורית לד אדומה תהבהב בעת לחיצה על כל כפתור. ניתן לראות את מצב הסוללה ולקבל התראות כשהסוללה מתרוקנת באמצעות רכזת רשת IKEA Home (DIRIGERA) ואפליקציית smart.

החלפת הסוללה

פתחו את תא הסוללות באמצעות כלי שטוח והחליפו את הסוללה בסוללה חדשה מסוג AAA/HR03.

מידע בטיחותי

אזהרה!

החלפת הסוללה בסוג שאינו מתאים עלול לגרום לפיצוץ. יש להשליך סוללות משומשות בהתאם להוראות WEEE בסוף מסמך זה.

מידע חשוב

- מוצר זה מיועד לשימוש בתוך הבית ובטווח טמפרטורות 0°C – 40°C .
- אין להשאיר את המוצר חשוף לשמש ישירה או מקור חום, מחשש להתחממות יתר.
- חומרי בניין שונים ומיקום המוצר עשויים להשפיע על טווח הקישוריות האלחוטית.

הוראות טיפול

כדי לנקות את השלט רחוק, נגבו אותה במטלית רכה עם מעט חומר ניקוי. השתמשו במטלית אחרת, רכה ויבשה, כדי לייבש את השלט.

שימו לב!

אין להשתמש בחומרי ניקוי חזקים המכילים ממיסים כימיים אשר עשויים לגרום נזק למוצר.

סוללה מומלצת:

1x IKEA LADDA 900 (AAA/HR03, 1.2V, 900mAh, Ni-MH) (לא כלול)

מפרט טכני

דגם: לחצן קיצור SOMRIG
סוג: E213

מתח: 1x סוללות AAA/HR03 1.2V
טווח: 10 מ' באוויר הפתוח.

לשימוש בתוך הבית בלבד

תדר פעילות: 2405-2480 מגהרץ
הספק: 3 dBm (EIRP)


קטגוריה IP: IP44

יצרן: IKEA of Sweden AB

כתובת: Box 702, SE-343 81 Älmhult, SWEDEN



סימן המחזור מראה שיש להשליך את המוצר בנפרד מהפסולת הביתית. יש להעביר אותו למחזור בהתאם לחוקים המקומיים. באמצעות הפרדת מוצר זה מן הפסולת הביתית, תעזרו להפחית את כמות הפסולת המועברת למשרפות או מטמנות ולמזער את ההשפעה השלילית על בריאות האנשים והסביבה. לקבלת מידע נוסף, אנא צרו קשר עם חנות איקאה הקרובה לביתכם.

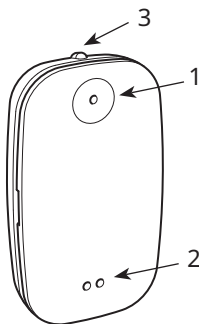

1 כפתור 

2 כפתור 

כפתור צימוד 

3. תאורת LED

שליטה בתרחישים

לכל כפתור יש לחיצה אחת, כפולה וארוכה, כך שתוכלו לחבר מספר תרחישים לכפתור אחד. חבר עד 6 סצנות ללחצן קיצור אחד (3 סצנות לכל כפתור).

חיבור תרחישים

השתמשו באפליקציית IKEA Home smart כדי לחבר תרחישים ללחצן הקיצור שלכם. עקבו אחר ההוראות באפליקציה על מנת ליצור תרחיש ושייכו אותו לכפתור אחד. התרחיש יפעל כאשר תלחצו לחיצה אחת, ארוכה או כפולה על הכפתור המשווייך.

לחצן קיצור SOMRIG פועל עם רכזת (hub) DIRIGERA ואפליקציית IKEA Home smart כדי לשלוט במוצרים חכמים. השתמשו באפליקציה כדי להגדיר את פעולות המוצרים החכמים שלכם ולאחר מכן שמרו אותם כתרחיש שניתן לשלוט בו באמצעות לחצן הקיצור.

עברית

שימו לב: לא ניתן להפעיל את המוצר ללא רכזת הרשת והאפליקציה.

הפעלה

הורידו את אפליקציית IKEA Home smart ועקבו אחר ההוראות במסך כדי להוסיף את המוצר למערכת הבית החכם שלכם.

אפליקציית IKEA Home smart

עבור מכשירי Apple, הורידו את האפליקציה מ-Apple Store. עבור מכשירי Android, הורידו את האפליקציה מחנות Google Play.



שימו לב: במידה וברשותכם שער TRÅDFRI, אנא השתמשו באפליקציית IKEA Home smart 1.

אופן השימוש

מוצר זה מיועד לשליטה בתרחישים במערכת בית חכם. השתמשו בכפתור 1 או בכפתור 2 כדי לשלוט בתרחישים שלכם.

