


SYMFONISK




Design and Quality
IKEA of Sweden

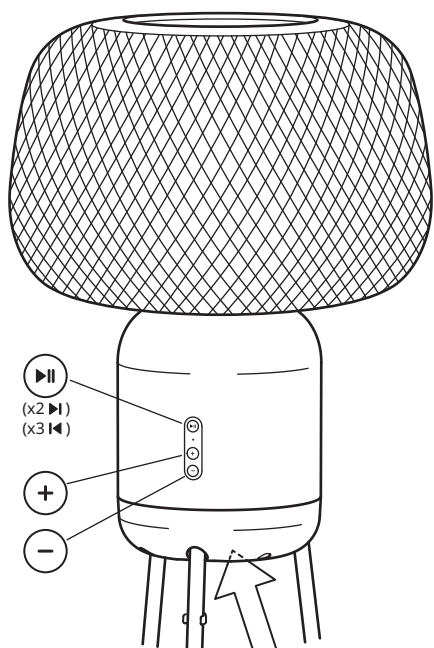

▶||
(x2 ▶||)
(x3 ◀||)


+

-

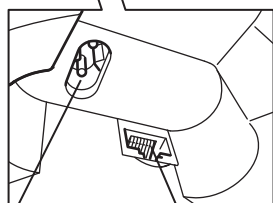

AC: 100-240V AC, 50/60Hz, 1.0 A

Ethernet Port

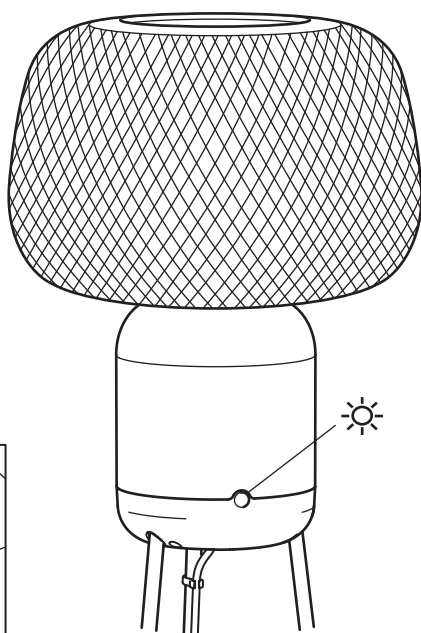

English	4
---------	---

עברית	6
-------	---

Assembling and turning your speaker on

Plug in your SYMFONISK speaker. Go to the Apple App Store (iOS devices) or Google Play Store (Android devices) and search for Sonos.



Install and open the Sonos app. Follow the instructions to set up your SYMFONISK speaker.

If you already have a Sonos system:

Open the Sonos app and plug in your SYMFONISK speaker. In the app, select Settings (gear icon) > System > Add Product. Follow the instructions to set up your SYMFONISK speaker.

Speaker functions

Play/Pause. Press once to start or stop the music; twice to skip to the next track; three times to jump back one song. Press and hold to add the music playing in another room.

Status light. It indicates the current status of the speaker.

Volume up.

Volume down.

Light On/Off. Turning the light off does not turn off the speaker and audio.

Additional information:

More instructions, for example on how to get started, can be found at www.ikea.com
— Select country.
— Go to Customer service > Product support.

You can also visit www.sonos.com > Support for instructions and support.

Care instructions

To clean the speaker, wipe with a soft moistened cloth. Use another soft, dry cloth to wipe dry.

RF EXPOSURE INFORMATION

According to RF exposure regulations, under normal operations the end user shall refrain from being closer than 20 cm from the device.



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

 For indoor use on, in the following countries:		BE	SK	PT	NL	LU
		DE	BG	FI	RO	AT
		ES	EE	CZ	SE	SI
		CY	FR	IE	DK	UK(NI)
		HU	LV	HR	EL	TR
		PL	MT	LT	IT	
		NO	CH	IS	LI	

 For indoor use on, in the following countries:		UK

Model name:	SYMFONISK FL
Type number:	E2136
Operating temperatures:	0°C to 40°C
LED bulb:	E26/E27, Max 15W
Input:	100-240VAC, 50/60Hz, 1.0A
Operating Frequency and Radio output power:	
2402-2480 MHz – 3.45 dBm EIRP 2412-2472 MHz – 19.96 dBm EIRP 5150-5350 MHz – 20.16 dBm EIRP 5500-5700 MHz – 16.81 dBm EIRP	

Deactivating or activating the wireless port:

In the Sonos app, go to: Settings > System > select room > select product name > Select Disable/Enable Wi-Fi.

Network Mode	Network Standby* Power Consumption
Wired	<3 W
Wireless**	<3 W
*) Power consumption in "standby" is when audio playback is inactive. SYMFONISK is a device with HiNA function. **) Wireless connectivity is automatically selected to optimize your Sonos / IKEA system. Whether in SonosNet (mesh) or wireless (group coordinator) mode, the power consumption is the same.	

For indoor use only

EMC compliance is met using shielded Ethernet/ CAT-5 cable.

Manufacturer: IKEA of Sweden AB

Address: Box 702, SE-343 81 Älmhult, SWEDEN

Save these instructions for future use.

IMPORTANT & WARNING!

- Too high volume can damage your hearing.
- The speaker is for indoor use only and can be used in temperatures ranging from 0 °C to 40 °C.
- Do not subject the speaker to wet, moist or excessively dusty environments, as this may cause damage.
- The product contains small parts that may be hazardous to small children.
- The product may present a tipping hazard (e.g. if placed on an uneven surface).
- The product contains a long cord which could present an entanglement hazard.
- Only use the product if it is properly assembled.
- Never use abrasive cleaners or chemical solvents as this can damage the product.
- Different building materials and placement of the units can affect the wireless connectivity range.
- Never install the product in a confined space. Always leave a space around the product for ventilation.
- The product shall not be exposed to excessive heat such as sunshine, heat sources, and fire or similar.
- No open flame sources, such as lit candles, should be placed on the apparatus.
- Do not attempt to repair this product yourself, as opening or removing screwed covers may expose you to the risk of electric shock.
- Do not use an excessively worn or defective power supply cord or cable when operating the product.
- Do not put any objects or fingers into the lamp socket.
- Do not use light sources with a power rating above 15W.

הרכבת וכוונן הרמקול

מידע נוסף:
הוראות נוספות, למשל כיצד להתחיל בשימוש, אפשר למצוא בכתובת www.ikea.com
— יש לבחור מדינה.
— יש לעבור אל 'שירות לקוחות' < 'תמיכת מוצר'.

לקבלת הוראות ותמיכה, אפשר גם לבקר בכתובת www.sonos.com < 'תמיכה'.

הוראות תחזוקה

כדי לנקות את הרמקול, יש לנגב אותו במטלית לחה ורכה. כדי לייבש, יש להשתמש במטלית נוספת, רכה ויבשה.

חשיפה RE מידע

על פי רגולציות החשיפה של RF, בזמן פעילות רגילה, על משתמש הקצה לשמור על מרחק של 20 ס"מ לפחות מהמכשיר.



סימן המיחזור מראה שיש להשליך את המוצר בנפרד מהפסולת הביתית. יש להעביר אותו למיחזור בהתאם לחוקים המקומיים. כשאתם ממיינים פסולת, אתם עוזרים להפחית את כמות האשפה המצטברת ולהקטין את ההשפעות המזיקות על האדם והסביבה. לקבלת מידע נוסף, פנו לחנות איקאה.

יש לחבר את רמקול SYMFONISK. יש לעבור אל חנות Apple (התקני iOS) או אל חנות Google Play Store (התקני Android) ולחפש את Sonos.



יש להתקין ולפתוח את אפליקציית Sonos. יש לפעול בהתאם להוראות כדי להגדיר את רמקול SYMFONISK.

אם כבר יש ברשותכם מערכת Sonos:

יש לפתוח את אפליקציית Sonos ולחבר את רמקול SYMFONISK. באפליקציה, יש לבחור 'הגדרות' (סמל גלגל שיניים) < 'מערכת' < 'הוספת מוצר'.
יש לפעול בהתאם להוראות כדי להגדיר את רמקול SYMFONISK.

פונקציות הרמקול

הפעלה/השהיה. יש ללחוץ פעם אחת כדי להפעיל או להפסיק את המוזיקה; פעמיים כדי לדלג לרצועה הבאה; שלוש פעמים כדי לקפוץ שיר אחד אחורה. יש ללחוץ לחיצה ארוכה כדי להוסיף השמעת מוזיקה בחדר אחר.

נורית מצב. מציינת את המצב הנוכחי של הרמקול.

הגברת עוצמת קול.
החלשת עוצמת קול.

הפעלה/כיבוי של האור. כיבוי האור אינו מכבה את הרמקול ואת השמע.

UK	UK CA	
לשימוש בתוך הבית בלבד, בארצות הבאות:		

LU	NL	PT	SK	BE	  לשימוש בתוך הבית בלבד, בארצות הבאות:
AT	RO	FI	BG	DE	
SI	SE	CZ	EE	ES	
UK(NI)	DK	IE	FR	CY	
TR	EL	HR	LV	HU	
	IT	LT	MT	PL	
	LI	IS	CH	NO	

אזהרה חשובה!

- עוצמת קול גבוהה מדי עלולה לפגוע בשמיעה.
- הרמקול מיועד לשימוש בתוך מבנה בלבד, וניתן להשתמש בו בטמפרטורות הנעות בין 0°C עד 40°C.
- אין לחשוף את הרמקול לסביבות רטובות, לחות או מאובקות יתר על המידה, מכיוון שהדבר עלול לגרום לנזק.
- המוצר מכיל חלקים קטנים ועלול להיות מסוכן לילדים קטנים.
- קיימת סכנה לנפילת המוצר (לדוגמה, אם יונח על משטח לא מאוזן).
- המוצר מכיל כבל ארוך שעלול לגרום לסכנת הסתבכות.
- יש להשתמש במוצר אך ורק כאשר הוא מורכב כהלכה.
- אין להשתמש בחומרי ניקוי שוחקים או בממסים כימיים, מכיוון שהם עלולים לגרום נזק למוצר.
- חומרי בניין שונים ומיקום שונה של היחידות עשויים להשפיע על טווח הקישוריות האלחוטית.
- אין להתקין את המוצר במקום סגור. יש תמיד להשאיר מקום סביב המוצר לצורך אוורור.
- אין לחשוף את המוצר לחום מופרז, כגון אור שמש, מקורות חום, אש וכדומה.
- אין להניח על המוצר מקורות להבה גלויה, כגון נרות דולקים.
- אין לנסות לתקן את המוצר בעצמכם, שכן פתיחה או הסרה של מכסים המחוברים בברגים עלולה לחשוף אתכם לסכנת התחשמלות.
- אין להשתמש בכבל חשמל בלוי מאוד או פגום בעת הפעלת המוצר.
- אין להכניס חפצים או אצבעות לשקע המנורה.
- אין להשתמש במקורות אור בעלי דירוג חשמל גבוה מ-15 וואט.

SYMFORISK FL	שם דגם:
E2136	מספר דגם:
0°C עד 40°C	טווח טמפר' הפעלה:
E26 / E27, 15W	נורת לד:
VAC 100-240 1.0A, 50/60 Hz	כניסה:
תדר הפעלה והספק רדיו:	
2402-2480 מגה-הרץ - 3.45 dBm EIRP 2412-2472 מגה-הרץ - 19.96 dBm EIRP 5150-5350 מגה-הרץ - 20.16 dBm EIRP 5500-5700 מגה-הרץ - 16.81 dBm EIRP	

השבתת או הפעלת החיבור האלחוטי:

באפליקציית Sonos, עברו אל: הגדרות > מערכת > בחר חדר < בחר שם מוצר < בחר השבת / הפעל Wi-Fi.

מצב רשת	צריכת חשמל מצב המתנה* ברשת
חוטי	W 3>
אלחוטי**	W 3>
* צריכת חשמל במצב "המתנה" מתרחשת כאשר המוזיקה אינה מופעלת. רמקול SYMFONISK הינו מכשיר עם פונקציית HiNA.	
** קישוריות אלחוטית נבחרת אוטומטית כדי לייעל את מערכת Sonos/IKEA. במצב SonosNet (רשת ארגו) או במצב אלחוטי הצריכה זהה.	

שימוש בתוך הבית בלבד

תאימות אלקטרומגנטית מתקיימת בעת שימוש בכבל Ethernet/CAT-5.

יצרן: IKEA of Sweden AB

כתובת: Box 702, SE-343 81 Älmhult, SWEDEN

שמרו הוראות אלו לשימוש עתידי.

AGREE PAR L'ANRT MAROC
Numero d'agrément: MR 00037995 ANRT 2023
Date d'agrément: 05/05/2023