

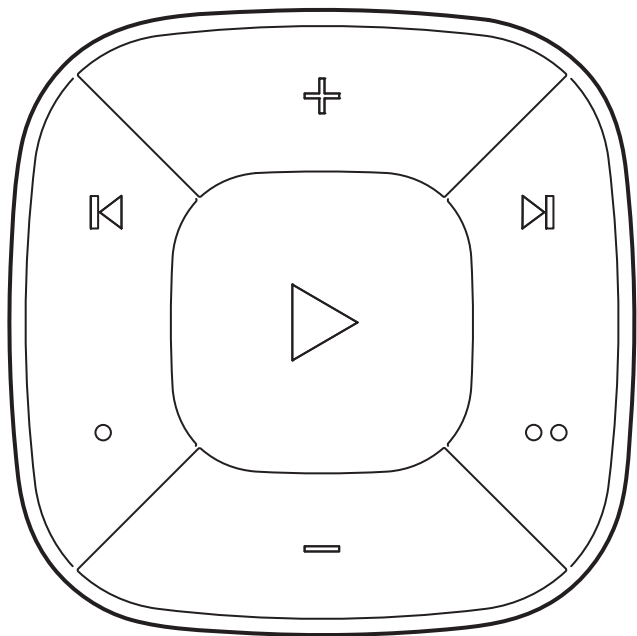


SYMFONISK

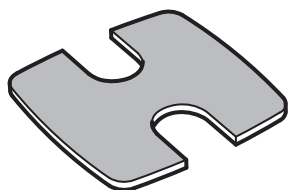


Design and Quality
IKEA of Sweden

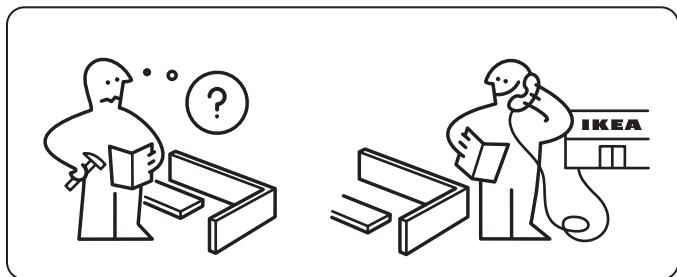


10071830

1x

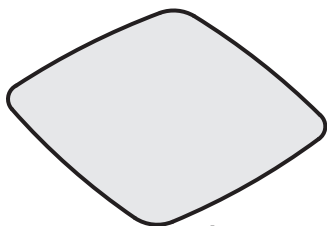

1x

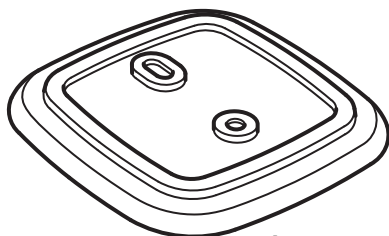


10071829

1x



Works with
IKEA Home smart

SYMFONISK



+

DIRIGERA



+

SYMFONISK



Download on the
App Store




GET IT ON
Google Play




Works with
IKEA Home smart



1





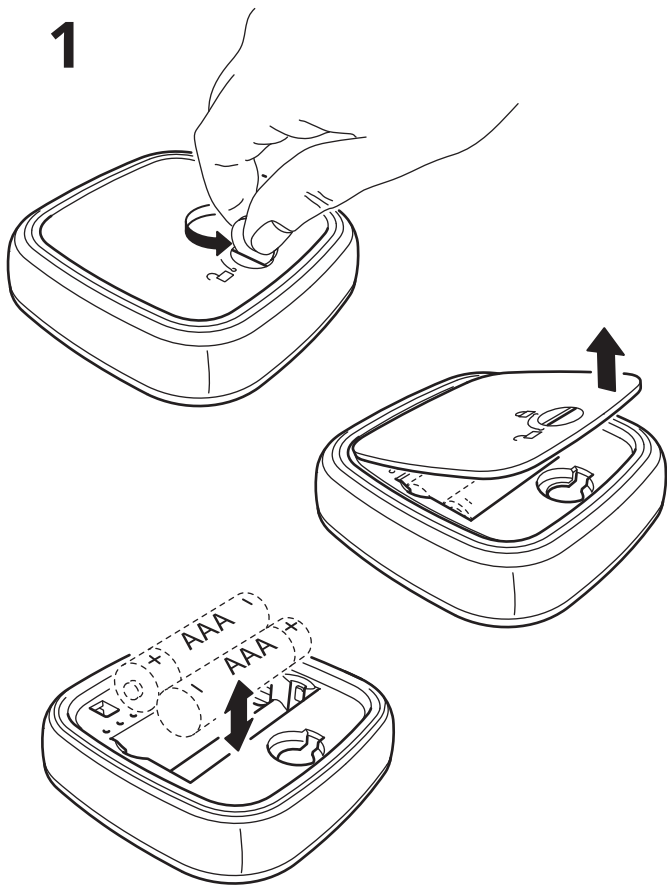


2


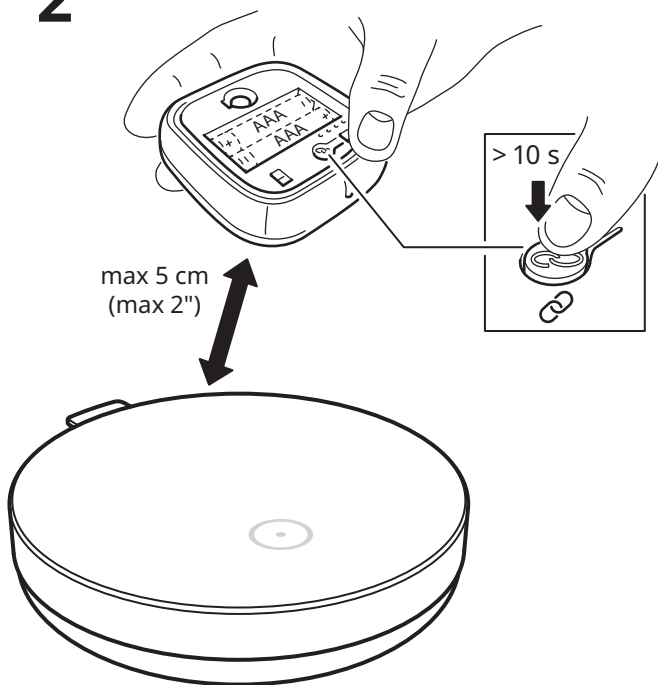


3

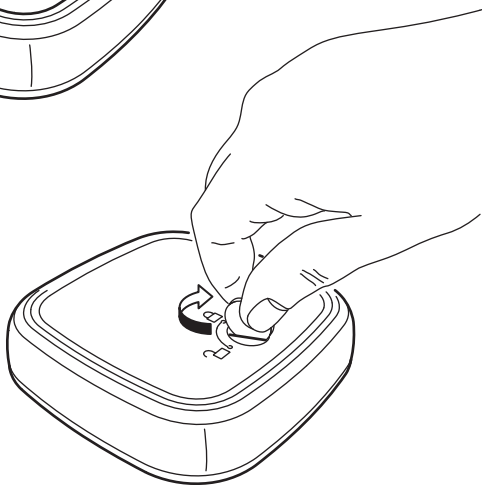
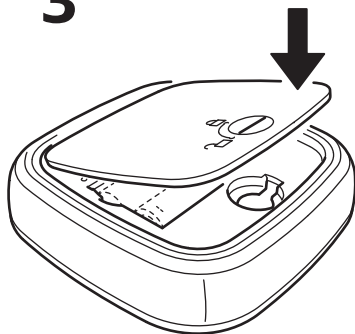


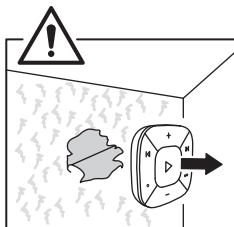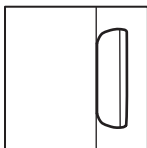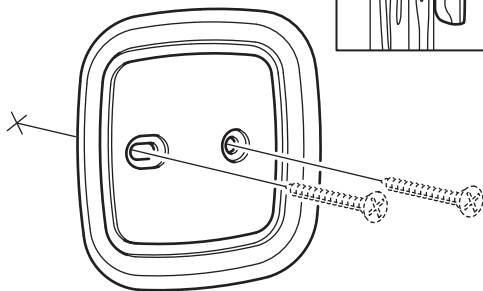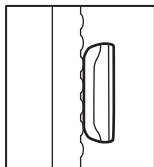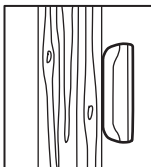


4

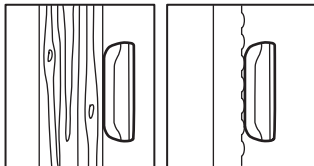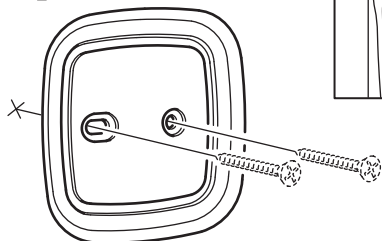


5

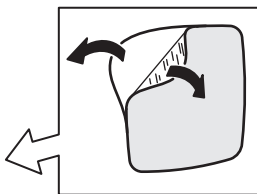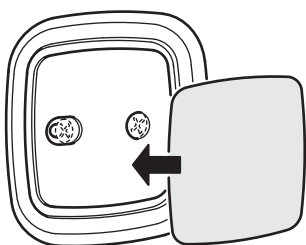


6

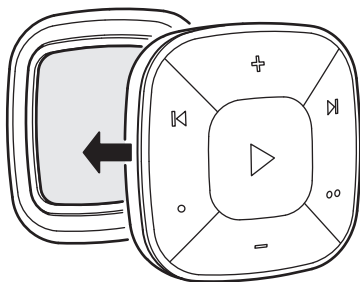

4

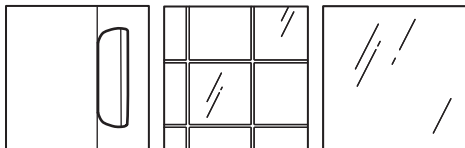


5

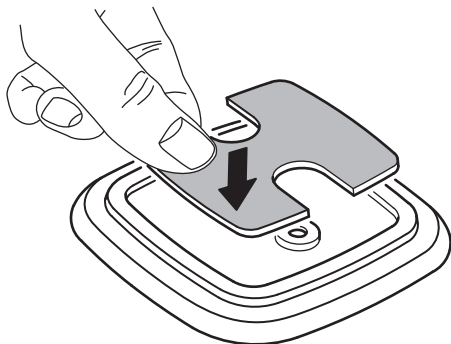


6




7



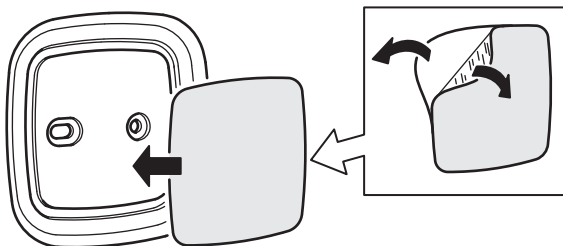





8

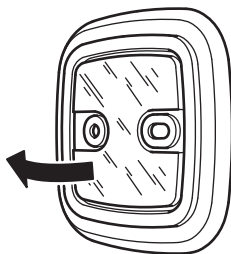



9

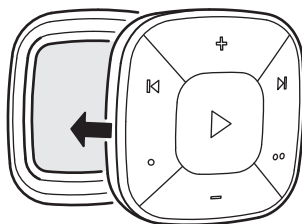

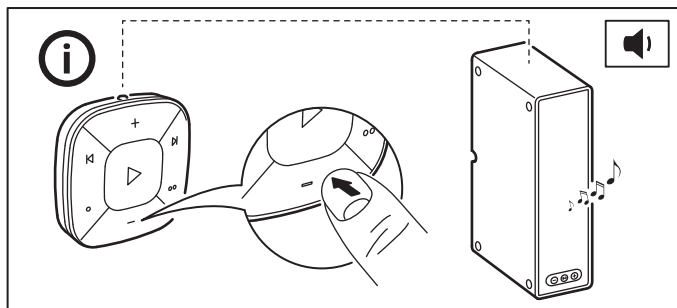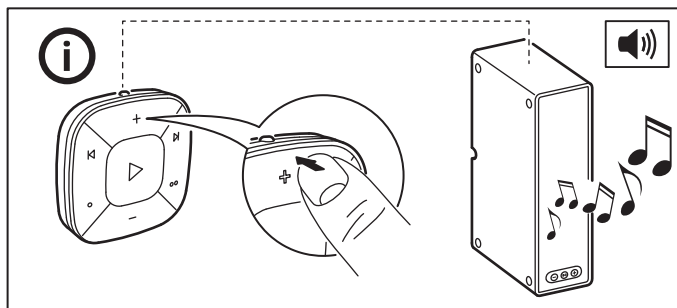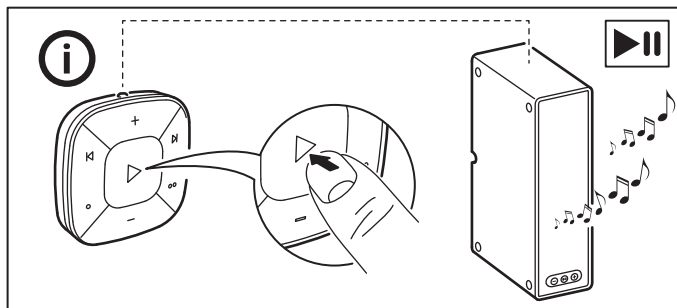

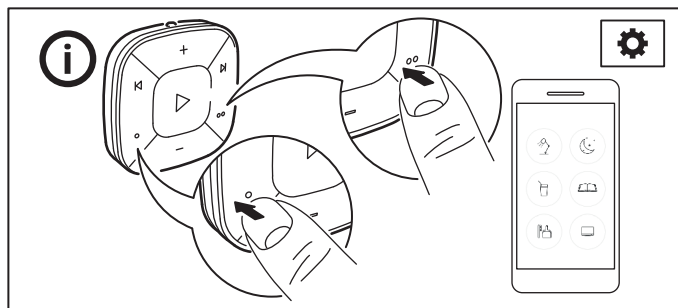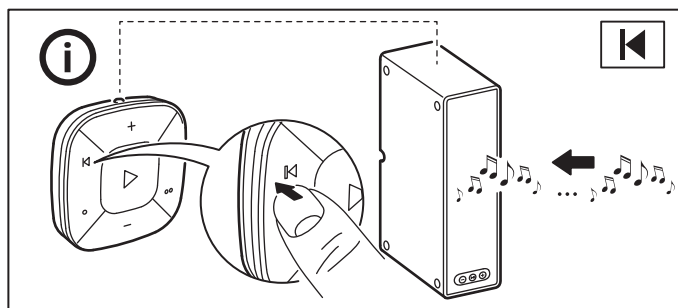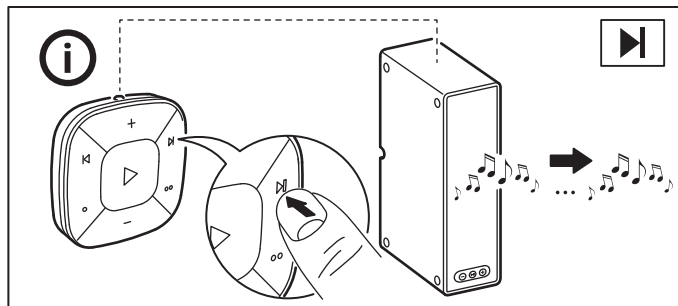

SYMFONISK sound remote overview

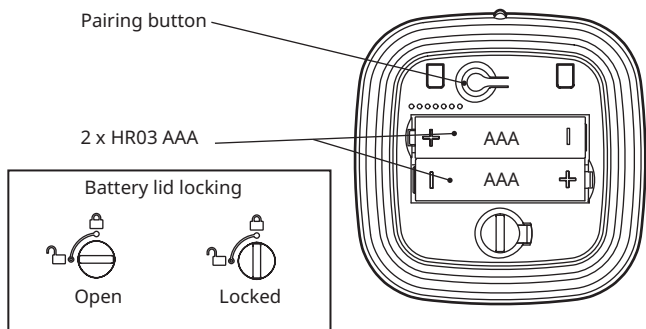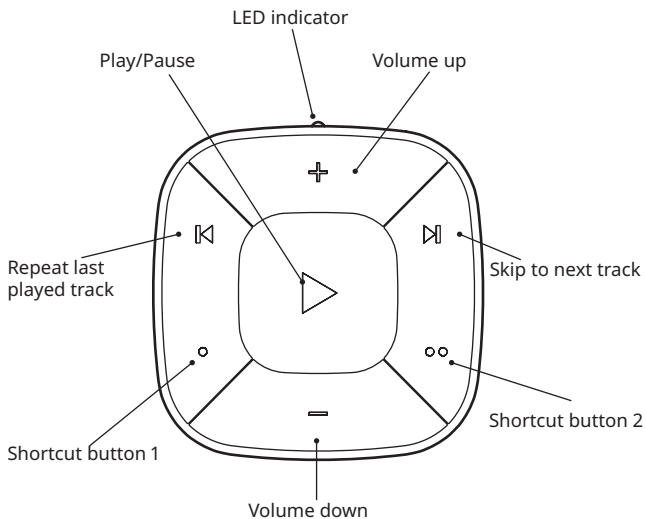

English

IMPORTANT

SYMFONISK sound remote is made to work together with IKEA gateway or hub and control your SYMFONISK speakers.

Use the IKEA Home smart app to add more functions to your sound remote. You cannot add "Works with IKEA Home smart" marked products directly to your sound remote.

If you have an Apple device

Go to the App Store and download the IKEA Home smart app. The app will take you through the process of installing your SYMFONISK sound remote and other "Works with IKEA Home smart" devices.

If you have an Android device

Go to the Google Play store and download the IKEA Home smart app. The app will take you through the process of installing your SYMFONISK sound remote and other "Works with IKEA Home smart" devices.

Getting started

Insert 2 HR03 AAA 1.2V batteries with correct polarity. Start the IKEA Home smart app and follow the instructions in the app on how to set up your device and add scenes to the shortcut buttons.

Close the battery lid and your sound remote is now ready for use.

Sound remote functions



Play/pause

Press once to start or stop the music.



Repeat

Press once to repeat the most recently played music.



Skip

Press once to skip to the next track.



Raise and lower volume

Press and hold to change the volume rapidly.

- **Shortcut buttons**
- **Used to change the playlist being streamed to the speakers**

Care instructions

To clean the sound remote, wipe with a soft moistened cloth, Use another soft, dry cloth to wipe dry.

Changing the batteries

When SYMFONISK sound remote is used regularly and as intended, the batteries will last for approximately 2 years.

When it's time to replace the batteries, the red LED indicator on the back of the sound remote will flash when you use it.

Open the battery lid and replace the batteries with 2 new HR03 AAA 1.2V batteries.

WARNING!

Risk of explosion if either battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

IMPORTANT!

- SYMFONISK sound remote is for indoor use only and can be used in temperatures ranging from 0 °C to 40 °C.
- Do not leave SYMFONISK sound remote in direct sunlight or near any heat source, as it may overheat.
- The range between SYMFONISK sound remote and the receiver is measured in open air.
- Different building materials and placement of the units can affect the wireless connectivity range.

Recommended batteries:

Batteries are sold separately. We recommend 2 x LADDA rechargeable batteries HR03 AAA 1.2V

Do not mix batteries of different capacities, types or date stamps.

Save these instructions for future use.

Technical data**Model:** SYMFONISK sound remote gen 2**Type:** E2123**Input:** 2.4V, 2 x LADDA batteries HR03 AAA 1.2V**Range:** 10 m unobstructed**For indoor use only****Operating frequency:** 2400-2483.5 Mhz**Output power:** 3 dBm (EIRP)**Manufacturer:** IKEA of Sweden AB**Address:** Box 702, SE-343 81 Älmhult, SWEDEN

The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

חשוב

שלט שמע SYMFONISK נועד לעבוד עם שער או רכזת רשת של איקאה כדי לשלוט ברמקולים SYMFONISK. השתמשו באפליקציית IKEA Home smart כדי להוסיף פונקציות נוספות לשלט השמע. לא ניתן להוסיף מוצרים המסומנים "עובד עם IKEA Home smart" ישירות לשלט השמע.

אם ברשתכם מכשיר Apple

היכנסו ל- App Store והורידו את האפליקציית IKEA Home smart. האפליקציה תדריך אתכם לכל אורך תהליך התקנת שלט שמע SYMFONISK ומכשירים אחרים.

אם ברשתכם מכשיר אנדרואיד:

היכנסו ל- Google Play והורידו את האפליקציית IKEA Home smart. האפליקציה תדריך אתכם לכל אורך תהליך התקנת שלט שמע SYMFONISK ומכשירים אחרים.

הפעלה

הכניסו 2 סוללות מסוג HR03 AAA 1.2V בהתאם לסימון הקוטביות. הפעילו את אפליקציית IKEA Home smart ובצעו את ההוראות בתוך האפליקציה כדי להגדיר את המכשיר שלכם ולהוסיף תרחישים ללחצני הקיצור. סגרו את מכסה הסוללה- שלט השמע מוכן כעת לשימוש.

פונקציות שלט שמע

הפעלה/השהיה. ▶

לחצו פעם אחת כדי להתחיל או להפסיק את המוזיקה.

חזור ◀

לחצו פעם אחת כדי להשמיע מחדש את המוזיקה שהושמעה לאחרונה.

דלג ▶▶

לחצו פעם אחת כדי לדלג לרצועת השמע הבאה.

הגברת והנמכת עוצמת שמע + =

לחצו לחיצה ארוכה כדי לשנות במהירות את עוצמת הקול.

לחצני קיצור ○ ○○

משמש לשינוי רשימת ההשמעה המועברת לרמקולים.

הוראות טיפול

נקו את שלט השמע במטלית רכה ולחה. לאחר מכן, יבשו במטלית רכה ויבשה.

החלפת סוללות

כאשר נעשה שימוש יומיומי בשלט שמע SYMFONISK, משך חיי הסוללה הוא כשנתיים. כשיגיע הזמן להחליף את הסוללה, נורת לד אדומה תהבהב בכל פעם שתלחצו על כל כפתור בשלט השמע. פתחו את מכסה הסוללה והחליפו אותה ב-2 סוללות HR03 AAA 1.2V חדשות.

אזהרה!

החלפת הסוללה שלא בהתאם להוראות עלולה לגרום לפיצוץ. יש להשליך סוללות משומשות בהתאם להנחיות.

חשוב!

- שלט שמע SYMFONISK, מיועד לשימוש בתוך הבית בלבד ומתאים לשימוש בטווח טמפרטורות: 0°C - 40°C.
- אין לחשוף את המוצר בפני אור שמש ישיר או להניחו בקרבת מקור חום כלשהו מחשש להתחממות יתר.
- טווח הקישוריות בין שלט רחוק לשמע SYMFONISK למקלט נמדדים באוויר הפתוח.
- חומרי בניין שונים ומיקום היחידות עשויים להשפיע על טווח הקישוריות האלחוטית.

סוגי סוללות מומלצים:

סוללות נמכרות בנפרד. אנו ממליצים על סוללות נטענות HR03 AAA 1.2V 2 x LADDA. אין להשתמש בסוללות מסוגים שונים, בעלות קיבולות או חותמות תאריך שונות.

שמרו הוראות אלה לעיון עתידי.

מפרט טכני

דגם: שלט שמע SYMFONISK דור 2

סוג: E2123

קלט: 2.4V, סוללות HR03 AAA 1.2V 2 x LADDA

טווח: 10 מ' באוויר הפתוח

לשימוש בתוך הבית בלבד

תדר הפעלה: 2400-2483.5Mhz

הספק יציאה: EIRP(3 dBm)

יצרן: IKEA of Sweden AB

כתובת: Box 702, SE-343 81 Älmhult, SWEDEN



סימן המיחזור מראה שיש להשליך את המוצר בנפרד מהפסולת הביתית. יש להעביר אותו למיחזור בהתאם לחוקים המקומיים. כשאתם ממיינים פסולת, אתם עוזרים להפחית את כמות האשפה המצטברת ולהקטין את ההשפעות המזיקות על האדם והסביבה. לקבלת מידע נוסף, פנו לחנות איקאה.