


SYMFONISK



Design and Quality
IKEA of Sweden

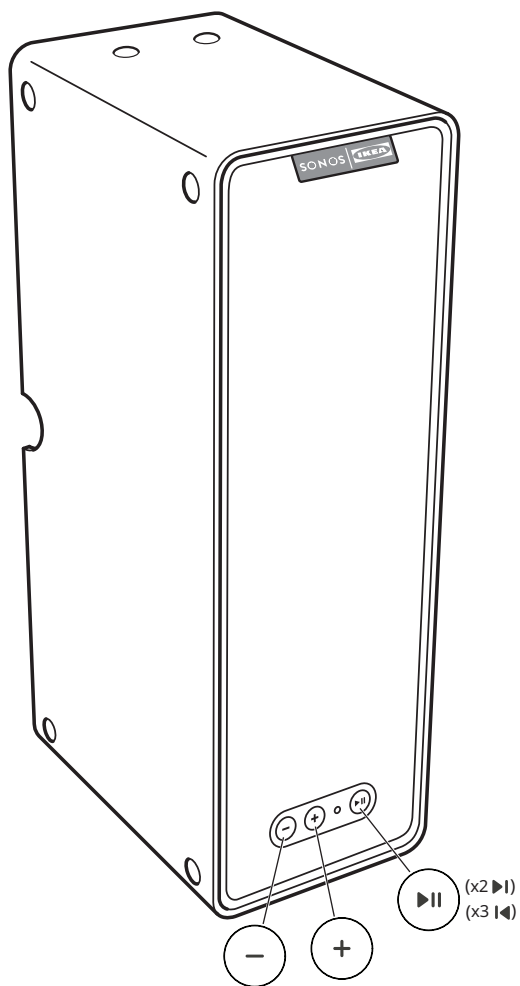

English	4
---------	---

עברית	6
-------	---

Quick guide

Plug in your SYMFONISK speaker. Go to the Apple App Store (iOS devices) or Google Play Store (Android devices) and search for Sonos.



Install and open the Sonos app. Follow instructions to set up your SYMFONISK speaker.

If you already have Sonos system: Open the Sonos app and plug in your SYMFONISK speaker. In the app, select Settings (gear icon) > System > Add Product. Follow instructions to set up your SYMFONISK speaker.

Speaker functions

Play/Pause. Press once to start or stop the music; twice to skip to the next track; three times to jump back one song. Press and hold to add the music playing in another room.

Status Light. Indicates current status of the speaker.

Volume Up

Volume down

Additional information:

More instructions, for example on how to get started, can be found at www.ikea.com
— Select country.
— Go to Customer service > Product support.

You can also visit www.sonos.com > Support for instructions and support.

Care instructions

To clean the speaker, wipe with a soft moistened cloth. Use another soft, dry cloth to wipe dry.

Model name:	SYMFONISK
Type number:	E1922
Operating temperatures:	0°C to 40°C
Input:	100-240VAC, 50/60Hz, 1.0A
Operating Frequency and Radio output power:	
2402-2480 MHz - 3.45 dBm EIRP 2412-2472 MHz < 20 dBm EIRP 5150-5350 MHz < 22 dBm EIRP 5500-5700 MHz < 18 dBm EIRP	

Deactivating or activating the wireless port:

In the Sonos app, go to: Settings > System > select room > select product name > Select Disable/Enable Wi-Fi.

Network Mode	Network Standby* Power Consumption
Wired	<3 W
Wireless**	<3 W
*) Power consumption in “standby” is when audio playback is inactive. SYMFONISK is a device with HiNA function.	
**) Wireless connectivity is automatically selected to optimize your Sonos / IKEA system. Whether in SonosNet (mesh) or wireless (group coordinator) mode, the power consumption is the same.	

For indoor use only

Manufacturer: **IKEA of Sweden AB**

Address: **Box 702, SE-343 81 Älmhult, SWEDEN**

Save these instructions for future use.

 For indoor use on, in the following countries:	CE		BE	SK	PT	NL	LU
			DE	BG	FI	RO	AT
			ES	EE	CZ	SE	SI
			CY	FR	IE	DK	UK(NI)
			HU	LV	HR	EL	TR
			PL	MT	LT	IT	
			NO	CH	IS	LI	

 For indoor use on, in the following countries:	UK CA	UK
--	------------------	----

IMPORTANT & WARNING!

- Too high volume can damage your hearing.
- The speaker is for indoor use only and can be used in temperatures ranging from 0°C to 40 °C.
- Do not subject the speaker to wet, moist or excessively dusty environments, as this may cause damage.
- Never use abrasive cleaners or chemical solvents as this can damage the product.
- Different building materials and placement of the units can affect the wireless connectivity range.
- Never install the product in a confined space. Always leave a space around the product for ventilation.
- Product shall not be exposed to excessive heat such as sunshine, heat sources, and fire or similar.
- No open flame sources, such as candle lights should be placed on the apparatus
- Do not attempt to repair this product yourself, as opening or removing screwed covers may expose you to the risk of electric shock.

RF EXPOSURE INFORMATION

According to RF exposure regulations, under normal operations the end user shall refrain from being closer than 20 cm from the device.



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

מדריך מהיר

SYMFORISK	שם הדגם:
E1922	מספר דגם:
40°C עד 0°C	טווח טמפר' הפעלה:
VAC 100-240 1.0A, 50/60 Hz	כניסה:
תדר הפעלה והספק:	
dBm EIRP 3.45 - מגה-הרץ 2402-2480 dBm EIRP 20 < מגה-הרץ 2412-2472 dBm EIRP 22 < מגה-הרץ 5150-5350 dBm EIRP 18 < מגה-הרץ 5500-5700	

חברו את רמקול SYMFONISK שלכם לנקודת חשמל. עברו לחנות האפליקציות של Apple (מכשירי iOS) או לחנות Google Play (מכשירי אנדרואיד) ומצאו את Sonos.

התקינו ופתחו את אפליקציית Sonos. עקבו אחר הוראות התקנת רמקול SYMFONISK.



אם כבר יש לך מערכת של Sonos: פתחו את אפליקציית Sonos וחברו את רמקול SYMFONISK שלכם. בחרו "הגדרות" (סמל גלגל השיניים) > מערכת > הוסף מוצר. עקבו אחר ההוראות כדי להגדיר את רמקול SYMFONISK שלכם.

אופן השימוש ברמקול

הפעלה/השהיה. לחץ לחיצה אחת להפעלה או הפסקה של רצועת השמע; לחץ פעמיים כדי לדלג לרצועת השמע הבאה; לחץ שלוש פעמים לחזרה לרצועת השמע הקודמת. לחץ לחיצה ארוכה כדי להוסיף רצועת שמע אשר מושמעת בחדר אחר.

נורית חיווי. מציינת את המצב הנוכחי של הרמקול.

+ הגברת עוצמת שמע

- הנמכת עוצמת שמע

מידע נוסף:

הוראות נוספות, למשל כיצד להתחיל בשימוש, אפשר למצוא בכתובת www.ikea.com — יש לבחור מדינה. — יש לעבור אל 'שירות לקוחות' > 'תמיכת מוצר'.

לקבלת הוראות ותמיכה, אפשר גם לבקר בכתובת www.sonos.com > 'תמיכה'.

הוראות טיפול

נקו את הרמקול במטלית רכה ולחה. לאחר מכן, יבשו במטלית רכה ויבשה.

השבת או הפעלת החיבור האלחוטי:
באפליקציית Sonos, עברו אל: הגדרות > מערכת > בחר חדר > בחר שם מוצר > בחר השבת / הפעל Wi-Fi.

מצב רשת	צריכת חשמל מצב המתנה* ברשת
חוטני	W 3 >
אלחוטי**	W 3 >
(*) צריכת חשמל במצב "המתנה" מתרחשת כאשר המוזיקה אינה מופעלת. רמקול SYMFONISK הינו מכשיר עם פונקציית HiNA.	
(**) קישוריות אלחוטיות נבחרת אוטומטית כדי לייצל את מערכת Sonos/IKEA. במצב SonosNet (רשת אריג) או במצב אלחוטי הצריכה זהה.	

שימוש בתוך הבית בלבד

יצרן: IKEA of Sweden AB

כתובת: Box 702, SE-343 81 Älmhult, SWEDEN

שמרו הוראות אלו לשימוש עתידי.

LU	NL	PT	SK	BE
AT	RO	FI	BG	DE
SI	SE	CZ	EE	ES
UK(NI)	DK	IE	FR	CY
TR	EL	HR	LV	HU
	IT	LT	MT	PL
	LI	IS	CH	NO



לשימוש בתוך הבית בלבד,
בארצות הבאות:

UK	UK CA	
לשימוש בתוך הבית בלבד, בארצות הבאות:		

חשיפה RE מידע

על פי רגולציות החשיפה של RF, בזמן פעילות רגילה, על משתמש הקצה לשמור על מרחק של 20 ס"מ לפחות מהמכשיר.



סימן המיחזור מראה שיש להשליך את המוצר בנפרד מהפסולת הביתית. יש להעביר אותו למיחזור בהתאם לחוקים המקומיים. כשאתם ממיינים פסולת, אתם עוזרים להפחית את כמות האשפה המצטברת ולהקטין את ההשפעות המזיקות על האדם והסביבה. לקבלת מידע נוסף, פנו לחנות איקאה.

הוראות בטיחות חשובות!

- עוצמת קול גבוהה מדי עלולה לפגוע בשמיעה.
- רמקול זה מיועד לשימוש בתוך הבית ובטווח טמפרטורות 0°C - 40°C.
- אין לחשוף את המוצר לרטיבות, לחות או אבק אשר עשויים לגרום נזק למוצר.
- אין להשתמש במוצרי ניקוי חזקים או ממסים כימיים אשר עשויים לגרום נזק למוצר.
- חומרי בניין שונים ומיקום עשויים להשפיע על טווח הקישוריות האלחוטית.
- אין לתקן את המוצר בחלל מוגבל. השאירו מקום סביב המוצר לאוורור.
- אין לחשוף את המוצר בפני מקור חום כגון שמש ישירה, אש וכדומה.
- אין להציב על המוצר מקור אש חשופה כגון נרות דולקים.
- אין לנסות לתקן מוצר זה בעצמם, שכן פתיחה או פירוק של מכסה המוצר עשויה לחשוף אתכם לסכנת התחשמלות.

